

# Note for Users

---

Please note the following additional information to this manual.

## About This Machine

Topic	Additional Information
8. Remarks > Where to Put Your Machine> Power Connection	<ul style="list-style-type: none"><li>● When the trimmer is in use, voltage fluctuation must not exceed +6% to -10 % . Voltage fluctuation in excess of this range can result in the trimmer malfunctioning.</li></ul>

Copyright © 2009

Printed in Japan

GB  EN  D455-8632



D4558632