Safety Information for Pro 907EX/Pro 1107EX/Pro 1357EX

Introduction

Read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

•

Notes:

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer. Depending on which country you are in, certain units may be optional. For details, please contact your local dealer.

Laser Safety

This machine is considered a class 1 laser device, safe for office/EDP use. The machine contains multiple AlGaAs laser diodes, 15-milliwatt, 770-810 nanometer wavelength for each emitter. Direct (or indirect reflected) eye contact with the laser beam might cause serious eye damage. Safety precautions and interlock mechanisms have been designed to prevent any possible laser beam exposure to the operator.

The following label is attached on the rear side of the machine.



Caution:

Use of controls or adjustments or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Notes:

The model names of the machines do not appear in the following pages. Check the type of your machine before reading this manual.

- Type 1: Pro 907EX
- Type 2: Pro 1107EX
- Type 3: Pro 1357EX

Certain types might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

For good copy quality, the supplier recommends that you use genuine toner from the supplier.

The supplier shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the supplier with your office products.

Power Source

220 - 240 V, 50/60 Hz, 16 A or more

Please be sure to connect the power cord to a power source as above. For details about power source, see About This Machine.

Safety Information

When using this machine, the following safety precautions should always be followed.

Safety During Operation

In this manual, the following important symbols are used:

⚠ WARNING:

Indicates a potentially hazardous situation which, if instructions are not followed, could result in death or serious injury.

↑ CAUTION:

Indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.

Safety Precautions to be Followed

This section explains safety precautions that should always be followed when using this machine.

Environments where the machine can be used

This section explains safety precautions about environments where the machine can be used.

⚠ WARNING:

Keep the machine away from flammable liquids, gases, and aerosols.
 A fire or an electric shock might occur.

A CAUTION:

- Keep the machine away from humidity and dust. Otherwise a fire or an electric shock might occur.
- Do not place the machine on an unstable or tilted surface. If it topples over, an injury might occur.
- Make sure the room where you are using the machine is well ventilated and spacious. Good ventilation is especially important when the machine is used heavily.

Handling power cords and power plugs

This section explains safety precautions about handling power cords and power plugs.

↑ WARNING:

- Connect this machine only to a power source that matches the specifications shown in this manual and do not use an extension cord.
- Use of this machine with extension cords and power sources other than those that match the specifications shown constitutes an electric shock and fire hazard.
- Touching the prongs of the power cable's plug with anything metallic constitutes a fire and electric shock hazard.
- Power cords that are damaged, broken, modified, trapped under heavy objects, pulled hard, or bent severely are electric shock and fire hazards.
- Disconnect the power plug (by pulling the plug, not the cable) if the power cable or plug becomes frayed or otherwise damaged.
- If the power cord is damaged (exposure of the core, disconnection, etc.), contact your service representative to change a new one. Operating the machine with a damaged power cord may cause an electric shock or fire.
- Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.
- It is dangerous to handle the plug with wet hands. Doing this may result in receiving an electric shock.
- The supplied power cord is for use with this equipment only. Do not use with other appliances. Doing so may result in fire, electric shock, or injury.
- The wall outlet shall be installed near the machine and shall be easily accessible.

- When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).
- Be sure to disconnect the plug from the wall outlet and clean the prongs and the area around the prongs at least once a year. Allowing dust to build up on the plug constitutes a fire hazard.
- To disconnect the power cord, pull it out by plug. Do not drag the cord itself.
 Doing so may result in damage to the cord, leading to fire or electric shock.
- For safety reason, unplug the power cord from the wall outlet if the machine will not be used for an extended period of time such as holidays.
- Before moving the machine, be sure to disconnect all external connections, especially the power cord from the wall outlet. Damaged power cords are a fire and electric shock hazard.

Handling the main machine

This section explains safety precautions about handling the main machine.

↑ WARNING:

- Turn off the power and disconnect the power plug (by pulling the plug, not the cable) if any of the following occurs:
 - You spill something into the machine.
 - You suspect that your machine needs service or repair.
 - The external housing of your machine has been damaged.
- Do not turn the earth leakage breakers from the off to the on position.
 Otherwise it might lead to an electric shock, fire or smoke, or cause the breakers to trip.

- Protect the machine from dampness or wet weather, such as rain and snow.
- Unplug the power cord from the wall outlet before you move the machine.
 While moving the machine, you should take care that the power cord will not be damaged under the machine.
- After you move the machine, use the caster fixture to fix it in place. Otherwise the machine might move or come down to cause an injury.
- Contact your service representative if you need to lift the machine (such as when relocating it to another floor). Do not attempt to lift the machine without the assistance of your service representative. The machine will be damaged if it topples or is dropped, resulting in malfunction and risk of injury to users. The machine's various handling areas are for service engineer use only. Do not touch these areas.
- Do not allow paper clips, staples, or other small metallic objects to fall inside the machine.
- Do not look into the lamp. It can damage your eyes.
- For environmental reasons, do not dispose of the machine or expended supply waste at household waste collection points. Disposal can take place at an authorized dealer.

Handling the machine's interior

This section explains safety precautions about handling the machine's interior.

↑ WARNING:

 To avoid hazardous electric shock or laser radiation exposure, do not remove any covers or screws other than those specified in this manual.

- The fusing section of this machine might be very hot. Caution should be taken when removing misfed paper.
- The inside of the machine could be very hot. Do not touch the parts with a label indicating the "hot surface". Otherwise, an injury might occur.
- When loading paper, take care not to trap or injure your fingers.
- During operation, rollers for transporting the paper and originals revolve. A
 safety device has been installed so that the machine can be operated safely.
 But take care not to touch the machine during operation. An injury might occur.
- Fire and breakdown can result from heavy accumulation of dust inside this machine. Consult your service representative for details about and charges for cleaning the machine's interior.
- Keep your hands clear of the inside of the ring binder and the space under the ring binder tray. You might trap your fingers if you do not.
- Keep your hands clear of the perfect binder and paper exit. You can trap your fingers if you do not.
- Keep your hands clear of the inside of the stacker and the space under the stacker tray. You might trap your fingers if you do not.

Handling the machine's supplies

This section explains safety precautions about handling the machine's supplies.

↑ WARNING:

- Do not incinerate used toner or toner containers. Toner dust might ignite when exposed to an open flame. Dispose of used toner containers in accordance with local regulations.
- Do not incinerate spilled toner or used toner. Toner dust might ignite when exposed to an open flame.
- Do not store toner, used toner, or toner containers in a place with an open flame. The toner might ignite and cause burns or a fire.
- Keep the polythene materials (bags, gloves, etc.) supplied with this
 machine away from babies and small children at all times. Suffocation
 can result if polythene materials are brought into contact with the
 mouth or nose.


- Do not reuse stapled paper. Otherwise, a fire might occur.
- To avoid fire or machine failure, do not use aluminum foil, carbon paper, or similar conductive paper.
- Do not open toner containers forcefully. Toner can spill, dirtying your clothes or hands, and possibly resulting in accidental ingestion.
- Keep toner (used or unused) and toner containers out of reach of children.
- If toner or used toner is inhaled, gargle with plenty of water and move into a fresh air environment. Consult a doctor if necessary.
- If toner or used toner gets into your eyes, flush immediately with large amounts of water. Consult a doctor if necessary.
- If toner or used toner is swallowed, dilute by drinking a large amount of water. Consult a doctor if necessary.
- Avoid getting toner on your clothes or skin when removing a paper jam or replacing toner. If your skin comes into contact with toner, wash the affected area thoroughly with soap and water.
- If toner gets on your clothing, wash with cold water. Hot water will set the toner into the fabric and may make removing the stain impossible.
- When binding paper manually with the ring opener, take care not to trap or injure your fingers.

Safety Labels of This Machine

This section explains the machine's safety information labels.

Positions of WARNING and CAUTION labels

This machine has labels for <u>AWARNING</u> and <u>ACAUTION</u> at the positions shown below. For safety, please follow the instructions and handle the machine as indicated.

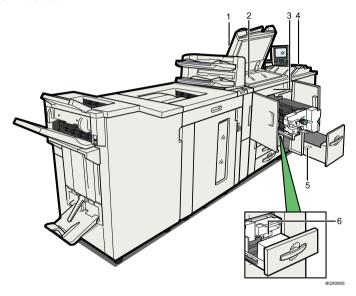




Keep your hands clear of the ADF when removing paper jam. You might trap your fingers if you do not.

2



Do not attempt to remove any labelled parts. Doing so risks injury to your eyes from exposure to the laser beam.

3

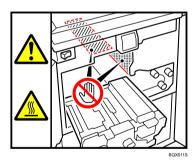

Do not touch the parts a label indicates. The inside of the machine could be very hot. Caution should be taken when removing misfed paper.



Keep your hands clear of the multi bypass tray (Tray 7) when removing paper jam. You might trap your fingers if you do not.

5



DOV0120


The inside of the machine could be very hot. Do not touch the parts which a label is put on. Otherwise, an injury might occur.

6




Keep your hands clear of the parts a label indicates. Otherwise, you might trap your fingers and an injury might occur.


❖ Booklet Finisher SR5020

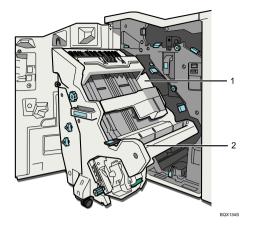


1

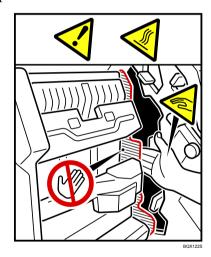


The inside of the booklet finisher could be very hot. Keep your hands clear of the parts a label indicates. You might trap your fingers and an injury might occur.

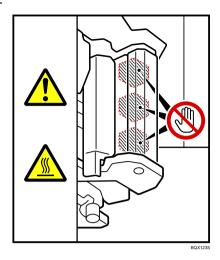


Do not touch the parts a label indicates. The inside of the booklet finisher could be very hot. Caution should be taken when removing misfed paper.

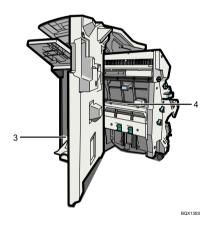

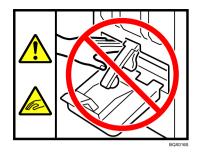


Keep your hands clear of the booklet finisher tray when removing paper jam. You might trap your fingers if you do not. Take care not to touch the booklet finisher tray during operation. Otherwise, an injury might occur.

4

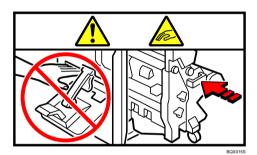


Keep your hands clear of the booklet finisher tray when pulling out or pushing in the booklet finisher's staple unit. You might trap your fingers if you do not.

Ring Binder

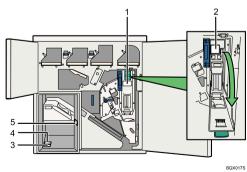

14

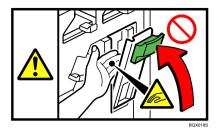

Keep your other hand clear when closing the cartridge cover. You might trap your fingers if you do not.

2




Keep your hands clear of the parts a label indicates. Otherwise, you might trap your fingers and an injury might occur.

3



When the ring binder is in operation, keep your hands clear of the ring binder tray. You might trap your fingers if you do not.

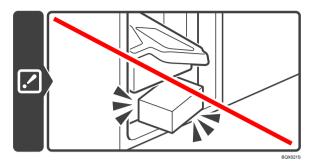


Make sure the space below the ring binder tray is clear. Malfunctions can occur if this space is obstructed.

5



When removing bound booklets, keep your hands clear of the paper exit. You might trap your fingers if you do not.

Perfect Binder

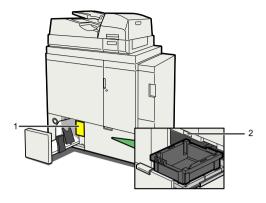

BQX023S

1




When removing bound booklets, keep your hands clear of the perfect binder's lower left tray. You might trap your fingers if you do not.




Do not reach far inside the unit. Moving parts inside may cause injury.

Trimmer

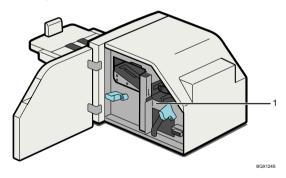


1

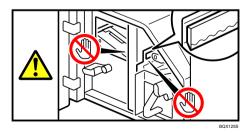

Keep your hands clear of the internal cutting blade when you are removing jammed paper. Not doing so risks injury to your fingers from the cutting blade.

❖ Stacker

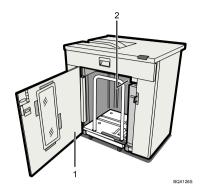

1




Do not attempt to get inside the stacker. Otherwise, an injury might occur.

2



Do not touch the parts a label indicates. The inside of the stacker could be very hot. Caution should be taken when removing misfed paper.

❖ Multi-Folding Unit

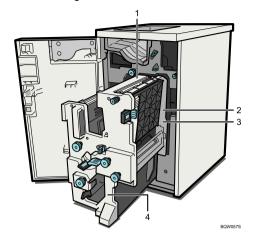

1



Do not touch the parts a label indicates. The inside of the Multi-Folding Unit could be very hot. Caution should be taken when removing misfed paper.

2



Do not touch the parts a label indicates. The inside of the Multi-Folding Unit could be very hot. Caution should be taken when removing misfed paper.



Do not touch the parts a label indicates. The inside of the Multi-Folding Unit could be very hot. Caution should be taken when removing misfed paper.

4



Do not touch the parts a label indicates. The inside of the Multi-Folding Unit could be very hot. Caution should be taken when removing misfed paper.

Power Switch Symbols

The meanings of the symbols for the switches on this machine are as follows:

- I :POWER ON.
- O:POWER OFF.
- U:STANDBY.

User Information on Electrical & Electronic Equipment

Users in the EU, Switzerland and Norway

Our Products contain high quality components and are designed to facilitate recycling.

Our products or product packaging are marked with the symbol below.



The symbol indicates that the product must not be treated as municipal waste. It must be disposed of separately via the appropriate return and collection systems available. By following these instructions you ensure that this product is treated correctly and help to reduce potential impacts on the environment and human health, which could otherwise result from inappropriate handling. Recycling of products helps to conserve natural resources and protect the environment.

For more detailed information on collection and recycling systems for this product, please contact the shop where you purchased it, your local dealer or sales/service representatives.

All Other Users

If you wish to discard this product, please contact your local authorities, the shop where you bought this product, your local dealer or sales/service representatives.

Note for the Battery and/or Accumulator Symbol (For EU countries only)



In accordance with the Battery Directive 2006/66/EC Article 20 Information for end-users Annex II, the above symbol is printed on batteries and accumulators.

This symbol means that in the European Union, used batteries and accumulators should be disposed of separately from your household waste.

In the EU, there are separate collection systems for not only used electrical and electronic products but also batteries and accumulators.

Please dispose of them correctly at your local community waste collection/recycling centre.

Overseas Affiliates and Noise Emission Information

In accordance with TUV "GS Symbol" requirements, details of the EU office or representative company are given below.

Overseas Affiliates

Ricoh Europe PLC 66 Chiltern Street, London W1U 4AG, U.K.

❖ Noise Emission:

· Sound power level

	Main unit only			Complete system		
	Type 1	Type 2	Type 3	Type 1	Type 2	Type 3
Stand-by	less than	less than	less than	less than	less than	less than
	59.4 dB (A)	60.2 dB (A)	60.1 dB (A)	58.7 dB (A)	59.2 dB (A)	59.3 dB (A)
Copying	less than	less than	less than	less than	less than	less than
	72.6 dB (A)	74.3 dB (A)	76.2 dB (A)	75.0 dB (A)	75.8 dB (A)	77.2 dB (A)

• Sound pressure level

	Main unit only			Complete system		
	Type 1	Type 2	Type 3	Type 1	Type 2	Type 3
Stand-by	less than	less than	less than	Less than	Less than	Less than
	45.4 dB (A)	46.5 dB (A)	46.4 dB (A)	44.9 db(A)	45.2 db (A)	45.1 db (A)
Copying	less than	less than	less than	Less than	Less than	Less than
	57.8 dB (A)	60.2 dB (A)	61.8 dB (A)	60.3 db(A)	61.0 db (A)	62.6 db (A)

- Sound power level and sound pressure level are actual values measured in accordance with ISO 7779.
- Sound power level and sound pressure level are measured from the position of the bystander/operator.
- The complete system consists of the main unit, Decurler, Booklet Finisher SR5020, and Wide LCT.

MEMO

Warning:

This is a Class A product. In a domestic environment this product may cause radio interfernce in which case the user may be required to take adequate measures.

Copyright © 2008 Printed in France

GB GB D060-7500



28