

## For Users of the IPDS Unit Type 1357

---

Thank you for purchasing the IPDS Unit Type 1357.

Read carefully the following important notes on the usage of this unit.

---

- If you change the input tray using [Tray Paper Settings] on the [Tray Paper Settings] menu (through Web Interface) and do not then switch the power off and then back on, the new input tray selection will not be applied.  
To apply a changed tray setting without restarting the machine, on the [Printer Settings] menu, select [Tray] from the [IPDS] menu, then select the [IPDS Tray] check box from [Tray Mapping], and then specify "0" for [Tray Mapping Parameter].
  - If you print with "Suppress staple count NACKs:" set to [Off], an error page might be printed, even if the page count is within the limit.
  - If you change the default output tray during an IPDS session, you will need to perform session disconnect and reconnect twice.  
The changed tray will not be selected if you perform session disconnect and reconnect only once.
  - To change the offset parameters: first disconnect from the IPDS host, then change the offset parameters, and then reconnect to the IPDS host.
  - While printing is in progress, do not change the size or type settings for paper loaded in an unused tray. Also, if you are loading an unused tray while printing is in progress, be careful not to change the position of the tray's side, end or back fence. Changing the settings of paper in an unused tray while printing is in progress can cause shifting of sheets on the delivery tray and switching of the delivery tray's stacker.
- 



## For Users of the IPDS Unit Type 1357

---

Thank you for purchasing the IPDS Unit Type 1357.

Read carefully the following important notes on the usage of this unit.

---

- If you change the input tray using [Tray Paper Settings] on the [Tray Paper Settings] menu (through Web Interface) and do not then switch the power off and then back on, the new input tray selection will not be applied.  
To apply a changed tray setting without restarting the machine, on the [Printer Settings] menu, select [Tray] from the [IPDS] menu, then select the [IPDS Tray] check box from [Tray Mapping], and then specify "0" for [Tray Mapping Parameter].
  - If you print with "Suppress staple count NACKs:" set to [Off], an error page might be printed, even if the page count is within the limit.
  - If you change the default output tray during an IPDS session, you will need to perform session disconnect and reconnect twice.  
The changed tray will not be selected if you perform session disconnect and reconnect only once.
  - To change the offset parameters: first disconnect from the IPDS host, then change the offset parameters, and then reconnect to the IPDS host.
  - While printing is in progress, do not change the size or type settings for paper loaded in an unused tray. Also, if you are loading an unused tray while printing is in progress, be careful not to change the position of the tray's side, end or back fence. Changing the settings of paper in an unused tray while printing is in progress can cause shifting of sheets on the delivery tray and switching of the delivery tray's stacker.
- 

