



Quick Reference Printer Guide

⇒ Please follow these instructions using your PC ⇐

How to install simple network management protocol (SNMP)





- Install SNMP before installing the printer driver.
- On the [Start] menu, click [Control Panel], and then click [Add or Remove Programs].
- Click [Add/Remove Windows Components], and then click [Management and Monitoring Tools] in the [Components] list to make it appear highlighted. Then click [Details...].
- Select the [Simple Network Management Protocol] check box, and then click [OK].
- Click [Next>].
- Click [Finish].
- Close the [Add or Remove Programs] dialog box.
- Click [Performance and Maintenance] in the Control Panel, and then click [Administrative Tools].
- Double-click [Services].
- Double-click [SNMP Trap Service].
- In the [Startup Type:] pop-up menu, select [Automatic], and then click [Start].
- Click [OK].

How to install the printer driver (Standard TCP/IP)

- Depending on your computer's operating system, the installation procedure might differ slightly from that shown in this manual. If this is the case, refer to "Installing the Printer Driver (Standard TCP/IP Port)", Printer Reference.
- Insert the provided CD-ROM in the computer's CD-ROM drive.
- Select the interface language, and then click [OK].
- Click [M Driver], and then click [Next>].
- Select [Local printer attached to this computer], and then click [Next>].
- Click [Create a new port:], and then select [Standard TCP/IP Port] in the [Type of port] list.
- Click [Next>] twice.
- In the [Printer Name or IP Address] box, enter the printer's name or IP address. The [Port Name] text box is filled automatically.
- Change the port name if necessary, and then click [Next>].
- Select [Custom] in the [Device Type] area, and then click [Settings...].
- Select [LPR] in the [Protocol] area, and then enter a virtual printer name in the [Queue Name] box under [LPR Setting]. Specify the virtual printer name that matches the page description language you require:
 - PostScript: postscript
 - PCLXL: pclxl
 - PCL5e: vp-pcl
- Select the [LPR Byte Counting Enabled] check box, and then clear the [SNMP Status Enabled] check box.
- Click [OK], and then click [Next>].
- Click [Finish].
- Click [Have Disk...], and then click [Browse...].
- Select the printer setup information file for the printer driver, and then click [OK].
- If the CD-ROM drive letter is D, the printer driver's setup information file (Printer.inf) is stored in "D:\DRIVERS\Mdriver\Language\".
- Select the printer you want to add, and then click [Next>].
- Follow the instructions on the display, and then click [Finish].

Downloading the printer driver

- If your operating system is Windows XP Pro x64/Vista x64/7 x64, or Windows Server 2003 x64/2003 R2 x64/2008 x64/2008 R2, you must download the printer driver from the supplier's Web site. For details, see "Installing the Printer Driver", Printer Reference.

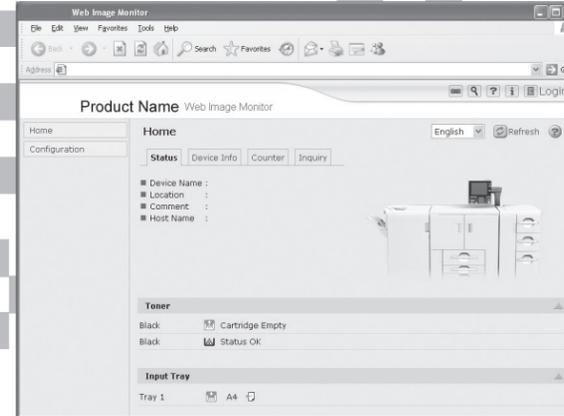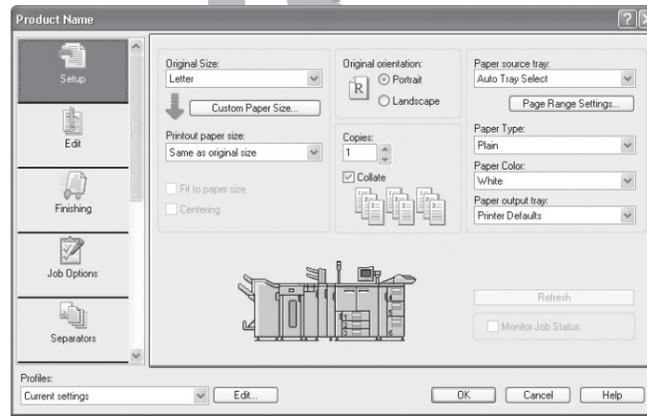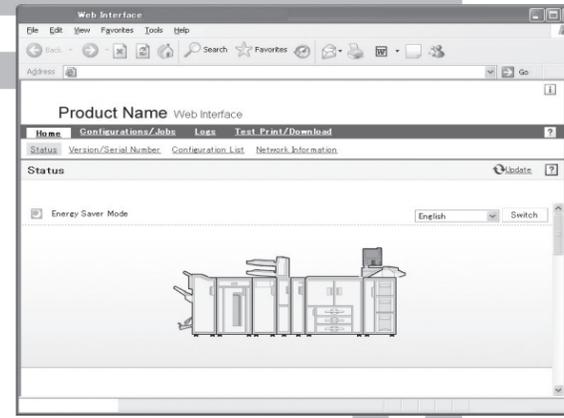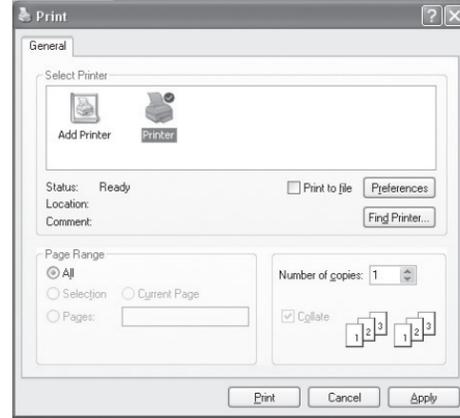

How to use Web Interface...

- Start your Web browser.
- In your browser's address bar, enter the following: `http://printer's IP address/`
- Select one of the following functions:
 - Home
 - Configurations/Jobs
 - Logs
 - Test Print/Download

Why use Web Interface?

- To access the printer anywhere via a Web browser.
- To set the virtual printer.
- From your computer, you can configure print-related and other settings and if necessary, delete spooled print jobs.

How to use Web Image Monitor...

- Start your Web browser.
- In your browser's address bar, enter the following: `http://system's IP address/`
- Select one of the following functions:
 - Home
 - Configuration

Why use Web Image Monitor?

- To access the system anywhere via a Web browser.
- From your computer, you can configure system settings and address book management.

How to prepare for printing...

- On the [Start] menu, click [Control Panel], and then click [Printers and Faxes] in the [Printers and Other Hardware] category.
- Right click the icon of the printer you want to use, and then click [Set as Default Printer].
- On the [File] menu, and then click [Properties].
- Click the [Device Settings] tab, and then click [Settings...] in the [Accessories] area.
- Select the attached options, such as the paper trays and finisher. If the Printer Monitor is active, you can update option information simply by clicking [Update].
- Click [Paper source tray settings] on the menu list, and then change the paper settings as necessary.
- Click [OK] twice.
- On the [File] menu, click [Printing Preferences...].
- Click [Properties...].
- Make the settings you require in the menu list, and then click [OK].
- Click [OK].

How to print...

- Open your document.
- Click the print icon directly, or
- On the [File] menu, click [Print].
- Select the printer you want to use in the [Select Printer] list, and then click the [Preferences] button.
- Click [Properties...].
- Make the settings you require, and then click [OK].
- Click [OK].
- Set a number of copies.
- Click [Print].

Switching the page description language

- Note that the printer driver provided with this printer can be used for all the page description languages (PostScript, PCLXL and PCL5e) supported by the printer. The default page description language is PostScript.
- On the [Start] menu, click [Control Panel], and then click [Printers and Faxes] in the [Printers and Other Hardware] category.
- Select the icon for this printer, and then click [Properties] on the [File] menu.
- Click the [Device Settings] tab, and then click [Settings...] in the [Printer Monitor/Page Description Language] area. The [Printer Installer] dialog box appears. A confirmation dialog asking you whether or not you want to activate the Printer Monitor appears. The following steps apply when you select "No".
- Select the page description language you want to use, and then click [Next>].
- Click [Finish].