

INSTRUCTIONS FOR SERVICE TECHNICIANS

Coated paper

(1) For Customers at Installation

If operators intend to use coated paper for the first time, replace the parts listed below at installation.

If they have already experienced frequent Jam "U" (A3/DLT LCIT) errors after installation, they should call for service and request replacement of the parts listed in the table below.

(2) Parts Replacement at Installation or Servicing

Replace the following three parts at the feed station in the A3/DLT LCIT where coated paper is being fed and causing jams with coated paper:

Name	Part Number
Pick-up roller	AF030071
Feed roller	AF031071
Separation roller	AF032041

Important

Please remember that the durability and service life of these parts is lower than the replaced rollers. For more details, please refer to the Service Manual.

