
Jam removal guide

When LEDs are blinking, remove jammed paper according the instructions, before pulling the drawer unit. When LED C1 and C2 are both blinking, it is safe to pull out the drawer unit without tearing papers.

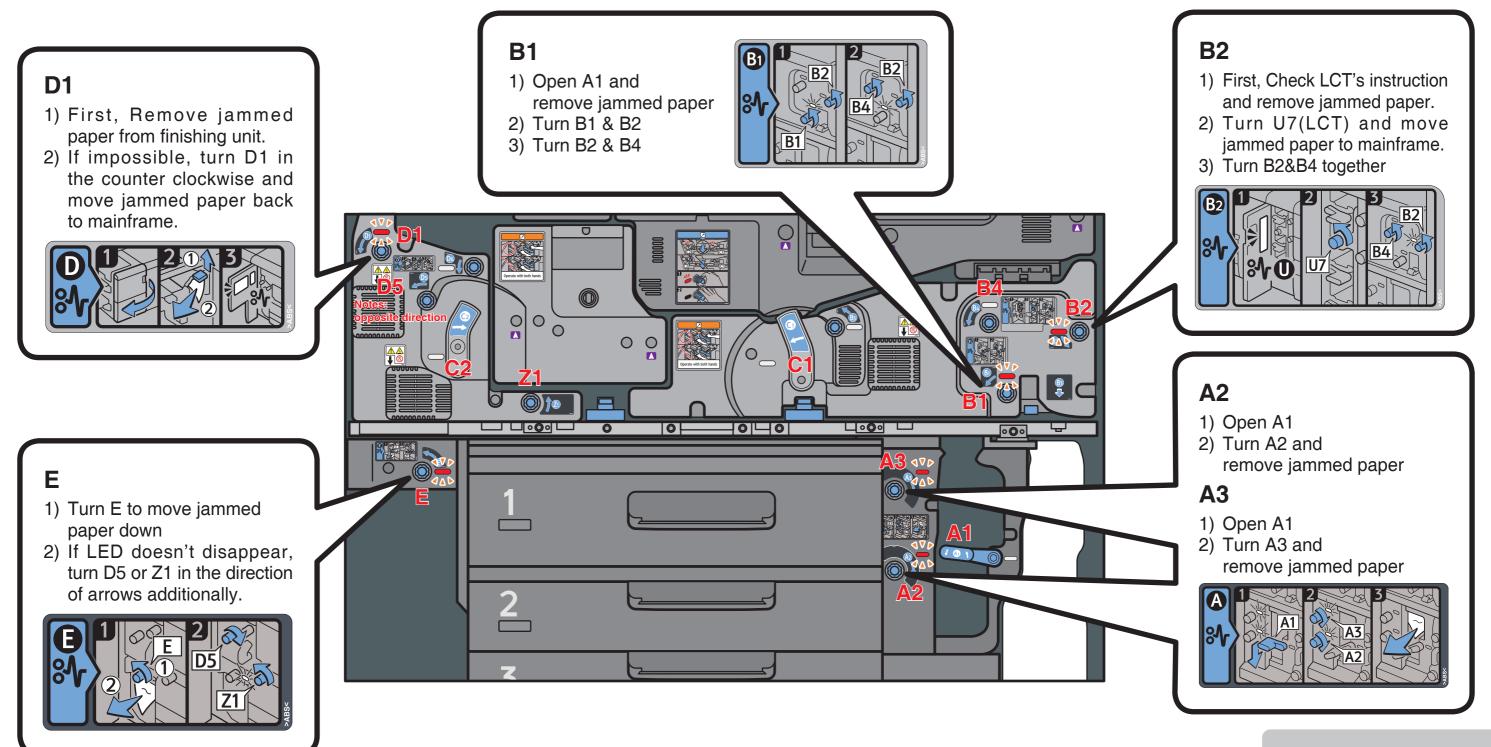

## Ricoh Pro8200S series

© 2016 Printed in USA EN (GB) EN (US) EN (AU)

D270-7449