
Paper handling manual

When LEDs are blinking, remove jammed paper according the instructions, before pulling the drawer unit. When LED C1 and C2 are both blinking, it is safe to pull out the drawer unit without tearing papers.

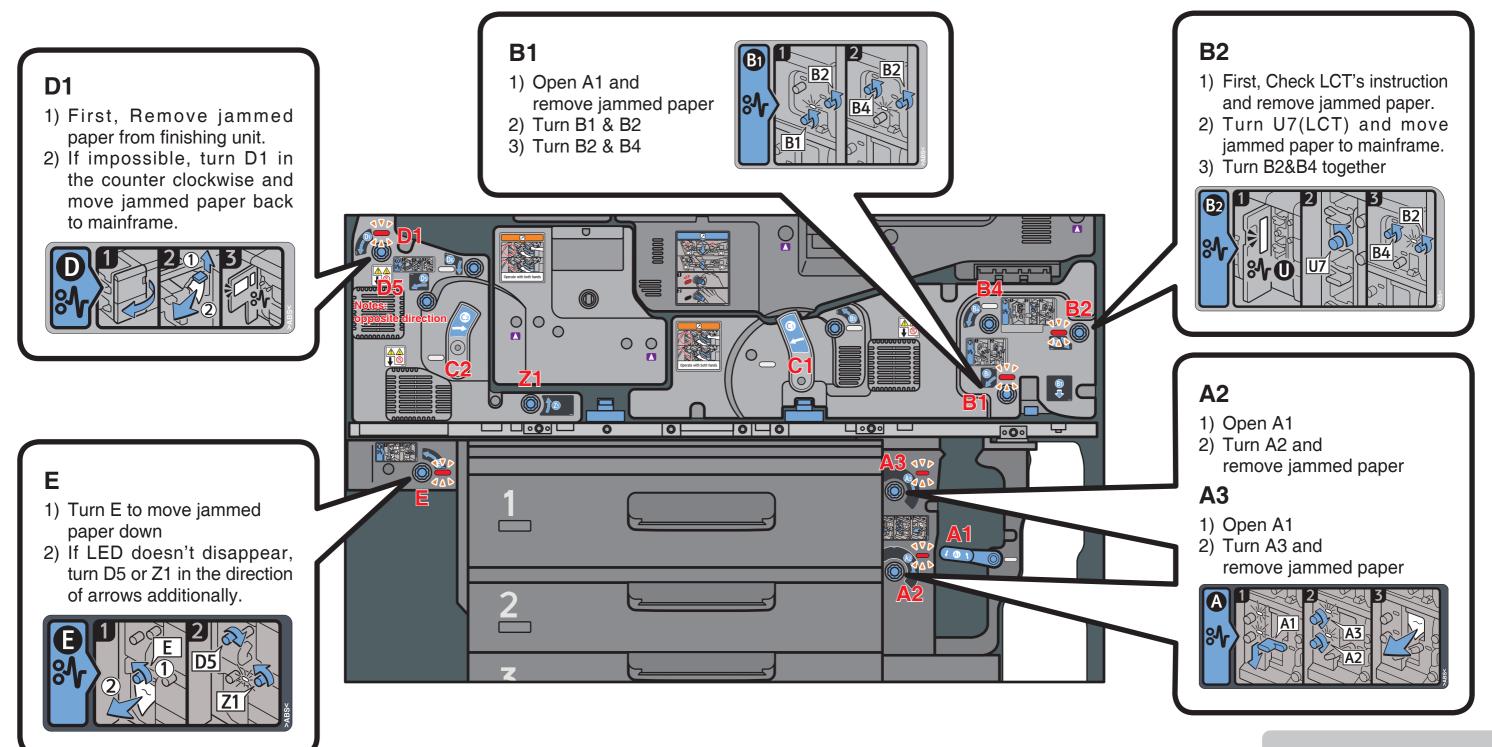

## **RICOH Pro 8200s series**

© 2017 Ricoh Co., Ltd. Printed in USA EN (GB) EN (US) EN (AU)

D270-7460