


M5216851

## Notes for Color Controller E-45A/E-85A


### ■ Connecting to the Interfaces

#### <Pro C7200/C7210>

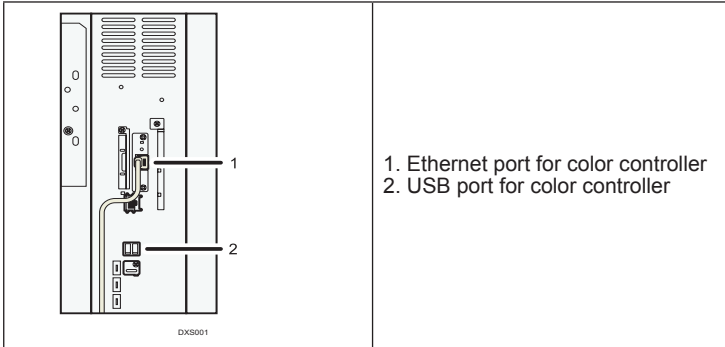

#### <Color Controller E-45A>

#### <Color Controller E-85A>

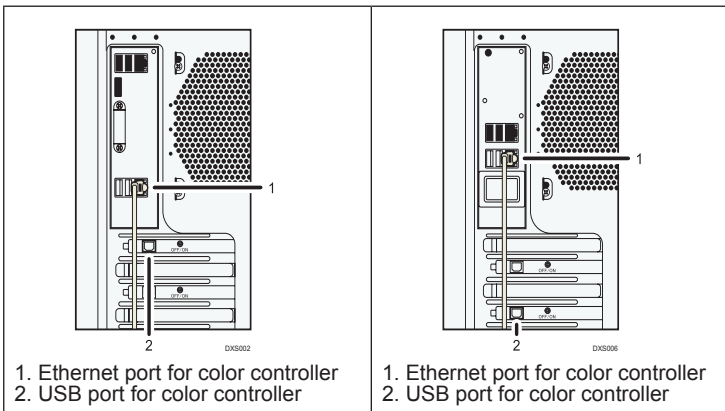

#### <Important>

 
- Use the USB port shown above, if your Color Controller E-45A/E-85A has two USB ports on the back.

### ■ Interlocking the main power of Color Controller E-45A/E-85A

Color Controller E-45A/E-85A has a function to interlock the main power with the printer. By turning this function on in Color Controller E-45A/E-85A, the color controller's power goes off when the printer is turned off.


Turning the interlock function on and off is done via a switch above the printer interface board at the rear of Color Controller E-45A/E-85A. When the switch is set to OFF, the interlock function is turned off, and when the switch is turned to ON, the interlock function is turned on.

Color Controller E-45A/E-85A has the Low Power Mode function. In order to receive the print job data all times, the default setting is OFF.




## ■ Switch for interlocking the main power of Color Controller E-45A/E-85A

### <ON>

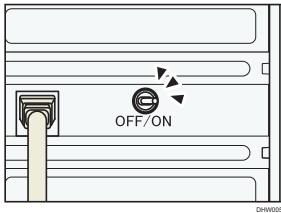

### <OFF>

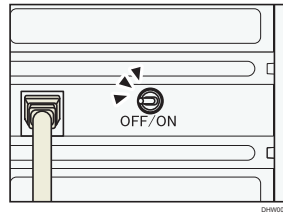

### <Important>

- Use the selector switch while the Color Controller E-45A/E-85A is turned off.
- If you are using Color Controller E-45A/E-85A which has two switches on the back, turn on the switch next to the USB port shown in "Connecting to the Interfaces".

## ■ Turning Off the Main Power

### <Important>

 
- Do not turn off the main power switch on the backside of the Color Controller E-45A/E-85A when the operation switch indicator on the upper side of the controller is lit or flashing. Doing so may result in damage to the hard disk or memory.
- Make sure to turn off the main power switch before pulling out the power plug on the backside of the Color Controller E-45A/E-85A. Not doing so may result in damage to the hard disk or memory, leading to malfunctions.
- After turning off the main power switch of the printer, wait for two minutes or more before turning it on again.

## ■ <When interlocking function is set to ON>

1. Shut down the main power of printer.
2. The main power of Color Controller E-45A/E-85A is shut down in synchronization.  
\*Do not use the key on control panel of the printer.

## ■ <When interlocking function is set to OFF>




1. Press Home (🏠) on the center bottom of the printer's control panel, and press the [EFI Fiery] icon of the [Home] screen.
2. Press the [Fiery] tab.
3. Press [Restart Fiery], and then press [Shut Down].
4. Press [OK].
5. Press the operation switch to turn off the operation switch indicator.
6. Make sure the operation switch indicator is unlit.
7. Open the cover of the main power switch on the front left of the printer.
8. Turn off the main power switch.
9. Close the front left cover.



## ■ Notes when interlocking function is OFF

### <Important>

   - When shutting down the printer, be sure to shut down the main power of Color Controller E-45A/E-85A.
- Be sure to turn the main power of Color Controller E-45A/E-85A on within one hour of turning on the main power of the printer.
- When turning the main power ON, turn on the printer first, then turn on Color Controller E-45A/E-85A.



© 2017  
Printed in Japan  
EN(GB) EN(US) EN(AU)  
M521-6851

