


Pro C900s

Operating Instructions **General Settings Guide**

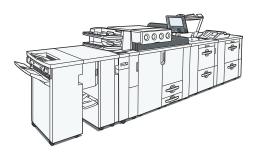

- 1 Connecting the Machine
- 2 System Settings
- 3 Tray Paper Settings
- 4 Copier/Document Server Features
- 5 Scanner Features
- (6) Registering Addresses and Users for Scanner Functions
- 7 Other User Tools
- 8 Appendix

Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

Notes:

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Depending on which country you are in, certain units may be optional. For details, please contact your local dealer.

Caution:

Use of controls or adjustments or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Two kinds of size notation are employed in this manual. With this machine refer to the inch version.

Manuals for This Machine

Refer to the manuals that are relevant to what you want to do with the machine.

- Media differ according to manual.
- The printed and electronic versions of a manual have the same contents.
- Adobe Acrobat Reader/Adobe Reader must be installed in order to view the manuals as PDF files.
- A Web browser must be installed in order to view the html manuals.

About This Machine

Be sure to read the Safety Information in this manual before using the machine.

This manual provides an introduction to the functions of the machine. It also explains the control panel, preparation procedures for using the machine, how to enter text, and how to install the CD-ROMs provided.

Troubleshooting

Provides a guide to solving common problems, and explains how to replace paper, toner, staples, and other consumables.

Copy/ Document Server Reference

Explains Copier and Document Server functions and operations. Also refer to this manual for explanations on how to place originals.

Scanner Reference

Explains Scanner functions and operations.

Network Guide

Explains how to configure and operate the machine in a network environment.

General Settings Guide

Explains User Tools settings, and Address Book procedures such as registering user codes. Also refer to this manual for explanations on how to connect the machine.

Security Reference

This manual is for administrators of the machine. It explains security functions that you can use to prevent unauthorized use of the machine, data tampering, or information leakage. For enhanced security, we recommend that you first make the following settings:

- Install the Device Certificate.
- Enable SSL (Secure Sockets Layer) Encryption.
- Change the user name and password of the administrator using Web Image Monitor.

For details, see "Setting Up the Machine", Security Reference.

Be sure to read this manual when setting the enhanced security functions, or user and administrator authentication.

Information

Contains general notes on the machine, and information about the trademarks of product names used in the manuals.



- In addition to the above, manuals are also provided for the Printer function.
- The following optional software products are referred to using general names:

Product name	General name
ScanRouter EX Professional and ScanRouter EX Enterprise	the ScanRouter delivery software

TABLE OF CONTENTS

Manuals for This Machine	1
How to Read This Manual	7
Symbols	7
Display Panel	8
Accessing User Tools	9
Changing Default Settings	9
Quitting User Tools.	10
Menu Protect	11
1. Connecting the Machine	
Connecting to the Interfaces	13
Connecting to the Ethernet Interface	13
Network Settings Required to Use E-mail Function	15
Ethernet	15
Network Settings Required to Use Scan to Folder Function	17
Ethernet	17
Network Settings Required to Use the Network Delivery Scanner	19
Ethernet	19
Network Settings Required to Use Network TWAIN Scanner	21
Ethernet	21
Network Settings Required to Use Document Server	22
Ethernet	22
Using Utilities to Make Network Settings	24
Interface Settings	24
File Transfer	28
2. System Settings	
General Features	31
Output Tray Settings	35
Timer Settings	36
Interface Settings	39
Network	39
Print List	42
File Transfer	44
Administrator Tools	49

Programming the LDAP server	57
Programming the LDAP server	57
Changing the LDAP server	59
Deleting the LDAP server	60
3. Tray Paper Settings	
Tray Paper Settings	61
Changing Tray Paper Settings	61
Quitting Tray Paper Settings	62
Items of Tray Paper Settings	62
4. Copier/Document Server Features	
General Features	
Reproduction Ratio	83
Edit	85
Stamp	90
Preset Stamp	90
User Stamp	91
Date Stamp	93
Page Numbering	94
Stamp Text	96
Input/Output	98
Adjust Color Image	101
Settings for the Document Server	102
5. Scanner Features	
General Settings	103
Scan Settings	105
Send Settings	107
6. Registering Addresses and Users for Scanner Functions	
Address Book	109
Managing names in the Address Book	112
Sending E-mail by Quick Dial	112
Sending scanned files to a shared folder directly	112
Preventing unauthorized user access to shared folders from the machine	113
Managing users and machine usage	113

Registering Names	114
Registering Names	114
Changing a Registered Name	115
Deleting a Registered Name	116
Authentication Information	118
Registering a User Code	118
Changing a User Code	119
Deleting a User Code	121
Displaying the Counter for Each User	122
Printing the Counter for Each User	123
Printing the Counter for All Users	124
Clearing the Number of Prints	124
E-mail Destination	126
Registering an E-mail Destination	126
Changing an E-mail Destination	127
Deleting an E-mail Destination	129
Registering Folders	130
Using SMB to Connect	130
Using FTP to Connect	136
Using NCP to Connect	141
Registering Names to a Group	148
Registering a Group	148
Registering names to a group	149
Adding a Group to Another Group	151
Displaying Names Registered in a Group	152
Removing a Name from a Group	153
Deleting a Group Within Another Group	154
Changing a Group Name	155
Deleting a Group	156
Registering a Protection Code	158
Registering a Protection Code to a Single User	158
Registering a Protection Code to a Group User	159
Registering SMTP and LDAP Authentication	

SMTP Authentication	161
LDAP Authentication	162
7. Other User Tools	
Maintenance	
Changing the Display Language	166
Inquiry	167
Counter	169
Displaying the Total Counter	169
8. Appendix	
Adjustment Settings for Operators	
Changing the Adjustment Settings for Operators	171
Setting Values	172
Copyrights	189
expat	189
NetBSD	189
Sablotron	191
JPEG LIBRARY	192
SASL	192
MD4	193
MD5	193
Samba(Ver 3.0.4)	193
RSA BSAFE [®]	194
Open SSL	194
Open SSH	196
Open LDAP	200
Heimdal	201
IPS TM print language emulations	201
INDEX	203

How to Read This Manual

Symbols

This manual uses the following symbols:

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

₩Note

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

■ Reference

This symbol is located at the end of sections. It indicates where you can find further relevant information.

[]

Indicates the names of keys on the machine's display or control panels.

Display Panel

The display panel shows machine status, error messages, and function menus.

The function items displayed serve as selector keys. You can select or specify an item by lightly pressing it.

When you select or specify an item on the display panel, it is highlighted like Program / Change. Keys appearing as cannot be used.



• A force or impact of more than 30 N (about 3 kgf) will damage the display panel.

To display the following screen, press the [User Tools] key to display the User Tools menu, and then press [System Settings].

Using the System Settings menu screen as an example, this section explains how to use the machine's display panel.



- 1. The menu tabs for various settings appear. To display the setting you want to specify or change, press the appropriate menu tab.
- 2. A list of settings appears. To specify or change a setting, press the appropriate key in the list.
- 3. Press this to quit the User Tools menu.

Accessing User Tools

This section describes how to access User Tools menu.

User Tools allow you to change or set defaults.



- Operations for system settings differ from normal operations. Always quit User Tools when you have finished.
- Any changes you make with User Tools remain in effect even if the main power switch or operation switch is turned off, or the [Energy Saver] or [Clear Modes] key is pressed.

Reference


• p.10 "Quitting User Tools"

Changing Default Settings

This section describes how to change the settings of User Tools.



- If Administrator Authentication Management is specified, contact your administrator.
- 1. Press the [User Tools] key.

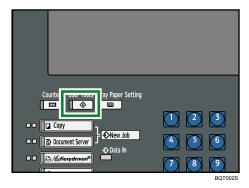

2. Select the menu.

To change the System Settings, press [System Settings].

To change the Copier/Document Server Features, press [Copier / Document Server Features].

To change the Scanner Features, press [Scanner Features].

To adjust color registration or gradation, press [Maintenance].

To change the Adjustment Settings for Operators, press [Adjustment Settings for Operators].

To check the telephone number to contact for repairs, or to order consumables, press [Inquiry].

- 3. Select the user tool you want to change.
- 4. Change settings by following instructions on the display, and then press [OK].

UNote

- To cancel changes made to settings and return to the initial display, press the [User Tools] key.
- For details about specifying System Settings, see "System Settings".
- For details about specifying Copier/Document Server Features, see "Copier/Document Server Features".
- For details about specifying Scanner Features, see "Scanner Features".
- For details about specifying other settings such as adjusting color registration, adjusting gradation, changing the language, checking inquiry and counter, see "Other User Tools".
- For details about Tray Paper Settings, see "Tray Paper Settings".
- For details about specifying Adjustment Settings for Operators, see "Adjustment Settings for Operators".

■ Reference

- p.31 "System Settings"
- p.61 "Tray Paper Settings"
- p.79 "Copier/Document Server Features"
- p.103 "Scanner Features"
- p.165 "Other User Tools"
- p.171 "Adjustment Settings for Operators"

Quitting User Tools

This section describes how to quit the settings of User Tools.

1. Press the [User Tools] key.



BQT002



• You can also quit User Tools by pressing [Exit].

Menu Protect

Using Menu Protect, you can prevent unauthenticated users from changing the user tools. Menu Protect can be specified for each of the following user tools menus.

- [Copier / Document Server Features]
- [Scanner Features]


For details, consult your administrator.

1. Connecting the Machine

This chapter describes how to connect the machine to the network and specify the network settings.

Connecting to the Interfaces

This section explains how to identify the machine's interface and connect the machine according to the network environment.

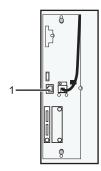

B.IM1019

1. Ethernet port

Port for using the 100BASE-TX, or 10BASE-T cable.


Connecting to the Ethernet Interface

This section describes how to connect Ethernet interface cable to the Ethernet interface.



- If the main power switch is on, turn it off.
- Use the following Ethernet cables.
 - When using 100BASE-TX/10BASE-T.
 Unshielded Twisted Pair Cable (UTP) or Shielded Twisted Pair Cable (STP) and Category type
 5 or more
- 1. Make sure the main power switch of the machine is off.



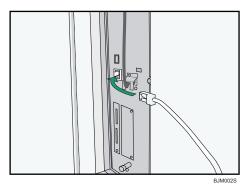

- 3. Connect the other end of the Ethernet interface cable to a network connection device such as a hub.
- 4. Turn on the main power switch of the machine.



1. Indicator (green)

When 10BASE-T is operating, the LED is lit green. When 100BASE-TX is operating it is turned off.

2. Indicator (orange)

When 100BASE-TX is operating, the LED is lit orange. When 10BASE-T is operating, it is turned off.



 For details about how to turn on the main power switch, see "Turning On the Power", About This Machine.

Network Settings Required to Use E-mail Function

This section lists the network settings required for sending e-mail.



• These settings should be made by the system administrator, or with the advice of the system administrator.

Ethernet

This section lists the settings required for sending e-mail with an Ethernet connection.

For details about how to specify the settings, see "Interface Settings" and "File Transfer".

Menu	User Tool	Setting Requirements
Interface Settings/Network	Machine IPv4 Address	Necessary
Interface Settings/Network	IPv4 Gateway Address	Necessary
Interface Settings/Network	DNS Configuration	As required
Interface Settings/Network	DDNS Configuration	As required
Interface Settings/Network	Domain Name	As required
Interface Settings/Network	WINS Configuration	As required
Interface Settings/Network	Effective Protocol	Necessary
Interface Settings/Network	Ethernet Speed	As required
Interface Settings/Network	Permit SNMPv3 Communication	As required
Interface Settings/Network	Permit SSL/TLS Communication	As required
Interface Settings/Network	Host Name	As required
File Transfer	SMTP Server	Necessary
File Transfer	SMTP Authentication	As required
File Transfer	POP before SMTP	As required
File Transfer	Reception Protocol	As required

Menu	User Tool	Setting Requirements
File Transfer	POP3 / IMAP4 Settings	As required
File Transfer	Administrator's E-mail Address	As required
File Transfer	E-mail Communication Port	As required
File Transfer	Program / Change / Delete E-mail Message	As required
File Transfer	Scanner Resend Interval Time	As required
File Transfer	Number of Scanner Resends	As required

■ Note

- For the Effective Protocol setting, check that the protocol you want to use is set to [Active].
- When POP before SMTP is set to [On], also make settings for Reception Protocol and POP3 / IMAP4 Settings.
- When setting POP before SMTP to [On], check POP3 port number in E-mail Communication Port.

■ Reference

- p.39 "Interface Settings"
- p.44 "File Transfer"

Network Settings Required to Use Scan to Folder Function

This section lists the network settings required for sending files.



• These settings should be made by the system administrator, or with the advice of the system administrator.

Ethernet

This section lists the settings required for sending files with an Ethernet connection.

For details about how to specify the settings, see "Interface Settings" and "File Transfer".

Menu	User Tool	Setting Requirements
Interface Settings/Network	Machine IPv4 Address	Necessary
Interface Settings/Network	IPv4 Gateway Address	Necessary
Interface Settings/Network	DNS Configuration	As required
Interface Settings/Network	DDNS Configuration	As required
Interface Settings/Network	Domain Name	As required
Interface Settings/Network	WINS Configuration	As required
Interface Settings/Network	Effective Protocol	Necessary
Interface Settings/Network	Ethernet Speed	As required
Interface Settings/Network	Permit SNMPv3 Communication	As required
Interface Settings/Network	Permit SSL/TLS Communication	As required
Interface Settings/Network	Host Name	As required
File Transfer	Default User Name / Password (Send)	As required
File Transfer	Scanner Resend Interval Time	As required
File Transfer	Number of Scanner Resends	As required

• For the Effective Protocol setting, check that the protocol you want to use is set to [Active].

■ Reference

- p.39 "Interface Settings"
- p.44 "File Transfer"

1

Network Settings Required to Use the Network Delivery Scanner

This section lists the network settings required for delivering data to the network.



 These settings should be made by the system administrator, or with the advice of the system administrator.

Ethernet

This section lists the settings required for delivering data to the network with an Ethernet connection. For details about how to specify the settings, see "Interface Settings" and "File Transfer".

Menu	User Tool	Setting Requirements
Interface Settings/Network	Machine IPv4 Address	Necessary
Interface Settings/Network	IPv4 Gateway Address	As required
Interface Settings/Network	DNS Configuration	As required
Interface Settings/Network	DDNS Configuration	As required
Interface Settings/Network	Domain Name	As required
Interface Settings/Network	WINS Configuration	As required
Interface Settings/Network	Effective Protocol	Necessary
Interface Settings/Network	Ethernet Speed	As required
Interface Settings/Network	Permit SNMPv3 Communication	As required
Interface Settings/Network	Permit SSL/TLS Communication	As required
Interface Settings/Network	Host Name	As required
File Transfer	Delivery Option	Necessary
File Transfer	Scanner Resend Interval Time	As required
File Transfer	Number of Scanner Resends	As required



- For the Effective Protocol setting, check that the protocol you want to use is set to [Active].
- If Delivery Option is set to [On], check that IPv4 Address is specified.

■ Reference

- p.39 "Interface Settings"
- p.44 "File Transfer"

Network Settings Required to Use Network TWAIN Scanner

This section lists the network settings required for using the TWAIN Scanner under the network environment.



 These settings should be made by the system administrator, or with the advice of the system administrator.

Ethernet

This section lists the settings required for using the network TWAIN Scanner with an Ethernet connection. For details about how to specify the settings, see "Interface Settings".

Menu	User Tool	Setting Requirements
Interface Settings/Network	Machine IPv4 Address	Necessary
Interface Settings/Network	IPv4 Gateway Address	As required
Interface Settings/Network	DNS Configuration	As required
Interface Settings/Network	DDNS Configuration	As required
Interface Settings/Network	Domain Name	As required
Interface Settings/Network	WINS Configuration	As required
Interface Settings/Network	Effective Protocol	Necessary
Interface Settings/Network	Ethernet Speed	As required
Interface Settings/Network	Permit SNMPv3 Communication	As required
Interface Settings/Network	Permit SSL/TLS Communication	As required
Interface Settings/Network	Host Name	As required



• For the Effective Protocol setting, check that the protocol you want to use is set to [Active].

Reference

• p.39 "Interface Settings"

Network Settings Required to Use Document Server

This section lists the settings required for using the Document Server function under the network environment.



 These settings should be made by the system administrator, or with the advice of the system administrator.

Ethernet

This section lists the settings required for using the Document Server function with an Ethernet connection. For details about how to specify the settings, see "Interface Settings".

Menu	User Tool	Setting Requirements
Interface Settings/Network	Machine IPv4 Address	Necessary
Interface Settings/Network	IPv4 Gateway Address	As required
Interface Settings/Network	Machine IPv6 Address	As required
Interface Settings/Network	IPv6 Gateway Address	As required
Interface Settings/Network	IPv6 Stateless Address Autoconfiguration	As required
Interface Settings/Network	DNS Configuration	As required
Interface Settings/Network	DDNS Configuration	As required
Interface Settings/Network	Domain Name	As required
Interface Settings/Network	WINS Configuration	As required
Interface Settings/Network	Effective Protocol	Necessary
Interface Settings/Network	Ethernet Speed	As required
Interface Settings/Network	Permit SNMPv3 Communication	As required
Interface Settings/Network	Permit SSL/TLS Communication	As required
Interface Settings/Network	Host Name	As required

- **U** Note
 - For the Effective Protocol setting, check that the protocol you want to use is set to [Active].
- **■** Reference
 - p.39 "Interface Settings"

1

Using Utilities to Make Network Settings

This section describes how to make network settings using utilities.

You can also specify network settings using utilities such as Web Image Monitor and telnet.



- These settings should be made by the system administrator, or with the advice of the system administrator.
- For details about using Web Image Monitor, see "Using Web Image Monitor", Network Guide.
- For details about using telnet, see "Remote Maintenance", Network Guide.

Interface Settings

This section describes how to make Interface settings using utilities.

Change settings by using Web Image Monitor and telnet.

[Network] → [Machine IPv4 Address] → [Auto-Obtain (DHCP)]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [Machine IPv4 Address] → [Specify] → "Machine IPv4 Address"

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [Machine IPv4 Address] → [Specify] → "Subnet Mask"

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [IPv4 Gateway Address]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [Machine IPv6 Address] → "Manual Configuration Address"

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [IPv6 Gateway Address]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [IPv6 Stateless Address Autoconfiguration]

• Web Image Monitor: Can be used for specifying the setting.

1

[Network] → [DNS Configuration] → [Auto-Obtain (DHCP)]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [DNS Configuration] → [Specify] → "DNS Server 1-3"

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [DDNS Configuration]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [IPsec]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [Domain Name] → [Auto-Obtain (DHCP)]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [Domain Name] → [Specify] → "Domain Name"

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [WINS Configuration] → [On] → "Primary WINS Server"

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [WINS Configuration] → [On] → "Secondary WINS Server"

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [WINS Configuration] → [On] → "Scope ID"

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [WINS Configuration] → [Off]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [Effective Protocol] → "IPv4"

• Web Image Monitor: Can be used for specifying the setting.

[Network] → [Effective Protocol] → "IPv6"

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [Effective Protocol] → "NetWare"

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [Effective Protocol] → "SMB"

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [NCP Delivery Protocol] → [IPX Priority]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[Network] → [NCP Delivery Protocol] → [TCP / IP Priority]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[Network] → [NCP Delivery Protocol] → [IPX Only]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[Network] → [NCP Delivery Protocol] → [TCP / IP Only]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[Network] → [NW Frame Type] → [Auto Select]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [NW Frame Type] → [Ethernet II]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [NW Frame Type] → [Ethernet 802.2]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [NW Frame Type] → [Ethernet 802.3]

• Web Image Monitor: Can be used for specifying the setting.

$[Network] \rightarrow [NW Frame Type] \rightarrow [Ethernet SNAP]$

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [SMB Computer Name]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [SMB Work Group]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [Ethernet Speed]

- Web Image Monitor: Cannot be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[Network] → [Ping Command]

- Web Image Monitor: Cannot be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[Network] → [Permit SNMPv3 Communication] → [Encryption Only]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [Permit SNMPv3 Communication] → [Encryption / Cleartext]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

[Network] → [Permit SSL / TLS Communication] → [Ciphertext Only]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[Network] → [Permit SSL / TLS Communication] → [Ciphertext Priority]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[Network] → [Permit SSL / TLS Communication] → [Ciphertext / Cleartext]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[Network] → [Host Name]

• Web Image Monitor: Can be used for specifying the setting.

[Network] → [Machine Name]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Can be used for specifying the setting.

File Transfer

This section describes how to make File Transfer settings using utilities.

Change settings by using Web Image Monitor and telnet.

[File Transfer] → [SMTP Server]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [SMTP Authentication]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [POP before SMTP]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [Reception Protocol] → [POP3]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [Reception Protocol] → [IMAP4]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [Reception Protocol] → [SMTP]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [POP3 / IMAP4 Settings]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [Administrator's E-mail Address]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [E-mail Communication Port]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [E-mail Reception Interval]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [Max. Reception E-mail Size]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [E-mail Storage in Server]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [Default User Name / Password (Send)]

- Web Image Monitor: Can be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [Scanner Resend Interval Time]

- Web Image Monitor: Cannot be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

[File Transfer] → [Number of Scanner Resends]

- Web Image Monitor: Cannot be used for specifying the setting.
- telnet: Cannot be used for specifying the setting.

2. System Settings

This chapter describes user tools in the System Settings menu. For details on how to access System Settings, see "Accessing User tools".

General Features

This section describes the user tools in the General Features menu under System Settings.

Default settings are shown in **bold type**.

Program / Change / Delete User Text

You can register text phrases you often use when specifying settings, such as ".com" and "Regards". You can register up to 40 entries.

- Program / Change
 - 1. Press [System Settings].
 - 2. Check that [General Features] is selected.
 - 3. Press [Program / Change / Delete User Text].
 - 4. Check that [Program / Change] is selected.
 - 5. Select the user text you want to change.

To program new user text, press [Not Programmed].

6. Enter the user text, and then press [OK].

Enter the user text using up to 80 characters.

- 7. Press [Exit].
- 8. Press the [User Tools] key.
- Delete
 - 1. Press [System Settings].
 - 2. Check that [General Features] is selected.
 - 3. Press [Program / Change / Delete User Text].
 - 4. Press [Delete].
 - 5. Select the user text you want to delete.
 - 6. Press [Yes].
 - 7. Press [Exit].
 - 8. Press the [User Tools] key.

Panel Key Sound

The beeper (key tone) sounds when a key is pressed.

The default setting is **Medium**.

Warm-up Beeper (Copier/Document Server)

You can have the beeper sound when the machine becomes ready to copy after leaving Energy Saver mode, or when the power is turned on.

The default setting is On.

If the Panel Key Sound setting is [Off], the beeper does not sound, whatever the Warm-Up Beeper setting.

Copy Count Display (Copier/Document Server)

The copy counter can be set to show the number of copies made (count up) or the number of copies yet to be made (count down).

The default setting is Up.

Function Priority

Specify the mode to be displayed immediately after the operation switch is turned on, or when System Reset mode is turned on.

The default setting is Copier.

Print Priority

Print Priority is given to the mode selected.

The default setting is Display Mode.

Function Reset Timer

You can set the length of time the machine waits before changing modes when using the multi-access function.

This is useful if you are making many copies and have to change settings for each copy. If you set a longer reset period, you can prevent interruption from other functions.

The default setting is Set Time.

When you select [Set Time], enter the time (3-30 seconds, in 1 second increments) using the number keys.

The default setting for Function Reset Time is 3 second(s).

The Function Reset Timer setting is ignored if [Interleave] is set for [Print Priority].

Interleave Print

You can set the timing for changing modes when Print Priority has been set to [Interleave].

The default setting is 10 sheet(s).

You can set the number from 1 to 20 sheets using the number keys.

Status Indicator

You can specify whether the status indicator shows the machine status or not.

The default setting is On.


Screen Color Setting

You can select the screen color among from five types.

The default setting is **Blue Type**.

Output: Copier (Copier)

Specify a tray to which documents are delivered.

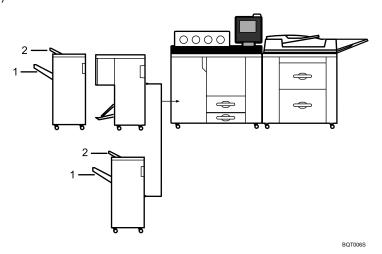

- 1. Finisher Shift Tray
- 2. Finisher Upper Tray

The default setting is Finisher Shift Tray.

Output: Document Server (Document Server)

Specify a tray to which documents are delivered.

The default setting is Finisher Shift Tray.

Output: Printer (Printer)


Specify a tray to which documents are delivered.

The output trays set on the printer driver have priority over the output tray specified in this setting.

The default setting is Finisher Shift Tray.

Paper Tray Priority: Copier (Copier)

Specify a tray to supply paper for output.

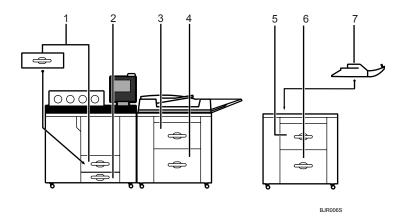

- 1. Tray 1
- 2. Tray 2
- 3. Tray 3
- 4. Tray 4
- 5. Tray 5
- 6. Tray 6
- 7. Tray 7

The default setting is Tray 1.

Paper tray Priority: Printer (Printer)

Specify a tray to supply paper for output.

The default setting is Tray 1.

System Status/Job List Display Time

Specify how long to display the System Status and Job List display for.

The default setting is On, 15 second(s).

By selecting [On], you can specify a display time between 10 and 999 seconds.

Time Interval between Printing Jobs

Specify interval time after printing is completed until starting the next printing.

The default setting is Set Time, 3 second(s).

By selecting [Set Time], you can specify an interval time between 0 and 999 seconds.

ADF Original Table Elevation

Set when to raise the ADF plate after placing originals on the Auto Document Feeder (ADF).

The default setting is When Original is Set.

ADF Feed Speed

When you use thick paper, you can slow down the printing speed to avoid fusing the image by selecting [slow].

The default setting is Normal.

Key Repeat

You can enable or disable repetition of an operation if a key on the screen or control panel is pressed continuously.

The default setting is Normal.

Z-fold Position

If you specify Z-folding, set the fold-back position in 1 mm (0.1") increments.

The setting ranges of the folding position for each paper size are shown below:

- Metric version
 - A3: 2-25 mm
 - B4 JIS: 2-40 mm
 - A4: 2-10 mm
 - 11×17: 2-20 mm
 - $8^{1}/_{2} \times 14: 2-35 \text{ mm}$
- Inch version
 - A3: 0.1"-1.0"
 - B4 JIS: 0.1"-1.6"
 - A4: 0.1"-0.4"
 - 11×17: 0.1"-0.8"
 - $8^{1}/_{2} \times 14:0.1"-1.4"$

The default setting is 2 mm (Metric version) / 0.1" (Inch version).

Reference

• p.9 "Accessing User Tools"

Output Tray Settings



- You cannot interrupt the current stapling job even if a stapling job is specified by a different function.
- When the optional finisher is installed and stapling or shift-sorting is specified, the job will be delivered to the finisher shift tray regardless of the output tray specified.

Timer Settings

This section describes the user tools in the Timer Settings menu under System Settings.

Default settings are shown in **bold type**.

Auto Off Timer

After a specified period has passed, following job completion, the machine automatically turns off, in order to conserve energy. This function is called "Auto Off".

The machine status after the Auto Off operation is referred to as "Off mode", or "Sleep mode".

For the Auto Off Timer, specify the time to elapse before Auto Off.

The default setting is 90 min.

The time can be set from 1 to 240 minutes, using the number keys.

Auto Off may not work when error messages appear.

Energy Saver Timer

Set the amount of time the machine waits before switching to lower-power mode after copying has finished or the last operation is performed.

The time can be set from 1 to 240 minutes, using the number keys.

The default setting is 30 min.

Panel Off Timer

Set the amount of time the machine waits before switching the panel off after copying has finished or the last operation is performed.

Enter a time interval between 10 seconds and 240 minutes, using the number keys.

The default setting is 60 second(s).

System Auto Reset Timer

The System Reset setting automatically switches the screen to that of the function set in Function Priority when no operations are in progress, or when an interrupted job is cleared. This setting determines the system reset interval.

The time can be set from 10 to 999 seconds, using the number keys.

The default setting is On, 60 second(s).

Copier / Document Server Auto Reset Timer (Copier/Document Server)

Specifies the time to elapse before copier and Document Server modes reset.

If [Off] is selected, the machine does not automatically switch to the user code entry screen.

The time can be set from 10 to 999 seconds, using the number keys.

The default setting is On, 60 second(s).

Scanner Auto Reset Timer (scanner)

Specify the time to elapse before the scanner function resets.

If [Off] is selected, the machine will not automatically switch to the user code entry screen.

The time can be set from 10 to 999 seconds, using the number keys.

The default setting is On, 60 second(s).

Set Date

Set the date for the copier's internal clock using the number keys.

To change between year, month, and day, press $[\leftarrow]$ and $[\rightarrow]$.

Set Time

Set the time for the copier's internal clock using the number keys.

Enter the time using the 24-hour format (in 1 second increments).

To change between hours, minutes and seconds, press $[\leftarrow]$ and $[\rightarrow]$.

Auto Logout Timer

Specify whether or not to automatically log out a user when the user does not operate the machine for a specified period of time after logging in.

The time can be set from 60 to 999 seconds, in one second increments, using the number keys.

The default setting is On, 180 second(s).

Weekly Timer Code

Set a password (using not more than eight digits) for turning on the power during the time periods when "Weekly Timer" turns off the machine's power.

In order to make this setting, administrator authentication must be enabled. For details, consult your administrator.

The default setting is Off.

If you have selected "On", enter the password.

When you select "On", you cannot use the machine even if you turn the power switch to "On", unless you enter the password.

If you select "Off", you do not have to enter a password to switch on the machine, you need only turn the power switch to "On".

Weekly Timer: Monday - Sunday

Set the daily time when the power is switched on/off.

- · Power On Time
- Power Off Time

Enter the time using the 24-hour system.

Enter the "hour" and "minute" using the number keys.

■ Reference

• p.9 "Accessing User Tools"

Interface Settings

This section describes the user tools in the Interface Settings menu under System Settings.

Default settings are shown in **bold type**.

Network

This section describes the user tools in the Network menu under Interface Settings.

Machine IPv4 Address

Specify the machine's IPv4 network address.

The default setting is Auto-Obtain (DHCP).

When you select [Specify], enter the IPv4 address and subnet mask as "xxx.xxx.xxx" ("x" indicates a number).

When you select [Specify], make sure that IPv4 address is different from that of other machines on the network.

The physical address (MAC address) also appears.

IPv4 Gateway Address

A gateway is a connection or interchange point between two networks.

Specify the gateway address for the router or host computer used as a gateway.

The default setting is 000.000.000.000.

Machine IPv6 Address

Displays the machine's IPv6 network address.

Link-local Address

The machine's specified link-local address appears.

• Manual Configuration Address

The machine's manually configured address appears.

• Stateless Address: 1-5

The specified stateless address appears.

IPv6 Gateway Address

Displays the machine's IPv6 gateway address.

IPv6 Stateless Address Autoconfiguration

Specify IPv6 Stateless Address Autoconfiguration.

The default setting is Active.

DNS Configuration

Make settings for the DNS server.

The default setting is Auto-Obtain (DHCP).

When you select [Specify], enter the DNS Server IPv4 address as "xxx.xxx.xxx" ("x" indicates a number).

DDNS Configuration

Specify the DDNS settings.

The default setting is Active.

IPsec

Specify the machine's IPsec function Active/Inactive.

The default setting is Inactive.

Domain Name

Specify the domain name.

The default setting is Auto-Obtain (DHCP).

When you select [Specify], enter the domain name using up to 63 characters.

WINS Configuration

Specify the WINS server settings.

The default setting is Off.

If [On] is selected, enter the WINS Server IPv4 address as "xxx.xxx.xxx" ("x" indicates a number).

If DHCP is in use, specify the scope ID. Enter a scope ID using up to 31 characters.

Effective Protocol

Select the Protocol to use in the network.

The default setting for "IPv4" is Active.

The default setting for "IPv6" is Inactive.

The default setting for "NetWare" is Active.

The default setting for "SMB" is **Active**.

NCP Delivery Protocol

Select the protocol NCP delivery.

The default setting is TCP / IP Priority.

If you select "IPX Only" or "TCP / IP Only", you cannot switch the protocol even if you cannot connect with it. If "NetWare" in [Effective Protocol] is set to "Inactive", you can only use TCP/IP.

NW Frame Type

Select the frame type when you use NetWare.

The default setting is Auto Select.

SMB Computer Name

Specify the SMB computer name.

Enter the computer name using up to 15 characters.

"*+,/:;<>= $?[\]$]. and spaces cannot be entered.

Do not set a computer name starting with RNP and rnp.

Use uppercase letters for alphabets.

SMB Work Group

Specify the SMB work group.

Enter the computer name using up to 15 characters.

"*+,/:; $<>=?[\]$ |. and spaces cannot be entered.

Use uppercase letters for alphabet.

Ethernet Speed

Set the access speed for networks.

The default setting is Auto Select.

Select a speed that matches your network environment. [Auto Select] should usually be selected.

	10Mbps Half Duplex	10Mbps Full Duplex	100Mbps Half Duplex	100Mbps Full Duplex	Auto Select
10Mbps Half Duplex	•	_	_	_	•
10Mbps Full Duplex	_	•	_	_	_
100Mbps Half Duplex	_	_	•	_	•
100Mbps Full Duplex	_	_	_	•	_
Auto Select	•	_	•	_	•

Ping Command

Check the network connection with ping command using given IPv4 address.

If you fail to connect to the network, check the following, and then retry the ping command.

- Make sure that "IPv4" in [Effective Protocol] is set to "Active".
- Check that the machine with assigned IPv4 address is connected to the network.
- There is a possibility that the same IPv4 address is used for the specified equipment.

Permit SNMPv3 Communication

Set the encrypted communication of SNMPv3.

The default setting is **Encryption / Cleartext**.

If you select to [Encryption Only], you need to set an encryption password for the machine.

Permit SSL / TLS Communication

Set the encrypted communication of SSL/TLS.

The default setting is Ciphertext Priority.

If you set to [Ciphertext Only], you need to install the SSL certificate for the machine.

Host Name

Specify the host name.

Enter the host name using up to 63 characters.

Machine Name

Specify the machine name.

Enter the machine name using up to 31 characters.

Print List

This section describes how to print the configuration page.


You can check items related to the network environment.

The configuration page shows the current network settings and network information.


1. Press [System Settings].



2. Press [Interface Settings].

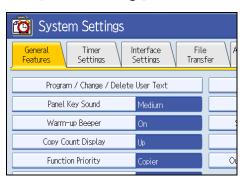

3. Press [Print List].

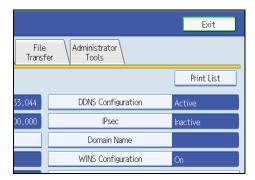

4. Press the [Start] key.

The configuration page is printed.

- 5. Press [Exit].
- 6. Press the [User Tools] key.



• You can also exit by pressing [Exit] on the User Tools main menu.

File Transfer

This section describes the user tools in the File Transfer menu under System Settings.

Default settings are shown in **bold type**.

Delivery Option

Enables or disables sending stored or scanned documents to the ScanRouter delivery server.

The default setting is Off.

Specify this option when selecting whether or not to use the ScanRouter delivery software. If you do, you will have to preregister I/O devices in the ScanRouter delivery software.

SMTP Server

Specify the SMTP server name.

If DNS is in use, enter the host name.

If DNS is not in use, enter the SMTP server IPv4 address.

The default setting for "Port No." is 25.

Enter the server name using up to 127 characters. Spaces cannot be entered.

Enter port number between 1 and 65535 using the number keys, and then press the [#] key.

The SMTP server shares the same port number with the Direct SMTP server.

SMTP Authentication

Specify SMTP authentication (PLAIN, LOGIN, CRAMMD5, and DIGEST-MD5). When sending email to an SMTP server, you can enhance the SMTP server security level using authentication that requires entering the user name and password.

If the SMTP server requires authentication, set [SMTP Authentication] to [On], and then specify the user name, password and encryption.

The default setting is Off.

• Enter the user name using up to 191 characters.

Spaces cannot be entered. Depending on the SMTP server type, "realm" must be specified. Add "@" after the user name, as in "user name@realm".

• Enter the password using up to 128 characters.

Spaces cannot be entered.

- Enter the E-mail address using up to 128 characters.
- Select Encryption as follows:

"Encryption"-[Auto]

Use if the authentication method is PLAIN, LOGIN, CRAM-MD5, or DIGEST-MD5.

"Encryption"-[On]

Use if the authentication method is CRAMMD5 or DIGEST-MD5.

"Encryption"-[Off]

Use if the authentication method is PLAIN, or LOGIN.

POP before SMTP

Specify POP authentication (POP before SMTP).

When sending e-mail to an SMTP server, you can enhance the SMTP server security level by connecting to the POP server for authentication.

The default setting is Off.

If you set POP before SMTP to [On], specify the waiting time after authentication, user name, e-mail address, and password.

• Wait Time after Authent.: 300 msec..

Specify [Wait Time after Authent.] from zero to 10,000 milliseconds, in increments of one millisecond.

User Name

Enter the user name using up to 191 characters. Spaces cannot be entered.

E-mail Address

Enter the E-mail Address using up to 128 characters. Spaces cannot be entered.

Password

Enter the password using up to 128 characters. Spaces cannot be entered.

To enable POP server authentication before sending e-mail via the SMTP server, set [POP before SMTP] to [On]. E-mail is sent to the SMTP server after the time specified for [Wait Time after Authent.] has elapsed.

If you select [On], enter server name in POP3 / IMAP4 Settings. Also, check POP3 port number in E-mail Communication Port.

Reception Protocol

Specify the Reception Protocol for E-mail Notification function.

The default setting is POP3.

POP3 / IMAP4 Settings

Specify the POP3/IMAP4 server name for E-mail Notification function.

The specified POP3/IMAP4 server name is used for [POP before SMTP].

The default setting is Auto.

Server Name

If DNS is in use, enter the host name.

If DNS is not in use, enter the POP3/IMAP4 or server IPv4 address.

Enter POP3/IMAP4 server name using up to 127 characters. Spaces cannot be entered.

• Select Encryption as follows:

Encryption-[Auto]

Password encryption is automatically set according to the POP/IMAP server settings.

Encryption-[On]

Encrypt password.

Encryption-[Off]

Do not encrypt password.

Administrator's E-mail Address

Specify the Administrator's E-mail Address.

If a failure occurs in the machine or consumables need to be replaced, e-mail messages are sent to the Administrator's E-mail Address by E-mail Notification function.

On e-mailed scanned documents, if the sender is not specified this appears as the sender's address.

- The sender has not been specified and the machine's e-mail address has not been registered.
- The specified sender is not registered in the machine's address book and the machine's e-mail address has not been registered.

Enter up to 128 characters.

On e-mailed scanned documents, if [Auto Specify Sender Name] is [Off], specify the sender.

E-mail Communication Port

Specify the port numbers for E-mail Notification function. The specified POP3 port number is used for [POP before SMTP].

The default setting for POP3 is 110.

The default setting for IMAP4 is 143.

Enter a port number between 1 and 65535 using the number keys, and then press the [#] key.

E-mail Reception Interval

Specify, in minutes, the time interval for E-mail Notification function via POP3 or IMAP4 server.

The default setting is On, 15 minute(s).

If [On] is selected, the time can be set from 2 to 1440 minutes in increments of one minute.

Max. Reception E-mail Size

Specify the maximum reception e-mail size for E-mail Notification function.

The default setting is 2MB.

Enter a size from one to 50 MB in increments of one megabyte.

E-mail Storage in Server

Specify whether or not to store received E-mail messages by E-mail Notification function on the POP3 or IMAP4 server.

The default setting is Off.

Default User Name / Password (Send)

Specify the user name and password required when sending scan files directly to a shared folder on a computer running Windows, to a SMB, FTP, NCP server.

Enter in up to 128 characters.

Program / Change / Delete E-mail Message

You can program, change, or delete the e-mail message used when sending scan file as an attachment.

- Program / Change:
 - 1. Press [System Settings].
 - 2. Press [File Transfer].
 - 3. Press [Program / Change / Delete E-mail Message].
 - 4. Check that [Program / Change] is selected.
 - 5. Press [*Not Programmed].

To change the registered e-mail message, select the e-mail message to change.

- 6. Press [Change] under the "Name".
- 7. Enter a name, and then press [OK].

Enter the name using up to 20 characters.

8. Press [Edit].

To start a new line, press [OK] to return to the e-mail message screen, and then press [▼] in "Select Line to Edit:".

9. Enter the text, and then press [OK].

Enter up to five lines of text. Each line can consist of up to 80 characters.

- 10. Press [OK].
- 11. Press [Exit].
- Delete:
 - 1. Press [System Settings].
 - 2. Press [File Transfer].
 - 3. Press [Program / Change / Delete E-mail Message].
 - 4. Press [Delete].
 - 5. Select the e-mail message to delete.

The confirmation message about deleting appears.

- 6. Press [Yes].
- 7. Press [Exit].

Auto Specify Sender Name

Set whether or not to specify the name of the sender when sending e-mail.

The default setting is Off.

On

If you select [On], the specified e-mail address will appear in the "From:" box. If you do not specify the sender's address, the administrator's e-mail address will appear in the "From:" box.

Off

If you select [Off], the specified e-mail address will appear in the "From:" box, but you cannot send e-mail without specifying the sender's e-mail address.

Scanner Resend Interval Time

Specifies the interval the machine waits before resending a scan file, if it cannot be sent to the delivery server or mail server.

The default setting is 300 second(s).

The interval time can be set from 60 to 999 seconds in one second increments, using the number keys.

This setting is for the scanner function.

Number of Scanner Resends

Sets a maximum number of times a scan file is resent to the delivery server or mail server.

The default setting is On, 3 time(s).

If [On] is selected, the number of times can be set from 1 to 99.

This setting is for the scanner function.

Reference

• p.9 "Accessing User Tools"

Administrator Tools

This section describes the user tools in the Administrator Tools menu under System Settings.

Default settings are shown in **bold type**.

Administrator Tools are used by the administrator. To change these settings, contact the administrator.

We recommend specifying Administrator Authentication before making Administrator Tools settings.

Address Book Management

You can add, change or delete information registered in the Address Book.

For details, see "Address Book".

• Program / Change

You can register and change names as well as user codes.

Names

You can register a name, key display, registration number, and title selection.

• Auth. Info

You can register a user code, and specify the functions available to each user code. You can also register user names and passwords to be used when sending e-mail, sending files to folders, or accessing an LDAP server.

Protection

You can register a protection code.

• E-mail

You can register an e-mail address.

Folder

You can register the protocol, path, port number, and server name.

Add to Group

You can put names registered in the Address Book into a group.

Delete

You can delete a name from the Address Book.

You can register up to 2,000 names.

You can register up to 500 user codes.

You can also register and manage names in the Address Book using Web Image Monitor.

Address Book: Program / Change / Delete Group

Names registered in the Address Book can be added into a group. You can then easily manage the names registered in each group.

• Program / Change

You can register and change groups.

Names

You can register a name, key display, registration number, and title selection.

• Programmed User/Group

You can check the names or groups registered in each group.

• Protection

You can register a protection code.

• Add to Group

You can put groups registered in the Address Book into a group.

Delete

You can delete a group from the Address Book.

You can register up to 100 groups.

You can also register and manage groups in the Address Book using Web Image Monitor.


Address Book: Change Order

Changes the order of registered names.


You can rearrange the order of items on the same page, but you cannot move items to another page.

For example, you cannot move an item from "PLANNING" ([OPQ]) to "DAILY" ([CD]).

- 1. Press [System Settings].
- 2. Press [Administrator Tools].
- 3. Press [Address Book: Change Order].

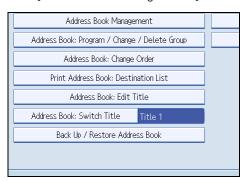


4. Press the name key to be moved.

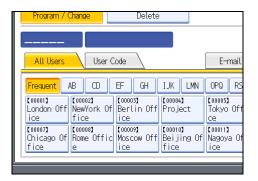

You can select a name using the number keys.


5. Press the name key in place you want to move it to.

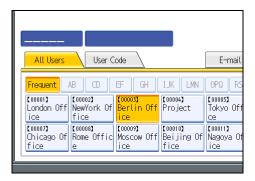

The user key is moved to the selected position, and the user key currently at the selected position is moved forward or backward.

If you move the selected user key forward, the user key currently at the selected position is moved backward.

If you move the selected user key backward, the user key currently at the selected position is moved forward.

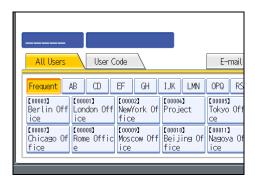


You can also select a name using the number keys.

Address Book: Edit Title

You can edit the title to easily find a user.

- 1. Press [System Settings].
- 2. Press [Administrator Tools].
- 3. Press [Address Book: Edit Title].

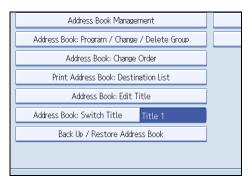

4. Press the title key you want to change.



- 5. Enter the new name, and then press [OK].
- 6. Press [OK].

Address Book: Switch Title

Specifies the title to select a name.

The default setting is **Title 1**.

Back Up / Restore Address Book

You can back up the machine's address book to external storage or restore the backup copy from the external storage.

• Back Up

You can back up the machine's address book to external storage.

Restore

You can restore the backup copy of the address book from external storage.

Format

You can format the external storage.

Obtain Media Info

The free space and occupied space of the external storage are displayed.

Display / Print Counter

Allows you to view and print the number of prints.

• Display / Print Counter

Displays the number of prints for each function (Total, Copier, Printer, A3 / DLT, Duplex, Scanner Send, Send / TX Total).

Print Counter List

Prints out a list of the number of prints made under each function.

Display / Clear / Print Counter per User

Allows you to view and print the numbers of prints accessed with user codes, and to set those values to 0.

Press [▲Previous] and [▼Next] to show all the numbers of prints.

The number of prints may differ from the counter values shown in Display / Print Counter.

• Print Counter List for All Users

Prints the counter value for all the users.

• Clear Counter List for All Users

Resets the counter value for all the users.

• Print Counter List per User

Prints the counter value for each user.

• Clear Counter List per User

Resets the counter value for each user.

• Select All on the Page

Select all the users on the page.

User Authentication Management

• User Code Auth.

Using User Code Authentication, you can limit the available functions and supervise their use.

When using User Code Authentication, register the user code.

Using the Printer PC Control function, you can obtain a log of prints corresponding to the codes entered using the printer driver.

If User Code Authentication has been specified, Auto Color Select cannot be used.

For details about Basic Authentication, Windows Authentication, LDAP Authentication, and Integration Server Authentication, consult your administrator.

• Copier:

"Restrict All (B&W / Single Color / Two-color / Full Color)", "Single Color / Two-color / Full Color", "Two-color / Full Color", "Full Color", "Do not Restrict"

• Printer:

"Black & White / Color", "Color", "PC Control", "Do not Restrict"

Other Functions:

"Document Server", "Scanner"

- Basic Auth.
- · Windows Auth.
- LDAP Auth.
- Integration Svr. Auth.
- Off

Administrator Authentication Management

For details about this function, consult your administrator.

Program / Change Administrator

For details about this function, consult your administrator.

External Charge Unit Management

For details about this function, consult your administrator.

Enhanced External Charge Management

For details about this function, consult your administrator.

Extended Security

Specify whether or not to use the extended security functions. For details about the extended security functions, consult your administrator.

Auto Delete File in Document Server

Specify whether documents stored in the Document Server will or will not be deleted after a specified period of time.

The default setting is On, 3 day(s).

If you select [On], documents stored subsequently are deleted after the specified period.

If you select [Off], documents are not automatically deleted.

If you select [On], enter a number of days from 1 to 180 (in 1 day increments).

The default is 3 days, this means documents are deleted 3 days (72 hours) after they are stored.

Delete All Files in Document Server

You can delete files stored in the Document Server, including files stored for Sample Print, Locked Print, Hold Print, and Stored Print under the printer function.

Even if a password is always set, all documents are deleted.

A confirmation message appears. To delete all documents, select [Yes].

Program / Change / Delete LDAP Server

Program the LDAP server to find up e-mail destinations in the LDAP server Address Book directly. This function is possible when sending scan files by e-mail using the scanner function.

To start an LDAP search, make sure that the items listed below are set. For other items, check your environment and make any necessary changes.

- Server Name
- Search Base
- Port Number
- Search Conditions
- Authentication

This function supports LDAP Version 2.0 and 3.0.

To use the LDAP server, select [On] under LDAP Search.

For details about how to program the LDAP Server, see "Programming the LDAP server".

LDAP Search

Specify whether or not to use the LDAP server for searching.

The default setting is Off.

If you select [Off], LDAP server list will not appear on the searching display.

AOF (Always On)

Specify whether or not to use Auto Off.

The default setting is On.

Firmware Version

You can check the version of the software installed in this machine.

Network Security Level

For details about this function, consult your administrator.

Auto Erase Memory Setting

For details about this function, consult your administrator.

Erase All Memory

For details about this function, consult your administrator.

■ Reference

- p.9 "Accessing User Tools"
- p.57 "Programming the LDAP server"
- p.109 "Address Book"
- p.123 "Printing the Counter for Each User"

2

• p.169 "Counter"

2

Programming the LDAP server

This section describes how to specify the LDAP server settings.

This function supports LDAP versions 2.0 and 3.0.

Program the LDAP server to find user information in the LDAP server Address Book directly.

To start an LDAP search, make sure that the items listed below are set. For other items, check your environment and make any necessary changes.

- Name
- Server Name
- · Search Base
- Port Number
- Use Secure Connection (SSL)
- Authentication
- Search Conditions

Programming the LDAP server

This section describes how to program the LDAP server.

- 1. Press [System Settings].
- 2. Press [Administrator Tools].
- 3. Press [▼Next] twice.
- 4. Press [Program / Change / Delete LDAP Server].
- 5. Check that [Program / Change] is selected.
- 6. Select the LDAP server you want to program or change.

When programming the server, select [*Not Programmed].

- 7. Press [Change] under "Name".
- 8. Enter the name, and then press [OK].
- 9. Press [Change] under "Server Name".
- 10. Enter the server name, and then press [OK].
- 11. Press [Change] under "Search Base".

Select the root folder from which to start the search. Users registered in the selected folder and its subfolders become search targets.

12. Enter the search base, and then press [OK].

For example, if the search target is the sales department of ABC company, enter "dc=sales department, o=ABC". (In this example, the description is for an active directory. "dc" is for the organization unit, and "o" is for the company.)

Search base registration may be required depending on your server environment. When registration is required, unspecified searches will result in error.

Check your server environment and enter any required specifications.

13. Press [Change] under "Port Number".

Specify the port number for communicating with the LDAP server. Specify a port that is compliant with your environment.

14. Enter the port number using the number keys, and then press the [#] key.

15. Press [On] under "Use Secure Connection (SSL)".

Use SSL to communicate with the LDAP server.

To use SSL, the LDAP server must support SSL.

When SSL is set to [On], the port number automatically changes to "636".

SSL setting must be enabled on this machine. For details, consult your network administrator.

16. Press [VNext].


17. Press [On] or [High Security] under "Authentication".

To make a search request to the LDAP server, use the administrator account for authentication.

Authentication settings must comply with your server's authentication settings. Check your server settings before setting this machine.

[High Security] is available only with LDAP Version 3.0.

When [High Security] is selected, the administrator password is encrypted before it is sent to the network. When [On] is selected, the password is sent without out encryption.

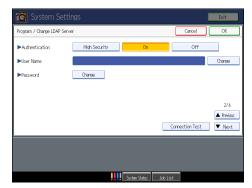

18. Press [Connection Test].

Access the LDAP server to check that the proper connection is established. Check authentication works according to the authentication settings.

19. Press [Exit].

If the connection test fails, check your settings and try again.

This function does not check search conditions or the search base.

- 20. Press [▼Next].
- Press [Change] for items you want to use as search conditions from the following: "Name",
 "E-mail Address", "Company Name", "Fax Number", and "Department Name".

You can enter an attribute as a typical search keyword. Using the entered attribute, the function searches the LDAP server's Address Book.

22. Enter the attribute you want to use when searching for e-mail addresses, and then press [OK].

The attribute value may change depending on the server environment. Check that the attribute value complies with your server environment before setting it.

You can leave items blank, but you cannot leave attributes blank when searching for e-mail addresses from the LDAP server Address Book.

- 23. Press [▼Next].
- 24. Press [Change] under "Attribute".
- 25. Enter the attribute you want to use when searching for e-mail addresses, and then press [OK].

The attribute value may change depending on the server environment. Check that the attribute complies with your server environment before setting it.

- 26. Press [Change] under "Key Display".
- 27. Enter the key display, and then press [OK].

The registered "Key Display" appears as a keyword for searching LDAP.

 $The key does \ not \ appear \ on \ the \ search \ screen \ unless \ both \ "Attribute" \ and \ "Key \ Display" \ are \ registered.$

Make sure you register both to use the optional search.

- 28. Press [OK].
- 29. Press [Exit].
- 30. Press the [User Tools] key.

Changing the LDAP server

This section describes how to change the programmed LDAP server.

- 1. Press [System Settings].
- 2. Press [Administrator Tools].
- 3. Press [▼Next] twice.

- 4. Press [Program / Change / Delete LDAP Server].
- 5. Check that [Program / Change] is selected.
- 6. Select the LDAP server you want to change.
- 7. Change the settings as necessary.
- 8. Press [OK] after changing each item.
- 9. Press [Exit].
- 10. Press the [User Tools] key.

Deleting the LDAP server

This section describes how to delete the programmed LDAP server.

- 1. Press [System Settings].
- 2. Press [Administrator Tools].
- 3. Press [▼Next] twice.
- 4. Press [Program / Change / Delete LDAP Server].
- 5. Press [Delete].
- 6. Select the LDAP server you want to delete.
- 7. Press [Yes].
- 8. Press [Exit].
- 9. Press the [User Tools] key.

3. Tray Paper Settings


This chapter describes various items of Tray Paper Settings available in this machine. If the specified paper size differs from the actual size of the paper loaded in the paper tray, a misfeed might occur because the correct paper size was not detected.

Tray Paper Settings

Changing Tray Paper Settings

This section describes how to change the settings of Tray Paper Settings.

1. Press the [Tray Paper Setting] key.

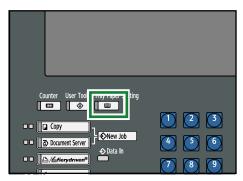

BQT003S

2. Select the tray that you want to change the settings.




3. Change settings, and then press [OK].



Quitting Tray Paper Settings

This section describes how to quit the settings of Tray Paper Settings.

1. Press the [Tray Paper Setting] key.

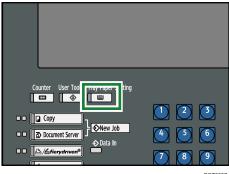

BQT003S

UNote

• You can also quit Tray Paper Settings by pressing [Exit].

Items of Tray Paper Settings

This section describes the Items of Tray Paper Settings menu.

Default settings are shown in **bold type**.

Important

• If the specified paper size differs from the actual size of the paper loaded in the paper tray, a misfeed might occur because the correct paper size was not detected.

Tray 1

Paper Size:

The paper sizes you can set for Tray 1 are as follows:

$$A4D, 8^{1}/_{2} \times 11D$$

Paper Type:

Sets the display so you can see what type of paper is loaded in the paper tray.

The paper types you can set for the Paper Tray 1 are as follows:

No Display, Recycled Paper, Color Paper1, Color Paper2, Yellow, Green, Blue, Purple, Ivory, Orange, Pink, Red, Gray, Letterhead, Preprinted Paper, Bond Paper, Card Stock, Prepunched Paper, Special Paper 1, Special Paper 2, Special Paper 3, Special Paper 4, Special Paper 5, Special Paper 6, Envelope

Paper Thickness:

The paper thicknesses you can set for the Paper Tray 1 are as follows:

- Thin Paper
 (60-75 g/m²)
- Plain Paper

$$(76-100 \text{ g/m}^2)$$

• Middle Thick

$$(101-126 \text{ g/m}^2)$$

Thick Paper 1

$$(127-156 \text{ g/m}^2)$$

• Thick Paper 2

$$(157-220 \text{ g/m}^2)$$

The default setting for "Paper Type" is No Display.

The default setting for "Paper Thickness" is Plain Paper.

The default setting for "Apply Duplex" is Yes.

The default setting for "Apply Auto Paper Select" is Yes.

The key mark is displayed next to the paper tray if [No] is selected in [Apply Auto Paper Select].

Auto Paper Select can only be selected for the copier function if [No Display] and [Recycled Paper] are selected. If [No] is selected, Auto Paper Select is not valid.

For details about the relations between possible paper sizes and thickness, see "Recommended Paper Sizes and Types", About This Machine.

For details about the recommended conditions for using thick paper, see "Thick Paper", About This Machine.

Designation Sheet 1 - 9:

You can specify and display the paper tray to set designation sheets. You can also specify the display time and copying method for two sided copying.

• Display Time

You can select [At Mode Selected] or [Full Time].

· Apply Duplex

You can select [Yes] or [No].

Apply Duplex is enabled only when you select [At Mode Selected] in Display Time.

Front Cover:

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Apply Duplex is enabled only when you select [At Mode Selected] in Display Time.

Back Cover:

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

• Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Apply Duplex is enabled only when you select [At Mode Selected] in Display Time.

Slip Sheets:

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

Display Time

You can select [At Mode Selected] or [Full Time].

Separation Sheets:

You can specify and display the paper tray in which to set separation sheets. You can also specify the display time.

Display Time

You can select [At Mode Selected] or [Full Time].

Tray 1 (utilizing the A3/11"×17" Tray Unit)

Paper Size:

Select the size of the paper loaded in the optional $A3/11"\times17"$ tray unit.

This menu appears only when the A3/11"×17" tray unit is installed.

The paper sizes you can set for tray 1 (utilizing the A3/11"×17" tray unit) are as follows:

A3□, 11×17□

Paper Type:

Sets the display so you can see what type of paper is loaded in the paper tray.

The paper types you can set for the Paper Tray 1 (utilizing the A $3/11"\times17"$ tray unit) are as follows:

No Display, Recycled Paper, Color Paper1, Color Paper2, Yellow, Green, Blue, Purple, Ivory, Orange, Pink, Red, Gray, Letterhead, Preprinted Paper, Bond Paper, Cardstock, Prepunched Paper, Special Paper 1, Special Paper 2, Special Paper 3, Special Paper 4, Special Paper 5, Special Paper 6, Envelope

Paper Thickness:

The paper thicknesses you can set for the Paper Tray 1 (utilizing the A3/11"×17" Tray Unit) are as follows:

• Thin Paper

 $(60-75 \text{ g/m}^2)$

• Plain Paper

 $(76-100 \text{ g/m}^2)$

Middle Thick

 $(101-126 \text{ g/m}^2)$

• Thick Paper 1

 $(127-156 \text{ g/m}^2)$

• Thick Paper 2

 $(157-220 \text{ g/m}^2)$

The default setting for "Paper Type" is No Display.

The default setting for "Paper Thickness" is Plain Paper.

The default setting for "Apply Duplex" is Yes.

The default setting for "Apply Auto Paper Select" is Yes.

The key mark is displayed next to the paper tray if [No] is selected in [Apply Auto Paper Select].

Auto Paper Select can only be selected for the copier function if [No Display] and [Recycled Paper] are selected. If [No] is selected, Auto Paper Select is not valid.

For details about the relations between possible paper sizes and thickness, see "Recommended Paper Sizes and Types", About This Machine.

For details about the recommended conditions for using thick paper, see "Thick Paper", About This Machine.

Designation Sheet 1 - 9:

You can specify and display the paper tray to set designation sheets. You can also specify the display time and copying method for two sided copying.

• Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Apply Duplex is enabled only when you select [At Mode Selected] in Display Time.

Front Cover:

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

• Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Apply Duplex is enabled only when you select [At Mode Selected] in Display Time.

Back Cover:

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Apply Duplex is enabled only when you select [At Mode Selected] in Display Time.

Slip Sheets:

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

• Display Time

You can select [At Mode Selected] or [Full Time].

Separation Sheets:

You can specify and display the paper tray in which to set separation sheets. You can also specify the display time.

· Display Time

You can select [At Mode Selected] or [Full Time].

Tray 2

Paper Size:

Select the size of the paper loaded in the paper tray.

The paper sizes you can set for Tray 2 are as follows:

Auto Detect, A3 \Box , A4 \Box , A4 \Box , A5 \Box , B4 JIS \Box , B5 JIS \Box , B5 JIS \Box , SRA3 \Box , 12×18 \Box , 11×17 \Box , 11×15 \Box , 11×14 \Box , 10×15 \Box , 10×14 \Box , 8 $^{1}/_{2}$ ×14 \Box , 8 $^{1}/_{2}$ ×13 \Box , 8 $^{1}/_{2}$ ×11 \Box , 8 $^{1}/_{4}$ ×13 \Box , 8×13 \Box , 8×10 \Box , 7 $^{1}/_{4}$ ×10 $^{1}/_{2}$ \Box , 7 $^{1}/_{4}$ ×10 $^{1}/_{2}$ \Box , 5 $^{1}/_{2}$ ×8 $^{1}/_{2}$ \Box , Custom Size

You can specify a custom size of between 139.7 - 330.2 mm (5.5" - 13.0") vertically, and between 184.1 - 458.0 mm (7.25" - 18.03") horizontally.

The default setting is Auto Detect.

Paper Type:

Sets the display so you can see what type of paper is loaded in the paper tray.

The print function uses this information to automatically select the paper tray.

The paper types you can set for the Paper Tray 2 are as follows:

No Display, Recycled Paper, Color Paper 1, Color Paper 2, Yellow, Green, Blue, Purple, Ivory, Orange, Pink, Red, Gray, Letterhead, Preprinted Paper, Bond Paper, Card Stock, Prepunched Paper, Special Paper 1, Special Paper 2, Special Paper 3, Special Paper 4, Special Paper 5, Special Paper 6, Envelope, Tab Stock

Paper Thickness:

The paper thicknesses you can set for the Paper Tray 2 are as follows:

- Thin Paper
 - $(60-75 \text{ g/m}^2)$
- Plain Paper
 - $(76-100 \text{ g/m}^2)$
- Middle Thick
 - $(101-126 \text{ g/m}^2)$
- Thick Paper 1
 - $(127-156 \text{ g/m}^2)$

• Thick Paper 2

 $(157-220 \text{ g/m}^2)$

The default setting for "Paper Type" is No Display.

The default setting for "Paper Thickness" is Plain Paper.

The default setting for "Apply Duplex" is Yes.

The default setting for "Apply Auto Paper Select" is Yes.

The key mark is displayed next to the paper tray if [No] is selected in [Apply Auto Paper Select].

Auto Paper Select can only be selected for the copier function if [No Display] and [Recycled Paper] are selected. If [No] is selected, Auto Paper Select is not valid.

For details about the relations between possible paper sizes and thickness, see "Recommended Paper Sizes and Types", About This Machine.

For details about the recommended conditions for using thick paper, see "Thick Paper", About This Machine.

The optional tab sheet holder is required when using tab stock in Tray 2.

The number of tab stock shifts can be set in millimeters, when Tab Stock has been selected.

The number of tab stock shift can be set in 1 millimeter (1 inch) units, within a range of 0 to 15 mm (0" to 0.6"). The default is 13 mm (0.5").

Designation Sheet 1 - 9:

You can specify and display the paper tray to set designation sheets. You can also specify the display time and copying method for two sided copying.

Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Apply Duplex is enabled only when you select [At Mode Selected] in Display Time.

Front Cover:

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

Display Time

You can select [At Mode Selected] or [Full Time].

• Apply Duplex

You can select [Yes] or [No].

Apply Duplex is enabled only when you select [At Mode Selected] in Display Time.

Back Cover:

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

· Display Time

You can select [At Mode Selected] or [Full Time].

· Apply Duplex

You can select [Yes] or [No].

Apply Duplex is enabled only when you select [At Mode Selected] in Display Time.

Slip Sheets:

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

Display Time

You can select [At Mode Selected] or [Full Time].

Separation Sheets:

You can specify and display the paper tray in which to set separation sheets. You can also specify the display time.

· Display Time

You can select [At Mode Selected] or [Full Time].

Tray 3 and 4

Paper Size:

Select the size of the paper loaded in the paper tray.

The paper sizes you can set for Tray 3, 4 are as follows:

Auto Detect, A3 \Box , A4 \Box , A4 \Box , A5 \Box , B4 JIS \Box , B5 JIS \Box , B5 JIS \Box , SRA3 \Box , 12×18 \Box , 11×17 \Box , 11×15 \Box , 11×14 \Box , 10×15 \Box , 10×14 \Box , 8 $^{1}/_{2}$ ×14 \Box , 8 $^{1}/_{2}$ ×13 \Box , 8 $^{1}/_{2}$ ×11 \Box , 8 $^{1}/_{2}$ ×11 \Box , 8 $^{1}/_{4}$ ×13 \Box , 8×13 \Box , 8×10 \Box , 7 $^{1}/_{4}$ ×10 $^{1}/_{2}$ \Box , 7 $^{1}/_{4}$ ×10 $^{1}/_{2}$ \Box , 5 $^{1}/_{2}$ ×8 $^{1}/_{2}$ \Box , Custom Size

You can specify a custom size of between 139.7 - 330.2 mm (5.5" - 13.0") vertically, and between 184.1 - 487.7 mm (7.25" - 19.2") horizontally.

The default setting is Auto Detect.

Paper Type:

Sets the display so you can see what type of paper is loaded in each paper tray.

The print function uses this information to automatically select the paper tray.

The paper types you can set for the Paper Tray 3 and 4 are as follows:

No Display, Recycled Paper, Color Paper 1, Color Paper 2, Yellow, Green, Blue, Purple, Ivory, Orange, Pink, Red, Gray, Letterhead, Label Paper, Preprinted Paper, Bond Paper, Card Stock, Prepunched Paper, Special Paper 1, Special Paper 2, Special Paper 3, Special Paper 4, Special Paper 5, Special Paper 6, Envelope, Coated Paper 1, Coated Paper 2, Coated Paper 3, Tab Stock

Paper Thickness:

The paper thicknesses you can set for the Paper Tray 3 and 4 are as follows:

- Thin Paper
 (60-75 g/m²)
- Plain Paper
 (76-100 g/m²)
- Middle Thick
 (101-126 g/m²)
- Thick Paper 1
 (127-156 g/m²)
- Thick Paper 2
 (157-220 g/m²)
- Thick Paper 3
 (221-300 q/m²)

The default setting for "Paper Type" is No Display.

The default setting for "Paper Thickness" is Plain Paper.

The default setting for "Apply Duplex" is Yes.

The default setting for "Apply Auto Paper Select" is Yes.

The key mark is displayed next to the paper tray if [No] is selected in [Auto Paper Select].

Auto Paper Select can only be selected for the copier function if [No Display] and [Recycled Paper] are selected. If [No] is selected, Auto Paper Select is not valid.

For details about the relations between possible paper sizes and thickness, see "Recommended Paper Sizes and Types", About This Machine.

For details about the recommended conditions for using thick paper, see "Thick Paper", About This Machine.

The optional tab sheet holder is required when using tab stock in Tray 3 or 4.

The number of tab stock shifts can be set in millimeters, when Tab Stock has been selected.

The number of tab stock shift can be set in 1 millimeter (1 inch) units, within a range of 0 to 15 mm (0" to 0.6"). The default is 13 mm (0.5").

Designation Sheet 1 - 9:

You can specify and display the paper tray to set designation sheets. You can also specify the display time and copying method for two sided copying.

• Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Apply Duplex is enabled only when you select [At Mode Selected] in Display Time.

Front Cover:

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Apply Duplex is enabled only when you select [At Mode Selected] in Display Time.

Back Cover:

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

• Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Apply Duplex is enabled only when you select [At Mode Selected] in Display Time.

Slip Sheets:

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

Display Time

You can select [At Mode Selected] or [Full Time].

Separation Sheets:

You can specify and display the paper tray in which to set separation sheets. You can also specify the display time.

Display Time

You can select [At Mode Selected] or [Full Time].

Tray 5 and 6 (utilizing the Wide Large Capacity Tray)

Paper Size:

Select the size of the paper loaded in the optional Wide Large Capacity tray (Wide LCT).

This menu appears only when the Wide LCT is installed.

The paper sizes you can set for Tray 5 and 6 (utilizing the Wide LCT) are as follows:

Auto Detect, A3 \Box , A4 \Box , A4 \Box , A5 \Box , B4 JIS \Box , B5 JIS \Box , B5 JIS \Box , SRA3 \Box , 12×18 \Box , 11×17 \Box , 11×15 \Box , 11×14 \Box , 10×15 \Box , 10×14 \Box , 8 $^{1}/_{2}$ ×14 \Box , 8 $^{1}/_{2}$ ×13 \Box , 8 $^{1}/_{2}$ ×11 \Box , 8 $^{1}/_{2}$ ×11 \Box , 8 $^{1}/_{4}$ ×13 \Box , 8×13 \Box , 8×10 \Box , 7 $^{1}/_{4}$ ×10 $^{1}/_{2}$ \Box , 7 $^{1}/_{4}$ ×10 $^{1}/_{2}$ \Box , 5 $^{1}/_{2}$ ×8 $^{1}/_{2}$ \Box , Custom Size

You can specify a custom size of between 139.7 - 330.2 mm (5.5" - 13.0") vertically, and between 184.1 - 487.7 mm (7.25" - 19.2") horizontally.

The default setting is Auto Detect.

Paper Type:

Sets the display so you can see what type of paper is loaded in each paper tray.

The print function uses this information to automatically select the paper tray.

The paper types you can set for the Tray 5 and 6 (utilizing the Wide LCT) are as follows:

No Display, Recycled Paper, Color Paper 1, Color Paper 2, Yellow, Green, Blue, Purple, Ivory, Orange, Pink, Red, Gray, Letterhead, Preprinted Paper, Bond Paper, Card Stock, Prepunched Paper, Special Paper 1, Special Paper 2, Special Paper 3, Special Paper 4, Special Paper 5, Special Paper 6, Envelope, Coated Paper 1, Coated Paper 2, Coated Paper 3, Tab Stock

Paper Thickness:

The paper thicknesses you can set for the Tray 5 and 6 (utilizing the Wide LCT) are as follows:

- Thin Paper
 - $(60-75 \text{ g/m}^2)$
- Plain Paper
 - $(76-100 \text{ g/m}^2)$
- Middle Thick
 - $(101-126 \text{ g/m}^2)$
- Thick Paper 1
 - $(127-156 \text{ g/m}^2)$
- Thick Paper 2
 - $(157-220 \text{ g/m}^2)$
- Thick Paper 3
 - $(221-300 \text{ g/m}^2)$

The default setting for "Paper Type" is No Display.

The default setting for "Paper Thickness" is Plain Paper.

The default setting for "Apply Duplex" is Yes.

The default setting for "Apply Auto Paper Select" is Yes.

The key mark is displayed next to the paper tray if [No] is selected in [Apply Auto Paper Select].

Auto Paper Select can only be selected for the copier function if [No Display] and [Recycled Paper] are selected. If [No] is selected, Auto Paper Select is not valid.

For details about the relations between possible paper sizes and thickness, see "Recommended Paper Sizes and Types", About This Machine.

For details about the recommended conditions for using thick paper, see "Thick Paper", About This Machine.

The optional tab sheet holder is required when using tab stock in Tray 5 or 6.

The number of tab stock shifts can be set in millimeters, when Tab Stock has been selected.

The number of tab stock shift can be set in 1 millimeter (1 inch) units, within a range of 0 to 15 mm (0" to 0.6"). The default is 13 mm (0.5").

Designation Sheet 1 - 9:

You can specify and display the paper tray to set designation sheets. You can also specify the display time and copying method for two sided copying.

Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Apply Duplex is enabled only when you select [At Mode Selected] in Display Time.

Front Cover:

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

· Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Apply Duplex is enabled only when you select [At Mode Selected] in Display Time.

Back Cover:

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Apply Duplex is enabled only when you select [At Mode Selected] in Display Time.

Slip Sheets:

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

Display Time

You can select [At Mode Selected] or [Full Time].

Separation Sheets:

You can specify and display the paper tray in which to set separation sheets. You can also specify the display time.

• Display Time

You can select [At Mode Selected] or [Full Time].

Tray 7 (utilizing the Multi Bypass Tray)

Paper Size:

Select the size of the paper loaded in the optional Multi Bypass Tray (Tray 7).

This menu appears only when the Tray 7 is installed.

The paper sizes you can set for Tray 7 (utilizing the Multi Bypass Tray) are as follows:

Auto Detect, A3 \Box , A4 \Box , A4 \Box , A5 \Box , B4 JIS \Box , B5 JIS \Box , B5 JIS \Box , SRA3 \Box , 12×18 \Box , 11×17 \Box , 11×15 \Box , 11×14 \Box , 10×15 \Box , 10×14 \Box , 8 $^{1}/_{2}$ ×14 \Box , 8 $^{1}/_{2}$ ×13 \Box , 8 $^{1}/_{2}$ ×11 \Box , 8 $^{1}/_{2}$ ×12 \Box , 8×10 \Box , 7 $^{1}/_{4}$ ×10 $^{1}/_{2}$ \Box , 7 $^{1}/_{4}$ ×10 $^{1}/_{2}$ \Box , 5 $^{1}/_{2}$ ×8 $^{1}/_{2}$ \Box , Custom Size

You can specify a custom size of between 139.7 - 330.2 mm (5.50" - 13.0") vertically, and between 184.1 - 487.7 mm (7.25" - 19.2") horizontally.

The default setting is **Auto Detect**.

Paper Type:

Sets the display so you can see what type of paper is loaded in the paper tray.

The print function uses this information to automatically select the paper tray.

The paper types you can set for the Paper Tray 7 (utilizing the Multi Bypass Tray) are as follows:

No Display, Recycled Paper, Color Paper 1, Color Paper 2, Yellow, Green, Blue, Purple, Ivory, Orange, Pink, Red, Gray, Letterhead, Preprinted Paper, Bond Paper, Card Stock, Prepunched Paper, Special Paper 1, Special Paper 2, Special Paper 3, Special Paper 4, Special Paper 5, Special Paper 6, Envelope, Tab Stock

Paper Thickness:

The paper thicknesses you can set for Tray 7 (utilizing the Multi Bypass Tray) are as follows:

- Thin Paper
 - $(60-75 \text{ g/m}^2)$
- Plain Paper
 - $(76-100 \text{ g/m}^2)$
- Middle Thick
 - $(101-126 \text{ g/m}^2)$
- Thick Paper 1
 - $(127-156 \text{ g/m}^2)$
- Thick Paper 2
 - $(157-220 \text{ g/m}^2)$

The default setting for "Paper Type" is No Display.

The default setting for "Paper Thickness" is **Plain Paper**.

The default setting for "Apply Duplex" is Yes.

The default setting for "Apply Auto Paper Select" is Yes.

The key mark is displayed next to the paper tray if [No] is selected in [Apply Auto Paper Select].

Auto Paper Select can only be selected for the copier function if [No Display] and [Recycled Paper] are selected. If [No] is selected, Auto Paper Select is not valid.

For details about the relations between possible paper sizes and thickness, see "Recommended Paper Sizes and Types", About This Machine.

For details about the recommended conditions for using thick paper, see "Thick Paper", About This Machine.

The optional tab sheet holder is required when using tab stock in Tray 7.

The number of tab stock shifts can be set in millimeters, when Tab Stock has been selected.

The number of tab stock shift can be set in 1 millimeter (1 inch) units, within a range of 0 to 15 mm (0" to 0.6"). The default is 13 mm (0.5").

Designation Sheet 1 - 9:

You can specify and display the paper tray to set designation sheets. You can also specify the display time and copying method for two sided copying.

- · Display Time
 - You can select [At Mode Selected] or [Full Time].
- Apply Duplex

You can select [Yes] or [No].

Apply Duplex is enabled only when you select [At Mode Selected] in Display Time.

Front Cover:

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Apply Duplex is enabled only when you select [At Mode Selected] in Display Time.

Back Cover:

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

· Display Time

You can select [At Mode Selected] or [Full Time].

Apply Duplex

You can select [Yes] or [No].

Apply Duplex is enabled only when you select [At Mode Selected] in Display Time.

Slip Sheets:

You can specify and display the paper tray in which to set slip sheets. You can also specify the display time.

Display Time

You can select [At Mode Selected] or [Full Time].

Separation Sheets:

You can specify and display the paper tray in which to set separation sheets. You can also specify the display time.

Display Time

You can select [At Mode Selected] or [Full Time].

Interposer (Upper Tray / Lower Tray)

Paper Size:

Select the size of the paper loaded in the Interposer.

This menu appears only when the Interposer is installed.

The paper sizes you can set for Interposer are as follows:

Auto Detect, A3 \square , A4 \square , A4 \square , A5 \square , B4 JIS \square , B5 JIS \square , B5 JIS \square , SRA3 \square , 12×18 \square , 11×17 \square , 11×15 \square , 11×14 \square , 10×15 \square , 10×14 \square , 8 $^1/_2$ ×14 \square , 8 $^1/_2$ ×13 \square , 8 $^1/_2$ ×11 \square , 8 $^1/_2$ ×11 \square , 8 $^1/_4$ ×13 \square , 8×13 \square , 8×10 \square , 7 $^1/_4$ ×10 $^1/_2$ \square , 7 $^1/_4$ ×10 $^1/_2$ \square , 5 $^1/_2$ ×8 $^1/_2$ \square , Custom Size

You can specify a custom size of between 139.7 - 330.2 mm (5.50" - 13.0") vertically, and between 139.7 - 487.7 mm (5.50" - 19.2") horizontally.

The default setting is **Auto Detect**.

Designation Sheet 1 - 9:

You can specify and display the paper tray to set designation sheets. You can also specify the display time and copying method for two sided copying.

Front Cover:

You can specify and display the paper tray to set front cover sheets. You can also specify the display time and copying method for two sided copying.

Back Cover:

You can specify and display the paper tray to set back cover sheets. You can also specify the display time and copying method for two sided copying.

4. Copier/Document Server Features

This chapter describes user tools in the Copier / Document Server Features menu. For details on how to access Copier / Document Server Features, see "Accessing User Tools".

General Features

This section describes the user tools in the General Features menu under Copier / Document Server Features.

Default settings are shown in **bold type**.

Auto Image Density Priority

You can set whether Auto Image Density is "On" or "Off" when the machine is turned on, reset, or modes are cleared.

The default setting for "Full Color / Two-color: Photo" is Off.

The default setting for "Full Color / Two-color: Non-photo" is Off.

The default setting for "B & W / Single Color: Photo" is Off.

The default setting for "B & W / Single Color: Non-photo" is On.

Original Type Priority

You can select the original type effective when the power is turned on, or modes cleared.

The default setting for "Full Color / Two-color" is **Text / Photo**.

The default setting for "B & W / Single Color" is **Text / Photo**.

Original Photo Type Priority

When you select "Text / Photo" or "Photo" in "Original Type Priority", you can change the settings of the selected original type.

The default setting for "Text / Photo" is **Printed Photo**.

The default setting for "Photo" is Printed Photo.

Original Orientation in Duplex Mode

Set the original orientation when making two-sided copies.

The default setting is Top to Top.

Copy Orientation in Duplex Mode

Set the copy orientation when making two-sided copies.

The default setting is **Top to Top**.

Reserve Job Mode

You can set whether to reset the mode to the initial state or return to the mode in use before the reserved operation was started when you return to the initial screen after reserved copying finishes.

The default setting is Reset.

Reservation Screen Auto-off Timer

You can set the time required until the display is switched to the reserved first job display after reservation is set.

If you select "Yes", use the numbers keys to enter the time (10-99 seconds).

The default setting is Yes, 15 seconds.

Max. Copy Quantity

The maximum copy quantity can be set between 1 and 9999.

The default setting is 9999 sheet(s).

Manual Original Counter Reset

You can set whether to enable the document counter reset key.

The default setting is Off.

Auto Tray Switching

If you load paper of the same size in two or more trays, the machine automatically shifts to the other when the first tray runs out of paper (when Auto Paper Select is selected). This function is called "Auto Tray Switching". This setting specifies whether to use Auto Tray Switching or not.

- On
- Off

When a paper tray runs out of paper, copying is interrupted and the message "Load paper." is displayed.

Dark Background

You can set whether "Dark Background" can be selected as an original type.

The default setting is Off.

Panel Features Default

You can set which items will appear as the function buttons on the basic display.

The default setting is Off.

Image Adjustment Priority

You can set the items, to be preferentially displayed, to the function buttons on the basic display.

The default setting is Off.

Paper Display

Choose to have the available paper trays and sizes shown on the initial display.

The default setting is **Display**.

If you select [Hide], the display is shown as below. Press [Auto Paper Select] to display paper sizes.



Original Type Display

You can have the original types shown on the initial display.

The default setting is Display.

If you select [Hide], the display is as below.



Alert Sound: Original left on Exposure Glass

The beeper (Key tone) sounds if you forget to remove originals after copying.

The default setting is On.

If Panel Key Sound of General Features (System Settings) is [Off], the beeper does not sound irrespective of the "Alert Sound: Original left on Exposure Glass".

Job End Call

Choose whether or not the beeper sounds when copying is complete.

The default setting is On.


If Panel Key Sound of General Features (System Settings) is [On], the machine beeps to notify you that it did not complete a job for reasons such as copying was interrupted, the paper tray ran out of paper, or a paper jam occurred.

Switch Original Counter Display

Specify the original counter display.

The default setting is Original Sheet Counter.


A maximum of four often-used functions can be registered to the function keys.

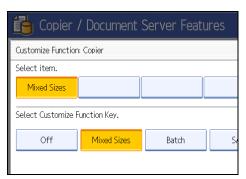

- Off
- Mixed Sizes
- Batch
- SADF
- Thin Paper

Customize Function: Document Server Storage

A maximum of four often-used functions can be registered to the function keys. Registered functions can also be changed.

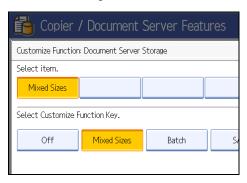

- Off
- Mixed Sizes
- Batch
- SADF
- Thin Paper

Reference

- p.9 "Accessing User Tools"
- p.31 "General Features"

Reproduction Ratio

This section describes the user tools in the Reproduction Ratio menu under Copier / Document Server Features.

Default settings are shown in **bold type**.

Shortcut Reduce/Enlarge


You can register up to two frequently used Reduce / Enlarge ratios other than the fixed Reduce / Enlarge ratio and have them shown on the initial display. You can also change registered Reduce / Enlarge ratios.

When you select [User Reduce/Enlarge Ratio], the ratio can be set from 25.0 to 400.0%, using the number keys.

The default setting is 71%, 141% (Metric version) / 73%, 155% (Inch version).

Reproduction Ratio

Specify the enlargement and reduction ratios that appear if [Reduce / Enlarge] is pressed on the copier screen.

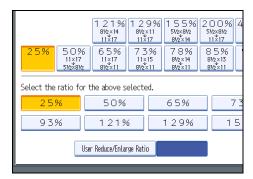

- Metric version
 - 25%
 - A3 → A5, 8"×13" → A5 (50%)
 - A3 → 8"×13" (65%)
 - A3 → A4, A4 → A5 (71%)
 - B4JIS → 8"×13" (75%)
 - 8"×13" → A4, B4JIS → 8"×13" (82%)
 - 93%
 - B4JIS → A3 (115%)
 - 8"×13" → A3, A4 → B4JIS (122%)
 - A4 → A3, A5 → A4 (141%)
 - A5 → A3 (200%)

- 400%
- User R / E Ratio (25-400%)
- Inch version
 - 25%
 - $11"\times17" \rightarrow 5^{1}/_{2}"\times8^{1}/_{2}" (50\%)$
 - 11"×17" → 8¹/₂"×11" (65%)
 - $11"\times15" \rightarrow 8^{1}/_{2}"\times11" (73\%)$
 - $8^{1}/_{2}$ "×14" \rightarrow $8^{1}/_{2}$ "×11" (78%)
 - $8^{1}/_{2}$ "×13" \rightarrow $8^{1}/_{2}$ "×11" (85%)
 - 93%
 - $8^{1}/_{2}$ "×14" \rightarrow 11"×17" (121%)
 - $8^{1}/_{2}$ "×11" \rightarrow 11"×17" (129%)
 - $5^{1}/_{2}$ "×8 $^{1}/_{2}$ " \rightarrow 8 $^{1}/_{2}$ "×14" (155%)
 - $5^{1}/_{2}"\times 8^{1}/_{2}" \rightarrow 11"\times 17" (200%)$
 - 400%
 - User R / E Ratio (25-400%)

Reduce/Enlarge Ratio Priority

You can set the ratio that has priority when [Reduce / Enlarge] is pressed.

The default setting is 71% (Metric version) / 73% (Inch version).

Ratio for Create Margin

You can set a Reduce / Enlarge ratio when registering Create Margin in a shortcut key.

Enter a ratio using number keys (in the range of 90 to 99%).

The default setting is 93%.

Reference

• p.9 "Accessing User Tools"

Edit

This section describes the user tools in the Edit menu under Copier / Document Server Features.

Default settings are shown in **bold type**.

Enter the width of the binding margin with the number keys as follows:

- Metric version: 0-30 mm (in increments of 1 mm)
- Inch version: 0"-1.2" (in increments of 0.1 inch)

Enter the width of the erased margin with the number keys as follows:

- Metric version: 2-99 mm (in increments of 1 mm)
- Inch version: 0.1"-3.9" (in increments of 0.1 inch)

An image of approximately 1.5 mm (0.06") will not be displayed as the width of the separation line, when specifying solid or broken lines.

Front Margin: Left / Right

Specify left and right margins on the front side of copies in Margin Adjustment mode.

The default setting is **Left**, **5 mm** (Metric version) / **Left**, **0.2"** (Inch version).

Back Margin: Left / Right

Specify left and right margins on the back side of copies in Margin Adjustment mode.

The default setting is **Right**, 5 mm (Metric version) / **Right**, **0.2"** (Inch version).

Front Margin: Top / Bottom

Specify top and bottom margins on the front side of copies in Margin Adjustment mode.

The default setting is **T / B**: **0 mm** (Metric version) / **T / B**: **0.0"** (Inch version).

Back Margin: Top / Bottom

Specify top and bottom margins on the back side of copies in Margin Adjustment mode.

The default setting is T / B: 0 mm (Metric version) / T / B: 0.0" (Inch version).

1 Sided → 2 Sided Auto Margin: TtoT

In 1 sided to 2 sided Duplex mode, you can specify the margins on the back side.

The margin is set to the same value of "Back Margin: Left/Right".

The default setting is **Right**, **5 mm** (Metric version) / **Right**, **0.2"** (Inch version).

1 Sided → 2 Sided Auto Margin: TtoB

In 1 sided to 2 sided Duplex mode, you can specify the margins on the back side.

The value set for "Back Margin: Top/Bottom" is used.

The default setting is T / B: 0 mm (Metric version) / T / B: 0.0" (Inch version).

Specify the creep binding margin width.

The default setting is 5 mm (Metric version) / 0.2" (Inch version).

Erase Border Width

Specify the width of the erased border margins with this function.

The default setting is 10 mm (Metric version) / 0.4" (Inch version).

Erase Original Shadow in Combine

In Combine mode, you can specify whether to erase a 3 mm, 0.1" boundary margin around all four edges of each original.

The default setting is On.

Erase Center Width

Specify the width of the erased center margins with this function.

The default setting is 10 mm (Metric version) / 0.4" (Inch version).

Front Cover Copy in Combine

You can make a combined copy on the front cover sheet when you select Front Cover mode.

Combine	Do not Combined
1 2 5 6 3 4 7 8	1 2 3 6 7 4 5 8

BJR009S

The default setting is Combine.

Copy Order in Combine

You can set the copy order in Combine mode to Left to Right or Top to Bottom.

From Left to Right	From Top to Bottom
1 2 3 4	1 3 2 4
1 2 3 4 5 6 7 8	1 3 5 7 2 4 6 8

GCAH090E

The default setting is From Left to Right.

4

Orientation: Booklet, Magazine

Select the opening orientation of copies made using Booklet or Magazine mode.

The default setting is Open to Left.

Image Repeat Separation Line

You can select a separation line and color using the Image Repeat function from: None, Solid, Broken A, Broken B, or Crop Marks.

None

- Solid
- Broken A
- Broken B
- Crop Marks



The default setting is None.

Separation line color cannot be specified when selecting [None].


In "Black & White", printing will be done in black.

Selecting solid or broken lines might produce a blank area of approximately 1.5 mm (0.06") in width along the separation line.

Double Copies Separation Line

You can select a separation line and color using the Double Copies function from: None, Solid, Broken A, Broken B, or Crop Marks.

- None
- Solid

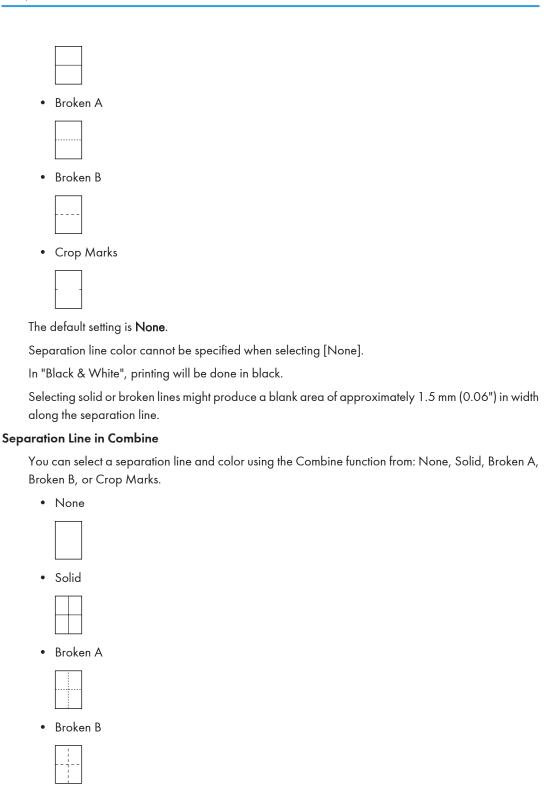

• Crop Marks



The default setting is None.

Separation line color cannot be specified when selecting [None].

In "Black & White", printing will be done in black.

Selecting solid or broken lines might produce a blank area of approximately 1.5 mm (0.06") in width along the separation line.

Copy on Designating Page in Combine

Specify whether to make a combined copy on the inserted slip sheets in Desig./Chapter mode.

The default setting is Combine.

Copy Back Cover


When Copying the back cover, you can specify whether to have the back cover outside (outside page) or inside (inside page).

The default setting is Outside.

Double Copies Position

You can select the copy position of bottom or left page according to top or right page as the original image position.

The default setting is Same Position as Original Image Position.

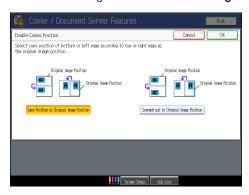

Reference

• p.9 "Accessing User Tools"

Stamp

This section describes the user tools in the Stamp menu under Copier / Document Server Features.

Default settings are shown in **bold type**.

Preset Stamp

This section describes the user tools in the Preset Stamp menu under Stamp.

Stamp Language

You can select the language of the message printed in Stamp mode.

 English, German, French, Italian, Spanish, Dutch, Portuguese, Polish, Czech, Swedish, Finnish, Hungarian, Norwegian, Danish, Russian, Japanese, Simplified Chinese, Traditional Chinese, Hangul, Catalan, Turkish

The default setting is **English**.

Stamp Priority

You can select the stamp type given priority when [Preset Stamp] is pressed.

The default setting is COPY.

Stamp Format

Specify how each stamp is printed.

• Stamp Position

Specify where to print the stamp.

The default setting is Top Right.

• Adjust Stamp Position

You can adjust the position of the stamp within the available ranges shown below.

• Metric version:

```
"Top Left"-T/B: 4-144mm, L/R: 4-144mm

"Top Center"-T/B: 4-144mm, L/R: 72-72mm

"Top Right"-T/B: 4-144mm, L/R: 4-144mm

"Center Left"-T/B: 72-72mm, L/R: 4-144mm

"Center"-T/B: 72-72mm, L/R: 72-72mm

"Center Right"-T/B: 72-72mm, L/R: 4-144mm

"Bottom Left"-T/B: 4-144mm, L/R: 4-144mm

"Bottom Center"-T/B: 4-144mm, L/R: 72-72mm

"Bottom Right"-T/B: 4-144mm, L/R: 72-72mm
```

• Inch version:

```
"Top Left"-T/B: 0.1"-5.7", L/R: 0.1"-5.7"

"Top Center"-T/B: 0.1"-5.7", L/R: 2.8"-2.8"

"Top Right"-T/B: 0.1"-5.7", L/R: 0.1"-5.7"

"Center Left"-T/B: 2.8"-2.8", L/R: 0.1"-5.7"

"Center"-T/B: 2.8"-2.8", L/R: 2.8"-2.8"

"Center Right"-T/B: 2.8"-2.8", L/R: 0.1"-5.7"

"Bottom Left"-T/B: 0.1"-5.7", L/R: 0.1"-5.7"

"Bottom Center"-T/B: 0.1"-5.7", L/R: 0.1"-5.7"
```

Size

You can set the size of the stamp.

The default setting is 1 X.

Density

You can set the pattern used to print the stamp.

Normal

The stamp is printed on the image. You cannot check which parts will overlap.

• Lighter

The image can be seen through the stamp.

Lightest

The image appears even clearer than in the Lighter setting.

The default setting is Normal.

Page to Stamp

You can have the stamp printed on the first page or all pages.

The default setting is All Pages.

Stamp Color

Sets the stamp print color.

The default setting is Black.

User Stamp

This section describes the user tools in the User Stamp menu under Stamp.

Program / Delete Stamp

You can register, change, or delete user stamps.

You can register up to four custom stamps with your favorite designs.

For details about how to program the User Stamp, see "User Stamp", Copy / Document Server Reference.

Stamp Format: 1 - 5

Specify how each registered User Stamps 1 to 5 is printed.

• Stamp Position

Specify where to print the User Stamp.

The default setting is Top Right.

• Adjust Stamp Position

You can adjust the position of the User Stamp within the available ranges shown below.

• Metric version:

```
"Top Left"-T/B: 4-144mm, L/R: 4-144mm

"Top Center"-T/B: 4-144mm, L/R: 72-72mm

"Top Right"-T/B: 4-144mm, L/R: 4-144mm

"Center Left"-T/B: 72-72mm, L/R: 4-144mm

"Center"-T/B: 72-72mm, L/R: 72-72mm

"Center Right"-T/B: 72-72mm, L/R: 4-144mm

"Bottom Left"-T/B: 4-144mm, L/R: 4-144mm
```

"Bottom Center"-T/B: 4-144mm, L/R: 72-72mm
"Bottom Right"-T/B: 4-144mm, L/R: 4-144mm

• Inch version:

```
"Top Left"-T/B: 0.1"-5.7", L/R: 0.1"-5.7"

"Top Center"-T/B: 0.1"-5.7", L/R: 2.8"-2.8"

"Top Right"-T/B: 0.1"-5.7", L/R: 0.1"-5.7"

"Center Left"-T/B: 2.8"-2.8", L/R: 0.1"-5.7"

"Center"-T/B: 2.8"-2.8", L/R: 2.8"-2.8"

"Center Right"-T/B: 2.8"-2.8", L/R: 0.1"-5.7"

"Bottom Left"-T/B: 0.1"-5.7", L/R: 0.1"-5.7"

"Bottom Center"-T/B: 0.1"-5.7", L/R: 0.1"-5.7"
```

• Page to Stamp

Sets whether to print the stamp on all pages or only the first page.

The default setting is All Pages.

Stamp Color: 1 - 5

Sets the color registered in User Stamp color (1 to 5).

The default setting is **Black**.

Date Stamp

This section describes the user tools in the Date Stamp menu under Stamp.

Format

You can select the date format for Date Stamp mode.

The default setting is YYYY / MM / DD (Metric version) / YYYY / MM / DD (Inch version).

Font

You can select the Date Stamp font.

The default setting is Font 1.

Size

You can set the Date Stamp size.

The default setting is Auto.

Superimpose

You can have the Date Stamp printed in white when it overlaps black parts of the image.

The default setting is Off.

Stamp Color

Sets the selected priority color when printing the date.

The default setting is Black.

Stamp Setting

Specify how Date Stamp is printed.

• Stamp Position

Specify where to print the Date Stamp.

The default setting is Top Left.

• Adjust Stamp Position

You can adjust the position of the Date Stamp within the available ranges shown below.

Metric version:

"Top Left"-T/B: 4-144mm, L/R: 4-144mm

"Top Center"-T/B: 4-144mm, L/R: 72-72mm

"Top Right"-T/B: 4-144mm, L/R: 4-144mm

"Bottom Left"-T/B: 4-144mm, L/R: 4-144mm

4

"Bottom Center"-T/B: 4-144mm, L/R: 72-72mm

"Bottom Right"-T/B: 4-144mm, L/R: 4-144mm

Inch version:

```
"Top Left"-T/B: 0.1"-5.7", L/R: 0.1"-5.7"

"Top Center"-T/B: 0.1"-5.7", L/R: 2.8"-2.8"

"Top Right"-T/B: 0.1"-5.7", L/R: 0.1"-5.7"

"Bottom Left"-T/B: 0.1"-5.7", L/R: 0.1"-5.7"

"Bottom Center"-T/B: 0.1"-5.7", L/R: 2.8"-2.8"

"Bottom Right"-T/B: 0.1"-5.7", L/R: 0.1"-5.7"
```

Page to Stamp

Sets whether to print the stamp on all pages or only the first page.

The default setting is All Pages.

Page Numbering

This section describes the user tools in the Page Numbering menu under Stamp.

Stamp Format

You can select the page number format given priority when [Page Numbering] is pressed.

The default setting is P1, P2....

Font

You can select the page number printed in Page Numbering mode.

The default setting is Font 1.

Size

You can set the size of the stamp printed in Page Numbering mode.

The default setting is Auto.

Duplex Back Page Stamping Position

You can set the position of the duplex back page number printed in Duplex mode.

The default setting is Opposite Position.

Page Numbering in Combine

You can set page numbering when using the Combine function and the Page Numbering function together.

The default setting is **Per Original**.

Stamp on Designating Slip Sheet

You can select to print the page number onto slip sheets when using the Designate function set to "Copy" and the Page Numbering function together.

The default setting is Off.

Stamp Position

Specify how each of stamp is printed.

- Stamp Position
 - Specify where to print the stamp.
- Adjust Stamp Position

You can adjust the position of the stamp within the available ranges shown below.

• Metric version:

```
"Top Left"-T/B: 4-144mm, L/R: 4-144mm

"Top Center"-T/B: 4-144mm, L/R: 72-72mm

"Top Right"-T/B: 4-144mm, L/R: 4-144mm

"Bottom Left"-T/B: 4-144mm, L/R: 4-144mm
```

"Bottom Center"-T/B: 4-144mm, L/R: 72-72mm

"Bottom Right"-T/B: 4-144mm, L/R: 4-144mm

• Inch version:

```
"Top Left"-T/B: 0.1"-5.7", L/R: 0.1"-5.7"

"Top Center"-T/B: 0.1"-5.7", L/R: 2.8"-2.8"

"Top Right"-T/B: 0.1"-5.7", L/R: 0.1"-5.7"

"Bottom Left"-T/B: 0.1"-5.7", L/R: 0.1"-5.7"

"Bottom Center"-T/B: 0.1"-5.7", L/R: 2.8"-2.8"

"Bottom Right"-T/B: 0.1"-5.7", L/R: 0.1"-5.7"
```

Superimpose

You can have page numbers printed in white when they overlap black parts of the image.

The default setting is Off.

Stamp Color

Sets the selected priority color when printing the page number.

The default setting is **Black**.

Page Numbering Initial Letter

You can select the page numbering initial letter between "P1, P2.../P.1, P.2..." and "S1, S2.../S.1, S.2...".

The default setting is P1,P2.../P.1,P.2....

Stamp Text

This section describes the user tools in the Stamp Text menu under Stamp.

Font

You can select the Stamp Text font.

The default setting is Font 1.

Size

You can set the Stamp Text size.

The default setting is Auto.

Superimpose

You can have the Stamp Text printed in white when it overlaps black parts of the image.

The default setting is Off.

Stamp Color

Sets the selected priority color when printing the text.

Stamp Setting

Specify how Date Stamp is printed.

• Stamp Position

Specify where to print the Date Stamp.

The default setting is Top Right.

• Adjust Stamp Position

You can adjust the position of the Date Stamp within the available ranges shown below.

• Metric version:

"Top Left"-T/B: 4-144mm, L/R: 4-144mm

"Top Center"-T/B: 4-144mm, L/R: 72-72mm

"Top Right"-T/B: 4-144mm, L/R: 4-144mm

"Bottom Left"-T/B: 4-144mm, L/R: 4-144mm

"Bottom Center"-T/B: 4-144mm, L/R: 72-72mm

"Bottom Right"-T/B: 4-144mm, L/R: 4-144mm

• Inch version:

"Top Left"-T/B: 0.1"-5.7", L/R: 0.1"-5.7"

"Top Center"-T/B: 0.1"-5.7", L/R: 2.8"-2.8"

"Top Right"-T/B: 0.1"-5.7", L/R: 0.1"-5.7"

"Bottom Left"-T/B: 0.1"-5.7", L/R: 0.1"-5.7"

"Bottom Center"-T/B: 0.1"-5.7", L/R: 2.8"-2.8"
"Bottom Right"-T/B: 0.1"-5.7", L/R: 0.1"-5.7"

• Page to Stamp

Sets whether to print the stamp on all pages or only the first page.

The default setting is All Pages.

This section describes the user tools in the Input/Output menu under Copier / Document Server Features. Default settings are shown in **bold type**.

SADF Auto Reset

In SADF mode, an original must be set within a specified time after the previous original has been fed.

The default setting is 5 second(s).

You can adjust this time from 3 to 99 seconds in increments of 1 second.

Copy Eject Face Method in Glass Mode

You can specify the way in which copies are delivered when copying an original placed on the exposure glass.

The default setting is Face Up.

Memory Full Auto Scan Restart

When memory becomes full while scanning originals, the machine can make copies of scanned originals first, and then automatically proceed scanning remaining originals.

The default setting is Off.

On

You can leave the machine unattended to make copies, but sorted pages will not be sequential.

Off

When memory becomes full, the machine stops operation allowing you to remove the copy pages delivered on the output tray.

Sort/ Stack Shift Tray Setting

You can specify whether to shift the Shift Tray in sort mode or stack mode.

The default setting is On.

Insert Separation Sheet

You can specify the number of copy pages for inserting the separation sheet from 1 to 999 pages in increments of 1 page.

The default setting is 1 set(s).

Letterhead Setting

If you select [Yes] in this function, the machine rotates the image correctly.

The default setting is No.

Orientation-fixed (top to bottom) or two-sided paper might not be printed correctly depending on how the originals and paper are placed.

Staple Position

Specify which Top 2 staples or Bottom shown on the initial display with priority.

The optional finisher or the booklet finisher is required to use this function.

The default setting for "Staple Position 1" is Top 1.

The default setting for "Staple Position 2" is Center.

The default setting for "Staple Position 3" is Left 2.

The default setting for "Staple Position 4" is Top 2.

The default setting for "Staple Position 5" is **Bottom 1**.

The default setting for "Staple Position 6" is Slant.

The default setting for "Staple Position 7" is **Top Right 1**.

The default setting for "Staple Position 8" is **Right 2**.

Punch Type

Specify which punch type (2 holes or 4 holes) has priority to be shown on the initial display.

The optional finisher is required to use this function.

The default setting for "Punch Type 1" is 2 Holes Left.

The default setting for "Punch Type 2" is **2 Holes Top**.

The default setting for "Punch Type 3" is 2 Holes Right.

The default setting for "Punch Type 4" is 3 Holes Left.

The default setting for "Punch Type 5" is **3 Holes Top**.

The default setting for "Punch Type 6" is 3 Holes Right.

Finisher: Staple Position

Specify the stapling position.

The optional finisher or the booklet finisher is required to use this function.

The default setting for "Finisher: Staple Position Type 1" is **Top 1**.

The default setting for "Finisher: Staple Position Type 2" is Center.

The default setting for "Finisher: Staple Position Type 3" is Left 2.

The default setting for "Finisher: Staple Position Type 4" is Top 2.

The default setting for "Finisher: Staple Position Type 5" is **Bottom 1**.

The default setting for "Finisher: Staple Position Type 6" is Slant.

The default setting for "Finisher: Staple Position Type 7" is **Top Right 1**.

The default setting for "Finisher: Staple Position Type 8" is Right 2.

Finisher: Punch Type

Specify the punch type.

The optional finisher and the multi-hole punch unit are required to use this function.

The default setting for "Finisher: Punch Type 1" is 2 Holes Left.

The default setting for "Finisher: Punch Type 2" is **2 Holes Top**.

The default setting for "Finisher: Punch Type 3" is 2 Holes Right.

The default setting for "Finisher: Punch Type 4" is 3 Holes Left.

The default setting for "Finisher: Punch Type 5" is **3 Holes Top**.

The default setting for "Finisher: Punch Type 6" is 3 Holes Right.

Simplified Screen: Finishing Types

You can select which key is displayed with higher priority for "Finishing Types" on the Simplified Screen.

The default setting for "Simplified Screen: Finishing Types 1" is **Do not Display**.

■ Reference

• p.9 "Accessing User Tools"

4

Adjust Color Image

This section describes the user tools in the Adjust Color Image menu under Copier/Document Server Features.

Default settings are shown in **bold type**.

Background Density of ADS (Full Color / Two-color)

The background density is adjusted to skip the texture and copy. You can adjust the background density up to 5 levels when in Full Color.

The default setting is the middle of 5 adjustment levels.

Color Sensitivity

You can adjust the color specified to convert in "Color Convert" and the color specified for "Erase Color", in 5 levels.

The default setting is the middle of 5 adjustment levels.

When the color width has been set to "Wider", and the color to be deleted, for example is red, all the colors that are close to magenta and orange are deleted. If it's set to "Narrower" the color red will be deleted.

A.C.S. Sensitivity

This 5-step setting determines the level of the standard used for discriminating between black & white originals and full color originals when "Auto Color Select" is selected.

The default setting is the middle of 5 adjustment levels.

A.C.S. Priority

This setting determines the copy priority between "Black & White" and "Full Color" when "Auto Color Select" is selected.

The default setting is Full Color.

Inkjet Output Type

When copying inkjet paper documents, specify the final image quality appropriate to the color of the document.

This setting is effective after you select [Inkjet Output] under [Others] (copier function screen).

The default setting is Inkjet Output 1.

When copying paper documents printed on a regular color inkjet printer, select [Inkjet Output 1].

Increase image redness, select [Inkjet Output 2].

Increase image blueness, select [Inkjet Output 3].

Reference

• p.9 "Accessing User Tools"

Settings for the Document Server

This section describes user tool settings for the Document Server.

For details, see "System Settings", and "Copier/Document Server Features".

Copier/Document Server Features

Heading	ltem	Default
General Features	Customize Function: Document Server Storage	-

System Settings

Heading	Items	Default
General Features	Warm-up Beeper	On
General Features	Copy Count Display	Up
General Features	Output: Document Server	Finisher Shift Tray
General Features	Paper Tray Priority: Copier	Tray 1
Timer Settings	Copier / Document Server Auto Reset Timer	60 second(s)
Administrator Tools	Auto Delete File in Document Server	3 day(s)
Administrator Tools	Delete All Files in Document Server	-

■ Reference

- p.31 "System Settings"
- p.79 "Copier/Document Server Features"

5. Scanner Features

This chapter describes user tools in the Scanner Features menu. For details on how to access Scanner Features, see "Accessing User Tools".

General Settings

This section describes the user tools in the General Settings menu under Scanner Features.

Default settings are shown in **bold type**.

Switch Title

Select the title to be shown on the destination list.

The default setting is Title 1.

Update Delivery Server Destination List

Press [Update Delivery Server Destination List] to update the receivers from the delivery server. To use this function, it is necessary to set [Delivery Option] to [On].

For details about "Delivery Option", see "File Transfer".

Search Destination

Select a destination list to be used in "Search Destination". To search from LDAP server, it is necessary to register the LDAP server in [System Settings] and set [LDAP Search] to [On].

The default setting is Address Book.

For details about "LDAP Search", see "Administrator Tools".

TWAIN Standby Time

When the machine is being used to send e-mail or a file, or functioning as Document Server or a network delivery scanner, a scanning request to the machine as a TWAIN scanner will switch the machine to the network TWAIN scanner function. This setting determines the delay until the machine switches to the network TWAIN scanner function.

The default setting is **Set Time**, **10 second(s)**.

When [Immediate] is selected, the machine will switch to the network TWAIN scanner function at once.

When [Set Time] is selected, you can enter the delay time with the number keys (3-30 seconds). The machine will switch to the network TWAIN scanner function when the time set here passes after the last key operation.

Destination List Display Priority 1

Select a destination list to be displayed when the machine is in the initial state.

You can select either [E-mail / Folder] or [Delivery Server].

The default setting is **Delivery Server**.

Destination List Display Priority 2

In the machine's address book, select which address book appears by default.

You can select either [E-mail Address] or [Folder].

The default setting is E-mail Address.

Print & Delete Scanner Journal

Up to 250 transmission/delivery results can be checked on this machine. If the stored transmission/delivery results reach 250, select whether to print the delivery journal.

The default setting is On.

On

The transmission/delivery journal is printed automatically. The printed journal is deleted.

Off

Transmission/delivery results are deleted one by one as new results are stored.

• Do not Print: Disable Send

Transmission/delivery cannot be performed when the journal is full.

When printed, all records are deleted after printing. When not printed, records over the limit are automatically deleted in succession from the oldest record.

While the journal is being printed, files with the status waiting cannot be sent.

Print Scanner Journal

The scanner journal is printed and deleted.

Delete Scanner Journal

The scanner journal is deleted without being printed.

■ Reference

- p.9 "Accessing User Tools"
- p.44 "File Transfer"
- p.49 "Administrator Tools"

Scan Settings

This section describes the user tools in the Scan Settings menu under Scanner Features.

Default settings are shown in **bold type**.

A.C.S. Sensitivity Level

Sets the sensitivity level for judging color/black and white for scanning originals when [Scan Type] is set to [Auto Color Select].

The default setting is the middle of 5 adjustment levels.

Wait Time for Next Orig.: Exposure Glass

To divide originals and scan them individually with the exposure glass to form a single file, select [Continuous Wait], [Off], or [Set Wait Time] for the waiting status.

The default setting is Set Wait Time, 60 second(s).

If you select [SADF] in [Original Feed Type] on the Scan to Folder screen, the [Wait Time for Next Orig.: Exposure Glass] setting becomes invalid.

If you select [Batch] in [Original Feed Type] on the Scan to Folder screen, the [Wait Time for Next Orig.: Exposure Glass] setting becomes invalid, and the machine waits for an additional original to be placed.

If [Set Wait Time] is selected, enter the wait time in seconds (3-999) for placing additional originals with the number keys. Scanning will start if additional originals are placed and the [Start] key is pressed within this time. You can end scanning and begin transmission by pressing the [#] key within this time. Once the specified time has elapsed, transmission starts automatically.

If [Continuous Wait] is selected, the machine will wait for additional originals until the [#] key is pressed. Scanning will start when additional originals are placed and the [Start] key is pressed. You can end scanning and begin sending by pressing the [#] key.

If originals are placed in the ADF (auto document feeder), transmission will start without waiting for additional originals after all originals in the ADF have been scanned, regardless of the specified settings.

If a paper misfeed occurs or any of the following operations are performed while the machine is waiting for additional originals, the countdown stops and does not start again until the [#] key is pressed.

- · Changing the settings such as the scan settings
- Opening the upper cover of the ADF
- · Pressing the [Interrupt] key to activate the copy mode

Wait Time for Next Original(s): SADF

When dividing originals and scanning them separately with the ADF to form a single file, select [Set Wait Time] or [Continuous Wait] for the waiting status.

The default setting is **Set Wait Time**, **60 second(s)**.

This setting is valid if [SADF] is specified for [Original Feed Type] when scanning.

If [Set Wait Time] is selected, enter the wait time in seconds (3-999) for placing additional originals with the number keys. Scanning will start automatically if additional originals are placed within this time. You can end scanning and begin transmission by pressing the [#] key within this time. Once the specified time has elapsed, transmission starts automatically.

If [Continuous Wait] is selected, the machine will wait for the additional originals until the [#] key is pressed. Scanning will start when additional originals are placed and the [Start] key is pressed. You can end scanning and begin sending by pressing the [#] key.

Even if originals are placed on the exposure glass, the machine will operate according to the specified settings. However, every time originals are placed on the exposure glass, you must press the [Start] key to start scanning. Scanning will start if additional originals are placed and the [Start] key is pressed within this time. You can end scanning and begin transmission by pressing the [#] key within this time. Once the specified time has elapsed, transmission starts automatically.

If originals are placed in the auto document feeder (ADF), transmission will start without waiting for additional originals after all originals in the ADF have been scanned, regardless of the specified settings.

If a paper misfeed occurs or any of the following operations are performed while the machine is waiting for additional originals, the countdown stops and does not start again until the [#] key is pressed.

- · Changing the settings such as the scan settings
- Opening the upper cover of the ADF
- Pressing the [Interrupt] key to activate the copy mode

Background Density of ADS (Full Color)

Characteristics due to the type of paper such as nonwhiteness like newspaper or transparent originals can be reduced by correcting the scanning density.

The default setting is the middle of 5 adjustment levels.



• p.9 "Accessing User Tools"

Send Settings

This section describes the user tools in the Send Settings menu under Scanner Features.

Default settings are shown in **bold type**.

Compression (Black & White)

Select whether or not to compress black and white scan files.

The default setting is On.

Compression reduces the time required for transferring the scan file.

The actual time required for file transfer will vary depending on the file size and network load.

Compression (Gray Scale / Full Color)

Specify whether or not to compress multi-level (grayscale / full color) scan files.

The default setting is On.

If you select [On], you can specify the compression level between one and five.

The image quality is better for lower compression, but the time required for file transfer increases accordingly.

The actual time required for file transfer will vary depending on the file size and network load.

High Compression PDF Level

Select compression level when creating high compression PDF files.

The default setting is Standard.

Max. E-mail Size

Select whether or not to limit the size of an e-mail to which an image is attached.

The default setting is On, 2048KB.

When [On] is selected, enter the size limit (128-102400 KB) with the number keys.

When the SMTP limits the size, match that setting.

Divide & Send E-mail

This function is effective only when [On] is selected for [Max. E-mail Size].

Select whether or not an image exceeding the size specified in [Max. E-mail Size] should be divided and sent using more than one e-mail.

The default setting is Yes (per max. size).

The default maximum number of divisions is 5.

When [Yes (per Max. Size)] is selected, enter the Max. Number of Divisions (2-500) with the number keys.

When [Multi-page: TIFF] or [Multi-page: PDF] is selected for [File Type], the image will not be divided even if [Yes (per Page)] is selected.

5

When [Yes (per Max. Size)] is selected, some received files may not be able to be restored, depending on the type of e-mail software.

When [No] is selected, the e-mail is not sent if its size exceeds the limit, and an error message appears. The scan file is discarded.

Set the maximum e-mail size within the capacity of the SMTP server.

Insert Additional E-mail Info

Select the language in which e-mail information such as title, document name, and sender's name is sent.

If you select [On], select one of the following 22 languages:

British English, American English, German, French, Italian, Spanish, Dutch, Portuguese, Polish, Czech, Swedish, Finnish, Hungarian, Norwegian, Danish, Japanese, Simplified Chinese, Traditional Chinese, Russian, Hangul, Catalan, and Turkish.

The default setting is On, British English.

The e-mail text which is a template cannot be changed.

No. of Digits for Single Page Files

Sets digit number for serial number to attach to Single Page file name.

The default setting is 4 Digits.

Stored File E-mail Method

Specify the e-mail setting for sending stored files. You can select [Send File] or [Send URL Link]. This setting can be used for the following:

The default setting is Send File.

Send File

Sending Stored Files by E-mail

Send URL Link

Simultaneous Storage and Sending by E-mail

If you select [Send File], actual files are attached to e-mails.

If you select [Send URL Link], URL links to file locations are attached to e-mails.

If [Stored File E-mail Method] is set in [Send URL Link], a phishing warning may appear after you receive a stored file e-mail, depending on your e-mail application. To prevent phishing warnings appearing after you receive a stored file e-mail, you must add the sender to your e-mail application's exclusion list. For details about how to do this, see your e-mail application's Help.

Reference

• p.9 "Accessing User Tools"

Registering Addresses and Users for Scanner Functions

This chapter describes how to register destinations and users in the Address Book. For details on how to access System Settings, see "Accessing User Tools".

Address Book

This section describes Address Book settings.

Registering information such as the names of users and their e-mail addresses in the Address Book allows you to manage them easily.



- Address Book data is stored on the hard disk. It can be lost if there is some kind of hard disk failure.
- The manufacturer shall not be held responsible for any damages resulting in data loss.

You can register and manage the following items in the Address Book:

Names


You can register the name of the user and the key display. This is the basic information required for managing users of the machine.

To register an e-mail address in the address book, you must register information such as the user name and destination name in advance.




Auth, Info

You can register user codes in order to restrict particular functions to certain users, and to check their use of each function. You can also register login user names and login passwords to be used when sending e-mail, sending to folders, or accessing an LDAP server.

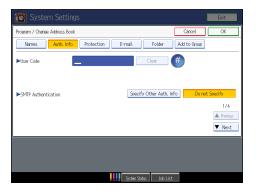


Protection

You can set protection codes to stop sender's name from being used or folders from being accessed without authorization.

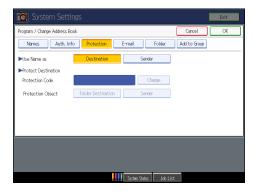

E-mail

You can register e-mail destinations in the Address Book.

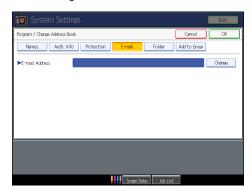


Folder

You can register the protocol, path name and server name.


• SMB



• FTP

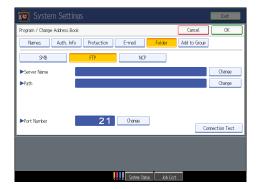

• NCP

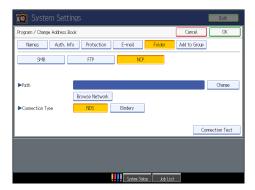

Add to Group

You can put registered e-mail and folder destinations into a group for easier management.



 You can also use Web Image Monitor to register names in the Address Book. For details about using Web Image Monitor, see Web Image Monitor Help.

Managing names in the Address Book

By registering a name and key display beforehand, you can specify e-mail and folder destinations simply by selecting the name key.

Reference

• p.114 "Registering Names"

Sending E-mail by Quick Dial

You can specify an e-mail address by selecting the destination shown on the initial scanner display when sending a document using the scanner function. A registered e-mail address can be used as the sender's address, and the sender's addresses are automatically entered in the "From" field of an e-mail header.

Reference

• p.126 "E-mail Destination"

Sending scanned files to a shared folder directly

After registering the path name, user name and password, you can connect to a shared folder simply by selecting the destination shown on the initial scanner display whenever sending files using the scanner function to a shared folder.

To share the folder using Windows, select the SMB protocol.

To register the folder to the FTP server, select the FTP protocol.

To register the folder to the NetWare server, select the NCP protocol.

■ Reference

• p.130 "Registering Folders"

Preventing unauthorized user access to shared folders from the machine

After registering a protection code, you can specify the object of protection to prevent an e-mail destination from being used without permission.

You can prevent unauthorized access to registered folders.

■ Reference

• p.158 "Registering a Protection Code"

Managing users and machine usage

Register user codes to limit users to the following functions and check their use of each function:

- Copier
- Document Server
- Printer
- Scanner

Reference

• p.118 "Authentication Information"

Registering Names

Register user information including their names.

The user name is useful for selecting a destination when sending e-mail.

You can also use it as a folder destination.

You can register up to 2000 names.

Registering Names

This section describes how to register names.

1. Press [System Settings].




- 2. Press [Administrator Tools].
- 3. Press [Address Book Management].
- 4. Check that [Program / Change] is selected.
- 5. Press [New Program].
- 6. Press [Change] under the Name.

The name entry display appears.

7. Enter the name, and then press [OK].

8. Press the key for the classification you want to use under "Select Title".

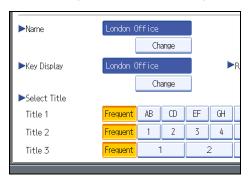

The keys you can select are as follows:

- [Frequent]: Added to the page that is displayed first.
- [AB], [CD], [EF], [GH], [IJK], [LMN], [OPQ], [RST], [UVW], [XYZ], [1] to [10]: Added to the list
 of items in the selected title.

You can select [Frequent] and one more page for each title.

- 9. Press [OK].
- 10. Press [Exit].
- 11. Press the [User Tools] key.



The name can be used for documents in the Document Server. For details about the Document Server,
 see "Using the Document Server", Copy/ Document Server Reference.

Changing a Registered Name

This section describes how to change a name.

1. Press [System Settings].



2. Press [Administrator Tools].

- 4. Check that [Program / Change] is selected.
- 5. Select the registered name you want to change.

Press the name key, or enter the registered number using the number keys.

- 6. To change the name or key display, press [Change] under the "Name" or "Key Display".
- 7. Enter the name or key display, and then press [OK].
- 8. To change the title, press the key for the classification you want to use from "Select Title".
- 9. To change the registration number, press [Change] under "Registration No.".
- 10. Enter a new registration number using the number keys, and then press the [#] key.
- 11. Press [OK].
- 12. Press [Exit].
- 13. Press the [User Tools] key.



• You can search by the registered name, user code, folder name, or e-mail address.

Deleting a Registered Name

This section describes how to delete a name.

1. Press [System Settings].



- 2. Press [Administrator Tools].
- 3. Press [Address Book Management].
- 4. Press [Delete].
- 5. Select the name you want to delete.

Press the name key, or enter the registered number using the number keys.

- 6. Press [Yes].
- 7. Press [Exit].

6

8. Press the [User Tools] key.

Authentication Information

Following describes the procedure for authenticating a user code.



 The functions associated with each user code are the same. If you change or delete user codes, management data and limits associated with that code become invalid.

Register user codes to limit users to the following functions and check their use of each function:

- Copier
- Document Server
- Printer
- Scanner



- You can register up to 500 user codes.
- The number of copies scanned using the scanner function is counted for each user code. This allows
 you to check each user's usage.
- To automatically register the printer driver user code, select [PC Control] under Printer for the printer
 in User Code Authentication. To use the user code set in User Tools, set the user codes registered in
 User Tools for the printer driver.
- For details about setting user codes for the printer driver, see the printer driver Help.

Reference

• p.49 "Administrator Tools"

Registering a User Code

This section describes how to register a user code.

1. Press [System Settings].



- 2. Press [Administrator Tools].
- 3. Press [Address Book Management].
- 4. Check that [Program / Change] is selected.
- Press the name whose code is to be registered, or enter the registered number using the number key.

You can search by the registered name, user code, folder name, or e-mail address.

- 6. Press [Auth. Info].
- 7. Enter the user code using the number keys, and then press the [#] key.



If you make a mistake, press [Clear] or the [Clear] key.

- 8. Press [▼Next] twice.
- 9. Select the functions to be used with the user code from "Available Functions".
- 10. Press [OK].
- 11. Press [Exit].
- 12. Press the [User Tools] key.



- You can enter a one-to eight-digit user code.
- To register the name, see "Registering Names".

Reference

• p.114 "Registering Names"

Changing a User Code

This section describes how to change a user code.



• Even if you change a user code, the counter value will not be cleared.



- 2. Press [Administrator Tools].
- 3. Press [Address Book Management].
- 4. Check that [Program / Change] is selected.
- 5. Select the user whose user code you want to change.

Press the name key, or enter the registered number using the number keys. You can search by the registered name, user code, folder name, or e-mail address.

- 6. Press [Auth. Info].
- 7. Press [Change], and then enter the new user code using the number keys.



- 8. Press the [#] key.
- 9. To change the available functions, and then press [▼Next] twice.
- 10. Press the key to select the functions to enable them.

Press the key to highlight it, and then the function is enabled. To cancel a selection, press the highlighted key.

- 11. Press [OK].
- 12. Press [Exit].
- 13. Press the [User Tools] key.

- **U** Note
 - To change the name, key display and title, see "Changing a Registered Name".
- Reference
 - p.115 "Changing a Registered Name"

Deleting a User Code

This section describes how to delete a user code.

- - After clearing the user code, the counter is automatically cleared.
 - 1. Press [System Settings].



- 2. Press [Administrator Tools].
- 3. Press [Address Book Management].
- 4. Press [Program / Change].
- 5. Select the name whose code is to be deleted.

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, user code, folder name, or e-mail address.

6. Press [Auth. Info].

7. Press [Change] to delete the user code, and then press the [#] key.



- 8. Press [OK].
- 9. Press [Exit].
- 10. Press the [User Tools] key.



• To delete a name from the Address Book entirely, see "Deleting a Registered Name".

Reference

• p.116 "Deleting a Registered Name"

Displaying the Counter for Each User

This section describes how to display the counter for each user.

1. Press [System Settings].



- 2. Press [Administrator Tools].
- 3. Press [Display / Clear / Print Counter per User].
- 4. Select the function usage you want to display the usage of, from [Copier Counter], [Print Counter], or [Scanner Counter].

Counters for individual function usage under each user code appear.

6


Printing the Counter for Each User

This section describes how to print the counter for each user.

1. Press [System Settings].




- 2. Press [Administrator Tools].
- 3. Press [Display / Clear / Print Counter per User].
- 4. Select a user code from the left side of the display.

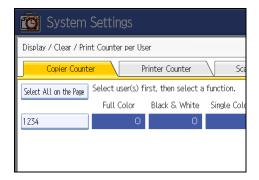

Press [Select All on the Page] to select all user codes on the page.

5. Press [Print Counter List] under "Per User".

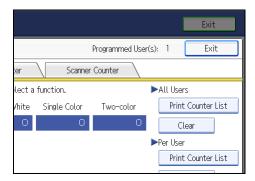

Enter the user code, and then press the [#] key if the user code is registered.

7. Press [Print].


Printing the Counter for All Users

This section describes how to print the counter for all users.

1. Press [System Settings].



- 2. Press [Administrator Tools].
- 3. Press [Display / Clear / Print Counter per User].
- 4. Press [Print Counter List] under "All Users".

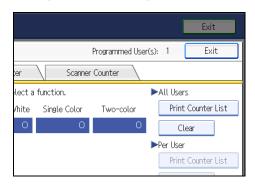

Enter the user code, and then press the [#] key if the user code is registered.

- Select the function usage you want to print from [Copier Counter], [Print Counter], [Scanner Counter], and [Total Prints].
- 6. Press [Print].


Clearing the Number of Prints

This section describes how to clear the counter.

1. Press [System Settings].



- 2. Press [Administrator Tools].
- 3. Press [Display / Clear / Print Counter per User].
- 4. Select the user code to clear.
- To clear the number of prints made under a user code, select the user code from the left side of the display.

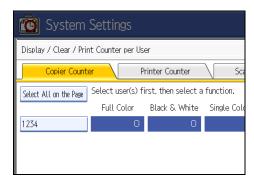

Press [Select All on the Page] to select all user codes on the page.

- 6. Press [Clear] under "Per User".
- Select the function usage you want to clear from [Copier Counter], [Print Counter], [Scanner Counter], and [Total Counter].
- 8. Press [OK].
- 9. To clear the number of prints for all user codes, press [Clear] under "All Users".
- Select the function usage you want to clear from [Copier Counter], [Print Counter], [Scanner Counter], and [Total Counter].
- 11. Press [OK].
- 12. Press [Exit].
- 13. Press the [User Tools] key.

E-mail Destination

This section describes the procedure for registering, changing, and deleting E-mail Destinations.

Register e-mail destinations so you do not need to enter an e-mail address every time, and can send scan files from scanner function by e-mail.

- It is easy to select the e-mail destination if you register "Name" and "Key Display" as the e-mail destination.
- You can register e-mail destinations as a group.
- You can use the e-mail address as the sender's address when sending scan files in scanner mode. If
 you want to do this, set a protection code on the sender address to prevent unauthorized access.



You can select an e-mail address from an LDAP server, and then register it in the Address Book. See
 "Sending Scan File by E-mail", Scanner Reference.

Reference

• p.158 "Registering a Protection Code"

Registering an E-mail Destination

This section describes how to register an e-mail destination.


1. Press [System Settings].



- 2. Press [Administrator Tools].
- 3. Press [Address Book Management].
- 4. Check that [Program / Change] is selected.
- Select the name whose e-mail address you want to register.
 Press the name key, or enter the registered number using the number keys.
- 6. Press [E-mail].



7. Press [Change].

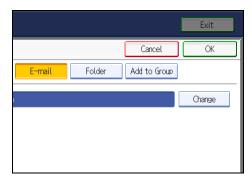

8. Enter the e-mail address.



- 9. Press [OK].
- 10. Press [OK].
- 11. Press [Exit].
- 12. Press the [User Tools] key.



- You can enter up to 128 characters for the e-mail address.
- To register the name, see "Registering Names".

■ Reference

- p.114 "Registering Names"
- p.118 "Registering a User Code"
- p.148 "Registering Names to a Group"

Changing an E-mail Destination

This section describes how to change an e-mail destination.




- 2. Press [Administrator Tools].
- 3. Press [Address Book Management].
- 4. Check that [Program / Change] is selected.
- 5. Select the name whose e-mail address you want to change.

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, folder name, or e-mail address.

- 6. Press [E-mail].
- 7. Press [Change] under "E-mail Address".

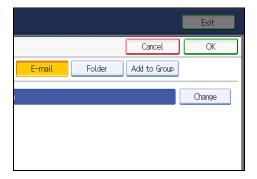

- 8. Enter the e-mail address, and then press [OK].
- 9. Press [OK].
- 10. Press [Exit].
- 11. Press the [User Tools] key.



- To change the name, key display and title, see "Changing a Registered Name".
- Reference
 - p.115 "Changing a Registered Name"

Using the e-mail address as the sender

This section describes how to use the e-mail address as a sender.

- 1. Press [Protection].
- 2. Press [Sender] under "Use Name as".

Deleting an E-mail Destination

This section describes how to delete an e-mail destination.

1. Press [System Settings].



- 2. Press [Administrator Tools].
- 3. Press [Address Book Management].
- 4. Check that [Program / Change] is selected.
- 5. Select the name whose e-mail address you want to delete.

Press the name key, or enter the registered number using the number keys. You can search by the registered name, user code, folder name, or e-mail address.

- 6. Press [E-mail].
- 7. Press [Change] under "E-mail Address".
- 8. Press [Delete All], and then press [OK].
- 9. Press [OK].
- 10. Press [Exit].
- 11. Press the [User Tools] key.



• To delete the name, key display, and title, see "Deleting a Registered Name".

Reference

• p.116 "Deleting a Registered Name"

Registering Folders

This section describes the procedure for registering, changing, and deleting folders.

By registering a shared folder, you can send scan files to it directly.

There are three types of protocol you can use:

• SMB

For sending files to shared Windows folders.

FTP

For sending files to an FTP server.

NCP

For sending files to a NetWare server.



- For details about protocols, server names, and folder levels, consult your network administrator.
- You can prevent unauthorized users from accessing folders from the machine. See "Registering a Protection Code".
- You can only select either SMB, FTP, or NCP. If you change protocol after finishing your settings, all
 previous entries are cleared.

Reference

• p.158 "Registering a Protection Code"

Using SMB to Connect

This section describes the procedure for registering, changing, and deleting SMB folders.



- To register a folder on an FTP server, see "Using FTP to Connect".
- To register a folder on a NetWare server, see "Using NCP to Connect".

Reference

- p.136 "Using FTP to Connect"
- p.141 "Using NCP to Connect"


Registering an SMB Folder

This section describes how to register an SMB folder.

1. Press [System Settings].



- 2. Press [Administrator Tools].
- 3. Press [Address Book Management].
- 4. Check that [Program / Change] is selected.
- Select the name whose folder you want to register.
 Press the name key, or enter the registered number using the number keys.
- 6. Press [Auth. Info], and then press [▼Next].

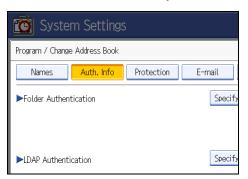


7. Press [Specify Other Auth. Info] on the right side of Folder Authentication.

When [Do not Specify] is selected, the SMB User Name and SMB Password that you have specified in Default User Name / Password (Send) of File Transfer settings apply.

- 8. Press [Change] under "Login User Name".
- 9. Enter the login user name, and then press [OK].
- 10. Press [Change] under "Login Password".
- 11. Enter the password, and then press [OK].
- 12. Enter the password again to confirm, and then press [OK].
- 13. Press [Folder].
- 14. Press [SMB].

To specify a folder, you can either enter the path manually or locate the folder by browsing the network.

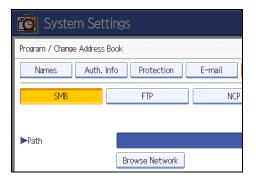

15. Specify the path.

For details about how to specify the path manually, see "To locate the SMB folder manually".

For details about how to specify the path using Browse Network, see "To locate the SMB folder using Browse Network".

- 16. Press [Connection Test] to check the path is set correctly.
- 17. Press [Exit].

If the connection test fails, check the settings, and then try again.

- 18. Press [OK].
- 19. Press [Exit].
- 20. Press the [User Tools] key.



- To register the name, see "Registering Names".
- You can enter up to 64 characters for the user name.
- You can enter up to 64 characters for the password.
- You can enter a path using up to 128 characters.
- If User Authentication is specified, contact your administrator.

Reference

- p.114 "Registering Names"
- p.132 "To locate the SMB folder manually"
- p.133 "To locate the SMB folder using Browse Network"

To locate the SMB folder manually

This section describes how to locate the SMB folder manually.

- 1. Press [Change] under "Path".
- 2. Enter the path where the folder is located.

3. Press [OK].

If the format of the entered path is not correct, a message appears. Press [Exit], and then enter the path again.



- Enter the path using this format: "\\ServerName\Share- Name\PathName".
- You can also enter an IPv4 address.
- You can enter a path using up to 128 characters.

To locate the SMB folder using Browse Network

This section describes how to locate the SMB folder using Browse Network.

1. Press [Browse Network].

The client computers sharing the same network as the machine appear.

Network display only lists client computers you are authorized to access.

2. Select a client computer.

Shared folders under it appear.



You can press [Up One Level] to switch between levels.

- 3. Select the folder you want to register.
- 4. Press [OK].

If a Login Screen Appears

This section describes how to log on to the machine if the login screen appears when you try to access a folder by browsing the network.

If you have not specified folder authentication, or if an incorrect user name or password has been entered for folder authentication, the login screen appears.

1. Enter the login user name, and then press [OK].

Enter the login user name specified for folder authentication.

Enter the password, and then press [OK].

The path to the selected folder appears.

If a message appears, press [Exit], and then enter the login user name and password again.

Changing an SMB Folder

This section describes how to change settings of the registered SMB folder.

1. Press [System Settings].



- 2. Press [Administrator Tools].
- 3. Press [Address Book Management].
- 4. Check that [Program / Change] is selected.
- 5. Select the name whose folder you want to change.

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, user code, folder name, or e-mail address.

- 6. Press [Folder].
- 7. Select the items you want to change.

When specifying a folder, enter the path directly or select it by referencing the network. For more information, see "To locate the folder manually" and "To locate the SMB folder using Browse Network".

- 8. Press [Connection Test] to check the path is set correctly.
- 9. Press [Exit].
- 10. Press [OK].
- 11. Press [Exit].
- 12. Press the [User Tools] key.

U Note

• To change the name, key display and title, see "Changing a Registered Name".

Reference

- p.115 "Changing a Registered Name"
- p.132 "To locate the SMB folder manually"
- p.133 "To locate the SMB folder using Browse Network"

To change the protocol

This section describes how to change the protocol.

1. Press [FTP] or [NCP].



A confirmation message appears.

2. Press [Yes].

Changing the protocol will clear all settings made under the previous protocol.

3. Enter each item again.

■ Reference

- p.136 "Using FTP to Connect"
- p.141 "Using NCP to Connect"

Deleting an SMB registered folder

This section describes how to delete the registered SMB folder.



- 2. Press [Administrator Tools].
- 3. Press [Address Book Management].
- 4. Check that [Program / Change] is selected.
- 5. Select the name whose folder you want to delete.

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, user code, folder name, or e-mail address.

- 6. Press [Folder].
- 7. Press the protocol which is not currently selected.

A confirmation message appears.

- 8. Press [Yes].
- 9. Press [OK].
- 10. Press [Exit].
- 11. Press the [User Tools] key.



• To delete the name, key display, and title, see "Deleting a Registered Name".

Reference

• p.116 "Deleting a Registered Name"

Using FTP to Connect

This section describes the procedure for registering, changing, and deleting FTP folders.



- To register a shared folder configured in Windows, see "Using SMB to Connect".
- To register a folder in a NetWare server, see "Using NCP to Connect".

■ Reference

- p.130 "Using SMB to Connect"
- p.141 "Using NCP to Connect"

Registering an FTP Folder

This section describes how to register an FTP folder.

1. Press [System Settings].



- 2. Press [Administrator Tools].
- 3. Press [Address Book Management].
- 4. Check that [Program / Change] is selected.
- 5. Select the name whose folder you want to register.

You can search by the registered name, user code, folder name, or e-mail address.

- 6. Press [Auth. Info], and then press [▼Next].
- 7. Press [Specify Other Auth. Info] on the right side of Folder Authentication.

When [Do not Specify] is selected, the FTP User Name and FTP Password that you have specified in Default User Name / Password (Send) of File Transfer settings applies. For details, see "File Transfer".

- 8. Press [Change] under "Login User Name".
- 9. Enter the login user name, and then press [OK].
- 10. Press [Change] under "Login Password".
- 11. Enter the password, and then press [OK].
- 12. Enter the password again to confirm, and then press [OK].
- 13. Press [Folder].

- 15. Press [Change] under "Server Name".
- 16. Enter the server name, and then press [OK].
- 17. Press [Change] under "Path".
- 18. Enter the path, and then press [OK].

You can enter an absolute path, using this format: "/user/ home/username"; or a relative path, using this format: "directory/sub-directory".

If you leave the path blank, the login directory is assumed to be the current working directory.

You can also enter an IPv4 address.

You can enter a path using up to 128 characters.

- 19. To change the port number, press [Change] under "Port Number".
- 20. Enter the port number using the number keys, and then press the [#] key.

You can enter a number from 1 to 65535.

- 21. Press [Connection Test] to check the path is set correctly.
- 22. Press [Exit].

If the connection test fails, check the settings, and then try again.

- 23. Press [OK].
- 24. Press [Exit].
- 25. Press the [User Tools] key.



- To register the name, see "Registering Names".
- You can enter up to 64 characters for the user name.
- You can enter up to 64 characters for the password.
- You can enter a server name using up to 64 characters.
- If User Authentication is specified, contact your administrator.

■ Reference

- p.114 "Registering Names"
- p.44 "File Transfer"

Changing an FTP Folder

This section describes how to change the registered FTP folder.

1. Press [System Settings].



- 2. Press [Administrator Tools].
- 3. Press [Address Book Management].
- 4. Check that [Program / Change] is selected.
- 5. Select the name whose folder you want to change.

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, user code, folder name, or e-mail address.

- 6. Press [Folder].
- 7. Select the items you want to change.
- 8. Press [Connection Test] to check the path is set correctly.
- 9. Press [Exit].
- 10. Press [OK].
- 11. Press [Exit].
- 12. Press the [User Tools] key.




To change the name, key display and title, see "Changing a Registered Name".

■ Reference

• p.115 "Changing a Registered Name"

This section describes how to change the protocol.

1. Press [SMB] or [NCP].

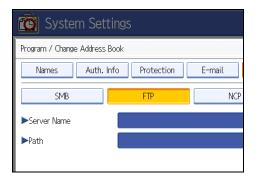

A confirmation message appears.

2. Press [Yes].

Changing the protocol will clear all settings made under the previous protocol.

3. Enter each item again.

■ Reference

- p.130 "Using SMB to Connect"
- p.141 "Using NCP to Connect"

Changing items under FTP

This section describes how to change the registered FTP folder.

- 1. Press [Change] under "Port Number".
- 2. Enter the new port number, and then press the [#] key.
- 3. Press [Change] under "Server Name".
- 4. Enter the new server name, and then press [OK].
- 5. Press [Change] under "Path".
- 6. Enter the new path, and then press [OK].

Deleting an FTP Folder

This section describes how to delete the registered FTP folder.

1. Press [System Settings].



- 2. Press [Administrator Tools].
- 3. Press [Address Book Management].
- 4. Check that [Program / Change] is selected.
- 5. Select the name whose folder you want to delete.

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, folder name, e-mail address.

- 6. Press [Folder].
- 7. Press the protocol which is not currently selected.

A confirmation message appears.

- 8. Press [Yes].
- 9. Press [OK].
- 10. Press [Exit].
- 11. Press the [User Tools] key.



• To delete a name entirely, see "Deleting a Registered Name".

Reference

• p.116 "Deleting a Registered Name"

Using NCP to Connect

This section describes the procedure for registering, changing, and deleting NCP folders.



- To register a shared folder configured in Windows, see "Using SMB to Connect".
- To register a folder in an FTP server, see "Using FTP to Connect".

- p.130 "Using SMB to Connect"
- p.136 "Using FTP to Connect"

Registering an NCP Folder

This section describes how to register an NCP folder.

1. Press [System Settings].



- 2. Press [Administrator Tools].
- 3. Press [Address Book Management].
- 4. Check that [Program / Change] is selected.
- 5. Press the name you want to register or enter the registered number using the number keys.
 You can search by the registered name, folder name, or e-mail address.
- 6. Press [Auth. Info], and then press [▼Next].
- 7. Press [Specify Other Auth. Info] on the right side of Folder Authentication.

When [Do not Specify] is selected, the NCP User Name and NCP Password that you have specified in Default User Name / Password (Send) of File Transfer settings applies. For details, see "File Transfer".

- 8. Press [Change] under "Login User Name".
- 9. Enter the login user name, and then press [OK].
- 10. Press [Change] under "Login Password".
- 11. Enter the password, and then press [OK].
- 12. Enter the password again to confirm, and then press [OK].
- 13. Press [Folder].
- 14. Press [NCP].

15. Select "Connection Type".

If you want to specify a folder in an NDS tree, press [NDS]. If you want to specify a folder on a NetWare server, press [Bindery].

If you have set "Connection Type" to [NDS], enter the user name followed by the name of the context where the user object is located. If the user name is "user" and the context name is "context", enter "user.context".

16. Specify the path.

For details about how to specify the path manually, see "To locate the NCP folder manually".

For details about how to specify the path using Browse Network, see "To locate the NCP folder using Browse Network".

- 17. Press [Connection Test] to check the path is set correctly.
- 18. Press [Exit].
- 19. Press [OK].
- 20. Press [Exit].
- 21. Press the [User Tools] key.

Note

- To register the name, see "Registering Names".
- You can enter up to 64 characters for the user name.
- You can enter up to 64 characters for the password.
- To specify a folder, you can either enter the path manually or locate the folder by browsing the network.
- If User Authentication is specified, contact your administrator.

Reference

- p.44 "File Transfer"
- p.114 "Registering Names"
- p.143 "To locate the NCP folder manually"
- p.144 "To locate the NCP folder using Browse Network"

To locate the NCP folder manually

This section describes how to locate the NCP folder manually.

- 1. Press [Change] under "Path".
- 2. Enter the path where the folder is located.
- 3. Press [OK].
- 4. Press [Connection Test] to check the path is set correctly.



- If you set "Connection Type" to [NDS], and if the NDS tree name is "tree", the name of the context including the volume is "context", the volume name is "volume" and the folder name is "folder", then the path will be "\\tree\volume. context\folder".
- If you set "Connection Type" to [Bindery], and if the NetWare server name is "server", the volume name is "volume" and the folder name is "folder", then the path will be "\\server\volume\folder".
- You can enter a path using up to 128 characters.
- If the connection test fails, check the settings, and then try again.

To locate the NCP folder using Browse Network

This section describes how to locate the NCP folder using Browse Network.

- 1. Press [Browse Network].
- 2. If you have set "Connection Type" to [NDS], a list of items in the NDS tree appears. If you have set "Connection Type" to [Bindery], a list of items on the NetWare server appears.
- 3. Search for the destination folder in the NDS tree or NetWare server.

You can press [Up One Level] to switch between levels.

- 4. Select the folder you want to register.
- 5. Press [OK].



- Only the folders you are allowed to access appear in [Browse Network].
- If the languages used on the machine and the destination you want to view differ, the items in the list
 may not appear correctly.
- Up to 100 items can be displayed in the list.

Changing an NCP registered folder

This section describes how to change the registered NCP folder.

1. Press [System Settings].



- 2. Press [Administrator Tools].
- 3. Press [Address Book Management].
- 4. Check that [Program / Change] is selected.
- 5. Select the user of the registered folder you want to change.

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, folder name, or e-mail address.

- 6. Press [Folder].
- 7. Select "Connection Type".

If you want to specify a folder in an NDS tree, press [NDS]. If you want to specify a folder on a NetWare server, press [Bindery].

8. Specify the folder.

To specify a folder, you can either enter the path manually or locate the folder by browsing the network.

- 9. Press [Connection Test] to check the path is set correctly.
- 10. Press [Exit].
- 11. Press [OK].
- 12. Press [Exit].
- 13. Press the [User Tools] key.
- **U** Note
 - To change the name, key display and title, see "Changing a Registered Name".
- Reference
 - p.115 "Changing a Registered Name"

To change the protocol

This section describes how to change the protocol.

2. A confirmation message appears. Press [Yes].

Changing the protocol will clear all settings made under the previous protocol.

3. Enter each item again.



- p.130 "Using SMB to Connect"
- p.136 "Using FTP to Connect"

Deleting an NCP Folder

This section describes how to delete the registered NCP folder.

1. Press [System Settings].



- 2. Press [Administrator Tools].
- 3. Press [Address Book Management].
- 4. Check that [Program / Change] is selected.
- 5. Select a user of the folder you want to delete.

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, user code, folder name, or e-mail address.

6. Press [Folder].

7. Press the protocol which is not currently selected.

A confirmation message appears.

- 8. Press [Yes].
- 9. Press [OK].
- 10. Press [Exit].
- 11. Press the [User Tools] key.
- **U** Note
 - To delete a name entirely, see "Deleting a Registered Name".
- **■** Reference
 - p.116 "Deleting a Registered Name"

Registering Names to a Group

This section describes how to register names to a group.

You can register names to a group to enable easy management of e-mail addresses and folders for each group.

To add names to a group, the groups must be registered beforehand.

Mportant (

- When using Scan to Folder function, you cannot send scan files to a group with over 50 folders registered.
- The maximum number of destinations registerable to a group is 500.



You can set a protection code to prevent unauthorized access to the folders registered in a group.
 For details, see "Registering a Protection Code".

Reference

• p.158 "Registering a Protection Code"

Registering a Group

This section describes how to register a group.

1. Press [System Settings].



- 2. Press [Administrator Tools].
- 3. Press [Address Book: Program / Change / Delete Group].
- 4. Check that [Program / Change] is selected.
- 5. Press [New Program].



6. Press [Change] under "Group Name".



7. Enter the group name, and then press [OK].

The Key Display name is set automatically.

8. Press the title key under "Select Title", if necessary.

The keys you can select are as follows:

- [Frequent]: Added to the page that is displayed first.
- [AB], [CD], [EF], [GH], [UK], [LMN], [OPQ], [RST], [UVW], [XYZ], [1] to [10]. Added to the list of items in the selected title.

You can select [Frequent] and one more page for each title.

- 9. When you want to change the key display, press [Change] under "Key Display".
- 10. Enter the key display, and then press [OK].
- 11. Press [OK].
- 12. Press [Exit].
- 13. Press the [User Tools] key.

Registering names to a group

This section describes how to register names to a registered group.

You can put names that have been registered in the Address Book into a group.

When registering new names, you can also register groups at the same time.




- 2. Press [Administrator Tools].
- 3. Press [Address Book Management].
- 4. Check that [Program / Change] is selected.
- 5. Select the name to register in a group.

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, folder name, or e-mail address.

- 6. Press [Add to Group].
- 7. Select a group to which you want to add the name.

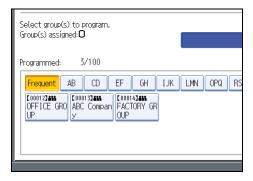

The group key that you have selected becomes highlighted, and the name is added to it.



8. Press [OK].

- 9. Press [Exit].
- 10. Press the [User Tools] key.

Adding a Group to Another Group

This section describes how to add a group to another group.

1. Press [System Settings].



- 2. Press [Administrator Tools].
- 3. Press [Address Book: Program / Change / Delete Group].
- 4. Check that [Program / Change] is selected.
- 5. Select the group that you want to put into another group.

Press the group key, or enter the registered number using the number keys.

You can search by the registered name, folder name, or e-mail address.

- 6. Press [Add to Group].
- 7. Select the group to which you want to add.



The group key that you have selected becomes highlighted, and the group is added to it.

- 8. Press [OK].
- 9. Press [Exit].
- 10. Press the [User Tools] key.

Displaying Names Registered in a Group

This section describes how to display names registered in a group.

You can check the names or groups registered in each group.

1. Press [System Settings].



- 2. Press [Administrator Tools].
- 3. Press [Address Book: Program / Change / Delete Group].
- Check that [Program / Change] is selected.
- 5. Select the group where the members you want to check is registered.

You can search by the registered name, folder name, or e-mail address.

6. Press [Programmed User/Group].

All the names registered will be displayed.

- 7. Press [OK].
- 8. Press [Exit].

6

9. Press the [User Tools] key.

Removing a Name from a Group

This section describes how to remove a name from a group.

1. Press [System Settings].




- 2. Press [Administrator Tools].
- 3. Press [Address Book Management].
- 4. Check that [Program / Change] is selected.
- 5. Select the name to remove from a group.

Press the name key, or enter the registered number using the number keys.

You can search by the registered name, folder name, or e-mail address.

- 6. Press [Add to Group].
- 7. Select the group from which you want to remove the name.

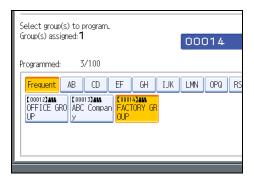

The group key is deselected and the name is removed from it.

- 8. Press [OK].
- 9. Press [Exit].
- 10. Press the [User Tools] key.

Deleting a Group Within Another Group

This section describes how to delete a group within another group.

1. Press [System Settings].



- 2. Press [Administrator Tools].
- 3. Press [Address Book: Program / Change / Delete Group].
- 4. Check that [Program / Change] is selected.
- 5. Select the group that you want to delete from.

Press the group key, or enter the registered number during the number keys.

You can search by the registered name, folder name, or e-mail address.

6. Press [Add to Group].


The keys of groups in which the group is registered appear highlighted.



7. Select the group that you want to delete from.



The group key is deselected and the group is deleted from it.

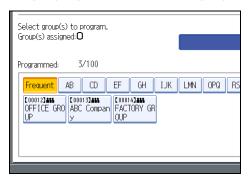

- 8. Press [OK].
- 9. Press [Exit].
- 10. Press the [User Tools] key.

Changing a Group Name

This section describes how to change a group name.

1. Press [System Settings].




2. Press [Administrator Tools].

- 3. Press [Address Book: Program / Change / Delete Group].
- 4. Check that [Program / Change] is selected.
- 5. Press the group key you want to change.

You can search by the registered name, folder name, or e-mail address.

6. To change the group name and key display, press [Change] under "Group Name" or "Key Display".

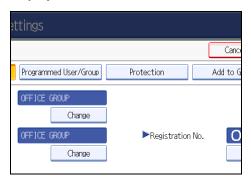

- 7. Enter the new group name or key display, and then press [OK].
- 8. To change the title, press the title key under "Select Title".
- 9. To change the registration number, press [Change] under "Registration No.".
- 10. Enter the new registration number using the number keys.
- 11. Press the [#] key.
- 12. Press [OK].
- 13. Press [Exit].
- 14. Press the [User Tools] key.

Deleting a Group

This section describes how to delete a group.

6

1. Press [System Settings].



- 2. Press [Administrator Tools].
- 3. Press [Address Book: Program / Change / Delete Group].
- 4. Press [Delete].
- 5. Press a group key you want to delete.

You can search by the registered name, folder name, or e-mail address.

- 6. Press [Yes].
- 7. Press [Exit].
- 8. Press the [User Tools] key.

Registering a Protection Code

This section describes how to register a Protection Code.

You can stop sender's names or folders being accessed by setting a protection code.

You can use this function to protect the following:

Folders

You can prevent unauthorized access to folders.

• Sender's names

You can prevent misuse of sender's names.

Reference

• p.118 "Registering a User Code"

Registering a Protection Code to a Single User

This section describes how to register a Protection code to a single user.

1. Press [System Settings].



- 2. Press [Administrator Tools].
- 3. Press [Address Book Management].
- 4. Check that [Program / Change] is selected.
- 5. Select the name whose protection code you want to register.


You can search by the registered name, folder name, or e-mail address.

0

6. Press [Protection].



7. Press [Destination] or [Sender] under "Use Name as".

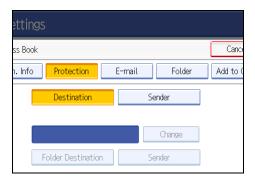

Both [Destination] and [Sender] can be selected at the same time.

- 8. Press [Change] under "Protection Code".
- 9. Enter a protection code using the number keys, and then press the [#] key.
- 10. Press [OK].
- 11. Press [Exit].
- 12. Press the [User Tools] key.



• Specify a protection code of up to eight digits. You can also specify "Protection" without specifying a protection code.

Registering a Protection Code to a Group User

This section describes how to register a Protection Code to a Group User.



- 2. Press [Administrator Tools].
- 3. Press [Address Book: Program / Change / Delete Group].
- 4. Check that [Program / Change] is selected.
- Press the group key you want to register or enter the registered number using the number keys.

You can search by the registered name, folder name, or e-mail address.

- 6. Press [Protection].
- 7. Press [Folder Destination] under "Protection Object".
- 8. Press [Change] under "Protection Code".
- 9. Enter a protection code using the number keys, and then press the [#] key.
- 10. Press [OK].
- 11. Press [Exit].
- 12. Press the [User Tools] key.



Specify a protection code of up to eight digits. You can also specify "Protection" without specifying a
protection code.

6

Registering SMTP and LDAP Authentication

This section describes how to register SMTP and LDAP Authentication.

SMTP Authentication

This section describes how to register SMTP Authentication.

For each user registered in the Address Book, you can register a login user name and login password to be used when accessing an SMTP server.

To use an SMTP server, you need to program it beforehand.



- When [Do not Specify] is selected for SMTP Authentication the User Name and Password that you
 have specified in SMTP Authentication of File Transfer settings applies. For details, see "File Transfer".
- 1. Press [System Settings].



- 2. Press [Administrator Tools].
- 3. Press [Address Book Management].
- 4. Check that [Program / Change] is selected.
- 5. Press the name you want to register or enter the registered number using the number keys.
 You can search by the registered name, folder name, or e-mail address.
- 6. Press [Auth. Info].
- 7. Press [Specify Other Auth. Info] under "SMTP Authentication".



- 9. Enter the login user name, and then press [OK].
- 10. Press [Change] under "Login Password".
- 11. Enter the password, and then press [OK].
- 12. Enter the password again to confirm, and then press [OK].
- 13. Press [OK].
- 14. Press [Exit].
- 15. Press the [User Tools] key.

U Note

- To register the name, see "Registering Names".
- You can enter up to 191 characters for the user name.
- When using POP before SMTP Authentication, you can enter up to 63 characters.
- You can enter up to 64 characters for the password.
- To change the SMTP Authentication settings, repeat step 2 to 15.

Reference

- p.114 "Registering Names"
- p.44 "File Transfer"

LDAP Authentication

This section describes how to register LDAP Authentication.


For each user registered in the Address Book, you can register a login user name and login password to be used when accessing an LDAP server.

To use an LDAP server, you need to program it beforehand. For details, see "Programming the LDAP server".

- When [Do not Specify] is selected for LDAP Authentication, the User Name and Password that you
 have specified in Program / Change LDAP Server of Administrator Tools settings applies. For details,
 see "Programming the LDAP server".
- 1. Press [System Settings].



- 2. Press [Administrator Tools].
- 3. Press [Address Book Management].
- 4. Check that [Program / Change] is selected.
- 5. Press the name you want to register or enter the registered number using the number keys.
 You can search by the registered name, folder name, or e-mail address.
- 6. Press [Auth. Info], and then press [▼Next].
- 7. Press [Specify Other Auth. Info] under "LDAP Authentication".
- 8. Press [Change] under "Login User Name".

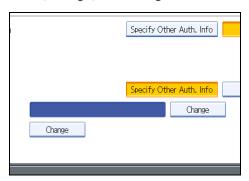

- 9. Enter the login user name, and then press [OK].
- 10. Press [Change] under "Login Password".
- 11. Enter the password, and then press [OK].
- 12. Enter the password again to confirm, and then press [OK].
- 13. Press [OK].

- 14. Press [Exit].
- 15. Press the [User Tools] key.
- **U** Note
 - To register the name, see "Registering Name".
 - You can enter up to 128 characters for the user name.
 - To change the LDAP Authentication settings, repeat step 2 to 15.

Reference

- p.114 "Registering Names"
- p.57 "Programming the LDAP server"

7. Other User Tools

Initial settings allow you to switch the language as well as checking the number of printed papers by displaying the counter. For details on how to access respective settings, see "Accessing User Tools".

Maintenance

This section describes the user tools in Maintenance.

[Maintenance] allows color drift and gradient correction.

Auto Color Calibration

If a certain color is strong or the color of the copy differs from the original, adjust the yellow, magenta, cyan and black balance.

Color Registration

If the color documents show registration shifting, perform automatic color registration.



 For details about "Auto Color Calibration" and "Color Registration", see "Maintenance", Troubleshooting.




• p.9 "Accessing User Tools"

Changing the Display Language

You can change the language used on the display. English is set as default.

1. Press the [Language Selection] key.

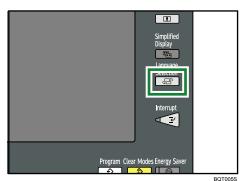



• If you want to return the display language to "English", repeat the step above.

7

Inquiry

The inquiry function lets you check the telephone numbers to contact for repairs, or ordering consumables such as toner. Be sure to contact your service engineer to verify the following:

Consumables

- Telephone No. to order
- Toner
- Staple
- Staple (Center)
- TX Stamp Name


Machine Maintenance/Repair

- Telephone No.
- Serial No. of Machine

Sales Representative

• Telephone No.

1. Press [Inquiry].

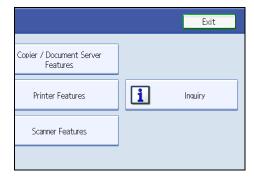

Inquiry information appears.

2. Press [Print Inquiry List].



3. Press the [Start] key.

Inquiry information prints out.

4. Press [Exit] twice.

■ Reference

• p.9 "Accessing User Tools"


Counter

Displaying the Total Counter


You can display the total counter value used for all functions.

You can also print out a counter data list.

1. Press the [Counter] key.

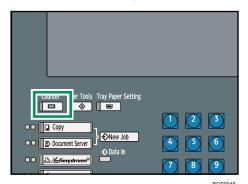

2. To print a counter list, press [Print Counter List].

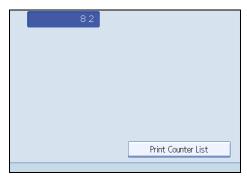

3. Press the [Start] key.

A counter list prints out.

Reference


• p.9 "Accessing User Tools"

8. Appendix


Adjustment Settings for Operators

Changing the Adjustment Settings for Operators

1. Press the [User Tools] key.

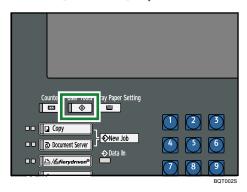

2. Press [Adjustment Settings for Operators].

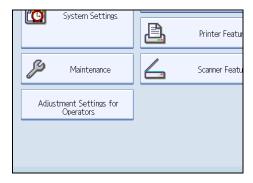

- 3. Select the item that you want to change the value.
- 4. Specify the setting value.

To select the setting value, press the value on the display.

To input the value, use the number keys.

- 5. Press the [#] key.
- 6. Press [Exit] twice.



• After specifying Adjustment Settings for Operators when printing is paused, press [APL Window] to quit the settings screen, rather than [Exit].

. - -

Setting Values

Image Pos:Sub Settings

1-710-001: Front

- Max.: 3 mm
- Min.: -3 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-711-001: Back Main U Tray (back side of Tray 1)

- Max.: 3 mm
- Min.: -3 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-711-002: Back Main L Tray (back side of Tray 2)

- Max.: 3 mm
- Min.: -3 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-711-007: Back By-Pass Tray (back side of the multi bypass tray)

- Max.: 3 mm
- Min.: -3 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-711-008: Back A3LCT1 U Tray (back side of Tray 3 using the Wide LCT)

- Max.: 3 mm
- Min.: -3 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-711-009: Back A3LCT1 L Tray (back side of Tray 4 using the Wide LCT)

- Max.: 3 mm
- Min.: -3 mm
- Step: 0.1 mm
- Initial value: 0 mm

R

1-711-010: Back A3LCT2 U Tray (back side of Tray 5 using the Wide LCT)

- Max.: 3 mm
- Min.: -3 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-711-011: Back A3LCT2 L Tray (back side of Tray 6 using the Wide LCT)

- Max.: 3 mm
- Min.: -3 mm
- Step: 0.1 mm
- Initial value: 0 mm

Image Pos:Main Settings

1-720-001: Front

- Max.: 3 mm
- Min.: -3 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-721-001: Back Main U Tray (back side of Tray 1)

- Max.: 3 mm
- Min.: -3 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-721-002: Back Main L Tray (back side of Tray 2)

- Max.: 3 mm
- Min.: -3 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-721-007: Back By-Pass Tray (back side of the multi bypass tray)

- Max.: 3 mm
- Min.: -3 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-721-008: Back A3LCT1 U Tray (back side of Tray 3 using the Wide LCT)

• Max.: 3 mm

• Step: 0.1 mm

• Initial value: 0 mm

1-721-009: Back A3LCT1 L Tray (back side of Tray 4 using the Wide LCT)

• Max.: 3 mm

• Min.: -3 mm

• Step: 0.1 mm

• Initial value: 0 mm

1-721-010: Back A3LCT2 U Tray (back side of Tray 5 using the Wide LCT)

• Max.: 3 mm

• Min.: -3 mm

• Step: 0.1 mm

• Initial value: 0 mm

1-721-011: Back A3LCT2 L Tray (back side of Tray 6 using the Wide LCT)

• Max.: 3 mm

• Min.: -3 mm

• Step: 0.1 mm

• Initial value: 0 mm

Skew Detect Disable Settings

1-730-001: Main U Tray (Tray 1)

• 0: On

• 1: Off

• Initial value: 0

1-730-002: Main L Tray (Tray 2)

• 0: On

• 1: Off

• Initial value: 0

1-730-007: By-Pass Tray (multi bypass tray)

• 0: On

• 1: Off

• Initial value: 0

1-730-008: A3 LCT1 U Tray (Tray 3 using the Wide LCT)

• 0: On

- 1: Off
- Initial value: 0

1-730-009: A3 LCT1 L Tray (Tray 4 using the Wide LCT)

- 0: On
- 1: Off
- Initial value: 0

1-730-010: A3 LCT2 U Tray (Tray 5 using the Wide LCT)

- 0: On
- 1: Off
- Initial value: 0

1-730-011: A3 LCT2 L Tray (Tray 6 using the Wide LCT)

- 0: On
- 1: Off
- Initial value: 0

Side-to-Side Reg Disable Settings

1-761-001: Main U Tray (Tray 1)

- 0: On
- 1: Off
- Initial value: 0

1-761-002: Main L Tray (Tray 2)

- 0: On
- 1: Off
- Initial value: 0

1-761-007: By-Pass Tray (multi bypass tray)

- 0: On
- 1: Off
- Initial value: 0

1-761-008: A3 LCT1 U Tray (Tray 3 using the Wide LCT)

- 0: On
- 1: Off
- Initial value: 0

1-761-009: A3 LCT1 L Tray (Tray 4 using the Wide LCT)

• 0: On

- 1: Off
- Initial value: 0

1-761-010: A3 LCT2 U Tray (Tray 5 using the Wide LCT)

- 0: On
- 1: Off
- Initial value: 0

1-761-011: A3 LCT2 L Tray (Tray 6 using the Wide LCT)

- 0: On
- 1: Off
- Initial value: 0

Fusing Oil Setting

- 1-904-007: Oil Supply Execute
- 1-904-008: Oil Pump Drv Time
 - Max: 2550 sec
 - Min: 0 sec
 - Step: 10 sec
 - Initial value: 360 sec

De-curler Settings

1-906-001: Paper Path Selection

- Max.: 5
- Min.: 0
- Step: 1
- Initial value: 3

Image Pos:LEdge Margin Settings

1-908-001: Thin:Uncoated (Thin Uncoated Paper)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-002: Plain:Uncoatd (Plain Uncoated Paper)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm

• Initial value: 0 mm

1-908-003: Mid Thk:Uncoatd (Middle Thick Uncoated Paper)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-004: Thin:Coated 1 (Thin Coated Paper 1)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-005: Plain:Coated 1 (Plain Coated Paper 1)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-006: Mid Thk:Coated 1 (Middle Thick Coated Paper 1)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-007: Thin:Coated 2 (Thin Coated Paper 2)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-008: Plain:Coated 2 (Plain Coated Paper 2)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-009: Mid Thk:Coated 2 (Middle Thick Coated Paper 2)

Max.: 3 mm

- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-010: Thin:Coated 3 (Thin Coated Paper 3)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-011: Plain:Coated 3 (Plain Coated Paper 3)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-012: Mid Thk:Coated 3 (Middle Thick Coated Paper 3)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-013: Thin:SP1 (Thin Special Paper 1)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-014: Plain:SP1 (Plain Special Paper 1)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-015: Mid Thk:SP1 (Middle Thick Special Paper 1)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-016: Thin:SP2 (Thin Special Paper 2)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-017: Plain:SP2 (Plain Special Paper 2)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-018: Mid Thk:SP2 (Middle Thick Special Paper 2)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-019: Thin:SP3 (Thin Special Paper 3)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-020: Plain:SP3 (Plain Special Paper 3)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-021: Mid Thk:SP3 (Middle Thick Special Paper 3)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-022: Thin:SP4 (Thin Special Paper 4)

- Max.: 3 mm
- Min.: 0 mm

- Step: 0.1 mm
- Initial value: 0 mm

1-908-023: Plain:SP4 (Plain Special Paper 4)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-024: Mid Thk:SP4 (Middle Thick Special Paper 4)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-025: Thin:SP5 (Thin Special Paper 5)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-026: Plain:SP5 (Plain Special Paper 5)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-027: Mid Thk:SP5 (Middle Thick Special Paper 5)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-028: Thin:SP6 (Thin Special Paper 6)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-029: Plain:SP6 (Plain Special Paper 6)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

1-908-030: Mid Thk:SP6 (Middle Thick Special Paper 6)

- Max.: 3 mm
- Min.: 0 mm
- Step: 0.1 mm
- Initial value: 0 mm

Dbl-Feed Detect:Disable Settings

1-910-001: Main U Tray (Tray 1)

- 0: On
- 1: Off
- Initial value: 0

1-910-002: Main L Tray (Tray 2)

- 0: On
- 1: Off
- Initial value: 0

1-910-007: By-Pass Tray (multi bypass tray)

- 0: On
- 1: Off
- Initial value: 0

1-910-008: A3 LCT1 U Tray (Tray 3 using the Wide LCT)

- 0: On
- 1: Off
- Initial value: 0

1-910-009: A3 LCT1 L Tray (Tray 4 using the Wide LCT)

- 0: On
- 1: Off
- Initial value: 0

1-910-010: A3 LCT2 U Tray (Tray 5 using the Wide LCT)

• 0: On

- 1: Off
- Initial value: 0

1-910-011: A3 LCT2 L Tray (Tray 6 using the Wide LCT)

- 0: On
- 1: Off
- Initial value: 0

Clear blurred img

2-810-001: Execute

Oil removal mode

3-309-010: Exe Oil removal

Select Test Print APP

5-070-001

- 3: Copy
- 6: Printer
- Initial value: 3

Staple Position Adjustment

6-700-001: (A3-Lengthwise)

- Max: 1 mm
- Min: -1 mm
- Step: 0.5 mm
- Initial value: 0 mm

6-700-002: (B4-Lengthwise)

- Max: 1 mm
- Min: -1 mm
- Step: 0.5 mm
- Initial value: 0 mm

6-700-003: (A4-Lengthwise)

- Max: 1 mm
- Min: -1 mm
- Step: 0.5 mm
- Initial value: 0 mm

6-700-004: (A4-Sideways)

• Max: 1 mm

- Min: -1 mm
- Step: 0.5 mm
- Initial value: 0 mm

6-700-005: (B5-Lengthwise)

- Max: 1 mm
- Min: -1 mm
- Step: 0.5 mm
- Initial value: 0 mm

6-700-006: (B5-Sideways)

- Max: 1 mm
- Min: -1 mm
- Step: 0.5 mm
- Initial value: 0 mm

6-700-007: (DLT-Lengthwise)

- Max: 1 mm
- Min: -1 mm
- Step: 0.5 mm
- Initial value: 0 mm

6-700-008: (LG-Lengthwise)

- Max: 1 mm
- Min: -1 mm
- Step: 0.5 mm
- Initial value: 0 mm

6-700-009: (LT-Lengthwise)

- Max: 1 mm
- Min: -1 mm
- Step: 0.5 mm
- Initial value: 0 mm

6-700-010: (LT-Sideways)

- Max: 1 mm
- Min: -1 mm
- Step: 0.5 mm
- Initial value: 0 mm

6-700-011: (Others)

- Max: 1 mm
- Min: -1 mm
- Step: 0.5 mm
- Initial value: 0 mm

Punch Hole Position Adjustment

6-705-001: JPN/EU: 2-Hole

- Max: 3.5 mm
- Min: -3.5 mm
- Step: 0.5 mm
- Initial value: 0 mm

6-705-002: JPN/NA: 3-Hole

- Max: 3.5 mm
- Min: -3.5 mm
- Step: 0.5 mm
- Initial value: 0 mm

6-705-003: EN: 4-Hole

- Max: 3.5 mm
- Min: -3.5 mm
- Step: 0.5 mm
- Initial value: 0 mm

6-705-004: NA: 4-Hole

- Max: 3.5 mm
- Min: -3.5 mm
- Step: 0.5 mm
- Initial value: 0 mm

6-705-005: NA: 2-Hole

- Max: 3.5 mm
- Min: -3.5 mm
- Step: 0.5 mm
- Initial value: 0 mm

8

Adjust Booklet Stapling Position

6-730-001: A3 SEF

- Max: 1 mm
- Min: -1 mm
- Step: 0.2 mm
- Initial value: 0 mm

6-730-002: B4 SEF

- Max: 1 mm
- Min: -1 mm
- Step: 0.2 mm
- Initial value: 0 mm

6-730-003: A4 SEF

- Max: 1 mm
- Min: -1 mm
- Step: 0.2 mm
- Initial value: 0 mm

6-730-004: B5 SEF

- Max: 1 mm
- Min: -1 mm
- Step: 0.2 mm
- Initial value: 0 mm

6-730-005: 12 x 18 SEF

- Max: 1 mm
- Min: -1 mm
- Step: 0.2 mm
- Initial value: 0 mm

6-730-006: DLT SEF

- Max: 1 mm
- Min: -1 mm
- Step: 0.2 mm
- Initial value: 0 mm

6-730-007: LG SEF

Max: 1 mm

- Min: -1 mm
- Step: 0.2 mm
- Initial value: 0 mm

6-730-008: LT SEF

- Max: 1 mm
- Min: -1 mm
- Step: 0.2 mm
- Initial value: 0 mm

6-730-009: Other

- Max: 1 mm
- Min: -1 mm
- Step: 0.2 mm
- Initial value: 0 mm

Adjust Booklet Fold Position

6-735-001: A3 SEF

- Max: 1 mm
- Min: -1 mm
- Step: 0.2 mm
- Initial value: 0 mm

6-735-002: B4 SEF

- Max: 1 mm
- Min: -1 mm
- Step: 0.2 mm
- Initial value: 0 mm

6-735-003: A4 SEF

- Max: 1 mm
- Min: -1 mm
- Step: 0.2 mm
- Initial value: 0 mm

6-735-004: B5 SEF

- Max: 1 mm
- Min: -1 mm
- Step: 0.2 mm

Initial value: 0 mm

6-735-005: 12 x 18 SEF

- Max: 1 mm
- Min: -1 mm
- Step: 0.2 mm
- Initial value: 0 mm

6-735-006: DLT SEF

- Max: 1 mm
- Min: -1 mm
- Step: 0.2 mm
- Initial value: 0 mm

6-735-007: LG SEF

- Max: 1 mm
- Min: -1 mm
- Step: 0.2 mm
- Initial value: 0 mm

6-735-008: LT SEF

- Max: 1 mm
- Min: -1 mm
- Step: 0.2 mm
- Initial value: 0 mm

6-735-009: Other

- Max: 1 mm
- Min: -1 mm
- Step: 0.2 mm
- Initial value: 0 mm

Cover Centering Adjustment

6-780-001: Cover Centering Adjustment

- Max: 5 mm
- Min: -5 mm
- Step: 0.1 mm
- Initial value: 0 mm

Cover Horizontal Position Adjustment

6-781-001: Cover Horizontal Position Adjustment

• Max: 5 mm

• Min: -5 mm

• Step: 0.1 mm

• Initial value: 0 mm

Copyrights

expat

- The software including controller, etc. (hereinafter "software") installed on this product uses the expat under the conditions mentioned below.
- The product manufacturer provides warranty and support to the software of the product including the
 expat, and the product manufacturer makes the initial developer and copyright holder of the expat,
 free from these obligations.
- Information relating to the expat is available at: http://expat.sourceforge.net/

Copyright (c) 1998, 1999, 2000 Thai Open Source Software Centre, Ltd. and Clark Cooper.

Copyright (c) 2001, 2002 Expat maintainers.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

NetBSD

1. Copyright Notice of NetBSD

For all users to use this product:

This product contains NetBSD operating system:

For the most part, the software constituting the NetBSD operating system is not in the public domain; its authors retain their copyright.

The following text shows the copyright notice used for many of the NetBSD source code. For exact copyright notice applicable for each of the files/binaries, the source code tree must be consulted.

A full source code can be found at http://www.netbsd.org/.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. All advertising materials mentioning features or use of this software must display the following acknowledgment:
 - This product includes software developed by The NetBSD Foundation, Inc. and its contributors.
- 4. Neither the name of The NetBSD Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE NETBSD FOUNDATION, INC. AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

2. Authors Name List

All product names mentioned herein are trademarks of their respective owners.

The following notices are required to satisfy the license terms of the software that we have mentioned in this document:

- This product includes software developed by the University of California, Berkeley and its contributors.
- This product includes software developed by Jonathan R. Stone for the NetBSD Project.
- This product includes software developed by the NetBSD Foundation, Inc. and its contributors.
- This product includes software developed by Manuel Bouyer.
- This product includes software developed by Charles Hannum.
- This product includes software developed by Charles M. Hannum.
- This product includes software developed by Christopher G. Demetriou.
- This product includes software developed by Tools GmbH.
- This product includes software developed by Terrence R. Lambert.
- This product includes software developed by Adam Glass and Charles Hannum.
- This product includes software developed by Theo de Raadt.

8

- This product includes software developed by Jonathan Stone and Jason R. Thorpe for the NetBSD Project.
- This product includes software developed by the University of California, Lawrence Berkeley Laboratory and its contributors.
- This product includes software developed by Christos Zoulas.
- This product includes software developed by Christopher G. Demetriou for the NetBSD Project.
- This product includes software developed by Paul Kranenburg.
- This product includes software developed by Adam Glass.
- This product includes software developed by Jonathan Stone.
- This product includes software developed by Jonathan Stone for the NetBSD Project.
- This product includes software developed by Winning Strategies, Inc.
- This product includes software developed by Frank van der Linden for the NetBSD Project.
- This product includes software developed for the NetBSD Project by Frank van der Linden.
- This product includes software developed for the NetBSD Project by Jason R. Thorpe.
- The software was developed by the University of California, Berkeley.
- This product includes software developed by Chris Provenzano, the University of California, Berkeley, and contributors.

Sablotron

Sablotron (Version 0.82) Copyright (c) 2000 Ginger Alliance Ltd. All Rights Reserved.

- a) The application software installed on this product includes the Sablotron software Version 0.82 (hereinafter, "Sablotron 0.82"), with modifications made by the product manufacturer. The original code of the Sablotron 0.82 is provided by Ginger Alliance Ltd., the initial developer, and the modified code of the Sablotron 0.82 has been derived from such original code provided by Ginger Alliance Ltd.
- b) The product manufacturer provides warranty and support to the application software of this product including the Sablotron 0.82 as modified, and the product manufacturer makes Ginger Alliance Ltd., the initial developer of the Sablotron 0.82, free from these obligations.
- c) The Sablotron 0.82 and the modifications thereof are made available under the terms of Mozilla Public License Version 1.1 (hereinafter, "MPL 1.1"), and the application software of this product constitutes the "Larger Work" as defined in MPL 1.1. The application software of this product except for the Sablotron 0.82 as modified is licensed by the product manufacturer under separate agreement (s).
- d) The source code of the modified code of the Sablotron 0.82 is available at: http://support-download.com/services/device/sablot/notice082.html
- e) The source code of the Sablotron software is available at: http://www.gingerall.com
- f) MPL 1.1 is available at: http://www.mozilla.org/MPL/MPL-1.1.html

JPEG LIBRARY

• The software installed on this product is based in part on the work of the Independent JPEG Group.

SASL

CMU libsasl

Tim Martin

Rob Earhart

Rob Siemborski

Copyright (c) 2001 Carnegie Mellon University. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. The name "Carnegie Mellon University" must not be used to endorse or promote products derived from this software without prior written permission.

For permission or any other legal details, please contact:

Office of Technology Transfer

Carnegie Mellon University

5000 Forbes Avenue

Pittsburgh, PA 15213-3890

(412) 268-4387, fax: (412) 268-7395

tech-transfer@andrew.cmu.edu

 Redistributions of any form whatsoever must retain the following acknowledgment: "This product includes software developed by Computing Services at Carnegie Mellon University (http:// www.cmu.edu/computing/)."

CARNEGIE MELLON UNIVERSITY DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS, IN NO EVENT SHALL CARNEGIE MELLON UNIVERSITY BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

8

MD4

Copyright (c) 1990-2, RSA Data Security, Inc. All rights reserved.

License to copy and use this software is granted provided that it is identified as the "RSA Data Security, Inc. MD4 Message-Digest Algorithm" in all material mentioning or referencing this software or this function.

License is also granted to make and use derivative works provided that such works are identified as "derived from the RSA Data Security, Inc. MD4 Message-Digest Algorithm" in all material mentioning or referencing the derived work.

RSA Data Security, Inc. makes no representations concerning either the merchantability of this software or the suitability of this software for any particular purpose. It is provided "as is" without express or implied warranty of any kind.

These notices must be retained in any copies of any part of this documentation and/or software.

MD5

Copyright (c) 1991-2, RSA Data Security, Inc. Created 1991. All rights reserved.

License to copy and use this software is granted provided that it is identified as the "RSA Data Security, Inc. MD5 Message-Digest Algorithm" in all material mentioning or referencing this software or this function.

License is also granted to make and use derivative works provided that such works are identified as "derived from the RSA Data Security, Inc. MD5 Message-Digest Algorithm" in all material mentioning or referencing the derived work.

RSA Data Security, Inc. makes no representations concerning either the merchantability of this software or the suitability of this software for any particular purpose. It is provided "as is" without express or implied warranty of any kind.

These notices must be retained in any copies of any part of this documentation and/or software.

Samba(Ver 3.0.4)

For SMB transmission, this machine uses Samba ver 3.0.4 (hereinafter referred to as Samba 3.0.4). Copyright (c) Andrew Tridgell 1994-1998.

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 675 Mass Ave, Cambridge, MA 02139, USA.

- The source code for SMB transmission by this machine can be downloaded from the following website:
- http://support-download.com/services/scbs

RSA BSAFE®



- This product includes RSA BSAFE(c) cryptographic or security protocol software from RSA Security Inc.
- RSA and BSAFE are registered trademarks of RSA Security Inc. in the United States and/or other countries.
- RSA Security Inc. All rights reserved.

Open SSL

Copyright (c) 1998-2004 The OpenSSL Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. All advertising materials mentioning features or use of this software must display the following acknowledgment:
- "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (http://www.openssl.org/)"
- 4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact openssl-core@openssl.org.

8

- 5. Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.
- 6. Redistributions of any form whatsoever must retain the following acknowledgment:

"This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (http://www.openssl.org/)"

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes cryptographic software written by Eric Young (eay@cryptsoft.com). This product includes software written by Tim Hudson (tjh@cryptsoft.com).

Original SSLeay License

Copyright (C) 1995-1998 Eric Young (eay@cryptsoft.com) All rights reserved.

This package is an SSL implementation written by Eric Young (eay@cryptsoft.com). The implementation was written so as to conform with Netscapes SSL.

This library is free for commercial and non-commercial use as long as the following conditions are aheared to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code. The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson (tjh@cryptsoft.com).

Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed. If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used. This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. All advertising materials mentioning features or use of this software must display the following acknowledgement: "This product includes cryptographic software written by Eric Young (eay@cryptsoft.com)" The word 'cryptographic' can be left out if the rouines from the library being used are not cryptographic related :-).

4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement: "This product includes software written by Tim Hudson (tjh@cryptsoft.com)"

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The licence and distribution terms for any publically available version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution licence.

[including the GNU Public Licence.]

Open SSH

The licences which components of this software fall under are as follows. First, we will summarize and say that all components are under a BSD licence, or a licence more free than that.

OpenSSH contains no GPL code.

1)

Copyright (c) 1995 Tatu Ylonen <ylo@cs.hut.fi>, Espoo, Finland All rights reserved

As far as I am concerned, the code I have written for this software can be used freely for any purpose. Any derived versions of this software must be clearly marked as such, and if the derived work is incompatible with the protocol description in the RFC file, it must be called by a name other than "ssh" or "Secure Shell".

[Tatu continues]

However, I am not implying to give any licenses to any patents or copyrights held by third parties, and the software includes parts that are not under my direct control. As far as I know, all included source code is used in accordance with the relevant license agreements and can be used freely for any purpose (the GNU license being the most restrictive); see below for details.

[However, none of that term is relevant at this point in time. All of these restrictively licenced software components which he talks about have been removed from OpenSSH, i.e.,

- RSA is no longer included, found in the OpenSSL library
- IDEA is no longer included, its use is deprecated
- DES is now external, in the OpenSSL library
- GMP is no longer used, and instead we call BN code from OpenSSL

- Zlib is now external, in a library
- The make-ssh-known-hosts script is no longer included
- TSS has been removed
- MD5 is now external, in the OpenSSL library
- RC4 support has been replaced with ARC4 support from OpenSSL
- Blowfish is now external, in the OpenSSL library

[The licence continues]

Note that any information and cryptographic algorithms used in this software are publicly available on the Internet and at any major bookstore, scientific library, and patent office worldwide. More information can be found e.g. at "http://www.cs.hut.fi/crypto".

The legal status of this program is some combination of all these permissions and restrictions. Use only at your own responsibility. You will be responsible for any legal consequences yourself; I am not making any claims whether possessing or using this is legal or not in your country, and I am not taking any responsibility on your behalf.

NO WARRANTY

BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

21

The 32-bit CRC compensation attack detector in deattack.c was contributed by CORE SDI S.A. under a BSD-style license.

Cryptographic attack detector for ssh - source code

Copyright (c) 1998 CORE SDI S.A., Buenos Aires, Argentina. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that this copyright notice is retained.

THIS SOFTWARE IS PROVIDED "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES ARE DISCLAIMED. IN NO EVENT SHALL CORE SDI S.A. BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OR MISUSE OF THIS SOFTWARE.

Ariel Futoransky <futo@core-sdi.com>

http://www.core-sdi.com

3)

One component of the ssh source code is under a 3-clause BSD license, held by the University of California, since we pulled these parts from original Berkeley code.

Copyright (c) 1983, 1990, 1992, 1993, 1995

The Regents of the University of California. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

4)

Remaining components of the software are provided under a standard 2-term BSD licence with the following names as copyright holders:

Markus Friedl

Theo de Raadt

Niels Provos

Dug Song

Kevin Steves

8

Daniel Kouril

Wesley Griffin

Per Allansson

Jason Downs

Solar Designer

Todd C. Miller

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

5)

Portable OpenSSH contains the following additional licenses:

c) Compatibility code (openbsd-compat)

Apart from the previously mentioned licenses, various pieces of code in the openbsd-compat/subdirectory are licensed as follows:

Some code is licensed under a 3-term BSD license, to the following copyright holders:

Todd C. Miller

Theo de Raadt

Damien Miller

Eric P. Allman

The Regents of the University of California

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Open LDAP

The OpenLDAP Public License Version 2.8, 17 August 2003.

Redistribution and use of this software and associated documentation ("Software"), with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions in source form must retain copyright statements and notices,
- 2. Redistributions in binary form must reproduce applicable copyright statements and notices, this list of conditions, and the following disclaimer in the documentation and/or other materials provided with the distribution, and
- 3. Redistributions must contain a verbatim copy of this document.

The OpenLDAP Foundation may revise this license from time to time. Each revision is distinguished by a version number. You may use this Software under terms of this license revision or under the terms of any subsequent revision of the license.

THIS SOFTWARE IS PROVIDED BY THE OPENLDAP FOUNDATION AND ITS CONTRIBUTORS "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OPENLDAP FOUNDATION, ITS CONTRIBUTORS, OR THE AUTHOR(S) OR OWNER(S) OF THE SOFTWARE BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

8

The names of the authors and copyright holders must not be used in advertising or otherwise to promote the sale, use or other dealing in this Software without specific, written prior permission. Title to copyright in this Software shall at all times remain with copyright holders.

OpenLDAP is a registered trademark of the OpenLDAP Foundation.

Copyright (c) 1999-2003 The OpenLDAP Foundation, Redwood City, California, USA. All Rights Reserved. Permission to copy and distribute verbatim copies of this document is granted.

Heimdal

Copyright (c) 1997-2005 Kungliga Tekniska Högskolan (Royal Institute of Technology, Stockholm, Sweden). All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. Neither the name of the Institute nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE INSTITUTE AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE INSTITUTE OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

IPSTM print language emulations

Copyright (c) 1987-2006 Zoran Corporation. All rights reserved.

Q

INDEX

1 Sided 2 Sided Auto Margin TtoB85	Changing a Group Name	155
1 Sided 2 Sided Auto Margin TtoT85	Changing a Registered Name	115
A	Changing a User Code	119
	Changing an E-mail Destination	127
A.C.S. Priority101	Changing the adjustment settings for operato	
A.C.S. Sensitivity		
A.C.S. Sensitivity Level105	Changing the Display Language	
Accessing User Tools	Changing the LDAP server	
Adding a Group to Another Group151	Clearing the Number of Prints	
Address Book	Color Registration	
Address Book Change Order50	Color Sensitivity	
Address Book Edit Title51	Compression (Black & White)	
Address Book Management	Compression (Gray Scale / Full Color)	
Address Book Program/Change/Delete Group	Connecting to the Ethernet Interface	
Address Book Switch Title	Connecting to the Interfaces	
	Copier/Document Server Auto Reset Timer	
ADF Feed Speed35 ADF Original Table Elevation34	Copy Back Cover	
	Copy Count Display	
Adjust Color Image	Copy Eject Face Method in Glass Mode	
Adjustment Settings for Operators171	Copy on Designating Page in Combine	
Administrator Authentication Management54	Copy Order in Combine	
Administrator Tools	Copy Orientation in Duplex Mode	
Administrator's E-mail Address	Copyrights	189
Alert Sound Original left on Exposure Glass81	Counter	169
AOF (Always On)55	Creep Setting for Magazine	86
Authentication Information	Customize Function Copier	82
Auto Color Calibration	Customize Function Document Server Storag	
Auto Delete File in Document Server54		82
Auto Erase Memory Setting55	D	
Auto Image Density Priority79	Dark Back-ground	80
Auto Logout Timer	Date Stamp	
Auto Off Timer	DDNS Configuration	
Auto Specify Sender Name48	Default User Name/Password (Send)	
Auto Tray Switching80	Delete All Files in Document Server	
В	Delete Scanner Journal	
Back Margin Left / Right85	Deleting a Group	
Back Margin Top/Bottom85	Deleting a Group Within Another Group	
Back Up/Restore Address Book	Deleting a Registered Name	
Background Density of ADS (Full Color / Two-	Deleting a User Code	
color)101	Deleting an E-mail Destination	
Background Density of ADS (Full Color)106	Deleting the LDAP server	

Delivery Option	44	Front Margin Left / Right	85
Destination List Display Priority 1	103	Front Margin Top / Bottom	85
Destination List Display Priority 2	104	Function Priority	32
Display panel	8	Function Reset Timer	32
Display/Clear/Print Counter per User		G	
Display/Print Counter	53		
Displaying Names Registered in a Group	152	General Features	
Displaying the Counter for Each User	122	General Settings	103
Displaying the Total Counter	169	Н	
Divide & Send E-mail	107	High Compression PDF Level	107
DNS Configuration	40	Host Name	
Domain Name	40	How to Read This Manual	
Double Copies Position	89	Flow to Redu Tills Mattodi	/
Double Copies Separation Line	87	l .	
Duplex Back Page Stamping Position /	(Page	Image Adjustment Priority	80
Numbering)	94	Image Repeat Separation Line	
E		Inkjet Output Type	
E-mail Communication Port	16	Input/Output	
E-mail Destination		Inquiry	
E-mail Reception Interval		Insert Additional E-mail Info	108
E-mail Storage in Server		Insert Separation Sheet	98
Edit		Interface Settings	39
Effective Protocol		Interleave Print	32
Energy Saver Timer		Interposer (Upper Tray / Lower Tray)	76
Enhanced External Charge Management		IPsec	40
Erase All Memory		IPv4 Gateway Address	39
Erase Border Width		IPv6 Gateway Address	39
Erase Center Width		IPv6 Stateless Address Autoconfiguration	39
Erase Original Shadow in Combine		Items of Tray Paper Settings	62
Ethernet Speed		J.	
Extended Security			
External Charge Unit Management		Job End Call	81
F		K	
<u>r</u>		Key Repeat	35
File Transfer		1	
Finisher Punch type			
Finisher Staple Position		LDAP Authentication	
Firmware Version		LDAP Search	
Font / (Date Stamp)		Letterhead Setting	98
Font / (Page Numbering)		M	
Font / (Stamp Text)		Machine IPv4 Address	20
Format / (Date Stamp)			
Front Cover Copy in Combine	86	Machine IPv6 Address	39

Machine Name	42	POP before SMTP	4
Maintenance		POP3/IMAP4 Settings	
		Preset Stamp	90
Managing users and machine usage	113	Preventing unauthorized user access to	shared
Manual Original Counter Reset	80	folders from the machine11	
Manuals for This Machine	1		104
Max. Copy Quantity	80	Print List	
Max. E-mail Size	107	Print Priority	
Max. Reception E-mail Size	46	Print Scanner Journal	
Memory Full Auto Scan Restart	98	Printing the Counter for All Users	
Multi Bypass Tray	74	Printing the Counter for Each User	
N		Program/Change Administrator	
		Program/Change/Delete E-mail Message	
NCP Delivery Protocol		Program/Change/Delete LDAP Server	
Network		Program/Change/Delete User Text	
Network Security Level		Program/Delete Stamp / (User Stamp)	
No. of Digits for Single Page Files		Programming the LDAP server	
Number of Scanner Resends		Punch Type	99
NW Frame Type	40	Q	
0		Quitting Tray Paper Settings	6
Orientation Booklet, Magazine	87	- , ,	
Original Orientation in Duplex Mode		R	
Original Photo Type Priority		Ratio for Create Margin	84
Original Type Display		Reception Protocol	4
Original Type Priority	79	Reduce/Enlarge Ratio Priority	84
Output Copier		Registering a Group	
Output Document Server		Registering a Protection Code	158
Output Printer	33	Registering a Protection Code to a Group L	
Output Tray Settings	35		
P		Registering a Protection Code to a Single U	
	- 1	Registering a User Code	
Page Numbering		Registering an E-mail Destination	
Page Numbering in Combine / (Page Num		Registering an FTP Folder	
Page Numbering Initial Letter		Registering an SMB Folder	
Panel Features Default		Registering Folders	130
Panel Key Sound		Registering Names	114
Panel Off Timer		Registering Names to a Group	
Paper Display		Registering SMTP and LDAP Authentication	
Paper Tray Priority		Removing a Name from a Group	153
Permit SNMPv3 Communication		Reproduction Ratio	83
Permit SSL/TLS Communication		Reservation Screen Auto-off Timer	80
Ping Command		Reserve Job Mode	79

S	Superimpose / (Page Numbering)95
CADEALD	Superimpose / (Stamp Text)90
SADF Auto Reset	Switch Original Counter Display8
Scan Settings10	SWICH THE
Scanner Auto Reset Timer	SVMDOIS
Scanner Resend Interval Time	System Auto Keset Limer
Screen Color Setting	System Sidius/ Job List Display Time
Search Destination10	-
Send Settings10	·
Sending e-mail by Quick Dial11	0 -
Sending scanned files to a shared folder directly	9
	10 locate the INCP tolder manually14
Separation Line in Combine	To locate the INCL tolder using blowse the work
Set Time	· · · · · · · · · · · · · · · · · · ·
Setting values	0
Settings for the Document Server10	
Shortcut Reduce/Enlarge	
Simplified Screen Finishing Types10	
Size / (Date Stamp)	T 0 14
Size / (Page Numbering)	
Size / (Stamp Text)	·
SMB Computer Name	
SMB Work Group	
SMTP Authentication44, 16	•
SMTP Server	
Sort/Stack Shift Tray SettingS	Undate Delivery Server Destination List 10'
Stamp	User Authentication Management 5
Stamp Color	/O Llser Stamp O
Stamp Format / (Page Numbering)	/4 Lising ETP to Connect 13/
Stamp Format / (Preset Stamp)	Using NCP to Connect
Stamp Format 1-5 / (User Stamp)	Using SMB to Connect 130
Stamp Language / (Preset Stamp)	0
Stamp on Designating Slip Sheet / (Pag Numbering)	ge W
Stamp Position / (Page Numbering)	Wait Lime for Next Oria Exposure Glass 10
Stamp Priority / (Preset Stamp)	Wait lime for Neyt ()riginal(s) SAL)F (()
Stamp Setting / (Date Stamp)	Warm-un Beener
	Weekly limer 37
Stamp Setting / (Stamp Text)	Weekly limer (ode 3)
Stamp Text	Wide Large Canacity Iray
Staple Position	WINIS Configuration 40
Status Indicator	
Stored File E-mail Method10	
Superimpose / (Date Stamp)	73 7-fold Position 34

MEMO

MEMO

Trademarks

Adobe, Acrobat, Acrobat Reader, Adobe Reader and PostScript are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

EFI, Fiery and Fiery Driven are registered trademarks of Electronics for Imaging, Inc. in the U.S. Patent and Trademark Office and/or certain other foreign jurisdictions.

NetWare is a registered trademark of Novell, Inc.

Microsoft®, Windows®, Windows Server®, and Windows Vista® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

The proper names of the Windows operating systems are as follows:

* The product names of Windows 2000 are as follows:

Microsoft® Windows® 2000 Professional

Microsoft® Windows® 2000 Server

Microsoft® Windows® 2000 Advanced Server

* The product names of Windows XP are as follows:

Microsoft® Windows® XP Professional

Microsoft® Windows® XP Home Edition

Microsoft® Windows® XP Media Center Edition

Microsoft® Windows® XP Tablet PC Edition

* The product names of Windows Vista are as follows:

Microsoft® Windows Vista® Ultimate

Microsoft® Windows Vista® Business

Microsoft® Windows Vista® Home Premium

Microsoft® Windows Vista® Home Basic

Microsoft® Windows Vista® Enterprise

* The product names of Windows Server 2003 are as follows:

Microsoft® Windows Server® 2003 Standard Edition

Microsoft® Windows Server® 2003 Enterprise Edition

Microsoft® Windows Server® 2003 Web Edition

Microsoft® Windows Server® 2003 Datacenter Edition

* The product names of Windows Server 2003 R2 are as follows:

Microsoft® Windows Server® 2003 R2 Standard Edition

Microsoft® Windows Server® 2003 R2 Enterprise Edition

Microsoft® Windows Server® 2003 R2 Datacenter Edition

