Notes for Color Controller E-80

The model name of the machine for Color Controller E-80 is Pro C900S Base Unit.


This instruction sheet explains the difference between Pro C900S Base Unit and Pro C900S.

Turning On the Main Power

- 1. Turn on the power of the colour controller unit.
- 2. Open the front left cover of the machine.
- 3. Turn on the main power switch.

The main power indicator goes on.

Access to the Machine

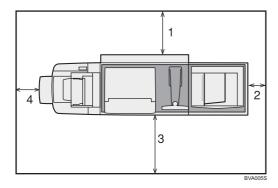

1. Rear: 80 cm (31.5 inches) or more

2. Right: 100 cm (39.4 inches) or more

3. Front: 100 cm (39.4 inches) or more

4. Left: 100 cm (39.4 inches) or more

Note

- The PCL printer driver is not available for this machine.
- For further information about your machine, refer to the manuals that come with your machine.

Copyright © 2009 Printed in France GB GB M064-7702

