


Notes for Color Controller E-80

The model name of the machine for Color Controller E-80 is Pro C900 Base Unit.

This instruction sheet explains the difference between Pro C900 Base Unit and Pro C900.

Control Panel

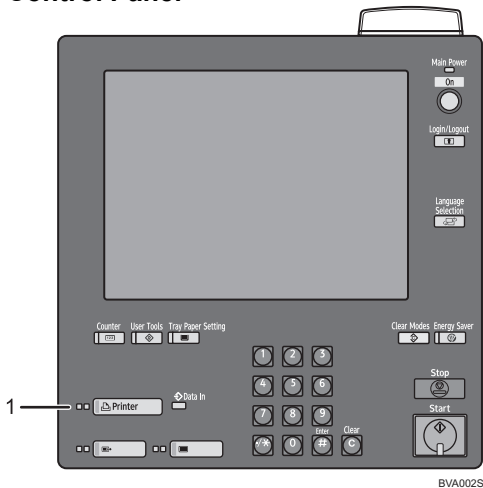

1. Printer function key


Turning On the Main Power

1. Turn on the power of the color controller unit.
2. Open the front left cover of the machine.
3. Turn on the main power switch.
The main power indicator goes on.

Turning Off the Main Power

1. Press the printer function key.
2. Press the [Fiery] tab.
3. Press [Restart Fiery], and then press [Shut Down].
4. Press [OK].
5. Press the operation switch.
The operation switch indicator goes off.
6. Make sure the operation switch indicator is not lit.
7. Open the front left cover.
8. Turn off the main power switch.
The main power indicator goes out.
9. Close the front left cover.

Access to the Machine

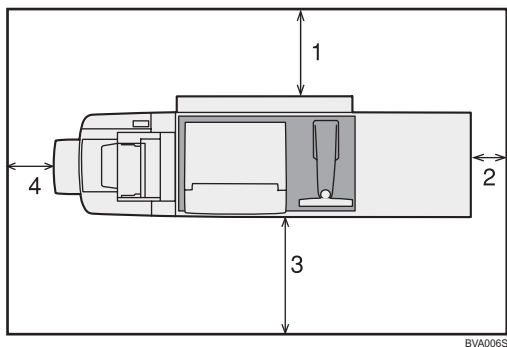

1. Rear: 80 cm (31.5 inches) or more
2. Right: 100 cm (39.4 inches) or more
3. Front: 100 cm (39.4 inches) or more
4. Left: 100 cm (39.4 inches) or more

Note

- The PCL printer driver is not available for this machine.
- For further information about your machine, refer to the manuals that come with your machine.