



Notes for Users

About removing a paper jam that occurs inside the machine

When a paper jam occurs inside the machine, open and close the maintenance cover once.

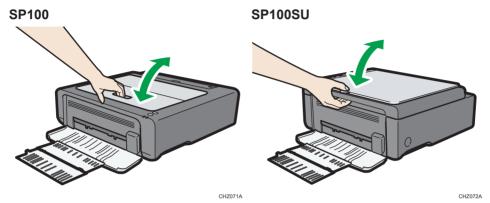

SP100SF

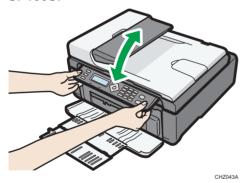

The machine will then slowly eject the jammed paper. After the jammed paper is ejected, remove it.

If the jammed paper is not ejected, open the maintenance cover again and remove jammed paper manually.



Copyright © 2012 Printed in China EN (US) EN (GB) M101-8687

