


# Attaching the Ferrite Core for the USB Cable

A ferrite core for the USB cable is supplied with this machine. The USB cable loop should be about 7 cm (3 in.) (①) from the machine end of the cable.

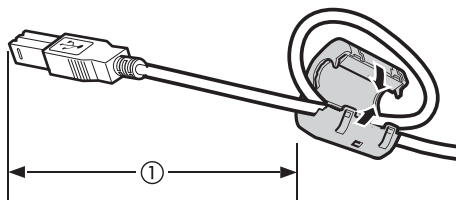

CRQ002



M1020405

Copyright © 2012  
Printed in China  
EN (US) EN (GB)  
M102-0405