

 
Quick Installation Guide

SP 110/110SF/110SU
/111/111SF/111SU


Read this manual carefully before you use the product and keep it handy for future reference. For safe and correct use, please be sure to read the Safety Information before using the machine. This manual briefly describes the procedure for installing this machine. For more details about other information, see User Guide in the CD-ROM.

1 Place to Install


SP 110SF/111SF

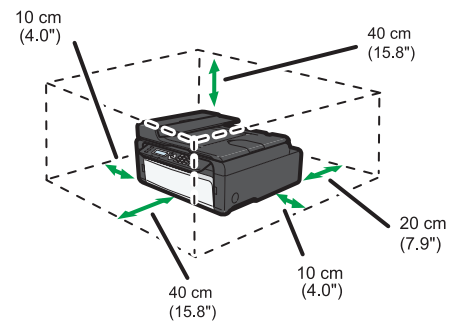

SP 110SU/111SU

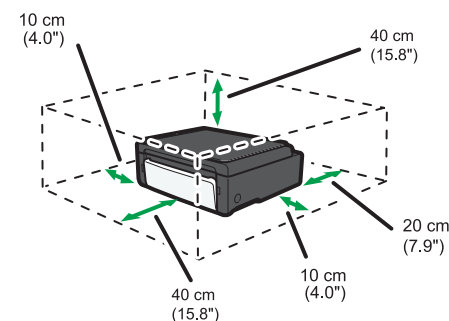 

SP 110/111

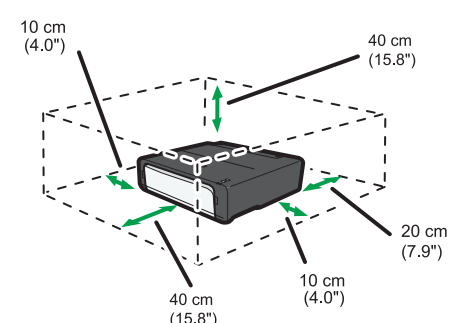 


Power Source
220-240 V, 50/60 Hz, 4 A

2 Unpacking


1 Remove the adhesive tape.

2

 
SP 110SF/111SF

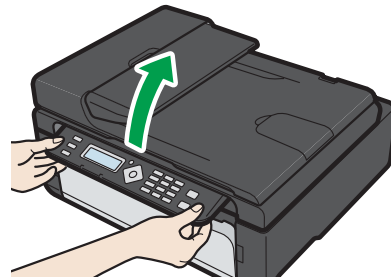


SP 110SU/111SU

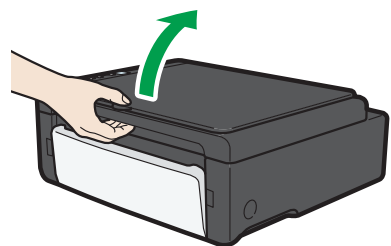 


SP 110/111

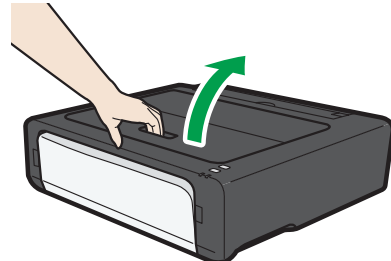 


3

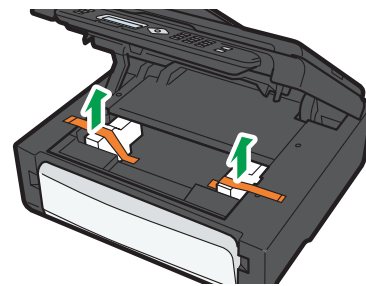 



4

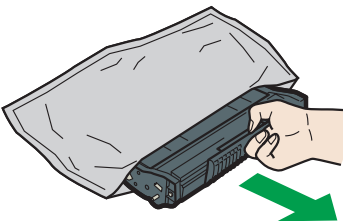 


5

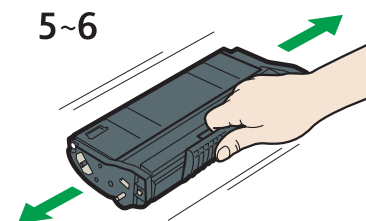 

6

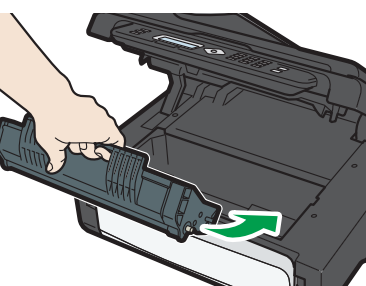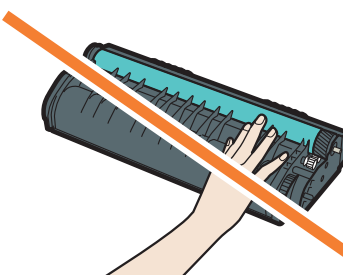  


7

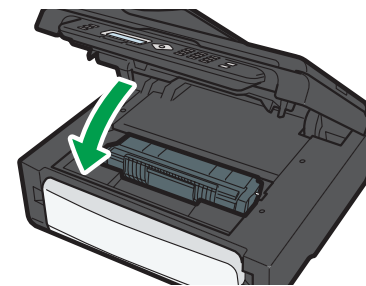 


3 Loading Paper

 
1

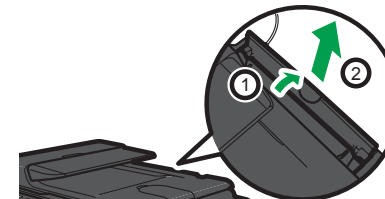


2

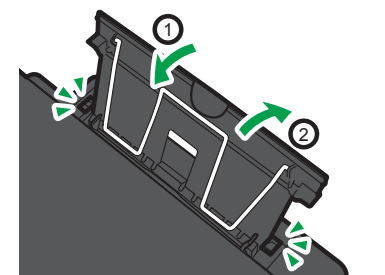 


3

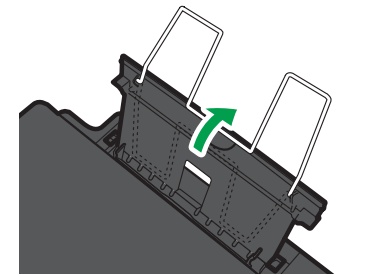 


4

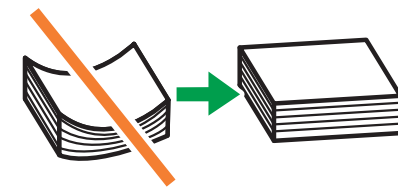 


5

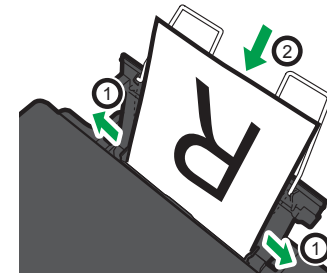 

6

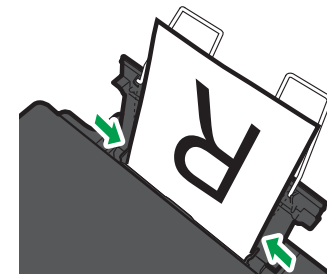 


7

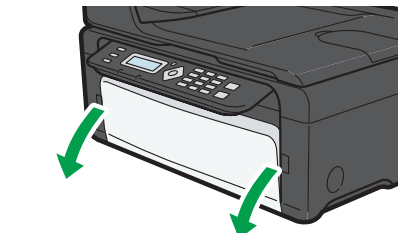 


4 Connection

 
1

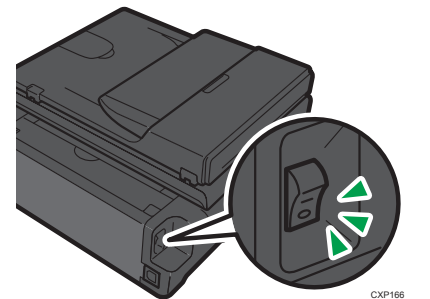

2

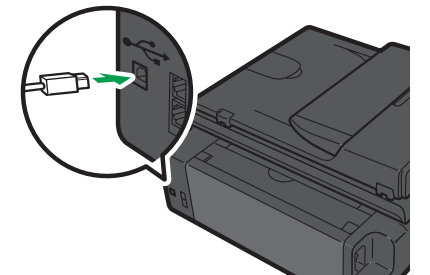 

3

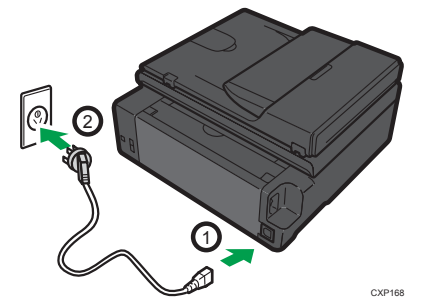 


5 Installing the Software and Reading the Manual

1




 CXP065

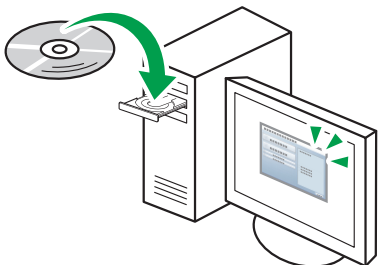


CXP066

 2 Click [USB Quick Install].

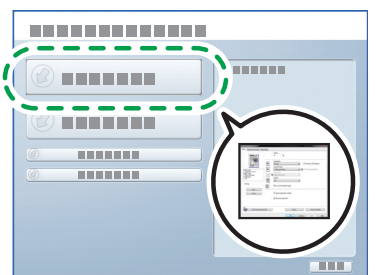


CXP067

 3 Click [Read PDF manuals].

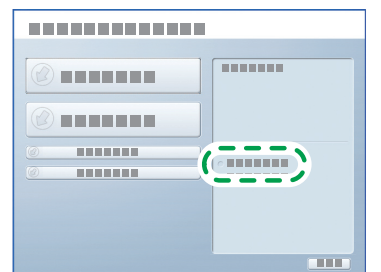

CXP073

 4

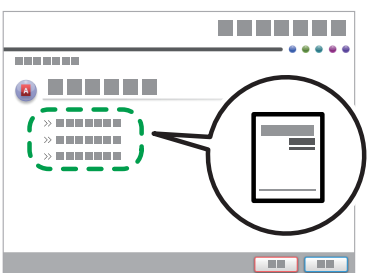

CXP074

Using the Fax Function

SP 110SF/111SF


1 Connection



CXP028


1. Port For External Telephone
2. Port For LINE

 1

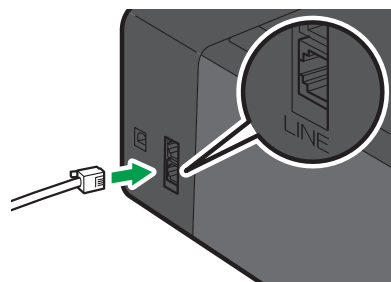

CXP169

 2

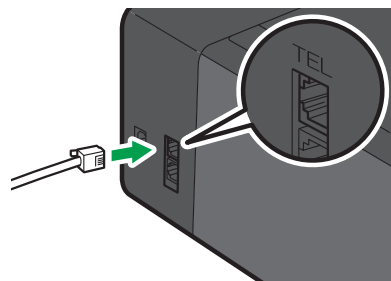

CXP170

2 Selecting the Telephone Line Type

1

Press the [用户工具] key.



CXP038

2

Press the [▼] or [▲] keys to select [Fax Features], and then press the [OK] key.

3

Press the [▼] or [▲] keys to select [Comm. Settings], and then press the [OK] key.

4

Press the [▼] or [▲] keys to select [Dial/Push Phone], and then press the [OK] key.

5

Press the [▼] or [▲] keys to select the telephone line type appropriate for your telephone service, and then press the [OK] key.

6

Press the [◀] key to return to the initial screen.

3 Selecting the Telephone Network Connection Type

1

Press the [用户工具] key.

2

Press the [▼] or [▲] keys to select [Fax Features], and then press the [OK] key.

3

Press the [▼] or [▲] keys to select [Comm. Settings], and then press the [OK] key.

4

Press the [▼] or [▲] keys to select [PSTN / PBX], and then press the [OK] key.

5

Press the [▼] or [▲] keys to select [PSTN] or [PBX], and then press the [OK] key.

6

Press the [◀] key to return to the initial screen.

4 Setting the Outside Line Access Number

If you have selected PBX, use the following procedure.

1

Press the [用户工具] key.

2

Press the [▼] or [▲] keys to select [Fax Features], and then press the [OK] key.

3

Press the [▼] or [▲] keys to select [Comm. Settings], and then press the [OK] key.

4

Press the [▼] or [▲] keys to select [PBX Access Number], and then press the [OK] key.

5

Enter the outside line access number using the number keys, and then press the [OK] key.

6

Press the [用户工具] key to return to the initial screen.

5 Basic Operation for Sending a Fax

1

Make sure that the fax mode screen is displayed.

When the copier mode screen is displayed, press the [复印/传真] key to switch to the fax mode screen.

2

Place the original on the exposure glass or in the ADF.

3

Enter the fax number using the number keys.

4

Press the [开始] key.

When you place original on the exposure glass and Memory Transmission mode is enabled, perform the following steps to scan the subsequent pages of the original.

5

Press the [1] key within 60 seconds, place the next original on the exposure glass, and then press the [OK] key.

Repeat this step until all originals are scanned.

6

Press the [2] key to start sending the fax.