

# Notes for Users

## ENERGY STAR Program

### ENERGY STAR® Program Requirements for Imaging Equipment



The ENERGY STAR® Program Requirements for Imaging Equipment encourages energy conservation by promoting energy efficient computers and other office equipment. The program backs the development and dissemination of products that feature energy saving functions.

It is an open program in which manufacturers participate voluntarily.

Targeted products are computers, monitors, printers, facsimiles, copiers, scanners, and multifunction devices. Energy Star standards and logos are internationally uniform.

This machine is equipped with the following Energy Saver modes: Energy Saver mode 1 and Energy Saver mode 2. The machine recovers from Energy Saver mode when it receives a print job, prints a received fax, or when any key is pressed.

#### ❖ Energy Saver mode 1

This machine automatically enters Energy Saver mode 1 about 30 seconds after the last operation is completed.

#### ❖ Energy Saver mode 2

This machine automatically enters Energy Saver mode 2 1 minute after the last operation is completed.

#### ❖ Specifications

Energy Saver mode 1	Power Consumption *1	45 W or less
	Default Interval	30 seconds
	Recovery Time *1	10 seconds or less
Energy Saver mode 2	Power Consumption *1	5 W or less
	Default Interval	1 minute
	Recovery Time *1	25 seconds

\*1 Recovery time and power consumption may differ depending on the conditions and environment of the machine.

