





This course explains how to service the Rev-P1/MF1 series of black-and-white printers and copiers.


To learn about this machine, please study the user’s guide and the field service manual in addition to this TTP.



# Introduction to the Course

2

No additional notes


**RICOH**  
imagine. change.

## How many Models in the Series?

- Rev-P1
  - M290-27/29: SP150 (USB)
  - M0AF-17/27/29: SP150w (USB, Wi-Fi)
- Rev-MF1
  - M291-27/29: SP150SU (USB)
  - M0AE-17/27/29: SP150SUw (USB, Wi-Fi)
- Installation and maintenance are done by the customers.
- No optional peripherals.
- Simplified operation panel
- Mac OS and Linux support
- Smallest printers and 3-in-1 MFPs in the market.

3

There is no '4-in-1' model with fax, and there is no fax option.

**Virtual Operation Panel**

- This model has only 1 button on the operation panel for the printer model, and 2 buttons for the MFP model.
- The users cannot do very much with the operation panel. So, users need an application to set up the machine and use all the available functions.
- This application is called “Virtual Operation Panel” (VOP). It is available for Windows and Mac.
- It can be used via WiFi from a smart device, or by USB from a PC.

4

## What can we do with the operation panel?

### Printer models

Power On/Off: Hold the Power Button for 0.5s+

Cancel a job: Hold the Power Button for 1s+

Print a report: Press the Power Button 3 times in 1s

### MFP models

Power On: Hold the Power Button for 0.5s+

Power Off: Hold the Power Button for 6s+

Print a report: Press the Power Button 3 times in 1s

Copy 1 page: Press the Start key

Copy 5 pages: Hold the Start key for 3s+

Enter ID Card copy mode: Press the Start and the Power Buttons at the same time

## VOP can be installed on the following operating systems.

32-bit and 64-bit Windows Vista/7/8/8.1/10, Windows Server 2003/2008, and 64-bit Windows Server 2008 R2/Server 2012/Server 2012 R2

Mac OS X 10.5 or later

Linux

What can we do with VOP?

RICOH

imagine. change.

You can print, copy, scan, and change settings from Virtual Operation Panel.

RICOH

Print

Scan

Copy

Setting

Model





5

Please note that all the images are subject to change.


<div><div></div>Summary of Changes from Previous Model</div> <div><b>RICOH</b> imagine. change.</div>		
	Rev-P1/MF1	Me-P2/MF2
Size	Smaller footprint.	Short, but footprint was big
Output tray	No output tray	50 sheets output tray available
Genuine refill	No support for genuine refill.	Genuine refill for selected countries
AIO yield	1.5K	2K or 1.2K
Positioning (pricing)	Competitive against competitors' 20ppm models	Lower than cheapest competitor 20ppm model
User Interface	1 or 2 buttons on the main unit, and a dedicated PC application	Operation panel
4-in-1 model	Not available	Available
Interface	USB only model and USB+WiFi model available	USB model only

6

No additional notes

Spec Comparison					
RICOH imagine. change.					
Model Name		Rev-MF	Me-MF2	Rev-P	Me-P2
Function		3in1	3in1	Printer	Printer
Appearance					
PPM (A4, B&W)		22ppm	16ppm	22ppm	16ppm
Duty		20K	20K	20K	20K
Size (mm)	W	350	402	350	402
	D	275	368	265	369
	H	130	163	103	119
Weight		7.0 kg	8.0 kg	4.0 kg	6.2 kg
ADF or Platen		Platen	Platen	-	-
Duplex (Auto/Manual)		x	x	Manual	Manual
Network, I/F (USB/Network/Wi-Fi)		USB USB + WiFi	USB	USB USB + WiFi	USB
OS Support		Win/Mac/Linux	Win	Win/Mac/Linux	Win
Paper Input Capacity	Tray	50	50	50	50
	Bypass	x	x	x	x
	Output	x	50	x	50

No additional notes

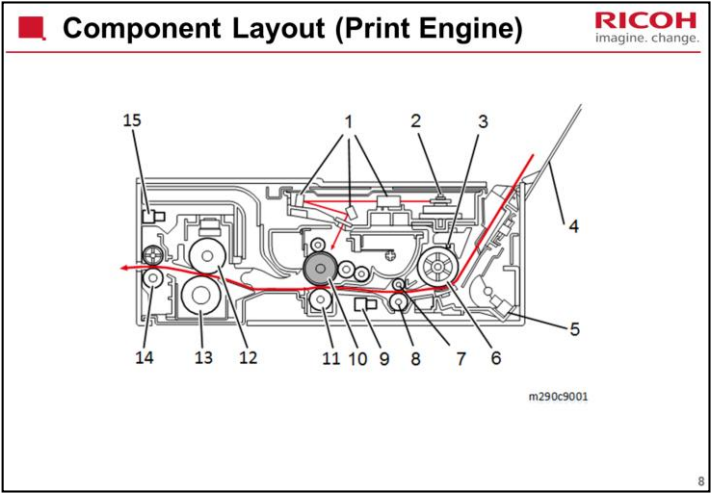

- 1. Lenses, Mirrors
- 2. Polygon Mirror
- 3. Paper Size Sensor
- 4. Paper Tray
- 5. Bottom Plate Position Sensor
- 6. Paper Feed Roller
- 7. Registration Roller
- 8. Paper Transport Roller
- 9. Registration Sensor
- 10. Drum
- 11. Image Transfer Roller
- 12. Hot Roller
- 13. Pressure Roller
- 14. Paper Exit Roller
- 15. Exit Sensor





Service Mode – CE Tools

RICOH

imagine. change.

Adjust Registration

Adjust Temperature

Adjust Other Settings

Get Error Status

Refresh Check

Cancel Update

CE Calibration

Loading Step

Head Register

0

0000

Head Register

0

0000

Head Register

0

0000

Head Register

0

0000

[1]

Side To Side

Side Head Tray

0

0000

Side Head Tray

0

0000

Side Head Tray

0

0000

Side Head Tray

0

0000

[2]

Get Default

Refresh

Apply

Before using CE Tools, make sure that a PC with CE Tools installed is connected to the machine.

To start CE Tools, click on the CE Tools icon.


The menu is on the left side of the screen.


For details, see the service manual.

10

No additional notes

10

 **Updating Firmware**


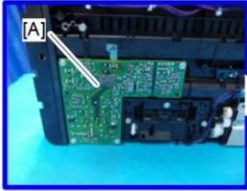
  
imagine. change.

- This is done by the customer. See the Firmware Update Guide for details.

11

No additional notes

■ After Removing the Bottom Cover




m290z3005


■ Place a mat underneath the machine to prevent damage to the HVP and PCB [A] when placing the machine with its bottom side down.

12

No additional notes




**After Replacing the Laser Unit**

  
imagine. change.


- After replacing the laser unit, check the position of the image area on the page, and adjust the registration value if necessary.
- The registration value can be adjusted using either one of the following:
  - Virtual Operation Panel
  - CE Tools

13

No additional notes




### Removing the Main Motor

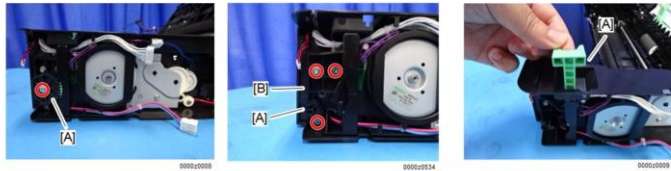

- The gears and the T-shaped stopper must go back in the same positions and orientations. Make a note of these before you remove them.

14

No additional notes

**Replacing the Main Board**  
imagine. change.

- Do not throw away the transparent sheet covering the PCB.
  - This sheet protects the harness from being scratched by the hooks on the inside of the bottom cover.
  - After replacing the PCB, re-attach the sheet. If the adhesive is weak, reinforce with double-sided tape.
- The EEPROM cannot be removed.
- So, before replacing the main board, remember the "PNP ID", "Destination Code", and "Serial No". After replacing the main board, enter them manually using CE Tools.


15

No additional notes

Replacing the PSU

RICOH

imagine. change.

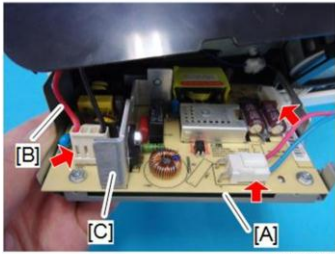

m290z3006

- Keep the harness [B] away from the heat sink [C]. Otherwise, the cover of the harness may melt because of the heat.

16

No additional notes



Model

Ricoh SP 150SUw

Device Status

Error

Toner

100%

Paper Jam: No feed

m290r5001

1

When an SC code occurs, the Device Status indicator [1] on the virtual operation panel goes red and indicates 'Error'.


2


Then look at the message area [2] for the SC code or other error message.

Some error conditions can be cleared if you press the Power button to reboot the printer.

17

No additional notes

 **Fatal SC Codes**

  
imagine. change.

- Fatal SC codes are related to problems that occur in the fusing unit. Fusing related errors require special handling because there is a risk of fire.
  - If a fatal error occurs, the machine cannot be used until the problem is solved.
  - When SC 559 Detection is enabled, the machine will shut down after three consecutive fusing jam errors. For safety, this setting should remain enabled.
  - When a fatal error (fusing related SC code) has occurred, the machine cannot be used until the technician releases the error by selecting [On] for FusingSCReset.

18

No additional notes

[illegible]

No additional notes



The End