

SP 220snw/SP 220sfnw/SP 221s/ SP 221snw/SP 221sf/SP 221sfnw

User's Guide

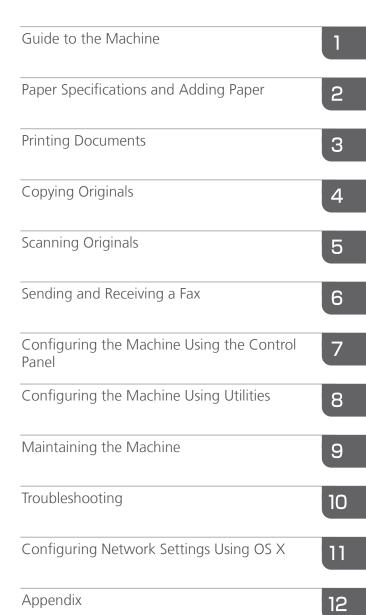

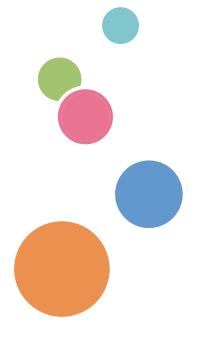

For safe and correct use, be sure to read Safety Information before using the machine.

TABLE OF CONTENTS

How to Find Information about Operations and Troubleshooting	10
Operating Manual (Printed)	10
Operating Manual (Digital Format)	10
Help	11
How to Read This Manual	13
Introduction	13
Symbols Used in This Manual	13
Model-Specific Information	13
Disclaimer	14
Notes	14
Note to Administrator	15
About IP Address	15
Differences in Performance/Functions between Different Models	15
1. Guide to the Machine	
Guide to Components	17
Exterior	17
Interior	19
Control Panel	20
Control Panel	21
Changing Operation Modes	24
Multi-access	25
About Operation Tools	27
Assigning a Setting to the Shortcut Key	29
Assigning a Setting Using the Control Panel	29
Assigning a Setting Using Web Image Monitor	29
Accessing the Function Assigned to the Shortcut Key	30
Entering Characters	31
2. Paper Specifications and Adding Paper	
Workflow for Loading Paper and Configuring Paper Sizes and Types	33
Loading Paper	
Loading Paper into Tray 1	
Loading Paper into the Bypass Tray	
Specifying Paper Type and Paper Size Using the Control Panel	42

Specifying the Paper Type	42
Specifying the Standard Paper Size	42
Specifying a Custom Paper Size	43
Specifying Paper Type and Paper Size Using Smart Organizing Monitor	45
Specifying a Custom Paper Size	45
Specifying Paper Type and Paper Size Using Web Image Monitor	47
Specifying a Custom Paper Size	47
Specifying Paper Type and Paper Size Using the Printer Driver	48
When Using Windows	48
When Using OS X	49
Supported Paper	50
Specifications of Paper Types	50
Non-Recommended Paper Types	53
Paper Storage	54
Print Area	54
Placing Originals	56
Placing Originals on the Exposure Glass	56
Placing Originals in the Auto Document Feeder	56
About Originals	57
3. Printing Documents	
What You Can Do with the Printer Function	61
Displaying the Printing Preferences Dialog Box	62
Displaying the Printing Preferences Dialog Box from the [Start] Menu	62
Displaying the Printing Preferences Dialog Box in an Application	62
Basic Operation of Printing	64
Canceling a Print Job	64
4. Copying Originals	
What You Can Do with the Copier Function	67
Copier Mode Screen	68
Basic Operation of Copying	69
Canceling a Copy	70
Making Enlarged or Reduced Copies	72
Specifying Reduce/Enlarge	72

Making Combined/2-sided Copies	74
Specifying Combined and 2-sided Copies	77
Copying an ID Card	79
Specifying Scan Settings for Copying	81
Adjusting Image Density	81
Selecting the Document Type According to Original	81
5. Scanning Originals	
What You Can Do with the Scanner Function	83
Scanner Mode Screen	84
Registering Scan Destinations	85
Modifying Scan Destinations	90
Deleting Scan Destinations.	91
Testing Transmission	91
Basic Operation of Scan to Folder	93
1 Printing the Check Sheet	93
Confirming the User Name and Computer Name	95
3 Creating a Shared Folder on a Computer	96
4Specifying Access Privileges for the Created Shared Folder	98
5 Registering a Shared Folder in the Machine's Address Book	98
6 Send Scanned Files to a Shared Folder	99
Basic Operation of Scan to E-mail	102
1 Configuring SMTP and DNS Settings	102
Registering Destination E-mail Addresses to the Address Book	103
3 Sending Scanned Files by E-mail	103
Basic Operation of Scan to FTP	106
1 Configuring FTP Server Settings	106
2 Sending Scanned Files to an FTP Server	106
Specifying the Scan Destination Using the One Touch Buttons or [Pause/Redial] Key	109
Basic Procedures for Saving Scan Files on a USB Flash Memory Device	111
Scanning from Smart Organizing Monitor	113
Scanner Settings You Can Configure for Smart Organizing Monitor	114
Basic Operation for TWAIN Scanning	11 <i>7</i>
Using TWAIN scanner	11 <i>7</i>

TWAIN scanning	11 <i>7</i>
Settings you can configure in the TWAIN dialog box	118
Basic Operation for WIA Scanning	121
Using SANE scanning	122
Specifying Scan Settings for Scanning	123
Specifying the Scanning Size According to the Size of the Original	123
Adjusting Image Density	123
Specifying Resolution	124
6. Sending and Receiving a Fax	
What You Can Do with the Fax Function	
Fax Setting Workflows	127
Fax Mode Screen	128
Setting the Date and Time	129
Registering Fax Destinations	130
Registering Fax Destinations Using the Control Panel	130
Registering Fax Destinations Using Web Image Monitor	132
Sending a Fax	135
Selecting Transmission Mode	135
Basic Operation for Sending a Fax	136
Specifying the Fax Destination	139
Useful Sending Functions	143
Specifying Scan Settings for Faxing	146
Using the Fax Function from a Computer (LAN-Fax)	148
Basic Operation for Sending Faxes from a Computer	148
Configuring Transmission Settings	150
Configuring the LAN-Fax Address Book	150
Editing a Fax Cover Sheet	153
Receiving a Fax	154
Selecting Reception Mode	154
Forwarding or Storing Faxes in Memory	158
Lists/Reports Related to Fax	162
7. Configuring the Machine Using the Control Panel	
Basic Operation	163

Menu Chart	165
Copier Features Settings	166
Scan Settings	170
Fax Features Settings	172
Address Book Settings	179
System Settings	180
Tray Paper Settings	185
Administrator Settings	187
Printing Lists/Reports	194
Printing the Configuration Page	194
Types of Lists/Reports	194
Network Settings	196
Wi-Fi Setup Wizard	200
8. Configuring the Machine Using Utilities	
Available Setting Functions Using Web Image Monitor and Smart Organizing Monitor	201
Using Web Image Monitor	202
Displaying Top Page	203
Changing the Interface Language	204
Checking the System Information	205
Status Tab	205
Counter Tab	206
Machine Information Tab	207
Configuring the System Settings	208
Sound Volume Adjustment Tab	208
Tray Paper Settings Tab	208
Copier Tab	209
Fax Tab	210
Toner Management Tab	211
Interface Tab	211
Shortcut to Function Tab	212
Registering Destinations	213
Configuring the Network Settings	214
Network Status Tab	214

IPv6 Configuration Tab	215
Network Application Tab	216
DNS Tab	217
Auto E-mail Notification Tab	218
SNMP Tab	218
SMTP Tab	219
POP3 Tab	220
Wireless Tab	221
Google Cloud Tab	222
Configuring the IPsec Settings	224
IPsec Global Settings Tab	224
IPsec Policy List Tab	224
Printing Lists/Reports	228
Configuring the Administrator Settings	229
Administrator Tab	229
Rest Settings Tab	229
Backup Setting Tab	230
Restore Setting Tab	231
Set Date/Time Tab	232
Energy Saver Mode Tab	233
Using Smart Organizing Monitor	234
Displaying the Smart Organizing Monitor Dialog	234
Checking the Status Information	235
Configuring the Machine Settings	236
Scanning Documents	237
9. Maintaining the Machine	
Replacing the Print Cartridge	239
Cautions When Cleaning	241
Cleaning the Inside of the Machine	
Cleaning the Exposure Glass	
Cleaning the Auto Document Feeder	
Moving and Transporting the Machine	
Disposal	246

Where to Inquire	246
10. Troubleshooting	
Error and Status Messages on the Screen	247
Error and Status Messages Appear on Smart Organizing Monitor	254
Clearing Misfeeds	256
Removing Jammed Paper from Tray 1	256
Removing Jammed Paper from the Bypass Tray	258
Opening the Rear Cover to Remove Jammed Paper	259
Removing Scanning Jams	260
When You Cannot Print Test Page	262
Paper Feed Problems	263
Print Quality Problems	265
Checking the Condition of the Machine	265
Checking the Printer Driver Settings	265
Printer Problems	267
Print Positions Do Not Match Display Positions	268
Copier Problems	269
Scanner Problems.	270
When Scanning Is Not Done As Expected	270
Fax Problems	271
When an error code appears on the fax journal or transmission status report	271
Common Problems.	273
11. Configuring Network Settings Using OS X	
Connecting the Machine to a Wired Network	275
Using a USB Cable	275
Using an Ethernet Cable	276
Connecting the Machine to a Wireless Network	278
Installing the Printer Driver	278
Installing Smart Organizing Monitor	278
Using the Wi-Fi Setup Wizard	279
Using the WPS Button	280
Using a PIN Code	282

12. Appendix

Transmission Using IPsec	285
Encryption and Authentication by IPsec	285
Security Association.	286
Encryption Key Exchange Settings Configuration Flow	287
Specifying Encryption Key Exchange Settings	287
Specifying IPsec Settings on the Computer	288
Enabling and Disabling IPsec Using the Control Panel	290
Notes About the Toner	291
Specifications of the Machine.	292
General Function Specifications	292
Printer Function Specifications.	295
Copier Function Specifications	296
Scanner Function Specifications	296
Fax Function Specifications	297
Consumables.	299
Print Cartridge	299
Information for This Machine	300
User Information on Electrical & Electronic Equipment @Region A (mainly Europe and As	sia)300
Note for the Battery and/or Accumulator Symbol (For EU countries only)	301
Environmental Advice for Users <u>Region</u> (mainly Europe)	301
Notice To Wireless LAN Interface Users Region A (mainly Europe)	302
NOTICE TO USERS (NEW ZEALAND)	303
Notes to users in the state of California (Notes to Users in USA)	303
Notes to users in the United States of America	303
Notes to Canadian Users of Wireless Devices	306
Notes to Canadian Users of SP 220SFNw	307
Remarques à l'attention des utilisateurs canadiens du SP 220SFNw	307
ENERGY STAR Program	308
Saving Energy	308
Copyright Information about Installed Applications	311
Apache License	311
dnsmasq	313

	GPL Version 2	. 314
	iperf	.322
	libHaru	.324
	Libsasl	. 324
	mDNSResponser	326
	OpenCV	.327
	Open SSL	.328
	WPA Supplicant	331
Tr	ademarks	.333
II.	NDEX	.337

How to Find Information about Operations and Troubleshooting

You can find support information about operating the machine and troubleshooting in the Operating Manual (printed), Operating Manual (digital format), and Help (online).

Operating Manual (Printed)

The following manuals are provided with this machine.

Safety Information

This manual explains the safety precautions that should be followed when using the machine. Be sure to read this manual before using the machine.

Setup Guide

This manual explains how to set up the machine. It also explains how to remove the machine from the packaging and how to connect it to a computer.

Initial Guide for FAX (only SP 221SF, SP 220SFNw, and SP221SFNw)

This manual explains the preparations for using the fax function. Be sure to read this manual before using the fax function.

Operating Manual (Digital Format)

Operating manuals can be viewed from Ricoh's website or from the provided CD-ROM.

Viewing from a web browser

Access the Internet from a web browser.

Confirm that the computer or the machine is connected to the network.

Download the operating manuals from http://www.ricoh.com/.

Viewing from the provided CD-ROM

Operating manuals can also be viewed from the provided CD-ROM.

- When using Windows
- 1. Insert the CD-ROM into the CD-ROM drive.
- 2. Click [Read Manual] and follow the instructions on the screen.

The PDF file manual opens.

- · When using OS X
- 1. Insert the CD-ROM into the CD-ROM drive.

- 2. Double-click [Manuals.htm] file, located on the CD-ROM root directory.
- 3. Select the language.
- 4. Click [Read PDF manuals].
- 5. Click the manual you want to refer to.

The PDF file manual opens.

Help


Use the following procedure to open the Help files learn about the printer driver and Smart Organizing Monitor functions.

For details about Smart Organizing Monitor, see page 234 "Using Smart Organizing Monitor".

Printer driver


1. Click [Help] on the printing preferences dialog box.

For the procedure on how to open the printing preferences dialog box, see page 62 "Displaying the Printing Preferences Dialog Box".

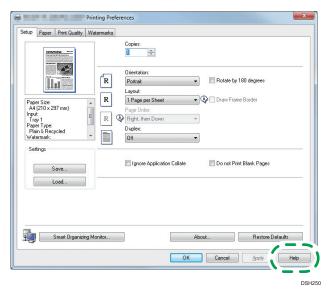

Smart Organizing Monitor

1. Click [Help] on the [Printer Configuration] screen.

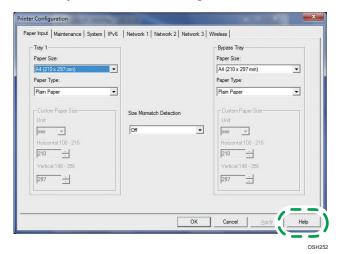

How to Read This Manual

Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

Symbols Used in This Manual

This manual uses the following symbols:



Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.




Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

Indicates the names of keys on the machine's display or control panels.

Model-Specific Information

This section explains how you can identify the region your machine belongs to.

There is a label on the rear of the machine, located in the position shown below. The label contains details that identify the region your machine belongs to. Read the label.

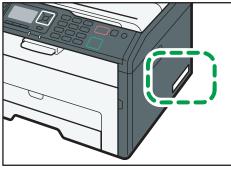

OSH101

The following information is region-specific. Read the information under the symbol that corresponds to the region of your machine.

Region A (mainly Europe and Asia)

If the label contains the following, your machine is a region A model:

- CODE XXXX -27, -29, -67
- 220-240 V

Region B (mainly North America)

If the label contains the following, your machine is a region B model:

- CODE XXXX -17
- 120-127 V



Dimensions in this manual are given in two units of measure: metric and inch. If your machine is a
Region A model, refer to the metric units. If your machine is a Region B model, refer to the inch
units.

Disclaimer

To the maximum extent permitted by applicable laws, in no event will the manufacturer be liable for any damages whatsoever arising out of failures of this machine, losses of the registered data, or the use or non-use of this product and operation manuals provided with it.

Make sure that you always copy or have backups of the data registered in this machine. Documents or data might be erased due to your operational errors or malfunctions of the machine.

In no event will the manufacturer be responsible for any documents created by you using this machine or any results from the data executed by you.

For good output quality, the manufacturer recommends that you use genuine toner from the manufacturer.

Notes

Contents of this manual are subject to change without prior notice.

The manufacturer shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the manufacturer with your office products.

Some illustrations in this manual might be slightly different from the machine.

The illustrations in this manual are for SP 220SFNw and SP 221SFNw.

Note to Administrator

Password

Certain configurations of this machine can be password-protected to prevent unauthorized modifications by others. We strongly recommend you to create your own password immediately.

The following are the operations that can be password-protected:

- Entering the [Address Book], [Network Settings], [Wi-Fi Setup Wizard], or [Admin. Tools] menu
 using the control panel
- You can access these menus without a password by factory default.
 The setting for creating a password can be found in [Admin. Tools].
- Configuring the machine using Web Image Monitor

You can configure the machine using Web Image Monitor without a password by factory default. The setting for creating a password can be found in [Administrator Settings].

For details about creating passwords, see page 229 "Configuring the Administrator Settings".

About IP Address

In this manual, "IP address" covers both IPv4 and IPv6 environments. Read the instructions that are relevant to the environment you are using.

Differences in Performance/Functions between Different Models

The differences in main performance/functions between different models are as follows:

	SP 221S	SP 220SNw SP 221SNw	SP 221SF	SP 220SFNw SP 221SFNw
Fax	Not available	Not available	Available (Standard)	Available (Standard)
ADF	Not available	Available (Standard)	Available (Standard)	Available (Standard)
GDI driver	Available	Available	Available	Available
Ethernet Port (Network)	Not available	Available	Not available	Available

	SP 221S	SP 220SNw SP 221SNw	SP 221SF	SP 220SFNw SP 221SFNw
Wireless LAN	Not available	Available	Not available	Available
Scan to Email/FTP/Folder	Not available	Available	Not available	Available
Web Image Monitor	Not available	Available	Not available	Available
Toner Management (Toner Level Indication)	Not available	Not available	Available* 1	Available* 1
Paperless FAX ^{*2}	Not available	Not available	Not available	Available

- *1 Depending on the [Toner End Option] setting, the toner management (toner level indication) function may not be available. For [Toner End Option], see page 180 "System Settings".
- *2 "Paperless FAX" refers to the function that allows you to store faxes in memory and print only the ones you want, thus saving paper. "Paperless FAX" refers to [Reception File Setting] and [Notify Forward Status] that can be specified using the machine's control panel and [Fax Received File Setting] that can be specified using Web Image Monitor. For details, see page 172 "Fax Features Settings" and page 208 "Configuring the System Settings".

1. Guide to the Machine

This chapter describes preparations for using the machine and its operating instructions.


Guide to Components

This section introduces the names of the various parts on the front and rear side of the machine and outlines their functions.

Exterior



- SP 221S is not equipped with an Auto Document Feeder (ADF).
- SP 221S and SP 221SF do not come with an Ethernet port.

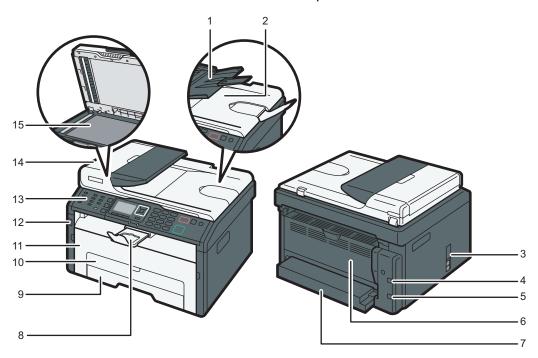


DSH103


No.	Name	Description
1	Input Tray for the ADF	Place stacks of originals here. They will feed in automatically. This tray can hold up to 35 sheets of plain paper.
2	Auto Document Feeder (Exposure Glass Cover)	The ADF is integrated with the exposure glass cover. Open this cover to place originals on the exposure glass.
3	Line and TEL Port	 Upper port: Port for external telephone connection. Lower port: G3 (analog) line Interface port for telephone line connection.
4	USB Port	For connecting the machine to a computer using a USB cable.
5	Ethernet Port	For connecting the machine to the network using a network interface cable.
6	Rear Cover	Open this cover to remove jammed paper.
7	Tray Cover	Attach this cover when you extend the tray.
8	Stop Fence	Raise this fence to prevent paper from falling off.
9	Tray 1	This tray can hold up to 150 sheets of plain paper.
10	Bypass Tray	This tray can hold one sheet of plain paper.
11	Front Cover	Open this cover to replace the print cartridge or remove jammed paper.
12	USB Flash Disk Port	Insert a USB flash disk to store scanned files using the Scan to USB function.
13	Control Panel	Contains a screen and keys for machine control.
14	ADF Cover	Open this cover to remove originals jammed in the ADF.
15	Exposure Glass	Place originals here sheet by sheet.



• If it is difficult to take printed paper out of the output tray, you can lift the control panel and make it easier to take the printed paper out.

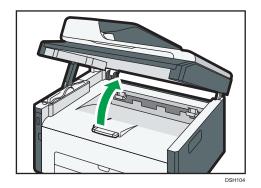


Interior

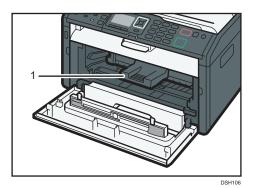

No.	Name	Description
1	Print Cartridge	A replacement consumable that is required to make prints on paper. It needs to be replaced when the alert indicator flashes red. For details about replacing the cartridge, see page 239 "Replacing the Print Cartridge".

Control Panel

SP 221S, SP 220SNw, SP 221SNw

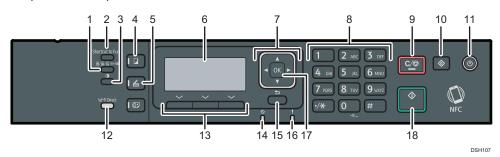


No. Name Description 1 [Image Quality] key Press to select the scan quality for the current job. 2 Press to use the function pre-assigned to this key. [Shortcut to Func.] key 3 [Density] key Press to adjust the image density for the current job. Press to switch the machine to copier mode. 4 [Copy] key Press to switch the machine to scanner mode. 5 [Scanner] key 6 Screen Displays the current status and messages. 7 Scroll Keys Press to move the cursor in the direction indicated by the key. 8 Number Keys Press to enter numerical values when specifying settings such as fax numbers and copy quantities or to enter letters when specifying names. 9 [Clear/Stop] key Press to cancel or stop print jobs, document copying, scanning, fax transmission/reception, and other actions in progress. 10 [User Tools] key Press to display the menu for configuring the machine's system settings. 11 [Power] key This indicator lights up blue when the machine is turned on. 12 [Wi-Fi Direct] key (only Pressing this key while Wi-Fi is disabled activates Wi-Fi and SP 220SNw and SP reboots the machine automatically. Press this key while Wi-Fi is 221SNw) enabled to activate or deactivate the Wi-Fi Direct function. This indicator lights blue when the Wi-Fi Direct function is active.

П

No.	Name	Description
13	Selection keys	Press the key underneath an item shown on the bottom line of the screen to select it.
14	Data In Indicator	This indicator flashes blue when the machine receives print data from the host device.
15	[Back] key	Press to cancel the last operation or to return to the previous level of the menu tree.
16	Alert Indicator	This indicator lights up red when the machine runs out of paper or consumables, when the paper settings do not match the settings specified by the driver, or when other errors occur. It flashes when the toner is nearly empty.
17	[OK] Key	Press to confirm settings and specified values, or to move to the next menu level.
18	[Start] key	Press to start fax transmission/reception, scanning, or copying.

Control Panel

SP 221SF, SP 220SFNw, SP 221SFNw

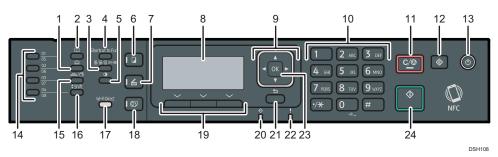

No.	Name	Description
1	[On Hook Dial] key	Press to use on-hook dialing to check the destination's status when sending a fax.
2	[Address Book] key	Press to select a scan or fax destination from the Address Book.
3	[Image Quality] key	Press to select the scan quality for the current job.
4	[Shortcut to Func.] key	Press to use the function pre-assigned to this key.


No.	Name	Description
5	[Density] key	Press to adjust the image density for the current job.
6	[Copy] key	Press to switch the machine to copier mode.
7	[Scanner] key	Press to switch the machine to scanner mode.
8	Screen	Displays the current status and messages.
9	Scroll Keys	Press to move the cursor in the direction indicated by the key.
10	Number Keys	Press to enter numerical values when specifying settings such as fax numbers and copy quantities or to enter letters when specifying names.
11	[Clear/Stop] key	Press to cancel or stop print jobs, document copying, scanning, fax transmission/reception, and other actions in progress.
12	[User Tools] key	Press to display the menu for configuring the machine's system settings.
13	[Power] key	This indicator lights up blue when the machine is turned on.
14	One Touch buttons	Press to select a scan or fax Quick Dial destination.
15	[Pause/Redial] key	Press to insert a pause in a fax number or to display the last used scan or fax destination.
16	[Shift] key	Press to use the Quick Dial numbers 5 to 8 when specifying a scan or fax destination using the One Touch buttons.
17	[Wi-Fi Direct] key (only SP 220SFNw and SP 221SFNw)	Pressing this key while Wi-Fi is disabled activates Wi-Fi and reboots the machine automatically. Press this key while Wi-Fi is enabled to activate or deactivate the Wi-Fi Direct function. This indicator lights blue when the Wi-Fi Direct function is active.
18	[Facsimile] key	Press to switch the machine to fax mode.
19	Selection keys	Press the key underneath an item shown on the bottom line of the screen to select it.
20	Data In Indicator	This indicator flashes blue when the machine receives print data from the host device.
21	[Back] key	Press to cancel the last operation or to return to the previous level of the menu tree.

No.	Name	Description
22	Alert Indicator	This indicator lights up red when the machine runs out of paper or consumables, when the paper settings do not match the settings specified by the driver, or when other errors occur. It flashes when the toner is nearly empty.
23	[OK] Key	Press to confirm settings and specified values, or to move to the next menu level.
24	[Start] key	Press to start fax transmission/reception, scanning, or copying.

Changing Operation Modes

You can switch between copier, scanner, and fax modes by pressing the corresponding keys.

Press the [Copy], [Scanner], or [Facsimile] (only SP 221SF, SP 220SFNw, and SP 221SFNw) key to activate each mode. While in each mode, the corresponding key lights up.

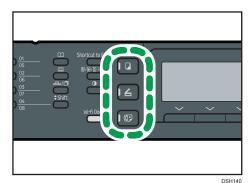

Function Priority

By default, copy mode is selected when the machine is turned on, or if the preset [System Auto Reset Timer] time passes with no operation while the initial screen of the current mode is displayed. You can change the selected mode using [Function Priority] under [Admin. Tools].

For details about [System Auto Reset Timer] or [Function Priority], see page 187 "Administrator Settings".

П

ſ

Multi-access

This machine can perform multiple jobs using different functions, such as copying and faxing, at the same time. Performing multiple functions simultaneously is called "Multi-access".

The following table shows the functions that can be performed simultaneously.

Current job	Job that you want to execute simultaneously
Copying	 Fax transmission Fax reception Receiving a print job from a computer (the actual printing starts after copying is finished) Receiving a LAN-Fax job from a computer LAN-Fax transmission
Scanning	 Fax transmission Fax reception Printing a fax received in the machine's memory Printing Receiving a LAN-Fax job from a computer LAN-Fax transmission
Scanning a fax into the machine's memory before transmission	 Fax transmission Fax reception Printing a fax received in the machine's memory Printing Receiving a LAN-Fax job from a computer
Fax transmission	 Printing a fax received in the machine's memory Printing Receiving a LAN-Fax job from a computer Copying Scanning Scanning a fax into the machine's memory before transmission

Current job	Job that you want to execute simultaneously
Fax reception	 Scanning *1 Scanning a fax into the machine's memory before transmission Receiving a LAN-Fax job from a computer Copying
Printing a fax received in the machine's memory	 Scanning *1 Scanning a fax into the machine's memory before transmission Fax transmission Receiving a LAN-Fax job from a computer LAN-Fax transmission
Printing	 Scanning Scanning a fax into the machine's memory before transmission Fax transmission LAN-Fax transmission
Receiving a LAN-Fax job from a computer	 Copying Scanning Fax reception Printing a fax received in the machine's memory LAN-Fax transmission
LAN-Fax transmission	 Copying Scanning Scanning a fax into the machine's memory before transmission Printing a fax received in the machine's memory Printing Receiving a LAN-Fax job from a computer

*1 Fax printing may take longer than normal if you scan using the control panel at the same time, especially when scanning multiple pages using the exposure glass.



• If you try to use a function that cannot be performed simultaneously, you will hear a beep sound from the machine or see a failure message pop up on your computer screen. In this case, try again after the current job is finished.

1

About Operation Tools

This section explains the operation tools of this machine.


Depending on the model, Web Image Monitor may not be available. For details about model-specific differences, see "Differences in Performance/Functions between Different Models" in page 13 "How to Read This Manual".

Control Panel

The control panel contains a screen and keys for controlling the machine. They allow you to configure the machine's various settings.

For details about how to use the control panel, see page 163 "Configuring the Machine Using the Control Panel".

Smart Organizing Monitor

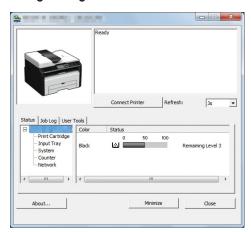

Install this utility on your computer from the included CD-ROM before using it.

Using Smart Organizing Monitor, you can check the machine's status, configure its settings, and use other functions.

For details about how to use Smart Organizing Monitor, see page 234 "Using Smart Organizing Monitor".

Web Image Monitor



You can check the machine's status and configure its settings by accessing the machine directly using Web Image Monitor.

For details about how to use Web Image Monitor, see page 201 "Configuring the Machine Using Utilities".

1

Assigning a Setting to the Shortcut Key

You can access a frequently-used setting with a single keystroke by assigning the setting to the [Shortcut to Func.] key.

You can configure settings for the following 3 function:

- ID Card Copy Mode
- Fax Immediate TX
- Select Scanner Dest.

Depending on the model, Web Image Monitor may not be available. For details about model-specific differences, see "Differences in Performance/Functions between Different Models" in page 13 "How to Read This Manual".

Assigning a Setting Using the Control Panel

- 1. Press the [User Tools] key.
- 2. Press the [▲] or [▼] key to select [Admin. Tools], and then press the [OK] key.
- 3. If you are requested to enter a password, enter the password using the number keys, and then press the [OK] key.
- 4. Press the [♠] or [▼] key to select [Shortcut to Function], and then press the [OK] key.
- Press the [▲] or [▼] key to select the setting you want to configure, and then press the [OK] key.
- 6. Press the [User Tools] key to return to the initial screen.



A password for accessing the [Admin. Tools] menu can be specified in [Admin. Tools Lock].

Assigning a Setting Using Web Image Monitor


- 1. Start the web browser and enter "http://(the machine's IP address)/" in the address bar.
- 2. Click [System Settings].
- Click the [Shortcut to Function] tab.
- 4. Specify the setting you want to configure from [Shortcut to Function Settings].
- 5. Enter the administrator password if required.
- 6. Click [OK].
- 7. Close the web browser.



• For details about passwords, see page 229 "Configuring the Administrator Settings".

Accessing the Function Assigned to the Shortcut Key

1. Press the [Shortcut to Func.] key.

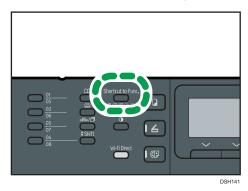

The function assigned to the [Shortcut to Func.] key is displayed.

П

Entering Characters

To enter characters, use keys as follows:

To enter a digit

Press a number key.

To delete a character

Press the [◀] key.

To enter a fax number

• To enter a number

Use the number keys.

• To enter characters other than digits

"X": Press [X]. "#": Press [#].

Pause: Press the [Pause/Redial] key. "P" appears on the screen.

Space: Press the [▶] key.

To enter a name

Letters, numbers, and symbols can be entered using the number keys.

To enter two characters consecutively that use the same number key, press the [▶] key to move the cursor before entering the second character.

Number		Number of key press 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31																													
key	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
1	1																														
2	Α	В	С	а	b	С	Ã	Ä	Å	Æ	Ç	à	á	â	ã	ä	æ	ç	2												
3	D	Е	F	d	е	f	É	è	é	ê	ë	3																			
4	G	Н	1	g	h	i	ì	í	î	ï	4																				
5	J	K	L	j	k	I	5																								
6	М	Ν	0	m	n	0	Ñ	Õ	Ö	Ø	Œ	ñ	Ò	Ó	ô	õ	ö	ø	œ	6											
7	Р	Q	R	S	р	q	r	s	ß	7																					
8	Т	U	٧	t	u	٧	Ü	ù	ú	û	ü	8																			
9	W	Χ	Υ	Z	w	х	У	z	ÿ	9																					
0	0	-		!	"	,	;	:	٨	`	_	=	/		,	?	\$	@	%	&	+	()	[]	{	}	<	>	~	١
×	×																														
#	#																														

DCT843

Note

• Characters you can enter depend on the setting you are configuring.

1

• If the number you entered is too large or too small for the setting, it will not be accepted. If you press the [OK] key, the machine will increase or decrease the number to the minimum or maximum value for the setting.


Paper Specifications and Adding Paper

This chapter describes how to load paper and originals and about their specifications.

Workflow for Loading Paper and Configuring Paper Sizes and Types

This section explains how to load paper and the operations required after loading paper.

After following the procedures below, you can copy or print on the paper that is loaded in the machine.

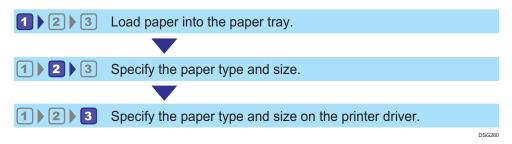

For details about the procedures, refer to the next page.

Procedure	Reference
1	 When loading paper into Tray 1 See page 35 "Loading Paper into Tray 1". When loading paper into the bypass tray See page 40 "Loading Paper into the Bypass Tray".
2	 There are three ways to specify the paper type and size. When using the control panel See page 42 "Specifying Paper Type and Paper Size Using the Control Panel". When using Web Image Monitor See page 47 "Specifying Paper Type and Paper Size Using Web Image Monitor". When using Smart Organizing Monitor See page 45 "Specifying Paper Type and Paper Size Using Smart Organizing Monitor".

Procedure	Reference
3	See page 48 "Specifying Paper Type and Paper Size Using the Printer Driver".

For details about supported paper, see page 50 "Supported Paper".

Loading Paper

This section explains how to load paper into the paper tray and the bypass tray.



• When loading paper, take care not to trap or injure your fingers.

For information about supported paper, precautions for storing paper and print areas, see page 50 "Supported Paper".



 When loading paper, be sure to configure the paper size and paper type for the bypass tray and Tray 1. When printing a document, specify the paper size and paper type and select the paper tray in the printer driver so that the settings configured when paper is loaded can be used for printing.

Loading Paper into Tray 1


Extend this tray to load A5 paper vertically or to load paper larger than A4 (297 mm). For details, see page 38 "Extending Tray 1 to load paper".

1. Pull Tray 1 out slowly, and then remove it using both hands.




Place the tray on a flat surface.

2. Slide the side and end paper guides outward.

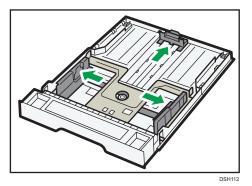


- 3. Fan the paper before loading it in the tray.
- 4. Load the new paper stack print side down.


Make sure paper is not stacked higher than the upper limit marked inside the side paper guide.

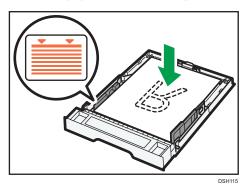


Align the end paper guide to the paper size mark in the tray.

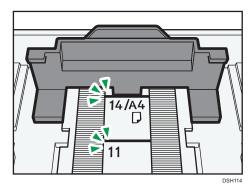

5. Check there are no gaps between the paper and the paper guides (both side and end paper guides).

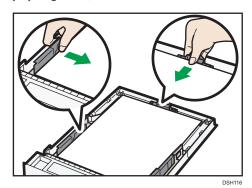


6. Carefully push Tray 1 straight into the machine.

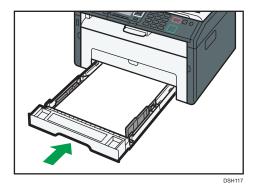

To avoid paper jams, make sure the tray is securely inserted.

To deliver the sheets face up, open the rear cover.

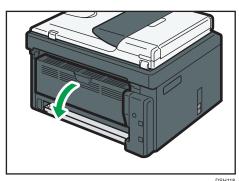

ропі


UNote

• Sheets can be delivered face down from the output tray without opening the rear cover.


Extending Tray 1 to load paper

This section explains how to load paper larger than A4 (297 mm) into the machine.

1. Remove the tray cover.

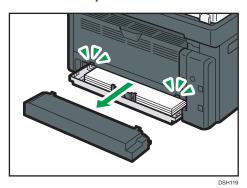


- 2. Pull Tray 1 out slowly, and then remove it using both hands.
- 3. Release the extender locks on both sides of the tray, and then pull out the extender.

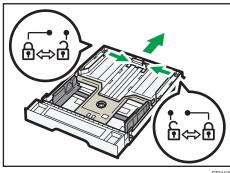

DSH12


Make sure the extender's inner surface and the scale are aligned.

You can adjust the length of the extender in three steps. When using A5 SEF, A4 or letter size paper, adjust the length to the position indicated by the mark "2" in the tray.

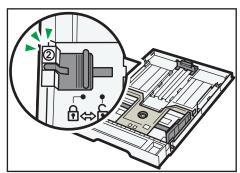


DSH12


When using legal size paper, adjust the length to the position indicated by the mark " \mathfrak{J} " in the tray.

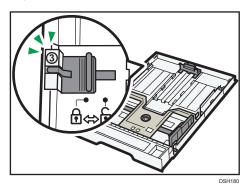

4. Lock the extender.

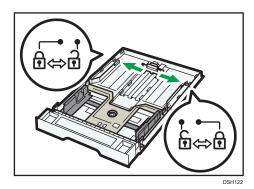

- 5. Follow Steps 2 to 7 in "Loading Paper into Tray 1".
- 6. Attach the tray cover.

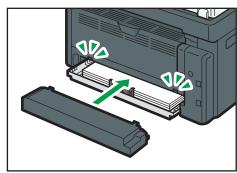

DSH123


UNote

Legal paper or custom-size paper longer than A4 must be loaded without attaching the tray cover.
 (Region A only)


Loading Paper into the Bypass Tray

Important

- Do not load paper in the bypass tray unless the message "Ready" is displayed.
- 1. Open the bypass tray.

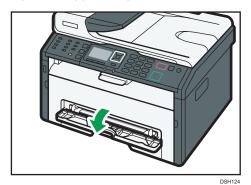


2. Slide the side guides outward, load paper with the print side up, and then push in until it stops against the machine.

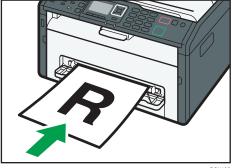


DSH125

3. Adjust the side guides to the paper width.

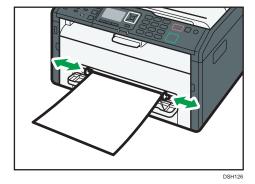

To deliver the sheets face up, open the rear cover.

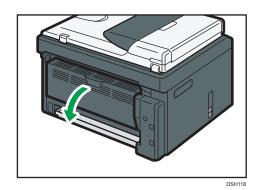

UNote

• Sheets can be delivered face down from the output tray without opening the rear cover.

Specifying Paper Type and Paper Size Using the Control Panel

This section describes how to specify the paper size and paper type using the control panel.




- Paper type and size can also be specified using the printer driver. For details, see the printer driver Help.
- If [Auto Continue] under [System Settings] is enabled, printing stops temporarily if a paper type/ size error is detected. The printing restarts automatically with the settings made with the control panel after about ten seconds. For details about [Auto Continue], see page 180 "System Settings".

Specifying the Paper Type

This section describes how to specify the paper type.

1. Press the [User Tools] key.

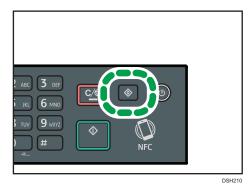

- 2. Press the [▲] or [▼] key to select [Tray Paper Settings], and then press the [OK] key.
- Press the [▲] or [▼] key to select the paper type setting for the desired tray, and then press the [OK] key.
- 4. Press the [♠] or [▼] key to select the desired paper type, and then press the [OK] key.
- 5. Press the [User Tools] key to return to the initial screen.

U Note


• You can press the [Back] key to exit to the previous level of the menu tree.

Specifying the Standard Paper Size

This section describes how to specify the standard paper size.

2

1. Press the [User Tools] key.

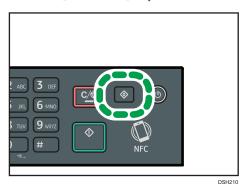

- 2. Press the [▲] or [▼] key to select [Tray Paper Settings], and then press the [OK] key.
- Press the [▲] or [▼] key to select the paper size setting for the desired tray, and then press the [OK] key.
- Press the [♠], (▼), (◄), or (▶) key to select the desired paper size, and then press the [OK] key.
- 5. Press the [User Tools] key to return to the initial screen.




• You can press the [Back] key to exit to the previous level of the menu tree.

Specifying a Custom Paper Size

This section describes how to specify a custom paper size.

1. Press the [User Tools] key.

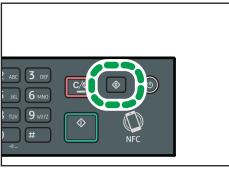

- 2. Press the [▲] or [▼] key to select [Tray Paper Settings], and then press the [OK] key.
- 3. Press the [A] or [V] key to select the paper size setting for the desired tray, and then press the [OK] key.
- 4. Press the [♠], [▼], [◄], or [▶] key to select [Custom Size], and then press the [OK] key.

- 5. Press the [▲] or [▼] key to select [mm] or [inch], and then press the [OK] key.
- Enter the width using number keys, and then press the [OK] key.
 To enter a decimal point, press [★].
- 7. Enter the length using number keys, and then press the [OK] key.
 To enter a decimal point, press [*X].
- 8. Press the [User Tools] key to return to the initial screen.




• You can press the [Back] key to exit to the previous level of the menu tree.

Specifying Paper Type and Paper Size Using Smart Organizing Monitor

The procedure in this section is an example based on Windows 7. The actual procedure may vary depending on the operating system you are using.

- 1. On the [Start] menu, click [All Programs].
- 2. Click [SP 220 Series Software Utilities].
- 3. Click [Smart Organizing Monitor for SP 220 Series].

Smart Organizing Monitor starts.

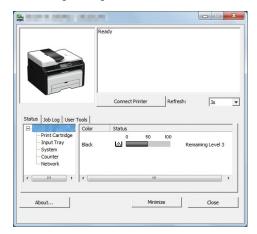

- 4. If the machine you are using is not selected, click [Connect Printer], and then do one of the following:
 - Select the machine's model.
 - Enter the IP address of the machine manually.
 - Click [Search Network Printer] to search the machine via the network.
- 5. Click [OK].
- On the [User Tools] tab, click [Printer Configuration].

If you are requested to enter an access code, enter the access code and then click [OK]. The default access code is "Admin".

- 7. On the [Paper Input] tab, select the paper type and paper size, and then click [OK].
- 8. Click [Close].

Specifying a Custom Paper Size

1. On the [Start] menu, click [All Programs].

- 2. Click [SP 220 Series Software Utilities].
- 3. Click [Smart Organizing Monitor for SP 220 Series].
- 4. If the machine you are using is not selected, click [Connect Printer], and then do one of the following:
 - Select the machine's model.
 - Enter the IP address of the machine manually.
 - Click [Search Network Printer] to search the machine via the network.
- 5. Click [OK].
- 6. On the [User Tools] tab, click [Printer Configuration].

If you are requested to enter an access code, enter the access code and then click [OK]. The default access code is "Admin".

- 7. On the [Paper Input] tab, select [Custom Paper Size] in the [Paper Size] list.
- 8. In the [Unit] list, select [mm] or [inch].
- 9. In the [Horizontal] box and [Vertical] box, specify the width and length.
- 10. Click [OK].
- 11. Click [Close].

Specifying Paper Type and Paper Size Using Web Image Monitor

This section describes how to specify paper sizes and types using Web Image Monitor.

Depending on the model, Web Image Monitor may not be available. For details about model-specific differences, see "Differences in Performance/Functions between Different Models" in page 13 "How to Read This Manual".

1. Start the web browser and access the machine by entering its IP address.

The top page of Web Image Monitor appears.



- 2. Click [System Settings].
- 3. Click [Tray Paper Settings].
- 4. Select the paper type and paper size for the tray you want to use.
- 5. Enter the administrator password if required.
- 6. Click [OK].
- 7. Close the web browser.

Specifying a Custom Paper Size

- 1. Start the web browser and access the machine by entering the IP address.
- 2. Click [System Settings].
- 3. Click [Tray Paper Settings].
- 4. Select [Custom Size] in the [Paper Size] list.
- 5. Select [mm] or [inch] and specify the width and length.
- 6. Enter the administrator password if required.
- 7. Click [OK].
- 8. Close the web browser.

Specifying Paper Type and Paper Size Using the Printer Driver



Make sure that the paper type and size specified with the printer driver matches the type and size
of the paper loaded in the tray. Since this machine does not detect paper sizes automatically, the
type or size of the paper may be mismatched and the print job may not print correctly.


When Using Windows

The procedure in this section is an example based on Windows 7. The actual procedure may vary depending on the operating system you are using.

1. Open the [Printing Preferences] dialog box from the printer driver.

For information of how to open the printer driver properties from [Devices and Printers], see page 62 "Displaying the Printing Preferences Dialog Box".

The [Printing Preferences] dialog box appears.

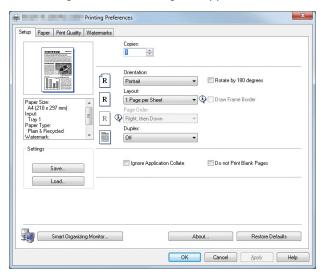

- 2. Click the [Paper] tab.
- 3. In the [Input Tray:] list, select the paper tray you want to use for printing.
- 4. In the [Paper Type:] list, select the type of paper that is loaded in the paper tray.
- Select the [Print On] check box and select the size of the paper that is loaded in the paper tray.

Clear the [Fit to Print Size] check box as necessary.

6. Click [OK].

When Using OS X

The procedure in this section is an example based on OS X 10.11. The actual procedure may vary depending on the operating system you are using.

- 1. Start System Preferences.
- 2. Click [Printers & Scanners].
- 3. Select the printer you are using.
- 4. In the [Paper Size:] list, select the size of the document to be printed.
- 5. Select [Printer Features] in the pop-up menu.
- 6. In the [Media Type:] list, select the type of paper that is loaded in the paper tray.

Supported Paper

€ Important

- After loading paper in the tray, specify the paper type and size using the control panel or using Smart Organizing Monitor and printer driver. This machine does not detect the paper size automatically.
- When loading custom size paper, specify the width and length using the control panel and the printer driver.

Туре	Size	Weight	Capacity
Plain Paper Recycled Paper Thick Paper 1 Thin Paper Letterhead Preprinted Paper Prepunched Paper Bond Paper Cardstock Color Paper	A4, $8^{1}/_{2} \times 11$, B5 JIS, B6 JIS, A5 LEF, A5 SEF, A6, $8^{1}/_{2} \times 14$, $8^{1}/_{2} \times 13$, 8.5 × 13.4, 8.5 × 13.6, 16K, 8.11 × 13.3, $5^{1}/_{2} \times 8^{1}/_{2}$	 Tray 1 60 to 105 g/m² (16 to 28 lb.) Bypass tray 52 to 128 g/m² (14 to 34 lb.) 	 Tray 1 150 sheets Bypass tray 1 sheet (80 g/m², 20 lb.)
Plain Paper Recycled Paper Thick Paper 1 Thin Paper Letterhead Preprinted Paper Prepunched Paper Bond Paper Cardstock Color Paper	Custom size: 100 to 216 mm in width, 148 to 356 mm in length (3.94 to 8.50 inches in width, 5.83 to 14.02 inches in length)	 Tray 1 60 to 105 g/m² (16 to 28 lb.) Bypass tray 52 to 128 g/m² (14 to 34 lb.) 	 Tray 1 150 sheets Bypass tray 1 sheet (80 g/m², 20 lb.)

Specifications of Paper Types

The following tables describe the types of paper that can be used with this machine.

- Depending on the paper type, the toner may take a while to dry. Before handling printed sheets, make sure that they have fully dried. Otherwise, the toner may smudge.
- Print quality can be guaranteed only if recommended paper is used. For more information about the recommended paper, contact your sales or service representative.

Plain Paper

ltem	Description
Paper thickness	65 to 99 g/m² (17 to 27 lb.)
Supported paper tray	Tray 1 and bypass tray

Thick Paper 1

ltem	Description
Paper thickness	100 to 130 g/m² (27 to 35 lb.)
Supported paper tray	Tray 1 and bypass tray

Thin Paper

ltem	Description
Paper thickness	52 to 64 g/m² (14 to 16 lb.)
Supported paper tray	Tray 1 and bypass tray

Recycled Paper

ltem	Description
Paper thickness	75 to 90 g/m² (20 to 24 lb.)
Supported paper tray	Tray 1 and bypass tray
Notes	If the paper thickness is outside the specified range, select [Thin Paper], [Plain Paper], or [Thick Paper 1].

Color Paper

ltem	Description
Paper thickness	75 to 90 g/m² (20 to 24 lb.)
Supported paper tray	Tray 1 and bypass tray
Notes	If the paper thickness is outside the specified range, select [Thin Paper], [Plain Paper], or [Thick Paper 1].

Preprinted Paper

ltem	Description
Paper thickness	75 to 90 g/m² (20 to 24 lb.)
Supported paper tray	Tray 1 and bypass tray
Notes	If the paper thickness is outside the specified range, select [Thin Paper], [Plain Paper], or [Thick Paper 1].

Prepunched Paper

ltem	Description
Paper thickness	75 to 90 g/m² (20 to 24 lb.)
Supported paper tray	Tray 1 and bypass tray
Notes	If the paper thickness is outside the specified range, select [Thin Paper], [Plain Paper], or [Thick Paper 1].

Letterhead

ltem	Description
Paper thickness	100 to 130 g/m ² (27 to 35 lb.)
Supported paper tray	Tray 1 and bypass tray
Notes	Paper that has a thickness outside the specified range cannot be printed onto.

Bond Paper

ltem	Description
Paper thickness	100 to 130 g/m ² (28 to 43 lb.)
Supported paper tray	Tray 1 and bypass tray
Notes	If the paper thickness is outside the specified range, select [Thin Paper], [Plain Paper], or [Thick Paper 1].

Cardstock

ltem	Description
Paper thickness	100 to 130 g/m² (27 to 35 lb.)
Supported paper tray	Tray 1 and bypass tray
Notes	If the paper thickness is outside the specified range, select [Thin Paper], [Plain Paper], or [Thick Paper 1].

Non-Recommended Paper Types

Do not use the following types of paper:

- Ink-jet printer paper
- Bent, folded, or creased paper
- Curled or twisted paper
- Torn paper
- Wrinkled paper
- Damp paper
- Dirty or damaged paper
- Paper that is dry enough to emit static electricity
- Paper that has already been printed onto, except a preprinted letterhead paper.
 Malfunctions are especially likely when using paper printed on by other than a laser printer (e.g.monochrome and color copiers, ink-jet printers, etc.)
- Special paper, such as thermal paper and carbon paper
- · Paper weighing heavier or lighter than the limit

- Paper with windows, holes, perforations, cutouts, or embossing
- Adhesive label paper on which glue or base paper is exposed
- Paper with clips or staples



- When loading paper, take care not to touch the surface of the paper.
- Even if paper is adequate for the machine, poorly stored paper can cause paper misfeeds, print
 quality degradation, or malfunctions.

Paper Storage



 Store paper appropriately. If the paper is stored incorrectly, misfeeds, lower printing quality, or malfunctions may result.


When storing paper:

- Do not store paper in a humid place.
- Do not store paper in direct sunlight.
- Do not stand paper on its edge.
- Store any leftover paper in a wrapping or box supplied with the paper.

Print Area

The diagram below shows the area of the paper that the machine can print on.


From the printer driver

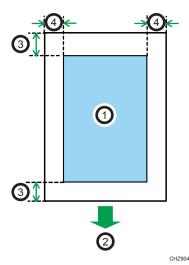

54

- 1. Print area
- 2. Feed direction
- 3. Approx. 4.2 mm (0.2 inches)
- 4. Approx. 4.2 mm (0.2 inches)

Copier function

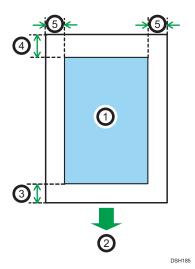

- 1. Print area
- 2. Feed direction
- 3. Approx. 4.0 mm (0.2 inches)
- 4. Approx. 3.3 mm (0.1 inches)
- 5. Approx. 3.0 mm (0.1 inches)



• The print area may vary depending on the paper size, printer language and printer driver settings.

Placing Originals

This section describes the types of originals you can set and how to place them.

Placing Originals on the Exposure Glass


This section describes the procedure for placing originals on the exposure glass.



- Do not place originals before any correction fluid and toner has completely dried. Doing so may
 make marks on the exposure glass that will appear on copies.
- The original in the ADF takes precedence over the original on the exposure glass if you place originals both in the ADF and on the exposure glass.



- Because colors made by marker or highlighter pen on originals are difficult to reproduce, they
 might not appear on copies.
- Lift the ADF or the exposure glass cover.
 Be careful not to hold the input tray when lifting the ADF, for the tray might be damaged.
- Place the original face down on the exposure glass. The original should be aligned to the upper-left corner.

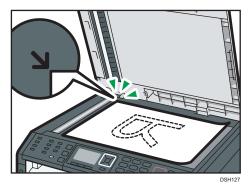

3. Lower the ADF or the exposure glass cover.


Hold down the ADF or the exposure glass cover with your hands when using thick, folded, or bound originals and when the ADF or the exposure glass cover cannot be lowered completely.

Placing Originals in the Auto Document Feeder


By using the ADF, you can scan multiple pages at once.

2

- SP 221S is not equipped with an ADF.
- Do not place different size originals in the ADF at once.
- Straighten curls in the originals before placing them in the ADF.
- To prevent multiple sheets from being fed at once, fan the pages of your original before placing them in the ADF.
- Place the original squarely.
- 1. Open the cover of the input tray for the ADF and adjust the guides according to the size of the original.

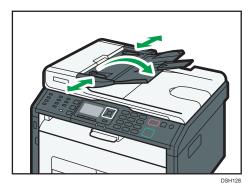

2. Place the aligned originals face up in the ADF. The last page should be on the bottom.

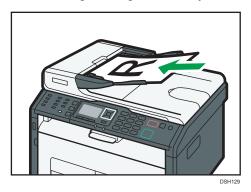

U Note

• When placing originals longer than A4, pull out the ADF tray's extenders.

About Originals

This section describes the types of originals that can be placed and the parts of the original that are chipped in the scanned copy.



• SP 221S is not equipped with an ADF.

Recommended size of originals

This section describes the recommended size of the original.

Exposure glass

Up to 216 mm (8.5 inches) in width, up to 297 mm (11.7 inches) in length

ADF

- Paper size: 140 to 216 mm ($5^1/_2$ to $8^1/_2$ inches) in width, 140 to 356 mm ($5^1/_2$ to 14 inches) in length
- Paper weight: $52 \text{ to } 105 \text{ g/m}^2 \text{ (14 to } 28 \text{ lb.)}$



- Only 1 sheet of an original can be placed on the exposure glass at a time.
- In the ADF, up to 35 sheets of originals can be placed at once (when using paper weighing 80 g/m², 20 lb.).

Types of originals not supported by the Auto Document Feeder


If placed in the ADF, the following types of original might be damaged or become jammed, or result in gray or black lines appearing on prints:

- Originals larger or heavier than recommended
- Stapled or clipped originals
- · Perforated or torn originals
- Curled, folded, or creased originals
- Pasted originals
- Originals with any kind of coating, such as thermal fax paper, art paper, aluminum foil, carbon paper, or conductive paper
- · Originals with perforated lines
- · Originals with indexes, tags, or other projecting parts
- Sticky originals such as translucent paper
- Thin, highly flexible originals
- Thick originals such as postcards
- · Bound originals such as books
- Transparent originals such as OHP transparencies or translucent paper

• Originals that are wet with toner or white out

Unscannable image area

Even if you correctly place originals in the ADF or on the exposure glass, margins of a few millimeters on all four sides of the original might not be scanned.

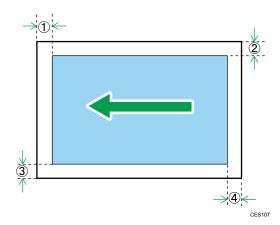

Margins when using exposure glass

	In copier mode	In scanner mode
1 Тор	4 mm	0 mm
② Right	3 mm	O mm
③ Left	3 mm	O mm
④ Bottom	3.3 mm	O mm

Margins when using ADF

	In copier mode	In scanner mode
1 Тор	4 mm	0 mm
② Right	3 mm	O mm
③ Left	3 mm	O mm
④ Bottom	3.3 mm	2 mm

3. Printing Documents

This chapter describes how to configure settings on the printer driver and print documents.

What You Can Do with the Printer Function

Combined printing

You can combine multiple pages and print them on a single sheet of paper. For details, see the printer driver Help.



Displaying the Printing Preferences Dialog Box

To change the default settings of the printer driver, configure settings in the [Printing Preferences] dialog box.

To change the default settings of all applications, open the [Printing Preferences] dialog box from the OS. For details, see page 62 "Displaying the Printing Preferences Dialog Box from the [Start] Menu". To change the default settings of a specific application, open the [Printing Preferences] dialog box from that application. For details, see page 62 "Displaying the Printing Preferences Dialog Box in an Application".

Displaying the Printing Preferences Dialog Box from the [Start] Menu

This section explains how to open the [Printing Preferences] dialog box from [Devices and Printers].



- When the printer driver is distributed from the print server, the setting values specified by the server are displayed as the default for [Printing Defaults...].
- You cannot configure different print settings for each user. The settings configured in this dialog box are used as the default.
- 1. On the [Start] menu, click [Devices and Printers].
- 2. Right-click the icon of the printer you want to use.
- 3. Click [Printing Preferences].

Displaying the Printing Preferences Dialog Box in an Application

You can make printer settings for a specific application. To make printer settings for a specific application, open the [Printing Preferences] dialog box from that application.

The settings displayed in the [Printing Preferences] dialog box opened from the [Devices and Printers] window are applied as the default in the [Printing Preferences] dialog box opened in an application. When printing from an application, modify the settings as required.

The screens displayed may differ depending on the application. The following procedure explains how to print documents from an application using WordPad in Windows 7 as an example.

Displaying the Printing Preferences Dialog Box in an Application When Using Windows

 Click the WordPad menu button in the upper left corner of the window, and then click [Print].

- 2. In the [Select Printer] list, select the printer you want to use.
- 3. Click [Preferences].



• Procedures for opening the [Printing Preferences] dialog box vary depending on the application. For details, see the printer driver Help or the manuals provided with the application.

Displaying the Printing Preferences Dialog Box in an Application When Using OS X

The following procedure is explained using OS X 10.11 as an example.

- 1. Open the document to print.
- 2. Select [Print...] on the [File] menu.
- Check that the machine name or IP address you are using is selected in the [Printer:] popup menu.

If the machine name or IP address you are using is not selected in the [Printer:] list, click the list, and then select the machine.


Basic Operation of Printing

The following procedure explains how to perform basic printing.

For details of printing options, see the printer driver Help.

The procedure in this section is an example based on Windows 7. The actual procedure may vary depending on the operating system you are using.

1. Open the printer properties dialog box in your document's application.

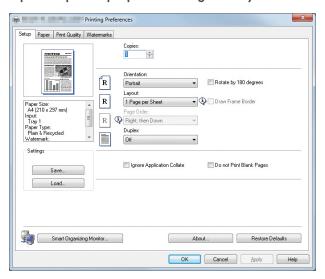

For details about each setting, click [Help]. You can also click the information icons to show configuration information.

- 2. Set printing options as necessary, and then click [OK].
 - The printer properties dialog box closes.
- 3. Click [Print].



 If a paper jam occurs, printing stops after the current page has been printed out. After the jammed paper is removed, printing restarts from the jammed page automatically. For details about how to remove the jammed paper, see page 256 "Clearing Misfeeds".

Canceling a Print Job

You can cancel print jobs using either the machine's control panel or your computer, depending on the status of the job.

3

Canceling a print job before printing has started


- 1. Double-click the printer icon on the task tray of your computer.
- 2. Select the print job you want to cancel, click the [Document] menu, and then click [Cancel].
- 3. Click [Yes].



- If you cancel a print job that has already been processed, printing may continue for a few pages before being canceled.
- It may take a while to cancel a large print job.

Canceling a print job while printing

1. Press the [Clear/Stop] key.

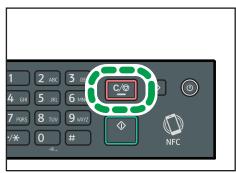

DSH144

4. Copying Originals

This chapter describes the basic and advanced procedures for making copies and how to specify settings.

What You Can Do with the Copier Function


Combine copying (only SP 220SNw, SP 220SFNw, SP 221SNw, and SP 221SFNw are available)

Combine copying allows you to copy multiple pages onto a single sheet of paper. This saves paper and documents require less shelf space for storage. For details about the settings, see page 74 "Making Combined/2-sided Copies".



ID card copying

ID card copying allows you to copy the front and back sides of an ID card or passport onto one side of a sheet of paper. For details, see page 79 "Copying an ID Card".

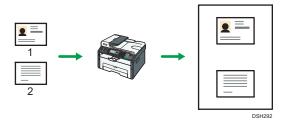


Copier Mode Screen


This section provides information about the screen when the machine is in copier mode.

By default, the display shows the copier screen when the machine is turned on.

If the scanner or fax screen is shown on the display, press the [Copy] key on the control panel to switch to the copier screen.

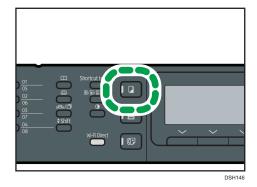

Screen in standby mode

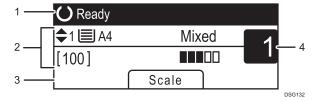

1. Current status or messages

Displays the current status or messages.

2. Current settings

Displays the current tray, reproduction ratio, and scan settings.

3. Selection key items

Displays the functions you can use by pressing the corresponding selection keys.

4. Copy quantity

Displays the current copy quantity. You can change the copy quantity using the number keys.




• The start-up mode can be specified in the [Function Priority] setting under [Admin. Tools]. For details, see page 187 "Administrator Settings".

4

Basic Operation of Copying

- The original in the ADF takes precedence over the original on the exposure glass if you place originals both in the ADF and on the exposure glass.
- 1. Press the [Copy] key.

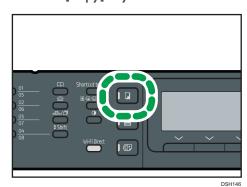

2. Place the original on the exposure glass or in the ADF.

To place the original, see page 56 "Placing Originals". If necessary, configure advanced photocopy settings.

- 3. To make multiple copies, enter the number of copies using the number keys.
- 4. Press the [Start] key.



DSH14

U Note

- The maximum number of copies is 99.
- You can change the paper tray for the current job by pressing the [▲] or [▼] key.
- You can select the paper tray for printing out copies in [Select Paper] under [Copier Features]. For [Select Paper], see page 166 "Copier Features Settings".

- When making multiple copies of a multi-page document, you can select whether copies are output
 in collated sets, or in page batches in the [Sort] setting under [Copier Features]. [Sort] cannot be
 used with the bypass tray. For [Sort], see page 166 "Copier Features Settings".
- If a paper jam occurs, printing stops after the current page has been printed out. After the jammed paper is removed, printing restarts from the jammed page automatically.
- If a scanning jam occurs in the ADF, copying is canceled immediately. In this case, copy the
 originals again starting from the jammed page. For the direction to remove the jammed paper, see
 page 256 "Clearing Misfeeds".

Canceling a Copy

While scanning the original

If copying is canceled while the machine is scanning the original, copying is cancelled immediately and there is no printout.


When the original is set in the ADF, scanning stops immediately but pages that have already been scanned completely will be copied.

While printing

If copying is canceled during printing, the photocopy process is canceled after the current page has been printed out.


Follow the procedure below to cancel copying.

1. Press the [Copy] key.

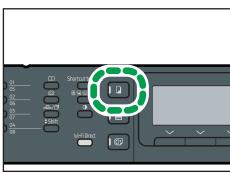

DSH146


2. Press the [Clear/Stop] key.

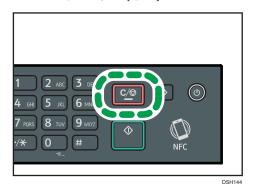

Making Enlarged or Reduced Copies

There are two ways to set the scaling ratio: using a preset ratio or manually specifying a customized ratio.

Preset ratio

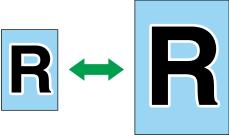

CES10

- Region A (mainly Europe and Asia)
 50%, 71%, 82%, 93%, 122%, 141%, 200%, 400%
- Region B (mainly North America)
 50%, 65%, 78%, 93%, 129%, 155%, 200%, 400%


Custom ratio



25% to 400% in 1% increments.

Specifying Reduce/Enlarge

1. Press [Scale].

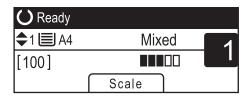

2. Press [Reduce], [Enlarge], or [Zoom].

For [Reduce] or [Enlarge], press the $[^{\blacktriangle}]$, $[^{\blacktriangledown}]$, or $[^{\blacktriangleright}]$ key to select the desired ratio. For [Zoom], specify the desired ratio using the number keys.

3. Press the [OK] key.

Making Combined/2-sided Copies

This section describes how to combine and print multiple pages (two or four pages) on one side or both sides of paper.

This function is available for only SP 220SNw, SP221SNw, SP221SF, SP 220SFNw, and SP 221SFNw.




- This function is only available when the original is set in the ADF, not when it is set on the exposure glass.
- To use this function, the paper size used for printing copies must be set to A4, Letter or Legal.

There are following copy modes. Select a copy mode according to your original and how you want the copy outputs to appear.


Combined copy on one side

In this mode, a two or four-page original is combined and printed on one side of paper.

• 1Sd 2Orig->Comb 2on1 1Sd

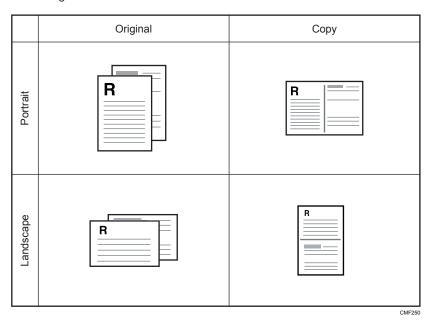

• 1Sd 4Orig->Comb 4on1 1Sd

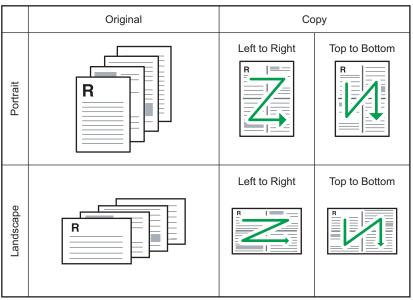


DCT002

Combined copy on both sides


In this mode, a multiple-page original is combined and printed on both sides of paper.

• 1 Sided Orig->2 Sided Copy

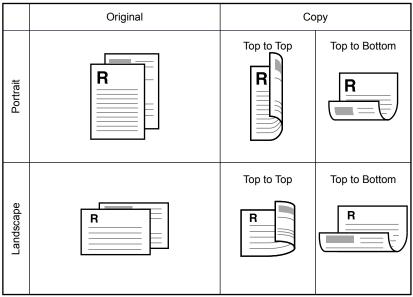



CMF260

• 1Sd 4Orig->Comb 2on1 2Sd

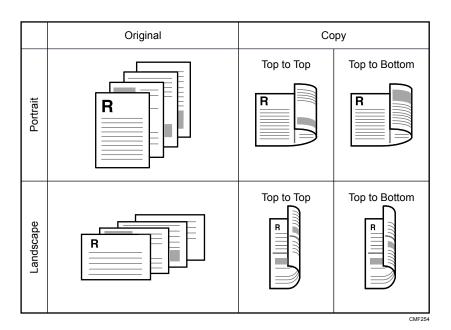


• 1Sd 8Orig->Comb 4on1 2Sd

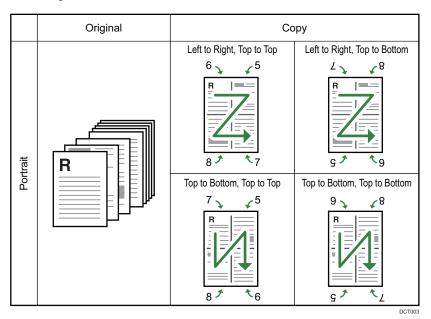

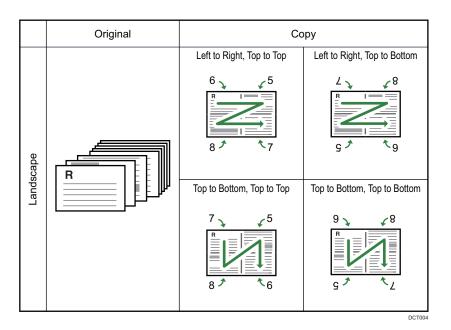


Specifying Combined and 2-sided Copies

1. Press the [Copy] key.

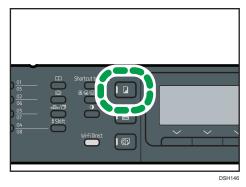

- 2. Press the [◀] or [▶] key.
- 3. Press the $[^{\blacktriangle}]$ or $[^{\blacktriangledown}]$ key to select [Duplex/Combine].
- 4. Press the [▲] or [▼] key to select the desired copy mode, and then press the [OK] key.
- Press the [▲] or [▼] key to select paper orientation and page order, and then press the [OK] key.

The screen will show the selected copy mode.

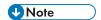

• After you place the originals, press the [Start] key within the time specified in [System Auto Reset Timer]. Otherwise, the job is canceled. For details, see page 187 "Administrator Settings".


Copying an ID Card

This section describes how to copy the front and back sides of an ID card or other small documents onto one side of a sheet of paper.



- This function is available only when the original is set on the exposure glass, not when it is set in the ADF
- To use this function, the paper size used for printing copies must be set to A6, A5, A4, Half Letter or letter

Printed paper size	Scanned paper size
A4	A5 (148×210 mm)
Letter	Half Letter (140×216 mm)
A5	A6 (105×148 mm)
Half Letter	Quarter Letter (108×140 mm)
A6	A7 (74×105 mm)

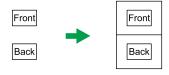

CES165

1. Press the [Shortcut to Func.] key.



For [Shortcut to Function], see page 187 "Administrator Settings".

- 2. To make multiple copies, enter the number of copies using the number keys.
- 3. Place the original in the upper-left corner of the exposure glass.



4. Press the [Start] key.

A message prompting you to place the original with the back side faced down on the exposure glass appears on the display.

5. Place the original with the back side faced down in the upper-left corner of the exposure glass within the time specified in [System Auto Reset Timer], and then press the [Start] key again.



- For the ID card copy function, you can set the machine to print a line in the middle of the printed paper. Specify [ID Card Center Line] under [Copier Features].
- You can change the scanning size for the ID card function. Specify [ID Card Size] under [Copier Features].


Specifying Scan Settings for Copying

This section describes how to specify image density and scan quality for the current job.

Adjusting Image Density

There are five image density levels. The higher the density level, the darker the printout.

1. Press the [Density] key.

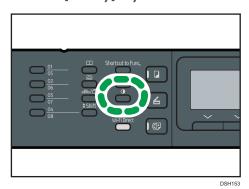

2. Press the [◀] or [▶] key to select the desired density level, and then press the [OK] key.



 You can change the machine's default [Density] setting to always make copies with a specific density level. For details, see page 166 "Copier Features Settings".

Selecting the Document Type According to Original

There are three document types:

Mixed

Select this when the original contains both text and photographs or pictures.

Text


Select this when the original contains only text and no photographs or pictures.

Photo

Select this when the original contains only photographs or pictures. Use this mode for the following types of original:

- Photographs
- Pages that are entirely or mainly photographs or pictures, such as magazine pages.

1. Press the [Image Quality] key.

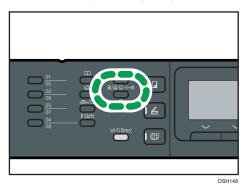

2. Press the $[^{\blacktriangle}]$ or $[^{\blacktriangledown}]$ key to select the desired document type, and then press the [OK] key.



• You can change the machine's default [Original Type] setting to always make copies with a specific document type. For details, see page 166 "Copier Features Settings".

5. Scanning Originals

This chapter describes how to specify settings and use the scanner function.

What You Can Do with the Scanner Function

Send Scanned Documents to a Folder on a Client Computer

For details, see "Basic Operation of Scan to Folder".



and start scanning

Send Scanned Documents by E-mail


For details, see "Basic Operation of Scan to E-mail".



to shared folders

Scanning Documents from a Client Computer

For details, see "Basic Operation for TWAIN Scanning".

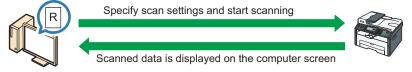

Saving Scan Files on a USB Flash Memory Device

For details, see "Basic Procedures for Saving Scan Files on a USB Flash Memory Device".




DSH293


Scanner Mode Screen

This section provides information about the screen in scanner mode.

By default, the display shows the copier screen when the machine is turned on. If the copier or fax screen is shown on the display, press the [Scanner] key on the control panel to switch to the scanner screen.

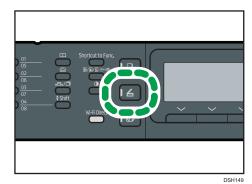

Screen in standby mode

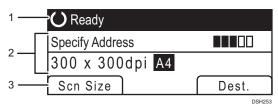

1. Current status or messages

Displays the current status or messages.

2. Current settings

Displays the current scanning mode and scan settings.

When "Specify Address" is displayed:
 Scan to E-mail, Scan to FTP, or Scan to Folder functions can be used.

3. Selection key items

Displays the functions you can use by pressing the corresponding selection keys.



 The machine's default mode at power on can be specified in the [Function Priority] setting under [Admin. Tools]. For [Function Priority], see page 187 "Administrator Settings".

Registering Scan Destinations

This section describes how to register scan destinations in the Address Book. To send scanned files to an e-mail address (Scan to E-mail), FTP server (Scan to FTP), or a shared folder on a network computer (Scan to Folder), you must first register the destination in the Address Book using Web Image Monitor (only SP 220SNw, SP 220SFNw, SP 221SNw, and SP 221SFNw).

- The Address Book data could be damaged or lost unexpectedly. The manufacturer shall not be
 responsible for any damages resulting from such data loss. Be sure to create backup files of the
 Address Book data periodically.
- Depending on your network environment, the Scan to FTP and Scan to Folder functions may
 require a user name and password to be correctly entered in the destination information. In such
 cases, after registering destinations, check that the user name and password are correctly entered
 by sending test documents to those destinations.

The Address Book can contain up to 100 entries, including 8 Quick Dial entries.

Destinations registered as Quick Dial entries can be selected by pressing the corresponding One Touch button (only SP 221SF, SP 220SFNw, and SP 221SFNw).

- 1. Start the web browser and access the machine by entering its IP address.
- 2. Click [Quick Dial Destination] or [Scan Destination].
- 3. From the [Destination Type] list, select [E-mail Address], [FTP], or [Folder].
- 4. Register information as necessary.

The information you must register varies depending on the destination type. For details, see the tables below.

- 5. Enter the administrator password if required.
- 6. Click [Apply].
- 7. Close the web browser.


Scan to E-mail Settings

Quick Dial Number	
Name (Required)	
Destination E-mail Address (Required)	
Notification E-mail Address (Optional)	
Subject (Required)	
Sender's Name (Optional)	
File Format (Color/Gray Scale)	: PDF ▼
File Format (Black & White)	TIFF •
Scan Size	A4 210 x 297 ▼
Resolution	300 x 300dpi ▼
■ Density	
ease enter Administrator Password.	

Description Item Setting Select when setting the destination as a Quick Dial Quick Dial Number Optional entry. Name of the destination. The name specified here will Name Required be shown on the screen when selecting a scan destination. Can contain up to 16 characters. E-mail address of the destination. Can contain up to Destination E-mail Address Required 64 characters. E-mail address to which a notification is sent after Notification E-mail Address Optional transmission. Can contain up to 64 characters. Subject Required Subject of the e-mail. Can contain up to 64 characters. Name of e-mail sender. The name specified here will be shown under "From" or a similar field of the Sender's Name Optional recipient's email application. Can contain up to 32 characters. File format of the scanned file when scanning in color. File Format (Color/Gray Required PDF or JPEG can be selected. PDF supports multiple Scale) pages in a document, but JPEG does not. File format of the scanned file when scanning in black File Format (Black & White) Required and white. PDF or TIFF can be selected. Both formats support multiple pages in a document.

ltem	Setting	Description
Scan Size	Optional	Select the scanning size for the original from A5, B5, A4, $7^{1}/_{4} \times 10^{1}/_{2}$, $8^{1}/_{2} \times 5^{1}/_{2}$, $8^{1}/_{2} \times 11$, $8^{1}/_{2} \times 14$, 16K, or custom size.
	If you select custom size, select [mm] or [Inch], and then specify the width and length.	
Resolution	Optional	Select the scan resolution from 100×100, 150×150, 200×200, 300×300, 400×400, or 600×600 dpi.
Density	Optional	Specify the image density by clicking the right or left button. III DDDD is the lightest, and III III III III is the darkest.


Scan to FTP Settings

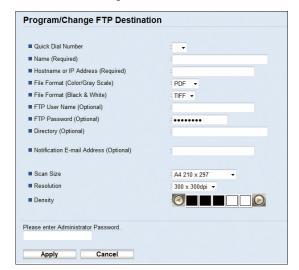

ltem	Setting	Description
Quick Dial Number	Optional	Select when setting the destination as a Quick Dial entry.
Name	Required	Name of the destination. The name specified here will be shown on the screen when selecting a scan destination. Can contain up to 16 characters.
Hostname or IP Address	Required	Name or IP address of the FTP server. Can contain up to 64 characters.

ltem	Setting	Description	
File Format (Color/Gray Scale)	Required	File format of the scanned file when scanning in color. PDF or JPEG can be selected. PDF supports multiple pages in a document, but JPEG does not.	
File Format (Black & White)	Required	File format of the scanned file when scanning in black and white. PDF or TIFF can be selected. Both formats support multiple pages in a document.	
FTP User Name	Optional	User name for logging in to the FTP server. Can contain up to 32 characters.	
FTP Password	Optional	Password for logging in to the FTP server. Can contain up to 32 characters.	
Directory	Optional	Name of the FTP server directory where scanned files are stored. Can contain up to 64 characters.	
Notification E-mail Address	Optional	E-mail address to which a notification is sent after transmission. Can contain up to 64 characters.	
Scan Size	Optional	Select the scanning size for the original from A5, B5, A4, $7^1/_4 \times 10^1/_2$, $8^1/_2 \times 5^1/_2$, $8^1/_2 \times 11$, $8^1/_2 \times 14$, 16K, or custom size. If you select custom size, select [mm] or [Inch], and then specify the width and length.	
Resolution	Optional	Select the scan resolution from 100×100, 150×150, 200×200, 300×300, 400×400, or 600×600 dpi.	
Density	Optional	Specify the image density by clicking the right or left button. III	

Scan to Folder Settings

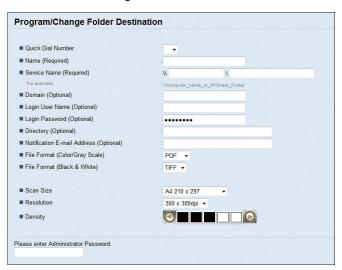

ltem	Setting	Description
Quick Dial Number	Optional	Select when setting the destination as a Quick Dial entry.
Name	Required	Name of the destination. The name specified here will be shown on the screen when selecting a scan destination. Can contain up to 16 characters.
Service Name	Required	Path to the directory where scanned files will be stored. Consists of the IP address or name of the destination computer (can contain up to 64 characters), and name of the shared folder (can contain up to 32 characters).
Domain	Optional	Specify the name of the domain to which the computer belongs. Can contain up to 15 characters.
Login User Name	Optional	User name for logging in to the destination computer. Can contain up to 32 characters.
Login Password	Optional	Password for logging in to the destination computer. Can contain up to 32 characters.
Directory	Optional	Directory within the shared folder for storing scanned files. Can contain up to 64 characters.
Notification E-mail Address	Optional	E-mail address to which a notification is sent after transmission. Can contain up to 64 characters.

ltem	Setting	Description
File Format (Color/Gray Scale)	Required	File format of the scanned file when scanning in color. PDF or JPEG can be selected. PDF supports multiple pages in a document, but JPEG does not.
File Format (Black & White)	Required	File format of the scanned file when scanning in black and white. PDF or TIFF can be selected. Both formats support multiple pages in a document.
Scan Size	Optional	Select the scanning size for the original from A5, B5, A4, $7^1/_4 \times 10^1/_2$, $8^1/_2 \times 5^1/_2$, $8^1/_2 \times 11$, $8^1/_2 \times 14$, 16K, or custom size. If you select custom size, select [mm] or [Inch], and then specify the width and length.
Resolution	Optional	Select the scan resolution from 100×100, 150×150, 200×200, 300×300, 400×400, or 600×600 dpi.
Density	Optional	Specify the image density by clicking the right or left button. III DDD is the lightest, and III III III III is the darkest.



- To send files via e-mail, SMTP and DNS settings must be configured properly.
- If you are using the Scan to E-mail function, select a time zone according to your geographic location to send email with correct transmission date and time.
- To send files to an FTP server or computer, the user name, password, and directory must be configured properly.
- On a network that uses a DNS server, specify a computer name in [Service Name] and the name
 of the domain to which the computer belongs in [Domain]. In this case, also configure the DNS
 related settings using Web Image Monitor.
- Scan destinations cannot be registered using the control panel.

Modifying Scan Destinations

This section describes how to modify the information of registered destinations.

- 1. Start the web browser and access the machine by entering its IP address.
- 2. Click [Scan Destination].
- 3. Click the [E-mail Address], [FTP], or [Folder] tab.

- 4. Select the entry to modify, and then click [Change].
- 5. Modify settings as necessary.
- 6. Enter the administrator password if required.
- 7. Click [Apply].
- 8. Close the web browser.



You can unassign a Quick Dial entry from a One-touch button from the [Quick Dial Destination] page (only SP 221SF, SP 220SFNw, and SP 221SFNw). To do this, select the desired entry, click [Delete], and then click [Apply] again on a confirmation page.

Deleting Scan Destinations


This section describes how to delete registered destinations.

- 1. Start the web browser and access the machine by entering its IP address.
- 2. Click [Scan Destination].
- 3. Click the [E-mail Address], [FTP], or [Folder] tab.
- 4. Select the entry to delete, and then click [Delete].
- 5. Confirm that the entry you have selected is the entry that you want to delete.
- 6. Enter the administrator password if required.
- 7. Click [Apply].
- 8. Close the web browser.

Testing Transmission



- When a USB flash memory device is inserted into the machine, scanned documents will be stored
 in the USB flash memory device. Confirm that there are no USB flash memory devices inserted into
 the machine.
- Place the original on the exposure glass or in the ADF.

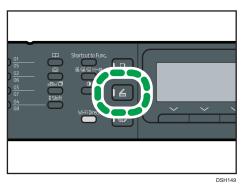

Alternatively, you can press the [Shortcut to Func.] key if [Shortcut to Function] under [Admin. Tools] is set to [Select Scanner Dest.]. For [Shortcut to Function], see page 187 "Administrator Settings".

3. Make sure [Search Address Book] is selected, and then press the [OK] key.

If you want to search for a specific entry by its name, enter the first letters of the name using the number keys, and then press the [OK] key. Each time you enter a character, the display changes to show the matching name.

 Search for the desired destination by pressing the [▲] or [▼] key to scroll the Address Book, and then press the [OK] key.

When you specify a scan destination, the machine's scan settings change automatically according to the information registered for that destination in the Address Book. If necessary, you can change the scan settings using the control panel. For scan settings, see page 123 "Specifying Scan Settings for Scanning".

5. Press the [Start] key.

Scanning starts and scanned documents will be stored in a shared folder.




- If the machine fails to transmit the file, confirm the following items.
 - The destination is registered to the Address Book correctly.
 - Disable the security software or firewall of the destination computer and try the job again. For
 details about security software of the firewall settings, contact your network administrator.
 - If there are several destination computers, test the job with other computers. Compare the settings with the computer the file was transmitted from. For details, contact your network administrator.
 - There is enough disk space on the destination computer.

Basic Operation of Scan to Folder

This section explains the preparations and procedures to send scanned documents to a folder on a client computer.

This function is available for SP 220SNw, SP 220SFNw, SP 221SNw, and SP 221SFNw.

After following the procedures below, you can send scanned documents from the machine to a shared folder on a client computer.

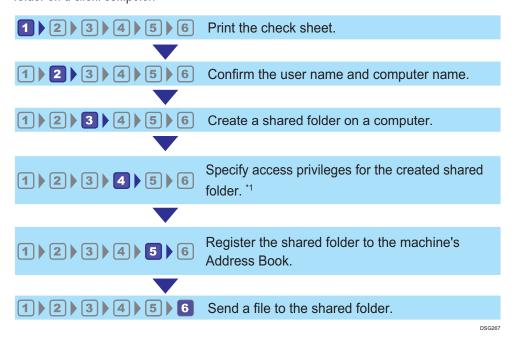

* 1 only Windows



- You can create the shared folder under Windows Vista or later, Windows Server 2003 or later, and OS X 10.7 or later.
- Files can be sent via SMB using the SMB (139/TCP, 137/UDP) or CIFS (445/TCP) protocol.
- Files can be sent via SMB (139/TCP, 137/UDP) in a NetBIOS over TCP/IP environment only.
- Files cannot be sent via SMB in a NetBEUI environment.

Printing the Check Sheet

Print out the following check sheet. Write on the check sheet the settings for the computer to which you will send documents.

For details about how to use the check sheet to make a list of the setting values, see page 95 "2 Confirming the User Name and Computer Name" and page 96 "3 Creating a Shared Folder on a Computer".

 After registering scan destinations to the Address Book, discard the completed check sheet to prevent leakage of personal information.

Check Sheet

No.	Check Item (Entry Example)	Entry Column
	Computer name (ex. YamadaPC)	
[1]	Active settings of DHCP server ([Yes] or [No])	
	Computer's IP address (ex. 192.168.0.152)	
[2]	Domain Name/Working Group Name	USERDNSDOMAIN
	(ex. ABCD-NET)	USERDOMAIN
	Computer's user name (ex. TYamada)	
[3]	Computer's login password (ex. Administrator)	
[4]	Computer's shared folder name (ex. scan)	



• Depending on the network environment, USERDNSDOMAIN or USERDOMAIN may not be displayed. Write the domain name or working group name in the check sheet.

Confirming the User Name and Computer Name

Confirming the User Name and Computer Name When Running Microsoft Windows

Confirm the user name and the name of the computer you will send scanned documents to.

- On the [Start] menu, point to [All Programs], click [Accessories], and then click [Command Prompt].
- 2. Enter the command "ipconfig / all", and then press the [Enter] key.
- Confirm the name of the computer, the active settings of the DHCP server, and the IPv4 address, and then write them in [1] on the check sheet.

The computer's name is displayed under [Host Name].

The address displayed under [IPv4 Address] is the IPv4 address of the computer.

Active settings of DHCP server are displayed under [Enabled DHCP].

4. Next, enter the command "set user", and then press the [Enter] key.

Be sure to put a space between "set" and "user".

Confirm the domain name/working group name and the user name, and then write them in [2] on the check sheet.

The user name is displayed under [USERNAME].

Confirm the computer's login password and write it in [3] on the check sheet.

Next, create a shared folder on a computer. For details about creating a shared folder, see page 96 "3 Creating a Shared Folder on a Computer".



Depending on the operating system or security settings, it might be possible to specify a user name
that does not have a password assigned. However, we recommend that for greater security you
select a user name that has a password.

Confirming the User Name and Computer Name When Running OS X

Confirm the user name and the name of the computer you will send scanned documents to. Confirm the values, and then write them on the check sheet.

1. On the Apple menu, click [About This Mac].

The computer's information screen appears.

2. Click [System Report...].

In the left pane, click [Software], and then confirm the computer name and user name under "System Software Overview:".

The computer name is displayed next to [Computer Name].

The user name is displayed next to [User Name].

On the check sheet, write the computer name in [1] and the user name in [2].

Next, create a shared folder on a computer. For details about creating a shared folder, see page 96 "3 Creating a Shared Folder on a Computer".



- Depending on the operating system or security settings, you might be able to specify a user name
 that does not have a password assigned. However, we recommend that you select a user name
 that has a password.
- To confirm the IP address on the Apple menu, click [System Preferences...], and then click
 [Network] on the System Preferences window. Then click [Ethernet]. The address displayed in the IP
 address field is the IP address of the computer.

3 Creating a Shared Folder on a Computer

Creating a Shared Folder on a Computer Running Microsoft Windows

Create a shared destination folder in Windows and enable sharing. In the following procedure, a computer which is running under Windows 7 Ultimate and participating in a domain is used as an example.

Mportant (

- You must log in as an Administrators group member to create a shared folder.
- If "Everyone" is left selected in Step 6, the created shared folder will be accessible by all users. This
 is a security risk, so we recommend that you give access rights only to specific users. Use the
 following procedure to remove "Everyone" and specify user access rights.
- 1. Create a folder, just as you would create a normal folder, in a location of your choice on the computer. Write the folder name in [4] on the check sheet.
- 2. Right-click the folder, and then click [Properties].
- 3. On the [Sharing] tab, select [Advanced Sharing...].
- 4. Select the [Share this folder] check box.
- 5. Click [Permissions].
- 6. In the [Group or user names:] list, select "Everyone", and then click [Remove].

7. Click [Add...].

In the [Select Users of Groups] window, add groups or users to whom you want to grant access. In the following procedure, the procedure to give access privileges to users that you wrote on the check sheet is used as an example.

- 8. In the [Select Users or Groups] window, click [Advanced...].
- 9. Specify one or more object types, select a location, and then click [Find Now].
- 10. From the list of results, select the groups and users you want to grant access to (the name you wrote in [2] on the check sheet), and then click [OK].
- 11. In the [Select Users or Groups] window, click [OK].
- 12. In the [Group or user names:] list, select a group or user (the name you wrote in [2] on the check sheet), and then, in the [Allow] column of the permissions list, select either the [Full Control] or [Change] check box.

Configure the access permissions for each group and user.

13. Click [OK] 3 times.

If you want to specify access privileges for the created folder to allow other users or groups to access it, proceed to page 98 "4 Specifying Access Privileges for the Created Shared Folder".

If not, proceed to page 98 "5 Registering a Shared Folder in the Machine's Address Book".

Creating a Shared Folder on a Computer Running OS X

The following procedures explain how to create a shared folder on a computer running OS X, and how to confirm the computer's information. OS X 10.11 is used in these examples.

- You must log in as an administrator to create a shared folder.
- Create the folder that you want to send scan files to.

Write the folder name into [4] on the check sheet.

- 2. On the Apple menu, click [System Preferences...].
- 3. Click [Sharing].
- 4. Select the [File Sharing] check box.
- 5. Click [Options...].
- 6. Select the [Share files and folders using SMB] check box.
- 7. Select the account that will be used to access the shared folder.
- 8. If the [Authenticate] screen appears, enter the password for the account, click [OK], and then click [Done].
- 9. Under the [Shared Folders:] list, click [+].

- 10. Select the folder you have created, and then click [Add].
- Make sure that the permissions for the user who will access this folder are set to [Read &Write].

Next, register scan destinations. For details about registering scan destinations, see page 98 "5 Registering a Shared Folder in the Machine's Address Book".

Specifying Access Privileges for the Created Shared Folder

If you want to specify access privileges for the created folder to allow other users or groups to access the folder, configure the folder as follows:

- 1. Right-click the folder created in Step 3, and then click [Properties].
- 2. On the [Security] tab, click [Edit...].
- 3. Click [Add...].
- 4. In the [Select Users or Groups] window, click [Advanced...].
- 5. Specify one or more object types, select a location, and then click [Find Now].
- 6. From the list of results, select the groups and users you want to grant access to, and then click [OK].
- 7. In the [Select Users or Groups] window, click [OK].
- 8. In the [Groups or user names:] list, select a group or user, and then, in the [Allow] column of the permissions list, select either the [Full control] or [Modify] check box.
- 9. Click [OK] twice.

Next, register scan destinations. For details about registering scan destinations, see page 98 "5 Registering a Shared Folder in the Machine's Address Book".



• If you are creating a shared folder for the first time on this computer, you must enable the file sharing function. For details, see Windows Help.

Registering a Shared Folder in the Machine's Address Book

Register scan destinations using Web Image Monitor.

- 1. Start the web browser and access the machine by entering its IP address.
- 2. Click [Quick Dial Destination] or [Scan Destination].
- 3. From the [Destination Type] list, select [Folder].

4. Register information as necessary.

The information you must register are the following items. For details, see page 85 "Registering Scan Destinations".

- Name
- Service Name
- 5. Enter the administrator password if required.
- 6. Click [Apply].
- 7. Close the web browser.

Preparations for Scan to Folder are complete.

For details about sending scanned files to the destination you registered to the Address Book, see page 99 "6 Send Scanned Files to a Shared Folder".



- If the machine fails to transfer the file, confirm the following items.
 - Destination is registered to the Address Book correctly.
 - Set the security software or firewall of the destination computer to off and try the job again.
 For details about security software of the firewall settings, contact your network administrator.
 - If there is more than one destination computer, test the job with other computers. Compare the settings with the computer which succeeded to transfer the file. For details, contact your network administrator.
 - When there is not enough disk space on the destination computer, the machine may fail to transfer the file.


⁶ Send Scanned Files to a Shared Folder

Send scanned files to the shared folder registered in Step 5.



- The original in the ADF takes precedence over the original on the exposure glass if you place originals both in the ADF and on the exposure glass.
- Register the scan destination in the Address Book using Web Image Monitor. For details, see page 85 "Registering Scan Destinations".
- When a USB flash memory device is inserted into the machine, scanned documents will be stored
 in the USB flash memory device. Confirm that there are no USB flash memory devices inserted into
 the machine.
- 1. Place the original on the exposure glass or in the ADF.

To place the original, see page 56 "Placing Originals".

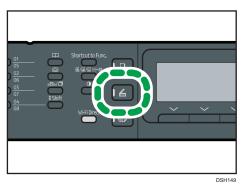


Alternatively, you can press the [Shortcut to Func.] key if [Shortcut to Function] under [Admin. Tools] is set to [Select Scanner Dest.]. For [Shortcut to Function], see page 187 "Administrator Settings".

3. Make sure [Search Address Book] is selected, and then press the [OK] key.
If you want to search for a specific entry by its name, enter the first letters of the name using the number keys, and then press the [OK] key. Each time you enter a character, the display changes to show the matching name.

 Search for the desired destination by pressing the [▲] or [▼] key to scroll the Address Book, and then press the [OK] key.


When you specify a scan destination, the machine's scan settings change automatically according to the information registered for that destination in the Address Book. If necessary, you can change the scan settings using the control panel. For scan settings, see page 123 "Specifying Scan Settings for Scanning".

5. Press the [Start] key.

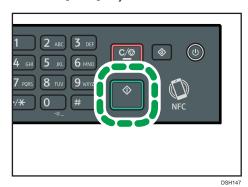

 Depending on the machine's settings, you may see the following screen on the display when scanning from the exposure glass.



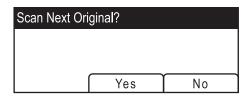

If you see this screen, proceed to the next step.

- 6. If you have more originals to scan, place the next original on the exposure glass, and then press [Yes]. Repeat this step until all originals are scanned.
- 7. When all originals have been scanned, press [No] to start sending the scanned file.




- To cancel scanning, press the [Scanner] key, and then press the [Clear/Stop] key. The scan files are discarded.
- You can also specify a destination using the One Touch buttons, [Pause/Redial] key (only SP 221SF, SP 220SFNw, and SP 221SFNw). For details, see page 109 "Specifying the Scan Destination Using the One Touch Buttons or [Pause/Redial] Key".

Basic Operation of Scan to E-mail

This section explains the preparations and procedures to send scanned documents as a file attached to an e-mail.

This function is available for SP 220SNw, SP 220SFNw, SP 221SNw, and SP 221SFNw.

After following the procedures below, you can send scanned documents to the specified e-mail address.

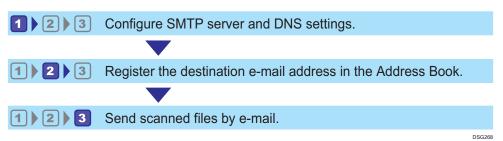

Configuring SMTP and DNS Settings

To send files via e-mail, SMTP and DNS settings must be configured properly.

For details about SMTP server information, contact the network administrator of your Internet service provider.

Configure SMTP and DNS information using Web Image Monitor.

- 1. Start the web browser and access the machine by entering its IP address.
- 2. Click [Network Settings].
- 3. Click the [DNS] tab.
- 4. Register information as necessary.

For details, see page 214 "Configuring the Network Settings".

- 5. Click [OK].
- 6. Click the [SMTP] tab.
- 7. Register information as necessary.

For details, see page 214 "Configuring the Network Settings".

- 8. Click [OK].
- 9. Close the web browser.

Next, register the destination e-mail address to the Address Book. For details, see page 103 "22 Registering Destination E-mail Addresses to the Address Book".

Registering Destination E-mail Addresses to the Address Book

Configure the destination information using Web Image Monitor.

- 1. Start the web browser and access the machine by entering its IP address.
- 2. Click [Quick Dial Destination] or [Scan Destination].
- 3. From the [Destination Type] list, select [E-mail Address].
- 4. Register information as necessary.

The information you must register are the following items. For details, see page 123 "Specifying Scan Settings for Scanning".

- Name
- Destination E-mail Address
- Subject
- 5. Enter the administrator password if required.
- 6. Click [Apply].
- 7. Close the web browser.

Preparations for Scan to E-mail are complete.

For details about sending files to the registered destinations, see page 103 "3 Sending Scanned Files by E-mail".


3 Sending Scanned Files by E-mail

This section explains how to send scanned files to the destinations registered in Step 2.

Mportant (

- The original in the ADF takes precedence over the original on the exposure glass if you place originals both in the ADF and on the exposure glass.
- Register the scan destination in the Address Book using Web Image Monitor. For details, see page 85 "Registering Scan Destinations".
- When a USB flash memory device is inserted into the machine, scanned documents will be stored
 in the USB flash memory device. Confirm that there are no USB flash memory devices inserted into
 the machine.
- 1. Place the original on the exposure glass or in the ADF.

To place the original, see page 56 "Placing Originals".

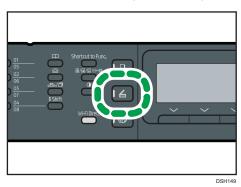

Alternatively, you can press the [Shortcut to Func.] key if [Shortcut to Function] under [Admin. Tools] is set to [Select Scanner Dest.]. For [Shortcut to Function], see page 187 "Administrator Settings".

3. Make sure [Search Address Book] is selected, and then press the [OK] key.
If you want to search for a specific entry by its name, enter the first letters of the name using the number keys, and then press the [OK] key. Each time you enter a character, the display changes to show the matching name.

 Search for the desired destination by pressing the [▲] or [▼] key to scroll the Address Book, and then press the [OK] key.

 
When you specify a scan destination, the machine's scan settings change automatically according to the information registered for that destination in the Address Book. If necessary, you can change the scan settings using the control panel. For scan settings, see page 123 "Specifying Scan Settings for Scanning".

5. Press the [Start] key.



Depending on the machine's settings, you may see the following screen on the display when scanning from the exposure glass.



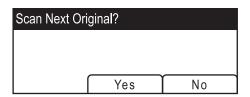

If you see this screen, proceed to the next step.

- 6. If you have more originals to scan, place the next original on the exposure glass, and then press [Yes]. Repeat this step until all originals are scanned.
- 7. When all originals have been scanned, press [No] to start sending the scanned file.



- To cancel scanning, press the [Scanner] key, and then press the [Clear/Stop] key. The scan files are discarded.
- You can also specify a destination using the One Touch buttons, [Pause/Redial] key (only SP 221SF, SP 220SFNw, and SP 221SFNw). For details, see page 109 "Specifying the Scan Destination Using the One Touch Buttons or [Pause/Redial] Key".

Basic Operation of Scan to FTP

This section explains the preparations and instructions to send scanned documents to an FTP server.

This function is available for SP 220SNw, SP 220SFNw, SP 221SNw, and SP 221SFNw.

After following the procedures below, you can send scanned documents to an FTP server.

1 2 Configure FTP server settings.

Send scanned files to the FTP server.

DSG269

Configuring FTP Server Settings

To send files to an FTP server, configure FTP server settings properly. For details about FTP servers, contact your network administrator.

Configure FTP server settings using Web Image Monitor.

- 1. Start the web browser and access the machine by entering its IP address.
- 2. Click [Quick Dial Destination] or [Scan Destination].
- 3. From the [Destination Type] list, select [FTP].
- 4. Register information as necessary.

The information you must register are the following items. For details, see page 85 "Registering Scan Destinations".

- Name
- Hostname or IP Address
- 5. Enter the administrator password if required.
- 6. Click [Apply].
- 7. Close the web browser.

Preparations for Scan to FTP are complete.

For details about sending files to the registered destinations, see page 106 "2 Sending Scanned Files to an FTP Server".


Sending Scanned Files to an FTP Server

This section explains how to send scanned files to the destinations registered in Step 1.



Important

- The original in the ADF takes precedence over the original on the exposure glass if you place originals both in the ADF and on the exposure glass.
- Register the scan destination in the Address Book using Web Image Monitor. For details, see page 85 "Registering Scan Destinations".
- When a USB flash memory device is inserted into the machine, scanned documents will be stored
 in the USB flash memory device. Confirm that there are no USB flash memory devices inserted into
 the machine.
- Place the original on the exposure glass or in the ADF.
 To place the original, see page 56 "Placing Originals".
- 2. Press the [Scanner] key, and then press the [Address Book] key.

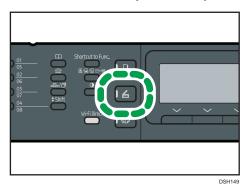


Alternatively, you can press the [Shortcut to Func.] key if [Shortcut to Function] under [Admin. Tools] is set to [Select Scanner Dest.]. For [Shortcut to Function], see page 187 "Administrator Settings".


- 3. Make sure [Search Address Book] is selected, and then press the [OK] key.
 If you want to search for a specific entry by its name, enter the first letters of the name using the number keys, and then press the [OK] key. Each time you enter a character, the display changes to show the matching name.
- Search for the desired destination by pressing the [▲] or [▼] key to scroll the Address Book, and then press the [OK] key.

When you specify a scan destination, the machine's scan settings change automatically according to the information registered for that destination in the Address Book. If necessary, you can change the scan settings using the control panel. For scan settings, see page 123 "Specifying Scan Settings for Scanning".

5. Press the [Start] key.

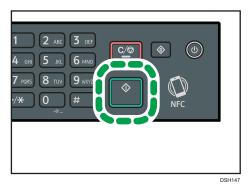

 Depending on the machine's settings, you may see the following screen on the display when scanning from the exposure glass.

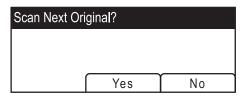

If you see this screen, proceed to the next step.

- 6. If you have more originals to scan, place the next original on the exposure glass, and then press [Yes]. Repeat this step until all originals are scanned.
- 7. When all originals have been scanned, press [No] to start sending the scanned file.



- To cancel scanning, press the [Scanner] key, and then press the [Clear/Stop] key. The scan files are discarded.
- You can also specify a destination using the One Touch buttons, [Pause/Redial] key (only SP 221SF, SP 220SFNw, and SP 221SFNw). For details, see page 109 "Specifying the Scan Destination Using the One Touch Buttons or [Pause/Redial] Key".

Specifying the Scan Destination Using the One Touch Buttons or [Pause/Redial] Key

This section describes how to specify a destination using the following keys:

This function is available for only SP 221SF, SP 220SFNw, and SP 221SFNw.


- One Touch buttons
 - Use these to specify destinations registered as Quick Dial entries.
- [Pause/Redial] key

Press this to specify the last used destination as the destination for the current job.

Using the One Touch buttons


Press the One Touch button to which the desired Quick Dial entry is registered.

Press the [Shift] key to use the Quick Dial entries Nos. 5 to 8.

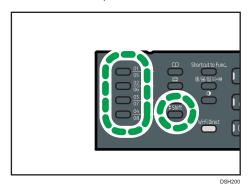

Using the [Pause/Redial] key

Press the [Pause/Redial] key to select the last used destination.

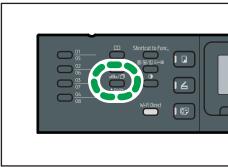

DSH15

UNote

When you specify a scan destination, the machine's scan settings change automatically according
to the information registered for that destination in the Address Book. If necessary, you can change

the scan settings using the control panel. For details, see page 123 "Specifying Scan Settings for Scanning".


- The [Pause/Redial] key is not effective for the first scan job after the machine is turned on.
- To select destinations not registered as Quick Dial entries, use the [Address Book] key. For specifying destinations using the [Address Book] key, see page 93 "Basic Operation of Scan to Folder".

Basic Procedures for Saving Scan Files on a USB Flash Memory Device

This section explains basic operations of Scan to USB. Files are saved to the USB flash memory device inserted into the machine.



- The original in the ADF takes precedence over the original on the exposure glass if you place originals both in the ADF and on the exposure glass.
- This machine does not support the use of external USB hubs.
- Not all types of USB flash memory devices are supported.
- When using Scan to USB, set [Save Scn Data to USB] to [Active]. For details, see page 187
 "Administrator Settings".
- 1. Insert the USB flash memory device into the USB port.

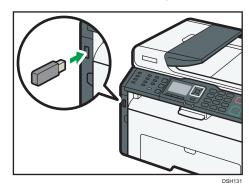

The scanner screen appears on the display.


A message indicating the machine is reading the device appears. Wait until [Save Scn Data to USB] appears on the display. The time before the message appears differs depending on the type of USB flash memory device.

Place the original on the exposure glass or in the ADF.

To place the original, see page 56 "Placing Originals".


Specify the scanning settings as necessary. For details of specifying the scanning settings, see page 123 "Specifying Scan Settings for Scanning".

3. Press the [Start] key.

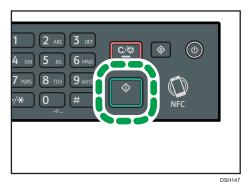

4. Select the file format from [TIFF] or [PDF] by pressing the corresponding selection key.

If the [Limitless Scan] setting under [Scan Settings] is enabled, you may see the following screen on the display when scanning from the exposure glass.

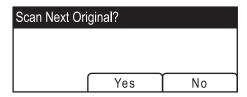

If you see this screen, proceed to the next step.

- If you have more originals to scan, place the next original on the exposure glass, and then press [Yes]. Repeat this step until all originals are scanned.
- 6. When all originals have been scanned, press [No] to start sending the scanned file.
- 7. Wait until "Ready" is displayed on the screen.
 Scanned files are saved in the root directory of the USB flash memory device.
- 8. Remove the USB flash memory device from the machine.




• To cancel scanning, press the [Scanner] key, and then press the [Clear/Stop] key. The scan files are discarded.


Scanning from Smart Organizing Monitor

The procedure in this section is an example based on Windows 7. The actual procedure may vary depending on the operating system you are using.

- 1. Place originals.
- 2. On the [Start] menu, click [All Programs].
- 3. Click [SP 220 Series Software Utilities].
- Click [Smart Organizing Monitor for SP 220 Series].
 Smart Organizing Monitor starts.
- 5. Click the [User Tools] tab.
- 6. Click [Scan].

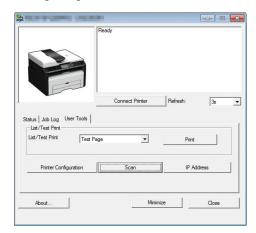

The dialog box appears.

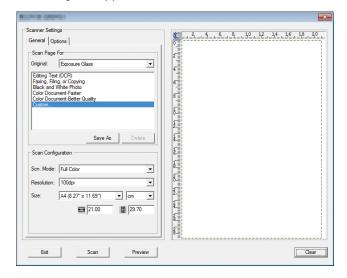

- and the orientation of the original.
 - 8. On the [Options] tab, specify the file format and the directory to save the file.


7. On the [General] tab, specify settings according to the types of originals and scanning,

- 9. Click [Scan].
- 10. After all originals are scanned, click [Exit].

Scanner Settings You Can Configure for Smart Organizing Monitor

The following explains the setting options you can configure when Smart Organizing Monitor is used for scanning.

[General] tab

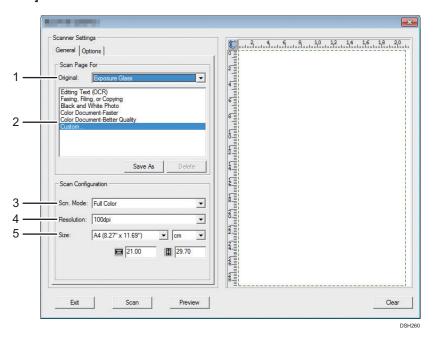

1. Original:

Select [Exposure Glass] to scan from the exposure glass or [Automatic Document Feeder] to scan from the ADF (only SP 220SNw, SP 221SNw, SP 221SF, SP 220SFNw, and SP 221SFNw).

2. Original type

According to your original, select a setting from the list of options detailed below, or select [Custom...] to configure your own scan settings. [Scn. Mode], [Resolution], and [Size] under [Scan Configuration] will change according to the original type setting you selected here.

• When using the exposure glass:

[Editing Text (OCR)]

[Faxing, Filing or Copying]

[Black and White Photo]

[Color Document-Faster]

[Color Document-Better Quality]

[Custom...]

 When using the ADF (only SP 220SNw, SP 221SNw, SP 221SF, SP 220SFNw, and SP 221SFNw):

[ADF-Faster]

[ADF-Better]

[ADF-Gray]

[Custom...]

3. Scn. Mode:

Select from full color, grayscale, or black-and-white.

4. Resolution:

Select a resolution from the list. Note that increasing the resolution also increases the file size and scanning time.


Select from 100, 200, 300, or 600 dpi.

5. Size:

Select the scanning size.

When [Exposure Glass] is selected in [Original:], you can change the scanning size with your mouse in the preview area. Also, after selecting [User defined], you can select the unit of measure from [cm], [inches], or [pixels].

[Options] tab

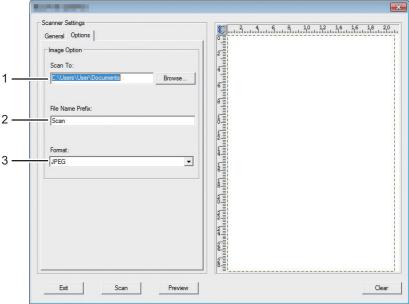

DSH261

1. Scan To:

Specify the directory to save the file.

2. File Name Prefix:

Specify the file name prefix. Numbers are consecutively assigned after the prefix.

For example, if [File Name Prefix] is "Scan", file names will be "Scan001", "Scan002", and so on.

3. Format:

Select the file format of the scanned document from JPEG, TIFF, or PDF.

Basic Operation for TWAIN Scanning

This section describes the basic TWAIN scanning operation.



TWAIN scanning is possible if a TWAIN-compatible application is running on your computer.

- Your Computer (TWAIN driver already installed)
 Instruct the machine to start scanning the original that is set on the machine.
- 2. This Machine

The original that is set on the machine is scanned, and its data is sent to a client computer.

Using TWAIN scanner

This section describes the preparations for using the TWAIN scanner.



- To use the TWAIN scanner, you must install the TWAIN driver, which is on the supplied CD-ROM.
- To use the TWAIN scanner, a TWAIN-compliant application must be installed.

To use the machine as a TWAIN scanner, first do the following:

- Install the TWAIN driver.
- Install a TWAIN-compliant application.

TWAIN scanning

TWAIN scanning is possible if your computer is running a TWAIN-compatible application.

The following is a general scan procedure with the TWAIN driver, so the actual operation may differ depending on the applications you use. For details, see the application's Help.

- 1. Start a TWAIN-compliant application.
- 2. Place originals.

3. Open the Scanner Control dialog box.

The Scanner Control dialog box is used to control the scanner using the TWAIN driver. To open the Scanner Control dialog box, select the correct TWAIN scanner using the TWAIN-compliant application. For details, see the application's Help.

4. Make settings according to such factors as the type of original, type of scanning, and orientation of the original.

For details, see the TWAIN driver Help.


5. In the Scanner Control dialog box, click [Scan].

Depending on the security setting, if you press [Scan], a dialog box for entering the user name and password may appear.

If there are more originals to be scanned, place the next original, and then click [Continue].

If there are no more originals to be scanned, click [Complete].

Settings you can configure in the TWAIN dialog box

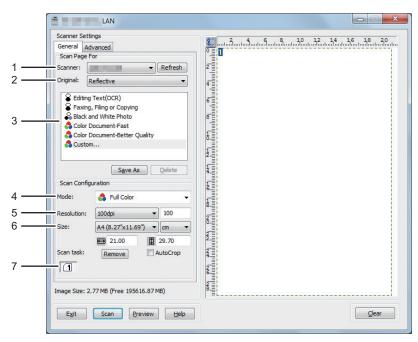

DSH231

1. Scanner:

Select the scanner you want to use. The scanner you select becomes the default scanner. Click [Refresh] to discover all available scanners connected via USB or the network.

2. Original:

Select [Reflective] to scan from the exposure glass, or [Automatic Document Feeder] to scan from the ADF (only SP 220SNw, SP221SNw, SP 221SF, SP 220SFNw, and SP 221SFNw).

3. Original type

According to your original, select a setting from the list of options detailed below, or select [Custom...] to configure your own scan settings. [Mode], [Resolution], and [Size] under [Scan Configuration] will change according to the original type setting you selected here.

• When using the exposure glass:

```
[Editing Text(OCR)]
[Faxing, Filing or Copying]
[Black and White Photo]
[Color Document-Fast]
[Color Document-Better Quality]
[Custom...]
```

When using the ADF (only SP 220SNw, SP221SNw, SP 221SF, SP 220SFNw, and SP 221SFNw):

```
[ADF-Faster]
[ADF-Better]
[ADF-Gray]
[Custom...]
```

4. Mode:

Select from color, grayscale, or black-and-white.

5. Resolution:

Select a resolution from the list. If you select [User defined], enter a resolution value directly in the edit box. Note that increasing the resolution also increases the file size and scanning time.

Selectable resolutions vary depending on where the original is set.

• When using the exposure glass:

```
75, 100, 150, 200, 300, 400, 500, 600, 1200, 2400, 4800, 9600, 19200 dpi, User defined
```

When using the ADF (only SP 220SNw, SP221SNw, SP 221SF, SP 220SFNw, and SP 221SFNw):
 75, 100, 150, 200, 300, 400, 500, 600 dpi, User defined

6. Size:

Select the scanning size. If you select [User defined], enter the scanning size directly in the edit box. Also, you can change the scanning size with your mouse in the preview area. You can select the unit of measure from [cm], [inches], or [pixels]. Selectable resolutions vary depending on where the original is set. For details, see the TWAIN Help.

7. Scan task: (when using the exposure glass)

Displays up to 10 previously used scan areas. To remove a scan task, select the number of the task, and then click [Remove]. You can select [AutoCrop] to let the scanner automatically detect the size of your original.



• If the scan data is larger than the memory capacity, an error message appears and scanning is canceled. If this happens, specify a lower resolution and scan the original again.

Basic Operation for WIA Scanning

- 1. Place the original on the exposure glass or in the ADF.
- 2. On the [Start] menu on your computer, click [Devices and Printers].
- 3. Right-click the icon of the printer model you want to use, and then click [Start scan] to open the dialog box for the scan settings.
- 4. In the dialog box, configure the scan settings as required, and then click [Scan].
- 5. Click [Import].

Using SANE scanning

This driver allows you to scan images and edit them using SANE compatible software.


Specifying Scan Settings for Scanning

When you specify a scan destination, the machine's scan settings change automatically according to the information registered for that destination in the Address Book. If necessary, you can change the scan settings for the current job using the control panel.

Specifying the Scanning Size According to the Size of the Original

This section describes how to specify the scanning size according to the size of the current original.

1. Press [Scn Size].

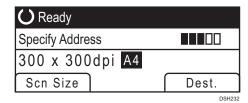

2. Press the [▲] or [▼] key to select the size of the original, and then press the [OK] key.

If you selected anything other than [Custom Size], you do not need to perform the remaining steps of the procedure.

- Press the [▲] or [▼] key to select [mm] or [inch], and then press the [OK] key.
- 4. Enter the width using the number keys, and then press the [OK] key.

To enter a decimal point, press $[\times]$.

Enter the length using the number keys, and then press the [OK] key.
 To enter a decimal point, press [**].




 You can change the machine's default [Scan Size] setting to always scan originals with a specific scanning size. For details, see page 170 "Scan Settings".

Adjusting Image Density

This section describes how to adjust image density for the current job.

There are five image density levels. The higher the density level, the darker the scanned image.

1. Press the [Density] key.

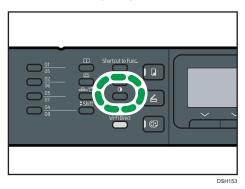

2. Press the [◀] or [▶] key to select the desired density level, and then press the [OK] key.




You can change the machine's default [Density] setting to always scan with a specific density level.
 For details, see page 170 "Scan Settings".

Specifying Resolution

This section describes how to specify the scan resolution for the current job.

There are six resolution settings. The higher the resolution, the higher the quality but greater the file size.

1. Press the [Image Quality] key.

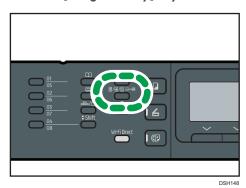

Press the [♠], [▼], [◄], or [▶] key to select the desired resolution, and then press the [OK] key.



• You can change the machine's default [Resolution] setting to always scan with a specific resolution level. For details, see page 170 "Scan Settings".

6. Sending and Receiving a Fax


This chapter describes how to use the fax function and specify the settings.

This function is available for SP 221SF, SP 220SFNw, and SP 221SFNw.

What You Can Do with the Fax Function

Send faxes easily with one touch buttons

By registering destinations, you can specify destinations easily by pressing a one touch button. For details, see page 130 "Registering Fax Destinations".

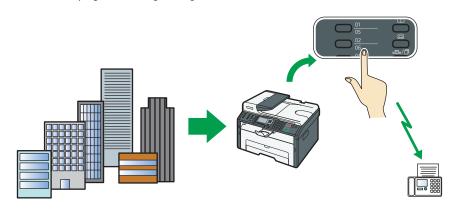


DSH296

Forward received faxes to receive them wherever you are (only SP 220SFNw and SP 221SFNw)

By forwarding received faxes to an e-mail address or a folder, you can receive them anytime, anywhere you are.

For details, see page 158 "Forwarding or Storing Faxes in Memory".

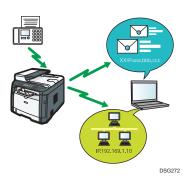

Send faxes by data to save paper

By using a LAN-Fax Driver, you can send documents from your computer without printing them.

For details, see page 148 "Using the Fax Function from a Computer (LAN-Fax)".




o

Fax Setting Workflows

This section explains the preparations and procedures to send fax documents to a folder on a client computer.

After following the procedures below, you can send fax documents from the machine to a shared folder on a client computer.

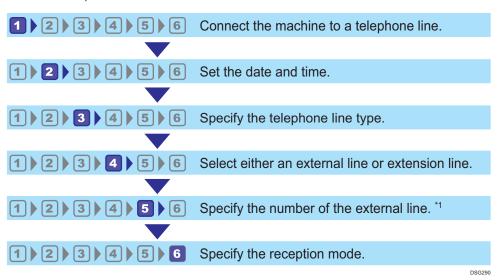

* 1 Specify when using an extension line or a PBX.


Procedure	Reference		
1			
2			
3	See Initial Guide for FAX.		
4			
5			
6	For details about selecting reception modes, see page 154 "Selecting Reception Mode".		

Fax Mode Screen


This section provides information about the screen in fax mode.

By default, the display shows the copier screen when the machine is turned on.

If the copy or scanner screen is shown on the display, press the [Facsimile] key on the control panel to switch to the fax screen.

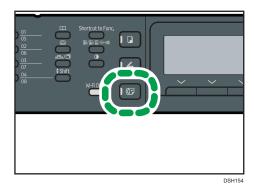

Screen in standby mode

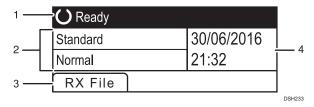

1. Current status or messages

Displays the current status or messages.

2. Current settings

Displays the current resolution and density settings.

3. Selection key items

Displays the functions you can use by pressing the corresponding selection keys.

4. Current date and time


Shows the current date and time.



- The machine's default mode at power on can be specified in the [Function Priority] setting under [Admin. Tools]. For [Function Priority], see page 187 "Administrator Settings".
- The display format for time and date can be specified in [Set Date/Time] under [Admin. Tools]. For setting the date and time, see page 129 "Setting the Date and Time".

Setting the Date and Time

1. Press the [User Tools] key.

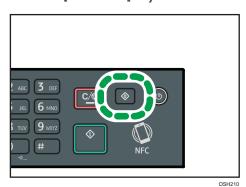

- 2. Press the [▲] or [▼] key to select [Admin. Tools], and then press the [OK] key.
- If you are requested to enter a password, enter the password using the number keys, and then press the [OK] key.
- 4. Press the [▲] or [▼] key to select [Set Date/Time], and then press the [OK] key.
- 5. Press the [▲] or [▼] key to select [Set Date], and then press the [OK] key.
- 6. Press the [▲] or [▼] key to select the desired date format, and then press the [OK] key.
 For the date and time display format, see page 187 "Administrator Settings".
- 7. Enter the current date using the number keys, and then press the [OK] key.
 You can press the [⁴] or [▶] key to move between fields.
- 8. Press the $[^{\blacktriangle}]$ or $[^{\blacktriangledown}]$ key to select [Set Time], and then press the [OK] key.
- Press the [♠] or [▼] key to select the desired time format, and then press the [OK] key.
- 10. Enter the current time using the number keys, and then press the [OK] key.
 If you selected [12-hour Format], press the [♠] or [♥] key to select [AM] or [PM].
 You can press the [♠] or [▶] key to move between fields.
- 11. Press the [User Tools] key to return to the initial screen.



 A password for accessing the [Admin. Tools] menu can be specified in [Admin. Tools Lock]. For [Admin. Tools Lock], see page 187 "Administrator Settings".

Registering Fax Destinations

This section describes how to register fax destinations in the Address Book using the control panel. For entering characters, see page 31 "Entering Characters".

The Address Book can also be edited using Web Image Monitor.



The Address Book data could be damaged or lost unexpectedly. The manufacturer shall not be
responsible for any damages resulting from such data loss. Be sure to create backup files of the
Address Book data periodically. For details about creating backup files, see page 229
"Configuring the Administrator Settings".

The Address Book can contain up to 108 entries (8 Quick Dial entries and 100 Speed Dial entries).

Quick Dial entries


Destinations registered as Quick Dial entries can be selected by pressing the corresponding One Touch button.

Speed Dial entries

Destinations registered as Speed Dial entries can be selected from the Address Book. Press the [Address Book] key, select [Search Address Book], and then select the desired entry using the $[^{\blacktriangle}]$ or $[^{\blacktriangledown}]$ key.

Registering Fax Destinations Using the Control Panel

1. Press the [User Tools] key.

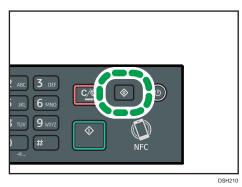

- 2. Press the [▲] or [▼] key to select [Address Book], and then press the [OK] key.
- 3. If you are requested to enter a password, enter the password using the number keys, and then press the [OK] key.
- Press the [▲] or [▼] key to select [Quick Dial No.] or [Fax Speed Dial No.], and then press
 the [OK] key.


- Press the [▲] or [▼] key to select [No.], and then enter the desired Quick Dial number (1 to 8) or Speed Dial number (1 to 100) using the number keys.
 - If a destination is already registered for the input number, the fax number and fax name registered for that number appear.
- Press the [▲] or [▼] key to select [Fax No.], and then enter the fax number (up to 40 characters).
- Press the [▲] or [▼] key to select [Name], and then enter the fax name (up to 20 characters).
- 8. Confirm the setting, and then press the [OK] key.
- 9. Press the [User Tools] key to return to the initial screen.



- For details about entering characters, see page 31 "Entering Characters".
- A fax number can contain 0 to 9, pause, "\(\frac{1}{7}\)", "\(\frac{1}{7}\)", and space.
- If necessary, insert a pause in the fax number. The machine pauses briefly before it dials the digits following the pause. You can specify the length of the pause time in the [Pause Time] setting under [Fax TX Settings]. For [Pause Time], see page 172 "Fax Features Settings".
- To use tone services on a pulse-dialing line, insert "X" in the fax number. "X" switches the dialing mode from pulse to tone temporarily.
- If the machine is connected to the telephone network through a PBX, make sure to enter the outside line access number specified in [PBX Access Number] before the fax number. For [PBX Access Number], see page 187 "Administrator Settings".
- A password for accessing the [Address Book] menu can be specified in [Admin. Tools Lock]. For [Admin. Tools Lock], see page 187 "Administrator Settings".

Modifying or deleting fax destinations

Press the [User Tools] key.

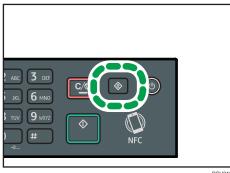

DSH210

2. Press the [▲] or [▼] key to select [Address Book], and then press the [OK] key.

A password for accessing the [Address Book] menu can be specified in [Admin. Tools Lock]. For details about [Admin. Tools Lock], see page 187 "Administrator Settings".

- Press the [▲] or [▼] key to select [Quick Dial No.] or [Fax Speed Dial No.], and then press
 the [OK] key.
- Press the [▲] or [▼] key to select [No.], and then enter the desired Quick Dial number (1 to 8) or Speed Dial number (1 to 100) using the number keys.

The fax number and fax name registered for that number appear.

Press the [▲] or [▼] key to select [Fax No.], and then modify the fax number (up to 40 characters).

If you want to delete the fax number, press the [◀] key until the current number is deleted.

Press the [▲] or [▼] key to select [Name], and then modify the fax name (up to 20 characters).

If you want to delete the fax name, press the [◀] key until the current name is deleted.

- 8. Confirm the setting, and then press the [OK] key.
- 9. Press the [User Tools] key to return to the initial screen.



• For details about entering characters, see page 31 "Entering Characters".

Registering Fax Destinations Using Web Image Monitor

- 1. Start the web browser and access the machine by entering its IP address.
- 2. Click [Quick Dial Destination] or [Fax Speed Dial Destination].
- 3. From the [Destination Type] list, select [Fax].
- Select [Quick Dial Number] or [Speed Dial Number], and then select the registration number from the list.
- 5. Register information as necessary.
- 6. Enter the administrator password if required.
- 7. Click [Apply].
- 8. Close the web browser.

Fax destination settings



ltem	Setting	Description
Quick Dial Number / Speed Dial Number	Required	Select the number to which you want to register Quick Dial or Speed Dial destination.
Name	Optional	Name of the destination. The name specified here will be shown on the screen when selecting a fax destination. Can contain up to 20 characters.
Fax Number	Required	Fax number of the destination. Can contain up to 40 characters. If the machine is connected to the telephone network through a PBX, make sure to enter the outside line access number specified in [PBX Access Number] before the fax number. For [PBX Access Number], see page 187 "Administrator Settings".



- A fax number can contain 0 to 9, "P" (pause), " \bigstar ", " \ddagger ", "-", and space.
- If necessary, insert a pause in the fax number. The machine pauses briefly before it dials the digits following the pause. You can specify the length of the pause time in the [Pause Time] setting under [Fax TX Settings]. For [Pause Time], see page 172 "Fax Features Settings".
- For details about using Web Image Monitor, see page 201 "Configuring the Machine Using Utilities".
- To use tone services on a pulse-dialing line, insert "\(\dots \)" in the fax number. "\(\ddots \)" switches the dialing mode from pulse to tone temporarily.

Modifying fax destinations

1. Start the web browser and access the machine by entering its IP address.

2. Click [Quick Dial Destination] or [Fax Speed Dial Destination].

If you modify the Speed Dial entry, proceed to Step 4.

- 3. Click [Fax Quick Dial Destination].
- 4. Select the entry to modify, and then click [Change].

If you want to delete the entry, click [Delete].

5. Modify settings as necessary.

To delete the entry, confirm the entry you have selected.

- 6. Enter the administrator password if required.
- 7. Click [Apply].
- 8. Close the web browser.

Sending a Fax



 It is recommended that you call the receiver and confirm with them when sending important documents.

Selecting Transmission Mode


The following explains the transmission modes of the fax function and how to select them.

Types of transmission modes

There are two types of transmission:

- Memory transmission
- Immediate transmission

Selecting the transmission mode

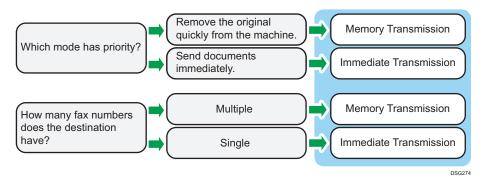

Description of transmission modes

• Memory transmission


In this mode, the machine scans several originals into memory and sends them all at once. This is convenient when you are in a hurry and want to remove the document from the machine. In this mode, you can send a fax to multiple destinations. If the [Auto Redial] under [Fax TX Settings] is enabled, the machine redials the fax destination automatically when the line is busy or a transmission error occurs. The number of redial attempts is set to two or three in five-minute intervals, depending on the [Country] setting under [Admin. Tools]. You can disable [Auto Redial] under [Fax Features]. For details, see page 172 "Fax Features Settings".

Immediate transmission

In this mode, the machine scans the original and faxes it simultaneously. This is convenient when you want to send an original quickly or when you want to check the destination you are sending to. The original is not stored in memory. You can only specify one destination. If fax is not received normally, an error message appears on the control panel.

Configuring the transmission mode

1. Press the [Facsimile] key, and then press the [◀] or [▶] key.

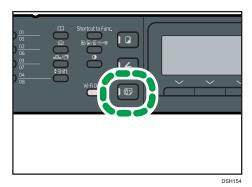

Alternatively, you can press the [Shortcut to Func.] key if [Shortcut to Function] under [Admin. Tools] is set to [Fax Immediate TX]. For [Shortcut to Function], see page 187 "Administrator Settings".

- 2. Press the $[^{\blacktriangle}]$ or $[^{\blacktriangledown}]$ key to select [Immediate TX], and then press the [OK] key.
- Press the [▲] or [▼] key to select [Off], [On], or [Next Fax Only], and then press the [OK] key.

For Memory Transmission, select [Off].


For Immediate Transmission, select [On] or [Next Fax Only].

4. Press the [User Tools] key to return to the initial screen.

Basic Operation for Sending a Fax



- The original in the ADF takes precedence over the original on the exposure glass if you place originals both in the ADF and on the exposure glass.
- 1. Press the [Facsimile] key.

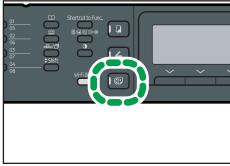

DSH15

2. Place the original on the exposure glass or in the ADF.


To place the originals, see page 56 "Placing Originals".

3. Enter the fax number (up to 40 characters) using the number keys, or specify a destination using the One Touch buttons or Speed Dial function.

For details about entering characters, see page 31 "Entering Characters". For details about specifying destinations using the One Touch buttons or Speed Dial function, see page 139 "Specifying the Fax Destination".

If the machine is connected to the telephone network through a PBX, make sure to enter the outside line access number specified in [PBX Access Number] before the fax number. For [PBX Access Number], see page 187 "Administrator Settings".

4. Press the [Start] key.

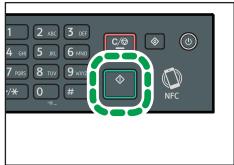

DSH14

- Depending on the machine's settings, you may be prompted to enter the fax number again if
 you manually entered the destination fax number. In this case, re-enter the number within 60
 seconds, press the [OK] key, and then press the [Start] key. If the fax numbers do not match,
 go back to Step 3. For [Fax Number Confirmation], see page 187 "Administrator Settings".
- When using the exposure glass in Memory Transmission mode, you will be prompted to place another original. In this case, proceed to the next step.
- 5. If you have more originals to scan, press [Yes] within 60 seconds, place the next original on the exposure glass, and then press [OK]. Repeat this step until all originals are scanned.

If you do not press [Yes] within 60 seconds, the machine will start to dial the destination.

6. When all originals have been scanned, press [No] or the [Start] key to start sending the fax.



- A fax number can contain 0 to 9, pause, "\(\dagger \dagger
- If necessary, insert a pause in a fax number. The machine pauses briefly before it dials the digits
 following the pause. You can specify the length of the pause time in the [Pause Time] setting under
 [Fax TX Settings]. For [Pause Time], see page 172 "Fax Features Settings".

- To use tone services on a pulse-dialing line, insert "*\times" in a fax number. "\times" switches the dialing mode from pulse to tone temporarily.
- You can specify multiple destinations and broadcast the fax you are sending. For sending a fax using the broadcast function, see page 139 "Specifying the Fax Destination".
- The machine prompts you to enter the fax number twice only when you dial the destination manually. Destinations specified using the One Touch buttons, Speed Dial function, or [Pause/ Redial] key need not be confirmed.
- When in Memory Transmission mode, you can enable the [Auto Redial] setting under [Fax TX Settings] to set the machine to automatically redial the destination if the line is busy or an error occurs during transmission. For [Auto Redial], see page 172 "Fax Features Settings".
- When in Memory Transmission mode, the machine's memory may become full while scanning the
 originals. In this case, the screen prompts you to cancel the transmission or to send only the pages
 that have been scanned successfully.
- If paper is jammed in the ADF, the jammed page has not been scanned properly. When the
 machine is in Immediate Transmission mode, resend the fax starting from the jammed page. When
 in Memory Transmission mode, scan the entire originals again. For details about removing paper
 jammed in the ADF, see page 256 "Clearing Misfeeds".

Canceling a fax

Follow the procedure below to cancel sending a fax.

When in Immediate Transmission mode

If you cancel sending a fax while the machine is scanning the original, the fax transmission process is canceled immediately. In this case, an error is displayed on the other party's machine.


When in Memory Transmission mode

If you cancel sending a fax while the machine is scanning the original, the machine will not send the document.


If you cancel sending a fax during transmission, the fax transmission process is canceled immediately. In this case, an error is displayed on the other party's machine.

o

1. Press the [Facsimile] key.

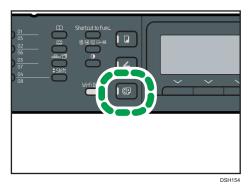

2. Press the [Clear/Stop] key.

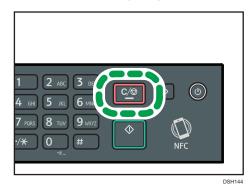

UNote

If you cancel sending a fax while broadcasting, only the fax to the current destination is canceled.
 The fax will be sent to the subsequent destinations as normal. For details about sending a fax using the broadcast function, see page 139 "Specifying the Fax Destination".


Specifying the Fax Destination

Other than entering the destination fax number using the number keys, you can specify destinations using the following functions:

- One Touch buttons
- Speed Dial
- Broadcast function
- Redial function


Specifying the destination using the One Touch buttons

1. Press the [Facsimile] key.

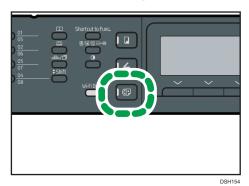

2. Press the One Touch button to which the desired Quick Dial entry is registered.

Press the [Shift] key if you want to use Quick Dial entries Nos. 5 to 8 before pressing a One Touch button. For registering the Quick Dial entries, see page 130 "Registering Fax Destinations".

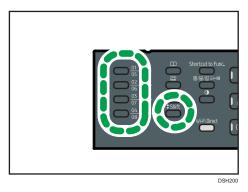


U Note


• You can check the registered names and fax numbers by printing a report. For printing the Quick Dial list, see page 194 "Printing Lists/Reports".

Specifying the destination using Speed Dial

1. Press the [Facsimile] key.

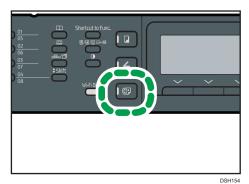

2. Press the [Address Book] key.

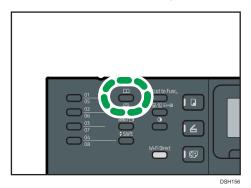

3. Make sure [Search Address Book] is selected, and then press the [OK] key.

If you want to search for a specific entry by its registration number or name, use the following procedure:

- Searching by the registration number
 Press the [Address Book] key again, enter the number using the number keys, and then press the [OK] key.
- Searching by the name
 Enter the first letters of the name using the number keys, and then press the [OK] key. Each time you enter a character, the display changes to show the matching name.
- Press the [▲] or [▼] key to select the desired Speed Dial entry, and then press the [OK] key.

For registering the Speed Dial entries, see page 130 "Registering Fax Destinations".



• The Address Book shows only the Speed Dial entries. Use the One Touch buttons to specify Quick Dial destinations.


 You can check the registered names and fax numbers by printing a report. For printing the Speed Dial list, see page 194 "Printing Lists/Reports".

Specifying the destination using the broadcast function

You can send a fax to multiple destinations (up to 100 destinations) simultaneously.

Faxes are sent to destinations in the order they were specified.

1. Press the [Facsimile] key.

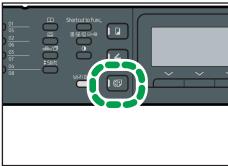

DSH15

2. Add a destination by using one of the following methods:

- To add a Quick Dial destination: press a corresponding One Touch button.
- To add a Speed Dial destination: press the [Address Book] key, select [Search Address Book], select a destination, and then press the [OK] key.
- To add a manually-specified destination: confirm that [No.key] is pressed, and then enter the
 destination fax number using the number keys.

3. Press the [OK] key.

Press [List] to see the list of destinations that have been added so far.

Go back to Step 2 to add further destinations.




- · While specifying multiple destinations, you can press the [Clear/Stop] key to clear all destinations.
- If you specify multiple destinations in Immediate Transmission mode, the mode switches to Memory Transmission mode temporarily.
- While broadcasting, pressing the [Clear/Stop] key cancels the fax to the current destination only.

Specifying the destination using the redial function


You can specify the last used destination as the destination for the current job.

This function saves time when you are sending to the same destination repeatedly, as you do not have to enter the destination each time.

1. Press the [Facsimile] key.

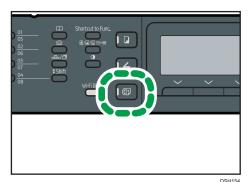

2. Press the [Pause/Redial] key.

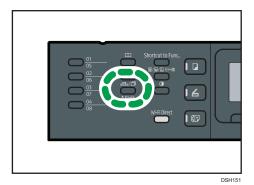

Useful Sending Functions

You can check the status of the other party's machine easily before sending a fax by using the On Hook Dial function. Using an external telephone, you can talk and send a fax in one call.

The procedure differs depending on whether [Operation] is set to [Easy Mode] or [Advanced Mode] in [Fax Features].

Sending a fax using On Hook Dial

The On Hook Dial function allows you to check the destination's status while listening to the tone from the internal speaker. This function is useful when you want to ensure that the fax will be received.




The On Hook Dial function cannot be used when [Fax Number Confirmation] under [Admin. Tools]
is enabled.

1. Place the original.


If [Operation] is set to [Easy Mode], you cannot send faxes using the exposure glass.

2. Press the [Facsimile] key.

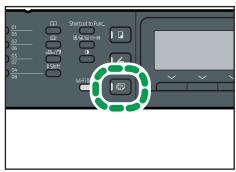

DSH154


3. Press the [On Hook Dial] key.

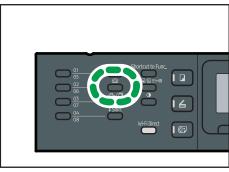

DSH15

"On Hook" appears on the screen.

- 4. Specify the destination using the number keys.
- 5. If you hear a high pitched tone, press the [Start] key.

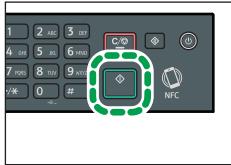

DSH14

If [Operation] is set to [Easy Mode], Step 6 does not apply.

6. If the original is placed on the exposure glass, press [TX], and then press the [Start] key.



- For details about selecting the transmission mode, see page 135 "Selecting Transmission Mode".
- For details about [Fax Number Confirmation], see page 187 "Administrator Settings".
- For details about [Operation], see page 172 "Fax Features Settings".


Sending a fax after a conversation

An external telephone allows you to send a fax after finishing your conversation without having to disconnect and redial. This function is useful when you want to ensure that the fax has been received.

1. Place the original.

If [Operation] is set to [Easy Mode], you cannot send faxes using the exposure glass.

2. Press the [Facsimile] key.

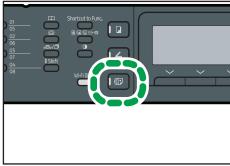

DSH154

- 3. Pick up the handset.
- 4. Specify the destination using the external telephone.
- 5. When the other party answers, ask them to press their fax start button.
- 6. If you hear a high pitched tone, press the [Start] key.



DSH147

If [Operation] is set to [Easy Mode], Step 8 does not apply.

7. If the original is placed on the exposure glass, press [TX], and then press the [Start] key.

8. Replace the handset.



• For details about [Operation], see page 172 "Fax Features Settings".


Specifying Scan Settings for Faxing

Adjusting image density

This section describes how to adjust image density for the current job.

There are three image density levels. The darker the density level, the darker the printout.

1. Press the [Density] key.

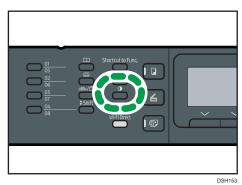

Press the [▲] or [▼] key to select the desired density level, and then press the [OK] key.



You can change the machine's default [Density] setting to always scan with a specific density level.
 For [Density], see page 172 "Fax Features Settings".

Specifying the resolution

This section describes how to specify the scan resolution for the current job.

There are three resolution settings:

Standard

Select this when the original is a printed or typewritten document with normal-sized characters.


Detail

Select this when the original is a document with small print.

Photo

Select this when the original contains images such as photographs or shaded drawings.

1. Press the [Image Quality] key.

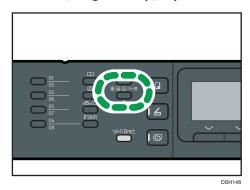

Press the [▲] or [▼] key to select the desired resolution setting, and then press the [OK] key.



• You can change the machine's default [Resolution] setting to always scan with a specific resolution level. For [Resolution], see page 172 "Fax Features Settings".

Using the Fax Function from a Computer (LAN-Fax)

This section describes how to use the fax function of the machine from a computer.

You can send a document directly from a computer through this machine to another fax machine, without printing the document.

Basic Operation for Sending Faxes from a Computer

This section describes the basic operation for sending faxes from a computer.

You can select a destination from the LAN-Fax address book or enter a fax number manually. You can send faxes to up to 100 destinations at one time.

The procedure in this section is an example based on Windows 7.



- Using LAN-Fax, you can send up to 10 pages (including the cover sheet) at a time.
- Before sending a fax, the machine stores all the fax data in memory. If the machine's memory
 becomes full while storing this data, the fax transmission will be canceled. If this happens, lower the
 resolution or reduce the number of pages and try again.
- 1. Open the file you want to send.
- 2. On the [File] menu, click [Print...].
- 3. Select the LAN-Fax driver as the printer, and then click [Print].
- 4. Specify a destination.
 - To specify a destination from the LAN-Fax address book:

Select a destination from [User List:], and then click [Add to List].

Repeat this step to add more destinations.

To enter a fax number directly:

Click the [Specify Destination] tab, and enter a fax number (up to 40 digits) in [Fax Number:], and then click [Add to List].

Repeat this step to add more destinations.

5. To attach a cover sheet, click [Edit Cover Sheet] on the [Specify Destination] tab, and then select the [Attach a Cover Sheet] check box.

Edit the cover sheet as necessary, and then click [OK].

For details about editing a fax cover sheet, see page 153 "Editing a Fax Cover Sheet".

6. Click [Send].





- For details, see the LAN-Fax driver help.
- A fax number can contain 0 to 9, "P" (pause), "\(\dagger \), "\(\dagger \)
- If necessary, insert a pause in a fax number. The machine pauses briefly before it dials the digits following the pause. You can specify the length of the pause time in the [Pause Time] setting under [Fax TX Settings]. For [Pause Time], see page 172 "Fax Features Settings".
- To use tone services on a pulse-dialing line, insert "*\times" in a fax number. "\times" switches the dialing mode from pulse to tone temporarily.
- To delete an entered destination, select the destination in the [Destination List:], and then click [Delete from List].
- You can register the fax number you entered in the [Specify Destination] tab in the LAN-Fax Address Book. Click [Save to Address Book] to open the dialog box for registering a destination.

Canceling a fax

You can cancel sending a fax using either the machine's control panel or your computer, depending on the status of the job.

Canceling while the machine is receiving a fax from the computer


If the machine is shared by multiple computers, be careful not to cancel the fax of another user.

- 1. Double-click the printer icon on the task bar of your computer.
- Select the print job you want to cancel, click the [Document] menu, and then click [Cancel].
- 3. Click [Yes].

Canceling while sending a fax


Cancel the fax using the control panel.

1. Press the [Facsimile] key.

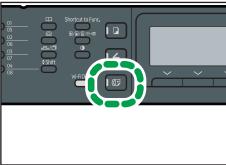

DSH154

2. Press the [Clear/Stop] key.

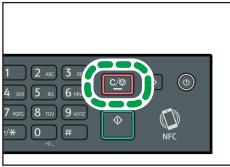

DSH14

Configuring Transmission Settings

This section describes how to configure transmission settings in the LAN-Fax driver's properties. Properties are set separately for each application.

- 1. On the [File] menu, click [Print...].
- Select the LAN-Fax driver as the printer, and then click a button such as [Preferences].
 LAN-Fax driver properties dialog box appears.
- 3. Click the [Setup] tab.
- Configure settings as necessary, and then click [OK].
 For details about the settings, see the LAN-Fax driver help.

Configuring the LAN-Fax Address Book

This section describes the LAN-Fax address book. Configure the LAN-Fax address book on the computer. The LAN-Fax address book allows you to specify LAN-Fax destinations quickly and easily.

The LAN-Fax address book can contain up to 1000 entries, including individual destinations and groups of destinations.

Opening the LAN-Fax address book

- 1. On the [Start] menu, click [Devices and Printers].
- 2. Right-click the LAN-Fax driver icon, and then click [Printing preferences].
- 3. Click the [Address Book] tab.

Registering destinations

- 1. Open the LAN-Fax address book, and then click [Add User].
- 2. Enter the destination information.

You must enter a contact name and fax number.

3. Click [OK].

Modifying destinations

- Open the LAN-Fax address Book, select the destination you want to modify from the [User List:], and then click [Edit].
- 2. Modify information as necessary, and then click [OK].

Click [Save as new User] if you want to register a new destination with similar information. This is useful when you want to register a series of destinations that contain similar information. To close the dialog box without modifying the original destination, click [Cancel].

Registering groups

- 1. Open the LAN-Fax address Book, and then click [Add Group].
- 2. Enter the group name in [Group Name].
- Select the destination you want to include in the group from [User List:], and then click [Add].

To delete a destination from a group, select the destination you want to delete from [List of Group Members:], and then click [Delete from List].

4. Click [OK].

Modifying groups

- Open the LAN-Fax address Book, select the group you want to modify from the [User List:], and then click [Edit].
- 2. To add a destination to the group, select the destination you want to add from [User List:] and click [Add].
- To delete a destination from the group, select the destination you want to delete from [List of Group Members:], and then click [Delete from List].
- 4. Click [OK].

Deleting individual destinations or groups

 Open the LAN-Fax Address Book, select the destination you want to delete from [User List:], and then click [Delete].

A confirmation message appears.

2. Click [Yes].

Exporting/Importing LAN-Fax Address Book data



The following procedure is based on Windows 7 as an example. If you are using another
operating system, the procedure might vary slightly.

Exporting LAN-Fax Address Book data

LAN-Fax Address Book data can be exported to a file in CSV (Comma Separated Values) format. Follow this procedure to export LAN-Fax Address Book data.

- 1. Open the LAN-Fax Address Book, and then click [Export].
- 2. Navigate to the location to save the LAN-Fax Address Book data, specify a name for the file, and then click [Save].

Importing LAN-Fax Address Book data

LAN-Fax Address Book data can be imported from files in CSV format. You can import address book data from other applications if the data is saved as a CSV file.

- 1. Open the LAN-Fax Address Book, and then click [Import].
- 2. Select the file containing the address book data, and then click [Open].

A dialog box for selecting the items to import appears.

3. For each field, select an appropriate item from the list.

Select [*empty*] for fields for which there is no data to import. Note that [*empty*] cannot be selected for [Name] and [Fax].

4. Click [OK].

For details about the settings, see the LAN-Fax driver help.



- CSV files are exported using Unicode encoding.
- LAN-Fax Address Book data can be imported from CSV files whose character encoding is Unicode
 or ASCII.
- Group data cannot be exported or imported.

O

 Up to 1000 destinations can be registered in the LAN-Fax Address Book. If this limit is exceeded during importing, the remaining destinations will not be imported.

Editing a Fax Cover Sheet

- 1. On the [File] menu, click [Print...].
- 2. Select the LAN-Fax driver as the printer, and then click [Print].
- 3. Click the [Specify Destination] tab, and then click [Edit Cover Sheet].
- **4.** Configure settings as necessary, and then click [OK]. For details about the settings, see the LAN-Fax driver help.

Receiving a Fax

- When receiving an important fax, we recommend you confirm the contents of the received fax with the sender.
- The machine may not be able to receive faxes when the amount of free memory space is low.



- You can use an external telephone to use this machine as a telephone.
- Only A4, Letter, or Legal size paper can be used for printing faxes.

Selecting Reception Mode

The following explains the reception modes of the fax function and how to select them.


In FAX/TAD mode, the machine receives the fax automatically after the external telephone
answering device rings the number of times specified in [Total No. of Rings (TAD)]. Set the external
telephone answering device to ring before receiving a fax. For details about [Total No. of Rings
(TAD)], see page 172 "Fax Features Settings".

Types of reception mode

There are three types of reception:

- Fax Only mode
- FAX/TEL Manual mode
- FAX/TAD mode

Selecting reception modes

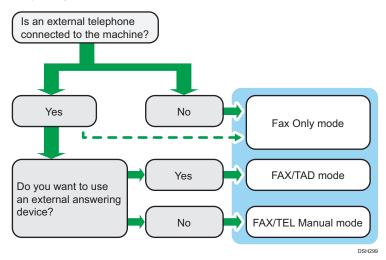


Description of reception modes

- Fax Only mode (auto reception)
 - When an external telephone is not connected
 The machine automatically answers all incoming calls in fax reception mode.
 - When an external telephone is connected
 The machine automatically answers all incoming calls in fax reception mode after the external telephone rings the number of times specified. It is convenient for those who only use telephones for outgoing calls.
- FAX/TAD mode (auto reception)
 In this mode, the external telephone answering device answers and records messages when the machine receives telephone calls. If the incoming call is a fax call, the machine receives the fax automatically. For details, see page 157 "Receiving a fax in FAX/TAD mode".
- FAX/TEL Manual mode (manual reception)
 In this mode, you must answer calls with the handset or an external telephone. If a call is a fax call, you must start the fax reception manually. For details, see page 156 "Receiving a fax in FAX/TEL Manual mode".

Configuring the reception mode

1. Press the [User Tools] key.

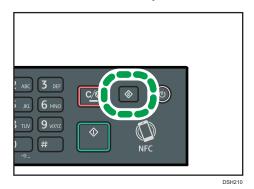

- 2. Press the [▲] or [▼] key to select [Fax Features], and then press the [OK] key.
- 3. Press the [▲] or [▼] key to select [Reception Settings], and then press the [OK] key.
- Press the [▲] or [▼] key to select [Switch Reception Mode], and then press the [OK] key.
- Press the [♠], [♥], (♠] key to select the desired reception mode, and then press the [OK] key.
- 6. Press the [User Tools] key to return to the initial screen.



- In FAX/TAD mode, the machine automatically starts to receive faxes after the external
 telephone answering device rings the number of times specified in [Total No. of Rings (TAD)]
 under [Fax Features]. Make sure to set the external telephone answering device to answer
 calls before the machine starts to receive faxes. For [Total No. of Rings (TAD)], see page 172
 "Fax Features Settings".
- An external telephone is required to use this machine as a telephone. For details about connecting an external telephone to the machine, see Initial Guide for FAX.

Receiving a fax in FAX/TEL Manual mode



- The procedure differs depending on whether [Operation] is set to [Easy Mode] or [Advanced Mode] in [Fax Features].
- To receive faxes, be sure to first remove any originals loaded in the ADF.
- 1. Pick up the handset to answer the call.

A normal telephone call starts.

2. When you hear a fax calling tone or no sound, press the [Facsimile] key, and then press the [Start] key.

If [Operation] is set to [Easy Mode], proceed to Step 5.

- 3. Press [RX].
- 4. Press the [Start] key.
- 5. Replace the handset.



• For details about [Operation], see page 172 "Fax Features Settings".

Receiving a fax in Fax Only mode

When the reception mode is set to Fax Only mode, the machine automatically answers all incoming calls in fax reception mode.



- You can specify the number of times the machine rings before answering a call in the [Number of Rings] setting under [Fax Features]. For [Number of Rings], see page 172 "Fax Features Settings".
- If you answer a call with the external telephone while the machine is ringing, a normal telephone call starts. If you hear a fax calling tone or no sound, receive the fax manually. To receive the fax manually, see page 156 "Receiving a fax in FAX/TEL Manual mode".

Receiving a fax in FAX/TAD mode

When the reception mode is set to FAX/TAD mode, the external telephone answering device answers and records messages when the machine receives telephone calls. If the incoming call is a fax call, the machine receives the fax automatically.

1. When there is an incoming call, the external telephone answering device rings the number of times specified in [Total No. of Rings (TAD)] under [Fax Features].

For [Total No. of Rings (TAD)], see page 172 "Fax Features Settings".

If the external telephone answering device does not answer, the machine starts to receive the fax automatically.

- 2. If the external telephone answering device answers, the machine monitors silence on the line for 30 seconds (silence detection).
 - If a fax calling tone or no sound is detected, the machine starts to receive the fax automatically.
 - If a voice is detected, a normal telephone call starts. The external telephone answering device records messages.



- You can manually receive a fax during silence detection. To receive the fax manually, see page 156 "Receiving a fax in FAX/TEL Manual mode".
- Silence detection does not terminate for 30 seconds even if the external telephone answering device goes on-hook, unless you press the [Clear/Stop] key and disconnect the call.

Forwarding or Storing Faxes in Memory

To prevent unauthorized users from seeing sensitive faxes, you can set the machine to forward received faxes to a preset destination, or store them in memory without printing them out.



 The table below shows what happens after forwarding succeeds or fails depending on the machine's configuration.


Forwarding	[Print Received File]	Results
Success	Automatic	The machine prints out the fax and deletes it from memory.
Success	Manual	The machine stores the fax in memory for later manual printing.
Failure	Automatic	The machine prints out a forwarding failure report, prints out the fax, and then deletes it from memory.
Failure	Manual	The machine prints out a forwarding failure report and stores the fax in memory for later manual printing.

- If the machine is unable to print out a fax due to machine errors such as an empty paper tray or a paper jam, the fax will remain in memory. The remaining pages will start printing as soon as the problem is resolved.
- The number of forwarding attempts and the attempt interval time can be specified using Web
 Image Monitor. For details about the forwarding destination, forwarding trials and interval settings,
 see page 208 "Configuring the System Settings".

Forwarding settings

To specify the forwarding conditions for received faxes, configure the machine as follows:

1. Press the [User Tools] key.

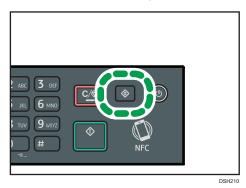

- 2. Press the [▲] or [▼] key to select [Fax Features], and then press the [OK] key.
- 3. Press the [▲] or [▼] key to select [Reception Settings], and then press the [OK] key.
- 4. Press the [▲] or [▼] key to select [Reception File Setting], and then press the [OK] key.
- Press the [▲] or [▼] key to select [Forward & Print], and then press the [OK] key.
 To send e-mail notifications after faxes are forwarded, proceed to Step 6.
- 6. Press the [♠] or [▼] key to select [Notify Forward Status], and then press the [OK] key.
- 7. Press the [▲] or [▼] key to select [Active], and then press the [OK] key.
 - [Active]: Send an e-mail notification after forwarding. E-mail notification destination depends on how the forwarding destination is configured.
 - [Inactive]: An e-mail notification is not sent.

Specifying the forwarding destination using Web Image Monitor

- 1. Start the web browser and access the machine by entering its IP address.
- 2. Click [System Settings].
- 3. Click the [Fax] tab.
- 4. Specify the forwarding destination in [Forwarding Destination].
 - [E-mail Address]: Enter a destination e-mail address.
 - [Scan Destination]: Select a scan destination as a forwarding destination.
- 5. Enter the administrator password if required.
- 6. Click [OK].
- 7. Close the web browser.

For details about using Web Image Monitor, see page 202 "Using Web Image Monitor".

Configuring the storing conditions

To specify the storing conditions for received faxes, configure the machine as follows:

- 1. Press the [User Tools] key.
- 2. Press the [▲] or [▼] key to select [Fax Features], and then press the [OK] key.
- Press the [▲] or [▼] key to select [Reception Settings], and then press the [OK] key.
- 4. Press the [▲] or [▼] key to select [Reception File Setting], and then press the [OK] key.
- 5. Press the [▲] or [▼] key to select [Print] or [Forward & Print], and then press the [OK] key.
- 6. Press the [▲] or [▼] key to select [Print Received File], and then press the [OK] key.
- 7. Press the [▲] or [▼] key to select [Automatic] or [Manual], and then press the [OK] key.
 - [Automatic]: Automatically print out the received faxes and delete from memory.
 - [Manual]: Store the received faxes in memory for later manual printing.
- 8. Press the [User Tools] key to return to the initial screen.

When the fax is successfully printed out, it will be deleted from memory.


If the machine is unable to print out a fax due to machine errors such as an empty paper tray or a paper jam, the fax will remain in memory. The remaining pages will start printing as soon as the problem is resolved.

Printing Out Faxes Stored in Memory

This section explains how to print out received faxes stored in the machine's memory.

If the Data-In indicator is flashing, there is a fax in machine's memory. Follow the procedure below to print the fax.

1. Press the [User Tools] key.

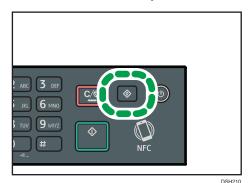

- Press the [▲] or [▼] key to select [Fax Features], and then press the [OK] key.
- 3. Press the [▲] or [▼] key to select [Reception Settings], and then press the [OK] key.
- 4. Press the [▲] or [▼] key to select [RX Store File], and then press the [OK] key.

- 5. Press the [▲] or [▼] key to select [Print Selected File], and then press the [OK] key.
- 6. Press the $[^{\blacktriangle}]$ or $[^{\blacktriangledown}]$ key to select the print job, and then press the [OK] key.
- 7. Press the [OK] key.
- 8. Press the [User Tools] key to return to the initial screen.

Lists/Reports Related to Fax

The lists and reports related to the fax function are as follow:

• Fax Journal

Prints a fax transmission and reception journal for the last 50 jobs.

• Print Status Report

Prints out the latest transmission result.

Standby File List

Prints a list of pending fax jobs remaining in the machine's memory.

• Power Failure Report

Prints a report when the machine's power has been interrupted while sending or receiving a fax, or images stored in the machine's memory have been lost due to the machine being turned off for a prolonged period of time.

• Fax Speed Dial List

Prints a list of Speed Dial entries.

• Quick Dial No. List

Prints a list of Quick Dial entries.



 For more information on Fax Journal and Print Status Report, see page 172 "Fax Features Settings".

7. Configuring the Machine Using the Control Panel

This chapter describes how to configure the machine using the control panel.

Some items might not appear, depending on the model type you are using.


Basic Operation

There are two main ways to access the machine settings:


- Press the [User Tools] key to access the system or network settings.
- Press the [◄] or [►] key while in standby mode of each function to access the Copy, Scan, or Fax settings.

To check which category the function you want to configure belongs to, see page 165 "Menu Chart".

1. If you want to configure the machine's system settings, press the [User Tools] key.

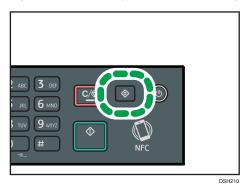

Otherwise, press the [◀] or [▶] key while "Ready" is displayed on the initial screen of the Copy, Scan, and Fax settings.

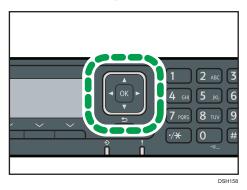

2. Press the [▼] or [▲] key to select the settings you want to use.

For a list of available items, see page 165 "Menu Chart".

If you select [Address Book], [Network Settings], or [Admin. Tools] menu, you might be requested to enter a password. Enter the four-digit password, and then press the [OK] key. For details about the password, see [Admin. Tools Lock] on page 187 "Administrator Settings".

- 3. To confirm setting items and values displayed, press the [OK] key.
- 4. To go back to the previous item, press the [Back] key.



 To return to the initial screen, press the [Back] key the same amount of times as the number of selected items, or press the [User Tools] key once.

Menu Chart

This section lists the parameters included in each menu.

For details about configuring the machine using Web Image Monitor, see page 201 "Configuring the Machine Using Utilities".

Mportant (

• Some items can also be configured using Web Image Monitor.

Copier Features ([◀] [▶] key setting)

For details, see page 166 "Copier Features Settings".

Scan Settings ([◀] [▶] key setting)

For details, see page 170 "Scan Settings".

Fax Features ([User Tools] key setting)

For details, see page 172 "Fax Features Settings".

Address Book ([User Tools] key setting)

For details, see page 179 "Address Book Settings".

System Settings ([User Tools] key setting)

For details, see page 180 "System Settings".

Tray Paper Settings

For details, see page 185 "Tray Paper Settings".

Wi-Fi Setup Wizard

For details, see Setup Guide.

Network Settings ([User Tools] key setting)

For details, see page 196 "Network Settings".

Print List/Report ([User Tools] key setting)

For details, see page 194 "Printing Lists/Reports".

Admin. Tools ([User Tools] key setting)

For details, see page 187 "Administrator Settings".

Copier Features Settings

ltem	Description	Value
Select Paper	Select the paper tray used for copying.	Tray 1 Bypass Tray Default: [Tray 1]
Sort	Configures the machine to sort the output pages into sets when making multiple copies of a multipage document (P1, P2, P1, P2).	Off On Default: [Off]
Original Type	Specifies the content of originals, to optimize copy quality.	Mixed Select this when the original contains both text and photographs or pictures. Text Select this when the original contains only text and no photographs or pictures. Photo Select this when the original contains photographs or pictures. Use this mode for the following types of original: Photographs Pages that are entirely or mainly photographs or pictures, such as magazine pages. Default: [Mixed]

ltem	Description	Value
Density	Specifies the image density for photocopying.	•
Reduce/Enlarge	Specifies the percentage by which copies are enlarged or reduced.	• 50% • 71% (A4->A5) • 82% (B5J->A5) • 93% • 100% • 122% (A5->B5J) • 141% (A5->A4) • 200% • 400% • Region B • 50% • 65% LT->HLT • 78% LG->LT • 93% • 129% HLT->LT • 155% HLT->LG • 200% • 400% • Zoom 25-400% Default: [100%]

ltem	Description	Value
Duplex/Combine	Specifies combined copying. Select a copy mode according to your original and how you want the copy outputs to appear. For more details, see page 74 "Making Combined/2-sided Copies". Note that enabling combined copying automatically disables ID card copying. Some items might not appear, depending on the model type you are using.	 Off 1Sd 2Orig->Comb 2on1 1Sd 1Sd 4Orig->Comb 4on1 1Sd 1 Sided Orig->2 Sided Copy 1Sd 4Orig->Comb 2on1 2Sd 1Sd 8Orig->Comb 4on1 2Sd Default: [Off]

ltem	Description	Value
ID Card Settings	Specifies the ID Card Copy setting.	ID Card Copy
		• Off
		• On
		Default: [Off]
		ID Card Center Line
		Specify whether to draw a center line when making ID card copy.
		• Print
		Do not Print
		Default: [Do not Print]
		ID Card Size
		You can change the ID card copy scanning size.
		 Horizontal: 50 to 148mm (1.90 to 5.83 inches)
		 Vertical: 50 to 216mm (1.90 to 8.50 inches)
		Default(horizontal × vertical): 57×88mm (2.24×3.46inches)

Scan Settings

ltem	Description	Value
Scan Size	Specifies the scanning size according to the size of the original.	8 \(^1/_2 \times 14, 8 \) \(^1/_2 \times 11, 8 \) \(^1/_2 \times 5 \) \(^1/_2, 7 \) \(^1/_4 \times 10 \) \(^1/_2, A4, B5, A5, 16K, Custom Size \) \(\begin{array}{c} \text{Region } \begin{array}{c} \text{A} \\ \text{Default: [A4]} \\ \begin{array}{c} \text{Region } \begin{array}{c} \text{B} \\ \text{Default: [8 1/2 \times 11]} \end{array}
Scanning Mode	Specifies the scanning mode using the control panel.	B&W The machine creates 1-bit black- and-white images. Images contain only black and white colors. Color The machine creates 8-bit color images. Images are full color. Gray Scale The machine creates 8-bit black- and-white images. Images contain black and white, and intermediate gray colors. Default: [B&W]
Max. E-mail Size	Specifies the maximum size of a file that can be sent by e-mail.	 1 MB 2 MB 3 MB 4 MB 5 MB No Limit Default: [1 MB]

ltem	Description	Value
Density	Specifies the image density for scanning originals.	
Resolution	Specifies the resolution for scanning the original.	 100 × 100dpi 150 × 150dpi 200 × 200dpi 300 × 300dpi 400 × 400dpi 600 × 600dpi Default: [300 × 300dpi]
Compression (Color)	Specifies the color compression ratio for JPEG files. The lower the compression ratio, the higher the quality but greater the file size.	LowMediumHighDefault: [Medium]
Limitless Scan	Sets the machine to request next originals when scanning with the exposure glass.	Off On Default: [Off]
File Type	Specifies whether to create a multi-page file containing all pages or separate single-page files when scanning multiple pages. Note that a scanned file can contain multiple pages only when the file format is PDF or TIFF. If the file format is JPEG, a single-page file is created for each scanned page.	Multi-page Single Page Default: [Multi-page]

Fax Features Settings

Fax TX Settings

ltem	Description	Value
Immediate TX	Sets the machine to send a fax immediately when the original is scanned.	Off Select this when using Memory Transmission. On Select this when using Immediate Transmission. Next Fax Only Select this when using Immediate Transmission for the next transmission only. Default: [Off]
Resolution	Specifies the resolution to use for scanning originals.	Standard Select this when the original is a printed or typewritten document with normal-sized characters. Detail Select this when the original is a document with small print. Photo Select this when the original contains images such as photographs or shaded drawings. Default: [Standard]
Density	Specifies the image density to use for scanning originals.	Light Normal Dark Default: [Normal]

/

Item	Description	Value
Pause Time	Specifies the length of pause time when a pause is inserted between the digits of a fax number.	1 to 15 seconds Default: 3 seconds
Auto Redial	Sets the machine to redial the fax destination automatically when the line is busy or a transmission error occurs, if the machine is in Memory Transmission mode. The number of redial attempts is preset to two or three times, depending on the [Country] setting under [Admin. Tools], in fiveminute intervals.	Off On Default: [On]
Print Fax Header	Sets the machine to add a header to every fax you send. The header includes the current date and time, user fax name and fax number of the machine, job ID, and page information.	On Default: [On]

Reception Settings

Specifies the settings for receiving a fax.

ltem	Description	Value
Switch Reception Mode	Specifies the reception mode.	Fax Only The machine automatically answers all incoming calls in fax reception mode. FAX/TEL(Mnl.) The machine rings when it receives incoming calls. The machine receives faxes only when you manually receive faxes. FAX/TAD The machine receives faxes automatically when a fax call is received. Otherwise, the connected telephone answering device answers the call. Default: [Fax Only]
Auto Reduction	Sets the machine to reduce the size of a received fax if it is too large to print on a single sheet of paper. Note that the machine only reduces the size down to 74%. If further reduction is required to fit the fax on a single sheet, it will be printed on separate sheets without being reduced.	Off On Default: [On] Default may be [Off] depending on the [Country] setting under [Admin. Tools].
Total No. of Rings (TAD)	Specifies the number of times the external telephone answering device rings before the machine starts to receive faxes in FAX/TAD mode.	1 to 20 times, in increments of 1 Default: 5 times
Number of Rings	Specifies the number of times the machine rings before it starts to receive faxes in Fax Only mode.	3 to 5 times Default: 3 times

ltem	Description	Value
RX Store File	You can print or delete received faxes.	 Print Selected File You can select and print received faxes. Delete Selected File You can select and delete received faxes. Delete All Files
Reception File Setting	Sets the machine to store received faxes into memory for printing or forward them to a preset destination. Use Web Image Monitor to specify the forwarding destination (for details, see page 208 "Configuring the System Settings").	Print Forward & Print Default: [Print]
Print Received File	Sets the machine to automatically print the faxes received into memory or store them for later manual printing.	Manual Automatic Default: [Automatic]
Notify Forward Status	Sets the machine to send e-mail notifications after faxes are forwarded. The e-mail notification destination depends on how the forwarding destination is configured using Web Image Monitor (for details, see page 208 "Configuring the System Settings").	Inactive Active Default: [Inactive]

Delete Standby File

Deletes unsent fax jobs remaining in the machine's memory. The machine can store up to 5 unsent fax jobs. This function is only performed when selected.

ltem	Description	Value
Delete Selected File	To delete a fax job, select the desired job, and then press the [OK] key. Pressing the [Back] key exits to the previous level of the menu tree without deleting the fax job.	-
Delete All Files	To delete the fax jobs, press the [OK] key. Pressing the [Back] key exits to the previous level of the menu tree without deleting the fax jobs.	-

Communication Settings

Item	Description	Value
ECM Transmission	Sets the machine to automatically resend parts of the data that are lost during transmission.	Off On Default: [On]
ECM Reception	Sets the machine to automatically receive parts of the data that are lost during reception.	Off On Default: [On]
Dial Tone Detect	Sets the machine to detect a dial tone before the machine begins to dial the destination automatically. (Default may be [Not Detect] depending on the [Country] setting under [Admin. Tools].)	Detect Not Detect Default: [Detect]
Transmission Speed	Specifies the transmission speed for the fax modem.	 33.6 Kbps 14.4 Kbps 9.6 Kbps 7.2 Kbps 4.8 Kbps 2.4 Kbps Default: [33.6 Kbps]

ltem	Description	Value
Reception Speed	Specifies the reception speed for the fax modem.	 33.6 Kbps 14.4 Kbps 9.6 Kbps 7.2 Kbps 4.8 Kbps 2.4 Kbps Default: [33.6 Kbps]

Report Print Settings

ltem	Description	Value
Print Status Report	Sets the machine to print a transmission report automatically after a fax transmission. When the machine is in Immediate Transmission mode, the image of the original will not be reproduced on the report, even if [Error Only (Image Attached)] or [Every Time (With Image)] is selected. Note that if a memory error occurs for LAN-Fax transmission, a transmission report will always be printed regardless of this setting. The transmission report will be printed on A4 or Letter size paper.	 Error Only Prints a report when a transmission error occurs. Error Only (Image Attached) Prints a report with an image of the original when transmission error occurs. Print Every Time Prints a report for every fax transmission. Every Time (With Image) Prints a report with an image of the original for every fax transmission. Do not Print Default: [Every Time (With Image)]
Print Fax Journal	Sets the machine to print a fax journal automatically for every 50 fax jobs (both sent and received). The fax journal will be printed on A4 or Letter size paper.	Auto PrintDo not Auto PrintDefault: [Auto Print]

Operation

ltem	Description	Value
Operation	You can simplify the procedure for sending and receiving faxes by disabling the use of the exposure glass. If originals are loaded in the ADF, you can fax them using the ADF in either mode by pressing the [Start] key.	 Easy Mode If you select [Easy Mode], you can receive faxes by pressing the [Start] key. The exposure glass cannot be used in this mode. Advanced Mode If you select [Advanced Mode], you can specify whether to send or receive faxes after pressing the [Start] key. Default: [Advanced Mode]

Address Book Settings

ltem	Description	Value
Quick Dial No.	Specifies the fax number and name for Quick Dial entries. You can register up to 8 Quick Dial entries.	 No. Specifies the Quick Dial number. Fax No. Specifies the fax number for Quick Dial entries. The fax number can contain up to 40 characters, including 0 to 9, pause, "★", "#", and space. Name Specifies the name for Quick Dial entries. The name can contain up to 20 characters.
Fax Speed Dial No.	Specifies the fax number and name for Speed Dial entries. You can register up to 100 Speed Dial entries.	 No. Specifies the Speed Dial number. Fax No. Specifies the fax number for Speed Dial entries. The fax number can contain up to 40 characters, including 0 to 9, pause, "*\dark", "#", and space. Name Specifies the name for Speed Dial entries. The name can contain up to 20 characters.

System Settings

Adjust Sound Volume

Specifies the volume of the sounds produced by the machine.

ltem	Description	Value
Panel Key Sound	Specifies the volume of the beep that sounds when a key is pressed.	Off Low Middle High Default: [Low]
On Hook Mode	Specifies the volume of the sound from the speaker during on hook mode.	Off Low Middle High Default: [Middle]
Job End Tone	Specifies the volume of the beep that sounds when a job is complete.	Off Low Middle High Default: [Middle]
Job Error Tone	Specifies the volume of the beep that sounds when a fax transmission error occurs.	Off Low Middle High Default: [Middle]
Alarm Volume	Specifies the volume of the alarm that sounds when an operation error occurs.	Off Low Middle High Default: [Middle]

′

I/O Timeout

Item	Description	Value
USB	Specifies how many seconds the machine waits for print data, if the data is interrupted while it is being sent from the computer via USB. If the machine does not receive any more data within the time specified here, the machine only prints the data it has received. If printing is frequently interrupted by data from other ports, increase the timeout period.	15 sec.60 sec.300 sec.Default: [60 sec.]
Network	Specifies how many seconds the machine waits for print data, if the data is interrupted while it is being sent from the computer via network. If the machine does not receive any more data within the time specified here, the machine only prints the data it has received. If printing is frequently interrupted by data from other ports, increase the timeout period.	15 sec.60 sec.300 sec.Default: [15 sec.]
Fixed USB Port	Specifies whether the same printer/ LAN-Fax driver can be used for multiple machines or not under USB connection.	Off You must install the printer/ LAN-Fax driver separately for individual machines, because the machine other than the original will be recognized as a new device upon USB connection. On The same printer/LAN-Fax driver you have installed in your computer can be used with any machine other than the one originally used for installation, if the machine is of the same model. Default: [Off]

Auto Continue

ltem	Description	Value
Auto Continue	Sets the machine to ignore an error with paper size or type and continue printing. The printing stops temporarily when an error is detected, and restarts automatically after about ten seconds using the settings made on the control panel.	On Default: [Off]

Toner Saving

Item	Description	Value
Toner Saving	Sets the machine to print using a reduced amount of toner (for prints made by the copier function only).	On Default: [Off]

Toner End Option Settings

This function is available for only SP 221SF, SP 220SFNw, and SP 221SFNw.

ltem	Description	Value
Toner End Option Settings	This setting is used to monitor the toner level.	Continue Printing The machine no longer monitors the toner level. Even when the toner runs out, printing will continue and no messages will be displayed. Stop Printing Monitoring the toner level is enabled. The remaining toner level can be checked in the control panel and on Web Image Monitor. Default: [Stop Printing]

Supplies Status

Displays information about consumables. To replace the print cartridge, contact your sales or service representative.

Item	Description	Value
Print Cart.	Displays the remaining amount of supplies.	

Printer Registration

Adjust the registration of each tray if necessary. You can adjust the registration value between -15 and +15 (that is, -1.5 and +1.5 mm, in 0.1 mm increments).

Default: 0 for all parameters

Item	Description
Horiz.: Tray 1	Select this to adjust the tray 1 registration horizontally.
Vert.: Tray 1	Select this to adjust the tray 1 registration vertically.
Horiz.: Bypass Tray	Select this to adjust the bypass tray registration horizontally.
Vert.: Bypass Tray	Select this to adjust the bypass tray registration vertically.

Low Humidity Mode

ltem	Description	Value
Low Humidity Mode	If the machine is used in a room where humidity level is low, black lines of a few millimeters thick may appear on printouts with 75-millimeter spaces in between. Selecting [On] for this setting may prevent these lines from appearing (wait for about one day until this setting becomes effective). Note that when this setting is enabled, the machine automatically performs self-maintenance in every 10 minutes.	Off On Default: [Off]

Image Density

ltem	Description	Value
Image Density	Adjusts the density of images on prints.	-3 to +3
		Default: 0

Fusing Unit Amelrtn. Mode

Item	Description	Value
Fusing Unit AmeIrtn.Mode	If the toner is not transferred properly, causing the paper to be stained, select [On] to improve transferability.	Off On Default: [Off]

/

Tray Paper Settings

Item	Description	Value
Paper Type: Tray 1	Specifies the paper type for tray 1.	 Plain Paper Recycled Paper Thick Paper 1 Thin Paper Letterhead Preprinted Paper Prepunched Paper Bond Paper Cardstock Color Paper Default: [Plain Paper]
Paper Type: Bypass Tray	Specifies the paper type for bypass tray.	 Plain Paper Recycled Paper Thick Paper 1 Thin Paper Letterhead Preprinted Paper Prepunched Paper Bond Paper Cardstock Color Paper Default: [Plain Paper]

ltem	Description	Value
Paper Size: Tray 1		A4, 8 $^{1}/_{2} \times 11$, B5 JIS, B6 JIS, A5 LEF, A5 SEF, A6, 8 $^{1}/_{2} \times 14$, 8 $^{1}/_{2} \times 13$, 8.5 × 13.4, 8.5 × 13.6, 16K, 8.11 × 13.3, 5 $^{1}/_{2} \times 8$ $^{1}/_{2}$, Custom Size
		Default: A4
		Region B
		Default: $[8^{1}/_{2} \times 11]$
Paper Size: Bypass Tray		A4, $8^{1}/_{2} \times 11$, B5 JIS, B6 JIS, A5 LEF, A5 SEF, A6, $8^{1}/_{2} \times 14$, $8^{1}/_{2} \times 13$, 8.5 × 13.4, 8.5 × 13.6, 16K, 8.11 × 13.3, $5^{1}/_{2} \times 8^{1}/_{2}$, Custom Size
		Default: [A4]
		Region B
		Default: [8 ¹ / ₂ × 11]
Size Mismatch Detection	Sets the machine to report an error if the paper size does not match the print job's settings.	On Off Default: [Off]

Administrator Settings

Item	Description	Value
Item Set Date/Time	Description Sets the date and time of the machine's internal clock. (Default may differ depending on the [Country] setting under [Admin. Tools].)	 Set Date Specifies the date of the machine's internal clock. Only dates that correspond with the year and month can be set. Incompatible dates will be refused. Default date format: [Year/Month/Day] Date format: Month/Day/Year, Day/Month/Year, or Year/Month/Day Year: 2000 to 2099 Month: 1 to 12 Day: 1 to 31 Set Time Sets the time of the machine's internal clock. Default time format: [24-hour Format] Time format: 12-hour Format, 24-hour Format AM/PM stamp: AM, PM (for 12-hour Format)
		Hour: 0 to 23 (for 24-hour Format), or 1 to 12 (for 12-hour Format) Minute: 0 to 59
Program Fax Information	Specifies the fax name and fax number of the machine.	 No. Specifies the fax number of the machine using up to 20 characters, including 0 to 9, space, and "+". Name: Specifies the fax name of the machine using up to 20 alphanumeric characters and symbols.

ltem	Description	Value
Dial/Push Phone	Specifies the line type of the telephone line. To configure this setting, contact your telephone company and select the setting based on your telephone line. Selecting a wrong setting may cause failures in fax transmissions. [Dial Phone (20PPS)] may not appear depending on the country setting of the machine.	 Push Phone Dial Phone (10PPS) Dial Phone (20PPS) Default: [Push Phone]
PSTN / PBX	Sets the machine to connect to the public switched telephone network (PSTN) or a private branch exchange (PBX).	PSTN PBX Default: [PSTN]
PBX Access Number	Specifies the dial number to access the outside line when the machine is connected to a PBX. Make sure that this setting matches the setting of your PBX. Otherwise, you may not be able to send faxes to outside destinations.	0 to 999 Default: 9
Function Priority	Specifies the mode that is activated when the power is turned on, or if the time specified for [System Auto Reset Timer] elapses without activity while the initial screen of the current mode is displayed.	CopierFacsimileScannerDefault: [Copier]

ltem	Description	Value
System Auto Reset Timer	Sets the machine to return to the mode specified in [Function Priority].	 On (30 sec., 1 min., 2 min., 3 min., 5 min., 10 min.) Off Default: [On] (1 minute)
Energy Saver Mode	Sets the machine to enter Energy Saver mode, Energy Saver mode 1 or Energy Saver mode 2, to reduce power consumption. The machine recovers from Energy Saver mode when it receives a print job, prints a received fax, or when any key is pressed.	EnergySaverMode 1 The machine enters Energy Saver mode 1 if the machine has been idle for about 30 seconds. It takes less time to recover from Energy Saver mode 1 than from power-off state or Energy Saver mode 2, but power consumption is higher in Energy Saver mode 1 than in Energy Saver mode 2. Default: [Off] Off On EnergySaverMode 2 The machine enters Energy Saver mode 2 after the period of time specified for this setting is passed. The machine consumes less power in Energy Saver mode 2 than in Energy Saver mode 1, but it takes longer to recover from Energy Saver mode 2 than from Energy Saver mode 1. Europe On (1 to 20 minutes) 30sec Off Default: [30sec] Countries other than European countries On (1 to 240 minutes) 30sec Off

ltem	Description	Value
Language	Specifies the language used on the screen and in reports. The default value for this setting is the language you have specified during the Initial Setup, which is required after turning on the machine for the first time.	 English German French Italian Spanish Dutch Swedish Norwegian Danish Finnish Portuguese Czech Hungarian Polish Simplified Chinese Russian Brazilian Portuguese Turkish Arabic Kazakhstan
Area (only SP 221S ,SP 220SNw and SP 221SNw for Europe)	By selecting the area in which the machine is being used, you can narrow down the choice of display language and other settings. You can also specify this setting during the initial setup after turning the power on for the first time.	 Europe Asia Oceania Americas Africa Default: [Europe]

ltem	Description	Value
Country	Selects the country in which the machine is used. The country code you specify determines the time and date display format and the default values of the fax transmission-related settings. Make sure to select the country code correctly. Selecting a wrong country code may cause failures in fax transmissions. The default value for this setting is the country code you have specified during the Initial Setup, which is required after turning on the machine for the first time.	Algeria, Argentina, Australia, Austria, Belgium, Bolivia, Brazil, Bulgaria, Canada, Chile, China, Colombia, Costa Rica, Croatia, Cyprus, Czech Republic, Denmark, Dominican Republic, Ecuador, Egypt, El Salvador, Estonia, Finland, France, Germany, Greece, Guam, Guatemala, Honduras, Hong Kong, Hungary, Iceland, India, Ireland, Israel, Italy, Japan, Jordan, Kazakhstan, Kuwait, Latvia, Lebanon, Liechtenstein, Lithuania, Luxembourg, Malaysia, Malta, Mexico, Montenegro, Morocco, Netherlands, New Zealand, Nicaragua, Nigeria, Norway, Oman, Panama, Paraguay, Peru, Philippines, Poland, Portugal, Puerto Rico, Romania, Russia, Saudi Arabia, Senegal, Serbia, Singapore, Slovakia, Slovenia, South Africa, Spain, Sri Lanka, Sweden, Switzerland, Taiwan, Thailand, Trinidad and Tobago, Tunisia, Turkey, UAE, UK, Uruguay, USA, Venezuela, Vietnam, Virgin Islands, Yemen


Item	Description	Value
Reset Settings	Be sure not to clear the settings by mistake.	 Reset All Settings Resets the machine's settings to their defaults except the following: Language settings Country settings Network settings Fax destinations Press the [OK] key to execute. Press the [Back] key to exit to the previous level of the menu tree without clearing the settings. Reset Network Settings Resets the network settings to their defaults. Press the [OK] key to execute. Press the [Back] key to exit to the previous level of the menu tree without clearing the settings. Clear Address Book Clears the fax Quick Dial/Speed Dial destinations. Press the [OK] key to execute. Press the [Back] key to exit to the previous level of the menu tree without clearing the destinations.
Shortcut to Function	Assigns one of the following functions to the [Shortcut to Func.] key on the control panel.	 ID Card Copy Mode Fax Immediate TX Select Scanner Dest. Default: [ID Card Copy Mode]
Admin. Tools Lock	Specifies a four-digit password for accessing the [Address Book], [Network Settings], [Wi-Fi Setup Wizard] and [Admin. Tools] menus. Do not forget this password.	On (0000 to 9999)OffDefault: [Off]

ltem	Description	Value
IPsec	Selects whether to enable or disable IPsec. This function appears only when a password is specified under [Admin. Tools Lock].	Inactive Active Default: [Inactive]
Fax Number Confirmation	Sets the machine to require a fax number to be entered twice when specifying a destination manually. When this function is enabled, you cannot use the On Hook Dial function. This function appears only when a password is specified under [Admin. Tools Lock].	On Off Default: [Off]
Save Scn Data to USB	Specify whether to enable or disable Scan to USB. This function appears only when a password is specified under [Admin. Tools Lock].	Inactive Active Default: [Active]

Printing Lists/Reports

Printing the Configuration Page

1. Press the [User Tools] key.

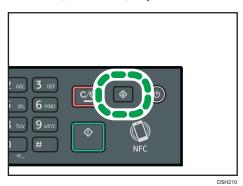

- 2. Press the [▲] or [▼] key to select [Print List/Report], and then press the [OK] key.
- 3. Press the [▲] or [▼] key to select [Configuration Page], and then press the [OK] key.
- 4. Press [OK] in the confirmation screen.

Types of Lists/Reports



 Reports will be printed on A4 or Letter size paper. Load one of these sizes of paper into the tray before printing reports.

Configuration Page

Prints general information and the current configurations of the machine.

Fax Journal

Prints a fax transmission and reception journal for the last 50 jobs.

Standby File List

Prints a list of fax jobs remaining in the machine's memory to be printed, sent, or forwarded.

Quick Dial No. List

Prints a list of scan and fax Quick Dial entries.

Fax Speed Dial List

Prints a list of Speed Dial entries.

• Sort by Speed Dial No.

Prints the list with the entries sorted by Speed Dial registration number.

• Sort by Name

Prints the list with the entries sorted by name.

Scanner Address List

Prints a list of scan destinations.

Scanner Journal

Prints a scanner journal for the last 100 Scan to E-mail, Scan to FTP, and Scan to Folder transmissions.

Maintenance Page

Prints the maintenance page.

Network Settings

- Depending on the settings you change, the machine might need to be restarted.
- Depending on the model you are using, some items might not appear.

Ethernet

ltem	Description	Value
MAC Address	Displays the machine's MAC address.	-
Ethernet Speed	Displays the current Ethernet speed setting.	 100Mbps Full Duplex 100Mbps Half Duplex 10Mbps Full Duplex 10Mbps Half Duplex Ethernet Unavailable Appears when a network cable is not connected.
Set Ethernet Speed	Specifies the speed for Ethernet communication. Select a speed that matches your network environment. For most networks, the default setting is the optimum setting.	 Auto Select 100Mbps Full Duplex 100Mbps Half Duplex 10Mbps Full Duplex 10Mbps Half Duplex Default: [Auto Select]

Wi-Fi

This function is available for only SP 220SNw, SP 221SNw, SP 220SFNw, and SP 221SFNw.

ltem	Description	Value
Wi-Fi Enable	Select whether to enable or disable Wireless LAN. If [Disable] is set, [Wi-Fi Status], [MAC Address], [Current Connection], [Input SSID], [WPS] and [Wi-Fi Direct] are not displayed.	DisableEnableDefault: [Disable]
Wi-Fi Status	Displays the current connection status.	-

ltem	Description	Value
MAC Address	Displays the machine's MAC address.	-
Current Connection	Displays detailed information about the connection, such as the SSID and the wireless signal strength.	_
Input SSID	Displays the procedure for manually connecting to a wireless LAN. It leads you step-by-step through configuring the settings for connecting with a wireless LAN.	_
WPS	Connects with one touch using WPS (Wi-Fi Protected Setup). For details, see Setup Guide.	• PBC • PIN
Wi-Fi Direct	Enables devices to communicate directly with each other without using a central access point.	_

IPv4 Configuration

ltem	Description	Value
DHCP	Sets the machine to receive its IPv4 address, subnet mask, and default gateway address automatically from a DHCP server.	Inactive Active Default: [Active]
IP Address	Specifies the machine's IPv4 address when DHCP is not used. Use this menu to check the current IP address when DHCP is used.	Default: XXX.XXX.XXX The numbers represented by "X" vary according to your network environment.
Subnet Mask	Specifies the machine's subnet mask when DHCP is not used. Use this menu to check the current subnet mask when DHCP is used.	Default: XXX.XXX.XXX The numbers represented by "X" vary according to your network environment.

ltem	Description	Value
Gateway Address	Specifies the machine's default gateway address when DHCP is not used. Use this menu to check the current default gateway address when DHCP is used.	Default: XXX.XXX.XXX The numbers represented by "X" vary according to your network environment.
IP Address Method	Displays the IP address acquisition method.	IP Not ReadyDHCPManual Config.Default IP
Wi-Fi Direct IP Address	Displays the IP address of Wi-Fi Direct.	-

IPv6 Configuration

ltem	Description	Value
IPv6	Select whether to enable or disable IPv6.	Inactive Active Default: [Inactive]
DHCP	Sets the machine to receive its IPv6 address from a DHCP server.	Inactive Active Default: [Active]
IP Address (DHCP)	Displays the IPv6 address obtained from a DHCP server.	-

ltem	Description	Value
Manual	Specifies the machine's IPv6 settings.	Manual Config. Address
Config. Address		Specifies the machine's IPv6 address when DHCP is not used. Can contain up to 46 characters.
		For details about entering characters, see page 31 "Entering Characters".
		Prefix Length
		Specifies the prefix length, using a value between 0 and 128.
		Gateway Address
		Specifies the IPv6 address of the default gateway. Can contain up to 46 characters.
		For details about entering characters, see page 31 "Entering Characters".
Stateless	Displays the IPv6 stateless addresses	Stateless Address 1
Address	obtained from a Router Advertisement.	Stateless Address 2
		Stateless Address 3
		Stateless Address 4
Link-local Address	Displays the IPv6 link local address.	-



• Contact your network administrator for information about the network configuration.

Wi-Fi Setup Wizard

You can enable wireless connections by following the wizard's instructions. For details, see Setup Guide. If [Wi-Fi Enable] in [Wi-Fi] under [Network Settings] is set to [Disable], the [Wi-Fi Setup Wizard] does not appear.

8. Configuring the Machine Using Utilities

This chapter describes how to configure the machine using utilities.

Available Setting Functions Using Web Image Monitor and Smart Organizing Monitor

Use Web Image Monitor or Smart Organizing Monitor to change the configuration of the machine from a computer.

Available operations for Web Image Monitor and Smart Organizing Monitor are as follows:

Available operations	Web Image Monitor	Smart Organizing Monitor
Checking the system settings	Available	Available
Configuring paper settings	Available	Available
Adjusting the sound volume	Available	Unavailable
Configuring the paper settings for copying	Available	Unavailable
Configuring fax settings	Available	Unavailable
Configuring toner saving	Available	Unavailable
Configuring interface settings	Available	Available
Configuring the shortcut to function settings	Available	Unavailable
Registering destinations	Available	Unavailable
Checking the network settings	Available	Available
Configuring IPsec settings	Available	Available
Configuring Energy Saver Mode	Available	Available
Configuring administrator settings	Available	Unavailable
Printing lists/reports	Available	Available

Using Web Image Monitor



- Some items might not appear, depending on the model type you are using.
- Some items can also be configured using the control panel.

Supported web browsers

- Internet Explorer 6 or later
- Firefox 3.0 or later
- Safari 4.0 or later



 To operate the machine via Web Image Monitor, you must first configure the machine's TCP/IP or wireless LAN settings. For details, see page 196 "Network Settings" or page 214 "Configuring the Network Settings".

8

Displaying Top Page

When you access the machine using Web Image Monitor, the top page appears in your browser's window.


- 1. Launch the web browser.
- 2. In the web browser's address bar, enter "http://(machine's IP address)/" to access the machine.

If a DNS or WINS server is used and the machine's host name has been specified, you can enter the host name instead of the IP address.

The top page of Web Image Monitor appears.

Top page

Every Web Image Monitor page is divided into the following areas:

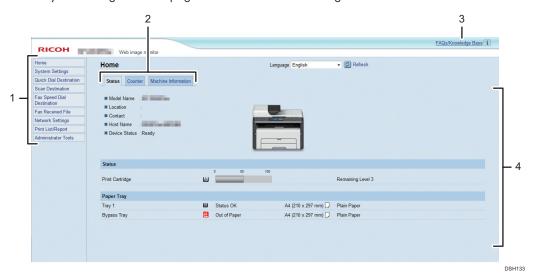

1. Menu area

Clicking a menu shows its contents in the main area.

2. Tab area

Contains tabs for switching between information and settings you want to see or configure.

3. FAQs/Knowledge Base

Provides answers to frequently asked questions and other useful information about using this machine.

An Internet connection is required to view this information.

4. Main area

Displays the contents of the item selected in the menu area.

Information in the main area is not automatically updated. Click [Refresh] at the upper-right in the main area to update the information. Click the refresh button of the web browser to refresh the entire browser screen.



- If you use an older version of a supported web browser or the web browser has JavaScript and cookies disabled, display and operation problems may occur.
- If you are using a proxy server, configure the web browser settings as necessary. For details about the settings, contact your network administrator.
- The previous page may not appear even if the back button of the web browser is clicked. If this happens, click the refresh button of the web browser.
- The FAQs (Frequently Asked Questions)/Knowledge Base are not available in certain languages.

Changing the Interface Language

Select the desired interface language from the [Language] list.

Checking the System Information

Click [Home] to display the main page of Web Image Monitor. You can check the current system information on this page.

This page contains three tabs: [Status], [Counter], and [Machine Information].

Status Tab

ltem	Description
Model Name	Shows the name of the machine.
Location	Shows the location of the machine as registered on the [SNMP] page.
Contact	Shows the contact information of the machine as registered on the [SNMP] page.
Host Name	Shows the host name specified in [Host Name] on the [DNS] page.
Device Status	Shows the current messages on the machine's display.

Status

ltem	Description
Print Cartridge	Shows the amount of toner remaining.

Paper Tray

ltem	Description
Tray 1	Shows the current state and paper size/type setting of tray 1.
Bypass Tray	Shows the current state and paper size/type setting of the bypass tray.



• If a non-genuine print cartridge is installed, toner life cannot be reliably indicated.

Counter Tab

Page Counter

ltem	Description
Printer	Shows the following for pages printed using the printer function: • Total number of pages printed using the printer function, and lists/reports printed from the [List/Test Print] menu under [Printer Features] • Number of color pages (always shows 0) • Number of black-and-white pages
Scanner	Shows the following for pages scanned using the scanner function: Total number of pages Number of color pages Number of black-and-white pages
Copier	 Shows the following for pages printed using the copier function: Total number of pages Number of color pages (always shows 0) Number of black-and-white pages
Fax (only SP 221SF, SP 220SFNw, and SP 221SFNw)	Shows the following for public telephone line faxes: Total number of pages sent and received Number of pages received Number of pages sent

Print Counter

Item	Description
Page Total	Shows the total number of all prints from the machine:
	Pages printed using the printer, copy, and fax functions
	Lists/Reports printed from the [Print List/Report] menu
	Lists/Reports printed from the [List/Test Print] menu under [Printer Features]

9

Machine Information Tab

Machine Information

ltem	Description
Firmware Version	Shows the version of firmware installed on the machine.
Engine FW Version	Shows the version of firmware for the machine engine.
Machine ID	Shows the identification number of the machine.
Fax Card (only SP 221SF, SP 220SFNw, and SP 221SFNw)	Shows that a fax card is installed.
Total Memory	Shows the total memory installed on the machine.

Configuring the System Settings

Click [System Settings] to display the page for configuring the system settings.

This page contains the following tabs: [Sound Volume Adjustment] (only SP 221SF, SP 220SFNw, and SP 221SFNw), [Tray Paper Settings], [Copier], [Fax], [Toner Management], [Interface], and [Shortcut to Function].

Sound Volume Adjustment Tab

This function is available for only SP 221SF, SP 220SFNw, and SP 221SFNw.

Sound Volume Adjustment

ltem	Description
Panel Key Sound	Select the volume of the beep that sounds when a key is pressed from [Off], [Low], [Middle], or [High].
On Hook Mode	Select the volume of the sound from the speaker during on hook mode from [Off], [Low], [Middle], or [High].
Job End Tone	Select the volume of the beep that sounds when a job is complete from [Off], [Low], [Middle], or [High].
Job Error Tone	Select the volume of the beep that sounds when a fax transmission error occurs from [Off], [Low], [Middle], or [High].
Alarm Volume	Select the volume of the alarm that sounds when an operation error occurs from [Off], [Low], [Middle], or [High].

Tray Paper Settings Tab

Tray 1

Item	Description
Paper Size	Select the paper size for tray 1 from the following:
	A4 (210 × 297 mm), Letter (8.5 × 11), B5 (182 × 257 mm), B6 (128 × 182 mm), A5 (210 × 148 mm), A5 (148 × 210 mm), A6 (105 × 148 mm), Legal (8.5 × 14), Foolscap/Folio (8.5 × 13), 8.5 × 13.4, Indian Legal (8.5 × 13.6), 16K (195 × 267 mm), Australian-FOOLSCAP (8.11 × 13.3), Half Letter-S (5.5 × 8.5), Custom Size

ltem	Description
Paper Type	Select the paper type for tray 1 from the following:
	Plain Paper, Recycled Paper, Thick Paper 1 (100 to 130g/m2), Thin Paper (52 to 64g/m2), Letterhead, Preprinted Paper, Prepunched Paper, Bond Paper, Cardstock, Color Paper

Bypass Tray

ltem	Description
Paper Size	Select the paper size for the bypass tray from the following:
	A4 (210 × 297 mm), Letter (8.5 × 11), B5 (182 × 257 mm), B6 (128 × 182 mm), A5 (210 × 148 mm), A5 (148 × 210 mm), A6 (105 × 148 mm), Legal (8.5 × 14), Foolscap/Folio (8.5 × 13), 8.5 × 13.4, Indian Legal (8.5 × 13.6), 16K (195 × 267 mm), Australian-FOOLSCAP (8.11 × 13.3), Half Letter-S (5.5 × 8.5), Custom Size
Paper Type	Select the paper type for the bypass tray from the following: Plain Paper, Recycled Paper, Thick Paper 1 (100 to 130g/m2), Thin Paper (52 to 64g/m2), Letterhead, Preprinted Paper, Prepunched Paper, Bond Paper, Cardstock, Color Paper

Size mismatch detection

ltem	Description
Size mismatch detection	Select whether to set the machine to report an error if the paper size does not match the print job's settings.

Copier Tab

Select Paper

ltem	Description
Select Paper	Select the paper tray used for copying.

Separation Line

ltem	Description
Separation Line	Specify whether to print a line in the middle of the printed paper when making ID card copy or combined copy.

This function is available for only SP 221SF, SP 220SFNw, and SP 221SFNw.

Fax Number Confirmation

ltem	Description
Fax Number Confirmation	Enable this setting to configure the machine to require a fax number to be entered twice when specifying a destination manually.
	This setting appears only when the administrator password is set in the [Administrator] page.

Fax Received File Processing

ltem	Description
Received File Processing	Select whether received faxes are stored into the machine's memory for printing or forwarded to a destination specified for [Forwarding Destination].
Print Automatically	Select whether the faxes received into the machine's memory are printed automatically or stored for later manual printing.
Notify Forward Status	Select whether e-mail notifications are sent after forwarding faxes or not. Email notification destination depends on how [Forwarding Destination] is specified.
	 If specified with [E-mail Address]: the notification will be sent to the administrator e-mail address specified in [Administrator E-mail Address] in the [Administrator] page.
	If specified with [Scan Destination]: the notification will be sent to the notification destination specified for the selected scan destination.
	Note that if a destination e-mail address is not specified, no notification will be sent even if this setting is enabled.
Forwarding Destination	Specifies the forwarding destination.
	[E-mail Address]: Enter a destination e-mail address. Can contain up to 64 characters.
	[Scan Destination]: Select a scan destination as a forwarding destination.
Number of Trials of Forwarding (time)	Specifies how many times the machine attempts to forward a fax (1 to 255 times).

ರ

ltem	Description
Interval of Forwarding Trial (min.)	Specifies how many minutes the machine waits between forwarding attempts (1 to 255 minutes).

Toner Management Tab

Toner Saving

Item	Description
Toner Saving	Enable this setting to print using a reduced amount of toner when printing out copies.

Supply End Option

ltem	Description
Supply End Option	If [Continue Printing] is selected, refill toner will be available.

Interface Tab

Interface

ltem	Description
Fixed USB Port	Specifies whether the same printer/LAN-Fax driver can be used for multiple machines or not under USB connection.
	If this setting is enabled, the same printer/LAN-Fax driver you have installed in your computer can be used with any machine other than the one originally used for installation, if the machine is of the same model.
	If disabled, you must install the printer/LAN-Fax driver separately for individual machines, because the machine other than the original will be recognized as a new device upon USB connection.

Shortcut to Function Tab

Shortcut to Function

ltem	Description
Shortcut to Function Settings	Assigns one of the following functions to the [Shortcut to Func.] key on the control panel.
	• [ID Card Copy Mode]
	• [Fax Immediate TX]
	[Select Scanner Destination]

Q

9

Registering Destinations

Scan and fax destinations can be registered using Web Image Monitor.

A maximum of 100 scan destinations and 108 fax destinations (8 Quick Dial and 100 Speed Dial destinations) can be registered. See the scan and fax sections for more information on registering destinations.

For details about registering scan destinations, see page 85 "Registering Scan Destinations".

For details about registering fax destinations using Web Image Monitor, see page 130 "Registering Fax Destinations".

Configuring the Network Settings

Click [Network Settings] to display the page for configuring the network settings.

This page contains the following tabs: [Network Status], [IPv6 Configuration], [Network Application], [DNS], [Auto E-mail Notification], [SNMP], [SMTP], [POP3], [Wireless], and [Google Cloud].



- Depending on the settings you change, the machine might need to be restarted.
- Depending on the model you are using, some items might not appear.

Network Status Tab

General Status

ltem	Description
Ethernet Speed	Shows the type and speed of the network connection.
IPP Printer Name	Shows the name used to identify the machine on the network.
Network Version	Shows the version of the machine's network module (a part of the machine firmware).
Ethernet MAC Address	Shows the Ethernet MAC address of the machine.
Active Interface	Shows the active communication method.
Wi-Fi Direct IP Address (only SP 220SNw, SP 221SNw, SP 220SFNw, and SP 221SFNw)	Shows the IP address of Wi-Fi Direct.

TCP/IP Status

Item	Description
DHCP	Select whether the machine should receive a dynamic IPv4 address automatically using DHCP. To use DHCP, select [Active]. When enabled, the items below cannot be configured.
IP Address	Enter the IPv4 address for the machine.
Subnet Mask	Enter the subnet mask of the network.

ltem	Description
Gateway	Enter the IPv4 address of the network gateway.

IPv6 Configuration Tab

IPv6

ltem	Description
IPv6	Select whether to enable or disable IPv6. You cannot disable IPv6 using Web Image Monitor if the machine is currently in use in an IPv6 environment. In this case, use the control panel to disable [IPv6] under [Network Settings].
	When disabled, [DHCP], [Manual Configuration Address], [Prefix Length], and [Gateway Address] below cannot be configured.

IPv6 Address

ltem	Description
DHCP	Select whether or not the machine obtains its IPv6 address from a DHCP server.
IP Address (DHCP)	Displays the IPv6 address obtained from the DHCP server when [DHCP] is set to [Active].
Stateless Address	Displays up to four stateless auto addresses.
Gateway Address	Displays the machine's default gateway address.
Link-local Address	Displays the link local address of the machine. The link local address is an address that is valid only inside the local network (local segment).
Manual Configuration Address	Enter the machine's IPv6 address. Can contain up to 39 characters.
Prefix Length	Enter the prefix length, using a value between 0 and 128.
Gateway Address	Enter the default gateway's IPv6 address. Can contain up to 39 characters.

Network Application Tab

Scanner Send Setting

Item	Description
E-mail	Select to enable the Scan to E-mail feature.
Max. E-mail Size	Select the maximum size of scan files that can be attached to an e-mail message (1 to 5 MB, or no limit).
FTP	Select to enable the Scan to FTP feature.
Folder	Select to enable the Scan to Folder feature.

Network Print Setting

ltem	Description
IPP	Select to enable network printing using Internet Print Protocol (via TCP port 631/80).
FTP	Select to enable network printing using an embedded FTP server in the machine (via TCP port 20/21).
RAW	Select to enable network raw printing.
Port No.	Enter the TCP port number to use for raw printing. The valid range is 1024 to 65535, except 5222, 5353, 6006, 28900, 29102, 53550 and 49999 (default is 9100).
LPR	Select to enable network printing using LPR/LPD (via TCP port 515).

mDNS Setting

ltem	Description
mDNS	Select to enable Multicast DNS (via UDP port 5353). If disabled, the item below cannot be configured.
Printer Name	Enter the name of the machine. Can contain up to 32 characters.

8

DNS Tab

DNS

ltem	Description
DNS Method	Select whether to specify domain name servers manually or receive DNS information from the network automatically. When set to [Auto-Obtain (DHCP)], [Primary DNS Server], [Secondary DNS Server], and [Domain Name] below become unavailable.
Primary DNS Server	Enter the IPv4 address of the primary DNS.
Secondary DNS Server	Enter the IPv4 address of the secondary DNS.
Domain Name	Enter the IPv4 domain name for the machine. Can contain up to 32 characters.
IPv6 DNS Method	Select whether to specify the domain server manually or have the machine obtain its DNS information automatically.
	When set to [Auto-Obtain (DHCP)], [Primary IPv6 DNS Server], [Secondary IPv6 DNS Server], and [IPv6 Domain Name] below become unavailable.
Primary IPv6 DNS Server	Enter the IPv6 address of the primary IPv6 DNS server. Can contain up to 39 characters.
Secondary IPv6 DNS Server	Enter the IPv6 address of the secondary IPv6 DNS server. Can contain up to 39 characters.
IPv6 Domain Name	Enter the IPv6 domain name of the machine. Can contain up to 32 characters.
DNS Resolve Priority	Select whether to give priority to IPv4 or IPv6 for DNS name resolution.
DNS Timeout (seconds)	Enter the number of seconds the machine waits before considering a DNS request to have timed out (1 to 999 seconds).
Host Name	Enter a host name for the machine. Can contain up to 15 characters.

Auto E-mail Notification Tab

E-mail Notification 1/E-mail Notification 2

ltem	Description
Display Name	Enter a sender name for notification e-mail. Can contain up to 32 characters.
E-mail Address	Enter the address of the recipient of the alert email. Can contain up to 64 characters.
Paper Misfeed	Select to send an alert e-mail to the specified address if a paper jam occurs.
Out of Paper	Select to send an alert e-mail to the specified address if paper runs out.
Replace Print Cartridge Soon	Select to send an alert e-mail to the specified address if toner becomes low.
Call Service	Select to send an alert e-mail to the specified address if the machine requires servicing.
Replace Print Cartridge	Select to send an alert e-mail to the specified address if toner runs out.
Cover Open	Select to send an alert e-mail to the specified address if a cover is open.

SNMP Tab

SNMP

Item	Description
SNMP	Select whether to enable the machine to use SNMP services.

Trap

ltem	Description
Target Trap	Select whether to enable the machine to send traps to the management host (NMS).
	When disabled, [SNMP Management Host 1] and [SNMP Management Host 2] below become unavailable.
SNMP Management Host 1	Enter the IP address or host name of a management host. Can contain up to 64 characters.

g

ltem	Description
SNMP Management Host 2	Enter the IP address or host name of a management host. Can contain up to 64 characters.

Community

ltem	Description
Get Community	Enter the community name to use for authentication of Get requests. Can contain up to 32 characters.
Trap Community	Enter the community name to use for authentication of Trap requests. Can contain up to 32 characters.

System

ltem	Description
Location	Enter the location of the machine. The location entered here is displayed on the main page. Can contain up to 64 characters.
Contact	Enter the contact information of the machine. The contact information entered here is displayed on the main page. Can contain up to 64 characters.

SMTP Tab

SMTP

Item	Description
Primary SMTP Server	Enter the IP address or host name of the SMTP/POP3 server. Can contain up to 64 characters.
Port No.	Enter the port number for SMTP (1 to 65535).
Authentication Method	Select an authentication method from the following:
	[Anonymous]: The user name and password are not necessary.
	[SMTP]: The machine supports NTLM and LOGIN authentication.
	[POP before SMTP]: The POP3 server is used for authentication. When sending e-mails to an SMTP server, you can enhance the SMTP server security level by connecting to the POP server for authentication.

POP3 Tab

POP3 Settings

ltem	Description
POP3 Server	Enter the IP address or host name of the POP3 server for e-mail reception. The POP3 server specified here will be used for [POP before SMTP]. Can contain up to 64 characters.
User Account	Enter the user name for logging in to the POP3 server. Can contain up to 32 characters.
User Password	Enter the password for logging in to the POP3 server. Can contain up to 32 characters.
Authentication	Select an authentication method from the following:
	[None]: Password will not be encrypted.
	[APOP Authentication]: Password will be encrypted.
	[Auto]: Password will be encrypted or not be encrypted according to the POP3 server's settings.

Wireless Tab

This function is available for only SP 220SNw, SP 221SNw, SP 220SFNw, and SP 221SFNw.

Wireless LAN Status

ltem	Description
Wireless LAN Status	Displays the status of the connection to the wireless LAN.
MAC Address	Displays the MAC address.
Communication Mode	Displays the communication mode that the machine is connecting in.
SSID	Displays the SSID of the access point that the machine is connected to.
Wireless Signal Status	Displays the strength of the wireless signal that is being received.
Wireless	Specifies whether or not to use the wireless LAN. When [Active] is selected, [Wireless LAN Settings] below become
	available.

Wireless LAN Settings

ltem	Description
SSID	Enter the SSID of the access point.
	The SSID can contain up to 32 characters.
	When you click [Scan List], a list of available access points is displayed. You can select the SSID from the list.
Communication Mode	[Infrastructure] is selected by default. Therefore, connect the machine to a wireless router or access point.
Authentication	Select an authentication method.
Encryption	Select an encryption method.
WPA Passphrase	If [WPA2-PSK] or [Mixed Mode WPA/WPA2] is selected for [Authentication], enter the WPA encryption key.
WEP Key Length	If [WEP] is selected for [Encryption], select 64 bits or 128 bits for the length of the encryption key.
WEP Transmit Key ID	Select an ID number to identify each WEP key in case multiple WEP connections are configured.
WEP Key Format	Select a format for entering the WEP key.

ltem

Description



• If you are configuring the connection settings manually, check the SSID, authentication method, or encryption key of the access point or wireless router in advance.

Wi-Fi Direct Settings

ltem	Description
SSID	Enter the SSID name.
	The SSID can contain up to 32 characters.

Google Cloud Tab

This function is available for only SP 220SNw, SP 221SNw, SP 220SFNw, and SP 221SFNw.

Google Cloud

Item	Description
Google Cloud Print	Specify whether to enable [Google Cloud Print]. When Google Cloud Print is disabled, [Local Discovery] and [Timeout (seconds)] below cannot be configured.
Registration Status	Displays the status of Google Cloud Print registration.
Registration Account	Displays the Account (e-mail address) of Google Cloud Print registration.
Local Discovery	Specify whether to enable local discovery.

ltem	Description
Timeout (seconds)	Enter the number of seconds the machine waits before an XMPP connection times out.

Configuring the IPsec Settings

Click [IPsec Settings] to display the page for configuring the IPsec settings.

This page contains the following tabs: [IPsec Global Settings] and [IPsec Policy List].



• This function is available only when an administrator password is specified.

IPsec Global Settings Tab

ltem	Description
IPsec Function	Select whether to enable or disable IPsec.
Default Policy	Select whether to allow for the default IPsec policy.
Broadcast and Multicast Bypass	Select the services that you do not want to apply IPsec from the following: [DHCPv4], [DHCPv6], [SNMP], [mDNS], [NetBIOS], [UDP Port 53550]
All ICMP Bypass	Select whether to apply IPsec to ICMP packets (IPv4 and IPv6) from the following:
	[Active]: All ICMP packets will be bypassed without IPsec protection.
	"ping" command (echo request and echo reply) is not encapsulated by IPsec.
	[Inactive]: Some ICMP message types will be bypassed without IPsec protection.

IPsec Policy List Tab

Item	Description
Name	Displays the name of the IPsec policy.
Address Settings	Displays the IP address filter of the IPsec policy as below: Remote address/Prefix length
Action	Displays the action of the IPsec policy as "Allow", "Drop", or "Require Security".
Status	Displays the status of the IPsec policy as "Active" or "Inactive".

Ω

To configure IPsec policies, select the desired IPsec policy, and then click [Change] to open the IPsec Policy Settings page. The following settings can be made on the IPsec Policy Settings page.

IP Policy Settings

Item	Description
No.	Specify a number between 1 and 10 for the IPsec policy. The number you specify will determine the position of the policy in the IPsec Policy List. Policy searching is performed according to the order of the list. If the number you specify is already assigned to another policy, the policy you are configuring will take the number of the earlier policy, and the earlier policy and any subsequent policies will be renumbered accordingly.
Activity	Select whether to enable or disable the policy.
Name	Enter the name of the policy. Can contain up to 16 characters.
Address Type	Select IPv4 or IPv6 as the type of IP address to be used in IPsec communication.
Local Address	Displays the IP address of this printer.
Remote Address	Enter the IPv4 or IPv6 address of the device with which to communicate. Can contain up to 39 characters.
Prefix Length	Enter the prefix length of the Remote Address, using a value between 1 and 128. If this setting is left blank, "32" (IPv4) or "128" (IPv6) will be automatically selected.
Action	Specify how the IP packets are processed from the following:
	[Allow]: IP packets are both sent and received without IPsec applied to them.
	[Drop]: IP packets are discarded.
	 [Require Security]: IPsec is applied to IP packets that are both sent and received.
	If you have selected [Require Security], you must configure [IPsec Settings] and [IKE Settings].

B	
ь	7
	Þ

ltem	Description
Encapsulation Type	Specify the encapsulation type from the following: • [Transport]: Select this mode to secure only the payload section of each IP packet when communicating with IPsec compliant devices. • [Tunnel]: Select this mode to secure every section of each IP packet. We recommend this type for communication between security gateways (such as VPN devices).
Security Protocol	 Select the security protocol from the following: [AH]: Establishes secure communication that supports authentication only. [ESP]: Establishes secure communication that supports both authentication and data encryption. [ESP&AH]: Establishes secure communication that supports both data encryption and authentication of packets, including packet headers. Note that you cannot specify this protocol when [Tunnel] is selected for [Encapsulation Type].
Authentication Algorithm for AH	Specify the authentication algorithm to be applied when [AH] or [ESP&AH] is selected for [Security Protocol] from the following: [MD5], [SHA1]
Encryption Algorithm for ESP	Specify the encryption algorithm to be applied when [ESP] or [ESP&AH] is selected for [Security Protocol] from the following: [None], [DES], [3DES], [AES-128], [AES-192], [AES-256]
Authentication Algorithm for ESP	Specify the authentication algorithm to be applied when [ESP] is selected for [Security Protocol] from the following: [MD5], [SHA1]
Life Time	Specify the life time of the IPsec SA (Security Association) as a time period or data volume. The SA will expire when the time period you specify elapses or the volume of data you specify reaches the volume carried. If you specify both a time period and a data volume, the SA will expire as soon as either is reached, and a new SA will then be obtained by negotiation. To specify the life time of the SA as a time period, enter a number of seconds. To specify the life time of the SA as a data volume, enter a number of KBs.

ltem	Description
Key Perfect Forward Secrecy	Select whether to enable or disable PFS (Perfect Forward Secrecy).

IKE Settings

Item	Description
IKE Version	Displays the IKE version.
Encryption Algorithm	Specify the encryption algorithm from the following: [DES], [3DES], [AES-128], [AES-192], [AES-256]
Authentication Algorithm	Specify the authentication algorithm from the following: [MD5], [SHA1]
IKE Life Time	Specify the life time of the ISAKMP SA as a time period. Enter a number of seconds.
IKE Diffie-Hellman Group	Select the IKE Diffie-Hellman Group to be used in the generation of the IKE encryption key from the following: [DH1], [DH2]
Pre-Shared Key	Specify the PSK (Pre-Shared Key) to be used for authentication of a communicating device. Can contain up to 32 characters.
Key Perfect Forward Secrecy	Select whether to enable or disable PFS (Perfect Forward Secrecy).

Printing Lists/Reports

Click [Print List/Report] to display the page for printing reports. Then, select an item and click [Print] to print out information for that item.

Print List/Report

ltem	Description
Configuration Page	Prints general information about the machine and its current configuration.
Fax Journal	Prints a fax transmission and reception journal for the last 50 jobs. For details about automatic fax journal printing, see page 172 "Fax Features Settings".
Fax TX/RX Standby File List	Prints a list of fax jobs remaining in the machine's memory to be printed, sent, or forwarded.
Quick Dial Destination List	Prints a list of Quick Dial entries.
Fax Speed Dial Destination List	Prints a list of Speed Dial entries.
Scanner Destination List	Prints a list of scan destinations.
Scanner Journal	Prints a scanner journal for the last 100 Scan to E-mail, Scan to FTP, and Scan to Folder transmissions.
Maintenance Page	Prints the maintenance page.



- Reports cannot be printed via Web Image Monitor if other jobs are printing. Before printing reports, confirm that machine is not printing.
- Reports will be printed on A4 or Letter size paper. Load one of these sizes of paper into the tray before printing reports.

8

Configuring the Administrator Settings

Click [Administrator Tools] to display the page for configuring the administrator settings.

This page contains the following tabs: [Administrator], [Reset Settings], [Backup Setting], [Restore Setting], [Set Date/Time], and [Energy Saver Mode].

Administrator Tab

Administrator Settings

ltem	Description
Change Password (only SP 221SF, SP 220SFNw, and SP 221SFNw)	Check this to configure the administrator password.
New Password	Enter the new administrator password. Can contain up to 16 characters.
Confirm New Password	Enter the same password again, to confirm.
Change E-mail Address (only SP 221SF, SP 220SFNw, and SP 221SFNw)	Check this to configure the administrator e-mail address.
Administrator E-mail Address (only SP 221SF, SP 220SFNw, and SP 221SFNw)	Enter the administrator e-mail address. If the machine's e-mail address is not configured in the [SMTP] page, this address will be used as the sender's address of e-mails sent from this machine, such as notification e-mails. Can contain up to 64 characters.

Rest Settings Tab

Reset Settings

Kosei seiiiigs	
Item	Description
Reset Network Settings	Select to restore the following settings to their defaults:
	Settings under [Network Settings]
	Settings under the [Administrator] tab of [Administrator Tools]



• [Reset IPsec Settings] appears only when the administrator password is specified.

Backup Setting Tab



When sending the machine for repair, it is important that you create backup files in advance. The
machine's settings are returned to the default after repair.

Backup Setting

ltem	Description
Back up Network Settings	Backs up the following settings to a file: • Settings under [Network Settings] • Settings under the [Administrator] tab of [Administrator Tools] Note that, however, [Max. E-mail Size] setting under [Network Application] will not be backed up here; it will be backed up by [Back up Menu Settings] instead.

ltem	Description
Back up Menu Settings	Backs up the settings other than the following to a file: Network settings Scan destinations User restriction settings Fax destinations IPsec settings [Printer Registration], [Low Humidity Mode], and [Image Density] settings under [System Settings] of the control panel setting menu
Back up Scan Destination	Backs up scan destinations to a file.
Back up Address Book (only SP 221SF, SP 220SFNw, and SP 221SFNw)	Backs up fax destinations to a file.
Back up IPsec Settings	Backs up the IPsec settings to a file.

Follow the procedure below to create configuration backup files.

- 1. Select the option button for the type of data you wish to back up.
- 2. Enter the administrator password if required.
- 3. Click [OK].
- 4. Click [Save] in the confirmation dialog box.
- 5. Navigate to the location to save the backup file.
- 6. Specify a name for the file, and click [Save].



• [Back up IPsec Settings] appears only when the administrator password is specified.

Restore Setting Tab



• When the machine is returned from repair, it is important that you restore the machine's settings from the backup files. The machine's settings are returned to the default after repair.

Restore Setting

ltem	Description
File to Restore	Enter the path and name of the file to restore, or click [Browse] to select the file.

Follow the procedure below to restore configuration backup files.

- 1. Click [Browse...].
- 2. Navigate to the directory containing the backup file to restore.
- 3. Select the backup file, and click [Open].
- 4. Enter the administrator password if required.
- 5. Click [OK].



• If the settings are not restored successfully, an error message appears. Try again to restore the file completely.

Set Date/Time Tab

Set Date

ltem	Description
Year	Enter the current year (2000 to 2099).
Month	Enter the current month (1 to 12).
Day	Enter the current day (1 to 31).
Date Format	Select the date format from [MM/DD/YYYY], [DD/MM/YYYY], or [YYYY/MM/DD].

Set Time

Item	Description
Time Format	Select 24- or 12-hour time format.
Time (AM/PM)	Select [AM] or [PM] if 12-hour time format is selected.
hour (0-23)	Enter the current hour if 24-hour time format is selected (0-23).
hour (1-12)	Enter the current hour if 12-hour time format is selected (1-12).

ltem	Description
min. (0-59)	Enter the current minute (0-59).

Energy Saver Mode Tab

Energy Saver Mode

ltem	Description
Energy Saver Mode 1	Select [Active] to set the machine to enter Energy Saver mode 1 if the machine has been idle for about 30 seconds.
	It takes less time to recover from Energy Saver mode 1 than from power-off state or Energy Saver mode 2, but power consumption is higher in Energy Saver mode 1 than in Energy Saver mode 2.
Energy Saver Mode 2	Europe Select [30sec] or specify the period of time (1-20min) for the machine to enter Energy Saver mode 2.
	Countries other than European countries
	Select [30sec] or specify the period of time (1-240min) for the machine to enter Energy Saver mode 2.
	The machine consumes less power in Energy Saver mode 2 than in Energy Saver mode 1, but it takes longer to recover from Energy Saver mode 2 than from Energy Saver mode 1.



• The machine recovers from Energy Saver mode when it receives a print job, prints a received fax, or when any key is pressed.

Using Smart Organizing Monitor

The state and status information of the machine can be checked using Smart Organizing Monitor.




• Some items might not appear, depending on the model type you are using.

Displaying the Smart Organizing Monitor Dialog

- 1. On the [Start] menu, click [All Programs].
- 2. Click [SP 220 Series Software Utilities].
- 3. Click [Smart Organizing Monitor for SP 220 Series].
- 4. If the machine you are using is not selected, click [Connect Printer], and then do one of the following:
 - Select the machine's model.
 - Enter the IP address of the machine manually.
 - Click [Search Network Printer] to search the machine via the network.
- 5. Click [OK].

Checking the Status Information

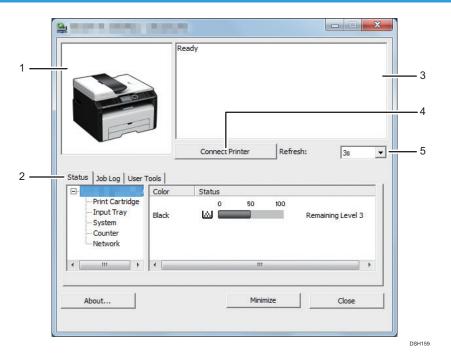

1. Image area

Displays the status of this machine with an icon.

2. Tab area

- Status tab
 - Printer Name
 - · Print Cartridge

Displays the following messages to indicate remaining toner levels: Remaining Level 1 to 5, "Almost Empty" and "Empty".

Input Tray

You can check the following information about the input trays.

[Input Tray], [Status], [Paper Size], [Paper Type]

Displays the type of the paper loaded into each input tray.

System

Displays the system information about the printer, such as the model name, system version, and memory size.

Counter

Displays information about the counters.

Network

Displays network details such as the printer's IP address and network-related information.

• Job Log tab

Displays the job log information.

• User Tools tab

Click to print test pages or maintenance pages, or to configure settings of the machine.

3. Message area

Displays the status of this machine with a message.

For details about error messages, see page 254 "Error and Status Messages Appear on Smart Organizing Monitor".

4. [Connect Printer] button

Click to select a printer driver.

5. [Refresh:]

Specify the automatic update of the display.

Configuring the Machine Settings

Smart Organizing Monitor is used to modify the machine's settings.

- 1. On the [Start] menu, click [All Programs].
- 2. Click [SP 220 Series Software Utilities].
- Click [Smart Organizing Monitor for SP 220 Series].
- 4. If the machine you are using is not selected, click [Connect Printer], and then do one of the following:
 - Select the machine's model.
 - Enter the IP address of the machine manually.
 - Click [Search Network Printer] to search the machine via the network.
- 5. Click [OK].
- 6. On the [User Tools] tab, click [Printer Configuration].
- 7. Enter the access code, and then click [OK].

The default access code is "Admin".

- 8. Change the settings if necessary.
- 9. Click [OK].
- 10. Click [Close].

Access Code

The configurable functions depend on the authority of the access code you enter.

Administrator

All tabs in the [Printer Configuration] dialog box are available.

• General users

8

Only the [Paper Input] tab is available.

Tab Settings

This section provides a tab-by-tab overview of the machine settings that can be modified using Smart Organizing Monitor. For more information on each setting item, see the Smart Organizing Monitor Help.

Paper Input tab

• You can change paper size and other paper settings.

Maintenance tab

· You can adjust print starting positions.

System tab

- You can set basic functions required to use the printer. The printer can be used on factory-set defaults, but the configuration can be changed depending on the condition of the user.
- The changed condition holds even if the printer is turned off.
- The access code can be changed on this tab.

IPv6, Network 1, Network 2 and Network 3 tabs

- You can set configurations about network connection and communication.
- The following operations are possible on these tabs:
 - Checking the printer name, active protocol, and other printer information
 - · Making interface settings, including the timeout setting and protocol settings
 - Checking or making TCP/IP settings
 - Checking or making SMTP, SNMP, and IPsec settings
 - · Checking or making Alert settings

Wireless tab

- You can set configurations about wireless LAN network connection and communication.
- The following operations are possible on the tab:
 - Checking the wireless LAN status
 - Connecting wireless LAN manually

Scanning Documents

On the [Scan] dialog box, specify scan settings and scan documents.


For details about how to scan or specify scan settings, see page 113 "Scanning from Smart Organizing Monitor".

9. Maintaining the Machine

This chapter describes how to replace supplies and how to clean the machine.

Replacing the Print Cartridge


- If "Replacement Required: Print Cartridge" is displayed in the control panel, replace the print
 cartridge by following the procedure described below. However, this message will not be
 displayed if [Toner End Option] has been set to [Continue Printing]. Replace the print cartridge if
 the printed image becomes pale or blurred. For details about [Toner End Option], see page 180
 "System Settings".
- Store print cartridges in a cool dark place.
- Actual printable numbers vary depending on image volume and density, number of pages printed at a time, paper type and size, and environmental conditions such as temperature and humidity.
 Toner quality degrades over time.
- For good print quality, the manufacturer recommends that you use genuine toner from the manufacturer.
- The manufacturer shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the manufacturer with your office products.
- 1. Open the front cover, and then carefully lower it.
- 2. Hold the center of the print cartridge and carefully raise it slightly and then pull it out horizontally.

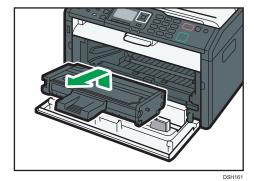

- 3. Take the new print cartridge out of the box, and then take it out of the plastic bag.
- Hold the print cartridge and shake it from side to side five or six times.

Shake the print cartridge horizontally in the direction. The first few printed pages may appear blurred or smeared if the cartridge has not been shaken properly.

5. Slide the print cartridge in horizontally, and then slowly push it in all the way. Finally, push the cartridge down until it clicks into place.

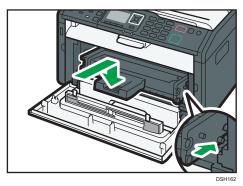

6. Carefully push up the front cover until it closes.

Cautions When Cleaning

Clean the machine periodically to maintain high print quality.

Dry wipe the exterior with a soft cloth. If dry wiping is not sufficient, wipe with a soft, damp cloth that has been wrung out thoroughly. If you still cannot remove the stain or grime, use a neutral detergent, wipe over the area with a thoroughly-wrung damp cloth, and then dry wipe the area and allow it to dry.


Mportant ...

- To avoid deformation, discoloration, or cracking, do not use volatile chemicals, such as benzine and thinner, or spray insecticide on the machine.
- If there is dust or grime inside the machine, wipe with a clean, dry cloth.
- You must disconnect the plug from the wall outlet at least once a year. Clean away any dust and grime from the plug and outlet before reconnecting. Accumulated dust and grime pose a fire hazard.
- Do not allow paper clips, staples, or other small objects to fall inside the machine.


a

Cleaning the Inside of the Machine

- 1. Open the front cover, and then carefully lower it.
- 2. Hold the center of the print cartridge and carefully raise it slightly and then pull it out horizontally.

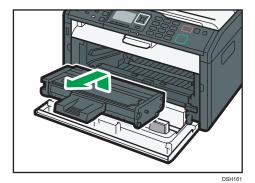


3. Use a cloth to wipe the inside of the machine toward and away from yourself.

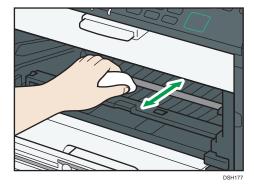

Wipe carefully so as not to touch any protrusions inside the machine.

4. Slide the print cartridge in horizontally, and then slowly push it in all the way. Finally, push the cartridge down until it clicks into place.

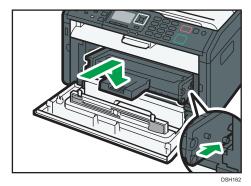


5. Carefully push up the front cover until it closes.

a

Cleaning the Exposure Glass

- 1. Lift the exposure glass cover.
 - When using SP 220SNw, SP 221SNw, SP 221SF, SP 220SFNw, or SP 221SFNw, be careful not to hold the input tray when lifting the exposure glass cover, for the tray might be damaged.
- 2. Clean the parts indicated with arrows with a soft damp cloth and then wipe the same parts with a dry cloth to remove any remaining moisture.

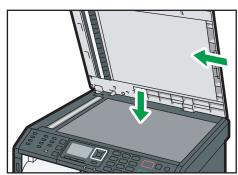


OSH17

Cleaning the Auto Document Feeder

€ Important

- SP 221S is not equipped with an Auto Document Feeder.
- Lift the ADF.
 Be careful not to hold the input tray when lifting the ADF, for the tray might be damaged.
- 2. Clean the parts indicated with arrows with a soft damp cloth and then wipe the same parts with a dry cloth to remove any remaining moisture.

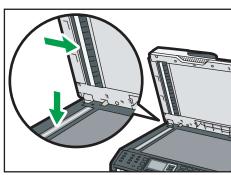

DSH17

Moving and Transporting the Machine

This section provides cautions that you must follow when moving the machine both short and long distances.

Repack the machine in its original packing materials when moving it over a long distance.



- Be sure to disconnect all cables from the machine before transporting it.
- The machine is a precision piece of machinery. Be sure to handle it carefully when moving it.
- Make sure to move the machine horizontally. Take extra caution when carrying the machine up or down stairs.
- Do not remove the print cartridge when moving the machine.
- Be sure to hold the machine level while carrying it. To prevent toner from spilling, move the machine carefully.
- Keep the machine away from salt-bearing air and corrosive gases. Also, do not install the machine
 in places where chemical reactions are likely (laboratories, etc.), as doing so will cause the
 machine to malfunction.

Ventilation

When you use this machine in a confined space without good ventilation for a long time or print large quantities, you might detect an odd smell.

This might cause the output paper to also have an odd smell.

When you detect an odd smell, regularly ventilate in order to keep the workplace comfortable.

- Set up the machine so that it does not directly ventilate towards people.
- Ventilation should be more than 30 m³/hr/person.

New machine smell

When a machine is new, it might have a unique smell. This smell will subside in about one week.

When you detect an odd smell, sufficiently ventilate and circulate the air in the room.

- 1. Be sure to check the following points:
 - The power switch is turned off.
 - The power cord is unplugged from the wall outlet.
 - All other cables are unplugged from the machine.
- 2. Lift the machine using the inset grips on both sides of the machine, and then move it horizontally to the place where you want to use it.



To move the machine over a long distance, pack it well and empty all the paper trays. Take care
not to tip or tilt the machine during transit.

- Toner might spill inside the machine if the machine is not kept level during transit.
- For more information about moving the machine, contact your sales or service representative.

Disposal

Ask your sales or service representative for information about correct disposal of this machine.

Where to Inquire

Contact your sales or service representative for further information about the topics included in this manual or to inquire about other topics not included in this manual.

10. Troubleshooting

This chapter provides solutions for error messages and other problems.

Error and Status Messages on the Screen

Messages are listed in alphabetical order in the table below.

"X" indicates a number in an error code that appear differently depending on a specific situation.



• If the alert indicator lights up continuously or flashes, switch to copier mode and check the displayed message.

Message	Causes	Solutions
2XXX14	The machine was not able to print the received fax, or the machine's memory reached capacity while receiving a fax because the document was too large.	 The paper tray was empty. Load paper in the paper tray. See page 35 "Loading Paper". The paper tray did not contain A4, Letter, or Legal size paper. Load valid size paper in the tray, and configure the paper size settings under [Tray Paper Settings] accordingly. A cover or tray was open. Close the cover or tray. There was a paper jam. Remove the jammed paper. See page 256 "Clearing Misfeeds". A print cartridge was empty. Replace the print cartridge. See page 256 "Clearing Misfeeds" and page 239 "Replacing the Print Cartridge". The received fax was too large. Ask the sender to resend the document in parts as several smaller individual faxes, or to send at a lower resolution.

Message	Causes	Solutions
ADF Orig. Misfeed Open ADF Cover and remove paper.	An original has been jammed inside the ADF.	 Remove jammed originals, and then place them again. See page 256 "Clearing Misfeeds" and page 263 "Paper Feed Problems". Check the originals are suitable for scanning. See page 56 "Placing Originals".
Available: IDCard Copy A4/A5/ A6/8.5×11/5.5x8.	ID card copy could not be performed because the tray does not contain the valid size paper, which are A4, A5, A6, 8.5 × 11 or 5.5 × 8.5 size.	Specify the A4, A5, A6, 8.5 × 11 or 5.5 × 8.5 for the tray selected for printing copies. See page 185 "Tray Paper Settings".
Busy	Fax transmission could not be completed because the destination's line was busy.	Wait for a while and send the fax again.
Cannot Copy This Setting Comb.: 2 on 1 / 4 on 1	Combined copying could not be performed because the tray does not contain the valid size paper, which are A4, Letter, or Legal size.	Specify the A4, Letter, or Legal size paper for the tray selected for printing copies. See page 185 "Tray Paper Settings".
Cannot copy. Set original to ADF.	Combined copying could not be performed because the originals were not placed in the ADF.	 Use the ADF, even when copying a single sheet. If you need to use the exposure glass, turn off combined copying in [Duplex/Combine] under [Copier Features], and then try again. See page 166 "Copier Features Settings".
Check Paper Size	The paper size set for the document differs from the size of the paper in the indicated tray.	Press the [OK] key to begin printing, or press the [Back] key to cancel the job.

Message	Causes	Solutions
Connection Failed	The line could not be connected correctly.	 Confirm that the telephone line is properly connected to the machine. Disconnect the telephone line from the machine, and connect a standard telephone in its place. Confirm that you can make calls using the telephone. If you cannot make calls this way, contact your telephone company.
Cooling down	The engine has overheated.	Wait until the message disappears.
Cover open	A cover is open.	Close the cover completely.
Dest. is not Programmed	No Quick Dial entry is associated with the One Touch button you pressed.	 Press a different One Touch button. Assign a registered destination to the One Touch button. See page 85 "Registering Scan Destinations" and page 130 "Registering Fax Destinations".
Dial Failed	The fax could not be sent.	 Confirm that the fax number you dialed is correct. Confirm that the destination is a fax machine. Confirm that the line is not busy. You may need to insert a pause between dial digits. Press the [Pause/Redial] key after, for example, the area code.
Exceeded Max.E- mail Size	The scan file exceeds the size limit for files that can be sent through e-mail.	 Configure [Resolution] under [Scan Settings] to reduce the scanning resolution. See page 170 "Scan Settings". Configure [Max. E-mail Size] under [Scan Settings] to increase the allowed size. See page 170 "Scan Settings".

Message	Causes	Solutions
Fax Job Memory Overflow	The number of fax jobs in memory (unsent or unprinted faxes) has reached maximum, so new jobs cannot be stored.	Wait until pending jobs have been transmitted or printed.
Indep.Sply.Prt.Cart.	A non-supported print cartridge is installed.	Remove and replace it with a print cartridge specified by an authorized dealer.
Internal Misfeed	Paper has been jammed in the machine.	Remove the jammed paper. See page 256 "Clearing Misfeeds".
Memory Overflow	The data is too large or complex to print.	If using the printer driver, set [Resolution] in the [Print Quality] tab to [600 × 600 dpi].
Memory Overflow	 The machine's memory reached capacity while scanning the first page of the original to store a fax job in memory before transmission. The machine's memory reached capacity while storing a fax in memory in Memory Transmission mode. 	Resend the fax in parts as several smaller individual faxes, or send at a lower resolution.
Memory Overflow TX Cancel	Memory has reached capacity while scanning the second or later pages of the original when trying to send a fax in Memory Transmission mode.	Press [TX] to send only the pages that have been scanned in memory, or press [Cancel] to cancel.
Misfeed: BypassTray	Paper has been jammed in the bypass tray.	Remove the jammed paper. See page 256 "Clearing Misfeeds".
Misfeed: Stnd. Tray	Paper has been jammed in the paper exit area.	Remove the jammed paper. See page 256 "Clearing Misfeeds".
Misfeed: Tray 1	Paper has been jammed in the tray 1 paper input area.	Remove the jammed paper. See page 256 "Clearing Misfeeds".

Message	Causes	Solutions
Net Communication Error	Connection with the server was lost while sending or receiving data.	
Network is not Ready	A scanned file could not be sent because the machine has not received IP address information from the DHCP server completely.	Wait until the machine receives the IP address information completely, and then try the operation again.
On Hook or Stop key	The machine has been off-hook for an extended period of time.	Put down the handset phone or press the [Clear/Stop] key.
Out of Paper: X	The indicated tray has run out of paper. Load paper to the indicated page 35 "Loading Paper".	
Restart Machine	The machine needs to be restarted.	Turn off the power, and then turn it back on.
Print Cart. Set Error	The print cartridge has not been installed or has not been installed correctly.	Reinstall the print cartridge. See page 239 "Replacing the Print Cartridge".
Remove Paper: Bypass Tray	The machine failed to proceed with the print job, because tray 1 was specified as the input tray but paper was set in the bypass tray.	
Replace Required Soon: Print Cartridge	The print cartridge is almost Prepare a new print cartridge. empty.	
Replacement Required: Fusing Unit	The fusing unit is no longer usable, and must be replaced.	Contact your sales or service representative.
RX Comm. Error	A reception error occurred, and the fax could not be received correctly.	If possible, contact the sender of the fax and ask them to resend it.

Message	Causes	Solutions
Scan (NW) Disconnected	· · · · · · · · · · · · · · · · · · ·	
Scan (USB) Disconnected	The USB cable was disconnected while scanning from a computer.	Reconnect the USB cable properly, and then try the operation again.
Server Connection Failed	A scanned file could not be sent because the destination could not be reached.	Confirm that the destination is registered correctly, and then try the operation again.
Server Response Error	An error occurred in communication with the server	Confirm that the destination is registered correctly, and then try the operation again.
	before beginning transmission.	If the problem could not be solved, contact the network administrator.
Service call - X	A fatal hardware error has occurred, and the machine cannot function.	Contact your sales or service representative.
Set Correct Paper	The paper tray does not contain A4, Letter, or Legal size paper.	While the message is displayed, press the [OK] key. A menu for changing the paper size of the current tray appears.
		Load A4/Letter/ Legal size paper in the tray, and then select the corresponding paper size using [▲] or [▼] key and press the [OK] key. The machine will then print out the fax.
		Note that the paper size setting for the tray under [Tray Paper Settings] will be changed. See page 185 "Tray Paper Settings".
Set Original to ADF Cannot use exposure glass with set. in [Scan Size].	Scanning could not be performed because the originals were not placed in the ADF, even though the machine is set to scan originals larger than A4/Letter size.	 Use the ADF, even when scanning A4/Letter or smaller size originals. If you need to use the exposure glass, set A4/Letter or smaller size in [Scan Size] under [Scan Settings], and then try again. See page 123 "Specifying Scan Settings for Scanning".

Message	Causes	Solutions
Sort Copy was Cancelled	The machine's memory reached capacity while originals were being scanned from the ADF to perform sort copying.	Press [Exit] to print the originals that were successfully scanned into memory. Then, copy again the originals left in the ADF.
TX Comm. Error	A transmission error occurred, and the fax could not be transmitted correctly.	If the [Auto Redial] setting is enabled, the machine will redial the number and try again. If all attempts fail, or if the machine is in Immediate Transmission mode, the fax will not be transmitted. Try the operation again.

Error and Status Messages Appear on Smart Organizing Monitor

"X" represents a displayed message that varies according to the situation.

Message	Causes	Solutions
No Response from I/O Device Check the cable, power cord, and main switch.	 The power cable of the machine is not plugged in. The power of the machine is not turned ON. The USB cable is not connected. 	 Check the printer power cord. Check the printer power switch is on. Check the USB cable is properly connected.
Tray Not Detected or No Paper	Tray 1 has run out of paper.	Load paper into Tray 1. See page 35 "Loading Paper".
The indicated paper source tray is not set properly, or no paper loaded.	The bypass tray has run out of paper.	Load paper into the bypass tray. See page 35 "Loading Paper".
Check the indicated tray.		
Paper Misfeed X	A paper jam has occurred in the machine.	Remove the jammed paper. See page 256 "Clearing Misfeeds" and page 263 "Paper Feed Problems".
Print Cartridge is near empty.	The print cartridge is almost empty.	Prepare a new print cartridge.
No Toner Toner has almost run out. Shortly printing becomes not available. Please	The machine has run out of the toner.	Replace the print cartridge. See page 239 "Replacing the Print Cartridge".
keep Print Cartridge handy.		

Message	Causes	Solutions
Printing has been interrupted because of the memory overflow.	The data is too large or complex to print.	Select [600 x 600 dpi] in [Resolution] to reduce the size of data. For details, see the printer driver Help.
Waste Toner full No printing is available. Open the indicated cover, and then replace Print Cartridge.	The waste toner bottle is full.	Replace the print cartridge.
Unit Not Detected Open the indicated cover, and then replace Print Cartridge.	The print cartridge has not been installed.	Reinstall the print cartridge. See page 239 "Replacing the Print Cartridge".


Clearing Misfeeds

€ Important

- Jammed paper may be covered in toner. Be careful not to get toner on your hands or clothes.
- Toner on prints made immediately after clearing a paper jam may be insufficiently fused and can smudge. Make test prints until smudges no longer appear.
- Do not forcefully remove jammed paper, as it may tear. Torn pieces remaining inside the machine will cause further jams and possibly damage the machine.
- Paper jams can cause pages to be lost. Check your print job for missing pages and reprint any pages that did not print out.
- The jammed paper may be ejected automatically when opening and then closing the front cover or when turning the power off and then back on.


Removing Jammed Paper from Tray 1

 Pull Tray 1 halfway out, and check for jammed paper. If there is jammed paper, remove it carefully.

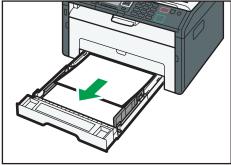


DSH163

- 2. Carefully slide Tray 1 back in until it stops.
- 3. Open the front cover, and then carefully lower it.

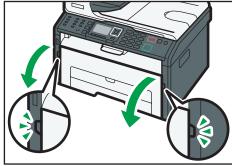


DSH164


4. Hold the center of the print cartridge and carefully raise it slightly and then pull it out horizontally.

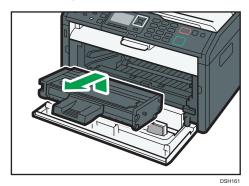


- Do not shake the removed print cartridge. Doing so can cause remaining toner to leak.
- Place the print cartridge on paper or similar material to avoid dirtying your workspace.
- 5. Lifting the guide plate, remove the jammed paper carefully.

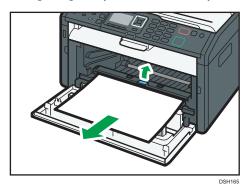

6. Slide the print cartridge in horizontally, and then slowly push it in all the way. Finally, push the cartridge down until it clicks into place.

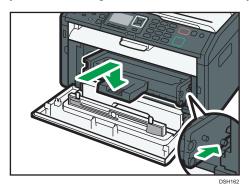


7. Carefully push up the front cover until it closes.

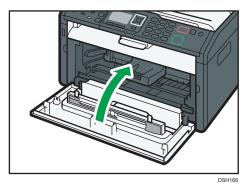

If the error display continues to appear, perform the procedure described in page 259 "Opening the Rear Cover to Remove Jammed Paper".

Removing Jammed Paper from the Bypass Tray

- Since the temperature around the guide is high, wait for it to cool before checking for jammed paper.
- 1. If paper is jammed in the bypass tray input area, remove the jammed paper carefully.

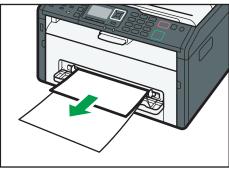


- DSH16
- 2. Close the bypass tray.
- 3. Follow Steps 3 to 7 in "Removing Jammed Paper from Tray 1".
 If the error display continues to appear, perform the procedure described in page 259 "Opening the Rear Cover to Remove Jammed Paper".

10


Opening the Rear Cover to Remove Jammed Paper

- Since the temperature around the guide is high, wait for it to cool before checking for jammed paper.
- 1. Open the rear cover.

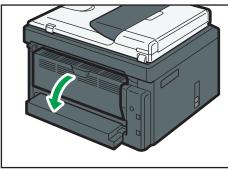

DOLL16

2. Open the fusing cover.

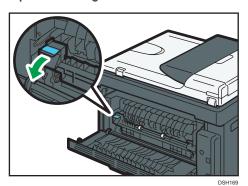


3. Push the levers on the sides down with your thumbs.




OSH170

4. Remove the jammed paper carefully.

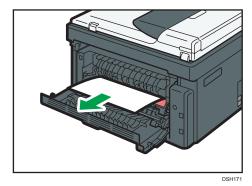


- 5. Push the levers on the sides up with your thumbs.
- 6. Close the fusing cover.
- 7. Close the rear cover.

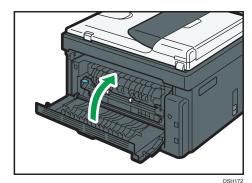


Removing Scanning Jams

1. Open the ADF cover.

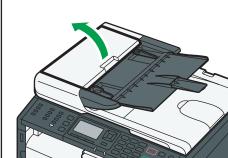


DSH173

2. Gently pull the jammed original to remove it. Be careful not to pull the original too hard, as it may tear.

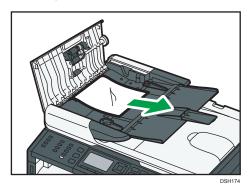


3. Close the ADF cover.

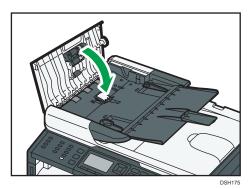

4. Lift the ADF, and if there is original remaining in the ADF, gently pull the jammed original to remove it.

Be careful not to hold the input tray when lifting the ADF, for the tray might be damaged.

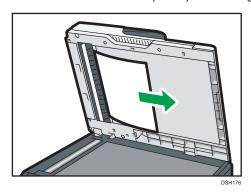

5. Close the ADF.

When You Cannot Print Test Page

Possible cause	Solution
The power cord, a USB cable, or a network cable is not connected correctly.	Make sure that the power cord, USB cable, and network cable are connected correctly. Also confirm that they are not damaged.
The port connection is not established correctly.	 On the [Start] menu, click [Devices and Printers]. Right-click the icon of the machine, and then click [Printer properties]. Click the [Ports] tab, and then make sure that the port is set as a USB or network printer.

Paper Feed Problems

If the machine is operating but paper will not feed or paper jams occur frequently, check the condition of the machine and paper.

Problem	Solution
Paper does not feed smoothly.	Use supported types of paper. See page 50 "Supported Paper".
	 Load paper correctly, making sure that the paper guides are properly adjusted. See page 35 "Loading Paper".
	If the paper is curled, straighten the paper.
	 Take out the paper from tray and fan it well. Then, reverse the top and bottom of the paper, and put it back in the tray.
Paper jams occur frequently.	If there are gaps between the paper and the paper guides, adjust the paper guides to remove the gaps.
	 Avoid printing on both sides of paper when printing images that contain large solid areas, which consume a lot of toner.
	Use supported types of paper. See page 50 "Supported Paper".
	 Load paper only as high as the upper limit markings on the paper guide.
Multiple sheets of paper are fed at one time.	Fan the paper well before loading. Also make sure that the edges are even by tapping the stack on a flat surface such as a desk.
	Make sure that the paper guides are in the right position.
	Use supported types of paper. See page 50 "Supported Paper".
	 Load paper only as high as the upper limit markings on the paper guide.
	Check that paper was not added while there was still some left in the tray. Only add paper when there is none left in the tray.

Problem	Solution
Paper gets wrinkles.	Paper is damp. Use paper that has been stored properly. See page 50 "Supported Paper".
	Paper is too thin. See page 50 "Supported Paper".
	If there are gaps between the paper and the paper guides, adjust the paper guides to remove the gaps.
The printed paper is curled.	Load the paper upside down in the paper tray.
	If the paper curl is severe, take prints from the output tray more frequently.
	Paper is damp. Use paper that has been stored properly. See page 50 "Supported Paper".
Images are printed diagonally to the pages.	If there are gaps between the paper and the paper guides, adjust the paper guides to remove the gaps.
CER091	

10

Print Quality Problems

Checking the Condition of the Machine

If there is a problem with the quality of printing, first check the condition of the machine.

Possible Cause	Solution
There is a problem with the machine's location.	Make sure that the machine is on a level surface. Place the machine where it will not be subject to vibration or shock.
An unsupported types of paper is used.	Make sure that the paper being used is supported by the machine. See page 50 "Supported Paper".
The paper type setting is incorrect.	Make sure that the paper type setting of the printer driver matches the type of paper loaded. See page 48 "Specifying Paper Type and Paper Size Using the Printer Driver".
A non-genuine print cartridge is being used.	Refilled or non-genuine print cartridge reduces print quality and can cause malfunctions. Use genuine print cartridge only.
An old print cartridge is being used.	Print cartridge should be opened before their expiration date and used within six months of being opened.
The machine is dirty.	See page 239 "Maintaining the Machine", and clean the machine as required.
Humidity level surrounding the machine may be too low.	Using the machine in a room where humidity level is too low may cause black lines of a few millimeters thick to appear on printouts with 75-millimeter spaces in between. In this case, set [Low Humidity Mode] to [On].
	For details about how to configure the settings, see page 180 "System Settings".

Checking the Printer Driver Settings

Problem	Solution
The printed image is smudged.	On the printer driver's [Paper] tab, select [Bypass Tray] in the [Input Tray:] list. In the [Paper Type:] list, select a proper paper type.

Problem	Solution
Images smudge when rubbed. (Toner is not fixed.)	On the printer driver's [Paper] tab, select a proper paper type in the [Paper Type:] list.
When printing graphics, the output and the screen are different.	To print accurately, specify the printer driver setting to print without using the graphics command. For details about specifying the printer driver setting, see the printer driver Help.
Images are cut off, or excess is printed.	Use the same size paper selected in the application. If you cannot load paper of the correct size, use the reduction function to reduce the image, and then print. For details about the reduction function, see the printer driver Help.
Photo images are coarse.	Use the application's or printer driver's settings to specify a higher resolution. For details about the printer driver's settings, see the printer driver Help.
A solid line is printed as a dashed line or appears blurred.	Change the dithering settings on the printer driver. For details about the dithering settings, see the printer driver Help.
Fine lines are fuzzy, of inconsistent thickness, or do not appear.	Change the dithering settings on the printer driver. For details about the dithering settings, see the printer driver Help.
	If the problem persists, specify the settings of the application in which the image was created to change the thickness of the lines.

Printer Problems

This section describes printing problems and possible solutions.

Problem	Solution
An error occurs.	If an error occurs when printing, change the computer or printer driver settings.
	Check the printer icon name does not exceed 32 alphanumeric characters. If it does, shorten it.
	Check whether other applications are operating.
	Close any other applications, as they may be interfering with printing. If the problem is not resolved, close unneeded processes too.
	Check that the latest printer driver is being used.
A print job is canceled.	Set I/O Timeout to a larger value than the current settings.
There is a considerable delay between the print start command and actual printing.	Processing time depends on data volume. High volume data, such as graphics-heavy documents, take longer to be processed. Wait for a while.
	To speed up printing, reduce the printing resolution using the printer driver. For details, see the printer driver Help.
The whole printout is blurred.	Paper is damp. Use paper that has been stored properly. See page 50 "Supported Paper".
	If you enable [Toner Saving], printing is generally less dense.
	 Condensation may have collected. If rapid change in temperature or humidity occurs, use this machine only after it has acclimatized.
Cannot print properly when using a certain application, or cannot print	Change the print quality settings.
image data properly.	
Some characters are printed faintly or not printed.	
The print position is misaligned.	Specify [Printer Registration] in [System Settings] to adjust the print position.

Print Positions Do Not Match Display Positions

If the position of items on the printed page differs from the position displayed on the computer screen, the cause may be one of the following.

Problem	Solution
Page layout settings are not configured properly.	Check that the page layout settings are properly configured in the application.

10

Copier Problems

Problem	Solution	
Photocopied paper is blank.	The original was placed with the front and back reversed. See page 56 "Placing Originals".	
Copied pages are too dark or too light.	Adjust the image density.	
Copied pages do not look the same as the originals.	Select the correct scan mode according to the type of original. See page 81 "Specifying Scan Settings for Copying".	
Black spots appear when photocopying a photographic print.	The original may have stuck to the exposure glass due to high humidity.	
	Place the original on the exposure glass, and then place two or three sheets of white paper on top of it. Leave the exposure glass cover open when copying.	
A moire pattern is produced.	The original probably has heavily lined or dotted areas.	
R • R	Switching the setting for image quality between [Photo] and [Mixed] may eliminate the moire pattern.	
	See page 166 "Copier Features Settings".	
Photocopied paper is dirty.	Image density is too high.	
	Adjust the image density. See page 81 "Specifying Scan Settings for Copying".	
	Toner on the printed surface is not dry.	
	Do not touch printed surfaces immediately after copying. Remove freshly printed sheets one by one, taking care not to touch printed areas.	
	The exposure glass or ADF is dirty. See page 239 "Maintaining the Machine".	
	Before placing originals on the exposure glass, make sure that toner or correction fluid is dry.	
When copying from the exposure glass, the print area of the copy is out of alignment with the original.	Place the original copy side down, making sure that it is aligned to the upper-left corner and pressed flat against the exposure glass.	

Scanner Problems

When Scanning Is Not Done As Expected

Problem	Solution	
The scanned image is dirty.	The exposure glass or ADF is dirty. See page 239 "Maintaining the Machine".	
	Before placing originals on the exposure glass, make sure that toner or correction fluid is dry.	
The scanned image is distorted or out of position.	The original was moved during scanning. Do not move the original during scanning.	
The scanned image is upside down.	The original was placed upside down. Place the original in the correct orientation. See page 56 "Placing Originals".	
The scanned image is blank.	The original was placed with the front and back reversed. When using the exposure glass, place originals copy side down. When using the ADF, place originals copy side up. See page 56 "Placing Originals".	
The scanned image is too dark or too light.	Adjust the image density. See page 123 "Specifying Scan Settings for Scanning".	

Fax Problems

When an error code appears on the fax journal or transmission status report

The table below describes the meaning of error codes that appear under "Results" on the fax journal or transmission status report, and what to do when a particular error code appears.

"X" indicates a number in an error code that appear differently depending on a specific situation.

Error Code	Solution	
1XXX11	An original has been jammed inside the ADF while sending a fax in Immediate Transmission mode.	
	Remove jammed originals, and then place them again. See page 256 "Clearing Misfeeds" and page 263 "Paper Feed Problems".	
	Check the originals are suitable for scanning. See page 56 "Placing Originals".	
1XXX21	The line could not be connected correctly.	
	Confirm that the telephone line is properly connected to the machine.	
	Disconnect the telephone line from the machine, and connect a standard telephone in its place. Confirm that you can make calls using the telephone. If you cannot make calls this way, contact your telephone company.	
	If the problem persists, contact your sales or service representative.	
1XXX22 to 1XXX23	Dial fails when trying to send faxes.	
	Confirm that the fax number you dialed is correct.	
	Confirm that the destination is a fax machine.	
	Confirm that the line is not busy.	
	You may need to insert a pause between dial digits. Press the [Pause/Redial] key after, for example, the area code.	
	Confirm that [PSTN / PBX] under [Admin. Tools] is set properly for your connection method to the telephone network. See page 187 "Administrator Settings".	

Error Code	Solution
1XXX32 to 1XXX84	 An error occurred while sending a fax. Confirm that the telephone line is properly connected to the machine. Disconnect the telephone line from the machine, and connect a standard telephone in its place. Confirm that you can make calls using the telephone. If you cannot make calls this way, contact your telephone company.
	If the problem persists, contact your sales or service representative.
2XXX14	The machine was not able to print the received fax, or the machine's memory reached capacity while receiving a fax because the document was too large.
	The paper tray was empty. Load paper in the paper tray. See page 35 "Loading Paper".
	 The paper tray did not contain A4, Letter, or Legal size paper. Load valid size paper in the tray, and configure the paper size settings under [Tray Paper Settings] accordingly.
	A cover or tray was open. Close the cover or tray.
	There was a paper jam. Remove the jammed paper. See page 256 "Clearing Misfeeds" and page 263 "Paper Feed Problems".
	 A print cartridge was empty. Replace the print cartridge. See page 239 "Replacing the Print Cartridge".
	The received fax was too large. Ask the sender to re-send the document in parts as several smaller individual faxes, or to send at a lower resolution.
2XXX32 to 2XXX84	An error occurred while receiving a fax.
	 Confirm that the telephone line is properly connected to the machine.
	Disconnect the telephone line from the machine, and connect a standard telephone in its place. Confirm that you can make calls using the telephone. If you cannot make calls this way, contact your telephone company.
	If the problem persists, contact your sales or service representative.

Common Problems

This section describes how to troubleshoot common problems that may occur while operating the machine.

Problem	Possible cause	Solution
The machine does not turn on.	The power cord is not connected properly.	Make sure that the power plug is firmly inserted into the wall outlet.
		 Make sure that the wall outlet is not defective by connecting another working device.
An error message is shown on the machine's screen.	An error has occurred.	See page 247 "Error and Status Messages on the Screen".
Pages do not print.	The machine is warming up or receiving data.	Wait until "Printing" appears on the screen. If "Processing" is displayed on the screen, the machine is receiving data.
Pages are not printed.	The interface cable is not connected correctly.	Reconnect the cable.Check that the interface cable is the correct type.
Strange noise is heard.	The supplies are not properly installed.	Confirm that the supplies are properly installed.
The volume of the sounds produced by the machine is too loud.	The volume is set to the high level.	Adjust the volume of the beep, ring, speaker, and alarm sounds. For details, see page 180 "System Settings".
The volume of the sounds produced by the machine is too quiet.	The volume is muted or set to the low level.	Adjust the volume of the beep, ring, speaker, and alarm sounds. For details, see page 180 "System Settings".



• If any of these problems persist, turn off the power, pull out the power cord, and contact your sales or service representative.

11. Configuring Network Settings Using OS X

This chapter describes how to connect the machine to the network and specify the network settings using OS X.

Configurations differ according to the communication environment of your system.

Connecting the Machine to a Wired Network

The following procedure is explained using OS X 10.11 as an example.

Using a USB Cable

- 1. Turn on your computer.
- 2. Insert the provided CD-ROM into the CD-ROM drive of the computer.

If your computer does not have a CD-ROM drive, download a setup file from our website (http://www.ricoh.com/printers/sp200/support/gateway/).

- 3. Double-click the CD-ROM drive icon.
- 4. Double-click the [Mac OS X] folder.
- 5. Double-click the folder of driver you want to install.
- 6. Follow the instructions in the setup wizard.
- 7. Click [Close] in the [Summary] dialog box.
- 8. Start System Preferences.
- 9. Click [Printers & Scanners].

Check that the machine automatically recognized by plug-and-play appears in the printers list.

10. Click the [+] button.

If [Add Printer or Scanner...] appears, click it.

- 11. Click [Default].
- 12. Select the printer that has "USB" indicated in the [Kind] column.
- 13. Select the printer you are using from the [Use:] pop-up menu.
- 14. Click [Add].
- 15. Click [Duplexer] on the [Setting up] screen, and then click [OK].
- 16. Quit System Preferences.

Setup is completed.

 If you want to install Smart Organizing Monitor, see page 278 "Installing Smart Organizing Monitor".

Using an Ethernet Cable

- 1. Turn on your computer.
- 2. Insert the provided CD-ROM into the CD-ROM drive of the computer.

If your computer does not have a CD-ROM drive, download a setup file from our website (http://www.ricoh.com/printers/sp200/support/gateway/).

- 3. Double-click the CD-ROM drive icon.
- 4. Double-click the [Mac OS X] folder.
- 5. Double-click the folder of driver you want to install.
- 6. Follow the instructions in the setup wizard.
- 7. Click [Close] in the [Summary] dialog box.
- 8. Start System Preferences.
- 9. Click [Printers & Scanners].
- 10. Click the [+] button.

If [Add Printer or Scanner...] appears, click it.

- 11. Click [Default].
- 12. Select the printer that has "Bonjour" indicated in the [Kind] column.

If the printer name is not displayed, select the icon that corresponds to your network environment (TCP/IP, etc.).

- 13. Select the printer you are using from the [Use:] pop-up menu.
- 14. Click [Add].
- 15. Quit System Preferences.
- 16. On the [Application] menu, double-click [Smart Organizing Monitor].

For details about how to install Smart Organizing Monitor, see page 278 "Installing Smart Organizing Monitor".

- 17. Click [User Tools] tab.
- 18. Click [Printer Configuration].
- 19. Enter the access code, and then click [OK].

The default access code is "Admin".

Ц

20. On the [Network 1] tab, select [On] for [DHCP] to automatically obtain the IP address or [Off] to specify the IP address manually.

If you have selected [On], proceed to Step 25.

- 21. Enter the machine's IPv4 address in [IP Address].
- 22. Enter the subnet mask in [Subnet Mask].
- 23. Enter the gateway address in [Default Gateway Address].
- 24. Click [OK].
- 25. Wait until the machine restarts.

Setup is completed.

Connecting the Machine to a Wireless Network

You can use this function on SP 220SNw, SP 220SFNw, SP 221SNw, and SP 221SFNw only.

There are four methods for connecting the machine to a wireless network:

- Using the Wi-Fi Setup Wizard
 See page 279 "Using the Wi-Fi Setup Wizard".
- Using the WPS button
 See page 280 "Using the WPS Button".
- Using a PIN code
 See page 282 "Using a PIN Code".

Installing the Printer Driver

The following procedure is explained using OS X 10.11 as an example.

- 1. Turn on your computer.
- 2. Insert the provided CD-ROM into the CD-ROM drive of the computer.

If your computer does not have a CD-ROM drive, download a setup file from our website (http://www.ricoh.com/printers/sp200/support/gateway/).

- 3. Double-click the CD-ROM drive icon.
- 4. Double-click the [Mac OS X] folder.
- 5. Double-click the folder of driver you want to install.
- 6. Follow the instructions in the setup wizard.
- 7. Click [Close] in the [Summary] dialog box.

Installing Smart Organizing Monitor

The following procedure is explained using OS X 10.11 as an example.

- 1. Turn on your computer.
- 2. Insert the provided CD-ROM into the CD-ROM drive of the computer.

If your computer does not have a CD-ROM drive, download a setup file from our website (http://www.ricoh.com/printers/sp200/support/gateway/).

- 3. Double-click the CD-ROM drive icon.
- 4. Double-click the [Mac OS X] folder.
- 5. Double-click the [Utility] folder.

- 6. Double-click the package file icon.
- 7. Follow the instructions in the setup wizard.
- 8. If the [Printer Driver Selection] dialog box appears, do one of the following:
 - Select the machine's model.
 - Enter the IP address of the machine manually.
 - Click [Search Network Printer] to search the machine via the network.
- 9. Click [OK].
- 10. Click [Close] in the [Summary] dialog box.

Using the Wi-Fi Setup Wizard

A router (access point) is needed to set up a connection.

Checking the SSID and encryption key


The SSID and Encryption key for the router (access point) may be printed on a label affixed to the router (access point). For details about the SSID and Encryption key, refer to the router (access point) manual.

Configuring settings using the control panel

Before doing the following procedure, install the printer driver according to the procedure on page 278 "Installing the Printer Driver".

Make sure the Ethernet cable is not connected to the machine.

- 1. Check that the router (access point) is working correctly.
- 2. Press the [User Tools] key.

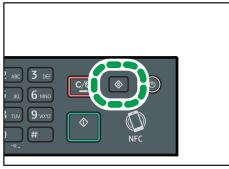

DSH210

3. Press the [▼] or [▲] key to select [Network Settings], and then press the [OK] key.

4. If you are requested to enter a password, enter the password using the number keys, and then press the [OK] key.

A password for accessing the [Network Settings] menu can be specified in [Admin. Tools Lock] under [Admin. Tools] menu.

- 5. Press the [♥] or [♠] key to select [Wi-Fi], and then press the [OK] key.
- 6. Select [Wi-Fi Enable], and then press the [OK] key.
- 7. Press the [▼] or [▲] key to select [Enable], and then press the [OK] key.
- 8. Press the [User Tools] key to return to the Initial screen.
- 9. Wait until the machine restarts.
- 10. Press the [User Tools] key.
- Press the [▼] or [▲] key to select [Wi-Fi Setup Wizard], and then press the [OK] key.
- 12. If you are requested to enter a password, enter the password using the number keys, and then press the [OK] key.

A password for accessing the [Wi-Fi Setup Wizard] menu can be specified in [Admin. Tools Lock] under [Admin. Tools] menu.

- 13. Press the [▼] or [▲] key to select SSID of the router (access point) from the searched SSID list, and then press the [OK] key.
- 14. Enter the encryption key using the number keys, and then press the [OK] key.

As the passphrase, you can enter either 8 to 63 ASCII characters (0x20-0x7e) or 64 hexadecimal digits (0-9, A-F, a-f).

- 15. Press the [OK] key.
- 16. Check the result.
 - Connection has succeeded:

Configuring the Wi-Fi settings is complete.

• Connection has failed:

Check the configuration for the router (access point), and then try the connection again.

Using the WPS Button

A router (access point) is needed to set up a connection.


Before doing the following procedure, install the printer driver according to the procedure on page 278 "Installing the Printer Driver".

Make sure the Ethernet cable is not connected to the machine.

1. Check that the router (access point) is working correctly.

11

2. Press the [User Tools] key.

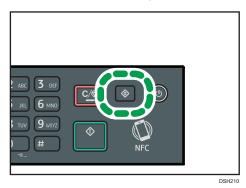

- Press the [▼] or [▲] key to select [Network Settings], and then press the [OK] key.
- 4. If you are requested to enter a password, enter the password using the number keys, and then press the [OK] key.

A password for accessing the [Network Settings] menu can be specified in [Admin. Tools Lock] under [Admin. Tools] menu.

- 5. Press the [♥] or [▲] key to select [Wi-Fi], and then press the [OK] key.
- 6. Select [Wi-Fi Enable], and then press the [OK] key.
- 7. Press the [▼] or [▲] key to select [Enable], and then press the [OK] key.
- 8. Press the [User Tools] key to return to the Initial screen.
- 9. Wait until the machine restarts.
- 10. Press the [User Tools] key.
- 11. Press the [▼] or [▲] key to select [Network Settings], and then press the [OK] key.
- 12. If you are requested to enter a password, enter the password using the number keys, and then press the [OK] key.

A password for accessing the [Network Settings] menu can be specified in [Admin. Tools Lock] under [Admin. Tools] menu.

- 13. Press the [♥] or [♠] key to select [Wi-Fi], and then press the [OK] key.
- 14. Press the [♥] or [♠] key to select [WPS], and then press the [OK] key.
- 15. Press the [♥] or [▲] key to select [PBC], and then press the [OK] key.
- 16. Press [Yes].

"Please push the [AP] within 2 minutes" appears, and the machine starts to connect in PBC method.

17. Press the WPS button on the router (access point) within two minutes.

For details about how to use the WPS button, refer to the manuals for the router (access point).

- 18. Check the result.
 - Connection has succeeded:

Press [EXIT] to return to the screen displayed in Step 15, and then press the [User Tools] key to return to the initial screen.

Configuring the Wi-Fi settings is complete.

· Connection has failed:

Press [EXIT] to return to the screen displayed in Step 15. Check the configuration for the router (access point), then try the connection again.


Using a PIN Code

A router (access point) is needed to set up a connection. To establish a connection using the PIN code, use a computer that is connected to the router (access point).

Before doing the following procedure, install the printer driver according to the procedure on page 278 "Installing the Printer Driver".

Make sure the Ethernet cable is not connected to the machine.

- 1. Check that the router (access point) is working correctly.
- 2. Open the PIN code configuration window (web page) for the router (access point) on your computer.
- 3. Press the [User Tools] key.

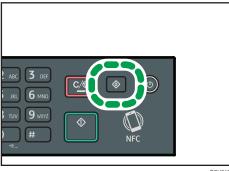

- Press the [▼] or [▲] key to select [Network Settings], and then press the [OK] key.
- 5. If you are requested to enter a password, enter the password using the number keys, and then press the [OK] key.

A password for accessing the [Network Settings] menu can be specified in [Admin. Tools Lock] under [Admin. Tools] menu.

- Press the [▼] or [▲] key to select [Wi-Fi], and then press the [OK] key.
- 7. Select [Wi-Fi Enable], and then press the [OK] key.
- 8. Press the [♥] or [▲] key to select [Enable], and then press the [OK] key.
- 9. Press the [User Tools] key to return to the Initial screen.

- 10. Wait until the machine restarts.
- 11. Press the [User Tools] key.
- 12. Press the [♥] or [▲] key to select [Network Settings], and then press the [OK] key.
- 13. If you are requested to enter a password, enter the password using the number keys, and then press the [OK] key.

A password for accessing the [Network Settings] menu can be specified in [Admin. Tools Lock] under [Admin. Tools] menu.

- 14. Press the [♥] or [♠] key to select [Wi-Fi], and then press the [OK] key.
- 15. Press the [▼] or [▲] key to select [WPS], and then press the [OK] key.
- 16. Press the [♥] or [♠] key to select [PIN], and then press the [OK] key.
- 17. Check the PIN code.

Write down the PIN code in case you might forget it.

- 18. Enter the machine's PIN code (8 digits) on the router (access point)'s web page. (The web page accessed in Step 2)
- 19. Execute WPS (PIN system) from the router (access point)'s web page.
- 20. Press [Connect].

"Please wait for 2 minutes" and connecting with PIN method starts.

- 21. Check the result.
 - Connection has succeeded:

Press [EXIT] to return to the screen displayed in Step 16, and then press the [User Tools] key to return to the initial screen.

Configuring the Wi-Fi settings is complete.

· Connection has failed:

Press [EXIT] to return to the screen displayed in Step 16. Check the configuration for the router (access point), then try the connection again.

12

12. Appendix

This chapter describes the machine specifications and consumables.

Transmission Using IPsec

For securer communications, this machine supports the IPsec protocol. When applied, IPsec encrypts data packets at the network layer using shared key encryption. The machine uses encryption key exchange to create a shared key for both sender and receiver. To achieve even higher security, you can also renew the shared key on a validity period basis.



- IPsec is not applied to data obtained through DHCP, DNS, or WINS.
- IPsec compatible operating systems are Windows Vista or later, Windows Server 2003 or later, OS X 10.7 or later, Red Hat Enterprise Linux 6 or later. However, some setting items are not supported depending on the operating system. Make sure the IPsec settings you specify are consistent with the operating system's IPsec settings.
- If you cannot access Web Image Monitor due to IPsec configuration problems, disable IPsec under [Admin. Tools] on the control panel, and then access Web Image Monitor.
- For details about specifying the IPsec settings using Web Image Monitor, see page 224
 "Configuring the IPsec Settings".
- For details about enabling and disabling IPsec using the control panel, see page 187
 "Administrator Settinas".

Encryption and Authentication by IPsec

IPsec consists of two main functions: the encryption function, which ensures the confidentiality of data, and the authentication function, which verifies the sender of the data and the data's integrity. This machine's IPsec function supports two security protocols: the ESP protocol, which enables both of the IPsec functions at the same time, and the AH protocol, which enables only the authentication function.

ESP Protocol

The ESP protocol provides secure transmission through both encryption and authentication. This protocol does not provide header authentication.

- For successful encryption, both the sender and receiver must specify the same encryption
 algorithm and encryption key. The encryption algorithm and encryption key are specified
 automatically.
- For successful authentication, the sender and receiver must specify the same authentication
 algorithm and authentication key. The authentication algorithm and authentication key are
 specified automatically.

AH Protocol

The AH protocol provides secure transmission through authentication of packets only, including headers.

 For successful authentication, the sender and receiver must specify the same authentication algorithm and authentication key. The authentication algorithm and authentication key are specified automatically.

AH Protocol + ESP Protocol

When combined, the ESP and AH protocols provide secure transmission through both encryption and authentication. These protocols provide header authentication.

- For successful encryption, both the sender and receiver must specify the same encryption
 algorithm and encryption key. The encryption algorithm and encryption key are specified
 automatically.
- For successful authentication, the sender and receiver must specify the same authentication algorithm and authentication key. The authentication algorithm and authentication key are specified automatically.



• Some operating systems use the term "Compliance" in place of "Authentication".

Security Association

This machine uses encryption key exchange as the key setting method. With this method, agreements such as the IPsec algorithm and key must be specified for both sender and receiver. Such agreements form what is known as an SA (Security Association). IPsec communication is possible only if the receiver's and sender's SA settings are identical.

The SA settings are auto configured on both parties' machines. However, before the IPsec SA can be established, the ISAKMP SA (Phase 1) settings must be auto configured. When this is done, the IPsec SA (Phase 2) settings, which allow actual IPsec transmission, will be auto configured.

Also, for further security, the SA can be periodically auto updated by applying a validity period (time limit) for its settings. This machine only supports IKEv1 for encryption key exchange.

Multiple settings can be configured in the SA.

Settings 1-10

You can configure ten separate sets of SA details (such as different shared keys and IPsec algorithms).

IPsec policies are searched through one by one, starting at [No.1].

Encryption Key Exchange Settings Configuration Flow

This section explains the procedure for specifying encryption key exchange settings.

Machine	PC	
1. Set the IPsec settings on Web Image Monitor.	1. Set the same IPsec settings as the machine on PC.	
2. Enable IPsec settings.	2. Enable IPsec settings.	
3. Confirm IPsec transmission.		



- After configuring IPsec, you can use "ping" command to check if the connection is established
 correctly. Because the response is slow during initial key exchange, it may take some time to
 confirm that transmission has been established.
- If you cannot access Web Image Monitor due to IPsec configuration problems, disable IPsec under [Admin. Tools] on the control panel, and then access Web Image Monitor.
- For details about disabling IPsec using the control panel, see page 187 "Administrator Settings".

Specifying Encryption Key Exchange Settings

- This function is available only when an administrator password is specified.
- 1. Start the web browser and access the machine by entering its IP address.
- 2. Click [IPsec Settings].
- 3. Click the [IPsec Policy List] tab.
- 4. Select the number of the setting you want to modify in the list, and then click [Change].
- 5. Modify the IPsec related settings as necessary.
- 6. Enter the administrator password, and then click [Apply].
- 7. Click the [IPsec Global Settings] tab, and then select [Active] in [IPsec Function].
- If necessary, specify [Default Policy], [Broadcast and Multicast Bypass], and [All ICMP Bypass] also.
- 9. Enter the administrator password, and then click [Apply].

UNote

An administrator password can be specified in the [Administrator] tab.

Specifying IPsec Settings on the Computer

Specify exactly the same settings for IPsec SA settings on your computer as are specified for the IPsec Settings on the machine. Setting methods differ according to the computer's operating system. The following procedure is based on Windows 7 in an IPv4 environment as an example.

- On the [Start] menu, click [Control Panel], [System and Security], and then click [Administrative Tools].
- Double-click [Local Security Policy], and then click [IP Security Policies on Local Computer].
- In the "Action" menu, click [Create IP Security Policy...].
 The IP Security Policy Wizard appears.
- 4. Click [Next].
- 5. Enter a security policy name in "Name", and then click [Next].
- 6. Clear the "Activate the default response rule." check box, and then click [Next].
- 7. Select "Edit properties", and then click [Finish].
- 8. In the "General" tab, click [Settings...].
- 9. In "Authenticate and generate a new key after every", enter the same validity period (in minutes) that is specified on the machine in [IKE Life Time], and then click [Methods...].
- 10. Confirm that the Encryption Algorithm ("Encryption"), Hash Algorithm ("Integrity"), and IKE Diffie-Hellman Group ("Diffie-Hellman Group") settings in "Security method preference order" all match those specified on the machine in [IKE Settings].
 If the settings are not displayed, click [Add...].
- 11. Click [OK] twice.
- 12. Click [Add...] in the "Rules" tab.
 The Security Rule Wizard appears.
- 13. Click [Next].
- 14. Select "This rule does not specify a tunnel", and then click [Next].
- 15. Select the type of network for IPsec, and then click [Next].
- 16. Click [Add...] in the IP Filter List.
- 17. In [Name], enter an IP Filter name, and then click [Add...].
 The IP Filter Wizard appears.
- 18. Click [Next].
- In [Description:], enter a name or a detailed explanation of the IP filter, and then click [Next].

You may click [Next] and proceed to the next step without entering any information in this field.

- 20. Select "My IP Address" in "Source address", and then click [Next].
- Select "A specific IP Address or Subnet" in "Destination address", enter the machine's IP address, and then click [Next].
- 22. For the IPsec protocol type, select "Any", and then click [Next].
- 23. Click [Finish], and then click [OK].
- 24. Select the IP filter that you have just created, and then click [Next].
- 25. Click [Add...] in the Filter Action.
 The Filter Action Wizard appears.
- 26. Click [Next].
- 27. In [Name], enter a Filter Action name, and then click [Next].
- 28. Select "Negotiate security", and then click [Next].
- 29. Select one of options for computers allowed to communicate with, and then click [Next].
- 30. Select "Custom" and click [Settings...].
- 31. When [ESP] is selected for the machine in [Security Protocol] under [IPsec Settings], select [Data integrity and encryption (ESP)], and configure the following settings:
 - Set the value of [Integrity algorithm] to the same value as the [Authentication Algorithm for ESP] specified on the machine.
 - Set the value of [Encryption algorithm] to the same value as the [Encryption Algorithm for ESP] specified on the machine.
- 32. When [AH] is selected for the machine in [Security Protocol] under [IPsec Settings], select [Data and address integrity without encryption (AH)], and configure the following settings:
 - Set the value of [Integrity algorithm] to the same value as the [Authentication Algorithm for AH] specified on the machine.
 - Clear the [Data integrity and encryption (ESP)] check box.
- 33. When [ESP&AH] is selected for the machine in [Security Protocol] under [IPsec Settings], select [Data and address integrity without encryption (AH)], and configure the following settings:
 - Set the value of [Integrity algorithm] under [Data and address integrity without encryption (AH)] to the same value as [Authentication Algorithm for AH] specified on the machine.
 - Set the value of [Encryption algorithm] under [Data integrity and encryption (ESP)] to the same value as [Encryption Algorithm for ESP] specified on the machine.
- 34. In the Session key settings, select "Generate a new key every", and enter the same validity period (in [Seconds] or [Kbytes]) as that specified for [Life Time] on the machine.
- 35. Click [OK], and then click [Next].

36. Click [Finish].

If you are using IPv6, you must repeat this procedure from Step 12 and specify ICMPv6 as an exception. When you reach Step 22, select [58] as the protocol number for the "Other" target protocol type, and then set [Negotiate security] to [Permit].

- 37. Select the filter action that you have just created, and then click [Next].
- 38. Select one of options for an authentication method, and then click [Next].
- 39. Click [Finish], and then click [OK] twice.

The new IP security policy (IPsec settings) is specified.

40. Select the security policy that you have just created, right click on it, and then click [Assign].

IPsec settings on the computer are enabled.



To disable the computer's IPsec settings, select the security policy, right click, and then click [Unassign].

Enabling and Disabling IPsec Using the Control Panel

Important

- This function is available only when an administrator password is specified.
- 1. Press the [User Tools] key.
- 2. Press the [▲] or [▼] key to select [Admin. Tools].
- 3. Enter a password using the number keys, and then press the [OK] key.
- Press the [▲] or [▼] key to select [IPsec], and then press the [OK] key.
- Press the [▲] or [▼] key to select [Active] or [Inactive], and then press the [OK] key.
- 6. Press the [User Tools] key to return to the initial screen.

U Note

- A password for accessing the [Admin. Tools] menu can be specified in [Admin. Tools Lock]. For details about [Admin. Tools Lock], see page 187 "Administrator Settings".
- You can press the [Back] key to exit to the previous level of the menu tree.

Notes About the Toner

- Proper operation cannot be guaranteed if any third-party toner is used.
- Depending on printing conditions, there are cases where the printer cannot print the number of sheets indicated in the specifications.
- Replace the print cartridge if the printed image suddenly becomes pale or blurred.
- When operating the machine for the first time, use the print cartridge supplied with this machine. If this cartridge is not initially used, the following problems may occur:
 - "Replace Required Soon:" "Print Cartridge" will be displayed before the toner runs out.
 - "Replacement Required:" "Print Cartridge" will be displayed when the toner runs out, but instead the printed image suddenly becomes pale or blurred.
- The lifetime of the photo conductor, which is built into the print cartridge, is taken into account in displaying "Replace Required Soon:" "Print Cartridge". If the photo conductor stops working before the toner runs out, "Replace Required Soon:" "Print Cartridge" may be displayed.
- To continue printing after "Replace Required Soon:" "Print Cartridge" is displayed, set [Toner End
 Option] to [Continue Printing]. However, since any trouble caused by using this setup is outside of
 the scope of the manufacturer's warranty, this setup should be used with care. For details about
 [Toner End Option], see page 180 "System Settings".
- If [Toner End Option] is first set to [Continue Printing] and then to [Stop Printing], be sure to use a
 new print cartridge. If a used print cartridge is installed, there will be a discrepancy between the
 remaining toner level displayed and the actual remaining toner, and accordingly, "Replace
 Required Soon:" "Print Cartridge" will not be displayed at the appropriate timing.

Specifications of the Machine

This section lists the machine's specifications.

General Function Specifications

ltem	Description	
Configuration	Desktop	
Print process	Laser electrostatic transfer	
Maximum paper size for scanning using the exposure glass	216 mm × 297 mm (8.5 × 11.7 inches)	
Maximum paper size for scanning using the ADF	216 mm × 356 mm (8.5 × 14 inches)	
(only SP 220SNw, SP 221SNw, SP 221SF, SP 220SFNw, and SP 221SFNw)		
Maximum paper size for printing	216 mm × 356 mm (8.5 × 14 inches)	
Warm-up time (23 °C, 71.6 °F)	SP 220SNw, SP 221S, SP 221SNw: 28 seconds	
Region	SP 220SFNw, SP 221SF, SP 221SFNw: 27 seconds	
Warm-up time (23 °C, 71.6 °F) Region B	27 seconds	
Paper sizes	For details, see page 50 "Supported Paper".	
Paper type	For details, see page 50 "Supported Paper".	
Paper output capacity (80 g/m², 20 lb)	50 sheets	
Paper input capacity (80 g/m², 20 lb)	• Tray 1	
	150 sheets	
	Bypass tray	
	1 sheet	

ltem	Description	
ADF capacity (80 g/m², 20 lb) (only SP 220SNw, SP 221SNw, SP 221SF, SP 220SFNw, and SP 221SFNw)	35 sheets	
Memory	128 MB	
Power requirements		
	Region B	
	120-127 V, 8 A, 60 Hz	
	If the voltage supplied to the machine is outside the guaranteed operating range, "SC560" appears on the screen. If this happens, turn the power off and then back on. If the message does not disappear, contact your service representative.	
Power consumption (SP 220SNw, SP 221S, SP 221SNw) Region A	• Ready 49.6 W	
	During printing	
	316 W	
	Maximum	
	784 W The power level when the main switch is turned off and the power cord is plugged into an outlet: 1 W or less	
Power consumption (SP 220SFNw, SP	• Ready	
221SF, SP 221SFNw) ® Region A	51.2 W	
	During printing	
	325 W	
	Maximum 803 W	
	The power level when the main switch is turned off and the power cord is plugged into an outlet: 1 W or less	

ltem	Description
Machine dimensions (Width × Depth × Height)	 SP 221S, SP 220SNw, and SP 221SNw 402 × 360 × 252 mm (15.8 × 14.2 × 10.0 inches) SP 221SF, SP 220SFNw, and SP 221SFNw 402 × 360 × 293 mm (15.8 × 14.2 × 11.5 inches)
Weight (machine body with consumables)	 SP 221S 9.0 kg (20 lb.) or less SP 221SF, SP 220SNw, SP 221SNw, SP 220SFNw, and SP 221SFNw 10.0 kg (22.0 lb.) or less

U Note

- Sound power level and sound pressure level are actual values measured in accordance with ISO 7779.
- Sound pressure level is measured from the position of the bystander.

Printer Function Specifications

ltem	Description	
Printing speed	23 pages per minute (A4)	
Resolution	600 × 600 dpi (maximum: 1200 × 1200 dpi)	
First print speed	10 seconds or less	
Interface	 Ethernet (10BASE-T, 100BASE-TX) (only SP 220SNw, SP 221SNw, SP 220SFNw, SP 221SFNw) USB 2.0 Wi-Fi (only SP 220SNw, SP 221SNw, SP 220SFNw, SP 221SFNw) 	
Printer language	GDI	

Copier Function Specifications

ltem	Description	
Maximum resolution (scanning and printing)	 Exposure glass Scanning: 600 × 600 dpi Printing: 600 × 600 dpi ADF (only SP 220SNw, SP 221SNw, SP 221SF, SP 220SFNw, and SP 221SFNw) Scanning: 600 × 300 dpi Printing: 600 × 600 dpi 	
First copy speed (A4, at 23 °C, 71.6 °F)	30 seconds or less	
Multiple copy speed	23 pages per minute	
Reproduction ratio	 Fixed ratio 	
Copy quantity	99	

Scanner Function Specifications

ltem	Description
Maximum scanning area (horizontal × vertical)	 Exposure glass 216 × 297 mm (8.5 × 11.7 inches) ADF (only SP 220SNw, SP 221SNw, SP 221SF, SP 220SFNw, and SP 221SFNw) 216 × 356 mm (8.5 × 14 inches)

ltem	Description
Maximum resolution when scanning from the control panel	600 × 600 dpi
Maximum resolution when scanning from a computer (TWAIN)	 Exposure glass 600 × 600 dpi ADF (only SP 220SNw, SP 221SNw, SP 221SF, SP 220SFNw, and SP 221SFNw) 600 × 300 dpi
Maximum resolution when scanning from a computer (WIA)	600 × 600 dpi
ADF throughput	Black and white: 13 images per minute Full Color: 4 images per minute
Interface	 Ethernet (10BASE-T, 100BASE-TX) (only SP 220SNw, SP 221SNw, SP 220SFNw, SP 221SFNw) USB 2.0 Wi-Fi (only SP 220SNw, SP 221SNw, SP 220SFNw, SP 221SFNw)

Fax Function Specifications

ltem	Description	
Access line	Public switched telephone networks (PSTN)Private branch exchange (PBX)	
Transmission mode	ITU-T Group 3 (G3)	
Scan line density	• 8 dots per mm × 3.85 line per mm (200 × 100 dpi)	
	• 8 dots per mm × 7.7 line per mm (200 × 200 dpi)	
Transmission time	3 seconds (8 dots per mm × 3.85 line per mm, 33.6 kbps, MMR, ITU-T # 1 chart)	

Consumables



Our products are engineered to meet high standards of quality and functionality, and we
recommend that you use only the expendable supplies available at an authorized dealer.

Print Cartridge



- For information about consumables, see our website (http://www.ricoh.com/printers/sp200/support/gateway/).
- If print cartridges are not changed when necessary, printing will become impossible. For easy replacement, we recommend you purchase and store extra print cartridges.
- Print cartridges (consumables) are not covered by warranty. However, if there is a problem, contact the store where they were purchased.
- When you first use this machine, use the print cartridges packaged with the machine.
- The print cartridges provided for SP 221SNw and SP 221SFNw are good for approximately 2,600 pages.
- The print cartridges provided for SP 220SNw, SP 220SFNw, SP 221S, and SP 221SF are good for approximately 700 pages.
- · This machine routinely performs cleaning and uses toner during this operation to maintain quality.
- To prevent a cleaning malfunction, you may need to replace a print cartridge even if it is not empty.

Information for This Machine

User Information on Electrical & Electronic Equipment
Region (mainly Europe and Asia)

Users in the countries where this symbol shown in this section has been specified in national law on collection and treatment of E-waste

Our Products contain high quality components and are designed to facilitate recycling.

Our products or product packaging are marked with the symbol below.



The symbol indicates that the product must not be treated as municipal waste. It must be disposed of separately via the appropriate return and collection systems available. By following these instructions you ensure that this product is treated correctly and help to reduce potential impacts on the environment and human health, which could otherwise result from inappropriate handling. Recycling of products helps to conserve natural resources and protect the environment.

For more detailed information on collection and recycling systems for this product, please contact the shop where you purchased it, your local dealer or sales/service representatives.

All Other Users

If you wish to discard this product, please contact your local authorities, the shop where you bought this product, your local dealer or sales/service representatives.

For Users in India

12

This product complies with the "India E-waste Rule 2011" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

For Turkey only

EEE Yönetmeliğine Uygundur.

Bu sistem sarf malzemeleri ve yedek parçaları da dahil olmak üzere EEE Yönetmeliğine Uygundur.

Üretici:

Ricoh Company, Ltd.
8-13-1 Ginza,
Chuo-ku, Tokyo 104-8222 Japan
+81-36278-2111(English only/Sadece İngilizce)

Note for the Battery and/or Accumulator Symbol (For EU countries only)



In accordance with the Battery Directive 2006/66/EC Article 20 Information for end-users Annex II, the above symbol is printed on batteries and accumulators.

This symbol means that in the European Union, used batteries and accumulators should be disposed of separately from your household waste.

In the EU, there are separate collection systems for not only used electrical and electronic products but also batteries and accumulators.

Please dispose of them correctly at your local community waste collection/recycling centre.

Environmental Advice for Users Region (mainly Europe)

Users in the EU, Switzerland and Norway

Consumables yield

Please refer to either the User's Manual for this information or the packaging of the consumable.

Recycled paper

The machine can use recycled paper which is produced in accordance with European standard EN 12281:2002 or DIN 19309. For products using EP printing technology, the machine can print on 64 g/m^2 paper, which contains less raw materials and represents a significant resource reduction.

Duplex printing (if applicable)

Duplex printing enables both sides of a sheet of paper to be used. This saves paper and reduces the size of printed documents so that fewer sheets are used. We recommend that this feature is enabled whenever you print.

Toner and ink cartridge return program

Toner and ink cartridge for recycling will be accepted free of charge from users in accordance with local regulations.

For details about the return program, please refer to the Web page below or consult your service person.

https://www.ricoh-return.com/

Energy efficiency

The amount of electricity a machine consumes depends as much on its specifications as it does on the way you use it. The machine is designed to allow you to reduce electricity costs by switching to Ready mode after it prints the last page. If required, it can immediately print again from this mode. If no additional prints are required and a specified period of time passes, the device switches to an energy saving mode.

In these modes, the machine consumes less power (watts). If the machine is to print again, it needs a little longer to return from an energy saving mode than from Ready mode.

For maximum energy savings, we recommend that the default setting for power management is used.

Products that comply with the Energy Star requirement are always energy efficient.

Notice To Wireless LAN Interface Users Region A (mainly Europe)



Declaration of Conformity

Notice to Users in FFA Countries

This product complies with the essential requirements and provisions of Directive 2014/53/EU.

The CE Declaration of Conformity is available by accessing the URL: http://www.ricoh.com/products/ce_doc/

and selecting the product applicable.

Operating frequency band: 2400 - 2483.5 MHz

maximum radio-frequency power: less than 20.0 dBm

As this equipment with the radiating part is not intended to be used in close proximity to the human body, it is recommended to use at least 20cm apart from the user.

Model Number: SP 220SNw/SP 220SFNw/SP 221SNw/SP 221SFNw

NOTICE TO USERS (NEW ZEALAND)

The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services.

This equipment is not capable, under all operating conditions, of correct operation at the higher speeds for which it is designed. Telecom will accept no responsibility should difficulties arise in such circumstances.

Devices connected to the telephone port may lose their memory if this fax machine is on line for extended periods. To prevent this, such devices should have the facility for battery or similar backup of memory.

This device may be subject to ringing or bell tinkle when certain other devices are connected to the same line. If this occurs, the problem should not be referred to the Telecom Faults Service.

This equipment should not be used under any circumstances that may constitute a nuisance to other Telecom customers.

Telepermitted equipment only may be connected to the auxiliary telephone port. The auxiliary telephone port is not specifically designed for 3-wire connected equipment that may not respond to incoming ringing when attached to this port.

Model Number: SP 220SFNw

Notes to users in the state of California (Notes to Users in USA)

Perchlorate Material - special handling may apply. See: www.dtsc.ca.gov/hazardouswaste/perchlorate

Notes to users in the United States of America

Part 15 of the FCC Rules

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can

radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio /TV technician for help.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Caution:

Changes or modifications not expressly approved by the party responsible for compliance couldvoid the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

Certification

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Model Number: SP 220SNw/SP 220SFNw

Part 68 of the FCC Rules regarding Facsimile Unit

- This equipment complies with Part 68 of the FCC rules and requirements adopted by the ACTA. On
 the cover of this equipment is a label that contains, among other information, a product identifier in
 the format US:AAAEQ##TXXXXX. If requested, this number must be provided to the telephone
 company.
- 2. This equipment uses the RJ11C USOC jack.
- A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A

compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for detail.

- 4. The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. The REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3).
- 5. If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice is not practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.
- 6. The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.
- 7. If trouble is experienced with this equipment, for repair or warranty information, please contact Ricoh Americas Corporation Customer Support Department at 1-800-FASTFIX. If this device is causing problems with your telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.
- 8. In the event of operation problems (document jam, copy jam, communication error indication), see the manual provided with this machine for instruction on resolving the problem.
- 9. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.
- 10. If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

WHEN PROGRAMMING EMERGENCY NUMBERS AND/OR MAKING TEST CALLS TO EMERGENCY NUMBERS:

- Remain on the line and briefly explain to the dispatcher the reason for the call before hanging
 up.
- 2. Perform such activities in the off-peak hours, such as early morning hours or late evenings.

The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device, including FAX machines, to send any message unless such message clearly contains in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent and an identification of the business or other entity, or other individual sending the message and the telephone number of the sending machine or such business,

other entity, or individual. (The telephone number provided may not be a 900 number or any other number for which charges exceed local or long-distance transmission charges.)

In order to program this information into your FAX machine, you should complete the following steps: Follow the FAX HEADER programming procedure in the Programming chapter of the operating instructions to enter the business identification and telephone number of the terminal or business. This information is transmitted with your document by the FAX HEADER feature. In addition to the information, be sure to program the date and time into your machine.

Model Number: SP 220SFNw

Notes to Canadian Users of Wireless Devices

This device complies with Industry Canada's licence-exempt RSSs.

Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

Model Number: SP 220SNw/SP 220SFNw

Remarques à l'attention des utilisateurs canadiens d'appareils sans fil

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage

radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'IC. Cet équipement doit être installé et utilisé en gardant une distance de 20 cm ou plus entre le radiateur et le corps humain. (à l'exception des extrémités : mains, poignets, pieds et chevilles)

Model Number: SP 220SNw/SP 220SFNw

Notes to Canadian Users of SP 220SFNw

This product meets the applicable Innovation, Science and Economic Development Canada technical specifications.

The Ringer Equivalence Number (REN) indicates the maximum number of devices allowed to be connected to a telephone interface. The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices not exceed five.

Model Number: SP 220SFNw

Remarques à l'attention des utilisateurs canadiens du SP 220SFNw

Le présent produit est conforme aux spécifications techniques applicables d'Innovation, Sciences et Développement économique Canada

L'indice d'équivalence de la sonnerie (IES) sert à indiquer le nombre maximal de dispositifs qui peuvent être raccordés à une interface téléphonique. La terminaison d'une interface peut consister en une combinaison quelconque de dispositifs, à la seule condition que la somme des IES de tous les dispositifs n'excède pas cinq.

Model Number: SP 220SFNw

ENERGY STAR Program

ENERGY STAR® Program Requirements for Imaging Equipment



The ENERGY STAR[®] Program Requirements for Imaging Equipment encourage energy conservation by promoting energy efficient computers and other office equipment.

The program backs the development and dissemination of products that feature energy saving functions.

It is an open program in which manufacturers participate voluntarily.

Targeted products are computers, monitors, printers, facsimiles, copiers, scanners, and multifunction devices. Energy Star standards and logos are internationally uniform.

Saving Energy

This machine is equipped with the following Energy Saver modes: Energy Saver mode 1 and Energy Saver mode 2. If the machine has been idle for a certain period of time, the machine automatically enters Energy Saver mode.

The machine recovers from Energy Saver mode when it receives a print job, prints a received fax, or when any key is pressed.

Energy Saver mode 1

The machine enters Energy Saver mode 1 if the machine has been idle for about 30 seconds. It takes less time to recover from Energy Saver mode 1 than from power-off state or Energy Saver mode 2, but power consumption is higher in Energy Saver mode 1 than in Energy Saver mode 2.

Energy Saver mode 2

The machine enters Energy Saver mode 2 after the period of time specified for this setting is passed. Power consumption is lower in Energy Saver mode 2 than in Energy Saver mode 1, but it takes longer to recover from Energy Saver mode 2 than from Energy Saver mode 1.

Region A
29.2 W
Region B
29.5 W

10 seconds

12

Energy Saver mode 1	Power Consumption*1	• SP 220SNw, SP 221S, and SP 221SNw
		Region A 30 W
		Region B 28.9 W
		SP 220SFNw, SP 221SF, and SP 221SFNw

Recovery Time*1

Specifications

For details about Energy Saver modes, see page 187 "Administrator Settings".



- Even if Energy Saver mode 2 is enabled, the machine will not enter Energy Saver mode 2 for two hours if Low Humidity Mode is enabled. However, the machine will enter Energy Saver mode 1 as normal (even when Energy Saver mode 1 is not enabled).
- For details about Low Humidity Mode, see page 180 "System Settings".

^{*1} Recovery time and power consumption may differ depending on the conditions and environment of the machine.

Copyright Information about Installed Applications

Apache License

Apache License

Version 2.0, January 2004

http://www.apache.org/licenses/

TERMS AND CONDITIONS FOR USE, REPRODUCTION, AND DISTRIBUTION

1. Definitions.

"License" shall mean the terms and conditions for use, reproduction, and distribution as defined by Sections 1 through 9 of this document.

"Licensor" shall mean the copyright owner or entity authorized by the copyright owner that is granting the License.

"Legal Entity" shall mean the union of the acting entity and all other entities that control, are controlled by, or are under common control with that entity. For the purposes of this definition, "control" means (i) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (ii) ownership of fifty percent (50%) or more of the outstanding shares, or (iii) beneficial ownership of such entity.

"You" (or "Your") shall mean an individual or Legal Entity exercising permissions granted by this License.

"Source" form shall mean the preferred form for making modifications, including but not limited to software source code, documentation source, and configuration files.

"Object" form shall mean any form resulting from mechanical transformation or translation of a Source form, including but not limited to compiled object code, generated documentation, and conversions to other media types.

"Work" shall mean the work of authorship, whether in Source or Object form, made available under the License, as indicated by a copyright notice that is included in or attached to the work (an example is provided in the Appendix below).

"Derivative Works" shall mean any work, whether in Source or Object form, that is based on (or derived from) the Work and for which the editorial revisions, annotations, elaborations, or other modifications represent, as a whole, an original work of authorship. For the purposes of this License, Derivative Works shall not include works that remain separable from, or merely link (or bind by name) to the interfaces of, the Work and Derivative Works thereof.

"Contribution" shall mean any work of authorship, including the original version of the Work and any modifications or additions to that Work or Derivative Works thereof, that is intentionally submitted to Licensor for inclusion in the Work by the copyright owner or by an individual or Legal Entity authorized to submit on behalf of the copyright owner. For the purposes of this definition, "submitted" means any

form of electronic, verbal, or written communication sent to the Licensor or its representatives, including but not limited to communication on electronic mailing lists, source code control systems, and issue tracking systems that are managed by, or on behalf of, the Licensor for the purpose of discussing and improving the Work, but excluding communication that is conspicuously marked or otherwise designated in writing by the copyright owner as "Not a Contribution."

"Contributor" shall mean Licensor and any individual or Legal Entity on behalf of whom a Contribution has been received by Licensor and subsequently incorporated within the Work.

- 2. Grant of Copyright License. Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable copyright license to reproduce, prepare Derivative Works of, publicly display, publicly perform, sublicense, and distribute the Work and such Derivative Works in Source or Object form.
- 3. Grant of Patent License. Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable (except as stated in this section) patent license to make, have made, use, offer to sell, sell, import, and otherwise transfer the Work, where such license applies only to those patent claims licensable by such Contributor that are necessarily infringed by their Contribution(s) alone or by combination of their Contribution(s) with the Work to which such Contribution(s) was submitted. If You institute patent litigation against any entity (including a cross-claim or counterclaim in a lawsuit) alleging that the Work or a Contribution incorporated within the Work constitutes direct or contributory patent infringement, then any patent licenses granted to You under this License for that Work shall terminate as of the date such litigation is filed.
- 4. Redistribution. You may reproduce and distribute copies of the Work or Derivative Works thereof in any medium, with or without modifications, and in Source or Object form, provided that You meet the following conditions:

You must give any other recipients of the Work or Derivative Works a copy of this License; and You must cause any modified files to carry prominent notices stating that You changed the files; and You must retain, in the Source form of any Derivative Works that You distribute, all copyright, patent, trademark, and attribution notices from the Source form of the Work, excluding those notices that do not pertain to any part of the Derivative Works; and

If the Work includes a "NOTICE" text file as part of its distribution, then any Derivative Works that You distribute must include a readable copy of the attribution notices contained within such NOTICE file, excluding those notices that do not pertain to any part of the Derivative Works, in at least one of the following places: within a NOTICE text file distributed as part of the Derivative Works; within the Source form or documentation, if provided along with the Derivative Works; or, within a display generated by the Derivative Works, if and wherever such third-party notices normally appear. The contents of the NOTICE file are for informational purposes only and do not modify the License. You may add Your own attribution notices within Derivative Works that You distribute, alongside or as an addendum to the NOTICE text from the Work, provided that such additional attribution notices cannot be construed as modifying the License.

12

You may add Your own copyright statement to Your modifications and may provide additional or different license terms and conditions for use, reproduction, or distribution of Your modifications, or for any such Derivative Works as a whole, provided Your use, reproduction, and distribution of the Work otherwise complies with the conditions stated in this License.

- 5. Submission of Contributions. Unless You explicitly state otherwise, any Contribution intentionally submitted for inclusion in the Work by You to the Licensor shall be under the terms and conditions of this License, without any additional terms or conditions. Notwithstanding the above, nothing herein shall supersede or modify the terms of any separate license agreement you may have executed with Licensor regarding such Contributions.
- 6. Trademarks. This License does not grant permission to use the trade names, trademarks, service marks, or product names of the Licensor, except as required for reasonable and customary use in describing the origin of the Work and reproducing the content of the NOTICE file.
- 7. Disclaimer of Warranty. Unless required by applicable law or agreed to in writing, Licensor provides the Work (and each Contributor provides its Contributions) on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied, including, without limitation, any warranties or conditions of TITLE, NON-INFRINGEMENT, MERCHANTABILITY, or FITNESS FOR A PARTICULAR PURPOSE. You are solely responsible for determining the appropriateness of using or redistributing the Work and assume any risks associated with Your exercise of permissions under this License.
- 8. Limitation of Liability. In no event and under no legal theory, whether in tort (including negligence), contract, or otherwise, unless required by applicable law (such as deliberate and grossly negligent acts) or agreed to in writing, shall any Contributor be liable to You for damages, including any direct, indirect, special, incidental, or consequential damages of any character arising as a result of this License or out of the use or inability to use the Work (including but not limited to damages for loss of goodwill, work stoppage, computer failure or malfunction, or any and all other commercial damages or losses), even if such Contributor has been advised of the possibility of such damages.
- 9. Accepting Warranty or Additional Liability. While redistributing the Work or Derivative Works thereof, You may choose to offer, and charge a fee for, acceptance of support, warranty, indemnity, or other liability obligations and/or rights consistent with this License. However, in accepting such obligations, You may act only on Your own behalf and on Your sole responsibility, not on behalf of any other Contributor, and only if You agree to indemnify, defend, and hold each Contributor harmless for any liability incurred by, or claims asserted against, such Contributor by reason of your accepting any such warranty or additional liability.

END OF TERMS AND CONDITIONS

dnsmasq

/* dnsmasq is Copyright (c) 2000-2006 Simon Kelley
This program is free software; you can redistribute it and/or modify
it under the terms of the GNU General Public License as published by

the Free Software Foundation; version 2 dated June, 1991.

This program is distributed in the hope that it will be useful,
but WITHOUT ANY WARRANTY; without even the implied warranty of
MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the
GNU General Public License for more details.

*/

GPL Version 2

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software—to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things. To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you

12

distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all. The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

O. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

- 2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:
- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but

12

does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it. Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections

1 and 2 above on a medium customarily used for software interchange; or,

- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is

allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

- 4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
- 5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

12

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

- 8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
- 9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF

12

MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS
TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE
PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING,
REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

<one line to give the program's name and a brief idea of what it does.>

Copyright (C) <year> <name of author>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along

with this program; if not, write to the Free Software Foundation, Inc.,

51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA.

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Gnomovision version 69, Copyright (C) year name of author

Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type `show w'.

This is free software, and you are welcome to redistribute it under certain conditions; type `show c' for details.

The hypothetical commands `show w' and `show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w' and `show c'; they could even be mouse-clicks or menu items--whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program

`Gnomovision' (which makes passes at compilers) written by James Hacker.

<signature of Ty Coon>, 1 April 1989

Ty Coon, President of Vice

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License.

iperf

Iperf Copyright

Copyright (c) The Board of Trustees of the University of Illinois

All Rights Reserved.

Iperf performance test

Mark Gates

ш	2
ш	_

Ajay Tirumala

Jim Ferguson

Jon Dugan

Feng Qin

Kevin Gibbs

John Estabrook

National Laboratory for Applied Network Research

National Center for Supercomputing Applications

University of Illinois at Urbana-Champaign

http://www.ncsa.uiuc.edu

Permission is hereby granted, free of charge, to any person obtaining a copy of this software (Iperf) and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimers.

Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimers in the documentation and/or other materials provided with the distribution.

Neither the names of the University of Illinois, NCSA, nor the names of its contributors may be used to endorse or promote products derived from this Software without specific prior written permission.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE CONTIBUTORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE

Iperf User Docs
Mark Gates
Ajay Tirumala
Jon Dugan
Kevin Gibbs
Acknowledgements

Thanks to Mark Gates (NLANR), Alex Warshavsky (NLANR) and Justin Pietsch (University of Washington) who were responsible for the 1.1.x releases of Iperf. For this release, we would like to thank Bill Cerveny (Internet2), Micheal Lambert (PSC), Dale Finkelson (UNL) and Matthew Zekauskas (Internet2) for help in getting access to IPv6 networks / machines. Special thanks to Matthew Zekauskas (Internet2) for helping out in the FreeBSD implementation. Also, thanks to Kraemer Oliver (Sony) for providing an independent implementation of IPv6 version of Iperf, which provided a useful comparison for testing our features.

libHaru

Copyright (C) 1999-2006 Takeshi Kanno

Copyright (C) 2007-2009 Antony Dovgal

This software is provided 'as-is', without any express or implied warranty.

In no event will the authors be held liable for any damages arising from the use of this software.

Permission is granted to anyone to use this software for any purpose, including commercial applications, and to alter it and redistribute it freely, subject to the following restrictions:

- The origin of this software must not be misrepresented; you must not claim that you wrote the original software. If you use this software in a product, an acknowledgment in the product documentation would be appreciated but is not required.
- 2. Altered source versions must be plainly marked as such, and must not be misrepresented as being the original software.
- 3. This notice may not be removed or altered from any source distribution.

Libsasl

- * Copyright (c) 2001 Carnegie Mellon University. All rights reserved.
- * Redistribution and use in source and binary forms, with or without
- * modification, are permitted provided that the following conditions
- * are met:
- *
- * 1. Redistributions of source code must retain the above copyright

- * notice, this list of conditions and the following disclaimer.
- *
- * 2. Redistributions in binary form must reproduce the above copyright
- * notice, this list of conditions and the following disclaimer in
- * the documentation and/or other materials provided with the
- * distribution.
- 4
- * 3. The name "Carnegie Mellon University" must not be used to
- * endorse or promote products derived from this software without
- * prior written permission. For permission or any other legal
- * details, please contact
- * Office of Technology Transfer
- * Carnegie Mellon University
- * 5000 Forbes Avenue
- * Pittsburgh, PA 15213-3890
- * (412) 268-4387, fax: (412) 268-7395
- * tech-transfer@andrew.cmu.edu
- *
- * 4. Redistributions of any form whatsoever must retain the following
- * acknowledgment:
- * "This product includes software developed by Computing Services
- * at Carnegie Mellon University (http://www.cmu.edu/computing/)."
- *
- * CARNEGIE MELLON UNIVERSITY DISCLAIMS ALL WARRANTIES WITH REGARD TO
- * THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY
- * AND FITNESS, IN NO EVENT SHALL CARNEGIE MELLON UNIVERSITY BE LIABLE
- * FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES
- * WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN
- * AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING
- * OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

mDNSResponser

* Copyright (c) 2002-2006 Apple Computer, Inc. All rights reserved.

*

- * Licensed under the Apache License, Version 2.0 (the "License");
- * you may not use this file except in compliance with the License.
- * You may obtain a copy of the License at

*

* http://www.apache.org/licenses/LICENSE-2.0

*

- * Unless required by applicable law or agreed to in writing, software
- * distributed under the License is distributed on an "AS IS" BASIS,
- * WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied.
- * See the License for the specific language governing permissions and
- * limitations under the License.

*

- * This code is completely 100% portable C. It does not depend on any external header files
- * from outside the mDNS project -- all the types it expects to find are defined right here.

*

- * The previous point is very important: This file does not depend on any external
- * header files. It should complile on *any* platform that has a C compiler, without
- * making *any* assumptions about availability of so-called "standard" C functions,
- * routines, or types (which may or may not be present on any given platform).
- * Formatting notes:
- * This code follows the "Whitesmiths style" C indentation rules. Plenty of discussion
- * on C indentation can be found on the web, such as http://www.kafejo.com/komp/1tbs.htm,
- * but for the sake of brevity here I will say just this: Curly braces are not syntactially
- * part of an "if" statement; they are the beginning and ending markers of a compound statement;
- * therefore common sense dictates that if they are part of a compound statement then they
- * should be indented to the same level as everything else in that compound statement.
- * Indenting curly braces at the same level as the "if" implies that curly braces are
- * part of the "if", which is false. (This is as misleading as people who write "char* x,y;"
- * thinking that variables x and y are both of type "char * " -- and anyone who doesn't

- * understand why variable y is not of type "char*" just proves the point that poor code
- * layout leads people to unfortunate misunderstandings about how the C language really works.)

OpenCV

By downloading, copying, installing or using the software you agree to this license. If you do not agree to this license, do not download, install, copy or use the software.

License Agreement

For Open Source Computer Vision Library

(3-clause BSD License)

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the names of the copyright holders nor the names of the contributors may be used to endorse or promote products derived from this software without specific prior written permission.

This software is provided by the copyright holders and contributors "as is" and any express or implied warranties, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose are disclaimed. In no event shall copyright holders or contributors be liable for any direct, indirect, incidental, special, exemplary, or consequential damages (including, but not limited to, procurement of substitute goods or services; loss of use, data, or profits; or business interruption) however caused and on any theory of liability, whether in contract, strict liability, or tort (including negligence or otherwise) arising in any way out of the use of this software, even if advised of the possibility of such damage.

Open SSL

LICENSE ISSUES

The OpenSSL toolkit stays under a dual license, i.e. both the conditions of the OpenSSL License and the original SSLeay license apply to the toolkit. See below for the actual license texts. Actually both licenses are BSD-style Open Source licenses. In case of any license issues related to OpenSSL please contact openssl-core@openssl.org.

OpenSSL License

* Copyright (c) 1998-2016 The OpenSSL Project. All rights reserved.

*

- * Redistribution and use in source and binary forms, with or without
- * modification, are permitted provided that the following conditions
- * are met:

*

- * 1. Redistributions of source code must retain the above copyright
- * notice, this list of conditions and the following disclaimer.

*

- * 2. Redistributions in binary form must reproduce the above copyright
- * notice, this list of conditions and the following disclaimer in
- * the documentation and/or other materials provided with the
- * distribution.

*

- * 3. All advertising materials mentioning features or use of this
- * software must display the following acknowledgment:
- * "This product includes software developed by the OpenSSL Project
- * for use in the OpenSSL Toolkit. (http://www.openssl.org/)"

*

- * 4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to
- * endorse or promote products derived from this software without

- * prior written permission. For written permission, please contact
- * openssl-core@openssl.org.

*

- * 5. Products derived from this software may not be called "OpenSSL"
- * nor may "OpenSSL" appear in their names without prior written
- * permission of the OpenSSL Project.

*

- * 6. Redistributions of any form whatsoever must retain the following
- * acknowledgment:
- * "This product includes software developed by the OpenSSL Project
- * for use in the OpenSSL Toolkit (http://www.openssl.org/)"

*

- * THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT ``AS IS" AND ANY
- * EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE
- * IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR
- * PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR
- * ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL,
- * SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT
- * NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES;
- * LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)
- * HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT,
- * STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE)
- * ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED
- * OF THE POSSIBILITY OF SUCH DAMAGE.
- * ------

*

- * This product includes cryptographic software written by Eric Young
- * (eay@cryptsoft.com). This product includes software written by Tim
- * Hudson (tjh@cryptsoft.com).

* /

Original SSLeay License

- /* Copyright (C) 1995-1998 Eric Young (eay@cryptsoft.com)
- * All rights reserved.

*

- * This package is an SSL implementation written
- * by Eric Young (eay@cryptsoft.com).
- * The implementation was written so as to conform with Netscapes SSL.

*

- * This library is free for commercial and non-commercial use as long as
- * the following conditions are aheared to. The following conditions
- * apply to all code found in this distribution, be it the RC4, RSA,
- * Ihash, DES, etc., code; not just the SSL code. The SSL documentation
- * included with this distribution is covered by the same copyright terms
- * except that the holder is Tim Hudson (tjh@cryptsoft.com).

*

- * Copyright remains Eric Young's, and as such any Copyright notices in
- * the code are not to be removed.
- * If this package is used in a product, Eric Young should be given attribution
- * as the author of the parts of the library used.
- * This can be in the form of a textual message at program startup or
- * in documentation (online or textual) provided with the package.

*

- * Redistribution and use in source and binary forms, with or without
- * modification, are permitted provided that the following conditions
- * are met:
- * 1. Redistributions of source code must retain the copyright
- * notice, this list of conditions and the following disclaimer.
- * 2. Redistributions in binary form must reproduce the above copyright
- * notice, this list of conditions and the following disclaimer in the
- * documentation and/or other materials provided with the distribution.
- * 3. All advertising materials mentioning features or use of this software
- * must display the following acknowledgement:
- * "This product includes cryptographic software written by
- * Eric Young (eay@cryptsoft.com)"

- * The word 'cryptographic' can be left out if the rouines from the library
- * being used are not cryptographic related :-).
- * 4. If you include any Windows specific code (or a derivative thereof) from
- * the apps directory (application code) you must include an acknowledgement:
- * "This product includes software written by Tim Hudson (tjh@cryptsoft.com)"
- *
- * THIS SOFTWARE IS PROVIDED BY ERIC YOUNG ``AS IS" AND
- * ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE
- * IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE
- * ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE
- * FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL
- * DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS
- * OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)
- * HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT
- * LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY
- * OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF
- * SUCH DAMAGE.
- *
- * The licence and distribution terms for any publically available version or
- * derivative of this code cannot be changed. i.e. this code cannot simply be
- * copied and put under another distribution licence
- * [including the GNU Public Licence.]
- */

WPA Supplicant

WPA Supplicant

Copyright (c) 2003-2016, Jouni Malinen <j@w1.fi> and contributors

All Rights Reserved.

This program is licensed under the BSD license (the one with advertisement clause removed).

If you are submitting changes to the project, please see CONTRIBUTIONS file for more instructions.

License

This software may be distributed, used, and modified under the terms of BSD license:

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. Neither the name(s) of the above-listed copyright holder(s) nor the

names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS

"AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT

LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR

A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT

OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL,

SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT

LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE,

DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY

THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT

(INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE

OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Trademarks

Adobe and Acrobat are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

OS X, TrueType, and Safari are trademarks of Apple Inc., registered in the U.S. and other countries.

Firefox[®] is a registered trademark of the Mozilla Foundation.

Java is a registered trademark of Oracle and/or its affiliates.

LINUX® is the registered trademark of Linus Torvalds in the U.S. and other countries.

Microsoft[®], Windows[®], Windows Server[®], Windows Vista[®], and Internet Explorer[®] are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Red Hat is a registered trademark of Red Hat, Inc.

Wi-Fi® and Wi-Fi Direct® are registered trademarks of Wi-Fi Alliance.

The proper name of Internet Explorer 6 is Microsoft® Internet Explorer® 6.

The proper names of the Windows operating systems are as follows:

• The product names of Windows Vista are as follows:

Microsoft® Windows Vista® Ultimate

Microsoft® Windows Vista® Business

Microsoft® Windows Vista® Home Premium

Microsoft® Windows Vista® Home Basic

Microsoft® Windows Vista® Enterprise

• The product names of Windows 7 are as follows:

Microsoft® Windows® 7 Starter

Microsoft® Windows® 7 Home Premium

Microsoft® Windows® 7 Professional

Microsoft® Windows® 7 Ultimate

Microsoft® Windows® 7 Enterprise

• The product names of Windows 8 are as follows:

Microsoft® Windows® 8

Microsoft® Windows® 8 Pro

Microsoft® Windows® 8 Enterprise

• The product names of Windows 8.1 are as follows:

Microsoft® Windows® 8.1

Microsoft® Windows® 8.1 Pro

Microsoft® Windows® 8.1 Enterprise

• The product names of Windows 10 are as follows:

Microsoft® Windows® 10 Home Premium

Microsoft® Windows® 10 Pro

Microsoft® Windows® 10 Enterprise

Microsoft® Windows® 10 Education

• The product names of Windows Server 2003 are as follows:

Microsoft® Windows Server® 2003 Standard Edition

Microsoft® Windows Server® 2003 Enterprise Edition

Microsoft® Windows Server® 2003 Web Edition

Microsoft® Windows Server® 2003 Datacenter Edition

• The product names of Windows Server 2003 R2 are as follows:

Microsoft® Windows Server® 2003 R2 Standard Edition

Microsoft® Windows Server® 2003 R2 Enterprise Edition

Microsoft® Windows Server® 2003 R2 Datacenter Edition

• The product names of Windows Server 2008 are as follows:

Microsoft® Windows Server® 2008 Foundation

Microsoft® Windows Server® 2008 Standard

Microsoft® Windows Server® 2008 Enterprise

Microsoft® Windows Server® 2008 Datacenter

Microsoft® Windows Server® 2008 for Itanium-based Systems

Microsoft® Windows® Web Server 2008

Microsoft® Windows® HPC Server 2008

• The product names of Windows Server 2008 R2 are as follows:

Microsoft® Windows Server® 2008 R2 Foundation

Microsoft® Windows Server® 2008 R2 Standard

Microsoft® Windows Server® 2008 R2 Enterprise

Microsoft® Windows Server® 2008 R2 Datacenter

Microsoft® Windows Server® 2008 R2 for Itanium-based Systems

Microsoft® Windows® Web Server R2 2008

Microsoft® Windows® HPC Server R2 2008

• The product names of Windows Server 2012 are as follows:

Microsoft® Windows Server® 2012 Foundation

Microsoft® Windows Server® 2012 Essentials

Microsoft® Windows Server® 2012 Standard

Microsoft® Windows Server® 2012 Datacenter

• The product names of Windows Server 2012 R2 are as follows:

Microsoft® Windows Server® 2012 R2 Foundation

Microsoft® Windows Server® 2012 R2 Essentials

Microsoft® Windows Server® 2012 R2 Standard

Microsoft® Windows Server® 2012 R2 Datacenter

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

Microsoft product screen shots reprinted with permission from Microsoft Corporation.

INDEX

A		Scan settings	
Address book	85 179	Specifications	
ADF (Auto Document Feeder)	•	Copy key	22
Administrator password		D	
Administrator settings		Density	123
Authentication		Differences in Performance,	
Auto e-mail notification settings		Different Models	
Auto e-mail nonneation senings	210	DNS setting	217
В		· ·	
Backup settings	230	E	
Broadcast function		E-mail notification 1	218
Bypass tray		E-mail notification 2	218
_		Encryption	285
С		Encryption key exchange	287
Canceling a copy	70	Energy saver mode	233, 308
Canceling a fax	138, 149	Entering characters	31
Community	218	Exposure glass	
Configuration page		Exterior	
Configure		-	
Administrator settings	229	F	
Date and time settings	129	Facsimile key	24
System settings	180	Fax	
Configuring Network Settings Using O	OS X	Fax setting workflows	127
Ethernet	276	LAN-Fax	148
Installing Smart Organizing Monitor		Lists/Reports	
Installing the driver		Receiving a fax	
USB		Registering destinations	
Wireless LAN	278	Sending a fax	
Configuring the machine	201	Specifications	
Printing the configuration page		Fax destinations	
Using Smart Organizing Monitor		Fax journal	
Using the control panel		Fax mode screen	
Using Web Image Monitor	203	Fax Speed Dial destination lis	
Confirming the information Counter information	206	Fax TX standby file list	228
Printer driver settings		FAX/TEL manual mode	156
Status information		Function priority	24
Consumables		G	
Control panel			
Copier mode screen		General status	214
Copy	00	1	
Basic operation	60	1 / O #: #	011
Enlarge		I/O timeout	
ID Card copy		IKE settings	
Reduce		Image density	
		Immoduato transmission	134

Interior19	Original type	81
Introduction13	P	
IPsec global settings224	-	
IPsec policy settings224	Page counter	
IPsec settings224	Paper jam	
IPsec transmission285	Paper recommendations	58
IPv6 configuration215	Paper Storage	54
1	Paper tray	205
J	Paper types	
Job cancel64	Bond Paper	
I	Cardstock	
	Color Paper	
LAN-Fax148	Letterhead	
Language204	Plain Paper	
Lists162, 194, 228	Preprinted Paper Prepunched Paper	
Loading paper35	Recycled Paper	
M	Thick Paper 1	
MI .	Thin Paper	
Machine information207	Pause/Redial key	
Machine settings236	Placing originals	
Maintaining the machine		
Cleaning the machine241, 242, 243, 244	POP3 settings	220
Replacing the print cartridge239	Print Basic operation	6.0
Maintenance page194, 228	Combine	
mDNS setting216	Specifications	
Memory transmission	Print area	
Menu chart 165		
Model-specific information13	Print cartridge	
Moving245	Print counter	206
Multi-access	Q	
N	Quick Dial destination list	194, 228
Network application216	R	
Network print setting216	Reception mode	1.54
Network settings196, 214	Redial function	
Network status214	Registering information	
Non-recommended paper53	Administrator e-mail address	229
Notes291	Destinations	
271	E-mail address	102
0	Fax number	187
On hook dial143	Folder	93
One Touch buttons	FTP server	106
Operation modes	Replace	239
Operation tools	Reports	162, 194, 228
Original 57	Reset settings	229
SZERZIEGI (1)	~	

S	
SA (Security Association)	286
Scan	
Registering destinations	
SANE	
Scan settings	
Scan to E-mail	
Scan to FTPScan to USB	
Scan to USBScanning from Smart Organizing Monitor	
TWAIN	
WIA	
Scan destinations 85, 90, 9	
Scan size	
Scan to E-mail	
Scan to Folder	
Scan to FTP	
Scanner destination list	
Scanner journal	
Scanner key	•
Scanner send setting	
<u> </u>	
Select paper	
Sending a fax	
Set date	
Set time	
Shortcut to Func. key	
Shortcut to function	
Smart Organizing Monitor	
SMTP settings	
SNMP settings	
Sound volume adjustment	
Specifications	75, 296, 297
Specifying a custom paper size	45
Specifying the paper type and paper s	size 45, 47, 48
Speed Dial13	
Standby file list	
Status messages	
Supported paper	
System	
System information	
Oysiciii iiiiOiiiiuiiOii	200, 204

Г

TCP/IP status214
Fime setting
Foner management211
Гор раде 203
Trademarks333
Transmission mode135
Ггар218
Tray 135
Tray paper settings185, 208
Troubleshooting
Clearing misfeeds
Error and status messages appear on Smart Organizing Monitor254
Error and status messages on the screen
Other problems 262, 263, 265, 267, 269, 270, 271, 273

W

Veb Image Monitor	202
What you can do with this machine	
Copier function	67
Fax function	125
Printer function	61
Scanner function	83
Vireless LAN settings	221, 237

MEMO