

Model CM-C2
(G960)
PARTS CATALOG

First edition, May 2007

Ricoh Company, LTD.

Model CM-C2 (G960)

PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

Model CM-C2	(G960)
Paper Feed Unit TK1050	(G964)

Model CM-C2 (G960)

Model CM-C2 (G960)

 
PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

1.Main Exploded Views (G960)	2
2.Cover Ass'y (G960).....	4
3.Middle Cover Ass'y (G960)	6
4.Front Cover Ass'y (G960)	8
5.Rear Cover Ass'y (G960).....	10
6.Frame Assembly (G960).....	12
7.Fuser Drive Ass'y (G960).....	14
8.Main Drive Ass'y (G960)	16
9.MP Ass'y (G960).....	18
10.Scan Ass'y (G960)	20
11.Platen Ass'y (G960)	22
12.Cover Platen Ass'y (G960)	24
13.ADF Ass'y (G960)	26
14.OPE Unit (G960).....	28
15.Cassette Ass'y (G960)	30
16.Fuser Ass'y (G960)	32
17.Duplex Unit (Optional) (G960)	34
Parts Index.....	38


May ,30 ' 2007

1.Main Exploded Views (G960)

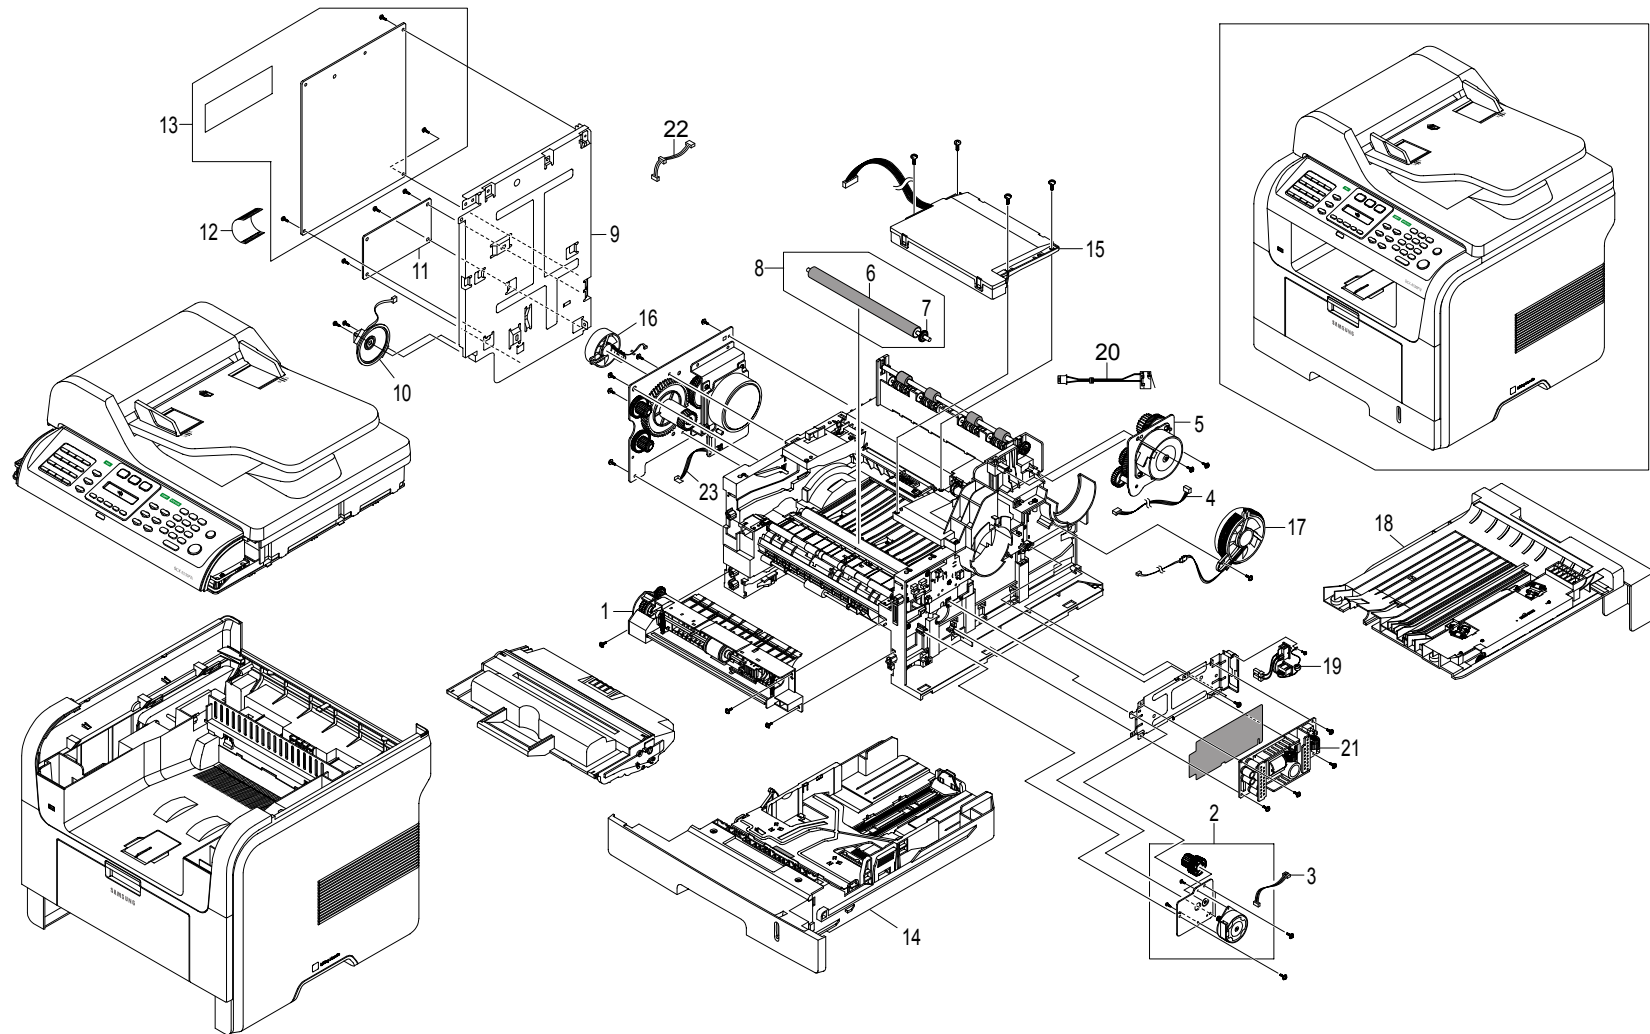

3

 2.Cover Ass'y (G960)

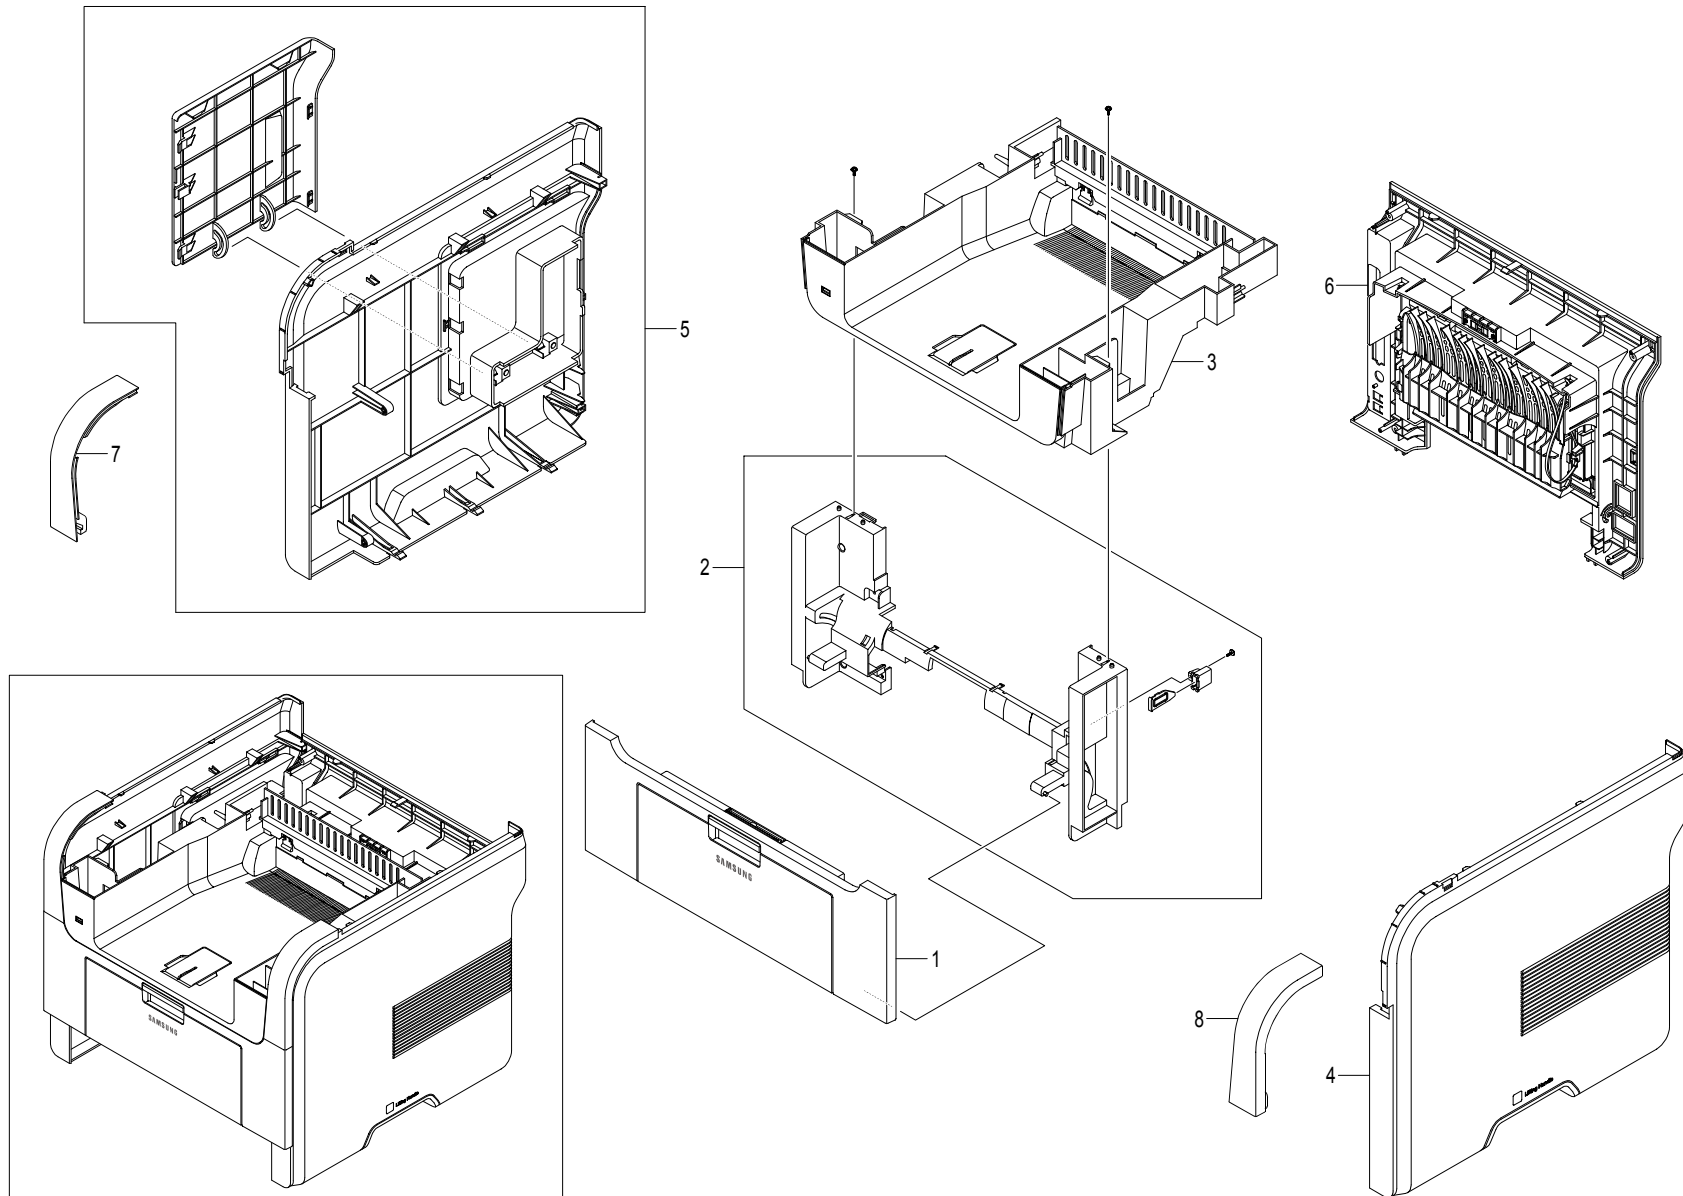


2.Cover Ass'y (G960)

Index No.	Part No.	Description	Q'ty Per Assembly
1	G960 1376	MEA-Cover Front	1
2	G960 1188	By-pass Feed Cover	1
3	G960 1168	Middle Cover Ass'y	1
4	G960 1087	Right Cover	1
5	G960 1187	Left Cover	1
6	G960 1456	Raer Cover Ass'y	1
7	G960 1093	Left Upper Cover	1
8	G960 1094	Right Upper Cover	1

Index No.	Part No.	Description	Q'ty Per Assembly

 3.Middle Cover Ass'y (G960)

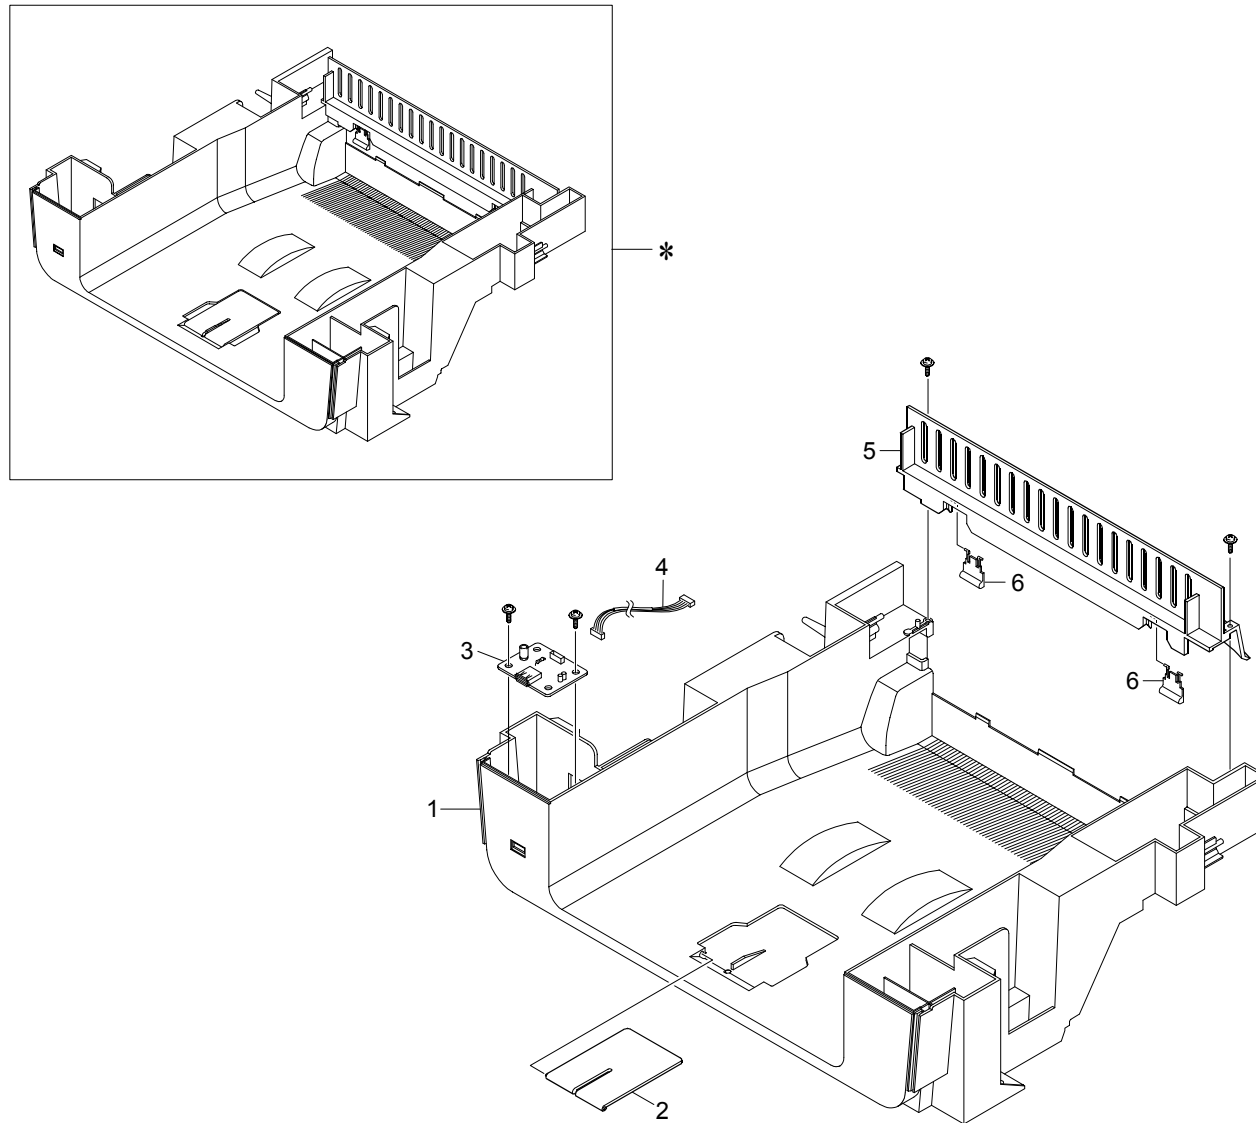


3.Middle Cover Ass'y (G960)

Index No.	Part No.	Description	Q'ty Per Assembly
*	G960 1168	Middle Cover Ass'y	1
1	G960 1086	Middle Cover	1
2	G960 1089	Stacker Cover	1
3	G960 1157	PCB - USB Host	1
4	G960 1035	Harness - USB Board	1
5	G960 1088	Rear Upper Cover	1
6	G960 1144	Sub Stacker	2

Index No.	Part No.	Description	Q'ty Per Assembly

 4.Front Cover Ass'y (G960)

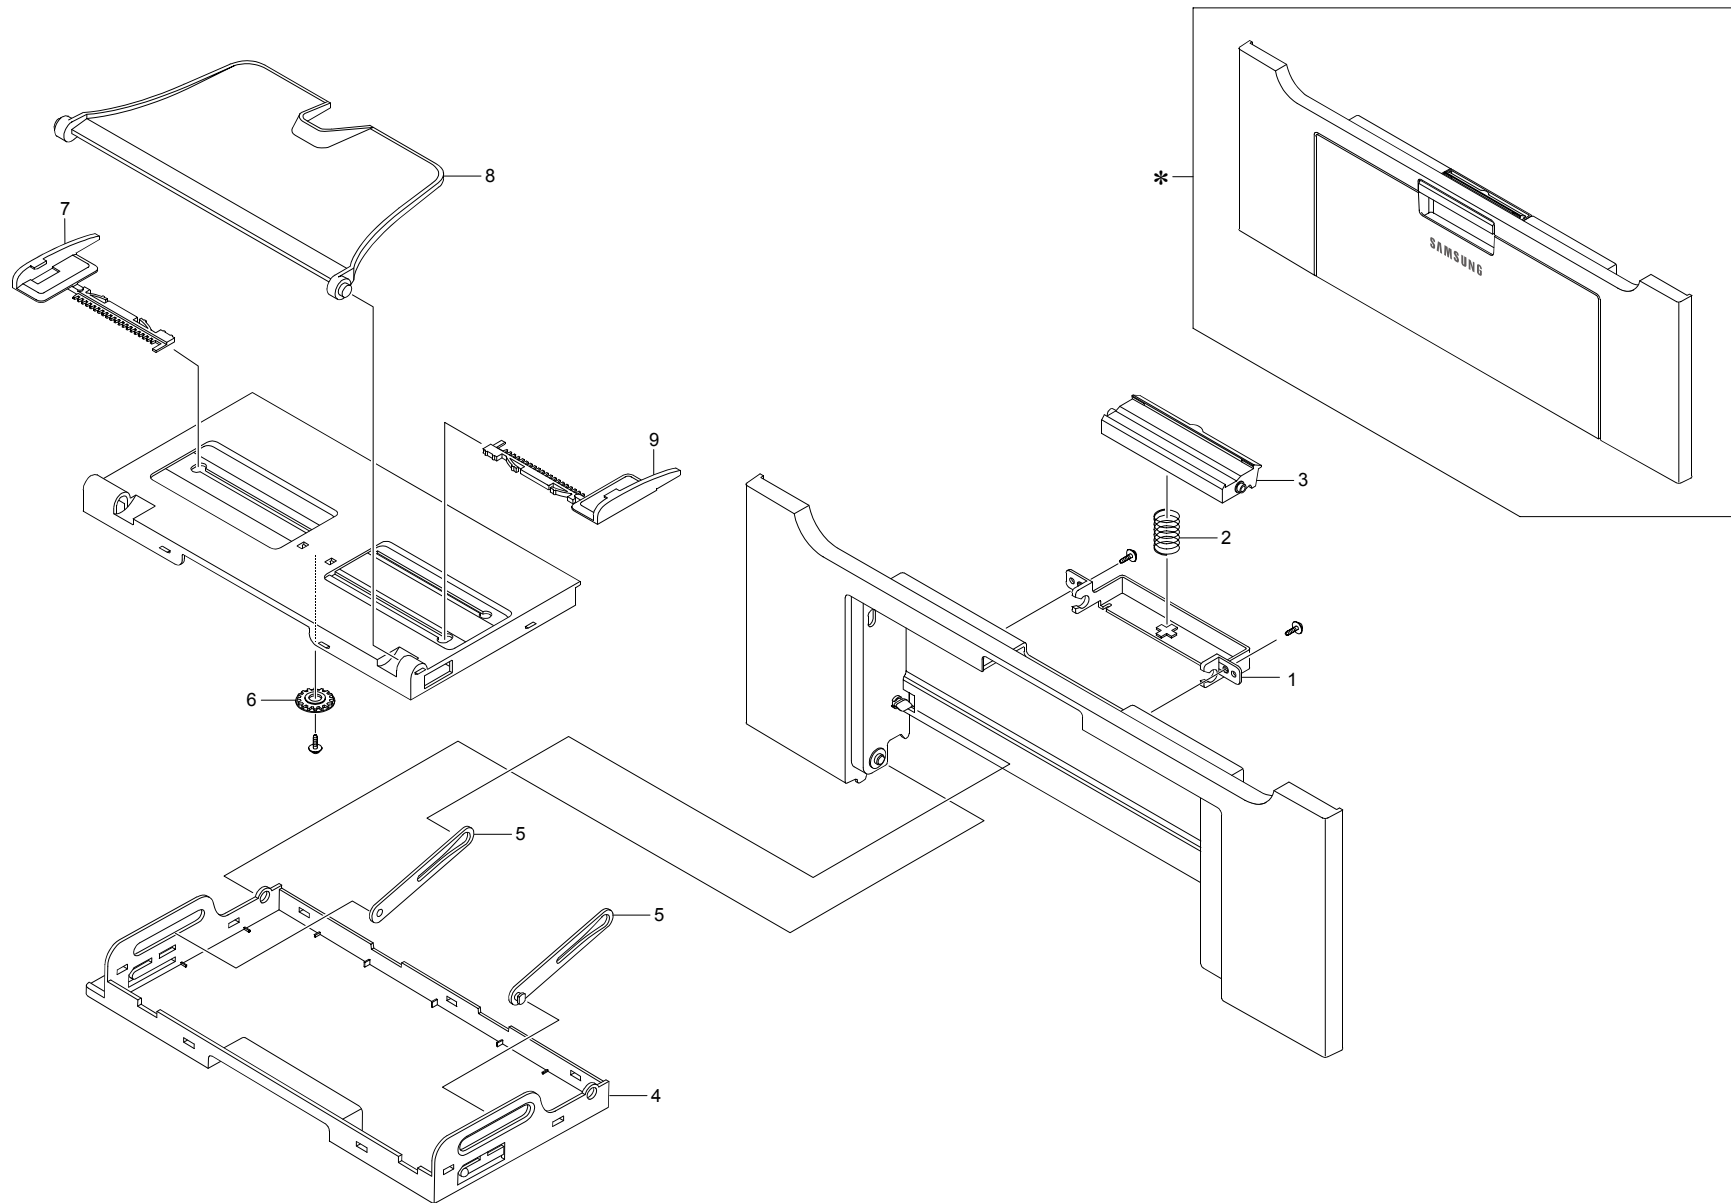


4.Front Cover Ass'y (G960)

Index No.	Part No.	Description	Q'ty Per Assembly
*	G960 1376	MEA-Cover Front	1
1	G960 1075	Lock Knob Holder	1
2	G960 1195	Pressure Spring	1
3	G960 1095	Knob - Front Cover	1
4	G960 1084	Tray Holder	1
5	G960 1082	Tray Link	2
6	G186 1007	Pinion Gear	1
7	G960 1417	Adjust-M_MP L	1
8	G960 1083	Sub Tray	1
9	G960 1418	Adjust-M_MP R	1

Index No.	Part No.	Description	Q'ty Per Assembly

 5.Rear Cover Ass'y (G960)

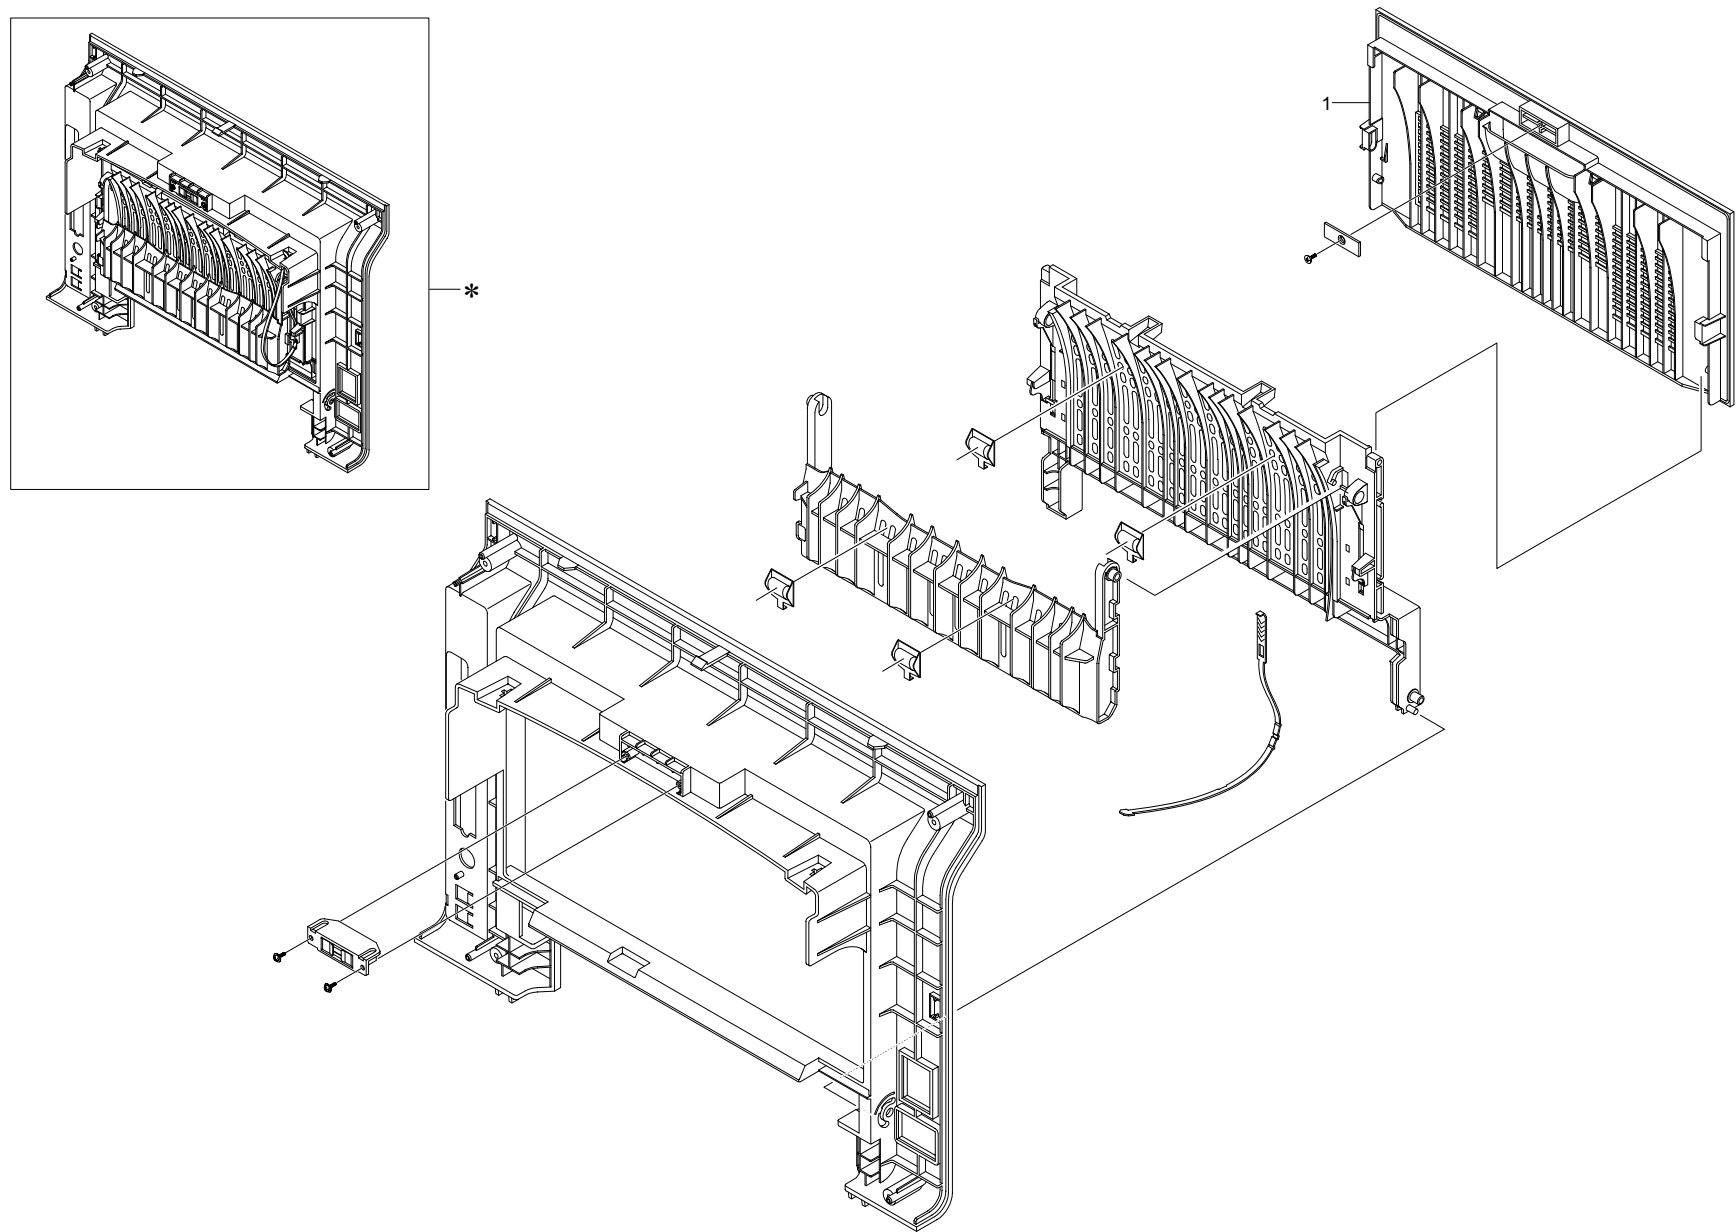


5.Rear Cover Ass'y (G960)

Index No.	Part No.	Description	Q'ty Per Assembly
*	G960 1456	Raer Cover Ass'y	1
1	G960 1402	Cover-M_Face Up	1
			

Index No.	Part No.	Description	Q'ty Per Assembly

 6.Frame Assembly (G960)


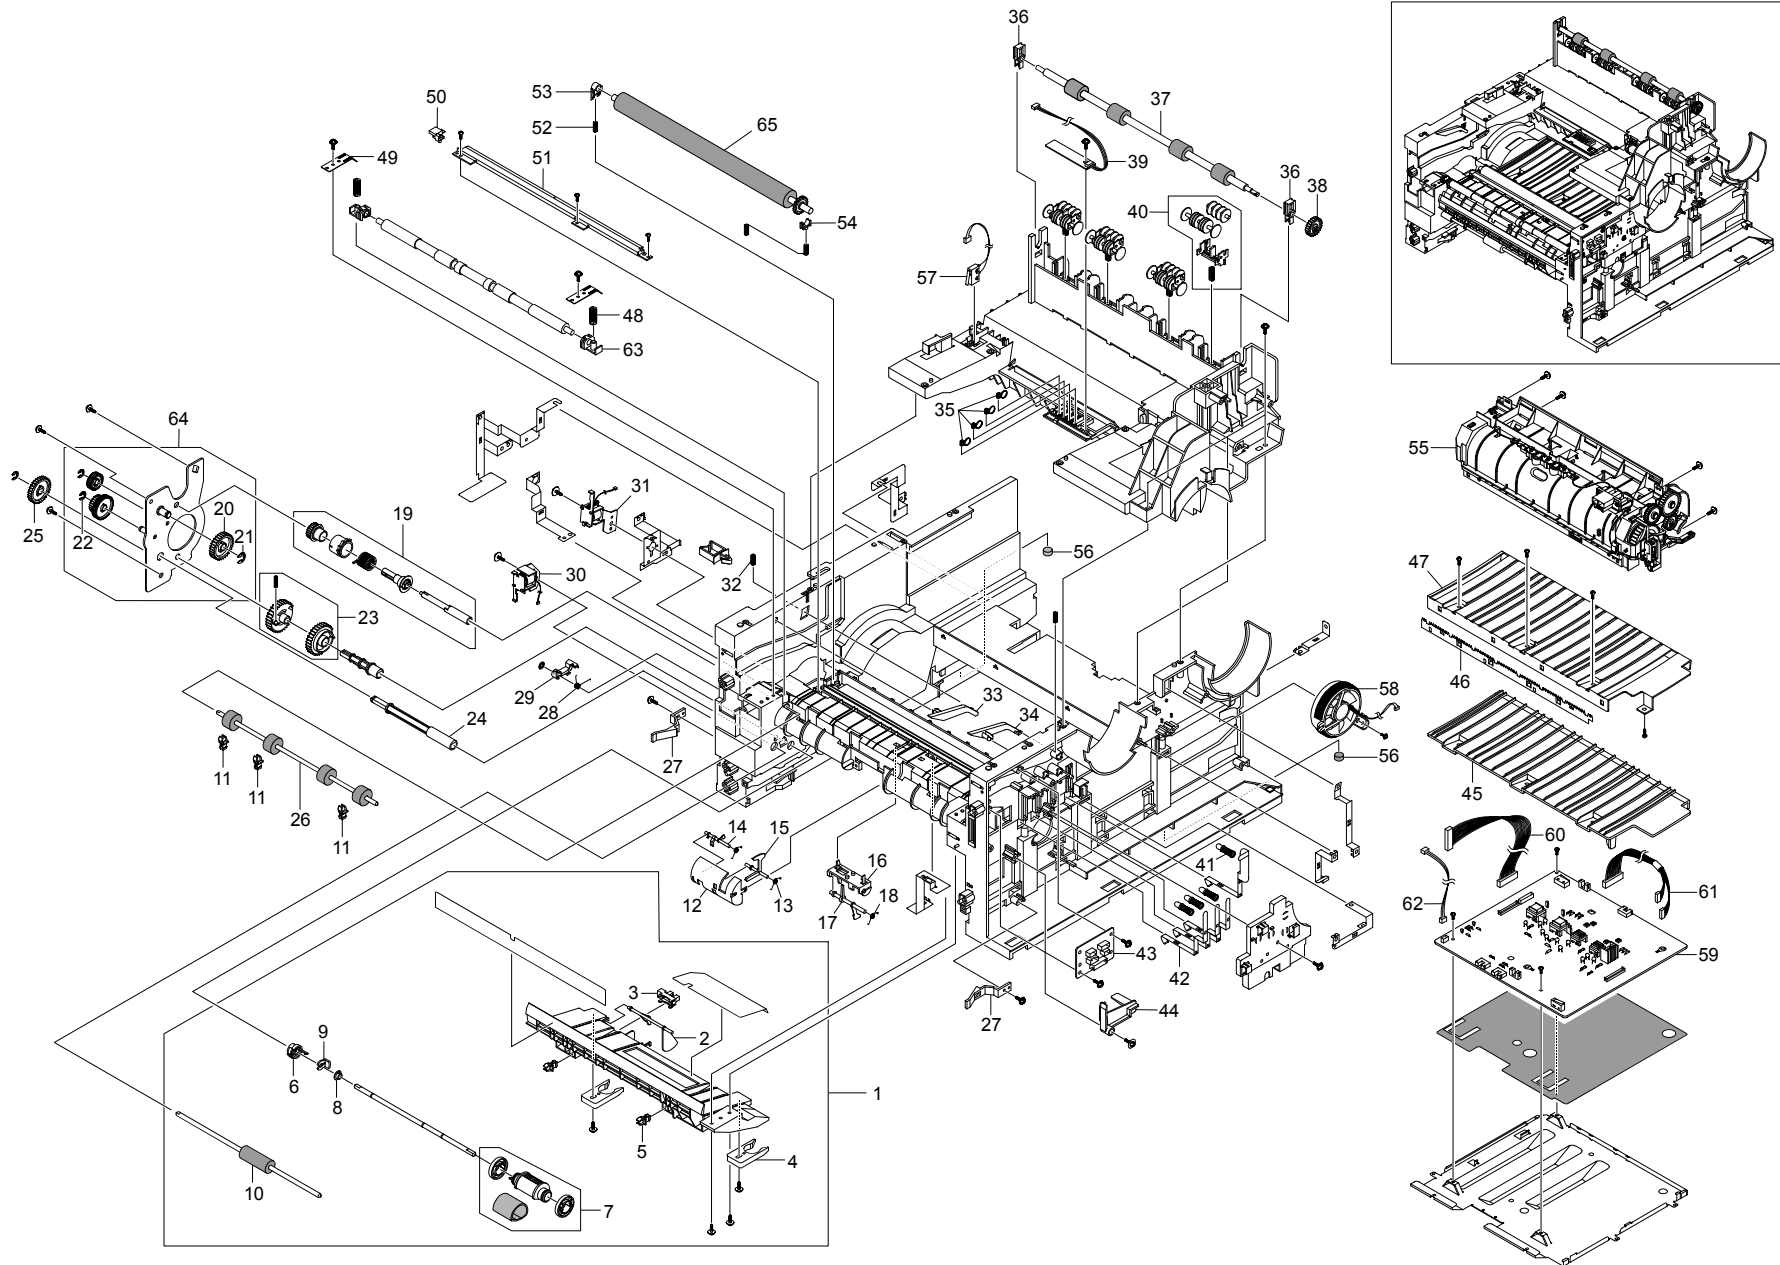


6.Frame Assembly (G960)

Index No.	Part No.	Description	Q'ty Per Assembly
1	G960 1172	Duplex Guide Unit	1
2	G960 1121	Paper End Actuator	1
3	G960 1002	Photointerrupter	1
4	G960 1098	Cam - Catch	1
5	G186 1183	Bushing - Feed Roller	3
6	G960 1332	Cam-Shaft Pick Up	2
7	G960 1190	Pick-up Roller	1
8	G960 1152	Bushing	1
9	G960 1394	E-ring	1
10	G960 1119	Transport Roller	1
11	G186 1183	Bushing - Feed Roller	1
12	G960 1368	Actuator Holder	1
13	G960 1015	Spring	2
14	G960 1339	Lever	1
15	G960 1371	Actuator	1
16	G960 1372	Holder-M_ACT Feed	1
17	G960 1370	Actuator	1
18	G960 1015	Spring	1
19	G960 1176	Spring Clutch	1
20	G960 1316	Idle Gear - 27Z	1
21	M307 1023	Retaining Ring - M5	1
22	M306 1007	E-ring	2
23	G960 1366	Pick-up Gear Ass'y	1
24	G960 1412	Shaft-M_Feed2	1
25	G960 1413	Gear-Feed2 Z27	1
26	G960 1107	Feed Roller	1
27	G960 1141	Lock Plate	1
28	M306 1016	Spring	1
29	G960 1099	Cam - Pick-up	1
30	G960 1031	Solenoid	1
31	G960 1032	Solenoid	1
32	G186 1203	Spring - Guide	1
33	G960 1142	Left Guide Plate	1
34	G960 1143	Right Guide Plate	1
35	G960 1096	Terminal	4

Index No.	Part No.	Description	Q'ty Per Assembly
36	G960 1066	Roller Holder	2
37	G960 1415	Roller-Exit F/Down	1
38	G960 1126	Gear - Exit Roller	1
39	G960 1161	Terminal Board	1
40	G960 1174	Exit Roller	4
41	G960 1155	Terminal	4
42	G960 1130	Terminal Connector	4
43	G960 1160	Interface Board	1
44	G960 1139	Actuator - Cover Open	1
45	G960 1400	Guide-TR RIB	1
46	G960 1061	Plate	1
47	G960 1062	Guide Plate	1
48	G960 1080	Pressure Spring	2
49	G960 1236	Holder Plate	2
50	G960 1069	Holder - Quenching	1
51	G960 1129	Grounding Plate	1
52	G960 1055	Pressure Spring	1
53	G960 1060	Left Bushing	1
54	G960 1132	Bushing - Transfer R	1
55	G960 1169	Fusing Unit - 115V	1
55	G960 1503	Fusing Unit - 220V	1
56	G960 1067	Rubber Foot - Back	2
57	G960 1043	Harness - LSU S/W	1
58	G960 1026	Cooling Fan	1
59	G960 1053	HV Power Supply	1
60	G960 1038	Harness - Engine	1
61	G960 1039	Harness - SMPS	1
62	G960 1045	Harness - Paper End	1
63	G960 1058	Bushing - Idle Roller	1
64	G960 1425	MEA Unit-Bracket Feed	1
65	G960 1191	Transfer Roller	1

  7.Fuser Drive Ass'y (G960)

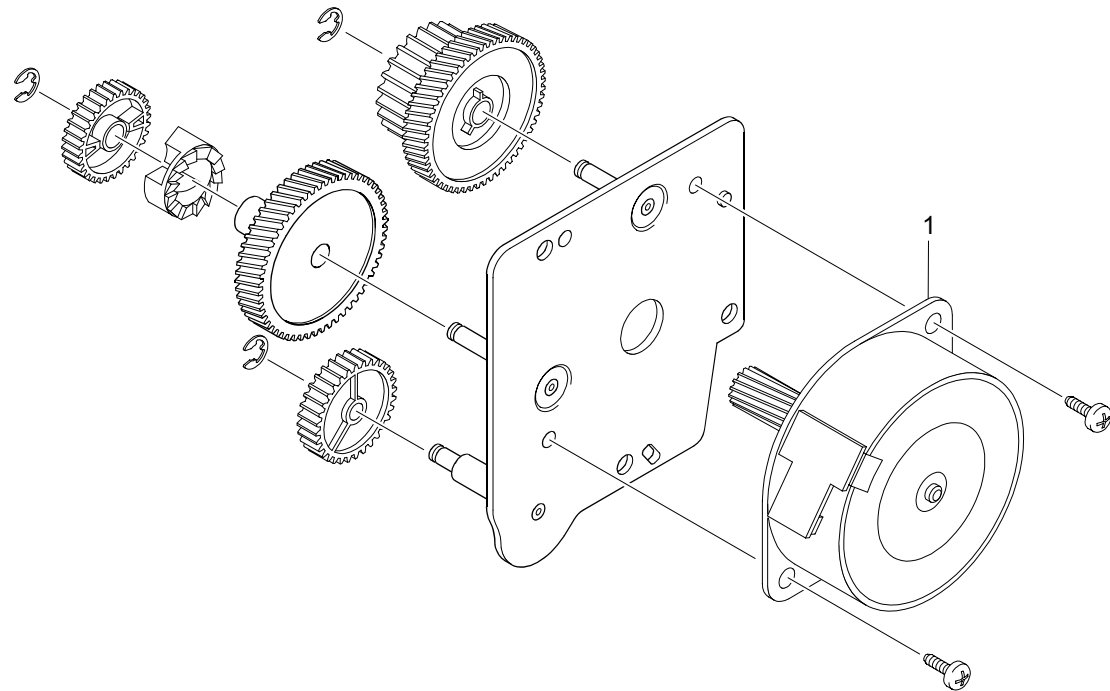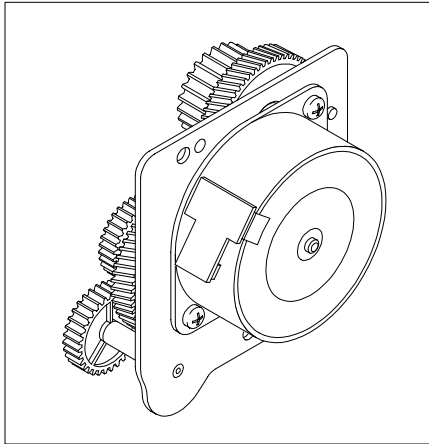


7.Fuser Drive Ass'y (G960)

Index No.	Part No.	Description	Q'ty Per Assembly
*	G960 1424	Fuser Drive Unit	1
1	G960 1029	Fuser Motor	1

Index No.	Part No.	Description	Q'ty Per Assembly

 8.Main Drive Ass'y (G960)

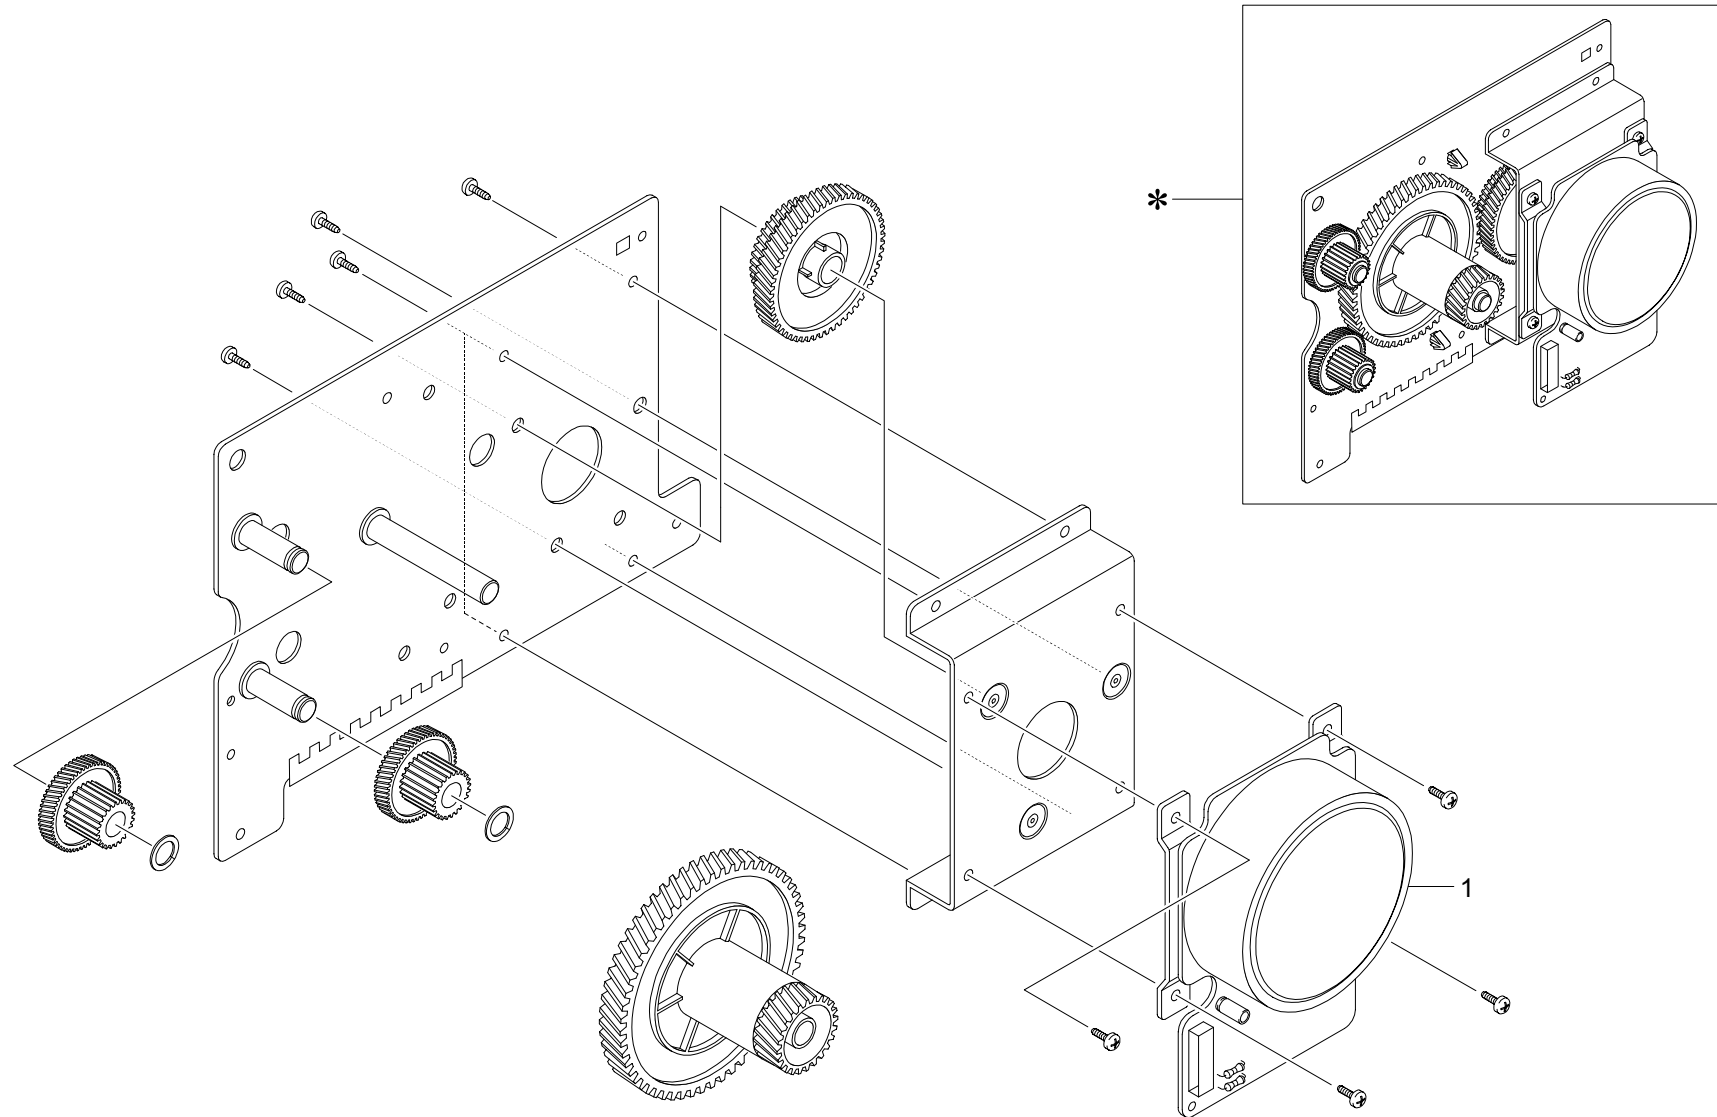


8.Main Drive Ass'y (G960)

Index No.	Part No.	Description	Q'ty Per Assembly
*	G960 1163	Main Drive Unit	1
1	G960 1030	Main Motor	1

Index No.	Part No.	Description	Q'ty Per Assembly

 9.MP Ass'y

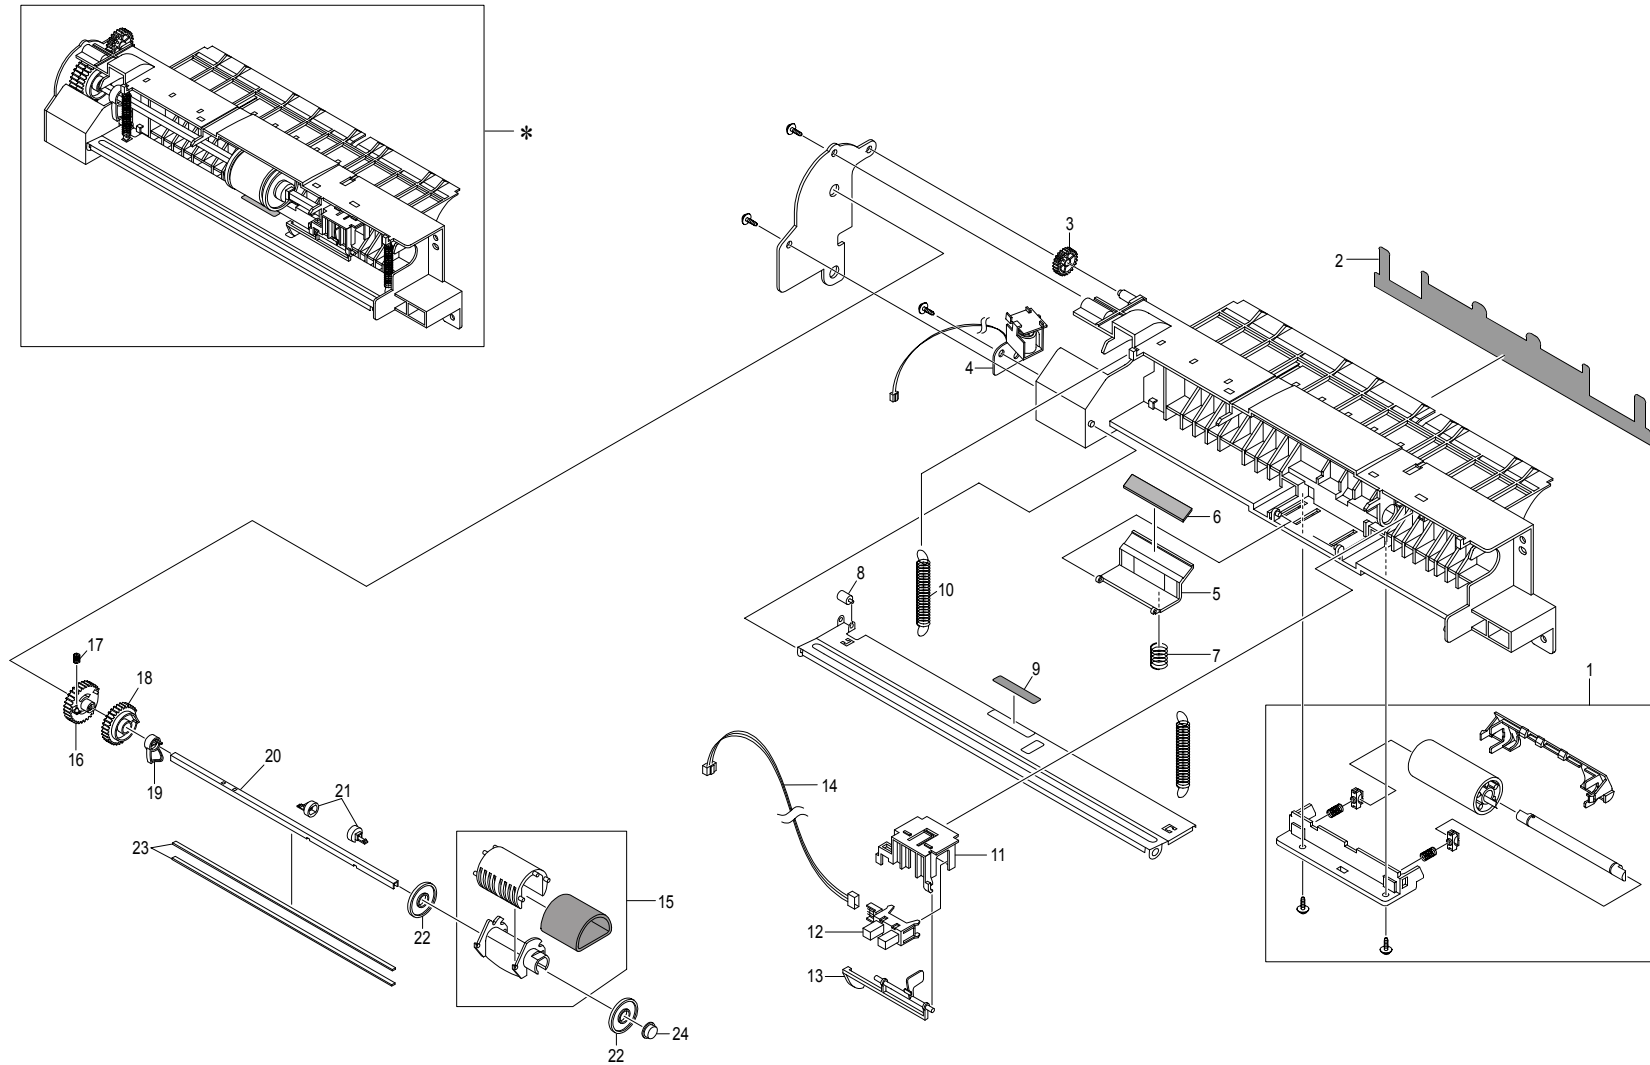


9.MP Ass'y

Index No.	Part No.	Description	Q'ty Per Assembly
*	G960 1173	Paper Feed Unit	1
1	G960 1426	MEA-Idle Feed	1
2	G960 1092	Guide Sheet	1
3	G960 1101	Idle Gear	1
4	G960 1033	Solenoid	1
5	G960 1072	Friction Pad Holder	1
6	G960 1153	Friction Pad	1
7	G186 1108	Spring - Friction Pad	1
8	G960 1136	Cam Roller	1
9	G186 1312	Bottom Plate Pad	1
10	G960 1388	Tension Spring	2
11	G960 1073	Sensor Holder	1
12	G960 1148	Sensor Actuator	1
13	G960 1034	Sensor Harness	1
14	G960 1180	Pick-up Roller	1
15	G960 1180	Pick-up Roller	1
16	G960 1112	Gear - Pick-up Roller	1
17	G960 1387	Pressure Spring	1
18	G960 1111	Gear - Holder	1
19	G960 1123	Cam - Pick-up	1
20	G960 1102	Shaft - Pick-up Roller	1
21	G960 1070	Stopper - Pick-up RO	2
22	G960 1140	Idler - Pick-up	2
23	G960 1113	Shaft - Core	2
24	G960 1059	Bushing - Pickup Roller	1

Index No.	Part No.	Description	Q'ty Per Assembly

 10.Scan Ass'y (G960)

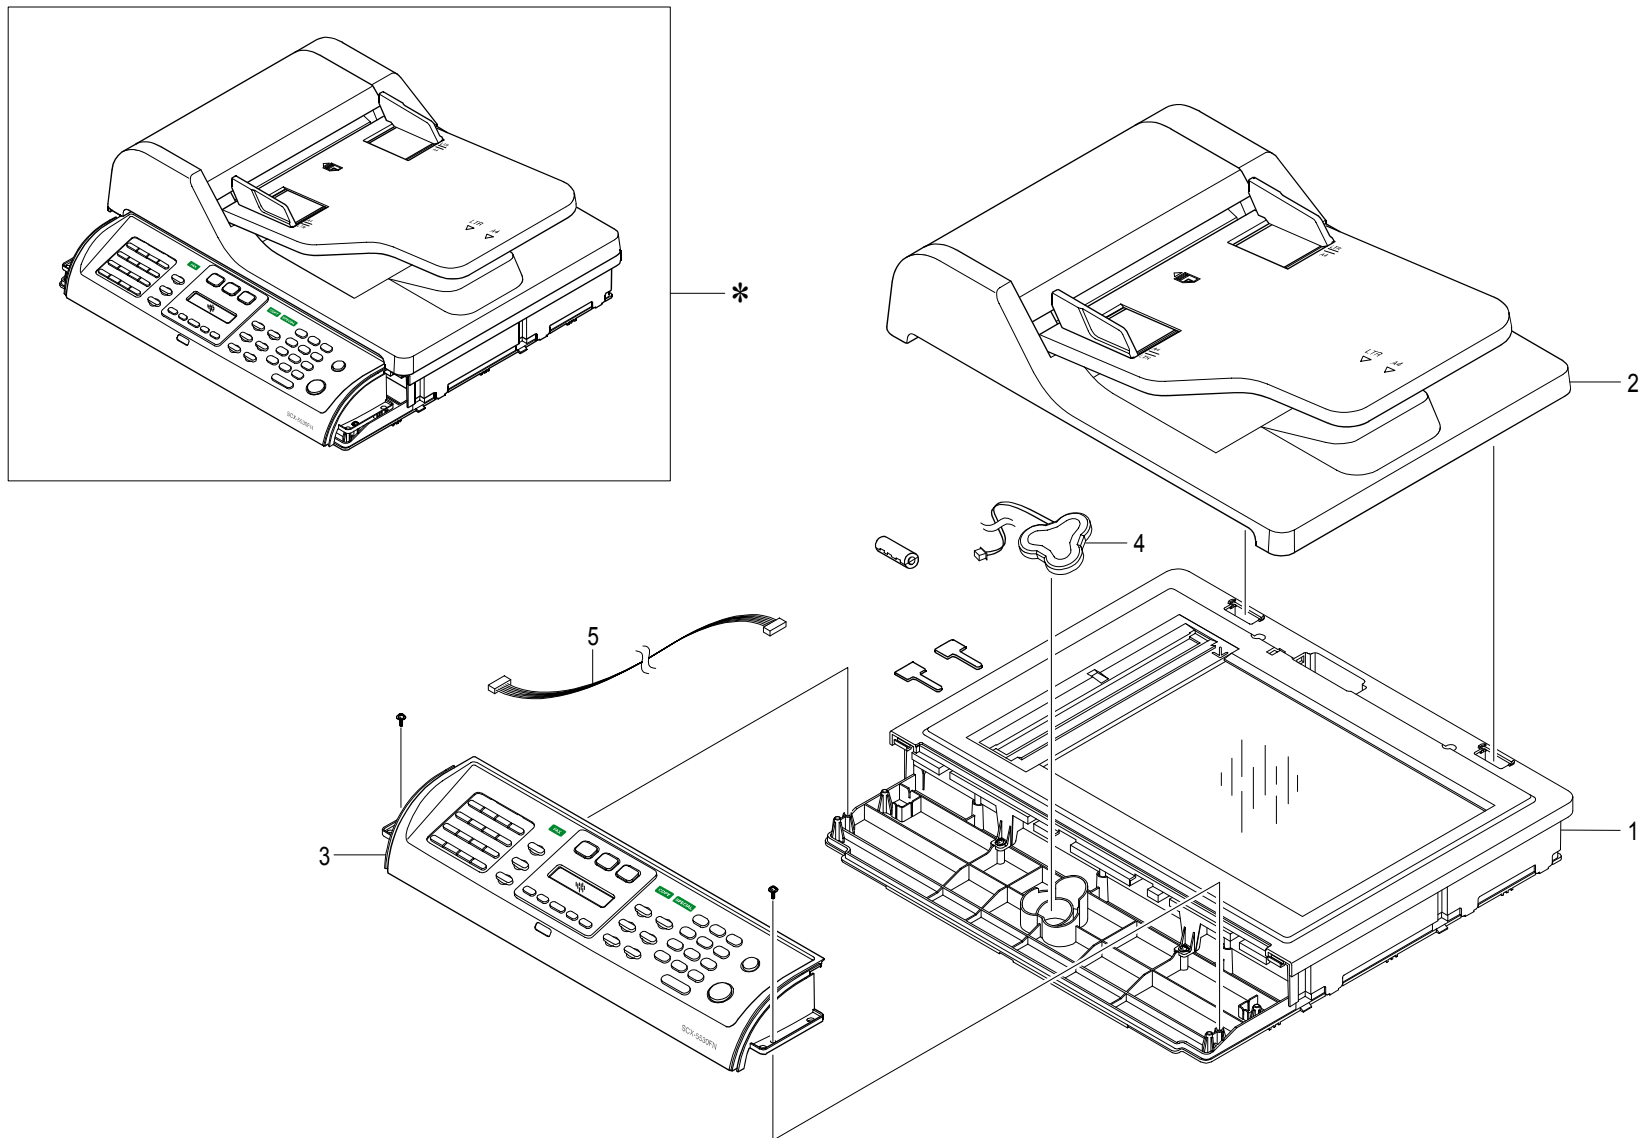


10.Scan Ass'y (G960)

Index No.	Part No.	Description	Q'ty Per Assembly
*	G960 1377	ADF	1
1	G960 1378	Scanner Unit	1
2	G960 1165	ADF	1
3	G960 1455	Operation Panel	1
4	G960 1447	Battery	1
5	G960 1051	Harness - OPE Panel	1

Index No.	Part No.	Description	Q'ty Per Assembly

 11. Platen Ass'y (G960)

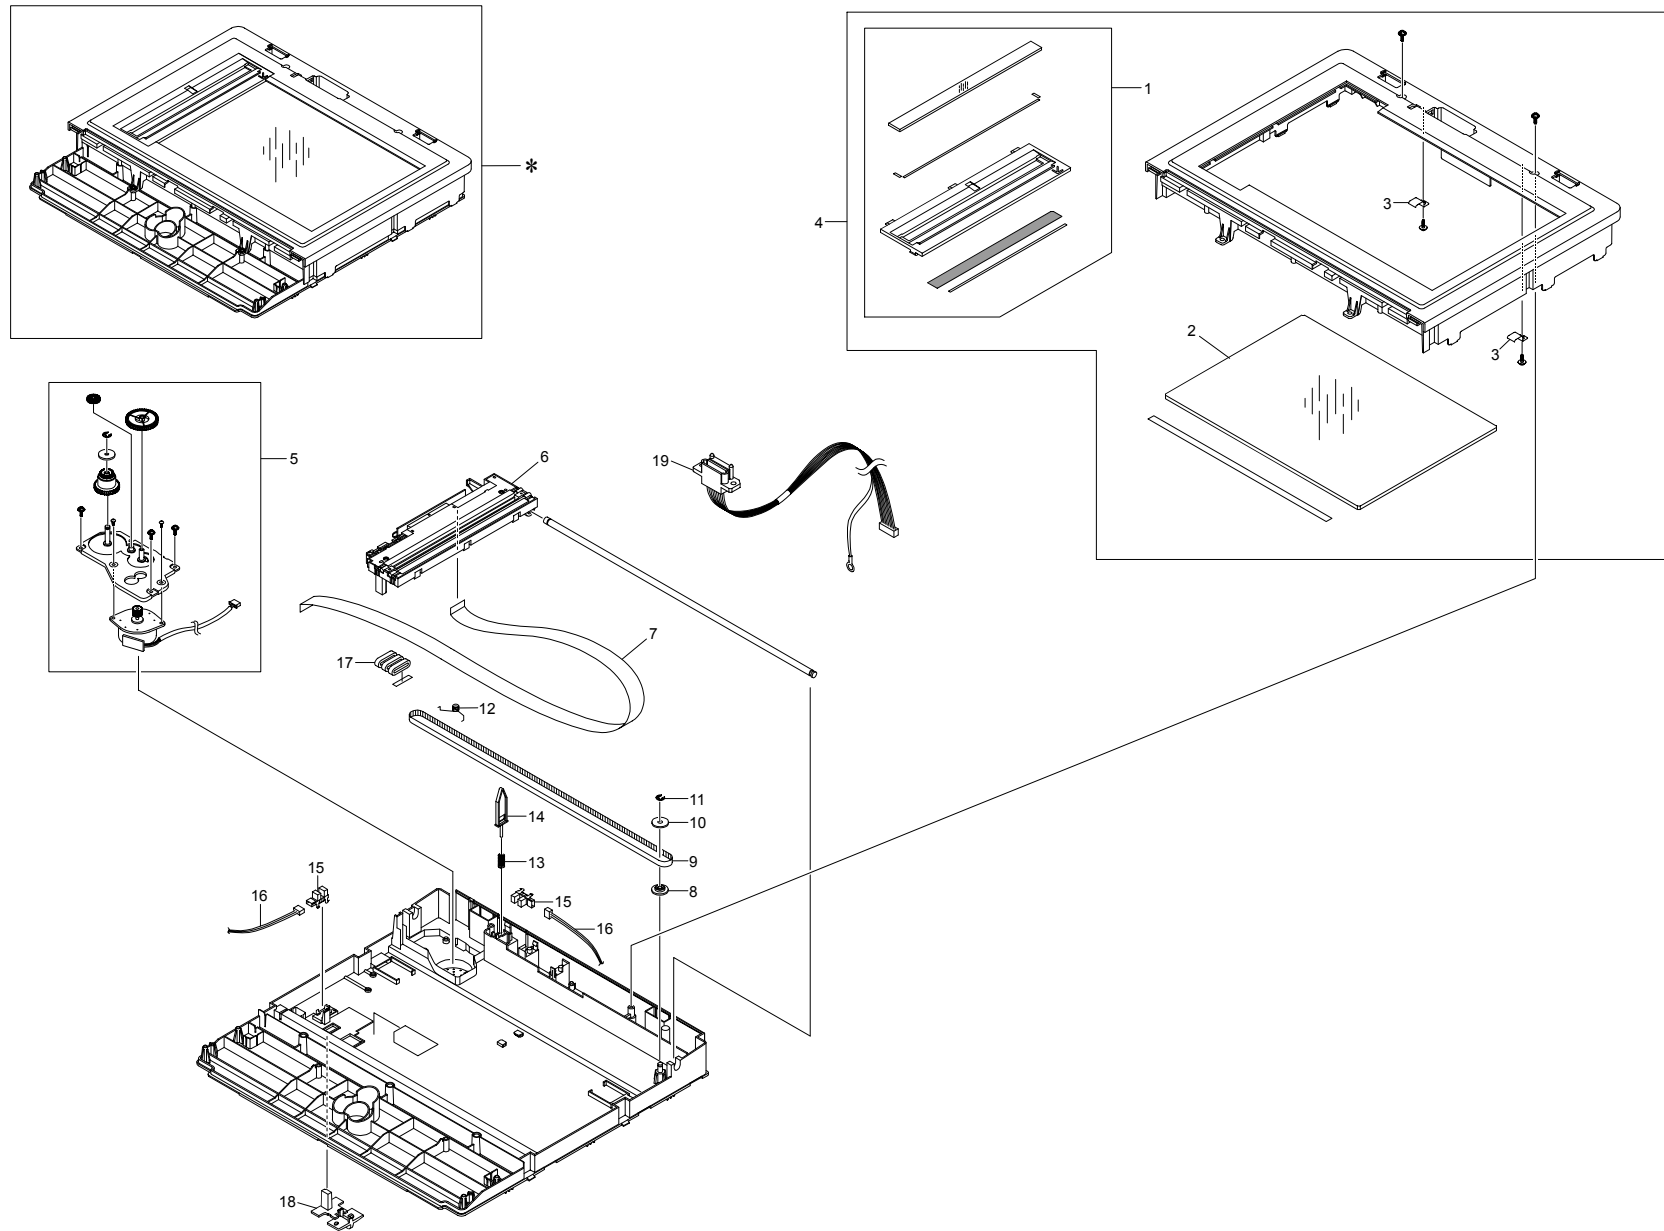


11.Platen Ass'y (G960)

Index No.	Part No.	Description	Q'ty Per Assembly
*	G960 1378	Scanner Unit	1
1	G960 1184	Scanner Cover Ass'y	1
2	G960 1189	DF Scan Glass Ass'y	1
3	G960 1025	Platen Glass	1
4	G960 1021	Holder - Platen Glass	2
5	G960 1162	Scanner Motor - DC 18W	1
6	G960 1171	Scanner Ass'y	1
7	G960 1037	Harness - CCD	1
8	G960 1022	Pulley	1
9	G960 1018	Timing Belt	1
10	G960 1215	Belt Holder	1
11	M306 1007	E-ring	1
12	G960 1019	Spring - Timing Belt	1
13	G960 1012	Pressure Spring	1
14	G960 1135	Sensor Lever	1
15	G960 1001	Photointerrupter	1
16	G186 1332	Sensor Harness	1
17	G960 1005	Ferrite Core	1
18	G960 1068	Holder - CCD	1
19	G960 1050	Harness - ADF Lower	1

Index No.	Part No.	Description	Q'ty Per Assembly

 12.Cover Platen Ass'y (G960)

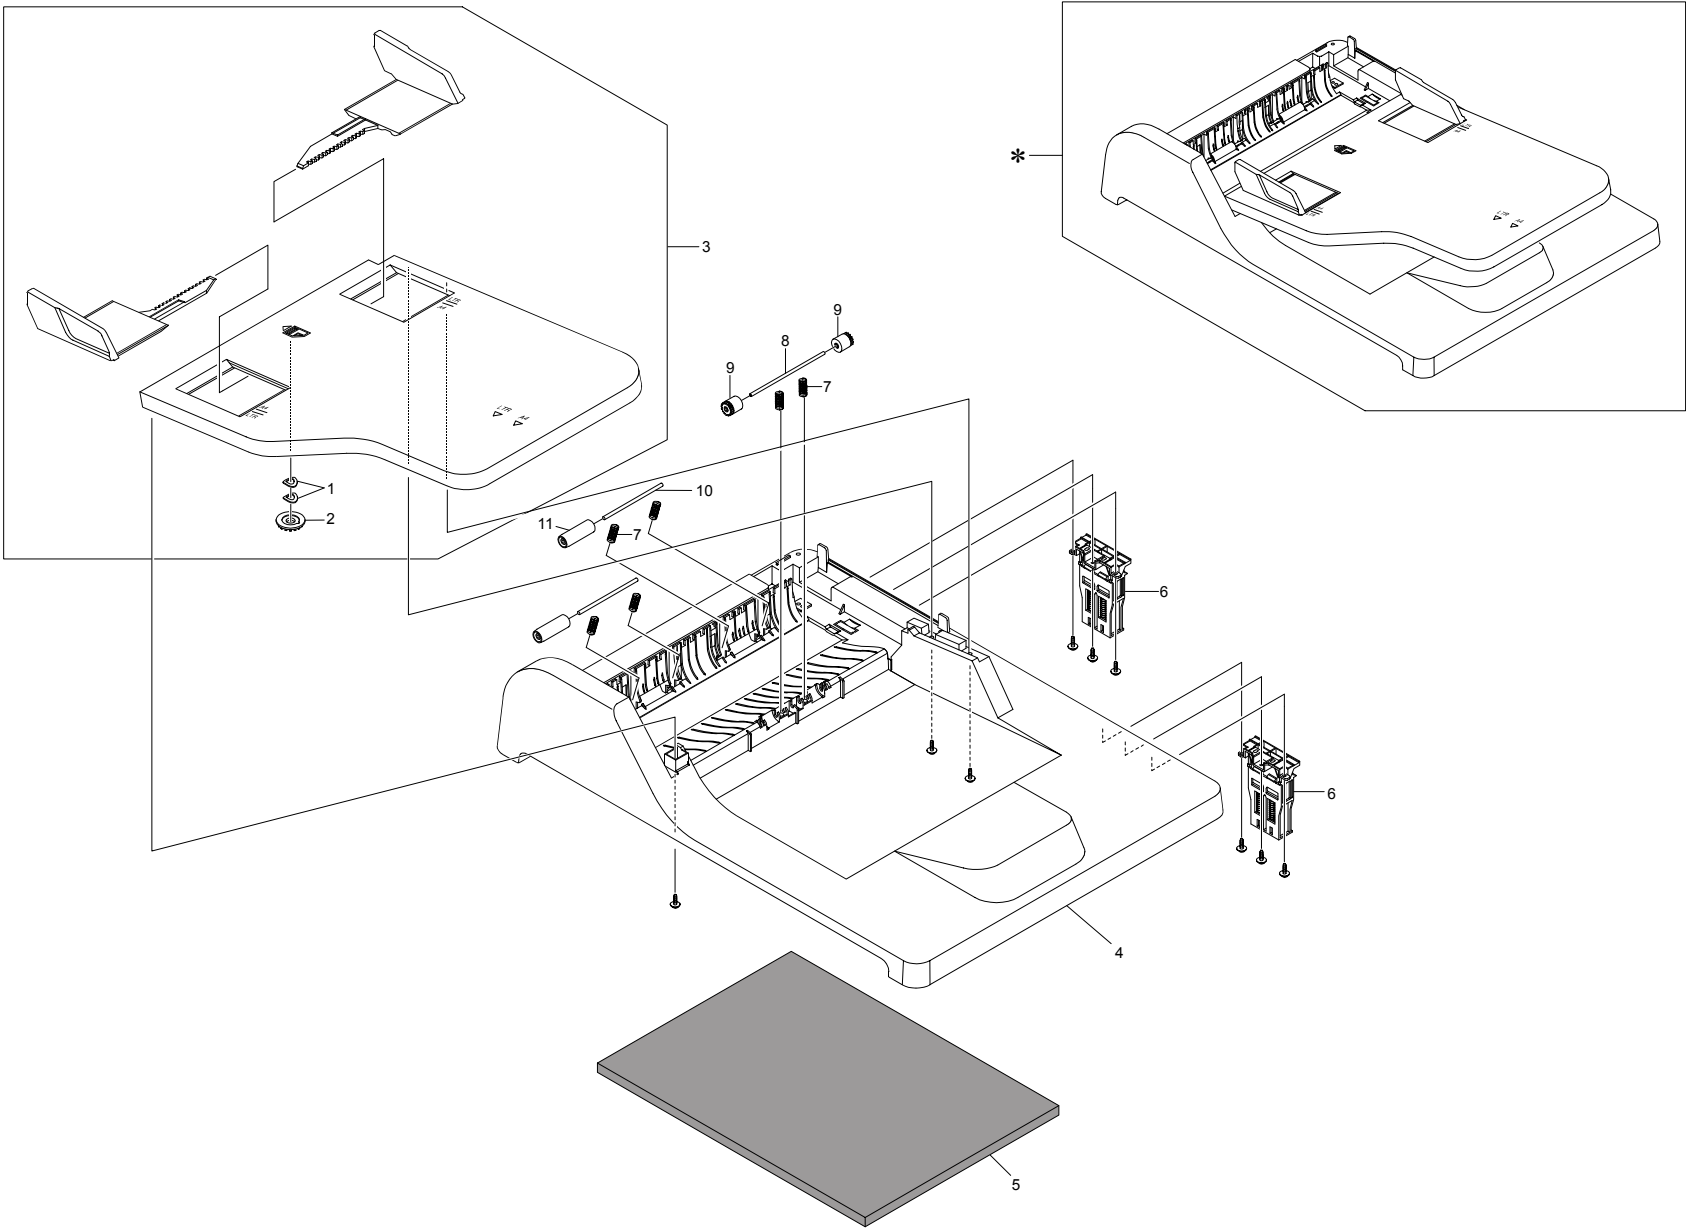


12.Cover Platen Ass'y (G960)

Index No.	Part No.	Description	Q'ty Per Assembly
*	G960 1186	ADF Cover Ass'y	1
1	G960 1192	Spring Washer	2
2	G186 1007	Pinion Gear	1
3	G960 1182	Original Tray Ass'y	1
4	G960 1404	Cover-M_Platen	1
5	G960 1401	Sheet-White Sponge	1
6	G960 1446	Hinge Ass'y	2
7	G960 1054	Pressure Spring	6
8	G960 1193	Shaft - Idle Roller	1
9	G960 1114	Idle Roller - ADF	2
10	G960 1117	Shaft - Idle Roller	2
11	G960 1197	Pinch Roller	2

Index No.	Part No.	Description	Q'ty Per Assembly

 13.ADF Ass'y (G960)

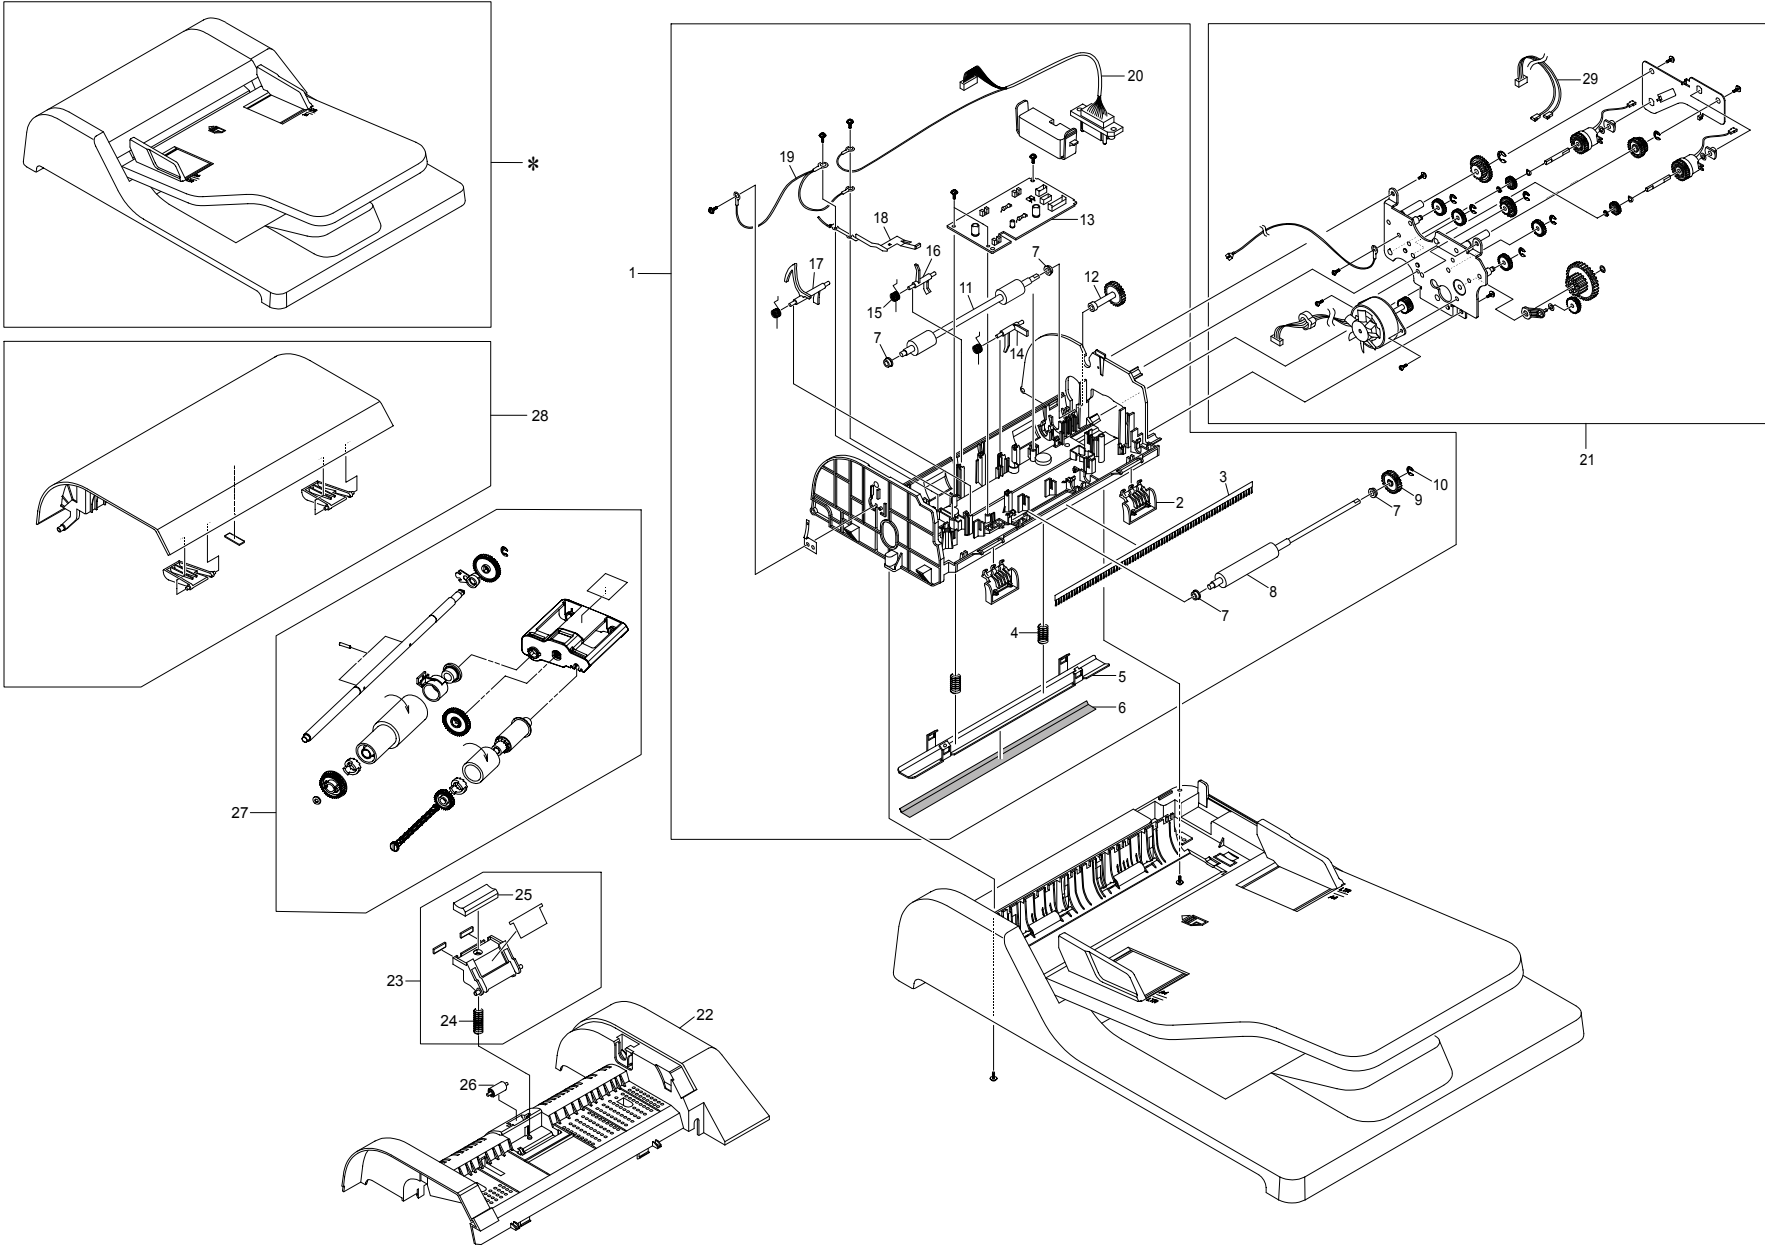


13.ADF Ass'y (G960)

Index No.	Part No.	Description	Q'ty Per Assembly
*	G960 1165	ADF	1
1	G960 1167	ADF Transport Unit	1
2	G960 1064	Guide	2
3	G186 1061	Antistatic Brush	1
4	G960 1057	Pressure Spring	2
5	G960 1076	White Bar Bracket	1
6	G960 1134	White Sheet	1
7	G960 1023	Bushing	4
8	G960 1109	ADF Exit Roller	1
9	G960 1409	Gear-Agitator-2	1
10	G960 1011	C-ring	1
11	G960 1110	ADF Drive Roller	1
12	G960 1106	Shaft - Feed Gear	1
13	G960 1159	ADF Board	1
14	G960 1146	Sensor Actuator	1
15	G960 1020	Spring - Feeler	3
16	G960 1145	Sensor Actuator	1
17	G960 1147	Sensor Actuator	1
18	G960 1081	Grounding Plate - ADF	1
19	G960 1047	Harness - ADF Ground	1
20	G960 1049	Harness - ADF Upper	1
21	G960 1166	ADF Drive Unit	1
22	G960 1090	Upper Cover - ADF	1
23	G960 1178	Friction Pad - ADF	1
24	G186 1099	Spring - Friction Pad	1
25	G960 1222	Rubber Pad - ADF	1
26	G960 1458	Idle Roller	1
27	G960 1179	Pick-up Roller Ass'y	1
28	G960 1183	Left DF Cover	1
29	G960 1051	Harness - ADF Clutch	1

Index No.	Part No.	Description	Q'ty Per Assembly

 14.OPE Unit (G960)

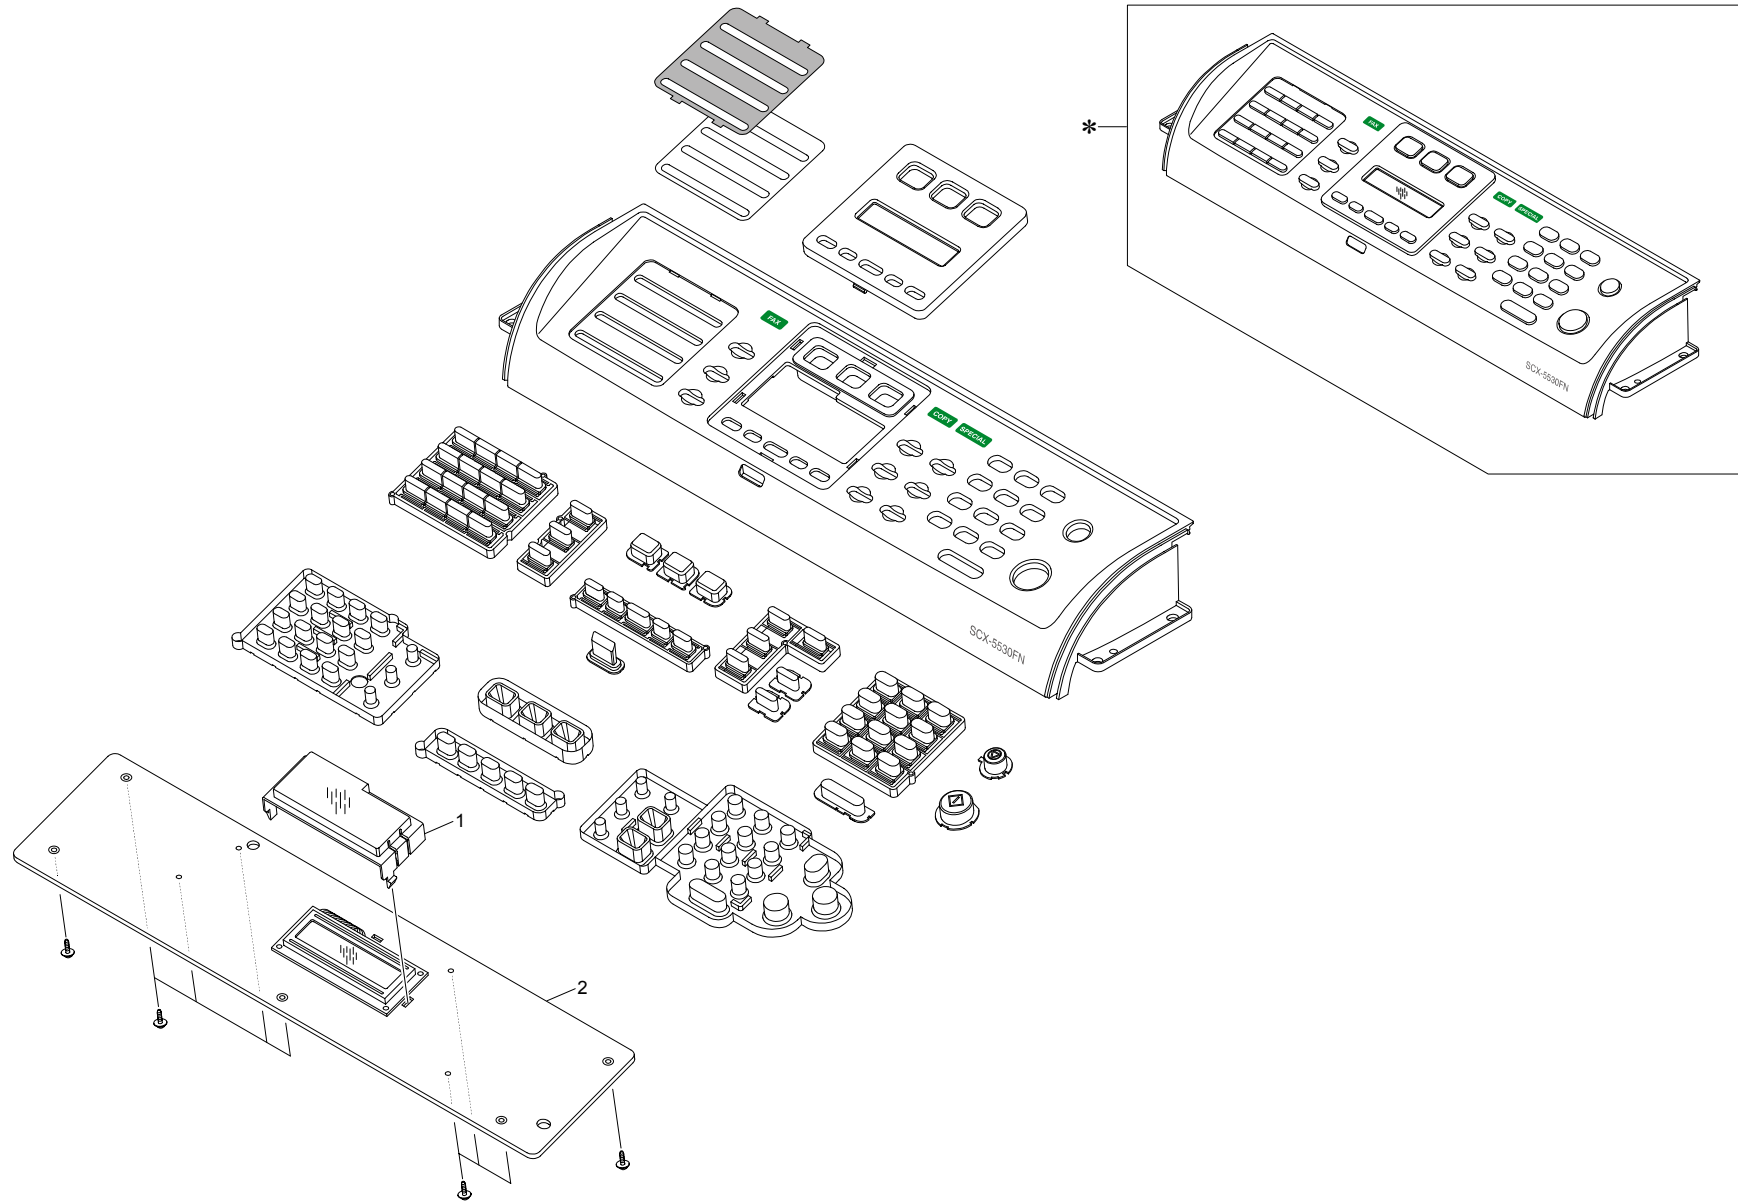


14.OPE Unit (G960)

Index No.	Part No.	Description	Q'ty Per Assembly
*	G960 1455	Operation Panel	1
1	G960 1091	Cover - LCD	1
2	G960 1421	Operation Panel Board	1
			

Index No.	Part No.	Description	Q'ty Per Assembly

 15.Cassette Ass'y (G960)

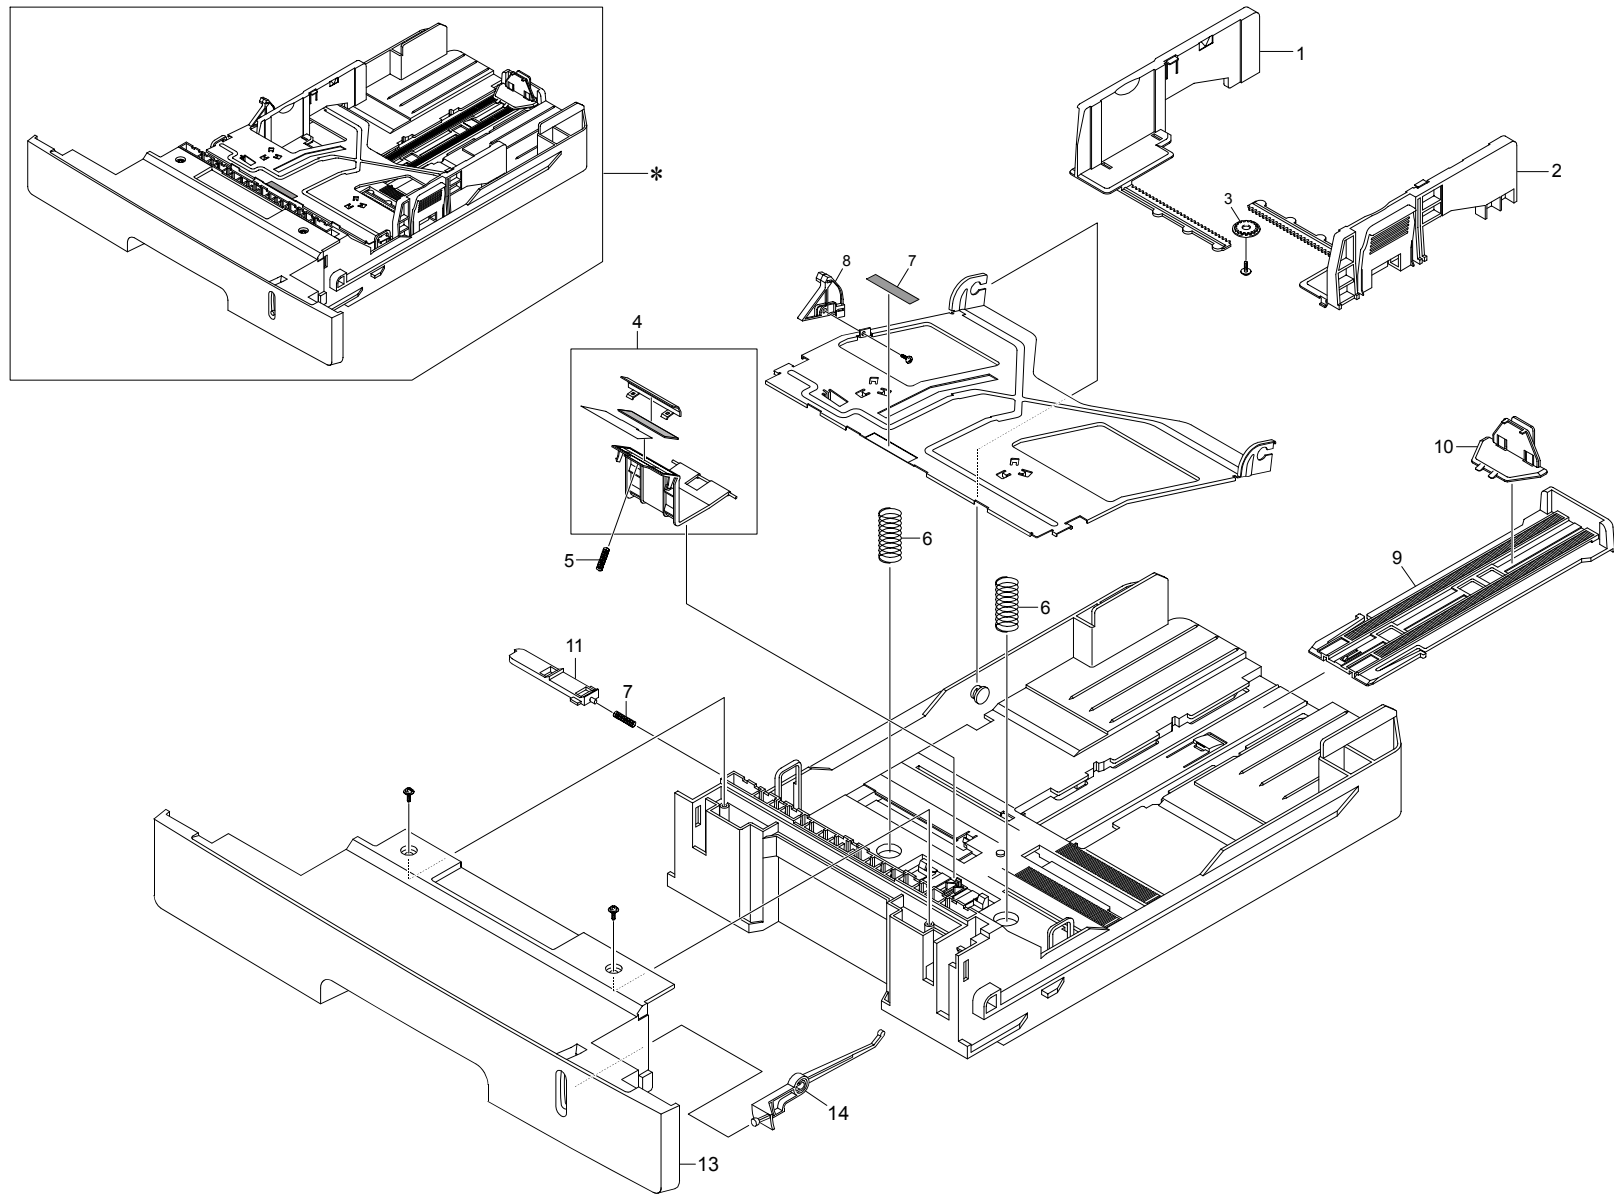


15.Cassette Ass'y (G960)

Index No.	Part No.	Description	Q'ty Per Assembly
*	G960 1185	Casette Ass'y	1
1	G960 1127	Left Side Fence	1
2	G960 1128	Right Side Fence	1
3	G186 1007	Pinion Gear	1
4	G960 1177	Friction Pad Ass'y	1
5	G186 1108	Spring - Friction Pad	1
6	G960 1016	Spring - Cassette	2
7	G186 1312	Bottom Plate Pad	1
8	G960 1411	Cam-M-Knock Up	1
9	G960 1071	End Fence Guide	1
10	G960 1137	End Fence	1
11	G960 1138	Lock Plate	1
12	G960 1194	Pressure Spring	1
13	G960 1403	Cover-M_SUB CST	1
14	G960 1407	Indicator-M_Cassette	1

Index No.	Part No.	Description	Q'ty Per Assembly

 16.Fuser Ass'y (G960)

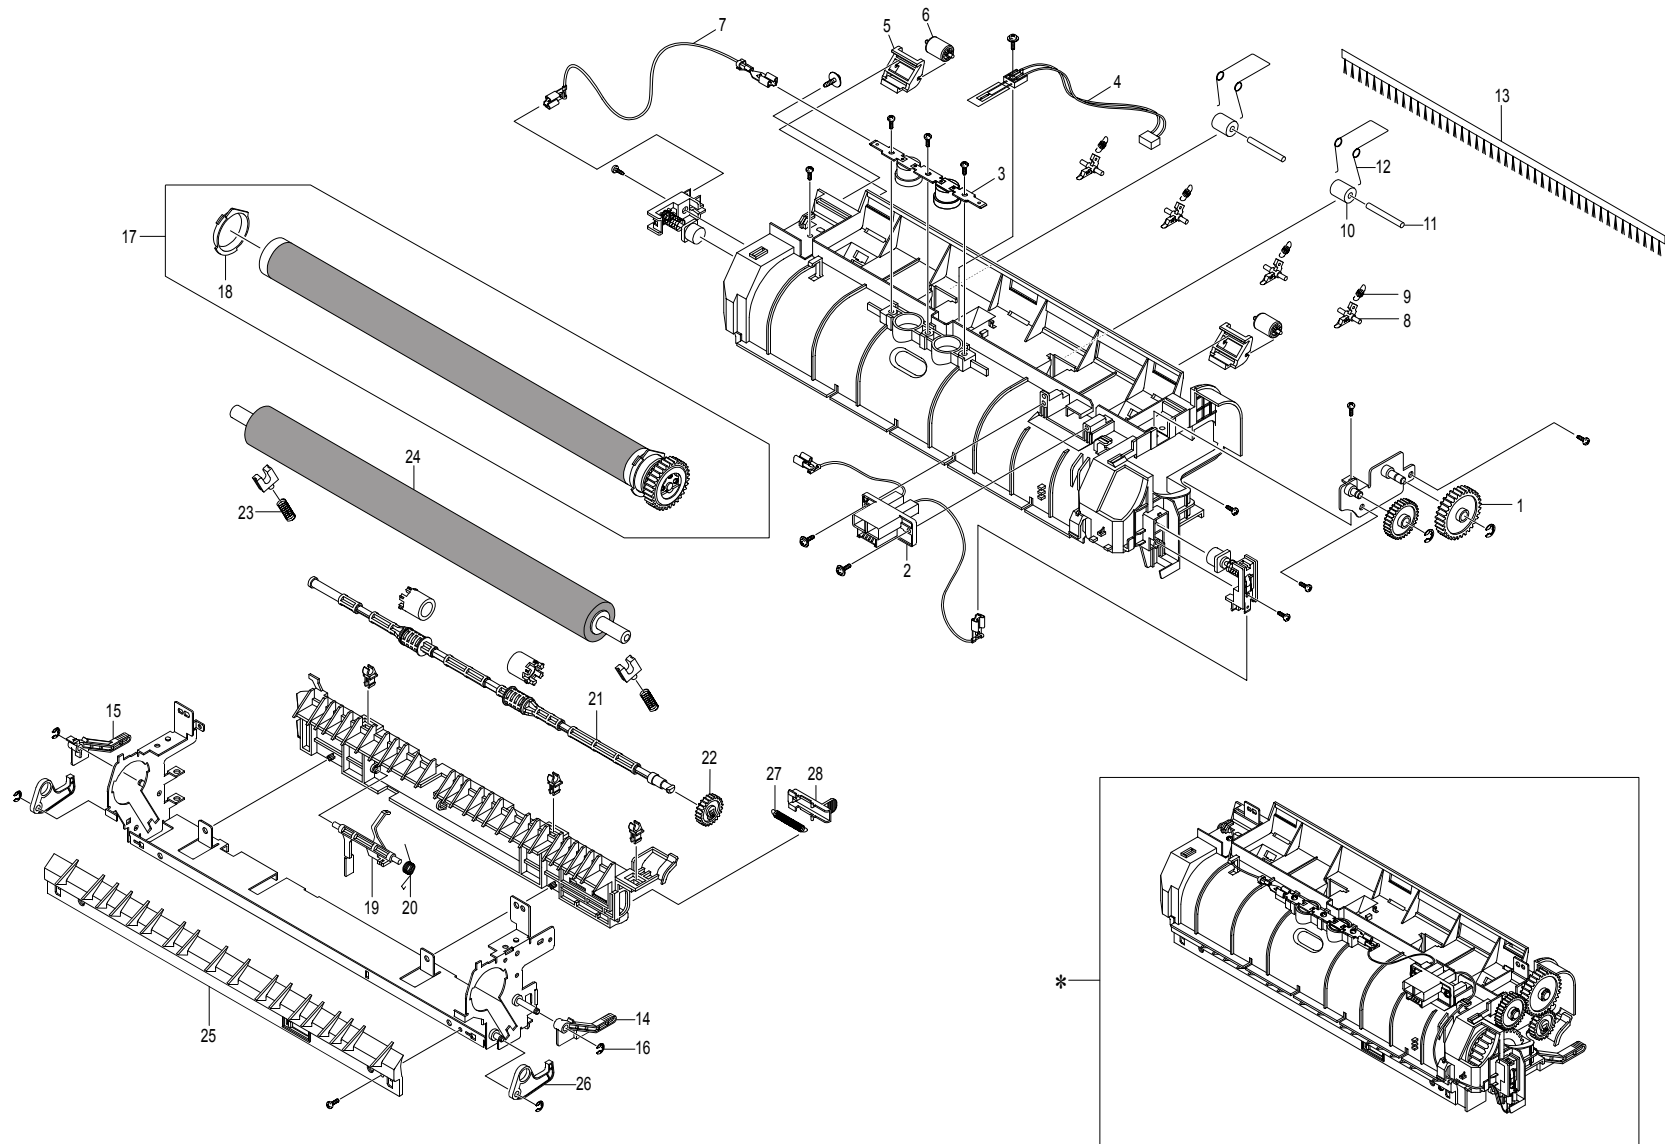


16.Fuser Ass'y (G960)

Index No.	Part No.	Description	Q'ty Per Assembly
*	G960 1169	Fusing Unit - 115V	1
*	G960 1503	Fusing Unit - 220V	1
1	G960 1104	Idel Gear	1
2	G960 1040	Harness - Fusing Unit	1
3	G960 1007	Thermostat	1
4	G960 1003	Thermistor	1
5	G186 1222	Idle Roller Holder	2
6	G186 1223	Idle Roller	2
7	G960 1041	Harness - Thermostat	1
7	G960 1507	CBF Harness-Fuser R_2,220V	1
8	G960 1151	Pick-off Pawl	4
9	G960 1389	Spring-ES	4
10	G186 1077	Idle Roller	2
11	G186 1076	Idel Roller Shaft	2
12	G186 1220	Spring - Idle Roller	2
13	G186 1061	Antistatic Brush	1
14	G960 1393	Holder-M_Jam R	1
15	G960 1392	Holder-M_Jam L	1
16	M306 1007	E-ring	2
17	G960 1170	Hot Roller Ass'y - 110V	1
17	G960 1504	ELA Unit-Heat 220V	1
18	G960 1344	Cap	2
19	G960 1441	Actuator-Exit	1
20	G186 1238	Actuator Spring	1
21	G960 1103	Shaft - Exit Roller	1
22	G960 1126	Gear - Exit Roller	1
23	G960 1428	Pressure Spring	2
24	G960 1122	Pressure Roller	1
25	G960 1431	Guide-M_Input	1
26	G960 1118	Link Lever	1
27	G960 1388	Tension Spring	1
28	G960 1399	Holder-M_Rear_Lever	1

Index No.	Part No.	Description	Q'ty Per Assembly

 17.Duplex Unit (Optional) (G960)

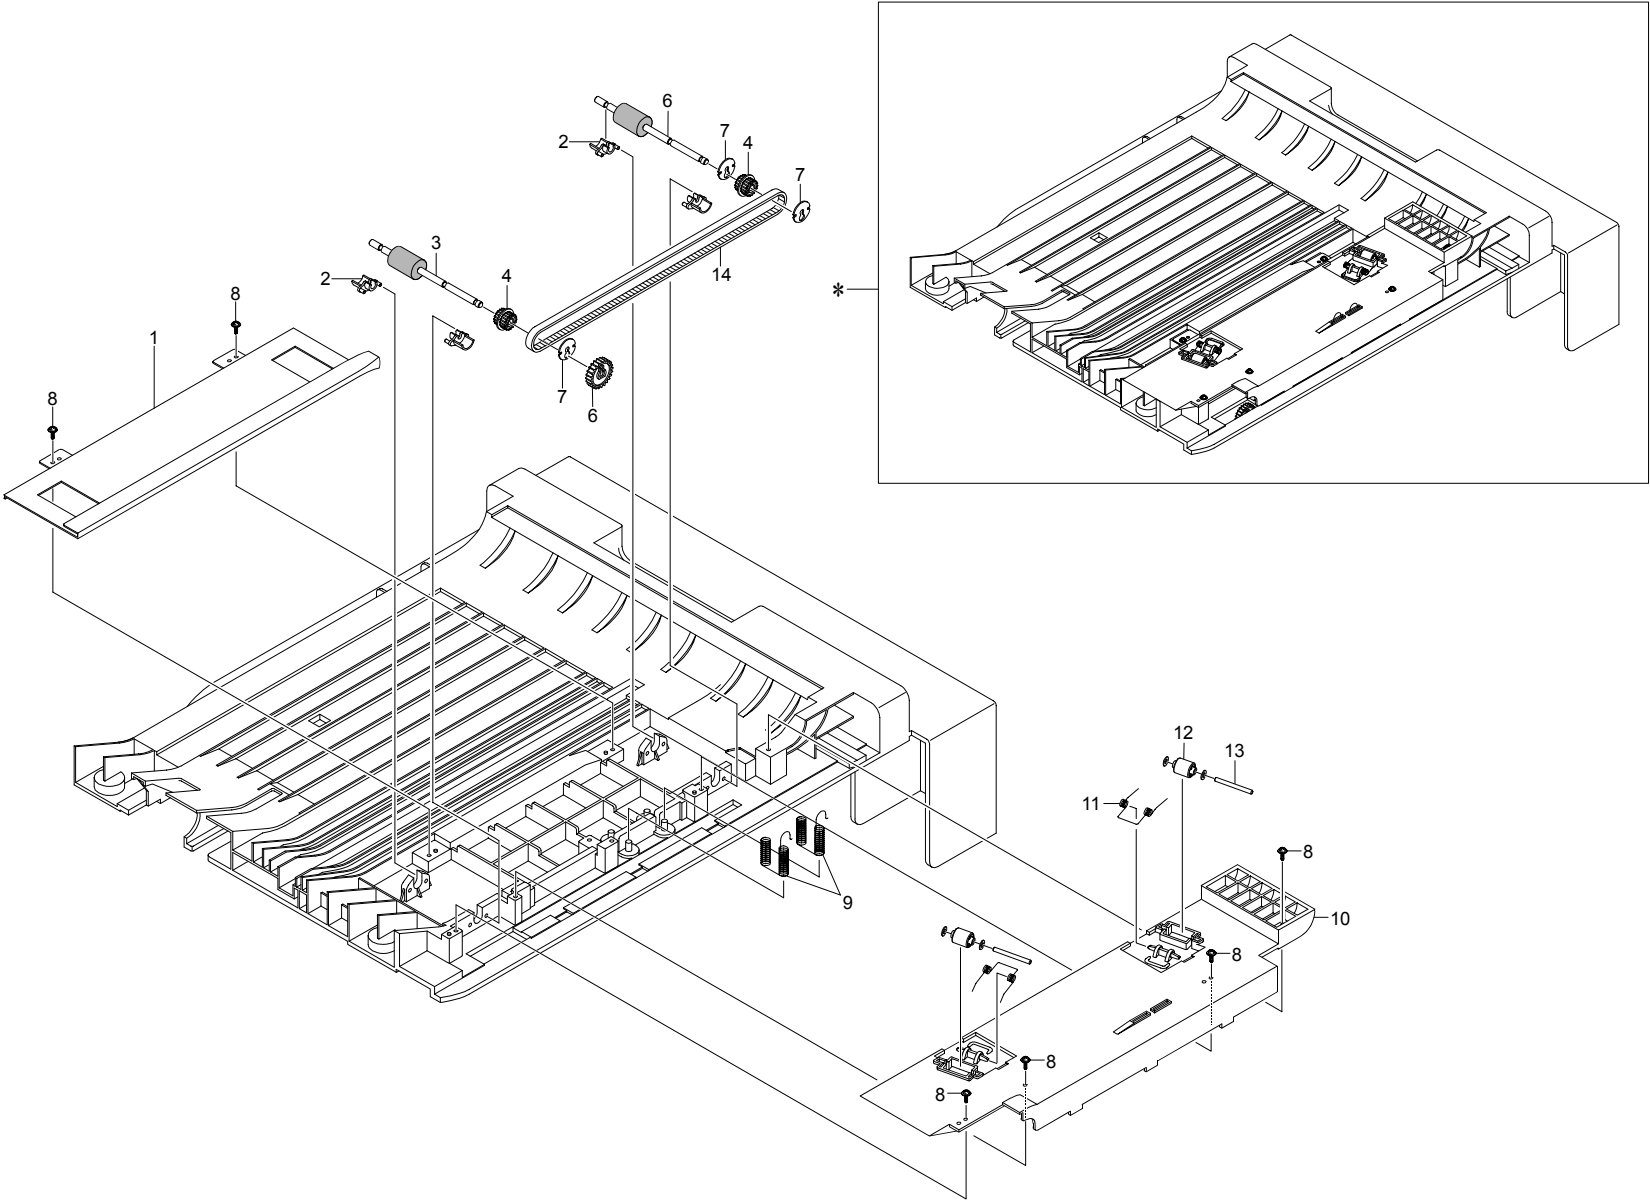

17.Duplex Unit (Optional) (G960)

Index No.	Part No.	Description	Q'ty Per Assembly
*	G960 1181	Duplex Unit	1
1	G960 1396	Bracket-P-Align DUP	1
2	M307 1031	Bushing - Feed Roller	4
3	G960 1423	ELA Unit-Roller_DUP	1
4	G960 1453	Pulley-18-DUP	2
5	G960 1097	Gear - Exit Roller	1
6	G960 1422	ELA Unit-Roller_DUP	1
7	M307 1029	Belt Stopper	3
8	G186 1224	Screw - M3	6
9	G960 1408	Terminal-P-GND DUP	1
10	G960 1395	Guide-M_Upper DUP	1
11	G960 1013	Spring	2
12	M307 1026	Idle Roller - Duplex	1
13	M307 1025	Idle Roller Shaft	1
14	G960 1125	Timing Belt - BS32S2M280	1

Index No.	Part No.	Description	Q'ty Per Assembly

Parts Index

Parts Index

Part No.	Description	Page and Index No.
G960 1001	Photointerrupter	23 - 15
G960 1002	Photointerrupter	13 - 3
G960 1003	Thermistor	33 - 4
G960 1004	Speaker	3 - 10
G960 1005	Ferrite Core	23 - 17
G960 1007	Thermostat	33 - 3
G960 1011	C-ring	28 - 10
G960 1012	Pressure Spring	23 - 13
G960 1013	Spring	35 - 11
G960 1015	Spring	13 - 18
G960 1015	Spring	13 - 13
G960 1016	Spring - Cassette	31 - 6
G960 1018	Timing Belt	23 - 9
G960 1019	Spring - Timing Belt	23 - 12
G960 1020	Spring - Feeler	28 - 15
G960 1021	Holder - Platen Glass	23 - 4
G960 1022	Pulley	23 - 8
G960 1023	Bushing	28 - 7
G960 1025	Platen Glass	23 - 3
G960 1026	Cooling Fan	3 - 16
G960 1026	Cooling Fan	13 - 58
G960 1027	Fan Motor - DC	3 - 17
G960 1029	Fuser Motor	15 - 1
G960 1030	Main Motor	17 - 1
G960 1031	Solenoid	13 - 30
G960 1032	Solenoid	13 - 31
G960 1033	Solenoid	19 - 4
G960 1034	Sensor Harness	19 - 13
G960 1035	Harness - USB Board	7 - 4
G960 1037	Harness - CCD	23 - 7
G960 1038	Harness - Engine	3 - 12
G960 1038	Harness - Engine	13 - 60
G960 1039	Harness - SMPS	13 - 61
G960 1040	Harness - Fusing Unit	33 - 2
G960 1041	Harness - Thermostat	33 - 7

Part No.	Description	Page and Index No.
G960 1042	Harness - AC Inlet	3 - 19
G960 1043	Harness - LSU S/W	3 - 20
G960 1043	Harness - LSU S/W	13 - 57
G960 1045	Harness - Paper End	3 - 22
G960 1045	Harness - Paper End	13 - 62
G960 1046	Harness - Duplex Motor	3 - 3
G960 1047	Harness - ADF Ground	28 - 19
G960 1049	Harness - ADF Upper	28 - 20
G960 1050	Harness - ADF Lower	23 - 19
G960 1051	Harness - ADF Clutch	28 - 29
G960 1051	Harness - OPE Panel	21 - 5
G960 1052	Power Supply Unit-115V	3 - 21
G960 1053	HV Power Supply	13 - 59
G960 1054	Pressure Spring	25 - 7
G960 1055	Pressure Spring	13 - 52
G960 1057	Pressure Spring	28 - 4
G960 1058	Bushing - Idle Roller	13 - 63
G960 1059	Bushing - Pickup Roller	19 - 24
G960 1060	Left Bushing	13 - 53
G960 1061	Plate	13 - 46
G960 1062	Guide Plate	13 - 47
G960 1064	Guide	28 - 2
G960 1066	Roller Holder	13 - 36
G960 1067	Rubber Foot - Back	13 - 56
G960 1068	Holder - CCD	23 - 18
G960 1069	Holder - Quenching	13 - 50
G960 1070	Stopper - Pick-up RO	19 - 21
G960 1071	End Fence Guide	31 - 9
G960 1072	Friction Pad Holder	19 - 5
G960 1073	Sensor Holder	19 - 11
G960 1075	Lock Knob Holder	9 - 1
G960 1076	White Bar Bracket	28 - 5
G960 1080	Pressure Spring	13 - 48
G960 1081	Grounding Plate - ADF	28 - 18
G960 1082	Tray Link	9 - 5

Part No.	Description	Page and Index No.
G960 1083	Sub Tray	9 - 8
G960 1084	Tray Holder	9 - 4
G960 1085	Controller Bracket	3 - 9
G960 1086	Middle Cover	7 - 1
G960 1087	Right Cover	5 - 4
G960 1088	Rear Upper Cover	7 - 5
G960 1089	Stacker Cover	7 - 2
G960 1090	Upper Cover - ADF	28 - 22
G960 1091	Cover - LCD	29 - 1
G960 1092	Guide Sheet	19 - 2
G960 1093	Left Upper Cover	5 - 7
G960 1094	Right Upper Cover	5 - 8
G960 1095	Knob - Front Cover	9 - 3
G960 1096	Terminal	13 - 35
G960 1097	Gear - Exit Roller	35 - 5
G960 1098	Cam - Catch	13 - 4
G960 1099	Cam - Pick-up	13 - 29
G960 1100	Gear - Transfer Roller	3 - 7
G960 1101	Idle Gear	19 - 3
G960 1102	Shaft - Pick-up Roller	19 - 20
G960 1103	Shaft - Exit Roller	33 - 21
G960 1104	Idle Gear	33 - 1
G960 1106	Shaft - Feed Gear	28 - 12
G960 1107	Feed Roller	13 - 26
G960 1109	ADF Exit Roller	28 - 8
G960 1110	ADF Drive Roller	28 - 11
G960 1111	Gear - Holder	19 - 18
G960 1112	Gear - Pick-up Roller	19 - 16
G960 1113	Shaft - Core	19 - 23
G960 1114	Idle Roller - ADF	25 - 9
G960 1117	Shaft - Idle Roller	25 - 10
G960 1118	Link Lever	33 - 26
G960 1119	Transport Roller	13 - 10
G960 1120	Transfer Roller	3 - 6
G960 1121	Paper End Actuator	13 - 2

Part No.	Description	Page and Index No.
G960 1122	Pressure Roller	33 - 24
G960 1123	Cam - Pick-up	19 - 19
G960 1125	Timing Belt - BS32S2M280	35 - 14
G960 1126	Gear - Exit Roller	13 - 38
G960 1126	Gear - Exit Roller	33 - 22
G960 1127	Left Side Fence	31 - 1
G960 1128	Right Side Fence	31 - 2
G960 1129	Grounding Plate	13 - 51
G960 1130	Terminal Connector	13 - 42
G960 1132	Bushing - Transfer R	13 - 54
G960 1134	White Sheet	28 - 6
G960 1135	Sensor Lever	23 - 14
G960 1136	Cam Roller	19 - 8
G960 1137	End Fence	31 - 10
G960 1138	Lock Plate	31 - 11
G960 1139	Actuator - Cover Open	13 - 44
G960 1140	Idler - Pick-up	19 - 22
G960 1141	Lock Plate	13 - 27
G960 1142	Left Guide Plate	13 - 33
G960 1143	Right Guide Plate	13 - 34
G960 1144	Sub Stacker	7 - 6
G960 1145	Sensor Actuator	28 - 16
G960 1146	Sensor Actuator	28 - 14
G960 1147	Sensor Actuator	28 - 17
G960 1148	Sensor Actuator	19 - 12
G960 1151	Pick-off Pawl	33 - 8
G960 1152	Bushing	13 - 8
G960 1153	Friction Pad	19 - 6
G960 1155	Terminal	13 - 41
G960 1157	PCB - USB Host	7 - 3
G960 1158	Modem	3 - 11
G960 1159	ADF Board	28 - 13
G960 1160	Interface Board	13 - 43
G960 1161	Terminal Board	13 - 39
G960 1162	Scanner Motor - DC 18W	23 - 5

Part No.	Description	Page and Index No.
G960 1163	Main Drive Unit	17 - *
G960 1164	Duplex Drive Unit	3 - 2
G960 1165	ADF	28 - *
G960 1165	ADF	21 - 2
G960 1166	ADF Drive Unit	28 - 21
G960 1167	ADF Transport Unit	28 - 1
G960 1168	Middle Cover Ass'y	5 - 3
G960 1168	Middle Cover Ass'y	7 - *
G960 1169	Fusing Unit - 115V	13 - 55
G960 1169	Fusing Unit - 115V	33 - *
G960 1170	Hot Roller Ass'y - 110V	33 - 17
G960 1171	Scanner Ass'y	23 - 6
G960 1172	Duplex Guide Unit	13 - 1
G960 1173	Paper Feed Unit	19 - *
G960 1173	Paper Feed Unit	3 - 1
G960 1174	Exit Roller	13 - 40
G960 1176	Spring Clutch	13 - 19
G960 1177	Friction Pad Ass'y	31 - 4
G960 1178	Friction Pad - ADF	28 - 23
G960 1179	Pick-up Roller Ass'y	28 - 27
G960 1180	Pick-up Roller	19 - 15
G960 1180	Pick-up Roller	19 - 14
G960 1181	Duplex Unit	35 - *
G960 1181	Duplex Unit	3 - 18
G960 1182	Original Tray Ass'y	25 - 3
G960 1183	Left DF Cover	28 - 28
G960 1184	Scanner Cover Ass'y	23 - 1
G960 1185	Casette Ass'y	31 - *
G960 1185	Casette Ass'y	3 - 14
G960 1186	ADF Cover Ass'y	25 - *
G960 1187	Left Cover	5 - 5
G960 1188	By-pass Feed Cover	5 - 2
G960 1189	DF Scan Glass Ass'y	23 - 2
G960 1190	Pick-up Roller	13 - 7
G960 1191	Transfer Roller	3 - 8

Part No.	Description	Page and Index No.
G960 1191	Transfer Roller	13 - 65
G960 1192	Spring Washer	25 - 1
G960 1193	Shaft - Idle Roller	25 - 8
G960 1194	Pressure Spring	31 - 12
G960 1195	Pressure Spring	9 - 2
G960 1197	Pinch Roller	25 - 11
G960 1215	Belt Holder	23 - 10
G960 1222	Rubber Pad - ADF	28 - 25
G960 1236	Holder Plate	13 - 49
G960 1316	Idle Gear - 27Z	13 - 20
G960 1332	Cam-Shaft Pick Up	13 - 6
G960 1339	Lever	13 - 14
G960 1344	Cap	33 - 18
G960 1366	Pick-up Gear Ass'y	13 - 23
G960 1368	Actuator Holder	13 - 12
G960 1370	Actuator	13 - 17
G960 1371	Actuator	13 - 15
G960 1372	Holder-M_ACT Feed	13 - 16
G960 1375	ELA HOU-Main RAM DIMM	3 - 13
G960 1376	MEA-Cover Front	9 - *
G960 1376	MEA-Cover Front	5 - 1
G960 1377	ADF	21 - *
G960 1378	Scanner Unit	21 - 1
G960 1378	Scanner Unit	23 - *
G960 1387	Pressure Spring	19 - 17
G960 1388	Tension Spring	33 - 27
G960 1388	Tension Spring	19 - 10
G960 1389	Spring-ES	33 - 9
G960 1391	Writing Unit	3 - 15
G960 1392	Holder-M_Jam L	33 - 15
G960 1393	Holder-M_Jam R	33 - 14
G960 1394	E-ring	13 - 9
G960 1395	Guide-M_Upper DUP	35 - 10
G960 1396	Bracket-P-Align DUP	35 - 1
G960 1399	Holder-M_Rear_Lever	33 - 28

Part No.	Description	Page and Index No.
G960 1400	Guide-TR RIB	13 - 45
G960 1401	Sheet-White Sponge	25 - 5
G960 1402	Cover-M_Face Up	11 - 1
G960 1403	Cover-M_SUB CST	31 - 13
G960 1404	Cover-M_Platten	25 - 4
G960 1407	Indicator-M_Cassette	31 - 14
G960 1408	Terminal-P-GND DUP	35 - 9
G960 1409	Gear-Agitator-2	28 - 9
G960 1411	Cam-M-Knock Up	31 - 8
G960 1412	Shaft-M_Feed2	13 - 24
G960 1413	Gear-Feed2 Z27	13 - 25
G960 1415	Roller-Exit F/Down	13 - 37
G960 1417	Adjust-M_MP L	9 - 7
G960 1418	Adjust-M_MP R	9 - 9
G960 1421	Operation Panel Board	29 - 2
G960 1422	ELA Unit-Roller_DUP	35 - 6
G960 1423	ELA Unit-Roller_DUP	35 - 3
G960 1424	Fuser Drive Unit	15 - *
G960 1424	Fuser Drive Unit	3 - 5
G960 1425	MEA Unit-Bracket Feed	13 - 64
G960 1426	MEA-Idle Feed	19 - 1
G960 1427	Harness	3 - 4
G960 1428	Pressure Spring	33 - 23
G960 1431	Guide-M_Input	33 - 25
G960 1441	Actuator-Exit	33 - 19
G960 1446	Hinge Ass'y	25 - 6
G960 1447	Battery	21 - 4
G960 1453	Pulley-18-DUP	35 - 4
G960 1455	Operation Panel	29 - *
G960 1455	Operation Panel	21 - 3
G960 1456	Raer Cover Ass'y	5 - 6
G960 1456	Raer Cover Ass'y	11 - *
G960 1457	CBF Harness - Main MTR	3 - 23
G960 1458	Idle Roller	28 - 26
G960 1502	SMPS-PSP_Type3_V2C	3 - 21

Part No.	Description	Page and Index No.
G960 1503	Fusing Unit - 220V	13 - 55
G960 1503	Fusing Unit - 220V	33 - *
G960 1504	ELA Unit-Heat 220V	33 - 17
G960 1507	CBF Harness-Fuser R_2,220V	33 - 7

Part No.	Description	Page and Index No.
G186 1007	Pinion Gear	25 - 2
G186 1007	Pinion Gear	31 - 3
G186 1007	Pinion Gear	9 - 6
G186 1061	Antistatic Brush	33 - 13
G186 1061	Antistatic Brush	28 - 3
G186 1076	Idle Roller Shaft	33 - 11
G186 1077	Idle Roller	33 - 10
G186 1099	Spring - Friction Pad	28 - 24
G186 1108	Spring - Friction Pad	19 - 7
G186 1108	Spring - Friction Pad	31 - 5
G186 1183	Bushing - Feed Roller	13 - 11
G186 1183	Bushing - Feed Roller	13 - 5
G186 1203	Spring - Guide	13 - 32
G186 1220	Spring - Idle Roller	33 - 12
G186 1222	Idle Roller Holder	33 - 5
G186 1223	Idle Roller	33 - 6
G186 1224	Screw - M3	35 - 8
G186 1238	Actuator Spring	33 - 20
G186 1312	Bottom Plate Pad	31 - 7
G186 1312	Bottom Plate Pad	19 - 9
G186 1332	Sensor Harness	23 - 16

Part No.	Description	Page and Index No.
M306 1007	E-ring	13 - 22
M306 1007	E-ring	23 - 11
M306 1007	E-ring	33 - 16
M306 1016	Spring	13 - 28
M307 1023	Retaining Ring - M5	13 - 21
M307 1025	Idle Roller Shaft	35 - 13
M307 1026	Idle Roller - Duplex	35 - 12
M307 1029	Belt Stopper	35 - 7
M307 1031	Bushing - Feed Roller	35 - 2