




SP C231N/C232DN

Operating Instructions Software Guide

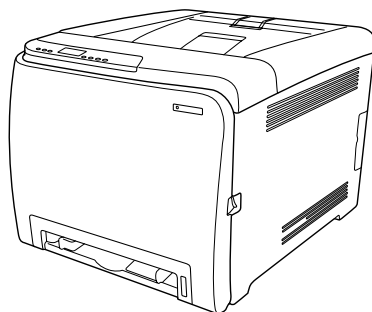

-
- 1** Preparing for Printing
 - 2** Setting Up the Printer Driver
 - 3** Other Print Operations
 - 4** Direct Printing from a Digital Camera (PictBridge)
 - 5** Making Printer Settings Using the Control Panel
 - 6** Monitoring and Configuring the Printer
 - 7** Using a Print Server
 - 8** Special Operations under Windows
 - 9** Mac OS Configuration
 - 10** Appendix

Read this manual carefully before you use this machine and keep it handy for future reference. For safe and correct use, be sure to read "Safety Information" before using the machine.

Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

Do not copy or print any item for which reproduction is prohibited by law.

Copying or printing the following items is generally prohibited by local law:

bank notes, revenue stamps, bonds, stock certificates, bank drafts, checks, passports, driver's licenses.

The preceding list is meant as a guide only and is not inclusive. We assume no responsibility for its completeness or accuracy. If you have any questions concerning the legality of copying or printing certain items, consult with your legal advisor.

Caution:

Use of controls or adjustments or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Trademarks

Microsoft®, Windows®, Windows Server®, and Windows Vista® are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Adobe®, PageMaker® and PostScript® are registered trademarks of Adobe Systems Incorporated in the United States and/or other countries.

PCL® is a registered trademark of Hewlett-Packard Company.

Citrix® and MetaFrame® are registered trademarks of Citrix Systems, Inc.

UNIX® is a registered trademark of The Open Group.

NetWare® is registered trademark of Novell, Inc.

Apple, AppleTalk, EtherTalk, Macintosh, Mac OS and TrueType are trademarks of Apple Inc., registered in the U.S. and other countries.

Safari is a trademark of Apple Inc.

Netscape® and Netscape Navigator® are registered trademarks of Netscape Communications Corporation.

PictBridge is a trademark.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights in those marks.

The proper names of the Windows operating systems are as follows:

- The product names of Windows 2000 are as follows:
 - Microsoft® Windows® 2000 Professional
 - Microsoft® Windows® 2000 Server
 - Microsoft® Windows® 2000 Advanced Server
- The product names of Windows XP are as follows:
 - Microsoft® Windows® XP Professional
 - Microsoft® Windows® XP Home Edition
- The product names of Windows Vista are as follows:
 - Microsoft® Windows Vista® Ultimate
 - Microsoft® Windows Vista® Enterprise
 - Microsoft® Windows Vista® Business
 - Microsoft® Windows Vista® Home Premium
 - Microsoft® Windows Vista® Home Basic
- The product names of Windows Server 2003 are as follows:
 - Microsoft® Windows Server® 2003 Standard Edition
 - Microsoft® Windows Server® 2003 Enterprise Edition
 - Microsoft® Windows Server® 2003 Web Edition

- The product names of Windows Server 2003 R2 are as follows:
Microsoft® Windows Server® 2003 R2 Standard Edition
Microsoft® Windows Server® 2003 R2 Enterprise Edition
- The product names of Windows Server 2008 are as follows:
Microsoft® Windows Server® 2008 Standard
Microsoft® Windows Server® 2008 Enterprise



Note

- ☐ PostScript 3 in this manual stands for "Adobe PostScript 3 Emulation".

Notes:

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Depending on which country you are in, certain units may be optional. For details, please contact your local dealer.

Manuals for This Printer

For particular functions, see the relevant parts of the manual.

❖ **Safety Information**

Provides information on safe usage of this machine. To avoid injury and prevent damage to the machine, be sure to read this.

❖ **Quick Installation Guide**

Contains procedures for removing the printer from its box and connecting it to a computer.

❖ **Hardware Guide**

Contains information about paper and procedures such as installing options, replacing consumables, responding to error messages, and resolving jams.

❖ **Software Guide (This manual)**

Contains procedures for using this machine in a network environment and utilizing the software.

Description for the Specified Model

In this manual, the following items explain about the printer for the specified models:

220-240V

This explains about the 220–240 V model printer. You can identify the model by checking the label on the rear of the printer.

Read if you purchase this model.


120V

This explains about the 120 V model printer. You can identify the model by checking the label on the rear of the printer.

Read if you purchase this model.

Note

- ☐ You can identify the printer's model by checking the label on the rear of the printer as shown.

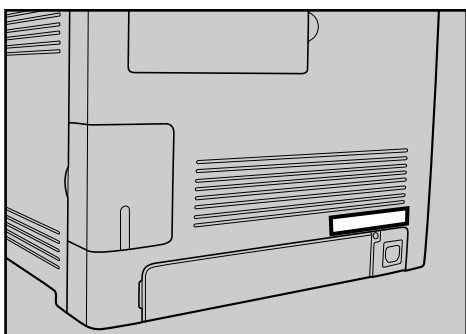

ASH074S

How to Read This Manual

Symbols

This manual uses the following symbols:

WARNING:

Indicates important safety notes.

Ignoring these notes could result in serious injury or death. Be sure to read these notes. They can be found in the “Safety Information”.

CAUTION:

Indicates important safety notes.

Ignoring these notes could result in moderate or minor injury, or damage to the machine or to property. Be sure to read these notes. They can be found in the “Safety Information”.

Important

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

Note

Indicates supplementary explanations of the printer’s functions, and instructions on resolving user errors.

Reference

This symbol is located at the end of sections. It indicates where you can find further relevant information.

[]

Indicates the names of keys that appear on the printer’s display panel.

[!]

Indicates the names of keys on the printer’s control panel.

TABLE OF CONTENTS

Manuals for This Printer	i
Description for the Specified Model	ii
How to Read This Manual	iii
Symbols	iii

1. Preparing for Printing

Confirming the Connection Method	1
Network Connection	1
USB Connection.....	2
Installing the Printer Driver in a Network Environment	3
Installing the PCL Printer Driver	3
Installing the PostScript 3 Printer Driver	5
Installing the Printer Driver to Use As a Windows Network Printer	7
Installing the Printer Driver Using USB	8
Installing the PCL Printer Driver	8
Installing the PostScript 3 Printer Driver (Windows 2000)	10
Installing the PostScript 3 Printer Driver (Windows XP and Windows Server 2003/2003 R2)... ..	11
Installing the PostScript 3 Printer Driver (Windows Vista and Windows Server 2008)... ..	12
Troubleshooting USB	13
If a Message Appears during Installation	14
Making Option Settings for the Printer	15
Conditions for Bidirectional Communication	15
If Bidirectional Communication Is Disabled	16

2. Setting Up the Printer Driver

PCL - Accessing the Printer Properties	17
Windows 2000 - Making Printer Settings	17
Windows XP and Windows Server 2003/2003 R2 - Making Printer Settings.....	19
Windows Vista and Windows Server 2008 - Making Printer Settings	21
PostScript 3 - Setting Up for Printing	23
Windows 2000 - Accessing the Printer Properties	23
Windows XP and Windows Server 2003/2003 R2 - Making Printer Settings.....	25
Windows Vista and Windows Server 2008 - Making Printer Settings	27

3. Other Print Operations

Form Feed	29
Performing Form Feed	29
Changing the Paper Input Setting	30
Canceling a Print Job	30
Canceling a Print Job	31
Canceling a Print Job Using the Control Panel	31
Windows - Canceling a Print Job from the Computer	31
Collate	32
Cover	33
Watermark	34

Manual Duplex.....	35
Memory Capacity and Paper Size.....	36
 4. Direct Printing from a Digital Camera (PictBridge)	
What Is PictBridge?	37
PictBridge Printing	38
What Can Be Done on This Printer	39
Paper Size.....	39
Image Print Size.....	39
Exiting PictBridge	40
When PictBridge Printing Does Not Work.....	41
 5. Making Printer Settings Using the Control Panel	
Menu Chart	43
Paper Input Menu.....	46
Changing the Paper Input Menu	46
Paper Input Menu Parameters	46
List/Test Print Menu.....	48
Printing the Configuration Page	48
List/Test Print Menu Parameters.....	49
Maintenance Menu.....	50
Adjusting the Color Registration.....	50
Adjusting Tray Registration	51
Maintenance Menu Parameters	53
System Menu.....	54
Changing the System Menu	54
System Menu Parameters.....	55
Host Interface Menu.....	58
Changing the Host Interface Menu	58
Host Interface Menu Parameters	59
PCL Menu	61
Changing the PCL Menu	61
PCL Menu Parameters.....	61
PS Menu.....	63
Changing the PS Menu	63
PS Menu Parameters.....	63
Language Menu.....	64
Changing the Language Menu	64
Language Menu Parameters.....	64

6. Monitoring and Configuring the Printer

Using Web Image Monitor	65
Displaying Top Page	66
Displaying the Printer Status	67
About Menu and Mode	67
Access in the Administrator Mode	69
Configuring the Printer Settings	69
Changing the Login Information	72
Displaying Web Image Monitor Help	73
Using Smart Organizing Monitor	74
Installing Smart Organizing Monitor	74
Displaying the Smart Organizing Monitor Dialog Box	74
Displaying the Printer Status	75
Displaying the Printer Information	76
Printer Configuration	78
Printer Status Notification by E-Mail	82
Mail Authentication	83
SNMP	84
Reading the Configuration Page	85

7. Using a Print Server

Preparing Print Server	89
-------------------------------------	-----------

8. Special Operations under Windows

Printing Files Directly from Windows	91
Setup	91
Using a Host Name Instead of an IPv4 Address	92
Printing Commands	93

9. Mac OS Configuration

Installing the PostScript 3 Printer Driver	95
Specifying the Printer	96
Using USB	96
Using TCP/IP	97
Setting Up the PPD File	99
Mac OS X 10.4.x or earlier	99
Mac OS X 10.5	99
Setting Up Options	100
Mac OS X 10.4.x or earlier	100
Mac OS X 10.5	100
Setting Up for Printing	101
Making paper settings from an application	101
Printing from an application	101
Canceling a Print Job from the Computer	102
Mac OS X 10.4.x or earlier	102
Mac OS X 10.5	102

Changing to EtherTalk.....	103
Mac OS X 10.4.x or earlier	103
Mac OS X 10.5.....	103
Configuring the Printer.....	104
Using PostScript 3	105
Using Smart Organizing Monitor.....	108
Installing Smart Organizing Monitor	108
Displaying the Smart Organizing Monitor Dialog Box	108
Displaying the Printer Status.....	109
Displaying the Printer Information	109
Printer Configuration	111
 10.Appendix	
<hr/> Software and Utilities Included on the CD-ROM	115
Printer Drivers for this Printer	115
Cautions to Take When Using in a Network.....	116
Using DHCP	116
Using Adobe PageMaker Version 6.0, 6.5, or 7.0	117
When Using Windows Terminal Service/MetaFrame.....	118
Operating Environment	118
Supported Printer Drivers.....	118
Limitations	119
 INDEX.....	120

1. Preparing for Printing

Confirming the Connection Method

This printer supports network and USB connection.

Before installing the printer driver, check how the printer is connected. Follow the driver installation procedure that is appropriate to the connection method.


The printer drivers can be installed from the CD-ROM provided with this printer.

Network Connection

This printer can be used as a Windows printing port or network printer.

Using this printer as the Windows printing port

Network connections can be established via Ethernet.

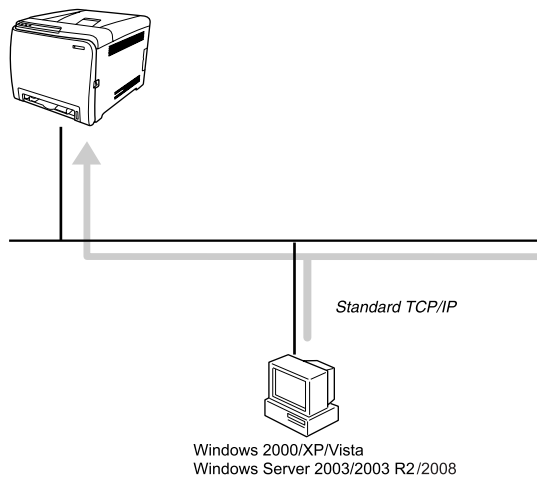

ASH131S

❖ Operating system

Windows 2000/XP/Vista, and Windows Server 2003/2003 R2/2008

❖ Connection method

Ethernet (10baseT/100baseTX)

❖ Available ports


Standard TCP/IP

🔍 Reference

For details about how to use this printer as the Windows printing port, see p.3 "Installing the Printer Driver in a Network Environment".

Using as a network printer

This printer can be used as the Windows network printer, the NetWare print server, or the NetWare remote printer.

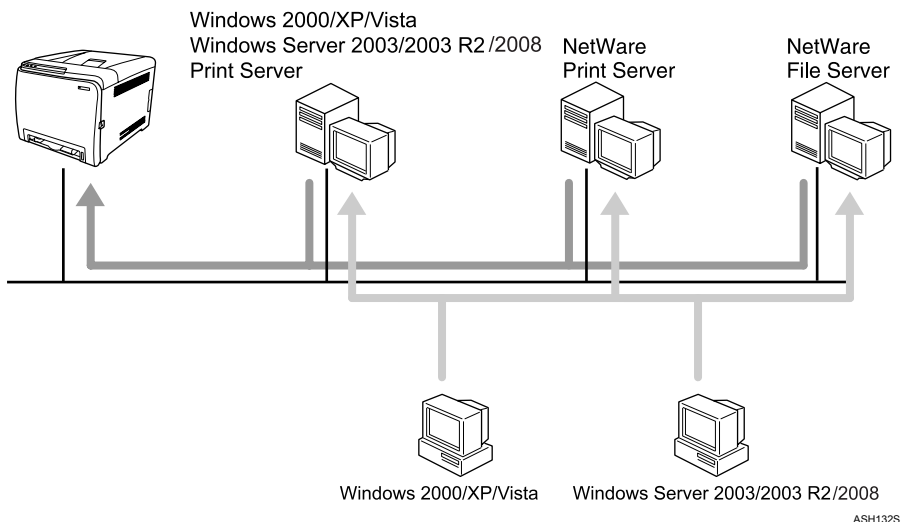

Reference

For details about how to use this printer as a Windows network printer, see p.7 “Installing the Printer Driver to Use As a Windows Network Printer”.

USB Connection

This printer can be connected directly to a computer using a USB cable.

Reference

For details about how to install the printer driver, see p.8 “Installing the Printer Driver Using USB”.

Installing the Printer Driver in a Network Environment

This section explains how to install the printer driver that allows you to use this printer in a network environment.

1

Installing the PCL Printer Driver

Important

- ☐ To install this printer driver, you must have an account that has Manage Printers permission. Log on as an Administrators or Power Users group member.

Use the following procedure to install the PCL printer driver.

1 Close all applications except this manual.

2 Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3 Select an interface language, and then click [OK].

The default interface language is English.

4 Click [PCL 6 Printer Driver] or [PCL 5c Printer Driver].

The software license agreement appears.

5 After reading the agreement, click [I accept the agreement.], and then click [Next >].

6 In the dialog box that appears, click [Add a new printer], select the [Search for network printers.] check box, and then click [Next >].

If the search fails, the printer driver is installed via port LPT1.

Check the port settings and printer's IP address again, before reconfiguring the settings.

7 When the list of found printers appears, click this printer (whose IP address you specified before the installation), and then click [Next >].

8 Double-click the printer name to display the printer's settings, change the settings as required, and then click [Continue].

9 If a message appears informing you that the installation was successfully completed, click [Finish].

 **Note**

- ☐ When you click **[Finish]**, the **[Digital Signature Not Found]** dialog box might appear. To continue the installation, click **[Yes]**.
- ☐ Auto Run might not work under certain operating system settings. If this is the case, launch "Setup.exe" from the CD-ROM root directory.
- ☐ To stop the selected software installing, click **[Cancel]** before the installation is complete.
- ☐ A message appears if there is a newer version of the printer driver already installed. If there is, you cannot install the printer driver using Auto Run. If you still want to install the printer driver, use **[Add Printer]**. See p.14 "If a Message Appears during Installation".

 **Reference**

For details about reconfiguring the printer settings, when the search for network printer fails, see p.4 "If the network printer search fails".

For details about the network connection, see Hardware Guide.

If the network printer search fails

This section explains how to reconfigure the settings if the network printer search fails during the installation.

Use the control panel to check the printer's IP address settings, and then reconfigure these settings if necessary.

❖ Reconfigure the printer's IP address

Use the control panel to obtain the printer's current IP address settings by checking the **[IP Address]**, **[Subnet Mask]**, and **[Gateway Address]** settings. You can change these settings if necessary. For details, see p.58 "Changing the Host Interface Menu".

❖ Reconfigure the port settings

- ① On the **[Start]** menu, open the **[Printers]** window.
- ② Click the icon of this printer. On the **[File]** menu, click **[Properties]**.
The printer properties appears.
- ③ Click the **[Ports]** tab, and then click **[Add Port]**.
- ④ Click **[Standard TCP/IP Port]**, and then click **[New Port...]**.
The Add Standard TCP/IP Printer Port Wizard appears.
- ⑤ Click **[Next >]**.
- ⑥ Enter the printer's IP address that is printed on the test page, and then click **[Next >]**.
- ⑦ Click **[Finish]**.

Installing the PostScript 3 Printer Driver

Important

- ☐ Before installing the PostScript 3 printer driver, obtain the printer's IP address settings. For details, see p.58 “Changing the Host Interface Menu”.
- ☐ To install this printer driver, you must have an account that has Manage Printers permission. Log on as an Administrators or Power Users group member.

1 Close all applications except this manual.

2 Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3 Select an interface language, and then click [OK].

The default interface language is English.

4 Click [PostScript 3 Printer Driver].

The Add Printer Wizard starts.

5 Click [Next >].

6 Click [Local printer], and then click [Next >].

In a Windows Vista environment, click [Add a local printer].

7 Click [Create a new port].

8 In the drop-down menu, select [Standard TCP/IP Port], and then click [Next >].

The [Add Standard TCP/IP Printer Port Wizard] dialog box appears.

9 Click [Next >].

10 Enter the printer's IP address in the [Port Name] box, and then click [Next >].

The IP address you enter here is the address you have checked on the configuration page.

In a Windows Vista environment, make the following settings in the dialog box that appears, and then click [Next >].

- ① In [Device Type] list, select an item.
You can select [Autodetect], [TCP/IP Device], or [Web Services Device].
- ② Enter an IP address in the [Hostname or IP address:] box.
- ③ If necessary, enter an port name in the [Port name] box.

11 Click [Finish].

12 Check that the name of this printer whose driver you want to install is selected, and then click [Next >].

13 Change the printer name if you want, and then click **[Next >]**.

Select the **[Yes]** check box to configure the printer as default.

14 Specify whether or not to share this printer, and then click **[Next >]**.

15 Specify whether or not to print a test page, and then click **[Next >]**.

16 Click **[Finish]**.

The printer driver installation starts.

 **Note**

- ☐ When you click **[Finish]**, the **[Digital Signature Not Found]** dialog box may appear. To continue the installation, click **[Yes]**.
- ☐ Auto Run might not work under certain operating system settings. If this is the case, launch "Setup.exe" from the CD-ROM root directory.
- ☐ The printer driver in the selected language will be installed.
- ☐ To stop the selected software installation, click **[Cancel]** before the installation is complete.

 **Reference**

For details about checking the printer's IP address, see p.48 "Printing the Configuration Page".

For details about reconfiguring the printer settings when the network printer search fails, see p.4 "If the network printer search fails".

Installing the Printer Driver to Use As a Windows Network Printer

This section explains how to install the printer driver for using this printer as a Windows network printer.

Important

- ☐ Before you can make the following settings, you must configure this printer as a Windows network printer. For details about configuring a Windows network printer, see p.89 "Using a Print Server".

The following example procedure explains installing the printer driver under Windows XP.

For details, see Windows Help.

- 1** On the [Start] menu, click [Control Panel].
- 2** Click [Printers and Other Hardware], and then click your computer's [Printers and Faxes] folder.
- 3** Click [Add a printer].
The Add Printer Wizard appears.
- 4** Select [A network printer, or printer attached to another computer], and then click [Next >].
- 5** Select [Connect to this printer], and then click [Next >].
- 6** Select this printer from the list of the shared printers, and then click [Next >].
- 7** Select whether or not to use this printer as the default printer, and then click [Next >].
- 8** Click [Finish].

Installing the Printer Driver Using USB

This section explains how to install the printer driver that allows you to use this printer via USB.

Installing the PCL Printer Driver

Important

- ☐ To install this printer driver, you must have an account that has Manage Printers permission. For this, log on as an Administrators or Power Users group member.

1 Close all applications except this manual.

2 Check the following:

- The printer's USB cable is disconnected
- The printer's main power switch is turned to off

3 Insert the CD-ROM into the CD-ROM drive.

The installer starts.

4 Select the interface language, and then click [OK].

5 Click [PCL 6 Printer Driver] or [PCL 5c Printer Driver].

The software license agreement appears.

6 After reading the agreement, click [I accept the agreement.], and then click [Next >].

7 In the [Method to install printer driver] dialog box, clear the [Search for network printers.] check box, select the [Connect a printer using a USB cable.] check box, and then click [Next >].

A message appears, asking you to check that the USB cable is not connected and the printer's main power switch is turned to off.

8 Check the USB cable and the printer status, and then click [Next >].

9 When the [<Auto-detect USB Port>] dialog box appears, connect this printer to the computer using a USB cable, and then turn the printer's main power switch to on.

The auto-detecting starts.

To cancel the auto-detecting, click [Stop Auto-detecting].

10 When the dialog box asking you to use this printer as the default printer appears, click either key.

11 When a message appears informing you that the installation was successfully completed, click **[Finish]**.

 **Note**

- ☐ In a Windows Vista environment, depending on security settings, the **[User Account Control]** dialog box might appear after you insert the CD-ROM. If this is the case, click **[Allow]**.
- ☐ If the printer driver is already installed, plug and play is enabled and the printer connected to the USB port appears automatically in the **[Printers]** window.
- ☐ When USB is first used, plug and play starts. Then the **[New Hardware Found]**, **[Device Driver Wizard]**, or **[Add New Hardware Wizard]** dialog box appears, depending on the operating system.
- ☐ To disable Auto Run, press the left **[Shift]** key when inserting the CD-ROM into the drive and keep it pressed until the computer finishes reading from the CD-ROM.
- ☐ The number after "USB" varies depending on the number of printers connected.
- ☐ A message appears if the printer connection fails. Check the USB cable is connected and the printer's main power switch is turned to on, and then click **[Retry]**.
- ☐ The USB port is available only for the printer driver that is installed first. To install additional drivers for this printer, install them using other ports (such as LPT1). Then, after the installation, change the port settings to the specified USB port.

Installing the PostScript 3 Printer Driver (Windows 2000)

Important

- ☐ To install this printer driver, you must have an account that has Manage Printers permission. Log on as an administrator or Power Users group member.

If the printer driver has already been installed, plug and play is enabled, and the icon of the printer connected to the “USB” port is added to the **[Printers]** window.

If the printer driver is not installed, follow the plug-and-play instructions of the printer to install it from the CD-ROM provided.

1 Check the printer's power switch is turned to off.

2 Connect the printer and computer using the USB cable.

Connect the USB cable firmly.

3 Turn the printer's power switch back to on.

The Plug and Play is enabled and the **[Found New Hardware Wizard]** dialog box appears, and USB Printing Support is installed automatically.

4 In the **[Found New Hardware Wizard]** dialog box, click **[Search for a suitable driver for my device (recommended)]**, and then click **[Next >]**.

5 Select the **[Specify location]** check box, and then click **[Next >]**.

6 Insert the CD-ROM into the CD-ROM drive.

When Auto Run starts, click **[Exit]**.

7 Specify the location where the source files of the printer driver is stored.

If the CD-ROM drive is D, the source files of the PostScript printer driver are stored in the following location:

D:\DRIVERS\PS\XP_VISTA\ (Language)\DISK1

8 Check the printer driver location, and then click **[OK]**.

9 Click **[Next >]**.

10 Click **[Finish]**.

If the printer driver has already been installed, plug and play is enabled, and the icon of the printer connected to the “USB001” port is added to the **[Printers]** window.

Note

- ☐ To disable Auto Run, press the **[Shift]** key when inserting the CD-ROM into the drive and keep it pressed until the computer finishes reading from the CD-ROM.
- ☐ The number after “USB” varies depending on the number of printers connected.
- ☐ The USB port is available only for the printer driver that is installed first. To install additional drivers for this printer, install them using other ports (such as LPT1). Then, after the installation, change the port settings to the specified USB port.

Installing the PostScript 3 Printer Driver (Windows XP and Windows Server 2003/2003 R2)

Important

- ☐ To install this printer driver, you must have an account that has Manage Printers permission. Log on as an administrator or Power Users group member.

If the printer driver has already been installed, plug and play is enabled, and the icon of the printer connected to the “USB” port is added to the **[Printers]** window.

If the printer driver is not installed, follow the plug-and-play instructions of the printer to install it from the CD-ROM provided.

1 Check the printer's power switch is turned to off.

2 Connect the printer and computer using the USB cable.

Connect the USB cable firmly.

3 Turn the printer's power switch back to on.

The Plug and Play is enabled and the **[Found New Hardware Wizard]** dialog box appears, and USB Printing Support is installed automatically.

4 In the **[Found New Hardware Wizard]** dialog box, click **[Install from a list or specific location (Advanced)]**, and then click **[Next >]**.

5 Select the **[Specify location]** check box, and then click **[Next >]**.

6 Insert the CD-ROM into the CD-ROM drive.

When Auto Run starts, click **[Exit]**.

7 Specify the location where the source files of the printer driver is stored.

If the CD-ROM drive is D, the source files of the PostScript printer driver are stored in the following location:

D:\DRIVERS\PS\XP_VISTA\ (Language)\DISK1

8 Check the printer driver location, and then click **[OK]**.

9 Click **[Next >]**.

10 Click **[Finish]**.

If the printer driver has already been installed, plug and play is enabled, and the icon of the printer connected to the “USB001” port is added to the **[Printers]** window.

Note

- ☐ To disable Auto Run, press the **[Shift]** key when inserting the CD-ROM into the drive and keep it pressed until the computer finishes reading from the CD-ROM.
- ☐ The number after “USB” varies depending on the number of printers connected.
- ☐ The USB port is available only for the printer driver that is installed first. To install additional drivers for this printer, install them using other ports (such as LPT1). Then, after the installation, change the port settings to the specified USB port.

Installing the PostScript 3 Printer Driver (Windows Vista and Windows Server 2008)

1

Important

- ☐ To install this printer driver, you must have an account that has Manage Printers permission. Log on as an administrator or Power Users group member.

If the printer driver is already installed and plug and play is enabled, the icon of the printer connected to the “usb” port appears in the **[Printers]** window.

The printer drivers can be installed from the CD-ROM provided with this machine.

If the printer driver is not already installed, follow the printer's plug-and-play instructions to install it from the provided CD-ROM.

1 Connect the printer and computer using the USB cable.

Connect the USB cable firmly.

The **[Found New Hardware]** dialog box appears.

2 Click **[Locate and install driver software (Recommended)]**.

If the **[User Account Control]** dialog box appears, click **[Continue]**.

3 Click **[Don't search online]**.

A message prompting you to insert the provided CD-ROM appears.

4 Insert the provided CD-ROM into the computer's CD-ROM drive.

The printer driver search begins, and a list of printer drivers appears.

5 Select the printer driver you want to use, and then click **[Next]**.

If the **[Windows can't verify the publisher of this driver software]** message appears, click **[Install this driver software anyway]**.

6 Click **[Close]**.

If the installation is successful, the icon of the printer connected to the “USB001” port appears in the **[Printers]** window.

Note

- ☐ To disable Auto Run, press the **[Shift]** key when inserting the CD-ROM into the drive and keep it pressed until the computer finishes reading from the CD-ROM.
- ☐ The number after “USB” varies depending on the number of printers connected.
- ☐ The USB port is available only for the printer driver that is installed first. To install additional drivers for this printer, install them using other ports (such as LPT1). Then, after the installation, change the port settings to the specified USB port.

Troubleshooting USB

Problem	Solutions
The printer is not recognized automatically.	Turn off the power of the printer, reconnect the USB cable, and then turn it on again.
Windows has already configured the USB settings.	Open Windows' Device Manager, and then, under [Universal Serial Bus controllers] or [USB Controller] , remove any conflicting devices. Conflicting devices have a [!] or [?] icon by them. Take care not to accidentally remove required devices. For details, see Windows Help.

If a Message Appears during Installation

1

When a message that shows the number 58 or 34 appears during the installation, the printer driver can not be installed using Auto Run. Please use **[Add Printer]** or **[Install Printer]** to install the printer driver.

For Windows 2000:

- 1** On the **[Start]** menu, point to **[Settings]**, and then click **[Printers]**.
 - 2** Double-click the Add Printer icon.
 - 3** Follow the instructions in the Add Printer Wizard.
-

For Windows XP Professional and Windows Server 2003/2003 R2:

- 1** On the **[Start]** menu, click **[Printers and Faxes]**.
 - 2** Click **[Install Printer]**.
 - 3** Follow the instructions in the Add Printer Wizard.
-

For Windows XP Home Editions:

- 1** On the **[Start]** menu, click **[Control Panel]**.
 - 2** Click **[Printers and Other Hardware]**.
 - 3** Click **[Printers and Faxes]**.
 - 4** Click **[Install Printer]**.
 - 5** Follow the instructions in the Add Printer Wizard.
-

For Windows Vista and Windows Server 2008:

- 1** On the **[Start]** menu, click **[Control Panel]**.
- 2** Click **[Printer]** in “Hardware and Sound”.
- 3** Click **[Add a printer]**.
- 4** Follow the instructions in the Add Printer Wizard.

Making Option Settings for the Printer

Make option settings for the printer using the printer driver when bidirectional communication is disabled.

1

Conditions for Bidirectional Communication

Bidirectional communication allows information about paper settings to be automatically sent from the printer. You can check printer status from your computer.

Important

- ☐ Make sure that **[Enable bidirectional support]** is selected on the **[Ports]** tab in the printer properties dialog box.

To support bidirectional communication, the following conditions must be met:

❖ Operating system

Windows 2000/XP/Vista, and Windows Server 2003/2003 R2/2008

❖ When connected via a network

The printer must be connected via standard TCP/IP port, and the default name has not been changed.

❖ When connected via USB

The printer must be connected to the computer's USB port using the USB interface cable.

Note

- ☐ The PostScript 3 printer driver does not support bidirectional communications. You can update printer status manually.
- ☐ The PCL printer drivers support bidirectional communications. You can update printer status manually.

If Bidirectional Communication Is Disabled

Set up option settings when bidirectional communication is disabled.

1

Important

- ☐ Manage Printers permission is required to change the printer properties in the **[Printers]** folder. Log on as an Administrators or Power Users group member.

1 On the **[Start]** menu, point to **[Settings]**, and then click **[Printers]**.

When using Windows XP or Windows Server 2003/2003 R2, click **[Printers and Faxes]** on the **[Start]** menu.

When using Windows Vista or Windows Server 2008, click **[Control Panel]** on the **[Start]** menu, and then click **[Printer]**.

2 Click the icon of the printer you want to use.

3 On the **[File]** menu, click **[Properties]**.

4 Click the **[Accessories]** tab.

If you are using the PostScript 3 printer driver, click the **[Device Settings]** tab.

5 Select options installed from the **[Options]** area, and then make the necessary settings.

6 Select the total amount of the memory in **[Total Memory:]**, when the optional SDRAM module is added.

7 Under **[Paper Size Settings]**, click and highlight the tray to be used, select the appropriate size , and then click **[Update]**.

8 Click **[OK]** to close the printer properties dialog box.

2. Setting Up the Printer Driver

PCL - Accessing the Printer Properties

This section explains about accessing the printer properties and make the printer settings.

Windows 2000 - Making Printer Settings

Making the printer default settings - the [Printers] window

Important

- ☐ To change the printer default settings including option configuration settings, log on using an account that has Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default.
- ☐ You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.

1 On the [Start] menu, point to [Settings], and then click [Printers].

The [Printers] window appears.

2 Click the icon of the printer you want to use.

3 On the [File] menu, click [Properties].

The printer properties dialog box appears.

4 Make the necessary settings, and then click [OK].

Note

- ☐ Settings you make here are used as the default settings for all applications.
- ☐ Do not make a setting for [Form to Tray Assignment].

Reference

For details about settings, see the printer driver Help.

Making the printer default settings - Printing Preferences

Important

- ☐ You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.

1 On the [Start] menu, point to [Settings], and then click [Printers].

The [Printers] window appears.

2 Click the icon of the printer you want to use.

3 On the [File] menu, click [Printing Preferences...].

The [Printing Preferences] dialog box appears.

4 Make the necessary settings, and then click [OK].

Note

- ☐ Settings you make here are used as the default settings for all applications.

Reference

For details about settings, see the printer driver Help.

Making printer settings from an application

You can make printer settings for a specific application.

To make printer settings for a specific application, open the [Printing Preferences] dialog box from that application. The following explains how to make settings for the WordPad application provided with Windows 2000.

1 On the [File] menu, click [Print...].

The [Print] dialog box appears.

2 Select the printer you want to use in the [Select Printer] list, and then click [Preferences].

3 Make the necessary settings, and then click [Apply] to start printing.

Note

- ☐ The procedure to open the [Printing Preferences] dialog box may vary depending on the application. For details, see the manuals provided with the application you use.
- ☐ Any settings you make in the procedure above are valid for the current application only.
- ☐ General users can change the properties displayed in the [Print] dialog box of an application. Settings made here are used as defaults when printing from this application.

Reference

For details about settings, see the printer driver Help.

Windows XP and Windows Server 2003/2003 R2 - Making Printer Settings

Making the printer default settings - the [Printers and Faxes] window

Important

- ☐ To change the printer default settings including option configuration settings, log on using an account that has Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default.
- ☐ You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.

1 On the [Start] menu, click [Printers and Faxes].

The [Printers and Faxes] window appears.

2 Click the icon of the printer you want to use.

3 On the [File] menu, click [Properties].

The printer properties dialog box appears.

4 Make the necessary settings, and then click [OK].

Note

- ☐ Settings you make here are used as the default settings for all applications.
- ☐ Do not make a setting for [Form to Tray Assignment].

Reference

For details about settings, see the printer driver Help.

Making the printer default settings - Printing Preferences

Important

- ☐ You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.

1 On the [Start] menu, click [Printers and Faxes].

The [Printers and Faxes] window appears.

2 Click the icon of the printer you want to use.

3 On the [File] menu, click [Printing Preferences...].

The [Printing Preferences] dialog box appears.

4 Make the necessary settings, and then click [OK].

Note

- ☐ Settings you make here are used as the default settings for all applications.

Reference

For details about settings, see the printer driver Help.

Making printer settings from an application

You can make printer settings for a specific application.

To make printer settings for a specific application, open the [Printing Preferences] dialog box from that application. The following explains how to make settings for the WordPad application provided with Windows XP.

1 On the [File] menu, click [Print...].

The [Print] dialog box appears.

2 Select the printer you want to use in the [Select Printer] list, and then click [Preferences].

3 Make the necessary settings, and then click [OK] to start printing.

Note

- ☐ The procedure to open the [Printing Preferences] dialog box may vary depending on the application. For details, see the manuals provided with the application you use.
- ☐ Any settings you make in the procedure above are valid for the current application only.
- ☐ General users can change the properties displayed in the [Print] dialog box of an application. Settings made here are used as defaults when printing from this application.

Reference

For details about settings, see the printer driver Help.

Windows Vista and Windows Server 2008 - Making Printer Settings

Making the printer default settings - the [Printers] window

Important

- ☐ To change the printer default settings including option configuration settings, log on using an account that has Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default.
- ☐ You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.

1 On the [Start] menu, click [Control Panel].

The [Control Panel] window appears.

2 Click [Printers] in "Hardware and Sound".

3 Right-click the icon of the printer you want to use, and then click the [Properties].

The printer properties dialog box appears.

4 Make the necessary settings, and then click [OK].

Note

- ☐ Settings you make here are used as the default settings for all applications.
- ☐ Do not make a setting for [Form to Tray Assignment].

Reference

For details about settings, see the printer driver Help.

Making the printer default settings - Printing Preferences

Important

- ☐ You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.

1 On the [Start] menu, click [Control Panel].

The [Control Panel] window appears.

2 Click [Printers] in “Hardware and Sound”.

3 Right-click the icon of the printer you want to use, and then click [Printing Preferences...].

The [Printing Preferences] dialog box appears.

4 Make the necessary settings, and then click [OK].

Note

- ☐ Settings you make here are used as the default settings for all applications.

Reference

For details about settings, see the printer driver Help.

Making printer settings from an application

You can make printer settings for a specific application.

To make printer settings for a specific application, open the [Printing Preferences] dialog box from that application. The following explains how to make settings for the WordPad application provided with Windows Vista.

1 On the [File] menu, click [Print...].

The [Print] dialog box appears.

2 Select the printer you want to use in the [Select Printer] list.

3 Make the necessary settings, and then click [Apply] to start printing.

Note

- ☐ The procedure to open the [Printing Preferences] dialog box may vary depending on the application. For details, see the manuals provided with the application you use.
- ☐ Any settings you make in the procedure above are valid for the current application only.
- ☐ General users can change the properties displayed in the [Print] dialog box of an application. Settings made here are used as defaults when printing from this application.

Reference

For details about settings, see the printer driver Help.

PostScript 3 - Setting Up for Printing

Windows 2000 - Accessing the Printer Properties

Making the printer default settings - The printer properties

2

Important

- ☐ To change the printer default settings including option configuration settings, log on using an account that has Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default.
- ☐ You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.

1 On the [Start] menu, point to [Settings], and then click [Printers].

The [Printers] window appears.

2 Click the icon of the printer you want to use.

3 On the [File] menu, click [Properties].

The printer properties dialog box appears.

4 Make the necessary settings, and then click [OK].

Note

- ☐ Settings you make here are used as the default settings for all applications.
- ☐ Do not make a setting for [Form to Tray Assignment].

Reference

For details about settings, see the printer driver Help.

Making the printer default settings - Printing Preferences

Important

- ☐ You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.

1 On the **[Start]** menu, point to **[Settings]**, and then click **[Printers]**.

The **[Printers]** window appears.

2 Click the icon of the printer you want to use.

3 On the **[File]** menu, click **[Printing Preferences...]**.

The **[Printing Preferences]** dialog box appears.

4 Make the necessary settings, and then click **[OK]**.

Note

- ☐ Settings you make here are used as the default settings for all applications.

Reference

For details about settings, see the printer driver Help.

Making printer settings from an application

You can make printer settings for a specific application.

To make printer settings for a specific application, open the **[Printing Preferences]** dialog box from that application. The following explains how to make settings for the WordPad application provided with Windows 2000.

1 On the **[File]** menu, click **[Print...]**.

The **[Print]** dialog box appears.

2 Select the printer you want to use in the **[Select Printer]** list.

3 Make the necessary settings, and then click **[Print]** to start printing.

Note

- ☐ The procedure to open the **[Printing Preferences]** dialog box may vary depending on the application. For details, see the manuals provided with the application you use.
- ☐ Any settings you make in the procedure above are valid for the current application only.
- ☐ General users can change the properties displayed in the **[Print]** dialog box of an application. Settings made here are used as defaults when printing from this application.

Reference

For details about settings, see the printer driver Help.

Windows XP and Windows Server 2003/2003 R2 - Making Printer Settings

Making the printer default settings - [Printers and Faxes] window

Important

- ☐ To change the printer default settings including option configuration settings, log on using an account that has Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default.
- ☐ You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.

1 On the [Start] menu, click [Printers and Faxes].

The [Printers and Faxes] window appears.

2 Click the icon of the printer you want to use.

3 On the [File] menu, click [Properties].

The printer properties dialog box appears.

4 Make the necessary settings, and then click [OK].

Note

- ☐ Settings you make here are used as the default settings for all applications.
- ☐ Do not make a setting for [Form to Tray Assignment].

Reference

For details about settings, see the printer driver Help.

Making the printer default settings - Printing Preferences

Important

- ☐ You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.

1 On the [Start] menu, click [Printers and Faxes].

The [Printers and Faxes] window appears.

2 Click the icon of the printer you want to use.

3 On the [File] menu, click [Printing Preferences...].

The [Printing Preferences] dialog box appears.

4 Make the necessary settings, and then click [OK].

Note

- ☐ Settings you make here are used as the default settings for all applications.

Reference

For details about settings, see the printer driver Help.

Making printer settings from an application

You can make printer settings for a specific application.

To make printer settings for a specific application, open the [Printing Preferences] dialog box from that application. The following explains how to make settings for the WordPad application provided with Windows XP.

1 On the [File] menu, click [Print...].

The [Print] dialog box appears.

2 Select the printer you want to use in the [Select Printer] list.

3 Make the necessary settings, and then click [Print] to start printing.

Note

- ☐ The procedure to open the [Printing Preferences] dialog box may vary depending on the application. For details, see the manuals provided with the application you use.
- ☐ Any settings you make in the procedure above are valid for the current application only.
- ☐ General users can change the properties displayed in the [Print] dialog box of an application. Settings made here are used as defaults when printing from this application.

Reference

For details about settings, see the printer driver Help.

Windows Vista and Windows Server 2008 - Making Printer Settings

Making the printer default settings - the [Printers] window

Important

- ☐ To change the printer default settings including option configuration settings, log on using an account that has Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default.
- ☐ You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.

1 On the [Start] menu, click [Control Panel].

The [Control Panel] window appears.

2 Click [Printers] in “Hardware and Sound”.

3 Right-click the icon of the printer you want to use, and then click the [Properties].

The printer properties dialog box appears.

4 Make the necessary settings, and then click [OK].

Note

- ☐ Settings you make here are used as the default settings for all applications.
- ☐ Do not make a setting for [Form to Tray Assignment].

Reference

For details about settings, see the printer driver Help.

Making the printer default settings - Printing Preferences

Important

- ☐ You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.

1 On the [Start] menu, click [Control Panel].

The [Control Panel] window appears.

2 Click [Printers] in “Hardware and Sound”.

3 Right-click the icon of the printer you want to use, and then click [Printing Preferences...].

The [Printing Preferences] dialog box appears.

4 Make the necessary settings, and then click [OK].

Note

- ☐ Settings you make here are used as the default settings for all applications.

Reference

For details about settings, see the printer driver Help.

Making printer settings from an application

You can make printer settings for a specific application.

To make printer settings for a specific application, open the [Printing Preferences] dialog box from that application. The following explains how to make settings for the WordPad application provided with Windows Vista.

1 On the [File] menu, click [Print...].

The [Print] dialog box appears.

2 Select the printer you want to use in the [Select Printer] list.

3 Make the necessary settings, and then click [Apply] to start printing.

Note

- ☐ The procedure to open the [Printing Preferences] dialog box may vary depending on the application. For details, see the manuals provided with the application you use.
- ☐ Any settings you make in the procedure above are valid for the current application only.
- ☐ General users can change the properties displayed in the [Print] dialog box of an application. Settings made here are used as defaults when printing from this application.

Reference

For details about settings, see the printer driver Help.

3. Other Print Operations

Form Feed

Use the form feed function to continue printing when a paper size or paper type error occurred.

This function can be performed using the control panel.

Important

- ☐ The tray cannot be changed if the following function is set:
 - Duplex Print to a tray that does not support duplex printing
 - Cover Sheet
- ☐ If the paper that is loaded is larger than the paper size specified in the printer driver, using the form feed function could result in a paper jam. Use form feed only if the paper is the same as or smaller than the paper size specified in the printer driver.

Performing Form Feed

Use the following procedure to perform form feed.

1 While an error message is displayed on the control panel, press the **[Stop/Start]** key.

2 Press **[▲]** or **[▼]** to select the tray, and then press the **[#Enter]** key.

Printing begins on paper from the selected tray.

Note

- ☐ If you want to print after adding paper to the tray, load the correct paper, and then press the **[Stop/Start]** key.
- ☐ If a tray with a smaller paper size is selected, the print job may be cut short, or other problems may occur.

Changing the Paper Input Setting

Use the following procedure to change the paper input setting of the tray and continue printing.

- 1** While an error message is displayed on the control panel, reload the tray you want to use with the correct paper.

If you reloaded the bypass tray, proceed to step **3**.

- 2** Press the **[Menu]** key, press **[▲]** or **[▼]** to select tray 1 or tray 2, and then press the **[#Enter]** key.

- 3** Press **[▲]** or **[▼]** to select the paper size, and then press the **[#Enter]** key.

- 4** Press **[▲]** or **[▼]** to select the paper type, and then press the **[#Enter]** key.

Printing starts.

Note

- ☐ The paper input settings you specify here become the printer's default settings.
- ☐ If you want to print on custom size paper, see Hardware Guide for details about how to specify custom size paper.

Canceling a Print Job

Use the following procedure to cancel a print job that is related to the printer error occurred.

- 1** Press the **[Job Reset]** key.

- 2** Press the **[#Enter]** key.

Canceling a Print Job

This section gives instruction to stop printing from the control panel or computer.

Canceling a Print Job Using the Control Panel

You can cancel a print job using the control panel, if transferring print jobs is not completed.

- 1** Press the **[Job Reset]** key.
- 2** Press the **[#Enter]** key.

3

Windows - Canceling a Print Job from the Computer

You can cancel a print job from the computer if the transferring print job is not completed.

- 1** Double-click the printer icon on the Windows task tray.

A window appears, showing all print jobs currently queued for printing. Check the current status of the job you want to cancel.

- 2** Select the name of the job you want to cancel.
- 3** On the **[Document]** menu, click **[Cancel Printing]**.

Note


- ☐ In Windows XP and Windows Server 2003/2003 R2, click **[Cancel]** on the **[Document]** menu.
- ☐ In Windows 2000/Vista and Windows Server 2008, you can also open the print job queue window by double-clicking the printer icon in the **[Printers]** window (the **[Printers and Faxes]** window under Windows XP and Windows Server 2003/2003 R2).
- ☐ You cannot stop printing data that has already been processed. For this reason, printing may continue for a few pages after you cancel printing.
- ☐ A print job containing a large volume of data may take considerable time to stop.

Collate

Use the Collate function to print documents into page-ordered sets.

❖ Collate

Output can be assembled as sets in sequential order.

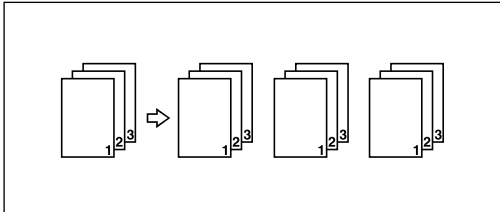

Note

- ☐ If Auto Continue occurs on the first set, the Collate will be canceled.
- ☐ If a form feed occurs on the first set, the Collate will be canceled.

Reference

For details about printing method, see the printer driver Help.

Cover

Use the Cover function to insert cover sheets using paper in a specified tray.

Note

- ☐ The cover sheet's size and orientation must be the same as those of the body paper.
- ☐ This function is available only when using the PCL printer driver.

Reference

For details about printing methods, see the printer driver Help.

Watermark

Use the Watermark function to print watermark text.

Note

- ☐ If the watermark size is larger than the paper size, watermarks cannot be printed properly.

Reference

For details about the setting method, see the printer driver Help.

Manual Duplex

Use the manual duplex printing function to print on both sides of sheets.

Important

- ☐ This function is only available for the SP C231N model printer.
- ☐ This function is only available for PCL5c and PCL6.
- ☐ When printing on the other side of sheets, reload the paper into Tray 1.

Note

- ☐ If you select **[Auto Tray Select]** when performing duplex printing, the printer searches for an appropriate tray for the first page only. All subsequent pages will be printed using that tray.
- ☐ When you print a document whose page count is an odd number, a blank page is printed first. This blank page is the last page of the document. When you start printing on the other side of sheets, include the sheet containing this blank page in the bundle of paper.

When a print job that contains an even number of pages is completed, a dialog box prompting you to reload the paper appears on Smart Organizing Monitor.

Follow the instructions on the screen to start printing on the other side of sheets.

Place the original face down into Tray 1, and then press the **[Stop/Start]** key to start printing the other side.

Memory Capacity and Paper Size

This section explains about the printable paper sizes according to the printer's memory capacity.

❖ One-sided printing - 600 dpi Fine (4 bits)

- 128 MB (standard)
Printing is possible with all paper sizes.

❖ Duplex printing - 600 dpi Fine (4 bits)

- 128 MB (standard)
With the PCL printer driver:
Printing is possible with A4 (210 x 297 mm) / Letter (8 1/2 x 11 inches) or smaller paper sizes.
With the PS3 printer driver:
Complex images might fail to print out properly on some paper sizes.
- 384 MB (standard and additional 256 MB)
Printing is possible with all paper sizes.

Note

- ☐ To print an A3, 11 " × 17 ", B4, or 8K size document, you must first select the **[Enable Large Papers]** check box on the **[Advanced Options]** tab in the printer driver's properties dialog box. The document is reduced to fit the specified paper size, and then printed.

Reference

For details about the paper size, see Hardware Guide.


4. Direct Printing from a Digital Camera (PictBridge)

What Is PictBridge?

Important

- ❑ This function is only available for the SP C232DN model printer.

You can connect a PictBridge-compatible digital camera to this printer using a USB cable. This allows you to print photographs taken using the digital camera directly by operating the digital camera.

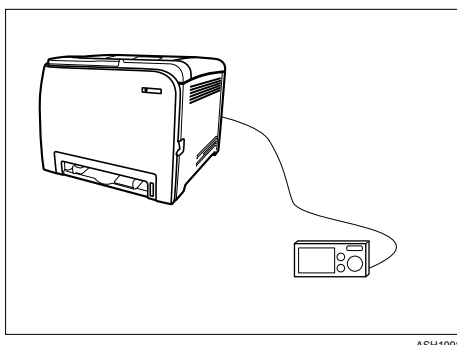

ASH109S

Note

- ❑ Check your digital camera is PictBridge-compatible.
- ❑ Up to 999 images can be sent from the digital camera to the printer during one print transaction. If an attempt is made to send more images, an error message is sent to the camera and printing fails.
- ❑ Since printing conditions are specified on the digital camera, specifiable parameters depend on the digital camera. For details, see the manuals provided with the digital camera.
- ❑ This function is compatible with USB 1.1.

PictBridge Printing

Use the following procedure to start PictBridge printing on this printer.


Important

- ☐ Memory overflow errors can occur when printing a large-pixel image using 4-up printing. To prevent memory overflow errors, add the optional memory.
- ☐ Do not disconnect the USB cable while data is being sent. If you do, printing will fail.

1 Check the printer and the digital camera are both turned on.

2 Connect a USB cable between the USB host interface board installed on the printer and digital camera.

The **Ready** indicator on the printer flashes for several seconds and then stays lit. This indicates the printer recognizes the digital camera as a PictBridge device.

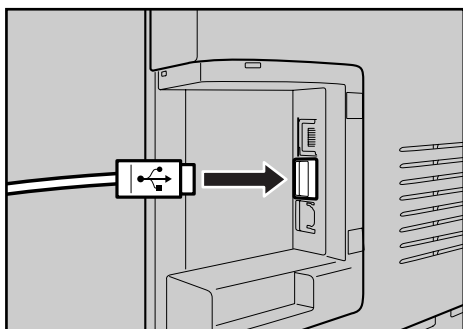

ASH108S

3 On your digital camera, select the images you want to print, and then specify the printing conditions.

4 The printer receives settings from the digital camera and starts printing.

Note

- ☐ Since printing conditions are specified on the digital camera, specifiable parameters depend on the digital camera. For details, see the manuals provided with the digital camera.
- ☐ Some digital cameras require settings for manual PictBridge operation. For details, see the manual provided with the digital camera.
- ☐ Some digital cameras require to turn the power switch off for a manual PictBridge operation. For details, see the manual provided with the digital camera.
- ☐ Some digital cameras need to be switched off when connecting to the printer. For details, see the manual provided with the digital camera.

Reference

For details about how to stop printing data, see p.30 “Canceling a Print Job”.

What Can Be Done on This Printer

This printer can perform the following functions using its PictBridge feature.

The settings available for these functions are as follows:

- Single image printing
- Selected image printing
- All image printing
- Index printing
- Copies
- Paper size
- N-up layout

Note

- ☐ The setting parameters and their names may vary depending on the digital camera. For details, see the manuals provided with the digital camera.

Paper Size

Use this function to print on paper with the size specified on the digital camera.

Paper size name	Actual size
A4	210 × 297 mm (8.3 × 11.7 in)
Letter (8 1/2" × 11")	215.9 × 279.4 mm (8 1/2 × 11 in)

Note

- ☐ For details about specifying undefined sizes, see Hardware Guide.

Image Print Size

Use this function to print images with the size specified on the digital camera.

Note

- ☐ This functions default setting is fit to paper.
- ☐ Scale factor depends on image size and paper size.
 - Scale Factor: 25% - 400%.

Exiting PictBridge

Use the following procedure to quit the PictBridge mode.

Important

- ☐ Do not disconnect the USB cable while data is being sent to the printer. If you do, printing will fail.

- 1** Check the printer's Ready indicator is lit.
- 2** Disconnect the USB cable from the printer.

When PictBridge Printing Does Not Work

This section explains likely causes and possible solutions for problems that can occur when PictBridge printing.

Problem	Cause	Solution
PictBridge is not available.	There is a problem with the USB connection or the PictBridge settings.	Use the following procedure to check the connection and settings: ① Disconnect and then reconnect the USB cable. ② Check the PictBridge settings are enabled. ③ Disconnect the USB cable, and then turn off the printer. Turn the printer back on. When the printer has fully booted up, reconnect the USB cable.
When two or more digital cameras are connected, the second and subsequent cameras are not recognized.	You have connected multiple digital cameras.	Connect one digital camera only. Do not connect multiple cameras.
Printing is disabled.	The specified number exceeds the maximum number that can be printed at a time.	The maximum specifiable print quantity at a time is 999. Respecify the quantity to 999 or less, and then retry printing.
Printing is disabled.	There is no paper of the specified size remaining.	There is no paper of the specified size remaining. If you have to use paper that is not of the specified size, perform Form Feed. To cancel printing, perform Job Cancel.
Printing is disabled.	The paper size setting for this tray cannot be printed on the printer.	Select the paper size setting that can be printed on the printer.

5. Making Printer Settings Using the Control Panel

Menu Chart

This section lists the parameters included in each menu

❖ Paper Input

Paper Size
Paper Type
Tray Priority

❖ List/Test Print

Config. Page
Menu List
Test Page
PCL Config. Page
PS Config. Page

❖ Maintenance

Color Dens/Reg
Registration

❖ System

Auto Continue
Copies
Sub Paper Size
Duplex
Blank Pages
Energy Saver 1
Energy Saver 2
B&W Page Detect
Auto Email Ntfy
System Defaults
Print Error Pg.
Anti-Humidity

❖ Host Interface

USB Timeout
Network Timeout
Network Setup
USB Speed

❖ PCL Menu

Orientation
Form Lines
Font Number
Point Size
Font Pitch
Symbol Set
Courier Font
Ext. A4 Width
Append CR to LF
Resolution

❖ PS Menu

Resolution
Color Profile

❖ Language

English
German
French
Italian
Dutch
Swedish
Norwegian
Danish
Spanish
Finnish
Portuguese
Czech
Polish
Hungarian
Russian
Simp. Chinese

**Note**

- ☐ This items above might not appear on the display, according to machine model.


Paper Input Menu

This section explains about paper settings on the Paper Input menu such as paper sizes and types on each tray.

Changing the Paper Input Menu

Use the following procedure to change the tray priority.

- 1** Press the **[Menu]** key.

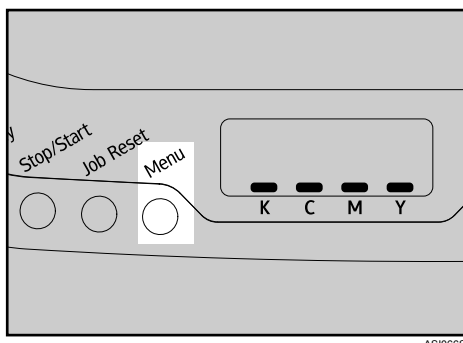

The menu screen appears.

- 2** Press **[▲]** or **[▼]** to display **[Paper Input]**, and then press the **[#Enter]** key.
- 3** Press **[▲]** or **[▼]** to display **[Tray Priority]**, and then press the **[#Enter]** key.
- 4** Press **[▲]** or **[▼]** to select the tray you want to use.
- 5** Press the **[#Enter]** key.

The selected item is displayed for two seconds with an asterisk, and then the **[Tray Priority]** screen appears.

- 6** Press the **[Menu]** key to return to the initial screen.

Paper Input Menu Parameters

This section explains about parameters that can be set on the Paper Input menu.

❖ Paper Size: Tray 1

Specify the paper size for tray 1.

Default: **220-240V** A4 (210 x 297), **120V** 8 1/2 x 11

- A4 (210 x 297), A5 (148 x 210), B5 JIS(182x257), A6 (105 x 148), 8 1/2 x 14, 8 1/2 x 13, 8 1/2 x 11, 8 1/4 x 13, 8 x 13, 7 1/4 x 10 1/2, C5 Env(162x229), C6 Env(114x162), DL Env(110x220), 16K (195 x 267), Custom Size

❖ **Paper Size: Tray 2**

Specify the paper size for tray 2.

Default: **220-240V** A4 (210 x 297), **120V** 8 1/2 x 11

- A4 (210 x 297), 8 1/2 x 11

❖ **Paper Size: Bypass Tray**

Specify the paper size for the bypass tray.

Default: **220-240V** A4 (210 x 297), **120V** 8 1/2 x 11

- A4 (210 x 297), A5 (148 x 210), A6 (105 x 148), B5 JIS(182x257), B6 JIS(128x182), 8 1/2 x 14, 8 1/2 x 13, 8 1/2 x 11, 8 1/4 x 13, 8 x 13, 7 1/4 x 10 1/2, 5 1/2 x 8 1/2, 4 1/8 x 9 1/2, 3 7/8 x 7 1/2, C5 Env(162x229), C6 Env(114x162), DL Env(110x220), 16K (195 x 267), Custom Size

❖ **Paper Type: Tray 1**

Specify the paper type for tray 1.

Default : Plain Paper 1

- Thin Paper, Plain Paper 1, Plain Paper 2, Recycled Paper, Color Paper, Letterhead, Preprinted, Prepunched, Thick Paper 1, Bond Paper, Cardstock, Label Paper, Envelope

❖ **Paper Type: Tray 2**

Specify the paper type for tray 2.

Default : Plain Paper 1

- Thin Paper, Plain Paper 1, Plain Paper 2, Recycled Paper, Color Paper, Letterhead, Preprinted, Prepunched

❖ **Paper Type: Bypass Tray**

Specify the paper type for the bypass tray.

Default: Plain Paper 1

- Thin Paper, Plain Paper 1, Plain Paper 2, Recycled Paper, Color Paper, Letterhead, Preprinted, Prepunched, Thick Paper 1, Bond Paper, Cardstock, Label Paper, Envelope

❖ **Tray Priority**

The tray selected here is used when no tray is specified for a print job.

[Tray 2] is available only when the optional paper feed unit is attached to the printer. It is recommended that you load paper of the size and orientation you use most frequently in the tray selected in **[Tray Priority]**.

Default : Tray 1

- Tray 1
- Tray 2
- Bypass Tray

📌 **Note**

❑ JIS stands for “Japanese Industrial Standard”.

🔍 **Reference**

For details about the type of paper loaded in each tray, see Hardware Guide.

List/Test Print Menu

You can print lists of configurations on printer or the paper printings. Also, you can check the types and characters of all the printable fonts.

Printing the Configuration Page


Use the following procedure to print the configuration page.

Important

- ☐ The configuration page is printed on A4 or Letter (8¹/₂ " × 11 ") size paper from the priority tray. Load this size of paper into the priority tray before printing the configuration page.

1 Press the **[Menu]** key.

5

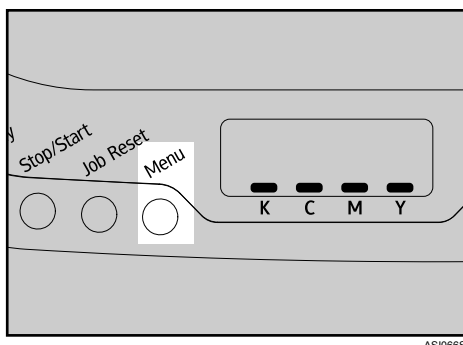

ASI066S

The menu screen appears.

2 Press **[▲]** or **[▼]** to display **[List/Test Print]**, and then press the **[#Enter]** key.

3 Press **[▲]** or **[▼]** to display **[Config. Page]**, and then press the **[#Enter]** key.

The configuration page is printed. The **[List/Test Print]** screen appears on completion of printing.

4 Press the **[Menu]** key to return to the initial screen.

Note

- ☐ If you start configuration page printing when appropriate paper is not loaded, an error message appears. If this happens, load appropriate paper in a tray, and then perform a form feed, or cancel the job.

Reference

For details about the items displayed on the configuration page, see p.85 "Reading the Configuration Page".

List/Test Print Menu Parameters

This section explains about parameter that can be set on the List/Test Print menu.

❖ **Config. Page**

Prints the current configurations and general information of the printer.

❖ **Menu List**

Prints the menu list showing all available menus.

❖ **Test Page**

Prints a test page for checking the printing condition. The test page contains network settings and counter information.

❖ **PCL Config. Page**

Prints the current configuration and installed PCL font list.

❖ **PS Config. Page**

Prints the current configuration and installed PostScript font list.

 **Note**

- ☐ Due to print layout limitations, the menu order of the menu list might not match to that of the display panel.

Maintenance Menu


You can set print conditions such as color registration and print starting position.

Adjusting the Color Registration

After moving the printer, printing on thick paper, or printing repeatedly for some time, color degradation may occur. By performing color registration adjustment, you can restore optimum print quality.

If documents show color degradation after the printer is moved, perform automatic color adjustment.

- 1** Press the **[Menu]** key.

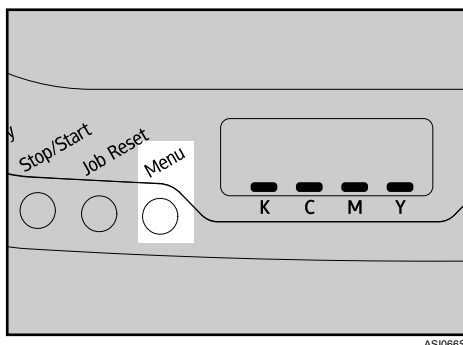

The menu screen appears.


- 2** Press **[▲]** or **[▼]** to display **[Maintenance]**, and then press the **[#Enter]** key.
- 3** Press **[▲]** or **[▼]** to display **[Color Dens/Reg]**, and then press the **[#Enter]** key.
- 4** On the confirmation screen, press the **[#Enter]** key.
Automatic color adjustment begins.
A confirmation message appears when complete.
- 5** Press the **[Menu]** key to return to the initial screen.

Adjusting Tray Registration

After installing the optional paper feed unit, you can adjust the registration of tray 2 if necessary.

Registration adjustment is not normally required, but can be beneficial in some cases.


- 1** Press the **[Menu]** key.

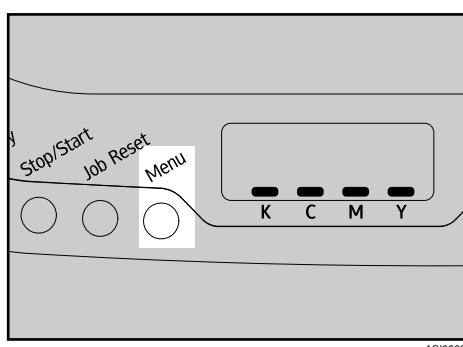

ASI066S

The menu screen appears.


- 2** Press **[▲]** or **[▼]** to display **[Maintenance]**, and then press the **[#Enter]** key.
- 3** Press **[▲]** or **[▼]** to display **[Registration]**, and then press the **[#Enter]** key.
- 4** Press **[▲]** or **[▼]** to display **[Prt. Test Sheet]**, and then press the **[#Enter]** key.
- 5** Press the **[#Enter]** key to print the test sheet to preview the settings.
- 6** Confirm the position of the image on the test sheet, and then adjust the registration value.

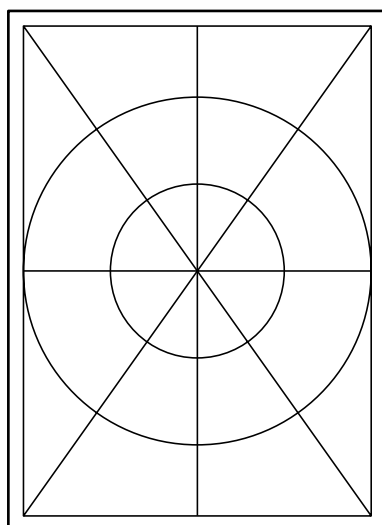

In this setting, adjust the margins of the test sheet so that they are equal in size.

- 7** Press **[▲]** or **[▼]** to display **[Adjustment]**, and then press the **[#Enter]** key.
- 8** Press **[▲]** or **[▼]** to select the parameter you want to adjust, and then press the **[#Enter]** key.
- 9** Press **[▲]** or **[▼]** to set the registration value (mm).

Increase the value to shift the print area in the positive direction, and decrease to shift in the negative direction.

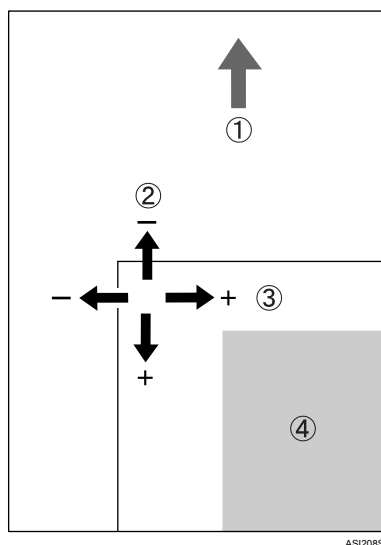

- ① : Feed Direction
- ② : Vertical Adjustment
- ③ : Horizontal Adjustment
- ④ : Print Area

Pressing **[▲]** or **[▼]** makes the value increase or decrease by 1.0 mm steps.

- 10** Press the **[#Enter]** key.
The display returns to the registration menu screen.
- 11** Press **[▲]** or **[▼]** to display **[Prt. Test Sheet]**, and then press the **[#Enter]** key.
- 12** Press the **[#Enter]** key to print the test sheet to confirm the adjustment result.
- 13** Press the **[Menu]** key to return to the initial screen.

Maintenance Menu Parameters

This section explains about parameters that can be set on the Maintenance menu.

❖ Color Dens/Reg

You can adjust color density and registration automatically.

❖ Registration

You can adjust the printing position of tray 2.

- **Prt. Test Sheet**
You can print the registration test sheet.
- **Adjustment**
Select the start position for printing on a page.
Horiz.:Tray 2
Vert.:Tray 2

Note

- ☐ The registration test sheet is printed on A4 or Letter (8 1/2 " × 11 ") size paper from the priority tray. Load this size of paper into the priority tray before printing the registration test sheet.


System Menu

You can set basic functions required to use the printer. The printer can be used on factory default, but the configuration can be changed depending on the condition of the user. The changed condition holds even if the printer is turned off.

Changing the System Menu

Use the following procedure to change the settings for Energy Saver timer.

- 1** Press the **[Menu]** key.

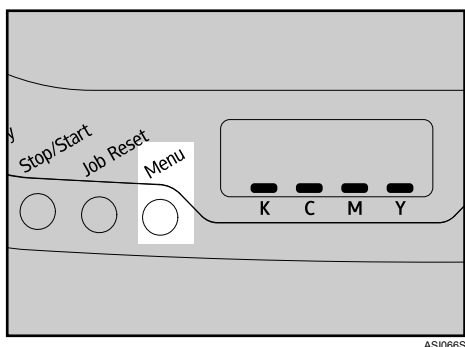

The menu screen appears.

- 2** Press **[▲]** or **[▼]** to display **[System]**, and then press the **[#Enter]** key.
- 3** Press **[▲]** or **[▼]** to display **[Energy Saver 2]**, and then press the **[#Enter]** key.
- 4** Press **[▲]** or **[▼]** to display **[E. Saver2 Timer]**, and then press the **[#Enter]** key.
- 5** Select the lead time needed to switch to the Energy Saver mode using **[▲]** or **[▼]**.
- 6** Press the **[#Enter]** key.
The selected lead time is displayed for two seconds with an asterisk, and then the **[Energy Saver 2]** screen appears.
- 7** Press the **[Menu]** key to return to the initial screen.

System Menu Parameters

This section explains about parameters that can be set on the System menu.

❖ Auto Continue

You can make the Auto Continue setting. When set to **[On]**, printing continues in ten seconds if a system error occurs.

However, even if you set to **[On]** and certain errors occur, the current job may be canceled, and the printer automatically performs the next queued job.

Default: Off

- Off
- On

❖ Copies

You can specify the number of pages to print.

This setting is disabled if the number of pages to print is specified by command or the printer driver.

- 1 - 999

❖ Sub Paper Size

You can select **[Off]** or **[Auto]** to enable the Sub Paper Size function. When you select **[Auto]**, the printer uses an alternative paper size if the currently specified paper is not loaded. When you select **[Off]**, the printer uses any size paper in the currently specified paper tray.

This setting is effective only for jobs that use A4 or Letter size paper.

Default: Off

- Off
- Auto

❖ Duplex

You can specify whether or not to print on both sides of a sheet.

Default: Off

- Off
- Short Edge Bind
- Long Edge Bind

❖ Blank Pages

You can specify whether or not to print blank pages.

When cover sheet printing is enabled from the printer driver, cover sheets are inserted even if you select **[Do not print]**.

Default: Print

- Print
- Do not print

❖ **Energy Saver 1**

You can specify whether or not to switch to Low Power Standby mode.

Low Power Standby mode lowers the fusing unit temperature.

When the printer switches to Low Power Standby mode, a message appears on the control panel, or the control panel indicators and display appear unlit. The Ethernet indicator remains lit.

Default: On

- On
- Off

❖ **Energy Saver 2**

You can specify the number of minutes the Energy Saver mode is applied.

The Energy Saver mode reduces electric power consumption.

- E.Saver2 On/Off

You can specify whether or not to switch to the Energy Saver mode.

When the printer switches to Energy Saver mode, the indicators and panel display are unlit; however, the Ethernet indicator remains lit.

Default: On

- On
- Off
- E. Saver2 Timer

Select the lead time needed to switch to Energy Saver mode.

Default: 15 minutes

- 5 minutes
- 15 minutes
- 30 minutes
- 60 minutes

❖ **B&W Page Detect**

You can specify whether or not to recognize black-and-white images.

Use the black-and-white recognition function to print all monochrome pages in monochrome mode even if color printing is specified.

Default: On

- On
- Off

❖ Auto Email Ntfy

You can specify whether or not to send an error message to a preset e-mail address when an error occurs in the printer.

Default: Off

- On
- Off

🔔 Important

- ☐ After changing the setting, turn off the power of the printer briefly, and then turn it on again.

🔍 Reference

For information, see Web Image Monitor Help.

❖ System Defaults

You can return the printer settings to their factory-set defaults.

❖ Print Error Pg.

You can specify whether or not to print error logs on the configuration page.

Default: Off

- On
- Off

❖ Anti-Humidity

You can set the printer to produce prints in consistent quality even when humidity is high.

Default: Off

- Off
- Mode 1
Select this mode if printouts are blurred.
- Mode 2
Select this mode if printouts are curled and/or blurred. Note that if you select this mode, the first print takes longer than subsequent prints to complete.
- Mode 3
Select this mode if printouts are still curled and/or blurred even when prints are made in **[Mode 2]**. Note that this mode requires more time to produce the first print than **[Mode 2]**.


Host Interface Menu

You can set configurations about network connections and communication. The changed configuration holds even if the printer is turned off.

Changing the Host Interface Menu

Use the following procedure to change the settings for Network Setup.

- 1** Press the **[Menu]** key.

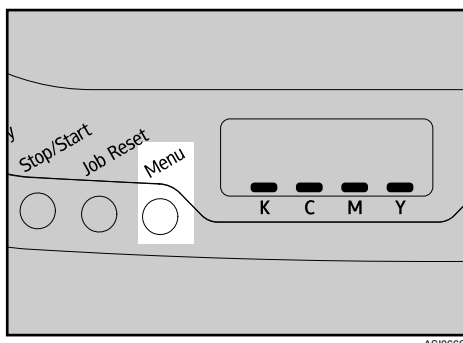

ASI066S

The menu screen appears.

- 2** Press **[▲]** or **[▼]** to display **[Host Interface]**, and then press the **[#Enter]** key.
- 3** Press **[▲]** or **[▼]** to display **[Network Setup]**, and then press the **[#Enter]** key.
- 4** Press **[▲]** or **[▼]** to display **[DHCP]**, and then press the **[#Enter]** key.
- 5** Press **[▲]** or **[▼]** to display **[On]** or **[Off]** according to the network environment, and then press the **[#Enter]** key.
If you select **[On]**, proceed to step **6**.
- 6** Press **[▲]** or **[▼]** to display **[IP Address]**, and then press the **[#Enter]** key.
- 7** Specify the printer's IP address using **[▲]** or **[▼]** keys, and then press the **[#Enter]** key.
 - To go to the next field, press the **[#Enter]** key.
 - To go back to the previous field, press the **[Escape]** key.
- 8** Set the subnet mask and gateway address.
Set values for each setting following the same procedure as for the IP address.
- 9** Press the **[Menu]** key to return to the initial screen.

Host Interface Menu Parameters

This section explains parameters that can be set on the Host Interface menu.

❖ USB Timeout

You can specify how many seconds the printer should wait before ending a print job that is receiving via USB. If printing is frequently interrupted by data from other ports, increase the timeout period.

Default: 60 seconds

- 15 seconds
- 60 seconds
- 300 seconds

❖ Network Timeout

You can specify how many seconds the printer should wait before ending a print job that is receiving via Ethernet. If printing operation is frequently interrupted by data from other ports, you can increase the timeout period.

Default: 60 seconds

- 15 seconds
- 60 seconds
- 300 seconds

❖ Network Setup

You can make network-related settings.

- DHCP
Select whether to set the IPv4 address automatically or manually.
Default: On
 - On
 - Off

Important

- ☐ After changing the setting, turn off the power of the printer briefly, and then turn it on again.

- MAC Address
Check the MAC address.
- IP Address
Specify the IPv4 address.
When **[DHCP]** is set to **[On]**, the IP address cannot be changed.
To change it, set **[DHCP]** to **[Off]**.
Contact your network administrator for information about the network configuration.
Default: 192.0.0.192
- Subnet Mask
Specify the subnet mask.
When **[DHCP]** is set to **[On]**, the subnet mask cannot be changed.
To change it, set **[DHCP]** to **[Off]**. Contact your network administrator for information about the network configuration.
Default: 255.255.255.0

- Gateway Address
Specify the gateway address.
When **[DHCP]** is set to **[On]**, the gateway address cannot be changed.
To change it, set **[DHCP]** to **[Off]**.
Contact your network administrator for information about the network configuration.
Default: 192.0.0.192
- Frame Type (NW)
Default: Auto Select
 - Auto Select
 - Ethernet II
 - Ethernet 802.2
 - Ethernet 802.3
 - Ethernet SNAP
- Active Protocol
Select active protocols.
 - TCP/IP
Default: Active
Active, Not Active
 - NetWare
Default: Active
Active, Not Active
 - AppleTalk
Default: Active
Active, Not Active
- Ethernet Speed
Select the network speed to operate the printer.
Default: Auto Select
 - Auto Select
 - 10Mbps Half D.
 - 10Mbps Full D.
 - 100Mbps Half D.
 - 100Mbps Full D.

❖ USB Speed

You can make setting for USB Host interface.
Default: Auto Select

- Full Speed
- Auto Select

Important

- ☐ After changing the setting, turn off the power of the printer briefly, and then turn it on again.
- ☐ This function is only available for the SP C232DN model printer.


PCL Menu

You can set conditions when using PCL for printing.

Changing the PCL Menu

Use the following procedure to change the settings for Orientation.

- 1** Press the **[Menu]** key.

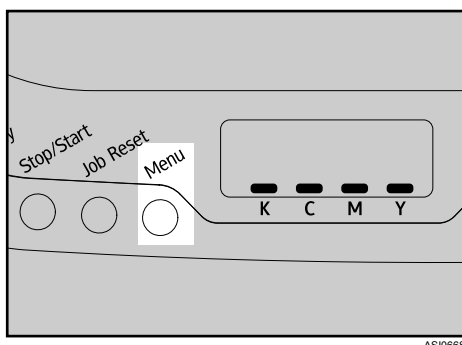

The menu screen appears.

- 2** Press **[▲]** or **[▼]** to display **[PCL Menu]**, and then press the **[#Enter]** key.
- 3** Press **[▲]** or **[▼]** to display **[Orientation]**, and then press the **[#Enter]** key.
- 4** Press **[▲]** or **[▼]** to select the orientation, and then press the **[#Enter]** key.

The selected orientation is displayed for two seconds with an asterisk, and then the **[PCL Menu]** screen appears.

- 5** Press the **[Menu]** key to return to the initial screen.

PCL Menu Parameters

This section explains about parameters that can be set on the PCL Menu.

❖ Orientation

You can select the page orientation.

Default: Portrait

- Portrait
- Landscape

❖ Form Lines

You can specify the number of lines per page between 5 and 128.

Default: **220-240V** 64, **120V** 60

❖ Font Number

You can specify the ID of the default font you want to use.

Default: 0

❖ **Point Size**

You can specify the point size you want to use for the default font between 4 and 999.75 in 0.25 increments.

Default: 12.00 points

❖ **Font Pitch**

You can specify the number of characters per inch you want to use for the default font between 0.44 and 99.99 in 0.01 increments.

This setting is effective only for fixed-space fonts.

Default: 10.00 pitch

❖ **Symbol Set**

You can specify the character set for the default font. Available sets are as follows: Roman-8, Roman-9, ISO L1, ISO L2, ISO L5, PC-8, PC-8 D/N, PC-850, PC-852, PC-858, PC8-TK, Win L1, Win L2, Win L5, Desktop, PS Text, VN Intl, VN US, MS Publ, Math-8, PS Math, VN Math, Pifont, Legal, ISO 4, ISO 6, ISO 11, ISO 15, ISO 17, ISO 21, ISO 60, ISO 69, Win 3.0, MC Text, ISO L6, ISO L9, , PC-1004, Win Balt

Default: PC8-TK

❖ **Courier Font**

You can select a courier-type font.

Default: Regular

- Regular
- Dark

❖ **Ext. A4 Width**

You can extend the width of the printable area of A4 portrait paper by reducing side margin width.

Default: Off

- Off
- On

❖ **Append CR to LF**

You can specify whether or not to append a CR code to each LF code to print text data clearly.

Default: Off

- Off
- On

❖ **Resolution**

You can specify the print resolution in dots per inch.

600x600 dpi 1bit

- 600x600 dpi 1bit
- 600x600 dpi 2bit
- 600x600 dpi 4bit


PS Menu

You can set conditions when using PostScript for printing.

Changing the PS Menu

Use the following procedure to change the settings for Resolution.

- 1** Press the **[Menu]** key.

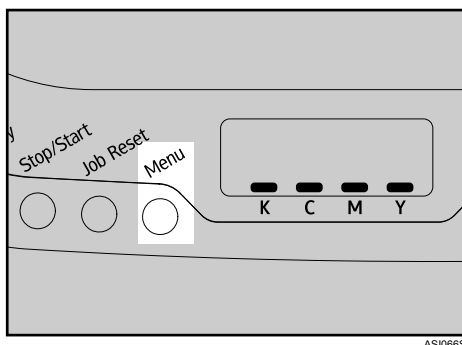

The menu screen appears.

- 2** Press **[▲]** or **[▼]** to display **[PS Menu]**, and then press the **[#Enter]** key.
- 3** Press **[▲]** or **[▼]** to display **[Resolution]**, and then press the **[#Enter]** key.
- 4** Press **[▲]** or **[▼]** to select the resolution, and then press the **[#Enter]** key.
The selected resolution is displayed for two seconds with an asterisk, and then the **[PS Menu]** screen appears.
- 5** Press the **[Menu]** key to return to the initial screen.

PS Menu Parameters

This section explains about parameters that can be set on the PS Menu.

❖ Resolution

You can specify the print resolution in dots per inch.

Default: 600x600 dpi 1bit

- 600x600 dpi 1bit
- 600x600 dpi 2bit
- 600x600 dpi 4bit

❖ Color Profile

You can select the color profile.

Default: Solid Color

- Off
- Solid Color
- Presentation
- Photographic


Language Menu

You can set language displayed on the menu.

Changing the Language Menu

Use the following procedure to change the language.

- 1** Press the **[Menu]** key.

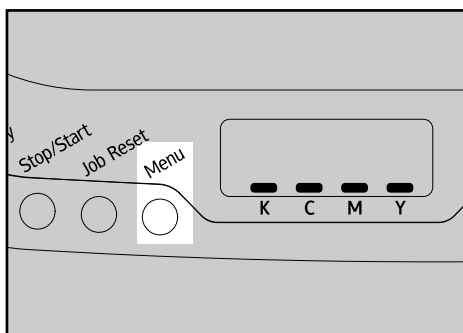

ASI066S

The menu screen appears.

- 2** Press **[▲]** or **[▼]** to display **[Language]**, and then press the **[#Enter]** key.

- 3** Press **[▲]** or **[▼]** to select the language, and then press the **[#Enter]** key.

The selected item is displayed for two seconds with an asterisk, and then the **[Language]** screen appears.

- 4** Press the **[Menu]** key to return to the initial screen.

Language Menu Parameters

You can select the language you want to use. Available languages are as follows:
 English, German, French, Italian, Dutch, Swedish, Norwegian, Danish, Spanish, Finnish, Portuguese, Czech, Polish, Hungarian, Russian, Simp. Chinese.

If you select Czech, Polish, Hungarian, Russian, Simplified Chinese, the control panel uses English as the display language. The configuration page and test page are printed using the language selected here.

Default: English

6. Monitoring and Configuring the Printer

Using Web Image Monitor

Using Web Image Monitor, you can check the printer status and change settings.

❖ Available operations

The following operations can be remotely performed using Web Image Monitor from a client computer:

- Display printer status and supply information
- Displaying the counter information
- Making settings for paper loaded into each input tray
- Making input tray settings
- Printing a list of printer configuration
- Making network protocol settings

❖ Configuring the printer

To perform the operations from Web Image Monitor, TCP/IP is required. After the printer is configured to use TCP/IP, operations from Web Image Monitor become available.

❖ Recommended Web browser

- Windows:
Internet Explorer 5.5 SP2 or higher
Firefox 1.0 or higher
- Mac OS X:
Firefox 1.0 or higher
Safari 1.0, 1.2, 2.0 or higher

Note

- ☐ If the previous versions of the Web browser above are used or JavaScript and cookies are not enabled with the Web browser used, display and operation problems may occur.
- ☐ If you are using a proxy server, change the Web browser settings. Contact your network administrator for information about the settings.
- ☐ The previous page may not appear even after the back button of the Web browser is clicked. If this happens, click the refresh button of the Web browser.
- ☐ Updating the printer information is not automatically performed. Click **[Refresh]** in the main area to update the printer information.
- ☐ We recommend using Web Image Monitor in the same network.
- ☐ You cannot access the printer from outside the firewall.
- ☐ When using the printer under DHCP, the IPv4 address may be automatically changed by the DHCP server settings.
- ☐ If the HTTP port is disabled, connection to the printer using the printer's URL cannot be established.

Displaying Top Page


This section explains how to display Web Image Monitor and its Top Page.

Displaying Top Page of Web Image Monitor

- 1** Start your Web browser.
- 2** Enter “http://(printer's address)/” in the address bar of the Web browser.
Top Page of Web Image Monitor appears.
If the printer's host name has been registered on the DNS server, you can enter it.

Top Page

Every Web Image Monitor page is divided into the following areas:

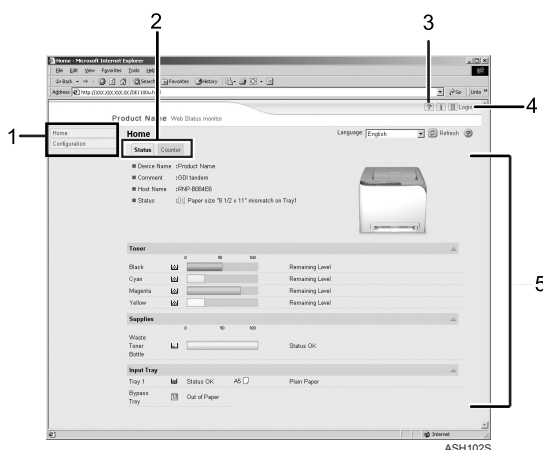

1. Menu area

When you select **[Configuration]**, content of the **[Configuration]** page appears on the main area.

2. Tab area

Contains menus for the Status and Counter modes and tabs for switching between them.

3. Help

Use Help to view help file contents.

4. Login

Click to log on in administrator mode.

5. Main area

Displays the contents of the item selected in the menu area.

Machine information in the main area is not automatically updated. Click **[Refresh]** at the upper right in the main area to update the machine information. Click the Web browser's **[Refresh]** button to refresh the entire browser screen.

Displaying the Printer Status

Top page of Web Image Monitor contains two tabs: the **[Status]** tab and **[Counter]** tab.

❖ **[Status] tab**

You can check the status of monitored printers.

- Displays the general information of the printer, such as the model name, location and the status.
- Toner
Displays the levels of remaining toner.
- Supplies
Displays the status of the consumables.
- Input Tray
Displays the input tray status and paper settings.

❖ **[Counter] tab**

You can check the total number of pages printed to date.
The following counter information is displayed.

- Total
- Black & White
- Full Color
- 2 Sided (Two Sided Print)


About Menu and Mode

There are two modes available with Web Image Monitor: user mode and administrator mode.

The available menus on the **[Configuration]** page differ depending on the mode you are logging on.

❖ **User Mode**

In this mode, users can view settings but cannot change them.

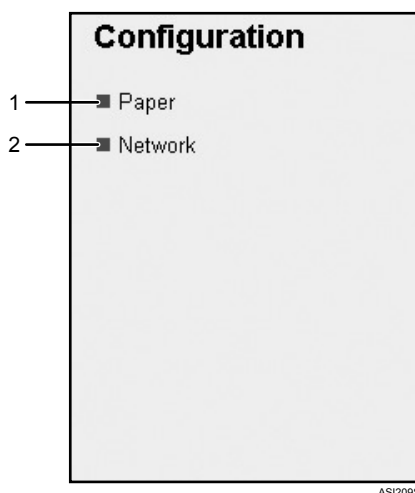**1. Paper**


Click to display the **[Paper]** page.

2. Network

Click to display the **[Network]** page.

❖ **Administrator Mode**

In this mode, users can make input tray and network settings.

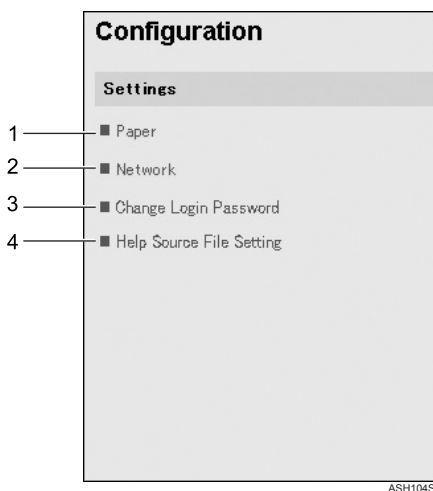**1. Paper**

Click to display the **[Paper]** page.

2. Network

Click to display the **[Network]** page.

3. Change Login Password

Click to change the login password.

4. Help Source File Setting

Click to specify the Help source file.

Access in the Administrator Mode

Use the following procedure to access Web Image Monitor in the administrator mode.

 **Note**

- ☐ When you access Web Image Monitor in the administrator mode, "Administrator" appears under **[Logout]**.

Log on

1 On Top Page, click **[Login]**.

The dialog box for entering the user name and password appears.

2 Enter the user name and password, and then click **[OK]**.

 **Note**

- ☐ For details about the login user name and password, consult your network administrator.

Log off

Click **[Logout]** to log off.

 **Note**

- ☐ When log on and made the settings, always click **[Logout]**.

Configuring the Printer Settings

From the **[Configuration]** page, two menus are available to configure the settings.

 **Important**

- ☐ To make printer settings, you must access Web Image Monitor in administrator mode. If you access Web Image Monitor in user mode, you can view the printer settings, but you cannot change them.

❖ **Paper**

Displays the **[Paper]** page.

On the **[Paper]** page, following operations are possible:

- Setting the paper size and type on each tray
- Changing the tray priority
- Printing lists of configuration of the printer

❖ Network

Displays the **[Network]** page.

On the **[Network]** page, following operations are possible:

- Checking the information of the printer
- Interface settings
- Protocol settings
- Resetting to factory-set defaults

Changing the paper settings

On the **[Paper]** page, you can change paper size and other paper settings.

❖ Tray 1

- Paper Size
Specify the paper size for tray 1.
A4, B5 JIS, A5, 8 1/2 x 14, 8 1/2 x 11, 7 1/4 x 10 1/2, 8 x 13, 8 1/2 x 13, 8 1/4 x 13, Custom Paper Size
- Unit
Specify the unit of measurement in "mm" or "inch".
- Horizontal
Specify the horizontal width between 148 and 216 mm (5.83 and 8.50 inches).
- Vertical
Specify the vertical length between 210 and 356 mm (8.27 and 14.02 inches).
- Paper Type
Specify the paper type for tray 1.
Thin Paper, Plain Paper 1, Plain Paper 2, Recycled Paper, Color Paper, Letterhead, Preprinted Paper, Prepunched Paper

❖ Tray 2

- Paper Size
Specify the paper size for tray 2.
A4, 8 1/2 x 11
- Paper Type
Specify the paper type for tray 2.
Thin Paper, Plain Paper 1, Plain Paper 2, Recycled Paper, Color Paper, Letterhead, Preprinted Paper, Prepunched Paper

❖ Bypass Tray

- Paper Size
Specify the paper size for the bypass tray.
A4, B5 JIS, A5, B6 JIS, A6, 8 1/2 x 14, 8 1/2 x 11, 5 1/2 x 8 1/2, 7 1/4 x 10 1/2, 8 x 13, 8 1/2 x 13, 8 1/4 x 13, 4 1/8 x 9 1/2, 3 7/8 x 7 1/2, C5 Env, C6 Env, DL Env, 16K, Custom Paper Size, Any Size
- Unit
Specify the unit of measurement in "mm" or "inch".

- **Horizontal**
Specify the horizontal width between 90 and 216 mm (3.54 and 8.50 inches).
- **Vertical**
Specify the vertical length between 148 and 900 mm (5.83 and 35.43 inches).
- **Paper Type**
Specify the paper type for the bypass tray.
Thin Paper, Plain Paper 1, Plain Paper 2, Recycled Paper, Color Paper, Letterhead, Preprinted Paper, Prepunched Paper, Labels, Bond Paper, Cardstock, Thick Paper 1, Thick Paper 2, Envelope, Any Type

❖ **Paper Tray Priority**

The tray selected here is used when no tray is specified for a print job.

Note

- ☐ Tray 2 is available only when the optional paper feed unit is attached to the printer.
- ☐ Only the PCL6 and PostScript 3 printer driver supports custom size paper longer than 356 mm (14.02 inches). The additional memory unit is required when using the PCL6 printer driver. The additional memory unit might also be required when using the PostScript 3 printer driver, depending on the print data.

Printing the printer configurations

On the **[Paper]** page, you can print lists of printer information.

Important

- ☐ To use this function, the printer must be monitored from Web Image Monitor. In the **[List/Test Print]** list, select the item you want to print. You can print the following:

❖ **Configuration Page**

Prints the current configurations and general information of the printer.

❖ **Menu List**

Prints the menu list showing all available menus

❖ **Test Page**

Prints a test page for checking the printing condition. The test page contains network settings and counter information.

❖ **PCL Configuration/Font Page**

Prints the current configuration and installed PCL font list.

❖ **PS Configuration/Font Page**

Prints the current configuration and installed PostScript font list.

Making the network related settings

You can set configurations about network connection and communication.

Important

- ☐ To make the settings about TCP/IP protocol, set TCP/IP “Active” in Interface.

The following operations are possible on the **[Network]** menu:

- Checking the information about the printer such as Device Name and Active Protocol.
- Interface settings such as setting the timeout and making protocol to active.
- TCP/IP port settings
- Netware settings
- AppleTalk settings
- SNMP settings
- SMTP settings

6

Changing the Login Information

On the **[Change Login Password]** page, you can change the administrator's login password.

- 1** On the **[Configuration]** page, click **[Change Login Password]**.

The **[Change Login Password]** page appears.

- 2** Enter the new password in the **[New Login Password]** box, and then enter the same password in the **[Confirm Login Password]** box.

- 3** Click **[OK]**.

Displaying Web Image Monitor Help

To use Help for the first time, you need to install its source file from the CD-ROM provided with this printer.

Note

- ☐ By clicking "?", the Help icon in the header area, the contents of Help appear.
- ☐ By clicking "?", the Help icon in the main area, Help for the setting items in the main area appears.

Installing Help

- 1** Copy the [WIMHELP] folder on the CD-ROM to your computer's hard drive.
The example procedures explain how to copy the [WIMHELP] folder to the C:\tmp\WIMHELP directory.
- 2** Log on as an administrator, access Web Image Monitor, and then click [Help Source File Setting] on the [Configuration] page.
- 3** In the text box, enter "C:\tmp\WIMHELP\JA".
- 4** Click [OK].

Using Smart Organizing Monitor

Smart Organizing Monitor allows you to make printer settings, such as input tray and network-related settings, from your client computer.

You can also use Smart Organizing Monitor to check printer status.

The following operations are possible with Smart Organizing Monitor:

- Displaying printer status or settings
- Checking locations where errors have occurred and error recovery methods
- Displaying the printer status and supply information
- Printing a list of printer configurations
- Specifying the printer's IP address
- Making settings for paper loaded into each input tray
- Making input tray settings
- Changing the factory-set default settings
- Making system, access code and language settings
- Making network protocol settings
- Making printer settings

Reference

The Smart Organizing Monitor functions you can use under Windows operating systems are also available under Mac OS. For details, see p.108 “Using Smart Organizing Monitor”.

Installing Smart Organizing Monitor

Smart Organizing Monitor is automatically installed along with the printer driver.

Reference

For details about installing the printer driver, see p.3 “Installing the Printer Driver in a Network Environment” or p.8 “Installing the Printer Driver Using USB”.

Displaying the Smart Organizing Monitor Dialog Box

Use the following procedure to display the Smart Organizing Monitor.

❖ In the Printing Preferences dialog box

Click [Smart Organizing Monitor...].

❖ In the Printer Properties dialog box

On [Accessories], [Advanced Options] or [Paper Size Settings] tab , click [Smart Organizing Monitor...].


Note

- To automatically display the Smart Organizing Monitor dialog box when errors occur, in the printer driver's properties dialog box, on the **[Advanced Options]** tab, select the **[Display Smart Organizing Monitor automatically]** check box.


Displaying the Printer Status

In the Smart Organizing Monitor dialog box, you can check the status of monitored printers.

The printer status is displayed using graphics and comments.

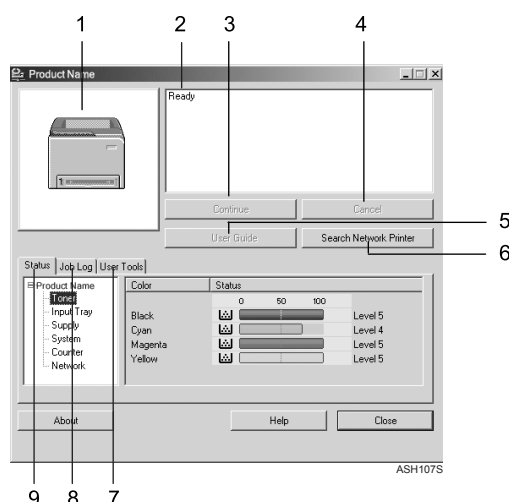

1. Printer graphic

If an input tray error occurs,  appears. This identifies the tray where the error occurred. The problem tray is outlined in red.

2. Comments

Displays current printer status and instructions for resolving problems.

3. [Continue] button

Click to display the **[Form Feed]** dialog box which you can use to change input tray settings.

4. [Cancel] button

Click to cancel a print job.

5. [User Guide] button

Click to display error related Help.

6. [Search Network Printer] button

Click to select a network printer.

7. [User Tools] tab

Prints the test page or configuration page. The **[Printer Configuration]** dialog box can be opened from this tab.

8. [Job Log] tab

Displays the information related to print jobs.

9. [Status] tab

Display the status of the items such as toner levels and paper level.

Note

- [Continue]** and **[Cancel]** button are always disabled for this printer model.

Displaying the Printer Information

The lower half of the Smart Organizing Monitor dialog box contains the following three tabs: **[Status]**, **[Job Log]**, and **[User Tools]**. You can use these tabs to display information about a monitored printer, such as its status, job history, and configuration.

Displaying the printer status

The left side of the **[Status]** tab shows the printer name and tree. Click an item in the tree to display information relating to it.

❖ Toner

Displays the following messages to indicate remaining toner levels for each color of toner: Remaining Level 1 to 5, “Almost Empty” and “Empty”. Graphics also indicate remaining toner levels.

❖ Input Tray

You can check the following information about the input trays.

- **Input Tray**
Displays the installed input trays.
- **Status**
Displays the input tray status, "Out of Paper" or "Status OK".
- **Paper Size**
Displays the size of the paper loaded into each input tray.
- **Paper Type**
Displays the type of the paper loaded into each input tray.

❖ Supplies

Displays the name of consumables and uses graphics to indicate their statuses.

❖ System

Displays the system information about the printer, such as the model name, system version, and memory size.

❖ Counter

Displays information about the counters.

❖ Network

Displays network details such as the printer's IP address and network-related comments.

Reference

For details about each item in the Smart Organizing Monitor dialog box, see Smart Organizing Monitor Help.

You can print information that appears on the **[Status]** tab. For details, see p.77 “Printing the printer configurations”.

Displaying the job history

On the **[Job Log]** tab, print jobs are displayed in the list.

You can check the following information:

- User name
- Document name
- The date and time when the print job was requested
- Number of printed pages
- Job status

Note

- ☐ Normally, the names used to log on to Windows are displayed in the **[User Name]** column.

Printing the printer configurations

On the **[User Tools]** tab, you can print lists of printer information.

Important

- ☐ You can print the configuration page only when the printer is not busy processing jobs.
- ☐ To print information about the printer, the printer must be monitored from Smart Organizing Monitor via a supported printer driver.

In the **[List/Test Print]** list, select the item you want to print. You can print the following:

❖ **Configuration Page**

Prints the current configurations and general information of the printer.

❖ **Menu List**

Prints the menu list showing all available menus.

❖ **Test Page**

Prints a test page for checking the printing condition. The test page contains network settings and counter information.

❖ **PCL Config./Font Page**

Prints the current configuration and installed PCL font list.

❖ **PS Config./Font Page**

Prints the current configuration and installed PostScript font list.

The procedure for printing the configuration page is described as an example.

- 1** On the **[User Tools]** tab, in the **[List/Test Print]** list, select **[Configuration Page]**.
- 2** Click **[Print]**.
- 3** Click **[Yes]**.

The configuration page is printed.

Reference

For details about the items displayed on the configuration page, see p.85 “Reading the Configuration Page”.

Printer Configuration

You can use the **[Printer Configuration]** dialog box to change the current printer settings. To display the **[Printer Configuration]** dialog box and change printer settings, on the **[User Tools]** tab, click **[Printer Configuration]**.

Important

- ☐ The **[Printer Configuration]** is disabled when the printer is not in the ready state or power save mode.

You can use the **[Printer Configuration]** dialog box to change the settings of:

- printers,
- input trays,
- paper loaded in input trays,
- network protocol, and
- factory-set defaults.

Reference

For details about each item you can specify on the **[Printer Configuration]** dialog box, see Smart Organizing Monitor Help.

About menu and mode

There are two modes you can use to access the **[Printer Configuration]** dialog box: administrator mode and general users mode.

Available tabs in the **[Printer Configuration]** dialog box differ depending on the mode you are in.

❖ **Administrator**

In the **[Access Code]** dialog box, enter an access code.

All tabs in the **[Printer Configuration]** dialog box are available.

❖ **General users**

Only the **[Paper Input]** tab is available.

Changing the paper settings

On the **[Paper Input]** tab, you can change paper size and other paper settings.

❖ Tray 1

- **Paper Size:**
Specify the paper size for tray 1.
A4 (210 x 297 mm), B5 JIS (182 x 257 mm), A5 (148 x 210 mm), 8 1/2 x 14, 8 1/2 x 11, 7 1/4 x 10 1/2, 8 x 13, 8 1/2 x 13, 8 1/4 x 13, Custom Paper Size
- **Paper Type:**
Specify the paper type for tray 1.
Thin Paper, Plain Paper 1, Plain Paper 2, Recycled Paper, Color Paper, Letterhead, Preprinted Paper, Prepunched Paper
- **Custom Paper Size**
Specify the custom paper size, when **[Custom Paper Size]** is selected.
 - **Unit:**
Specify the unit of measurement in "mm" or "inch".
 - **Horizontal:**
Specify the horizontal width between 148 and 216 mm (5.83 and 8.50 inches).
 - **Vertical:**
Specify the vertical length between 210 and 356 mm (8.27 and 14.02 inches).

❖ Tray 2

- **Paper Size:**
Specify the paper size for tray 2.
A4 (210 x 297 mm), 8 1/2 x 11
- **Paper Type:**
Specify the paper type for tray 2.
Thin Paper, Plain Paper 1, Plain Paper 2, Recycled Paper, Color Paper, Letterhead, Preprinted Paper, Prepunched Paper

❖ Bypass Tray

- **Paper Size:**
Specify the paper size for the bypass tray.
A4 (210 x 297 mm), B5 JIS (182 x 257 mm), A5 (148 x 210 mm), B6 JIS (128 x 182 mm), A6 (105 x 148 mm), 8 1/2 x 14, 8 1/2 x 11, 5 1/2 x 8 1/2, 7 1/4 x 10 1/2, 8 x 13, 8 1/2 x 13, 8 1/4 x 13, 4 1/8 x 9 1/2, 3 7/8 x 7 1/2, C5 Env, C6 Env, DL Env, 16K, Custom Paper Size, Any Size
- **Paper Type:**
Specify the paper type for the bypass tray.
Thin Paper, Plain Paper 1, Plain Paper 2, Recycled Paper, Color Paper, Letterhead, Preprinted Paper, Prepunched Paper, Thick Paper 1, Thick Paper 2, Bond Paper, Cardstock, Labels, Envelope, Any Type

- Custom Paper Size

Specify the custom paper size, when **[Custom Paper Size]** is selected.

- Unit:
Specify the unit of measurement in "mm" or "inch".
- Horizontal:
Specify the horizontal width between 90 and 216 mm (3.54 and 8.50 inches).
- Vertical:
Specify the vertical length between 148 and 900 mm (5.83 and 35.43 inches).

❖ Tray Priority

The tray selected here is used when no tray is specified for a print job.

Note

- ☐ Tray 2 is available only when the optional paper feed unit is attached to the printer.
- ☐ Only the PCL6 and PostScript 3 printer driver supports custom size paper longer than 356 mm (14.02 inches). The additional memory unit is required when using the PCL6 printer driver. The additional memory unit might also be required when using the PostScript 3 printer driver, depending on the print data.

Adjusting registrations

On the **[Maintenance]** tab, you can adjust color registration and print starting positions.

Normally, you do not have to adjust registrations. However, adjustments could be useful in some cases, especially when you want to print in a specific position. Under **[Registration: Tray 2 Paper]**, you can adjust the print image position printed on the sheet fed from tray 2. To check the adjustment result, use **[Print Test Sheet]**.

Also, you can update the firmware by clicking **[Printer Firmware Update]**.

The latest version of the firmware can be downloaded from the supplier's website.

Setting basic functions

On the **[System]** tab, you can set basic functions required to use the printer. The printer can be used on factory-set defaults, but the configuration can be changed depending on the condition of the user. The changed condition holds even if the printer is turned off.

The access code can be changed on this tab.

Making network-related settings

On the **[Network 1]**, **[Network 2]** and **[Network 3]** tabs, you can set configurations about network connection and communication.

The following operations are possible on these tabs:

- Checking the machine name, active protocol, and other printer information
- Making interface settings, including the timeout setting and protocol settings
- Checking or making TCP/IP settings
- Checking or making Netware and SMTP settings
- Checking or making SNMP and AppleTalk settings

Settings conditions for printing

On the **[Printer]** tab, you can set conditions for printing.

In the **[PCL]** area, you can specify the conditions such as Orientation and font settings.

In the **[PS]** area, you can specify Resolution and Color Profile.

Printer Status Notification by E-Mail

Whenever a toner cartridge becomes empty or paper is jammed, an e-mail alert is issued to the registered addresses to notify the printer status.

Important

- ☐ This function is available only if you are using this printer in a network environment.
- ☐ Depending on your e-mail application, a phishing warning might appear after you receive an e-mail message. To prevent phishing warnings appearing after you receive e-mail from a specified sender, you must add the sender to your e-mail application's exclusion list. For details about how to do this, refer to your e-mail application's Help.

For this notification, you can make the e-mail notification settings.

You can be notified of the following events:

- Service call
- Toner cartridge is empty
- Toner cartridge is nearly empty
- Waste toner bottle is full
- Waste toner bottle is nearly full
- Paper has jammed
- Open door is detected
- Paper tray is empty

Also you can see the information of the printer, such as Machine name, serial number and total counter.

- 1** Open a Web browser, and then enter “`http://(printer's address)/`” in the address bar.

Top Page of Web Image Monitor appears.

- 2** Click [Login].

The window for entering the login user name and password appears.

- 3** Enter the user name and password, and then click [OK].

For details about the login user name and password, consult your network administrator.

- 4** In the menu area, click [Configuration].

- 5** Click [Network].

The [Network] page appears.

- 6** Set [Auto E-mail Notification] to [On].

7 Make the necessary settings:

- Items in the SNMP Setting column: Configure the SMTP server. Check your mailing environment, and then specify the necessary items. You can also perform mail authentication for the SMTP server.

8 Click [OK]. **Note**

- ☐ You can set **[Auto E-mail Notification:]** to **[On]** using Smart Organizing Monitor.

Mail Authentication

You can configure mail authentication to prevent illegal use of the mail server. When mail is sent to the SMTP server, authentication is performed using the SMTP AUTH protocol by prompting the mail originator to enter the user name and password.

Use the following procedure to specify SMTP authentication.

1 In the menu area, click [Configuration].**2 Click [Network] in the [Configuration] page.****3 Make the following settings:**

- SMTP Authentication: Enable or disable SMTP authentication.
- E-mail Address: Enter the e-mail address.
- SMTP User Name: Enter the user name for SMTP Authentication.
- SMTP Password: Enter the password set for the SMTP User Name.

4 Click [OK].**5 Click [Logout].****6 Quit Web Image Monitor.**

SNMP

You can use the SNMP manager to obtain information about the printer.

The SNMP agent operating on UDP and IPX is built into the Ethernet board that is installed in this printer.

Important

- ☐ If you change the printer's community name, use Web Image Monitor or Smart Organizing Monitor to change the computer's settings accordingly.

The default community names is **[private]**. You can use these community names to obtain MIB information.

Reading the Configuration Page

The configuration page contains the information shown below.

❖ System Reference

Displays the following information about the printer.

- Printer ID
- Total Memory
- Firmware Version
- Printer Language
- Option installation status
- Toner Remaining
- Supply Information

❖ Paper Input

Displays the paper size and type settings.

- Tray Priority
- Bypass Tray
- Tray 1
- Tray 2

❖ Maintenance

- Registration
- Horiz.:Tray 2
- Vert.:Tray 2

❖ System

Displays the settings made under **[System]** menu.

- Auto Continue
- Copies
- Sub Paper Size
- Duplex
- Blank Pages
- Energy Saver Mode 1
- E. Saver On/Off
- E. Saver Timer
- B&W Page Detect
- Print Error Page
- Notify by E-mail

❖ Host Interface

- USB TimeOut
- Network TimeOut
- DHCP
- IP Address
- Subnet Mask
- Gateway Address
- Frame Type (NW)
- TCP/IP
- Netware
- AppleTalk
- Ethernet
- USB Setting

❖ PCL Menu

Displays settings made under **[PCL Menu]**.

- Orientation
- Form Lines
- Font Number
- Point Size
- Font Pitch
- Symbol Set
- Courier Font
- Ext. A4 Width
- Append CR to LF
- Resolution

❖ PS Menu

Displays settings made under **[PS Menu]**.

- Resolution
- Color Profile

❖ Interface Information

Displays the network related settings.

- MAC Address
- Host Name
- Operation Mode
- Print Server Name
- File Server Name
- NDS Context Name

❖ Counter List

- Total Counter
- B&W Counter
- Color Counter
- Duplex Counter

❖ Error Log

Displays the error logs.

 Note

- ☐ Configuration page can be printed using the control panel. For details, see p.48 “Printing the Configuration Page”.
- ☐ The printed items and the contents might be different according to machine model.

 Reference

For details about printing printer configuration using Web Image Monitor, see p.71 “Printing the printer configurations”.

For details about printing printer configuration using Smart Organizing Monitor, see p.77 “Printing the printer configurations”.

7. Using a Print Server

Preparing Print Server

This section explains how to configure this printer as a Windows network printer. The printer is configured to enabling network clients to use it.

Important

- ☐ To change the printer properties in the **[Printer]** folder, you need Printer Management access authentication. Log on to the file server as an Administrators or member of the PowerUsers group.

1 Open the **[Printers]** window from the **[Start]** menu.

The **[Printers]** window appears.

Under Windows XP or Windows Server 2003/2003 R2, the **[Printers and Faxes]** window appears.

2 Click the icon of this printer. On the **[File]** menu, click **[Properties]**.

The printer properties appears.

3 On the **[Sharing]** tab, click **[Shared as:]**.

4 To share this printer with users using a different version of Windows, click **[Additional Drivers...]**.

If you have installed an alternative driver by selecting **[Shared as:]** during the printer driver installation, this step can be ignored.

5 Click **[OK]**, and then close the printer properties.

8. Special Operations under Windows

Printing Files Directly from Windows

You can print files directly using Windows commands; "lpr" or "ftp".

Setup

Use the following procedure to make network environment settings.

- 1 Enable TCP/IP using the control panel, and then set up the printer's network environment about TCP/IP including IP addresses.**

TCP/IP of the printer is set as default.

- 2 Install a TCP/IP in Windows to set up the network environment.**

Consult the network administrator for the local setting information.

- 3 To print, install "Printing service for UNIX" as the network application.**

Reference

For details about setting up IPv4 address, see Hardware Guide.

For details about setting the IPv4 address of the printer using DHCP, see p.116 "Using DHCP".

This completes the setup for specifying a printer using an IPv4 address when printing. When using a host name to specify a printer, proceed to p.92 "Using a Host Name Instead of an IPv4 Address" and continue the setup.

Using a Host Name Instead of an IPv4 Address

When a host name is defined, you can specify a printer by host name instead of IPv4 address. The host names vary depending on the network environment.

When using DNS

Use the host name set to the data file on the DNS server.

When setting the IPv4 address of a printer using DHCP

Use the printer name on the configuration page as the host name.

Reference

For details about printing a configuration page, see p.77 “Printing the printer configurations”.

In other cases

Add the IPv4 address and host name of the network printer to the hosts file on the computer used for printing.

1 Open the hosts file using memo pad files, for instance.

The hosts file is in the following folder:

\WINNT\SYSTEM32\DRIVERS\ETC\HOSTS

2 Add an IPv4 address and host name to the hosts file using the following format:

192.168.15.16 host# NP

“192.168.15.16” is the IPv4 address, “host” is this printer's host name, and “#NP” is replaced by comments. Insert a space or tab between “192.168.15.16” and “host”, between “host” and “#NP” respectively, using one line for this format.

3 Save the file.

Printing Commands

The following explains printing operations using the lpr commands.

Enter commands using the command prompt window. The location of the command prompt varies depending on operating systems:

- Windows 2000
[Start] - [Programs] - [Accessories] - [Command Prompt]
- Windows XP/Vista, Windows Server 2003/2003 R2/2008
[Start] - [All Programs] - [Accessories] - [Command Prompt]

Note

- ☐ Match the data format of the file to be printed with the emulation mode of this printer.
- ☐ If the message “print requests full” appears, no print jobs can be accepted. Try again when sessions end. For each command, the amount of possible sessions is indicated as follows:
 - lpr: 10
- ☐ Enter the file name in a format including the path from the directory executing commands.

Reference

The “option” specified in a command is an intrinsic printer option and its syntax is similar to printing from UNIX.

lpr

❖ When specifying a printer by IP address

```
c:> lpr -Sprinter's IP address -Pprinter name [-ol] \path\file name
```

❖ When specifying a printer by host name instead of IP address

```
c:> lpr -Sprinter host name -Pprinter's name [-ol] \path\file name
```

To print a binary file, include the “-ol” switch (a dash followed by a lowercase O and L) after the printer name.

ftp

Use the “put” or “mput” command according to the number of files to be printed.

❖ When one file is printed

```
ftp> put \path\file name [option]
```

❖ When multiple files are printed

```
ftp> mput \path\file name [\path\file name...] [option]
```

- 1** Formulate the printer's IP address or the host name of the hosts file printer as an argument and use the "ftp" command.

% ftp printer's IP address

- 2** Enter the user name and password, and then press the [OK] key.

For details about the user name and password, consult your network administrator.

User:

Password:

- 3** When printing a binary file, set the file mode to binary.

ftp> bin

When printing a binary file in ASCII mode, print may not come out correctly.

- 4** Specify files to be printed.

The following shows the examples of printing a PostScript file named "file 1" in the "C:\PRINT" directory and printing file 1 and file 2.

ftp> put C:\PRINT\file1 filetype=RPS

ftp> mput C:\PRINT\file1 C:\PRINT\file2

- 5** Quit ftp.

ftp> bye

 **Note**

- ☐ "=", ":", "_", and ";" cannot be used for file names. File names will be read as option strings.
- ☐ For "mput" command, option can not be defined.
- ☐ For "mput" command, "*" and "?" can be used as wild cards in file names.
- ☐ When printing a binary file in ASCII mode, print may not come out correctly.

9. Mac OS Configuration

This chapter explains how to use this printer under Mac OS X.

The example procedures in this chapter explain configuration under Mac OS X 10.4 and Mac OS X 10.5. The procedure might be different according to the version of OS.

Installing the PostScript 3 Printer Driver

Important

- ☐ If you want to use this printer in a Mac OS environment, update to Mac OS 10.2.8 or higher.

- 1** Insert the CD-ROM into the CD-ROM drive.
- 2** Double-click the CD-ROM icon.
- 3** Double-click the [Mac OS X] folder.
- 4** Double-click the [PPD Installer] folder.
- 5** Double-click the package file icon.
- 6** Follow the instructions on the screen.

Note

- ☐ When installing the printer driver under Mac OS X, Smart Organizing Monitor is automatically installed along with it. For details about Smart Organizing Monitor for Mac OS X, see p.108 “Using Smart Organizing Monitor”.

Specifying the Printer

This section explains how to make your computer recognize this printer.

Using USB

Use this procedure to connect the computer to the printer via USB.

The printer is automatically added, if the connection is successfully detected.

Mac OS X 10.4.x or earlier

- 1** Connect the printer and computer using the USB cable, and then turn the printer's power switch to on.
- 2** On the desktop, double-click the hard drive icon.
- 3** Double-click [Applications], and then open the [Utilities] folder.
- 4** Double-click [Printer Setup Utility].
The [Printer List] dialog box appears.
- 5** Check that the name of this printer appears in [Printer List].
- 6** Go to [Printer Setup Utility] in the menu bar, and then click [Quit Printer Setup Utility].

Mac OS X 10.5

- 1** Connect the printer and computer using the USB cable, and then turn on the printer's power switch.
- 2** On the desktop, double-click the hard drive icon.
- 3** Double-click [Applications], and then double-click [System Preferences].
- 4** In the [Hardware] category, double-click [Print & Fax].
- 5** Check that the name of this printer appears in the printer list in [Print & Fax].
- 6** Go to [Printer Setup Utility] in the menu bar, and then click [Quit System Preferences].

Using TCP/IP

Use this procedure to connect the computer to the printer via Ethernet. The printer is automatically added, if the connection is successfully detected.

Mac OS X 10.4.x or earlier

- 1** Connect the printer and the computer using the Ethernet cable.
- 2** On the desktop, double-click the hard drive icon.
- 3** Double-click **[Applications]**, and then open the **[Utilities]** folder.
- 4** Double-click **[Printer Center]** or **[Printer Setup Utility]**.
The **[Printer List]** dialog box appears.
- 5** Click **[Add]** in the **[Printer List]** dialog box.
If you are using Mac OS X 10.2.x or Mac OS X 10.3.x, press and hold the **[alt/option]** key, and then click **[Add]**. Proceed to step 9..
If you want to add a new printer, click **[Add]** as a confirmation window for printer addition appears.
- 6** If this printer is in the same segment as the Macintosh with which you are configuring, the printer is detected automatically and displayed on the default browser list. If the printer is not displayed, proceed to step 8.
- 7** From the **[Printer Browser]** list, select the printer with the corresponding IP address under **[Printer Name]** and with **[Connection]** listed as **[(Printer name) Network]**. Click **[Add]** after checking that the name of this printer appears in **[Name:]**. Proceed to step 14.
- 8** Press and hold the **[alt/option]** key, and then click **[More Printers]**.
- 9** From the protocol drop-down menu, select **[Advanced]**.
- 10** When the **[Advanced]** window appears, select **[(Printer name) Network Printer]** from the **[Device:]** drop-down menu.
- 11** Enter a name that you like in **[Device Name:]**.
- 12** Enter the IP address of the printer in **[Device URI:]** after **"(Printer name)Network:/"**.
- 13** Select the manufacturer name from the **[Printer Model:]** drop-down menu. From the list displayed, select the name of this printer, and then click **[Add]**.
- 14** Check that the name of this printer appears on the printer list in **[Printer List]**.
If you are using Mac OS X 10.2.x or Mac OS X 10.3.x, select this printer from the printer list, and then click **[Add]**.
- 15** Go to **[Printer Setup Utility]** in the menu bar, and then click **[Quit Printer Setup Utility]**.

Mac OS X 10.5

- 1** Connect the printer and computer using the Ethernet cable, and then turn on the printer's power switch.
- 2** On the desktop, double-click the hard drive icon.
- 3** Double-click [Applications], and then double-click the [System Preferences].
- 4** In the [Hardware] category, double-click [Print & Fax].
- 5** Click the [+] button on the bottom-left corner of the [Print & Fax] dialog box to display the default window.
- 6** If this printer is in the same segment as the Macintosh with which you are configuring, the printer is detected automatically and displayed in the default browser list. If the printer does not appear, proceed to step 8.
- 7** From the list, select the printer with [Kind] listed as [(Printer name) Network] and the corresponding IP address under [Printer Name]. Click [Add] after checking that the name of this printer appears in [Name:]. Proceed to step 19.
- 8** If [Advanced] appears in the toolbar, click [Advanced], and then proceed to step 14. If [Advanced] does not appear, proceed to the next step.
- 9** Press and hold the [Control] key, and then click [More Printers].
- 10** From the list, select [Customize Toolbar...].
- 11** From the custom setup window, select the [Advanced] icon, and then drag it to the toolbar.
- 12** Check that the [Advanced] icon appears in the toolbar, and then click [Done].
- 13** Click [Advanced].
- 14** When the detailed window appears, select [(Printer name) Network Printer] from the [Type:] list.
- 15** Enter the IP address of the printer in [URL:] after "(Printer name)Network://". Make no change to the parameter under [Device:] and leave it as [Another Device].
- 16** From the [Print Using:] list, select [Select a driver to use...].
- 17** Enter the name of this printer in the search window.
- 18** After entering the name, select the name of this printer from the list, and then click [Add].
- 19** Check that the name of this printer appears on the printer list in [Print & FAX].
- 20** Go to [System Preferences] in the menu bar, and then click [Quit System Preferences].

Setting Up the PPD File

Mac OS X 10.4.x or earlier

- 1** On the desktop, double-click the hard drive icon.
- 2** Double-click **[Applications]**, and then open the **[Utilities]** folder.
- 3** Double-click **[Printer Setup Utility]**.
The **[Printer List]** dialog box appears.
- 4** Click **[Add]**.
 - Mac OS X 10.4 or higher
Click **[More Printers...]**. Then select the zone from the second pop-up menu.
 - Other Mac OS X
Click **[AppleTalk]** on the first pop-up menu.
If the zone is set, select the zone from the second pop-up menu.
- 5** Select the printer, and then select its manufacturer from the **[Printer Model:]** pop-up menu.
Under Mac OS X 10.4 or higher, manufacturer from the **[Print Using]** pop-up menu.
A list of printer types appears.
- 6** Select the PPD file for the model you are using, and then click **[Add]**.
- 7** Quit Printer Setup Utility.

Mac OS X 10.5

- 1** On the desktop, double-click the hard drive icon.
- 2** Double-click **[Applications]**, and then open the **[System Preferences]** folder.
- 3** In the **[Hardware]** category, double-click **[Print & Fax]**.
- 4** In the list, double-click the name of the printer you are using, and then click **[Info]**.
- 5** Click **[Driver]** tab.
- 6** In the **[Print Using:]** drop-down menu, select **[Other...]**.
- 7** Select the PPD file for the model you are using, and then click **[Open]**.
- 8** Close the **[Print & Fax]** window.

Setting Up Options

Use this procedure to configure the printer's options.

Mac OS X 10.4.x or earlier

- 1** On the desktop, double-click the hard drive icon.
- 2** Double-click [Applications], and then open the [Utilities] folder.
- 3** Double-click [Printer Setup Utility].
The [Printer List] dialog box appears.
- 4** Select the machine you are using, and then click [Show Info].
The [Printer Info] window appears.
- 5** In the drop-down menu, select [Installable Options], and then specify an appropriate setting for it.
- 6** Click [Apply Changes].
- 7** Quit Printer Setup Utility.



Note

- ☐ If the option you want to select is not displayed, PPD files may not be set up correctly. To complete the setup, check the name of the PPD file displayed in the dialog box.

Mac OS X 10.5

- 1** On the desktop, double-click the hard drive icon.
- 2** Double-click [Applications], and then open the [System Preferences] folder.
- 3** In the [Hardware] category, double-click [Print & Fax].
- 4** In the list, double-click the name of printer you are using, and then click [Options & Supplies...].
- 5** Click the [Driver] tab, and then specify an appropriate setting for it.
- 6** Click [OK].
- 7** Go to [System Preferences] in the menu bar, and then click [Quit System Preferences].

Setting Up for Printing

Use the following procedures to configure the printer.

Making paper settings from an application

- 1** Open the file you want to print.
- 2** On the [File] menu, click [Page Setup...].
- 3** Check that the printer you want to use is displayed in [Format for], and then select the paper size you want to use in [Paper Size].
If this printer is not displayed in [Format for], select the printer you want to use.
- 4** Configure the settings, and then click [OK].



Reference

The [Page Setup...] dialog box varies depending on the application you use. For details, see the manuals provided with the Mac OS X.

Printing from an application

- 1** Open the file you want to print.
- 2** On the [File] menu, click [Print] or [Print...].
- 3** In the [Printer List], select the printer.
- 4** Configure the print settings, and then click [Print].

Canceling a Print Job from the Computer

Mac OS X 10.4.x or earlier

- 1** On the desktop, double-click the hard drive icon.
- 2** Double-click [Applications], and then open the [Utilities] folder.
- 3** Double-click [Printer Setup Utility].
The [Printer List] dialog box appears.
- 4** Double-click the name of this printer.
- 5** Select the name of the job you want to cancel, and then click the Delete icon.

 **Note**

- ☐ If the printer is shared by multiple computers, be careful not to cancel a print job of other user.
- ☐ You cannot stop printing data that has already been processed. For this reason, printing may continue for a few pages after you cancel printing.
- ☐ To stop a large data size print job may takes a while.

Mac OS X 10.5

- 1** On the desktop, double-click the hard drive icon.
- 2** Double-click [Applications], and then open the [System Preferences] folder.
- 3** In the [Hardware] category, double-click [Print & Fax].
- 4** Double-click the name of this printer.
- 5** Select the name of the job you want to cancel, and then click the Delete icon.

Changing to EtherTalk

Use the following procedure to configure a Mac OS X to use EtherTalk.

Important

- ☐ You need an administrator name and a password (phrase). For details, consult your network administrator.

Mac OS X 10.4.x or earlier

- 1** Open [System Preference], and then click the Network icon.
- 2** Click [Built-in Ethernet] in the [Show:] list box.
- 3** Click the [AppleTalk] tab.
- 4** Select the [Make AppleTalk Active] check box.
- 5** To change AppleTalk zones, select a name from the [AppleTalk Zone:] pop-up menu.
- 6** When the settings are made, click [Apply Now].
- 7** Quit [System Preference].

Reference

For information about installing applications required for EtherTalk, see the Mac OS X manuals.

Mac OS X 10.5

- 1** On the desktop, double-click the hard drive icon.
- 2** Double-click [Applications], and then open the [System Preferences] folder.
- 3** In the [Internet & Network] category, double-click the Network icon.
- 4** Click [Built-in Ethernet], and then click [Advanced].
- 5** Click the [Apple Talk] tab.
- 6** Select the [Make Apple Talk Active] check box.
- 7** To change Apple Talk zones, select a name from the [Apple Talk Zone:] drop-down menu.
- 8** When you have specified the settings you require, click [OK].
- 9** Click [Apply].
- 10** Close the [Network] window.

Configuring the Printer

Use the control panel to enable AppleTalk. (AppleTalk is active by default.)

Using PostScript 3

Use the PostScript 3 driver to print files.

You can use the following functions if **[Printer Features]** is selected in the **[Print]** dialog:

❖ Paper Type

Use this function to select the paper type.

In the **[Feature Sets]** list, select **[Paper Type]**, and then, in the **[Media Type]** list, select the paper type you want to use for printing.

❖ Duplex

Use this function to print on both sides of sheets. In the drop-down menu, select **[Layout]**, and then specify the binding pattern in the **[Two-sided]** area. Both short edge and long edge binding is possible with this function.

❖ Print Quality

Use this function to select the print quality.

In the **[Feature Sets]** list, select **[Imaging]**, and then, in the **[Print Quality]** list, select the print quality.

You can select Standard, High Quality, or Best Quality.

❖ Color Profile

Use this function to select the color profile pattern.

In the **[Feature Sets]** list, select **[Imaging]**, and then, in the **[Color Profile]** list, select the color profile pattern.

You can select Off, Solid Color, Presentation, or Photographic.

❖ CMYK Simulation Profile

Use this function to simulate the color tone of the printing ink.

In the **[Feature Sets]** list, select **[Imaging]**, and then, in the **[CMYK Simulation Profile]** list, select the printing ink standard.

You can select the printing ink standard from Off, US OffsetPrint, Euroscale, or PaletteColor.

❖ Black Text Over Print

Use this function to specify whether or not to print black over other colors.

To enable black text over print, in the **[Feature Sets]** list, select **[Imaging]**. Then, set **[Black Over Print]** to **[On]**.

❖ Dithering

Use this function to specify the rendering mode.

In the **[Feature Sets]** list, select **[Dithering]**, and then, in the **[Dithering]** list, select the rendering mode.

You can select Automatic, Photographic, or Text.

❖ Color / Black and White

Use this function to specify whether the document is printed in color or black and white.

In the **[Feature Sets]** list, select **[Toner]**, and then, in the **[Color/ Black and White]** list, select the toner color.

You can select Automatic, Color, or Black and White.

❖ Gray Reproduction

Use this function to select the black color mode for text and line art.

In the **[Feature Sets]** list, select **[Toner]**, and then, in the **[Gray Reproduction]** list, select the black color mode.

You can select Black by K or CMY+K.

❖ Toner Saving

Use this function to reduce the amount of toner used when printing.

To reduce toner consumption, in the **[Feature Sets]** list, select **[Toner]**. Then set **[Toner Saving]** to **[On]**.

❖ Print Blank Pages

Use this function to print blank pages.

To print blank pages, in the **[Feature Sets]** list, select **[Toner]**. Then set **[Print Blank Pages]** to **[On]**.

❖ Watermark Type

Use this function to select the watermark style.

In the **[Feature Sets]** list, select **[Watermark Text]**, and then select the watermark type in the list.

You can select Outlined, Solid, or Transparent Text.

❖ Watermark Text

Use this function to select the watermark text.

In the **[Feature Sets]** list, select **[Watermark Text]**, and then select the watermark text in the list.

You can select the following text:

- CONFIDENTIAL
- TOP SECRET
- COPY
- DRAFT
- FINAL
- FILE COPY
- PROOF

❖ Watermark Font Size (Points)

Use this function to select the watermark font size.

In the **[Feature Sets]** list, select **[Watermark Text]**, and then, select the watermark font size in the list.

❖ **Watermark Font Typeface**

Use this function to select the watermark font typeface.

In the **[Feature Sets]** list, select **[Watermark Text]**, and then, select the watermark typeface.

❖ **Watermark Font Shading**

Use this function to select the watermark font shading.

In the **[Feature Sets]** list, select **[Watermark Text]**, and then, select the watermark font shading in the list.

❖ **Watermark Position**

Use this function to select the watermark position.

In the **[Feature Sets]** list, select **[Watermark Location]**. Then, in the **[Watermark Position (Horizontal)]** and **[Watermark Position (Vertical)]** lists, select the horizontal and vertical positions, respectively.

❖ **Watermark Angle**

Use this function to select the watermark angle.

In the **[Feature Sets]** list, select **[Watermark Location]**, and then , select the watermark angle in the list.

❖ **Watermark**

Use this function to select which page(s) to print the watermark on.

In the **[Feature Sets]** list, select **[Watermark Location]**, and then, in the **[Watermark]** list, select which page(s) you want to print the watermark on.

You can select Off, First Page Only, or All Pages.

Using Smart Organizing Monitor

This section explains about using Smart Organizing Monitor under Mac OS X. Using Smart Organizing Monitor, you can check the printer status and change printer settings from your client computer.

The following operations are possible with Smart Organizing Monitor:

- Displaying printer status or settings
- Printing a list of printer configurations
- Making settings for paper loaded into each input tray
- Making input tray settings
- Changing factory-set default settings
- Making network protocol settings
- Making printer settings
- Displaying the printer status and supply information
- Netware Settings
- SMTP Settings
- SNMP Settings
- AppleTalk Settings

Installing Smart Organizing Monitor

Smart Organizing Monitor is automatically installed along with the printer driver.

Reference

For details about installing the printer driver, see p.95 “Installing the PostScript 3 Printer Driver”.

Displaying the Smart Organizing Monitor Dialog Box

To display the Smart Organizing Monitor dialog box, open the **[Applications]** folder and double-click **[Smart Organizing Monitor]**.

❖ **Alternatively, you can use the following procedure to display the Smart Organizing Monitor dialog box from the [Print & Fax] folder in [System Preferences]:**

- ① In **[System Preferences]**, open the **[Print & Fax]** folder.
- ② Click the **[Print]** tab, and then, in the **[Printer]** list, double-click the name of the printer you are using.
- ③ Click **[Utility]**.

Displaying the Printer Status

In the Smart Organizing Monitor dialog box, you can check the status of monitored printers. The printer status is displayed using graphics and comments.

Displaying the Printer Information

Smart Organizing Monitor features three tabs, **[Status]**, **[Job Log]** and **[User Tools]**. On these tabs, you can view information about a monitored printer, such as its configuration details and current status.

Displaying the printer status

When you click the **[Status]** tab, the printer name and tree appear. Click an item in the tree to display information relating to it.

❖ Toner

Displays the remaining amount of each toner. The following are used to indicate the remaining amount: Level 1 to 5, “Almost Empty” and “Empty”. A graphic also indicates each toner’s status.

❖ Input Tray

You can check the following information about the input trays.

- Input Tray
Displays the installed input trays.
- Status
Displays the input tray status using a graphic.
- Paper Size
Displays the size of the paper loaded into each input tray.
- Paper Type
Displays the type of the paper loaded into each input tray.

❖ Supplies

Displays the consumable names and status. The graphics also indicate the consumables status.

❖ System

Displays the system information about the printer, such as the model name, system version, and memory size.

❖ Counter

Displays information about the counters.

❖ Network

Displays network details such as the printer's IP address and network-related comments.

🔍 Reference

For details about what you can perform on each tab in the Smart Organizing Monitor dialog box, see Smart Organizing Monitor Help.

Displaying the job history

On the **[Job Log]** tab, completed print jobs are displayed in the list.

You can check the following information.

- User Name
- Document Name
- Number of printed pages
- The date and time when the print job was requested
- Job Status

Printing the printer configurations

On the **[User Tools]** tab, you can print lists of printer information.

Important

- ☐ You can print the configuration page only when the printer is not busy processing jobs.
- ☐ To use this function, the printer must be monitored from Smart Organizing Monitor via a supported printer driver.

In the **[List/Test Print]** list, select the item you want to print. You can print the following:

❖ Configuration Page

Prints the current configurations and general information of the printer.

❖ Menu List

Prints the menu list showing all available menus.

❖ Test Page

Prints a test page for checking the printing condition. The test page contains network settings and counter information.

❖ PCL Config./Font Page

Prints the current configuration and installed PCL font list.

❖ PS Config./Font Page

Prints the current configuration and installed PostScript font list.

Use the printed configuration page to check the information, such as general information and printer configuration.

The procedure for printing the configuration page is described as an example.

1 On the **[User Tools]** tab, in the **[List/Test Print]** list, select **[Configuration Page]**.

2 Click **[Print]**.

The configuration page is printed.

Printer Configuration

Clicking **[Printer Configuration]** on the **[User Tools]** tab enables you to change the printer settings in the **[Printer Configuration]** dialog box.

You can use the **[Printer Configuration]** dialog box to change the settings of:

- printers,
- input trays,
- paper loaded in input trays,
- network protocols, and
- factory-set defaults.

Reference

For details about each item you can specify on the **[Printer Configuration]** dialog box, see Smart Organizing Monitor Help.

About menu and mode

There are two modes you can use to access the **[Printer Configuration]** dialog box: for administrator mode and general users mode.

Available tabs in the **[Printer Configuration]** dialog box differ depending on the mode you are in.

❖ Administrator

In the **[Access Code]** dialog box, enter an access code.

All tabs in the **[Printer Configuration]** dialog box are available.

❖ General users

Only the **[Paper Input]** tab is available.

Changing the paper settings

On the **[Paper Input]** tab, you can change paper size and other paper settings.

❖ Tray 1

- **Paper Size**
Specify the paper size for tray 1.
A4 (210 x 297 mm), B5 JIS (182 x 257 mm), A5 (148 x 210 mm), 8 1/2 x 14, 8 1/2 x 11, 7 1/4 x 10 1/2, 8 x 13, 8 1/2 x 13, 8 1/4 x 13, Custom Paper Size
- **Paper Type**
Specify the paper type for tray 1.
Thin Paper, Plain Paper 1, Plain Paper 2, Recycled Paper, Color Paper, Letterhead, Preprinted Paper, Prepunched Paper
- **Custom Paper Size**
Specify the custom paper size, when **[Custom Paper Size]** is selected.
 - **Unit:**
Specify the unit of measurement in "mm" or "inch".
 - **Horizontal:**
Specify the horizontal width between 148 and 216 mm (5.83 and 8.50 inches).
 - **Vertical:**
Specify the vertical length between 210 and 356 mm (8.27 and 14.02 inches).

❖ Tray 2

- **Paper Size**
Specify the paper size for tray 2.
A4 (210 x 297 mm), 8 1/2 x 11
- **Paper Type**
Specify the paper type for tray 2.
Thin Paper, Plain Paper 1, Plain Paper 2, Recycled Paper, Color Paper, Letterhead, Preprinted Paper, Prepunched Paper

❖ Bypass Tray

- Paper Size
Specify the paper size for the bypass tray.
A4 (210 x 297 mm), 8 1/2 x 11, B5 JIS (182 x 257 mm), A5 (148 x 210 mm), B6 JIS (128 x 182 mm), A6 (105 x 148 mm), 8 1/2 x 14, 5 1/2 x 8 1/2, 7 1/4 x 10 1/2, 8 x 13, 8 1/2 x 13, 8 1/4 x 13, 4 1/8 x 9 1/2, 3 7/8 x 7 1/2, C5 Env, C6 Env, DL Env, 16K, Custom Paper Size, Any Size
- Paper Type
Specify the paper type for the bypass tray.
Thin Paper, Plain Paper 1, Plain Paper 2, Recycled Paper, Color Paper, Letterhead, Preprinted Paper, Prepunched Paper, Thick Paper 1, Thick Paper 2, Labels, Bond Paper, Cardstock, Envelope, Any Type
- Custom Paper Size
Specify the custom paper size, when **[Custom Paper Size]** is selected.
 - Unit:
Specify the unit of measurement in "mm" or "inch".
 - Horizontal:
Specify the horizontal width between 90 and 216 mm (3.54 and 8.50 inches).
 - Vertical:
Specify the vertical length between 148 and 900 mm (5.83 and 35.43 inches).

Note

- ☐ Tray 2 is available only when the optional paper feed unit is attached to the printer.
- ☐ Only the PCL6 and PostScript 3 printer driver supports custom size paper longer than 356 mm (14.02 inches). The additional memory unit is required when using the PCL6 printer driver. The additional memory unit might also be required when using the PostScript 3 printer driver, depending on the print data.

Adjusting registration

On the **[Maintenance]** tab, you can adjust color registration and print starting positions.

Normally, you do not have to adjust registration. However, adjustment can be useful in some cases, especially if you want to print in a specific position. Under **[Registration: Tray 2 Paper]**, you can adjust the print image position printed on the sheet fed from tray 2. To check the adjustment result, use **[Print Test Sheet]**.

Also, you can update the firmware by clicking **[Printer Firmware Update]**.

The latest version of the firmware can be downloaded from the supplier's website.

Setting basic functions

On the **[System]** tab, you can set basic functions required to use the printer. The printer can be used on factory-set defaults, but the configuration can be changed depending on the condition of the user. The changed condition holds even if the printer is turned off.

The access code can be changed on this tab.

Making network-related settings

On the **[Network 1]**, **[Network 2]** and **[Network 3]** tabs, you can set configurations about network connection and communication.

The following operations are possible on these tabs:

- Checking the device name, active protocol, and other printer information
- Making interface settings, including the timeout setting and protocol settings
- Checking or making TCP/IP settings
- Checking or making Netware and SMTP settings
- Checking or making SNMP and AppleTalk settings

Settings conditions for printing

On the **[Printer]** tab, you can set conditions for printing.

In the **[PCL]** area, you can specify the conditions such as Orientation and font settings.

In the **[PS]** area, you can specify Resolution and Color Profile.

Software and Utilities Included on the CD-ROM

The following software and utility are included in the CD-ROMs that come with this printer.

Viewing the contents of the CD-ROM

Use the following procedure to view the contents of the CD-ROM.

1 Insert the CD-ROM into the CD-ROM drive.

The installer starts.

2 Click **[Browse This CD-ROM]**.

Explorer starts and displays the contents of the CD-ROM.

Printer Drivers for this Printer

Printing requires installing a printer driver appropriate to your operating system. The following driver is included on the CD-ROM provided with this printer.

❖ **PCL 5c/ 6 printer driver**

This printer driver allows the computer to communicate with the printer via a printer language.

The following operating system is supported.

- Windows 2000/XP/Vista and Windows Server 2003/2003 R2/2008

❖ **PostScript 3 Printer Drivers and PPD files**

PostScript 3 printer driver and the PPD files are included on the CD-ROM provided with this printer. PostScript 3 printer driver allow the computer to communicate with the printer using a printer language. PPD files allow the printer driver to enable specific printer functions.

The following operating system is supported.

- Windows 2000/XP/Vista, Windows Server 2003/2003 R2/2008, and Mac OS X 10.2.8 (or later)

 **Note**

- ☐ The PostScript 3 printer driver and PPD files are included on the CD-ROM.

❖ **PPD files**

PPD files are included on the CD-ROM provided with this printer. PPD files allow the printer driver to enable specific printer functions.

Cautions to Take When Using in a Network

Using DHCP

You can use this printer in a DHCP environment.

- Supported DHCP servers are those which are included with Windows 2000 Server, and Windows Server 2003/2003 R2/2008.
- DHCP relay-agent is not supported. If you use DHCP relay-agent on a network via ISDN, it will result in increased line charges. This is because your computer connects to the ISDN line whenever a packet is transferred from the printer.
- If there is more than one DHCP server, use the same setting for all servers. The printer operates using data from the DHCP server that responds first.

Using AutoNet

If the printer IPv4 address is not assigned by a DHCP server automatically, a temporary IPv4 address starting with 169.254, which is not used on the network, can be automatically selected by the printer.

If an AutoNet address is set as the printer's IP address, it changes every time you turn on the printer. Configure the TCP/IP settings according to your network environment.

You must change this setting to “on” to use AutoNet.

Note

- ☐ The IP address assigned by the DHCP server is given priority over that selected by AutoNet.
- ☐ You can confirm the current IPv4 address on the configuration page.
- ☐ The printer cannot communicate with devices that do not have the AutoNet function. However, this printer can communicate with Macintosh computers running Mac OS X 10.2.3. or higher.

Using Adobe PageMaker Version 6.0, 6.5, or 7.0

Under Windows 2000/XP/Vista, or Windows Server 2003/2003 R2/2008 with Adobe PageMaker, you need to copy PPD files to the PageMaker folder.

PPD files have the ".ppd" extension in the folder
"DRIVERS\PS\XP_VISTA\ (Language)\DISK1\" on the CD-ROM.

The third folder "(Language)" may be substituted by an appropriate language name.

Copy the ".ppd" file to the PageMaker folder.

- **For PageMaker 6.0 default installation**

The directory is "C:\PM6\RSRC\PPD4".

- **For PageMaker 6.5 default installation**

The directory is "C:\PM65\RSRC\USENGLISH\PPD4".

The "USENGLISH" may vary depending on your language selection.

- **For PageMaker 7.0 default installation**

The directory is "C:\PM7\RSRC\USENGLISH\PPD4".

The "USENGLISH" may vary depending on your language selection.

Note

- ☐ If the driver is not set correctly after copying the ".ppd" file, printing may not be performed properly.
- ☐ When using PageMaker, the optional features that can be selected by the printer driver will not be active. The following procedure describes how to activate the optional printer features.
 - ① On the **[File]** menu, click **[Print]**.
The **[Print Document]** dialog box appears.
 - ② Make the necessary settings in the **[Features]** box.

When Using Windows Terminal Service/MetaFrame

The following explains how to use Windows Terminal Service and MetaFrame.

Operating Environment

The following operating systems and MetaFrame versions are supported.

❖ Windows 2000 Server/Advanced Server

- MetaFrame 1.8 SP1/SP2/SP3/FR1 SP3/FR1 SP4
- MetaFrame XP 1.0 SP1/SP2/FR1/FR1 SP2/FR1 SP3/FR2/FR2 SP3/FR3/FR3 SP4
- MetaFrame Presentation Server 3.0
- Citrix Presentation Server 4.0

❖ Windows Server 2003/2003 R2

- MetaFrame XP 1.0 FR3/FR3 SP4
- MetaFrame Presentation Server 3.0
- Citrix Presentation Server 4.0/4.5

Note

- ☐ Under Windows 2000 Server + MetaFrame 1.8 + Service Pack 3 environment, there is a limitation that PCL Mono 5e/5c/6 printer drivers may cause critical issue with Auto Creating Printer function. Under this environment, PS and RPS drivers are supported.
- ☐ MetaFrame XP 1.0 with FR3 is renamed as "MetaFrame XP Presentation Server".
- ☐ For the latest information about the operating system and MetaFrame version, see the suppliers web site.

Supported Printer Drivers

❖ When Windows Terminal Service is operating

- PCL printer driver
- PostScript 3

Limitations

The following limitations apply to the Windows Terminal Service environment. These limitations are built in Windows Terminal Service or MetaFrame.

❖ MetaFrame's [Auto-creating client printers]

Using **[Auto-creating client printers]**, you can select a logical printer created by copying the client's local printer data to the MetaFrame server. We strongly recommend testing this function in your network environment before using it for your work.

- The settings for optional equipment will not be stored in the server after the equipment is disconnected. The settings for optional equipment will be restored to its defaults each time the client computer logs on to the server.
- When printing a large number of bitmap images or using the server in a WAN environment over dial-up lines such as ISDN, printing may not be possible or errors may occur, depending on data transfer rates.
- When using MetaFrame XP 1.0 or higher versions, we recommend making settings in **[Client Printer bandwidth]** under **[Citrix Management Console]** according to the environment.
- If a print error occurs on the MetaFrame XP 1.0 SP1/FR1 and the print job or a printer created in **[Auto-creating client printers]** cannot be deleted, we recommend making settings in **[Delete unfinished print jobs]** in the registry. For details, see the Readme file provided with MetaFrame.
- If a print error occurs on the MetaFrame XP 1.0 FR2 and the print job or a printer created in **[Auto-creating client printers]** cannot be deleted, we recommend making settings in **[Delete unfinished print jobs at logout]** of Citrix Management Console.

❖ MetaFrame's [Printer driver replication]

Using **[Printer driver replication]**, you can distribute printer drivers across all servers in a server farm. We strongly recommend testing this function in your network environment before using it for your work.

- If the printer drivers are not properly copied, install them directly onto each server.

INDEX

100baseTX, 1
10baseT, 1
120 V model, ii
220–240 V model, ii

A

Access code, 78, 111
Adjusting, 50, 80, 114
Administrator mode, 67, 69, 78, 111
Adobe PageMaker, 117
AppleTalk, 72, 81, 104, 114
AutoNet, 116
Auto Run, 14

B

Bidirectional communication, 15

C

CD-ROM, 115
Collate, 32
Color registration, 50
Command, 91, 93
Configuration Page, 48, 71, 77, 85, 110
Connection method, 1
Control panel setting, 43
Counter tab, 67
Cover, 33
Custom paper size, 70, 79, 112

D

DHCP server, 92, 116
Digital camera, 37
Direct printing, 37
DNS server, 92
Duplex printing, 36

E

E-Mail, 82
E-Mail notification, 82
Ethernet, 1
EtherTalk, 95, 103

F

Form Feed, 29
ftp, 91

H

Help Source File Setting, 73
Host Interface, 58
Host name, 92

I

IP address, 4
IPv4 address, 92
IPX, 81, 84

J

Job cancel, 30, 31, 102
Job history, 77, 110
Job Log tab, 76, 110
Job reset, 30, 31
Job status, 77, 110

L

Language, 64
List/Test Print, 48, 71, 77, 110
Login, 69, 72
Login information, 72
Logout, 69
lpr, 91

M

Mac OS X, 95, 100
Maintenance Menu, 50
Maintenance tab, 80, 114
Manual duplex, 35
Manuals for This Printer, i
Memory capacity, 36
Menu, 43
Menu List, 77, 110
MetaFrame, 118, 119

N

NetWare print server, 2
Network connection, 1, 97
Network environment, 3, 91
Network settings, 58, 69, 72, 81
Network tab, 81, 114

O

Option settings, 15

P

- Paper Input Menu, 46
- Paper mismatch, 29
- Paper settings, 69, 70, 79, 101, 112
- Paper size, 36, 46, 69, 70, 79, 112
- Paper type, 46, 69, 70, 79, 112
- Password, 72, 78, 111
- PCL 5c printer driver, 3, 8, 115
- PCL 6 printer driver, 3, 8, 115
- PCL Configuration/Font Page, 77, 110
- PCL Menu, 61
- PCL printer drivers, 3, 8, 17, 81
- PictBridge, 37, 38, 40, 41
- PictBridge feature, 39
- PostScript3 printer driver, 5, 8, 23, 25, 95, 105, 115
- PPD files, 99, 115
- Printer configuration, 71, 77, 78, 85, 110, 111
- Printer Firmware Update, 80, 114
- Printer information, 76, 109
- Printer properties, 17, 19, 21, 23, 25, 27
- Printers and Faxes window, 19
- Printer settings, 17, 23, 69
- Printer status, 67, 75
- Printer tab, 81, 114
- Printer window, 17
- Printing position, 51, 80, 114
- Printing Preferences, 18, 20, 22
- Print server, 7, 89
- PS 3, 25
- PS Configuration/Font Page, 77, 110
- PS Menu, 63

R

- Registration, 50, 80, 114
- Resolution, 36

S

- Service call, 82
- Shared printer, 7
- Smart Organizing Monitor, 74, 108
- SMTP, 72, 81, 114
- SMTP authentication, 83
- SNMP, 72, 81, 84, 114
- Software and utilities, 115
- Sort, 32
- Standard TCP/IP, 1
- Status tab, 67, 76, 109
- Symbols, iii
- System Menu, 54
- System tab, 80, 114

T

- TCP/IP, 72, 81, 97, 114
- Test Page, 51, 77, 110, 114
- Top Page, 66
- Trademarks, 1
- Tray Priority, 70
- Tray registration, 51, 80
- Troubleshooting, 41

U

- UDP, 84
- USB connection, 1, 2, 8, 96
- USB connection problem, 13
- User mode, 67, 78, 111
- User Tools tab, 76, 77, 78, 109, 110, 111

W

- Watermark, 34
- Web Image Monitor, 65, 66
- Web Image Monitor Help, 73
- Windows 2000, 10, 17, 23
- Windows network printer, 2, 7
- Windows printing port, 1
- Windows Server 2003/2003 R2, 11, 19, 25
- Windows Server 2008, 12, 21, 27
- Windows Terminal Service, 118, 119
- Windows Vista, 12, 21, 27
- Windows XP, 11, 19, 25

SP C231N/C232DN Operating Instructions Software Guide

