

Notes for Users

Please note the following corrections to this manual.

Operating Instructions errors

Relevant pages

SP C240SF/C242SF User Guide: p. 298

Corrections

Correct

- EnergySaverMode 2

The machine enters Energy Saver mode 2 after the period of time specified for this setting is passed. The machine consumes less power in Energy Saver mode 2 than in Energy Saver mode 1, but it takes longer to recover from Energy Saver mode 2 than from Energy Saver mode 1.

Default: [On] **(10.1 minutes) Operation panel LCD will display 10minutes**

Wrong

- EnergySaverMode 2

The machine enters Energy Saver mode 2 after the period of time specified for this setting is passed. The machine consumes less power in Energy Saver mode 2 than in Energy Saver mode 1, but it takes longer to recover from Energy Saver mode 2 than from Energy Saver mode 1.

Default: [On] (10 minutes)

Relevant pages

SP C240SF/C242SF User Guide: p. 434

Corrections

Correct

Memory

- **Type 1 model / Type 2 model**

256 MB (128 MB for printer functions only)

Wrong

Memory

- Type 1 model

128 MB

- Type 2 model

256 MB (128 MB for printer functions only)

Relevant pages

SP C240SF/C242SF Safety Information: p. 12

Corrections

Correct

Energy Saver mode 2	Default Time	<u>10.1 minutes</u> <u>(Control panel LCD will display 10 minutes)</u>
---------------------	--------------	---

Wrong

Energy Saver mode 2	Default Time	10 minutes
---------------------	--------------	------------

Relevant pages

SP C240SF/C242SF Quick Guide: p. 42

Corrections

Correct

Saving Energy

This machine is equipped with the following Energy Saver modes: Energy Saver mode 1 and Energy Saver mode 2. In Energy Saver mode, the machine's power consumption is reduced from its normal state.

By default, this machine is set to enter Energy Saver mode 1 if it has been idle for 30 seconds. If another **10.1** minutes pass, the machine will then enter Energy Saver mode 2. The machine takes about 10 seconds to recover from Energy Saver mode 1, and about 30 seconds to recover from Energy Saver mode 2.

According to your convenience, you can change how long the machine waits before entering Energy Saver mode 2 by configuring [Energy Saver Mode] under [Admin. Tools].

Wrong

Saving Energy

This machine is equipped with the following Energy Saver modes: Energy Saver mode 1 and Energy Saver mode 2. In Energy Saver mode, the machine's power consumption is reduced from its normal state.

By default, this machine is set to enter Energy Saver mode 1 if it has been idle for 30 seconds. If another 10 minutes pass, the machine will then enter Energy Saver mode 2. The machine takes about 10 seconds to recover from Energy Saver mode 1, and about 30 seconds to recover from Energy Saver mode 2.

According to your convenience, you can change how long the machine waits before entering Energy Saver mode 2 by configuring [Energy Saver Mode] under [Admin. Tools].

Copyright © 2011

Printed in China

EN 

M100-8528



M1008528