

Wi-Fi Direct Guide

Easy Setup Using Wi-Fi Direct	1
Troubleshooting	2
Appendix	З







Contents

How to Read the Manuals	2
Symbols Used in the Manuals	2
Disclaimer	2
1. Easy Setup Using Wi-Fi Direct	
Checking the SSID	3
Connecting Using Windows	3
SP C260SFNw/C262SFNw	3
SP C260DNw/C262DNw	5
Connecting Using OS X	6
SP C260SFNw/C262SFNw	6
SP C260DNw/C262DNw	7
Connecting Using Android device	8
SP C260SFNw/C262SFNw	8
SP C260DNw/C262DNw	9
Connecting Using iOS device	10
SP C260SFNw/C262SFNw	10
SP C260DNw/C262DNw	13
2. Troubleshooting	
Connection Problems	
Connection has Succeeded but the Wireless LAN Cannot be Used	15
3. Appendix	
How to Change the Encryption Key of Wi-Fi Direct	
SP C260SFNw/C262SFNw	16
SP C260DNw/C262DNw	
Trademark	

Symbols Used in the Manuals

This manual uses the following symbols:

Comportant)

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

Note

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

[]

Indicates the names of keys on the machine's display or control panels.

Disclaimer

To the maximum extent permitted by applicable laws, in no event will the manufacturer be liable for any damages whatsoever arising out of failures of this machine, losses of the registered data, or the use or non-use of this product and operation manuals provided with it.

Make sure that you always copy or have backups of the data registered in this machine. Documents or data might be erased due to your operational errors or malfunctions of the machine.

In no event will the manufacturer be responsible for any documents created by you using this machine or any results from the data executed by you.

Some illustrations in this manual might be slightly different from the machine.

1. Easy Setup Using Wi-Fi Direct

Checking the SSID

Comportant 🖸

- Before doing the following procedure, install the printer driver. For details, see Setup Guide.
- Make sure the Ethernet cable is not connected to the machine.

1. Print the configuration page.

For details about printing the configuration page, see User's Guide.

2. Write down the SSID shown under "Wireless Direct Settings" on the configuration page.

Connecting Using Windows

SP C260SFNw/C262SFNw

Comportant 🔁

- Before doing the following procedure, enable the Wi-Fi Direct function on your computer. For details about enabling the Wi-Fi Direct function, see the computer manual.
- In Steps 8 to 11, configure each setting within two minutes.

1. Press [Setting].



- 2. Press [Network Settings].
- 3. If you are requested to enter a password, enter the password using the number keys, and then press [OK].

A password for accessing the [Network Settings] menu can be specified in [Admin. Tools Lock] under [Administrator Tools] menu.

4. Press [Wi-Fi Enable].

- 5. Press [Enable].
- 6. Turn off the machine, and then turn it back on.
- 7. Press the wireless LAN icon.



- 8. Press [Wi-Fi Direct].
- 9. Select the SSID (DIRECT-XXXXXX) of the machine from available wireless connection in your computer, and then click [Connect].



A window for entering the encryption key opens.

10. Enter the encryption key for Wi-Fi Direct.

The default encryption key is "admin123".

For details about changing the encryption key, see page 16 "How to Change the Encryption Key of Wi-Fi Direct".

11. Confirm the status of the selected SSID changes to "Connected".

Configuring the Wi-Fi settings is complete.

SP C260DNw/C262DNw

🔁 Important 🔵

- Before doing the following procedure, enable the Wi-Fi Direct function on your computer. For details about enabling the Wi-Fi Direct function, see the computer manual.
- In Steps 1 to 4, configure each setting within two minutes.

1. Press the [Wi-Fi Direct] key.



The LED of [Wi-Fi Direct] key starts flashing.

2. Select the SSID (DIRECT-XXXXXX) of the machine from available wireless connection in your computer, and then click [Connect].



A window for entering the encryption key opens.

3. Enter the encryption key for Wi-Fi Direct.

The default encryption key is "admin123".

For details about changing the encryption key, see page 16 "How to Change the Encryption Key of Wi-Fi Direct".

4. Confirm the status of the selected SSID changes to "Connected". Configuring the Wi-Fi settings is complete.

Connecting Using OS X

SP C260SFNw/C262SFNw

Coloritant 😯

• In Steps 8 to 14, configure each setting within two minutes.

1. Press [Setting].



- 2. Press [Network Settings].
- 3. If you are requested to enter a password, enter the password using the number keys, and then press [OK].

- 4. Press [Wi-Fi Enable].
- 5. Press [Enable].
- 6. Turn off the machine, and then turn it back on.
- 7. Press the wireless LAN icon.



8. Press [Wi-Fi Direct].

9. Start System Preferences in your computer.

10. Click [Network].

11. Click [Wi-Fi].

12.Select the SSID (DIRECT-XXXXXX) of the machine from the [Network Name] pop-up menu.

The window for entering an encryption key is displayed.

13. Enter the encryption key of Wi-Fi Direct.

The default encryption key is "admin123".

For details about changing the encryption key, see page 16 "How to Change the Encryption Key of Wi-Fi Direct".

14. Confirm the status of the selected SSID changes to "Connected".

Configuring the Wi-Fi settings is complete.

SP C260DNw/C262DNw

Coloritant 🔁

• In Steps 1 to 7, configure each setting within two minutes.

1. Press the [Wi-Fi Direct] key.



The LED of [Wi-Fi Direct] key starts flashing.

- 2. Start System Preferences in your computer.
- 3. Click [Network].
- 4. Click [Wi-Fi].
- 5. Select the SSID (DIRECT-XXXXXX) of the machine from the [Network Name] pop-up menu.

The window for entering an encryption key is displayed.

6. Enter the encryption key of Wi-Fi Direct.

The default encryption key is "admin123".

For details about changing the encryption key, see page 16 "How to Change the Encryption Key of Wi-Fi Direct".

7. Confirm the status of the selected SSID changes to "Connected".

Configuring the Wi-Fi settings is complete.

Connecting Using Android device

SP C260SFNw/C262SFNw

😪 Important 🔵

• In Steps 8 to 13, configure each setting within two minutes.





- 2. Press [Network Settings].
- 3. If you are requested to enter a password, enter the password using the number keys, and then press [OK].

- 4. Press [Wi-Fi Enable].
- 5. Press [Enable].
- 6. Turn off the machine, and then turn it back on.

7. Press the wireless LAN icon.



- 8. Press [Wi-Fi Direct].
- 9. Open the advanced menu from available wireless connection screen in your Android device.
- 10. Tap [Wi-Fi Direct].

11. Tap the SSID (DIRECT-XXXXXX) of the machine.

The screen for entering an encryption key is displayed.

12. Enter the encryption key of Wi-Fi Direct.

The default encryption key is "admin123". For details about changing the encryption key, see page 16 "How to Change the Encryption Key of Wi-Fi Direct".

13. Confirm the string under the SSID of the machine changes to "connected".

Configuring the Wi-Fi settings is complete.

SP C260DNw/C262DNw

🔿 Important

• In Steps 1 to 6, configure each setting within two minutes.

1. Press the [Wi-Fi Direct] key.



The LED of [Wi-Fi Direct] key starts flashing.

- 2. Open the advanced menu from available wireless connection screen in your Android device.
- 3. Tap [Wi-Fi Direct].
- **4.** Tap the SSID (DIRECT-XXXXXX) of the machine. The screen for entering an encryption key is displayed.
- 5. Enter the encryption key of Wi-Fi Direct.

The default encryption key is "admin123". For details about changing the encryption key, see page 16 "How to Change the Encryption Key of Wi-Fi Direct".

6. Confirm the string under the SSID of the machine changes to "connected". Configuring the Wi-Fi settings is complete.

Connecting Using iOS device

SP C260SFNw/C262SFNw

Comportant (

• In Steps 8 to 13, configure each setting within two minutes.

1. Press [Setting].



- 2. Press [Network Settings].
- 3. If you are requested to enter a password, enter the password using the number keys, and then press [OK].

- 4. Press [Wi-Fi Enable].
- 5. Press [Enable].

- 6. Turn off the machine, and then turn it back on.
- 7. Press the wireless LAN icon.



- 8. Press [Wi-Fi Direct].
- 9. Tap [Settings] in your iOS device.



10. Tap [Wi-Fi].

iPad 🗢	9:40 AM 🕸 88% 🔳 🔿
Settings	Wi-Fi
/==,	Wi-Fi
🕤 Wi-Fi r-wan#radio	✓ r-wanitradio 🔒 🗢 🕕
·	CHOOSE A NETWORK $\frac{S^{M_{C_{c}}}}{S_{C_{c}}}$
	Other
C Notifications	
Control Center	Ask to Join Networks
C Do Not Disturb	Known networks will be joined automatically. If no known
	networks are available, you will have to manually select a network.
General	
AA Display & Brightness	
🛞 Wallpaper	
Sounds	
Passcode	
Battery	
Privacy	
iCloud tcopmg01@gmail.com	
iTunes & App Store	
Mail, Contacts, Calendars	
Notes	
i Denti dan	

11. Tap the SSID (DIRECT-XXXXXX) of the machine.



The screen for entering an encryption key is displayed.

12. Enter the encryption key of Wi-Fi Direct.

The default encryption key is "admin123".

For details about changing the encryption key, see page 16 "How to Change the Encryption Key of Wi-Fi Direct".

13. Confirm the selected SSID is checked.

Configuring the Wi-Fi settings is complete.

SP C260DNw/C262DNw

Colored Important

• In Steps 1 to 6, configure each setting within two minutes.

1. Press the [Wi-Fi Direct] key.



The LED of [Wi-Fi Direct] key starts flashing.

2. Tap [Settings] in your iOS device.



3. Tap [Wi-Fi].

iPad 🗢		9:40 AM	* 88% 💼
	Settings	Wi-Fi	
7-		Wi-Fi	
?	Wi-Fi r-wan#radio	🗸 r-wanifradio	ê ≑ (Ì)
े र -	/	CHOOSE A NETWORK 🖏	
		Other	
	Notifications		
8	Control Center	Ask to Join Networks	\bigcirc
C	Do Not Disturb	Known networks will be joined automatically. If n	o known select a
		network.	
Ø	General		
AA	Display & Brightness		
*	Wallpaper		
((۱)	Sounds		
A	Passcode		
	Battery		
	Privacy		
	iCloud tcopmg01@gmail.com		
\bigcirc	iTunes & App Store		
	Mail, Contacts, Calendars		
	Notes		
-			

4. Tap the SSID (DIRECT-XXXXXX) of the machine.

iPad 穼		9:40 AM 🕴 88% 💷 🕅
	Settings	Wi-Fi
✐	Airplane Mode	Wi-Fi
Ŷ	Wi-Fi r-wanifradio	✓ r-wanifradio 🔒 🗢 (i)
*	Bluetooth On	
		DIRECT-1895/1877 🔒 🗢 (ì
C	Notifications	`/
	Control Center	
C	Do Not Disturb	Ask to Join Networks
		Known networks will be joined automatically. If no known
Ø	General	network.
۸A	Display & Brightness	
*	Wallpaper	
())	Sounds	
â	Passcode	
	Battery	
	Privacy	
	iCloud tcopmg01@gmail.com	
\bigcirc	iTunes & App Store	
	Mail, Contacts, Calendars	
	Notes	
:==	Densis dans	

The screen for entering an encryption key is displayed.

5. Enter the encryption key of Wi-Fi Direct.

The default encryption key is "admin123".

For details about changing the encryption key, see page 16 "How to Change the Encryption Key of Wi-Fi Direct".

6. Confirm the selected SSID is checked.

Configuring the Wi-Fi settings is complete.

Connection Problems

Problem	Possible cause	Solution
Problems occur even after you configure the connection settings again.	The SSID or encryp- tion key is not entered correctly.	Check that the SSID or encryption key is entered correctly. Prefix a character string "DIRECT-" to the SSID. You can enter a maximum of 32 characters, which includes "DIRECT-".

Connection has Succeeded but the Wireless LAN Cannot be Used

Problem	Possible cause	Solution
A connection has been es- tablished but the wireless LAN cannot be used.	An Ethernet cable is connected to the ma- chine.	If Ethernet and wireless LAN are both connected, Ethernet has priority. To use the wireless LAN, disconnect the Ethernet cable from the machine.
	Connection may fail due to radio wave conditions.	If there is another wireless network near- by, the wireless connection may fail. Wait for a while, and then connect to the net- work again.

3. Appendix

How to Change the Encryption Key of Wi-Fi Direct

SP C260SFNw/C262SFNw

You can change the encryption key of Wi-Fi Direct by using the control panel or Web Image Monitor.

Configuring Settings Using the Control Panel

1. Press [Setting].



- 2. Press [Network Settings].
- 3. If you are requested to enter a password, enter the password using the number keys, and then press [OK].

- 4. Press [Wi-Fi Enable].
- 5. Press [Enable].
- 6. Turn off the machine, and then turn it back on.
- 7. Press the wireless LAN icon.



- 8. Press [Wi-Fi Direct SSID].
- 9. Press the entry field of [Password:].
- 10. Enter the password of Wi-Fi Direct, and then press [OK].
- 11. Turn the machine off and then on.

Configuring Settings Using Web Image Monitor

- 1. Start your web browser.
- 2. Enter "http://(machine's IP address or host name)/" in your web browser's URL bar.

Top Page of Web Image Monitor appears.

If the machine's host name has been registered on the DNS or WINS server, you can enter it.

3. Click [Network Settings].

RECOH Web hage moder Home Larguage Ergith System Bidrige Status Contern Machine Information Som Destination It Adde Nome: 92 (2025)File Tail Speed Data Device Status Destination It Adde Nome: 92 (2025)File Tail Speed Data Device Status Device Status Device Status Device Status Device Status Device Status Device Status Device Status Status Memoristict Tools Contern Grant Status Contern Velow Status Device Status Mageria Device Status Yoldw Device Status Open Device Status Contern Velow Status Device Status Contern Open Device Status Contern Waits Tore Bottle Device Status Contern Weits Tore Bottle Device Status Contern	owiedos Base []
Normal mode Unit as an outcome System Sating Larguage [rights] State Dub Destination State [rights] The table [rights] State [rights] State Dub Destination State [rights] The table [rights] State [rights] State Dub Destination [rights] State [rights] The table [rights] State [rights] State Dub Destination [rights] State [rights] State Destination [rights] State [rights] State Destination [rights] State [rights] State Dub Destination [rights] Stat	
System Settings Sach Durchstein Sach D	
Back Sectors I local frame Sectors Fair Result Flag I conside I conside Sectors I conside I conside Sectors I conside I conside Restances I conside I conside Sectors I conside I conside Restances I conside<	
special stratem # Ortical in High Istine ECORES Har (0757A III High Istine CORES Har (0757A) III High Istine CORES Har (0757A) </td <td></td>	
Toter Bick Bick Bick Bick Bick Yolow Bick Remaining Last 4 Yolow Bick Bick	
Print Latitizant Fame Administrator Tools 8 00 Remaining Level 5 Black III Remaining Level 5 Remaining Level 5 Yelow IIII Remaining Level 5 Remaining Level 5 Oyan IIII Stata OK Stata OK	
Black U Remaining Land 4 Black U Remaining Land 4 Bayrta U Remaining Land 5 Yalow U Remaining Land 5 Cyan U Remaining Land 5 Wata Tore Botta U Statu OK Hammadia Tayafe U Statu OK	
Magenta La Remaining Lave 5 Yalaw La Remaining Lave 5 Cyan La Remaining Lave 5 Wate Torse Sortile La Status CK Hermatick Torse Torse La Status CK	
Yellow Mail Remaining Losel 5 Cyan Mail Remaining Losel 5 Waste Trave Bottle L Status OK Harmedide Travefe Unit U Status OK	
Cyan Lea Remaining Lead 5 Wate four Bottle L Status CK Hammolde Transfer Unit	
Waste Torer Botte LJ Status OK Intermediate Transfer Unit LJ Status OK	
Intermediate Transfer Unit Status OK	
Fusing Unit Status OK	
Transfer Roller Lu Status OK	
Paper Tray	
Tay 1 E Status OK A4 Middle Thick Paper (75-50g/m2)	
Tray 2 📕 Status OK A4 🗍 Middle Thick Paper (75-90g/m2)	
Bypass Tray U Out of Paper A4 Middle Thick: Paper (75-90g/m2)	

- 4. Click the [Wireless] tab.
- 5. Enter the encryption key in [WPA Passphrase] under [Wi-Fi Direct Settings].

6. Click [OK].

Enter the administrator password if you have registered the password in [Administrator Tools].

7. Close your web browser.

SP C260DNw/C262DNw

You can change the encryption key of Wi-Fi Direct by using the control panel or Web Image Monitor.

Configuring Settings Using the Control Panel

- 1. Press the [Menu] key.
- Press the [▲] or [▼] key to select [Host Interface], and then press the [OK] key.
- 3. Press the [▲] or [▼] key to select [Network Setting], and then press the [OK] key.
- Press the [▲] or [▼] key to select [Wi-Fi Config.], and then press the [OK] key.
- 5. Press the $[\blacktriangle]$ or $[\triangledown]$ key to select [Wi-Fi], and then press the [OK] key.
- 6. Press the [▲] or [▼] key to select [Active], and then press the [OK] key.
- 7. Turn off the machine, and then turn it back on.
- 8. Press the [Menu] key.
- Press the [▲] or [▼] key to select [Host Interface], and then press the [OK] key.
- 10. Press the [▲] or [▼] key to select [Network Setting], and then press the [OK] key.
- 11. Press the [▲] or [▼] key to select [Wi-Fi Config.], and then press the [OK] key.
- 12.Press the [▲] or [▼] key to select [Wi-Fi Direct PW], and then press the [OK] key.
- 13. Press the [▲] or [▼] key to enter the password of Wi-Fi Direct, and then press the [OK] key.
- 14. Turn off the machine, and then turn it back on.

Configuring Settings Using Web Image Monitor

- 1. Start your web browser.
- 2. Enter "http://(machine's IP address or host name)/" in your web browser's URL bar.

Top Page of Web Image Monitor appears.

If the machine's host name has been registered on the DNS or WINS server, you can enter it.

3. Click [Network Settings].

	web image monitor				
em Settinos	Home	Language English	V 🙋 Refresh		
	Status Counter Machine Information				
ands Cattlines					
Kirk Searrys	Model Name :SP C262DNw				
Inistrator Tools	Location :				
	Contact :				
	Device Status :Energy Saver 2				
	-				
	Toner	0 50 100			
	Black			Remaining Level 5	
	Magenta	ka l		Remaining Level 5	
	Yellow	61		Remaining Level 5	
	Cyan	لها		Remaining Level 5	
	Waste Toner Bottle	L		Status OK	
	Intermediate Transfer Unit			Status OK	
	Fusing Unit	L		Status OK	
	Transfer Roller	L		Status OK	
	Paper Tray				
	Tray 1	Status OK	A4 💭	Middle Thick Paper (75-90g/m2)	
	Bypass Tray	Out of Paper	A4 🗍	Middle Thick Paper (75-90g/m2)	

- 4. Click the [Wireless] tab.
- 5. Enter the encryption key in [WPA Passphrase] under [Wi-Fi Direct Settings].
- 6. Click [OK].

Enter the administrator password if you have registered the password in [Administrator Tools].

7. Close your web browser.

Trademark

Android is a trademark of Google Inc.

IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

Wi-Fi, Wi-Fi Direct are registered trademarks of Wi-Fi Alliance.

OS X is a trademarks or registered trademarks of Apple Inc., in the United States and other countries.

Microsoft[®], Windows[®] are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries/regions.

Other product names used in this manual are for identification purposes only and may be trademarks of their respective companies.

We do not have any or all rights to these marks.

All Microsoft product screenshots are reprinted with permission from the Microsoft Corporation.



