

Notes for Users (Tables for Paper Settings Conversion)

This supplement provides notes for the manual provided with this application.
Read this supplement in conjunction with the Operating Instructions.

The paper attributes specified in this product are converted to match the paper type of the printer device to which the job is output. Because of this, the same attributes in this product will be applied to different types of paper depending on the printer device. Use this information to configure paper attributes according to the printer device you are using.

In the table below, which lists paper attributes that can be converted, printer devices are classified into Types A to G. For details about the type of the printer device you are using and printers that are compatible with this product, see Readme.

For details about supported paper types, how to load paper into the trays, and other information about paper types, see the documentation provided with your printer device.

Paper Types and Settings

■ Printing on thin or thick paper

If you print on thin or thick paper, prepare the paper you want to use by using the paper pod of this product and specifying the [Weight (gsm)] setting in this product according to your printer device.

When specifying the [Weight (gsm)] setting, set the items listed below to their default values. Specifying values other than the default values of these items might override the weight setting.

[Paper type] [Color] [Recycled Content (%)] [Preprinted] [Prepunched] [Texture] [Coating (front side)] [Opacity]

[Weight (gsm)] setting for this product

Paper type	Types of Printer Device						
	Type A	Type B	Type C	Type D	Type E	Type F	Type G
Thin Paper	-	40–51	52–65	52–65	60–75	60–63	52.3–63
Plain Paper	52–90	52–105	66–80	66–80	76–100	64–80	64–80
Plain Paper 2	-	-	81–99	81–100	-	81–105	81–105
Middle Thick	-	106–163	100–127	101–127	101–126	106–163	106–163
Thick Paper 1	91–216	164–216	128–163	128–169	127–156	164–220	164–220
Thick Paper 2	-	217–256	164–249	170–249	157–220	221–256	221–256
Thick Paper 3	-	257–300	250–300	250–300	221–300	257–300	257–300

■ Printing on paper other than thin or thick paper

If you print on paper other than thin or thick paper, prepare the paper you want to use by using the paper pod of this product and referring to the table on the back of this paper, and specifying the settings in this product according to the paper type.

"-" in the table indicates that the default value is used. Specifying values other than the default values of these items might override the weight setting.



Paper Attributes of This Product										
Paper type	Paper type	Weight (gsm)	Color	Recycled Content (%)	Preprinted	Prepunched	Texture	Coating (front side)	Opacity	
Recycled Paper	Plain	-	-	1-100	-	-	-	None	-	
Letterhead	Letterhead	-	-	-	-	-	-	None	-	
Special Paper or Special Paper 1	Plain	-	-	-	-	-	Light cockle	None	-	
Special Paper 2	Plain	-	-	-	-	-	Machine finished	None	-	
Special Paper 3	Plain	-	-	-	-	-	Mottled	None	-	
Special Paper 4	Plain	-	-	-	-	-	Traditional laid	None	-	
Special Paper 5	Plain	-	-	-	-	-	Calendered	None	-	
Special Paper 6	Plain	-	-	-	-	-	English	None	-	
Tab Stock	Tab stock Full cut tabs Pre-cut tabs	-	-	-	-	-	-	None	-	
Label Paper	Labels	-	-	-	-	-	-	None	-	
Color Paper 1	Plain	-	Other than colors below	-	-	-	-	None	-	
Yellow	Plain	-	Yellow	-	-	-	-	None	-	
Green	Plain	-	Green	-	-	-	-	None	-	
Gray	Plain	-	Gray	-	-	-	-	None	-	
Blue	Plain	-	Blue	-	-	-	-	None	-	
Purple	Plain	-	Purple	-	-	-	-	None	-	
Ivory	Plain	-	Ivory	-	-	-	-	None	-	
Orange	Plain	-	Orange	-	-	-	-	None	-	
Pink	Plain	-	Pink	-	-	-	-	None	-	
Red	Plain	-	Red	-	-	-	-	None	-	
Preprinted	Plain	-	-	-	Yes	-	-	None	-	
Prepunched	Plain	-	-	-	-	Yes	-	None	-	
Translucent Paper	Plain	-	-	-	-	-	-	None	Translucent	
OHP	Transparency	-	-	-	-	-	-	None	Transparent	
Coated Paper or Coated Paper 1	Plain	-	-	-	-	-	-	Coated	-	
Coated Paper 2	Plain	-	-	-	-	-	-	Glossy	-	
Coated Paper 3	Plain	-	-	-	-	-	-	Matted	-	
Envelope	Envelope	-	-	-	-	-	-	None	-	