


FAX 1190L User's Guide



Read this manual carefully before you use this machine and keep it handy for future reference. For safe and correct use, be sure to read the Important Information in this manual before using the machine.


Safety precautions

We use the following icons throughout this User's Guide.

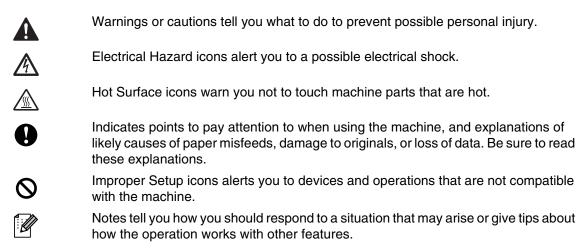

To use the machine safely

Please keep these instructions for later reference and read them before attempting any maintenance.

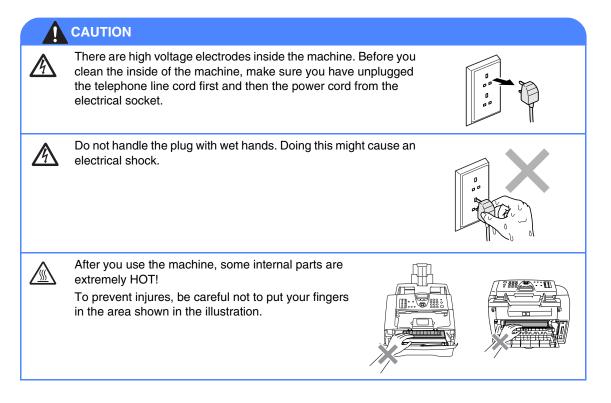

	CAUTION
	The fuser unit is marked with a caution label. Please do not remove or damage the label.
	 Use caution when installing or modifying telephone lines. Never touch telephone wires or terminals that are not insulated unless the telephone line has been disconnected at the wall socket. Never install telephone wiring during a lightning storm. Never install a telephone wall socket in a wet location. This product must be installed near an electrical socket that is easily accessible. In case of an emergency, you must disconnect the power cord from the electrical socket to shut off the power completely. To reduce the risk of shock or fire, use only a No. 26 AWG or larger telecommunication line
	cord. Do not use a vacuum cleaner to clean up scattered toner. Doing this might cause the toner dust to ignite inside the vacuum cleaner, potentially starting a fire. Please carefully clean the toner dust with a dry, lint-free cloth and dispose of it according to local regulations.
<u>)</u>	Do NOT use flammable substances or any type of spray to clean the inside or outside of the machine. Doing this may cause a fire or electrical shock.

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to people, including the following:

- 1. Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or washing machine, in a wet basement or near a swimming pool.
- 2. Avoid using this product during an electrical storm. There may be a remote risk of electric shock from lightning.
- 3. Do not use this product to report a gas leak in the vicinity of the leak.
- 4. Use only the power cord supplied with this machine.

SAVE THESE INSTRUCTIONS

Certification

Declaration of conformity

CE

Notice to Users in EU Countries

This product complies with the essential requirements and provisions of Directive 1999/5/EC of the European Parliament and of the Council of 9 March 1999 on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity.

Notice to Users Accessing Analog PSTN in EU Countries

This product is designed to be able to access analog PSTN in all EU countries. Local PSTN compatibility is dependent on software switch settings. Please contact your service representative if relocating this product to another country. In the event of problems, please contact your service representative in the first instance.

FAX 1190L: The CE declaration of Comformity is available on the Internet at URL :

http://www.ricoh.co.jp/fax/ce_doc

CE Marking Traceability Information (For EU Countries Only.)

Manufacturer:

Ricoh Co., Ltd.

3-6 Nakamagome 1-chome, Ohta-ku, Tokyo, 143-8555 Japan

Authorized representative:

Ricoh Europe PLC

66 Chiltern Street London

Symbols for the main power switch

In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

- means POWER ON.
- O means POWER OFF.

Quick Reference Guide

Sending Faxes

Automatic Transmission

 If it is not illuminated in green, press (Fax).



 
- Load your document.
- Enter the fax number using One-Touch, Speed-Dial, Search or the dial pad.
- 4 Press 🕸 Start.

Storing numbers

Storing One-Touch Dial numbers



Press Menu/Set, 2, 3, 1.





want to store the number.

To access One-Touch numbers 11 to 20, hold down \$ Shift as you press the One-Touch key.

3 Enter the number (up to 20 digits).

Press Menu/Set.

4 Enter the name up to 15 characters (or leave it blank).

Press Menu/Set.



5 Press ∞/c Stop/Exit.

Storing Speed-Dial numbers



Press Menu/Set, 2, 3, 2.

Using the dial pad, enter a three-digit Speed-Dial location number (001 - 200).

Press Menu/Set.

- 3 Enter the number (up to 20 digits). Press Menu/Set.
- Enter the name up to 15 characters (or leave it blank).

Press Menu/Set.



Dialling operations

One-Touch Dialling / Speed-Dialling

1 If it is not illuminated in green, press (Fax).



- 2 Load your document.
 - Press the One-Touch key of the number you want to call.

Note

To dial One-Touch numbers 11 to 20, hold down \$ Shift as you press the One-Touch key.

-OR-

Press M/ Search/Speed Dial, press #. Press the three-digit Speed-Dial number.



Press 1 Start.

Using Search

- If it is not illuminated in green, press

 (IF)

 (Fax).
- 2 Load your document.
- Press III/ Search/Speed Dial, and then enter the first letter of the name you're looking for.
- 4 Press ◀ or ► to search the memory.
- 5 Press **() Start**.

Making copies

Single copy

- Press (Copy) to illuminate it in green.
- 2 Load your document.
- 3 Press **()** Start.

Sorting copies using the ADF

- Press (Copy) to illuminate it in green.
- 2 Load your document.
- 3 Use the dial pad to enter the number of copies you want (up to 99).
- Press ☐ Options and ▲ or ▼ to select Stack/Sort.

Press Menu/Set.

- 5 Press ▲ or ▼ to select Sort. Press Menu/Set.
- 6 Press **() Start**.

Table of Contents

Introduction

1

Using this Guide	1-1
Choosing a location	
To view Documentation	1-3
Control panel overview (For EU only)	
Control panel overview (For USA, Canada and Asia/Oceania)	
Load document	
Using the automatic document feeder (ADF)	
About paper	
Recommended paper	
Choosing acceptable paper	
Paper capacity of the paper trays	
How to load paper	
To load paper or other media in the paper tray	
To load paper or other media in the manual feed slot	
About fax machines	
Custom features	
Do you have BT's Call Minder/Voice Mail on the phone line?	
Why should there be problems?	
How can you avoid possible problems?	
Fax tones and handshake	
ECM (Error Correction Mode)	

2 Getting started

Initial setup	2-1
Setting the Date and Time	2-1
Setting Tone and Pulse dialling mode	
(Not available in some countries)	2-1
Setting the Station ID	2-2
Setting the Phone Line Type (For EU model only)	2-3
PABX (PBX) and TRANSFER	2-3
General Setup	
Setting the Mode Timer	
Setting the Paper Type	2-4
Setting the Paper Size	2-5
Setting the Ring Volume	2-5
Setting the Beeper Volume	2-6
Setting the Speaker Volume	2-6
Setting the Handset Volume (For USA and Canada only)	2-6
Choosing the Handset Volume (For Volume Amplify)	
(For USA and Canada only)	2-7
Setting Volume Amplify	
(For USA and Canada only)	2-7
Turning on Automatic Daylight Savings Time	2-8
Toner Save	
Sleep Time	
Setting the LCD Contrast	

Security	2-9
Memory Security	
Setting up the password	2-10
Changing the Memory Security password	
Turning Memory Security on	2-11
Turning Memory Security off	2-11
Setting Lock	2-11
Setting up the password	2-11
Changing the Setting Lock password	2-12
Turning Setting Lock on	2-12
Turning Setting Lock off	2-12

3 Setup Send

How to enter Fax mode	3-1
How to dial	3-1
Manual dialling	3-1
One-Touch Dialling	3-1
Speed-Dialling	3-2
Search	3-2
Fax Redial	3-3
How to Fax	3-3
Automatic transmission	3-3
Faxing from the ADF	3-3
Manual transmission	
Sending a fax at the end of a conversation	3-4
Out of Memory message	
Basic sending operations.	
Sending faxes using multiple settings	
Contrast	
Fax Resolution	
Dual Access	3-6
Real Time Transmission	3-6
Broadcasting	3-7
Checking job status	
Cancelling a fax in progress	
Cancelling a scheduled job	
Advanced sending operations	
Composing the electronic Cover Page	
Composing your own comments	3-9
Cover page for the next fax only	3-9
Send a cover page for all faxes	
Using a printed cover page	
Overseas Mode	3-10
Delayed Fax	3-11
Delayed Batch Transmission	
Setup for Polled Transmit (Standard)	
Setup for Polled Transmit with Secure Code	
(For EU and Asia/Oceania only)	3-13

4 Setup Receive

Basic receiving operations	4-1
Choosing the Receive Mode	4-1
To select or change your Receive Mode	4-2
Setting the Ring Delay	4-2
Setting the F/T Ring Time (Fax/Tel mode only)	
Fax Detect (Easy Receive for USA and Canada)	4-3
Printing a reduced incoming fax (Auto Reduction)	
Receiving a fax at the end of a conversation	4-5
Advanced receiving operations	4-5
Printing a fax from the memory	4-5
Setting the Print Density	4-5
Reception into memory	4-6
If Memory Receive is On at this time	4-6
If Memory Receive is Off at this time	4-6
Polling	4-6
Setup for Polling Receive (Standard)	
Secure Polling (For EU and Asia/Oceania only)	4-7
Setup for Polling Receive (Secure) (For EU and Asia/Oceania only)	4-7
Setup for Polling Receive (Timer) (For EU and Asia/Oceania only)	4-7
Sequential Polling	4-7

5 Quick-Dial numbers and dialling options

Storing numbers for easy dialling	5-1
Storing One-Touch numbers	
Storing Speed-Dial numbers	
Changing One-Touch / Speed-Dial numbers	
Setting up Groups for Broadcasting	
Dialling options	
Access codes and credit card numbers	
Pause	5-4
Tone or Pulse	

6 Remote Fax Options

Setting Remote Fax Options	6-1
Setting up Fax Forwarding	6-1
Setting Fax Storage	6-1
Programming your pager number (For USA and Canada only)	6-2
Turning off Remote Fax Options	6-2
Changing Remote Fax Options	6-3
Setting your Remote Access Code	6-3
Remote Retrieval	6-4
Using your Remote Access Code	6-4
Remote commands	6-5
Retrieving fax messages	6-6
Changing your Fax Forwarding number	6-6

7 Printing reports

Fax settings and activity	7-1
Customizing the Transmission Verification Report	
Setting the Journal Period	
Printing reports	
How to print a report	

8 Making copies

Using the machine as a copier	
Enter Copy mode	
Making a single copy	
Making multiple copies	
Stop copying	
Using the temporary Copy key	
Changing the temporary copy settings	
Enlarging or reducing the image copied	
Quality	
Sorting copies using the ADF	
Making N in 1 copies (Page Layout)	
Changing the default copy settings	
Quality	
Adjusting contrast	
Out of Memory message	
, 5	

9 Important information for EU

9-1
9-1
9-1
9-1
9-2
9-3

10 Important information for USA and Canada

Standard telephone and FCC Notices These notices are in effect on models sold and used in the United States only.	10-1
Federal Communications Commission (FCC) Declaration of Conformity	
(USA only)	10-2
Caution	
Important - about the interface cable	10-2
Industry Canada Compliance Statement (Canada only)	10-2
RESTRICTIONS CONCERNANT LE RACCORDEMENT DE MATÉRIEL	10-3
AVIS	10-3
AVIS	10-3
Disconnect device	10-3
Laser safety	10-3
FDA regulations	
Important safety instructions	
Trademarks	

11 Troubleshooting and routine maintenance

Troubleshooting	
Error messages	11-1
Checking if the machine has faxes in its memory	
Forwarding faxes to another fax machine	11-4
Document jams	
Paper jams	
Paper is jammed inside the machine	
Paper is jammed at the back of the machine	
Paper is jammed inside the drum unit and toner cartridge assemble	
If you are having difficulty with your machine	
Improving the print quality	
Cleaning the drum unit	
Compatibility	
Packing and shipping the machine	
Routine maintenance	
Cleaning the outside of the machine	
Cleaning the scanner	
Cleaning the laser scanner window	11-20
Cleaning the corona wire	
Replacing the toner cartridge	
How to replace the toner cartridge	
Replacing the drum unit	
Machine Information	
Checking the Serial Numbers	
Checking the Page Counters	
Checking the Drum Life	

Appendix A

Α

Telephone services for U.K.	A-1
BT Call Sign (For U.K. Only)	
To enable the machine to work with BT Call Sign	
(Only with your external phone)	۸ 1
Setting up telephone services (for USA and Canada)	
Distinctive Ring	
What does your telephone company's 'Distinctive Ring' do?	A-2
What does 'Distinctive Ring' do?	A-2
Do you have Voice Mail?	
Before you choose the ring pattern to register	
Registering the Distinctive Ring pattern	
Turning off the Distinctive Ring	A-3
Caller ID	
Viewing Caller ID List	
Printing Caller ID List	A-4
Call Waiting	A-5
Telephone Service for Australia	A-5
Telstra [®] FaxStream [®] Duet [®] (Distinctive Ringing)	A-5
What is the Advantage of using Telstra® FaxStream® Duet® Function?	A-6
How does Telstra [®] FaxStream [®] Duet [®] Work?	A-6
Set the Distinctive Ringing to ON	A-7

Caller ID (Caller IDentification)	A-7
Advantages of Caller ID.	
How Does the Caller ID Work?	
The Caller ID Appears on the Display When Your Telephone Rings	A-7
The Caller ID is Stored in Your Machine Memory	A-7
Viewing Caller ID List	
Printing Caller ID List	
Telephone Service for New Zealand	
FaxAbility	
How Will the Fax Machine Treat All Other Numbers?	
What is the Advantage of Using the FaxAbility Function?	A-8
How Does FaxAbility Work?	
How to Turn FaxAbility OFF or ON	
Caller ID (Caller IDentification)	
Advantages of Caller ID.	
How Does the Caller ID Work?	
The Caller ID Appears on the Display When Your Telephone Rings	. A-10
Viewing Caller ID List	
Printing Caller ID List	
Telephone Service for Some Countries	
Distinctive Ringing (For Singapore and Hong Kong)	. A-11
Setting the Distinctive Ringing	
Caller ID (For Singapore and Hong Kong)	. A-12
Viewing Caller ID List	
Printing Caller ID List	. A-12
Advanced receiving operations	. A-13
Operation from extension telephones	. A-13
For Fax/Tel mode only	. A-13
Using a cordless external handset	. A-13
Changing the remote codes	. A-14
Connecting an external device to your machine	. A-14
Connecting an external telephone	
Туре А	. A-14
Туре В	. A-14
Туре С	. A-15
Туре D	. A-15
Connecting an external telephone answering device (TAD)	. A-15
Sequence	. A-15
Туре А	
Туре В	. A-16
Туре С	. A-16
Туре D	. A-16
Connections	
Recording outgoing message (OGM) on an external TAD	. A-17
Special line considerations for U.K.	. A-17
Using extension telephones (For U.K. only)	. A-17

Special line considerations for USA and Canada	A-18
Roll over phone lines	A-18
Two-line phone system	A-18
Converting telephone wall outlets	A-19
Installing machine, external two-line TAD and two-line telephone.	A-19
Multi-line connections (PBX)	A-20
If you are installing the machine to work with a PBX	A-20
Custom features on your phone line	A-20

Appendix B

B

S

R

On-screen programming	B-1
Menu table	
Memory storage	B-1
Navigation keys	
Entering Text	
Inserting spaces	
Making corrections	
Repeating letters	
Special characters and symbols	

G Glossary

Specifications

Product description	S-1
General	
Print media	S-3
Сору	
Fax	
Printer	S-5
Interfaces	S-6
You can download the latest printer driver from our Website	S-6
Computer requirements	S-7
Consumable items	

Index

Remote Retrieval Access card

Introduction

Using this Guide

1

Throughout this Guide you will see special symbols alerting you to important warnings, notes and actions. Special fonts identify keys you should press, messages that appear on the LCD, and important points or related topics.

Bold <i>Italics</i> Courier	Bold typeface identifies specific keys on the machine's control panel. Italicized typeface emphasizes an important point or refers you to a related topic. Courier type face identifies the messages on the LCD of the machine.
	Warnings or cautions tell you what to do to prevent possible personal injury.
	Electrical Hazard icons alert you to a possible electrical shock.
	Hot Surface icons warn you not to touch machine parts that are hot.
0	Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.
\bigotimes	Improper Setup icons alerts you to devices and operations that are not compatible with the machine.
	Notes tell you how you should respond to a situation that may arise or give tips about how the operation works with other features.

Choosing a location

Place your machine on a flat, stable surface that is free of vibration and shocks, such as a desk. Put the machine near a telephone socket and a standard, grounded electrical socket. Choose a location where the temperature remains between 10°C and 32.5°C.

IMPORTANT

- Avoid placing your machine in a high-traffic area.
- Do not place the machine near heaters, air conditioners, water, chemicals, or refrigerators.
- Do not expose the machine to direct sunlight, excessive heat, moisture, or dust.
- Do not connect your machine to an electrical socket controlled by wall switches or automatic timers.
- Disruption of power can wipe out information in the machine's memory.
- Do not connect your machine to an electrical socket on the same circuit as large appliances or other equipment that might disrupt the power supply.
- Avoid interference sources, such as speakers or the base units of cordless phones.



 




To view Documentation

From the **Start** menu, select **TYPE 1190** from the Programs Group and then select **User's Guide**.

-OR-




- 2 If the model name screen appears, click your model name.
- 3 If the language screen appears, click your language.

Select Language	English	Velg Språk	Norsk
bruts.k./ carede / Late America		Välj språk	Svenska
Select Language for Europe / Asia / Oceanie / Obers	English	Vaelg sprog	Dansk
Selectionner une langue	Français	Vyberte jazyk	Čeština
Pour les Etats-Unis / Canada / Amériq	e latre	Nyelv kiválasztása	Magyar
Sélectionner une langue Poir Hurope / Asie / Ootenie / autos	Français	Wybierz język	Polski
Sprache wählen	Deutsch		
Selezione lingua	Italiano		
Seleccionar idioma	Español		
Selecionar Idioma	Português		
Taul Selecteren	Nederlands		

The CD-ROM main menu will appear.


Note

 If this window does not appear, use Windows[®] Explorer to run the setup.exe program from the root directory of the CD-ROM.



- 5 Click the documentation you want to read.
 - Quick Setup Guide: Setup and Software Installation Instructions
 - User's Guide (2 manuals): User's Guide for stand-alone operations and Software User's Guide

Control panel overview (For EU only)

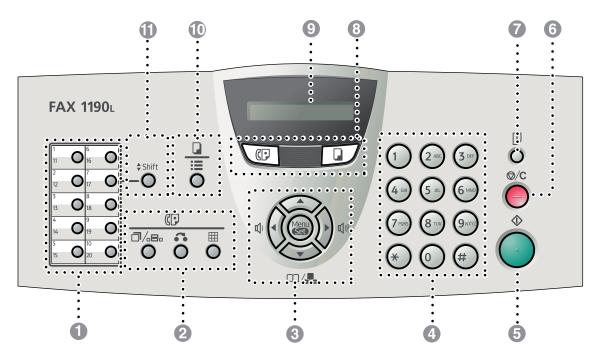

One-Touch Keys

These 10 keys give you instant access to 20 previously stored dial numbers.

2 (Fax and telephone keys:

□/.=. Redial/Pause

Redials the last number you called. It also inserts a pause in quick dial numbers.

Tel/R

This key is used to have a telephone conversation after picking up the external handset in F/T pseudo-ringing.

Also, use this key to gain access to an outside line, or to transfer a call to another extension when it is connected to a PABX (PBX).

Resolution

Sets the resolution when you send a fax.

Output State Navigation keys:

Menu/Set

The same key is used for Menu and Set operations.

Lets you access the Menu to program and store your settings in the machine.

In standby mode you can press these keys to adjust the ring volume.

▼ □□/ Search/Speed Dial

Lets you look up numbers that are stored in the dialling memory. It also lets you dial stored numbers by pressing **#** and a three-digit number.

◀ ►

Press to scroll forward or backward to a menu selection.

▲ or ▼

Press to scroll through the menus and options.

4 Dial Pad

Use these keys to dial telephone or fax numbers and as a keyboard for entering information into the machine.

The **#** key lets you temporarily switch the dialling mode during a telephone call from Pulse to Tone.

5 🔷 Start

Lets you start sending faxes or make copies.

6 Ø/C Stop/Exit

Stops an operation or exits from the menu.

7 🛛 🖟 Reports

8 Mode keys:

Fax

Lets you access Fax mode.

Copy

Lets you access Copy mode.

9 Liquid Crystal Display (LCD)

Displays messages on the screen to help you set up and use your machine.

Copy key (Temporary settings):

Detions


You can quickly and easily select temporary settings for copying.

1 \$Shift Shift

To access One-Touch numbers 11 to 20, hold down \$Shift Shift as you press the One-Touch key.

f

Control panel overview (For USA, Canada and Asia/Oceania)

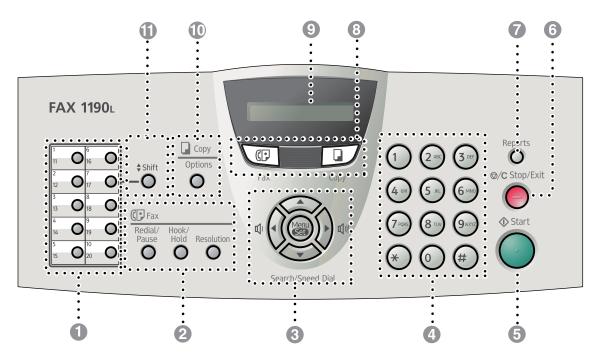

1 One-Touch Keys

These 10 keys give you instant access to 20 previously stored dial numbers.

Pax and telephone keys:

Redial/Pause

Redials the last number you called. It also inserts a pause in quick dial numbers.

Hook/Hold

Lets you dial telephone and fax numbers without lifting the handset.

-OR-

Lets you place telephone calls on hold. (for USA and Canada only)

Resolution

Sets the resolution when you send a fax.

8 Navigation keys:

Menu/Set

The same key is used for Menu and Set operations.

Lets you access the Menu to program and store your settings in the machine.

In standby mode you can press these keys to adjust the ring volume.

-OR-

When using the handset, listening to the speaker in Fax mode or on standby, you can press these keys to adjust the volume.

(for USA and Canada only)

▼ Search/Speed Dial

Lets you look up numbers that are stored in the dialling memory. It also lets you dial stored numbers by pressing **#** and a three-digit number.

< >

Press to scroll forward or backward to a menu selection.

▲ or ▼

Press to scroll through the menus and options.

4 Dial Pad

Use these keys to dial telephone or fax numbers and as a keyboard for entering information into the machine.

The **#** key lets you temporarily switch the dialling mode during a telephone call from Pulse to Tone. (Not available in USA and New Zealand)

5 Start

Lets you start sending faxes or making copies.

6 Stop/Exit

Stops an operation or exits from the menu.

Reports

Print the Transmission Verification Report, Help List, Quick-Dial List, Fax Journal, User Settings

8 Mode keys:

Fax

Lets you access Fax mode.

Сору

Lets you access Copy mode.

Use Liquid Crystal Display (LCD)

Displays messages on the screen to help you set up and use your machine.

Copy key (Temporary settings):

Options

You can quickly and easily select temporary settings for copying.

1) Shift

To access One-Touch numbers 11 to 20, hold down **Shift** as you press the One-Touch key.

Load document

You can send a fax and make copies from the ADF (automatic document feeder).

Using the automatic document feeder (ADF)


The ADF can hold up to 20 pages, feeding each one individually through the machine. Use standard 80 g/m² paper and always fan the pages before putting them in the ADF.

- DO NOT use paper that is curled, wrinkled, folded, ripped, stapled, paper-clipped, pasted or taped.
- **DO NOT** use cardboard, newspaper or fabric.
- Make sure documents written with ink are completely dry.
- Documents to be faxed must be from 147.3 to 215.9 mm wide and 100 to 356 mm long.

- **1** F
 - Pull out the ADF document support.



2 Fan the pages well. Make sure you insert the documents face down, top edge first in the ADF until you feel them touch the feed roller.

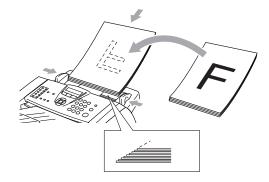



Adjust the paper guides to fit the width of your documents.

IMPORTANT

DO NOT pull on the document while it is feeding.

About paper

Recommended paper

To get the best print quality, we suggest using the following paper.

(For EU and Asia/Oceania)

Paper Type	Item
Plain paper	Xerox Premier 80 g/m ²
	Xerox Business 80 g/m ²
	M-real DATACOPY 80 g/m ²
	IGEPA X-Press 80 g/m ²
Recycled paper	Xerox Recycled Supreme
Transparency	3M CG 3300
Labels	Avery laser label L7163

- Use paper that is made for plain-paper copying.
- Use paper that is 75 to 90 g/m².
- Use neutral paper. Do not use acidic or alkaline paper.
- Use long-grain paper.
- Use paper with a moisture content of approximately 5%.

(For USA and Canada)

Paper Type	Item
Plain paper	Xerox 4200DP 20 lb
	Hammermill Laser Paper 24 lb
	(Xerox Premier 80 g/m ²)
	(Xerox Business 80 g/m ²)
	(M-real DATACOPY
	80 g/m²)
	(IGEPA X-Press 80 g/m ²)
Recycled paper	(Xerox Recycled Supreme)
Transparency	3M CG 3300
Labels	Labels Avery laser label #5160
	(Avery laser label L7163)

- Use paper that is made for plain-paper copying.
- Use paper that is 20 to 24 lb (75 to 90 g/m²).
- Use neutral paper. Do not use acidic or alkaline paper.
- Use long-grain paper.
- Use paper with a moisture content of approximately 5%.

Choosing acceptable paper

We recommend that you test paper (especially special sizes and types of paper) on the machine before purchasing large quantities.

For optimum printing, use a recommended type of paper, especially for plain paper and transparencies. For more information on paper specifications, call your nearest authorized sales representative or the place where you purchased your machine.


- Use labels or transparencies that are designed for use in laser printers.
- If you are using special paper and the machine has problems feeding from the paper tray, try again using the manual feed slot.
- You can use recycled paper in this machine.
- You can use recycled paper that meets the DIN 19309 specification.

IMPORTANT

Do not use the following types of paper or envelopes, they may cause a paper jam and damage your machine.

Do not use:

- Inkjet paper;
- Coated paper, such as vinyl coated paper;
- Pre-printed or highly textured paper, or paper with an embossed letterhead;
- Label sheets that have had any labels removed;
- Paper that has been previously printed on;
- · Paper that cannot be arranged uniformly when stacked;
- Paper that is made with a short grain;
- Damaged, curled, wrinkled, or irregularly shaped paper.

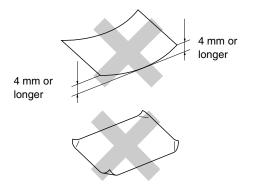

Do not use:

- Envelopes that are of a baggy construction;
- Envelopes that are embossed (have raised writing on them);
- Envelopes that are self-adhesive;
- · Envelopes that have clasps on them;
- Envelopes that are not sharply creased;
- Envelopes that are pre-printed on the inside.


Paper capacity of the paper trays

	Paper size	Paper types	No. of sheets
Paper tray	A4, Letter, Executive, A5, A6, B5 and B6	Plain paper, Recycled paper	up to 250 (80 g/m ²)
	Legal (for North America only)	Transparency	up to 10
Manual feed slot	Width: 69.9 - 215.9 mm (2.75 - 8.5 in.) Length: 116 - 406.4 mm (4.56 - 16 in.)	Plain paper, Recycled paper, Bond paper, Envelope, Labels and Transparency	1

How to load paper


To load paper or other media in the paper tray

Pull the paper tray completely out of the machine.

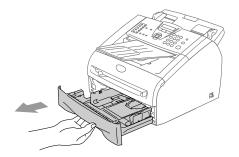

2 While pressing the paper guide release lever, slide the adjusters to fit the paper size.


Check that the guides are firmly in the slots.

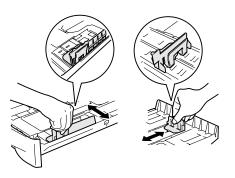


3 Fan the stack of paper well to avoid paper jams and mis-feeds.



Put paper in the paper tray.

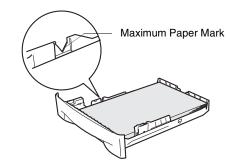

5 Put the paper tray firmly back in the machine. Lift the ADF document output support and unfold the output paper tray support flap before you use the machine.

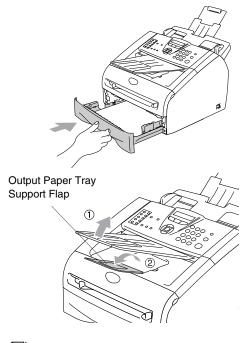

🖉 Note

When you put paper in the paper tray, please remember the following:

- Check that the paper is flat in the tray and below the maximum paper mark, and that the paper guides are touching the sides of the paper stack.
- The side to be printed on must be face down.

To load paper or other media in the manual feed slot

You can load envelopes and special print media one at a time into this slot. Use the manual feed slot to print or copy on labels, envelopes or thicker paper.



Slide the paper guides to fit the paper size.



2 Using both hands put one sheet of paper in the manual feed slot until you feel the front edge of the paper touch the paper feed roller. Let go of the paper when you feel the machine feed the paper in a short distance.



🖉 Note

When you put paper in the manual feed slot, please remember the following:

- The side to be printed on must be face up.
- Put the leading edge (top of the paper) in first and push it gently into the slot.
- Make sure that the paper is straight and in the proper position on the manual feed slot. If it is not, the paper may not be fed properly, resulting in a skewed printout or a paper jam.
- Do not put more than one sheet or envelope in the manual feed slot at a time or you may cause the machine to jam.

About fax machines

Custom features

Do you have BT's Call Minder/Voice Mail on the phone line?

If you have Call Minder/Voice Mail on the phone line where you will install your new machine, there is a strong possibility that Call Minder/Voice Mail and the machine may conflict with each other while receiving incoming calls.

Why should there be problems?

Since both the machine and Call Minder/Voice Mail will pick up the call, after the number of rings you have set, each of them has the ability to keep the other from receiving calls.

For example, if Call Minder/Voice Mail is set to answer after two rings and your machine is set to answer after four, Call Minder/Voice Mail will stop your machine from receiving faxes.

If you set Call Minder/Voice Mail and this machine to answer after the same number of rings, there is no way of knowing which one will answer first. It is important to remember that neither Call Minder/Voice Mail nor the machine can pass the call back to the other after the call has been answered.

How can you avoid possible problems?

A very good way to avoid problems like the one mentioned, *is to get a second phone number on your present phone line.*

Many people with Call Minder/Voice Mail choose an alternative service, which is called "BT Call Sign", and they are very satisfied with it.

Another way to avoid possible problems is to replace Call Minder/Voice Mail with an answering machine. This machine is designed to work with an answering machine or TAD (telephone answering device). (See *Connecting an external telephone answering device (TAD)* on page A-15.)

Fax tones and handshake

When someone is sending a fax, the fax machine sends fax calling tones (CNG tones). These are quiet, intermittent beeps every 4-seconds. You'll hear them after you dial and press **Start** and they will continue for about 60 seconds after dialling. During that time, the sending machine must begin the "handshake" or connection with the receiving machine.

Each time you use automatic procedures to send a fax, you are sending CNG tones over the phone line. You will soon learn to listen for these quiet beeps each time you answer a phone on your fax line, so you will know if you are receiving a fax message.

The receiving fax responds with fax receiving tones, which are loud, chirping sounds. A receiving fax chirps for about 40 seconds over the phone line, and the LCD shows Receiving.

If your machine is set to the Fax Only mode, it will answer every call automatically with fax receiving tones. If the other person hangs up, your machine will continue to send the "chirps" for about 40 seconds, and the LCD continues to show Receiving. To cancel

receiving, press @/c Stop/Exit.

The fax 'handshake' is the time in which the sending machine's CNG tones and the receiving machine's "chirps" overlap. This must be for at least 2 to 4 seconds, so both machines can understand how each is sending and receiving the fax. The handshake cannot begin until the call is answered, and the CNG tones only last for about 60 seconds after the number is dialled. So it is important for the receiving machine to answer the call in as few rings as possible.

ECM (Error Correction Mode)

The Error Correction Mode (ECM) is a way for the machine to check a fax transmission while it is in progress. If the machine detects errors during fax transmission, it resends the pages of the fax that had an error. ECM transmissions are only possible between fax machines that both have this feature. If they do, you may send and receive fax messages that are continuously being checked by the machine. **2 G**

Getting started

Initial setup

Setting the Date and Time

When the machine is not in use it will display the date and time. If you set up the Station ID the date and time displayed by your machine will be printed on every fax you send. If there is a power failure, you may have to reset the date and time. No other settings will be affected.

🖉 Note

Your machine can store the date and time up to 4 days if there is a power failure.

1	Press Menu/Set, 0, 2.		(4.To
	2.Date/Time)	Press
			Press I
2	Enter the last two digits of the year.)	Press
	Press Menu/Set.		
3	Enter two digits for the month.		
	Press Menu/Set.		
	(For example, enter 09 for September, or 10 for October.)		
4	Enter two digits for the day.		
	Press Menu/Set.		
	(For example, enter 06 for 6th.)		
5	Enter the time in 24-Hour format.		
	Press Menu/Set.		
	(For example, enter 15:25 for 3:25 P.M.)		

6 Press ©/c Stop/Exit.

The LCD now shows the date and time whenever the machine is idle in Fax mode.

When the machine is in Sleep mode, the LCD shows <code>Sleep</code>. (See *Sleep Time* on page 2-8.)

Setting Tone and Pulse dialling mode (Not available in some countries)

- Press Menu/Set, 0, 4.
 (4.Tone/Pulse)
 Press ▲ or ▼ to select Pulse (or Tone).
 Press Menu/Set.
- Press ©/c Stop/Exit.

Setting the Station ID

You should store your name or company name and fax number so they print on all fax pages you send.

It is important that you enter the fax number in the internationally standardised format, i.e. in accordance with the following strict sequence:

- The "+" (plus) character (by pressing key)
- Your Country Code (e.g. "44" for the United Kingdom, "41" for Switzerland)
- Your local area code minus any leading "0" ("9" in Spain)
- A space
- Your number on the local exchange, using spaces to aid readability as appropriate.

As an example, if the machine is installed in the United Kingdom and the same line is to be used for both fax and voice calls, and your national telephone number is 0161 444 5555, then you must set the fax and telephone number parts of your station ID as: +44 161 444 5555.

Press Menu/Set, 0, 3.

(3.Station ID

- 2 Enter your fax number (up to 20 digits). Press Menu/Set.
- 3 Enter your telephone number (up to 20 digits).

Press Menu/Set.

(If the telephone number and fax number are the same, enter the same number again.)

🖉 Note

- You cannot enter a hyphen in the number.
 To enter a space press ► once between numbers.
- The telephone number you enter is only used for Cover Page features.
 (See *Composing the electronic Cover Page* on page 3-9.)

Use the dial pad to enter your name (up to 20 characters).
 (See Entering Text on page B-11).

Press Menu/Set.

5 Press ∞/c Stop/Exit.

🖉 Note

If the Station ID has already been programmed, the LCD will ask you to press **1** to make a change or **2** to exit without changing.

NOTICE (For USA)

The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or electronic device to send any message via a telephone fax machine unless such messages clearly contain, in a margin at the top or bottom of each transmitted page, or on the first page of the transmission, the date and time it is sent and an identification of the business or other entity or other individual sending the message and the telephone number of the sending machine or such business, other entity or individual.

To program this information into your machine, see *Setting the Date and Time* on page 2-1 and *Setting the Station ID* on page 2-2.

Setting the Phone Line Type (For EU model only)

If you are connecting the machine to a line that features a PABX (PBX) or ISDN to send and receive faxes, it is also necessary to change the Phone Line Type accordingly by completing the following steps.

1

Press Menu/Set, 0, 5.

(5.Phone Line Set

Press ▲ or ▼ to select PBX, ISDN (or Normal).

Press Menu/Set.

Press Ø/C Stop/Exit.

PABX (PBX) and TRANSFER

The machine is initially set to Normal, which lets the machine connect to a standard PSTN (Public Switched Telephone Network) line. However, many offices use a central telephone system or Private Automatic Branch Exchange (PABX). Your machine can be connected to most types of PABX (PBX). The machine's recall feature supports timed break recall only (TBR). TBR will work with most PABX (PBX) systems allowing you to gain access to an outside line, or transfer calls to another extension. The feature works

when **~ Tel/R** is pressed.

🖉 Note

You can program a **Tel/R** key press as part of a number stored in a One-Touch or Speed-Dial location. When programming the One-Touch or Speed-Dial number (**Menu/Set**

2, 3, 1 or 2, 3, 2) press **Tel/R** first (the screen displays "!"), then enter the telephone number. If you do this, you do not need to

press **Tel/R** each time before you dial using a One-Touch or Speed-Dial location. (See *Storing numbers for easy dialling on page 5-1.*) However, if PBX is not selected in the Phone Line Type setting, you cannot use the One-Touch or Speed-Dial number that

Tel/R press is programmed into.

General Setup

Setting the Mode Timer

The machine has two temporary mode keys on the control panel: Fax and Copy. You can change the number of seconds or minutes the machine takes after the last Copy operation before it returns to Fax mode. If you select Off, the machine stays in the mode you used last.





Press Menu/Set, 1, 1.

(1.Mode Timer

Press ▲ or ▼ to select 0 Sec,
 30 Secs, 1 Min, 2 Mins, 5 Mins or
 Off.

Press Menu/Set.

Bress ©/c Stop/Exit.

Setting the Paper Type

To get the best print quality, set the machine for the type of paper you are using.

- Press Menu/Set, 1, 2.
- Press ▲ or ▼ to select Plain, Thin, Thick, Thicker, Transprncy (Transparency) or Recycled (Recycled paper).

Press Menu/Set.



🖉 Note

- The machine ejects paper with printed surfaces face down onto the output paper tray in the front of the machine. When you use transparencies or labels, remove each sheet immediately to prevent smudging or paper jams.
- You can select Transprncy in Step 2 if Letter, Legal or A4 paper size has been selected (Menu/Set, 1, 3).

Setting the Paper Size

You can use eight sizes of paper for printing copies: Letter, Legal, A4, B5, A5, B6, A6 and Executive and two sizes for printing faxes: Letter and A4. When you change the size of paper you load in the paper tray, you will need to change the paper size setting at the same time so your machine can fit an incoming fax or a reduced copy on the page.

- 🖉 Note
- If you selected Transprncy as the paper type (Menu/Set, 1, 2) you will only be able to select Letter or A4 size paper in Step 2.
- Legal size is available only for USA and Canada.

Press Menu/Set, 1, 3.

(3.Paper Size

Press ▲ or ▼ to select Letter, Legal, A4, A5, A6, B5, B6 or Executive.

Press Menu/Set.

3 Press Ø/C Stop/Exit.

Setting the Ring Volume

You can turn the ring Off or you can select the ring volume level.

1	Press Menu/Set, 1, 4, 1.
	1.Ring
2	Press ▲ or ▼ to select Low, Med, High or Off.

Press Menu/Set.

Oress ∞/C Stop/Exit.

__OR__

You can adjust the ring volume when your machine is idle (not being used).

In \square mode (Fax), press \square or \square \square to adjust the volume level. Every time you press these keys, the machine will ring so you can hear the active setting as the LCD shows it. The volume changes with each key press. The new setting will stay until you change it again.

Setting the Beeper Volume

You can change the beeper volume. The default setting is Med. When the beeper is on, the machine will beep when you press a key, make a mistake, or after you sent or received a fax.



2.Beeper

 Press ▲ or ▼ to select Low, Med, High or Off.

Press Menu/Set.



Setting the Speaker Volume

You can adjust the machine's one-way speaker volume.



Press Menu/Set, 1, 4, 3.

3.Speaker

Press ▲ or ▼ to select Low, Med, High or Off.

Press Menu/Set.



—OR—

(Only for North America Model)

In Fax mode (), you can adjust the speaker volume by pressing **Hook/Hold**, and then selecting a speaker volume level.

Press $\triangleleft \triangleleft \triangleleft$ or $\blacktriangleright \triangleleft \lor$ to adjust the volume level. The LCD shows the setting you are choosing. Each key press changes the volume to the next level. The new setting will remain until you change it again.

Setting the Handset Volume (For USA and Canada only)

Press Menu/Set, 1, 4, 4.



Press ▲ or ▼ to select High or Low.
 Press Menu/Set.

3 Press Stop/Exit.

-OR-

You can adjust the handset volume any time you are talking on the telephone. There are two handset volume levels, Low and High. The default setting is Low.

Press \P or $\blacksquare \P$ to adjust the volume level. The LCD shows the setting are choosing. The new setting will remain until you change it again.

Choosing the Handset Volume (For Volume Amplify) (For USA and Canada only)

Before you begin to use the machine, you must decide if you need to set the handset volume to Vol Amplify: On for a user who is hearing-impaired. The AMPLIFY volume level complies with FCC standard.

Vol Amplify:Off

This default setting is appropriate if none of the users are hearing-impaired. During a conversation, users can press \triangleleft or ▶ < 1 on the control panel to adjust the volume the two volume levels. When the handset is replaced, the handset volume will remain until you change it again.

Vol Amplify:On-Temporary

This setting is appropriate if some of the users are hearing-impaired. During a conversation, users can press $\triangleleft \triangleleft$ or Image: volume levels.

Vol Amplify:On-Permanent

Choose Vol Amplify: On-Permanent if all of the users are hearing-impaired. During conversation, users can press \triangleleft or ▶ < 1 on the control panel to adjust the three volume levels. When the handset is replaced, the handset volume returns to the default setting of Volume Amplify.

Note

 
When you press $\triangleleft \triangleleft$ or $\blacktriangleright \triangleleft \vee$ on the control panel to adjust the volume, the LCD shows the setting you are choosing. Each key press changes the volume to the next level.

CAUTION

It is important that you do NOT choose Permanent unless ALL the users are hearing-impaired. Otherwise, the default setting of Volume Amplify may damage the hearing of some users.

Setting Volume Amplify (For USA and Canada only)

Please carefully read Choosing the Handset Volume (For Volume Amplify) (For USA and Canada only) on page 2-7 before you do the following steps:



5.Volume Amplify

If none of the users are hearing-impaired, press \blacktriangle or \triangledown to select Vol Amplify:Off, and then press Menu/Set and go to Step 4.

__OR__

If some or all of the users are hearing-impaired, select Vol Amplify: On, and then press Menu/Set.

3 If all the users are hearing-impaired, press to select Permanent, and then press Menu/Set.

-OR-

If only some or all of the users are hearing-impaired, select Temporary, and then press Menu/Set.

Press Stop/Exit.

Turning on Automatic Daylight Savings Time

You can set the machine to change automatically for Daylight Savings Time. It will reset itself forward one hour in the Spring and backward one hour in the Autumn. Make sure you have set the correct date and time in the Date/Time setting.



Press Menu/Set, 1, 5.

5.Auto Daylight

(for Asia/Oceania)

5.Clock Change

2 Press \blacktriangle or \triangledown to select On (or Off).

(For Asia/Oceania, To Summer time or To Winter time.)

Press Menu/Set.

3 Press ⊚/c Stop/Exit.

Toner Save

You can conserve toner using this feature. When you set Toner Save to On, print appears lighter. The default setting is Off.

1

Press Menu/Set, 1, 6, 1.

1.Toner Save

Press ▲ or ▼ to select On (or Off).
 Press Menu/Set.

3 Press ∞/c Stop/Exit.

Sleep Time

Setting the Sleep Time reduces power consumption by turning off the fuser inside the machine while it is idle. You can choose how long the machine is idle (from 00 to 99 minutes) before it goes into sleep mode. The timer is automatically reset when the machine receives a Fax or makes a copy. While the machine is in sleep mode you will see Sleep on the LCD. If you try to print or copy in sleep mode, there will be a short delay while the fuser warms up to its working temperature.



Press Menu/Set, 1, 6, 2.

2.Sleep Time

2 Use the dial pad to enter the length of time the machine is idle before it goes into sleep mode (00 to 99).

Press Menu/Set.

3 Press ∞/c Stop/Exit.

🖉 Note

If the machine is in sleep mode when you change the Sleep Time, the new setting will take effect the next time the machine copies, prints or is turned off and on.

Setting the LCD Contrast

You can change the contrast to help the LCD look lighter or darker.



1 Press Menu/Set, 1, 7.

(7.LCD Contrast

2 Press \blacktriangle or \triangledown to select Light or Dark. Press Menu/Set.

Oress ∞/C Stop/Exit.

Security

You can set up your machine with multiple levels of security using Memory Security.

Memory Security

Memory Security lets you prevent unauthorized access to the machine. You will not be able to continue to schedule Delayed Faxes or Polling jobs. However, any pre-scheduled Delayed Faxes will be sent even if you turn on Memory Security, so they won't be lost.

While Memory Security is on, the following operations are available:

- Receiving faxes into memory (limited by memory capacity)
- Fax Forwarding (if Fax Forwarding was already on)
- Remote Retrieval (if Fax Storage was already on)

While Memory Security is on, the following operations are NOT available:

- Sending faxes
- Printing received faxes
- Copying

With the attached handset (For USA and Canada only)

- Receiving telephone calls with the attached handset (For USA and Canada only)
- Making telephone calls with the attached handset (For USA and Canada only)

M Note

To print the faxes in memory, turn off Memory Security.

Setting up the password



- If you have already set the password and want to change it, please see *Changing the Memory Security password* below.
- When you forget the password, contact your sales or service representative.
 - Press Menu/Set, 1, 8, 1.
 - 1.Mem Security
- 2 Enter a four-digit number for the password.

Press Menu/Set.

If you are entering the password for the first time, the LCD shows Verify.

3 Re-enter the password.

Press Menu/Set.

Press ©∕⊂ Stop/Exit.

Changing the Memory Security password

1 Press Menu/Set, 1, 8, 1.

- (1.Mem Security
- Press ▲ or ▼ to select Set Password.
 Press Menu/Set.
- Enter the registered four-digit password.
 Press Menu/Set.
- 4 Enter a four-digit number for the new password.

Press Menu/Set.

If the LCD shows Verify, re-enter the new password.

Press Menu/Set.



Turning Memory Security on

1 Press Menu/Set, 1, 8, 1.

(1.Mem Security

2 Press ▲ or ▼ to select Set Security.

Press Menu/Set.

3 Enter the registered four-digit password.

Press Menu/Set.

The machine goes offline and the LCD shows Secure Mode.

🖉 Note

If there is a power failure, the data in the memory will remain for up to 4 days.

Turning Memory Security off

Press Menu/Set.

Enter the registered four-digit password.

2 Memory Security is automatically turned off and the LCD shows the date and time.

🖉 Note

If you enter the wrong Password, the LCD shows Wrong Password and stays offline. The machine will stay in Secure Mode until the registered password is entered.

Setting Lock

Setting Lock lets you prevent unauthorized access to the machine settings.

While Setting Lock is On, the following operations are NOT available without password:


- Date & Time
- Station ID
- Set Quick-Dial (One-Touch Dial, Speed-Dial and Setup Groups)
- Mode Timer
- Paper Type
- Paper Size
- Volume
- Auto Daylight (Clock Change)
- Ecology (Toner Save and Sleep Time)
- LCD Contrast
- Security (Memory Security and Setting Lock)

Setting up the password

🖉 Note

- If you have already set the password and want to change it, please see *Changing the Setting Lock password* on next page.
- When you forget the password, contact your sales or service representative.

Chapter 2

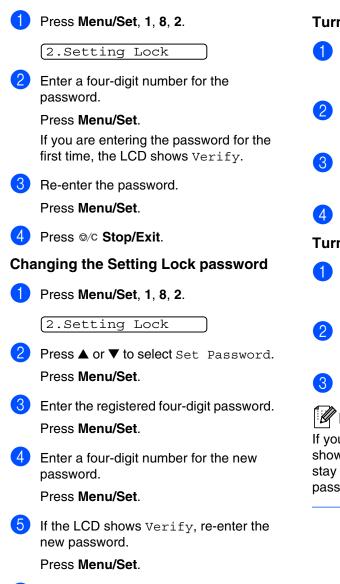

6 Press ∞/c Stop/Exit.

Turning Setting Lock on



3


Setup Send

How to enter Fax mode

Before sending faxes or changing fax send or receiving settings, make sure ((Fax) is

illuminated in green. If it is not, press (

(**Fax**) to enter Fax mode. The default setting is Fax mode.

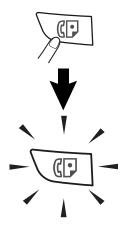

How to dial

You can dial in any of the following ways.

Manual dialling

Press all of the digits of the phone or fax number.




One-Touch Dialling

Press the One-Touch key of the location you want to call. (See *Storing One-Touch numbers* on page 5-1.)




To dial One-Touch numbers 11 to 20, hold down \$Shift as you press the One-Touch key.

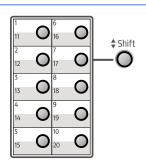

Speed-Dialling

Press D/ Search/Speed Dial, #, and then the three digit Speed-Dial number. (See *Storing Speed-Dial numbers on page 5-2.*)

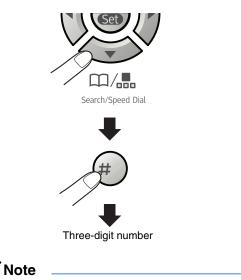


If the LCD shows Not Registered when you enter the One-Touch or Speed-Dial number, a number has not been stored at this location.

Search

You can search for names you have stored in the One-Touch and Speed-Dial memories.

Press D/ Search/Speed Dial and the navigation keys to search. (See *Storing One-Touch numbers* on page 5-1 and *Storing Speed-Dial numbers* on page 5-2.)

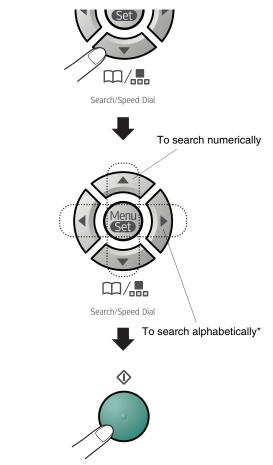

* To search alphabetically, you can use the dial pad to enter the first letter of the name you are looking for.

Fax Redial

If you are sending a fax manually and the line

is busy, press □/₀=₀ **Redial/Pause**, and then

press **Start** to try again. If you want to make a second call to the last number dialled, you can save time by pressing

 $\square \square \square \square$ Redial/Pause and Start.

□/₀_□₀ **Redial/Pause** only works if you dialled from the control panel.

If you are sending a fax automatically and the line is busy, the machine will automatically redial up to three times at five minute intervals.

How to Fax

Automatic transmission

This is the easiest way to send a fax.

Press **(b)** Start immediately after dialling. (For an example of automatic faxing, follow the steps in *Faxing from the ADF* on this page.)

Faxing from the ADF

If it is not illuminated in green, press

(Fax).

2 Put the document face down in the ADF.

3 Dial the fax number.

Press **♦ Start**. The machine starts scanning the document.

Manual transmission

 
Manual transmission lets you hear the dialling, ringing and fax-receiving tones while sending a fax.

(For EU and Asia/Oceania model, use the handset and dial of the external phone)



If it is not illuminated in green, press

(Fax).



Load your document.

Pick up the handset and listen for a dial tone.

 
4 On the external phone, dial the fax number you want to call.

When you hear the fax tone, press
 Start.

Replace the handset.

Sending a fax at the end of a conversation

At the end of a conversation you can send a fax to the other party before you both hang up.



2 If it is not illuminated in green, press

(Fax).

3 Load your document.

Press Start.

4 Replace the handset.

Out of Memory message

If you get an Out of Memory message while scanning the first page of a fax, press

Ø/c Stop/Exit to cancel the fax.

If you get an Out of Memory message while scanning a subsequent page, you will have the option to press **Start** to send the pages scanned so far, or to press **C Stop/Exit** to cancel the operation.

Note

If you get an Out of Memory message while faxing and you do not want to delete your stored faxes to clear the memory, you can send the fax in real time. (See *Real Time Transmission* on page 3-6.)

Basic sending operations

Sending faxes using multiple settings

 
When you send a fax you can choose any combination of these settings: cover page, contrast, resolution, overseas mode, delayed fax timer, polling transmission or real time transmission.



 
If it is not illuminated in green, press

(Fax).

After each setting is accepted, the LCD will ask if you want to enter more settings:







Press 1 to select more settings. The LCD will return to the Setup Send menu.

__OR__

Press **2** if you have finished choosing settings and go to the next step.

Contrast

If your document is very light or very dark, you may want to change the contrast.

 
Use Light to send a light document.

Use Dark to send a dark document.

If it is not illuminated in green, press

 If it is not illuminated in green, press

 If it is not illuminated in green, press



3 Press Menu/Set, 2, 2, 1.

(1.Contrast

4 Press ▲ or ▼ to select Auto, Light or Dark.

Press Menu/Set.

Fax Resolution

After you load the document, you can use the **Besolution** key to change the setting temporarily (for this fax only). In Fax mode

(**TP**), press \blacksquare **Resolution** and \blacktriangle or \blacktriangledown to select the setting you want, and then press **Menu/Set**.

----OR----

You can change the default setting:

- If it is not illuminated in green, press

 If it is not illuminated in green, press

 Image: Complex state
- 2 Press Menu/Set, 2, 2, 2.

(2.Fax Resolution

Oress ▲ or ▼ to select the resolution you want.

Press Menu/Set.

Standard Suitable for most typed documents. Good for small print and Fine transmits a little slower than Standard resolution. S.Fine Good for small print or artwork and transmits slower than Fine resolution. Photo Use when the document has varying shades of grey or is a photograph. This has the slowest transmission time.

Dual Access

You can dial a number, and begin scanning the fax into memory—even when the machine is sending from memory, receiving faxes. The LCD shows the new job number.

🖉 Note

- The number of pages you can scan into the memory will vary depending on the data that is printed on them.
- If you get an Out of Memory message while scanning the first page of a fax, press @/c Stop/Exit to cancel scanning. If you get an Out of Memory message while scanning a subsequent page, you can press \$ Start to send the pages

 
scanned so far, or press \otimes/C Stop/Exit to cancel the operation.

Real Time Transmission

When you are sending a fax, the machine will scan the documents into the memory before sending. Then, as soon as the phone line is free, the machine will start dialling and sending.

If the memory is full, the machine will send the document in real time (even if Real Time TX is set to Off).

Sometimes, you may want to send an important document immediately, without waiting for memory transmission. You can set Real Time TX to On for all documents or Next Fax: On for the next fax only.



(5.Real Time TX

3 To change the setting, press ▲ or ▼ to select On, Next Fax:On, Next Fax:Off or Off.

Press Menu/Set.

Broadcasting

Broadcasting is when the same fax message is automatically sent to more than one fax number. You can include Groups, One-Touch, Speed-Dial numbers and up to 50 manually dialled numbers in the same broadcast.

Press **Menu/Set** between each of the numbers. Use D/ Search/Speed Dial to help you choose the numbers easily. (To set up Group dial numbers, see *Setting up Groups for Broadcasting on page 5-3.*)

After the broadcast is finished, a Broadcast Report will be printed to let you know the results.

1 If it is not illuminated in green, press

(Fax).

- 2 Load your document.
- 3 Enter a number using One-Touch, Speed-Dial, a Group number, Search or manual dialling using the dial pad.

Press Menu/Set after each number.

🖉 Note

- If you did not use up any of the numbers for Groups, access codes or credit card numbers, you can 'broadcast' faxes to as many as 270.
- The available memory will vary depending on the types of jobs in the memory and the number of locations used for broadcasting. If you broadcast to the maximum numbers available, you will not be able to use Dual Access and Delayed fax.
- Enter the long dialling sequence numbers as you would normally, but remember that each One-Touch and Speed-Dial number counts as one number, so the number of locations you can store becomes limited. (See Access codes and credit card numbers on page 5-4.)
- If the memory is full, press ©/c Stop/Exit to stop the job or if more than one page has been scanned, press Start to send the portion that is in the memory.

Checking job status

Check which jobs are still waiting in the memory to be sent. (If there are no jobs, the LCD shows No Jobs Waiting.)



Press Menu/Set, 2, 6.

(6.Remaining Jobs

- If you have more than one job waiting, press ▲ or ▼ to scroll through the list.
- 3 Press ∞/c Stop/Exit.

Cancelling a fax in progress

If you want to cancel a fax, while the machine is scanning, dialling or sending it, press Ø/c Stop/Exit.

Cancelling a scheduled job

You can cancel a fax job that is stored and waiting in the memory.



6.Remaining Jobs

Any jobs that are waiting will appear on

If you have more than one job waiting, press ▲ or ▼ to select the job you want to cancel.

Press Menu/Set.

__OR__

the LCD.

If you only have one job waiting, go to Step 3.

3 Press 1 to cancel.

To cancel another job go to Step 2.

-OR-

Press 2 to exit without cancelling.

4 Press ©/c Stop/Exit.

Advanced sending operations

Composing the electronic Cover Page

The Cover Page is sent to the receiving party's machine. Your Cover Page includes the name stored in the One-Touch or Speed-Dial memory. If you are dialling manually, the name is left blank.

The Cover Page shows your Station ID and the number of pages you're sending. (See *Setting the Station ID* on page 2-2.) If you have Cover Page set to On for all faxes (**Menu/Set**, **2**, **2**, **7**), the number of pages is not shown on the cover page.

You can select a comment to include on your Cover Page.

- 1.Comment Off
- 2.Please Call
- 3.Urgent
- 4.Confidential

Instead of using one of the preset comments, you can enter two personal messages of your own, up to 27 characters long. Use the chart on B-11 for help entering characters. (See *Composing your own comments on this page.*)

- 5.(User Defined)
- 6.(User Defined)

Most of the Setup Send settings are temporary to allow you to make changes for each fax you send. However, when you set up your Cover Page and Cover Page Comments, you are changing the default settings so they will be available while faxing.

Composing your own comments

You can set up two comments of your own.

- If it is not illuminated in green, press

 If it is not illuminated in green, press

 If it is not illuminated in green, press
- 2 Press Menu/Set, 2, 2, 8.

8.Coverpage Note

- 3 Press ▲ or ▼ to choose 5 or 6 for your own comment. Press Menu/Set.
- Use the dial pad to enter your customized comment.
 Press Menu/Set.
 (See Entering Text on page B-11.)

Cover page for the next fax only

If you have not yet set your Station ID this feature will not work. Make sure you have programmed the Station ID before continuing. (See *Setting the Station ID* on page 2-2.) If you only want to send a Cover Page with a particular fax, your machine will ask you to enter the number of pages you are sending so it can be printed on the Cover Page.

1 If it is not illuminated in green, press

(Fax).

- 2 Load your document.
- 3 Press Menu/Set, 2, 2, 7.

7.Coverpg Setup

4 Press ▲ or ▼ to select Next Fax:On (or Next Fax:Off).

Press Menu/Set.

Chapter 3

5 Press ▲ or ▼ to select one of the standard or your own comments.

Press Menu/Set.

6 Enter two digits to show the number of pages you are sending.

Press Menu/Set.

(For example, press **0 2** for 2 pages or enter **0 0** to leave the number of pages blank. If you make a mistake, press ◀ to back up and re-enter the number of pages.)

Send a cover page for all faxes

If you have not yet set your Station ID this feature will not work. Make sure you have programmed the Station ID before continuing. (See *Setting the Station ID* on page 2-2.)

You can set the machine to send a cover page whenever you send a fax. The number of pages in your fax is not included when you use this setting.

If it is not illuminated in green, press
Press Menu/Set, 2, 2, 7.
7.Coverpg Setup

3 Press \blacktriangle or \triangledown to select On (or Off).

Press Menu/Set.

If you selected On, press ▲ or ▼ to select one of the standard or your own comments.

Press Menu/Set.

Using a printed cover page

If you prefer to use a printed cover page that you can write on, you can print the sample page and attach it to your fax.

1	If it is not illuminated in green, press		
	(Fax).		
2	Press Menu/Set, 2, 2, 7.		

(7.Coverpg Setup

- 3 Press ▲ or ▼ to select Print Sample. Press Menu/Set.
- Press I Start. Your machine prints a copy of your cover page.

Overseas Mode

If you are having difficulty sending a fax overseas due to possible interference on the phone line, we recommend that you turn on the Overseas Mode. After you send a fax using this feature, the feature will turn itself off.

1 If it is not illuminated in green, press

(Fax).

- Load your document.
- 3 Press Menu/Set, 2, 2, 9.

9.0verseas Mode

Press ▲ or ▼ to select On (or Off). Press Menu/Set.

Delayed Fax

During the day you can store up to 50 faxes in the memory to be sent within 24 hours. These faxes will be sent at the time of day you enter in Step 4.

 


If it is not illuminated in green, press

(Fax).



2 Load your document.



(3.Delayed Fax

Press Menu/Set to accept the displayed time.

-OR-

Enter the time you want the fax to be sent (in 24-hour format).

(For example, enter 19:45 for 7:45 PM.)

Press Menu/Set.

1.Doc 2.Memory

Press 1 to leave the paper document waiting in the ADF.

__OR__

 
Press 2 to scan the document into the memory.

Note


The number of pages you can scan into the memory depends on the amount of data that is printed on each page.

Delayed Batch Transmission

Before sending the delayed faxes, your machine will help you economize by sorting all the faxes in the memory by destination and scheduled time. All delayed faxes that are scheduled to be sent at the same time to the same fax number will be sent as one fax to save transmission time.



Press Menu/Set, 2, 2, 4.

 

- 3 Press ▲ or ▼ to select On (or Off). Press Menu/Set.
- Press Ø/C Stop/Exit.

Setup for Polled Transmit (Standard)

 
Polled Transmit is when you set up the machine to wait with a document so another fax machine can retrieve it.

🖉 Note

- When someone polls your machine to receive a fax, they pay for the call.
- If you poll someone's fax machine to receive a fax, you pay for the call.

If it is not illuminated in green, press

(Fax).



Press Menu/Set, 2, 2, 6.

(6.Polled TX

4 Press ▲ or ▼ to select Standard (For EU and Asia/Oceania) or On (or Off) (for USA and Canada).

Press Menu/Set.

1.Doc 2.Memory

Press **1** to leave the paper document waiting in the ADF.

-OR-

Press **2** to scan the document into the memory.

🖉 Note

- If you press 1 in Step 4, the document remains in the ADF until your machine is polled. If you want to use the ADF before the polled transmission occurs, you must use **Menu/Set**, 2, 6 to cancel the job.
- If you press 2 in Step 4, the document will be stored in the machine's memory and can be retrieved from any other fax machine until you delete the fax from memory by using the Cancelling a Job menu setting. (See *Cancelling a scheduled job* on page 3-8.)


Setup for Polled Transmit with Secure Code (For EU and Asia/Oceania only)

Polled Transmit with Secure Code is a way to keep documents from falling into the wrong hands while the machine is set up for polling.


Ø	Note
---	------

When someone polls your machine to receive a fax, they pay for the call.

 If you poll someone's fax machine to receive a fax, you pay for the call.



(Fax).

 

3 Press Menu/Set, 2, 2, 6.

6.Polled TX

4 Press ▲ or ▼ to select Secure.

Press Menu/Set.

5 Enter a four-digit number.

Press Menu/Set.

(1.Doc 2.Memory

Press **1** to leave the paper document waiting in the ADF.

-OR-

Press **2** to scan the document into the memory.

🖉 Note

- If you press 1 in Step 5, the document remains in the ADF until your machine is polled. If you want to use the ADF before the polled transmission occurs, you must first cancel this job.
- If you press 2 in Step 5 the document will be stored in the machine's memory and can be retrieved from any other fax machine until you delete the fax from memory by using the Cancelling a Job menu setting. (See *Cancelling a scheduled job* on page 3-8.)
- You can use Secure Polling only with another FAX 1190L fax machine.

4

Setup Receive

Basic receiving operations

Choosing the Receive Mode

There are four different Receive Modes for your machine. You can choose the mode that best suits your needs.

LCD	How it works	When to use it
Fax OnlyThe machine automatically answers every call as a fax.		For dedicated fax lines.
Fax/Tel (fax and telephone) (with an external or extension telephone)	The machine controls the line and automatically answers every call. If the call is a fax it will receive the fax. If the call is not a fax it will ring (pseudo/double ring) for you to pick up the call.	Use this mode if you expect to receive lots of fax messages and few telephone calls. You cannot use an answering machine on the same line, even if it is on a separate phone socket on the same line. You cannot use the telephone company's Voice Mail in this mode.
External TAD (with an external telephone answering machine only)	The external telephone answering machine (TAD) automatically answers every call. Voice messages are stored on the external TAD. If it is a fax call, the machine receives the Fax.	Use this mode, if you want to use an answering machine connected to your machine. The External TAD setting works only with an external answering machine. Ring Delay does not work in this setting.
Manual (manual receive) (with an external or extension telephone or BT Call Sign or Distinctive Ring)	You control the phone line and must answer every call yourself unless you are using BT Call Sign or the Distinctive Ring feature.	Use this mode if you do not receive many fax messages, use BT Call Sign or the Distinctive Ring, or if you are using a computer on the same line. If you answer and hear fax tones, wait until the machine takes over the call, then hang up. (See <i>Fax Detect (Easy</i> <i>Receive for USA and Canada) on page 4-3.</i>)

4

To select or change your Receive Mode 1 Press Menu/Set, 0, 1. (1.Receive Mode Press ▲ or ▼ to select Fax Only, Fax/Tel, External TAD or Manual. Press Menu/Set. 3 Press ⊚/c Stop/Exit. Current Receive Mode 12/10 11:53 Fax Fax : Fax Only F/T: Fax/Tel TAD : External TAD Mnl: Manual

Setting the Ring Delay

The Ring Delay sets the number of times the machine rings before it answers in ${\tt Fax}$ Only or ${\tt Fax}/{\tt Tel}$ mode.

1	If it is not illuminated in green, press
2	Press Menu/Set, 2, 1, 1.
	1.Ring Delay
3	Press \blacktriangle or \blacktriangledown to select how many times the line rings before the machine answers (00 - 04).
	Press Menu/Set.
	(If you select 00, the line won't ring at all.)
4	Press ⊚/⊂ Stop/Exit .

Setting the F/T Ring Time (Fax/Tel mode only)

If you set the Receive Mode to Fax/Tel, you'll need to decide how long the machine will signal you with its special pseudo/double-ring when you have a voice call. (If it's a fax call, the machine receives the fax.)

This pseudo/double-ring happens after the initial ringing from the phone company. Only the machine rings and no other phones on the same line will ring with the special pseudo/double-ring. However, you can still answer the call on any telephone on the same line as the machine. (See *For Fax/Tel mode only* on page A-13.)

1 If it is not illuminated in green, press

(Fax).

2 Press Menu/Set, 2, 1, 2.

(2.F/T Ring Time

3 Press ▲ or ▼ to select how long the machine will ring to alert you that you have a voice call (20, 30, 40 or 70 seconds).

Press Menu/Set.

4 Press ∞/c Stop/Exit.

🖉 Note

Even if the caller hangs up during the pseudo/double-ringing, the machine will continue to ring for the set time.

Fax Detect (Easy Receive for USA and Canada)

When you use this feature, you don't have to

press \diamondsuit Start or the Fax Receive Code \star 51 when you answer a fax call. Selecting On allows the machine to receive fax calls automatically, even if you lift the handset of an extension or external phone. When you see Receiving on the LCD or when you hear 'chirps' through the handset of an extension phone connected to another wall socket/phone socket, just replace the handset and your machine will do the rest.

 
Semi (For USA and Canada only) lets the machine receive the fax only if you've answered it at the machine.

🖉 Note

If your machine does not connect a fax call when you lift an extension or external phone handset (either because this feature is set to Off or due to telephone line problems), you will need to activate the machine manually. You can do this by pressing \$ Start on the machine. —OR—

by pressing \times 51 if you are not at your machine. (See *Operation from extension telephones* on page A-13.)

If you send faxes from a computer on the same phone line and the machine intercepts them, set Fax Detect to Off.



(3.Fax Detect

(For USA and Canada)

3.Easy Receive

3 Press ▲ or ▼ to select On, (Semi) or Off.

Press Menu/Set.

Press Ø/C Stop/Exit.

Printing a reduced incoming fax (Auto Reduction)

If you choose On, the machine automatically reduces an incoming fax to fit on one page of Letter or A4 size paper. The machine calculates the reduction ratio by using the page size of the document and your Paper Size setting (**Menu/Set**, **1**, **3**).

Receiving a fax at the end of a conversation

At the end of a conversation you can ask the other party to fax you information before you both hang up.

- Ask the other party to place the document in their machine and to press Start or Send key.
- 2 When you hear the other machine's CNG tones (beeps), press **Start**.
- 3 Replace the handset.

Advanced receiving operations

Printing a fax from the memory

If you have selected Fax Storage (**Menu/Set**, **2**, **5**, **1**), you can still print a fax from the memory when you are at your machine. (See *Setting Fax Storage on page 6-1*.)



(3.Print Document

Press Start.

Setting the Print Density

You can adjust print density, making your printed pages darker or lighter.

If it is not illuminated in green, press

(Fax).

2 (for EU and Asia/Oceania)

Press Menu/Set, 2, 1, 7.

(7.Print Density

(for USA and Canada)

Press Menu/Set, 2, 1, 6.

6.Print Density

3 Press ▲ to make the print darker. —OR—

> Press ▼ to make the print lighter. Press **Menu/Set**.

Press ©∕c Stop/Exit.

Reception into memory

As soon as the paper tray becomes empty during fax reception, the screen will display No Paper Fed; please put some paper in the paper tray. (See *How to load paper* on page 1-11.)

If Memory Receive is On at this time ...

The current fax reception will continue, with the remaining page(s) being stored in memory, subject to available memory. Subsequent incoming faxes will also be stored into memory until the memory is full, following this no further incoming fax calls will be automatically answered. To print all data put fresh paper in the paper tray, and then press **Start**.

If Memory Receive is Off at this time...

The current fax reception will continue, with the remaining page(s) being stored in memory, subject to available memory. Subsequent incoming fax calls will not be automatically answered until fresh paper is put in the paper tray. To print the last fax received, put paper in the paper tray, and then press **\$ Start**.

If it is not illuminated in green, press

(Fax).

(for EU and Asia/Oceania)

Press Menu/Set, 2, 1, 6.

6.Memory Receive

3 Press ▲ or ▼ to select On (or Off). Press Menu/Set.



Note

For USA and Canada, Memory Receive is always On.

Polling

Polling is the process of retrieving faxes from another fax machine. You can use your machine to 'poll' other machines.

Everyone who is involved in Polling needs to set up their fax machines for Polling.

🖉 Note

- If you poll someone's fax machine to receive a fax, you pay for the call.
- Some fax machines do not respond to the Polling feature.

Setup for Polling Receive (Standard)

Polling Receive is when you call another fax machine to receive a fax from it.

1 If it is not illuminated in green, press

(Fax).

(for EU and Asia/Oceania)

Press Menu/Set, 2, 1, 8.

(8.Polling RX

(for USA and Canada)

Press Menu/Set, 2, 1, 7.

(7.Polling RX

- 3 Press ▲ or ▼ to select Standard. Press Menu/Set.

The LCD shows Dialing.

Secure Polling (For EU and Asia/Oceania only)

Secure Polling is a way to keep the documents from falling into the wrong hands while the other fax machine is set up for polling.

Setup for Polling Receive (Secure) (For EU and Asia/Oceania only)

You need to make sure you are using the same secure code as the other party.



If it is not illuminated in green, press

(Fax).

2 Press Menu/Set, 2, 1, 8.

8.Polling RX

- Press ▲ or ▼ to select Secure. Press Menu/Set.
- 4 Enter a four-digit secure code.

This is the same as the security code of the fax machine you are polling.

5 Press Menu/Set.

6 Enter the fax number you are polling.

Press **Start**.

The LCD shows Dialing.



You can use Secure Polling only with another FAX 1190L fax machine. Anyone who polls to receive a fax must enter the polling secure code.

Setup for Polling Receive (Timer) (For EU and Asia/Oceania only)

You can set the machine to begin Polling Receive at a later time.


1	If it is not illuminated in green, press
	(Fax).
2	Press Menu/Set, 2, 1, 8.
	8.Polling RX
3	Press \blacktriangle or \blacksquare to select Timer.
	Press Menu/Set.
4	Enter the time (in 24-hour format) you want to begin polling.
	For example, enter 21:45 for 9:45 PM.
5	Press Menu/Set.
6	Enter the fax number you are polling.
	Press Φ Start .
	The machine makes the polling call at the time you entered.
	Note
You	can set up only one Delayed Polling.
Seq	uential Polling
	machine can request documents from

n several fax machines in a single operation. You just specify several destinations in Step 5. Afterwards, a Sequential Polling Report will be printed.



If it is not illuminated in green, press



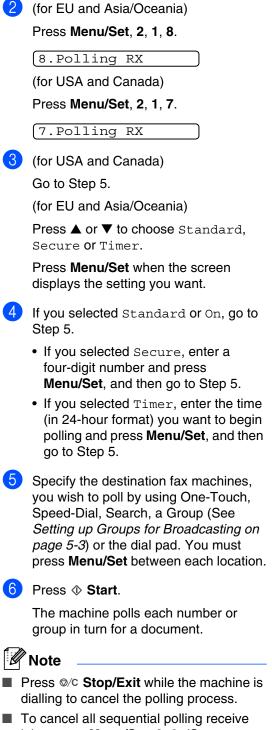

jobs, press **Menu/Set**, **2**, **6**. (See *Cancelling a scheduled job* on page 3-8.)

Quick-Dial numbers and dialling options

Storing numbers for easy dialling

You can set up your machine to do following types of easy dialling: One-Touch,


Speed-Dial and Groups for Broadcasting faxes. When you dial a quick-dial number, the LCD shows the name, if you stored it, or the number.



If you lose electrical power, the quick-dial numbers that are in the memory will not be lost.

Storing One-Touch numbers

Your machine has 10 One-Touch keys where you can store 20 fax or phone numbers for automatic dialling. To access numbers 11 to 20, hold down \$Shift Shift as you press the One-Touch key. The LCD shows the name, if you stored it, or the number.

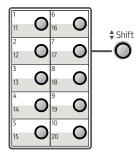

Press Menu/Set, 2, 3, 1.

1.One-Touch Dial

- Press the One-Touch key where you want to store a number.
- 3 Enter the phone or fax number (up to 20 digits).

Press Menu/Set.

Use the dial pad to enter the name (up to 15 characters).

Press Menu/Set.

(You can use the chart on page B-11 to help you enter letters.)

-OR-

Press **Menu/Set** to store the number without a name.

5 Go to Step 2 to store another One-Touch number.

-OR-

Press Ø/C Stop/Exit.

Storing Speed-Dial numbers

You can store Speed-Dial numbers, so that when you dial you will only have to press a few keys ($\square / \square \bigcirc$ Search/Speed Dial, #, the three-digit number, and \oslash Start). The machine can store 200 Speed-Dial numbers.

1

Press Menu/Set, 2, 3, 2.

2.Speed-Dial

2 Use the dial pad to enter a three-digit Speed-Dial location number. (001 - 200)

(For example, press 005.)

Press Menu/Set.

3 Enter the phone or fax number (up to 20 digits).

Press Menu/Set.

4 Use the dial pad to enter the name (up to 15 characters).

Press Menu/Set.

(You can use the chart on page B-11 to help you enter letters.)

__OR__

Press **Menu/Set** to store the number without a name.

5 Go to Step 2 to store another Speed-Dial number.

-OR-

Press Ø/C Stop/Exit.

Changing One-Touch / Speed-Dial numbers

If you try to store a One-Touch or Speed-Dial number where a number has already been stored, the LCD will show the name that has been stored there (or number) and will ask you to do one of the following:





Press 1 to change the stored number.

-OR-

Press 2 to exit without making a change.

How to change the stored number or name:

- If you want to change a character, use

 or ▶ to position the cursor under the character you want to change, and then type over it.
- If you want to erase the whole number or whole name, press @/c Stop/Exit when the cursor is under the first digit or letter. The characters above and to the right of the cursor will be deleted.

2 Enter a new number.

Press Menu/Set.

Follow the directions beginning at Step 4 in Storing One-Touch Dial numbers and Storing Speed-Dial numbers.
 (See Storing One-Touch numbers on page 5-1 and Storing Speed-Dial numbers on this page.)

Setting up Groups for Broadcasting

Groups, which can be stored on a One-Touch key or a Speed-Dial location, allow you to send the same fax message to many fax numbers by pressing only a One-Touch key

and **Start** or \square / \blacksquare **Search/Speed Dial**, #,

the three-digit location and \diamondsuit **Start**. First, you'll need to store each fax number as a One-Touch or Speed-Dial number. Then, you can combine them into a Group. Each Group uses up a One-Touch key or a Speed-Dial location. You can have up to eight Groups, or you can assign up to 219 numbers to one large Group.

(See Storing One-Touch numbers on page 5-1 and Storing Speed-Dial numbers on page 5-2.)

Press Menu/Set, 2, 3, 3.

(3.Setup Groups

Decide where you wish to store the Group.

```
-AND-
```

Press a One-Touch key.

-OR-

Press D/ Search/Speed Dial and enter the three digit location, and then press Menu/Set.

(For example, press One-Touch key 2, or press 2 / Search/Speed Dial 0 4 5 for Speed-Dial location 045.)

3 Use the dial pad to enter the Group number (1 to 8).

(Setup Group:G01

Press Menu/Set.

(For example, press 1 for Group 1.)

4 To include One-Touch or Speed-Dial numbers in the Group, press them as follows:

For example, for One-Touch number 4, press One-Touch key **4**. The LCD

shows \times 004. For Speed-Dial location 009, press \square / \square Search/Speed Dial, and then **0 0 9** on the dial pad.

(G01: X004#009

- 5 Press Menu/Set to accept the numbers for this Group.
- 6 Use the dial pad and the chart on page B-11 to enter a name for the Group.

Press Menu/Set.

(For example, type NEW CLIENTS).

7 Press ©/c Stop/Exit.

2

You can print a list of all One-Touch and

Speed-Dial numbers. Group numbers will be marked in the GROUP column. (See *Printing reports on page 7-2.*)

Dialling options

Access codes and credit card numbers

Sometimes you may want to choose from several long distance carriers when you make a call. Rates may vary depending on the time and destination. To take advantage of low rates, you can store the access codes or long-distance carriers and credit card numbers as One-Touch and Speed-Dial numbers. You can store these long dialling sequences by dividing them and setting them up on separate One-Touch and Speed Dial numbers in any combination. You can even include manual dialling using the dial pad. (See *Storing One-Touch numbers* on page 5-1 and *Storing Speed-Dial numbers* on page 5-2.)

For example, perhaps you have stored '555' on One-Touch key **1** and '7000' on One-Touch key **2**. If you press One-Touch

key 1, One-Touch key 2, and **Start**, you will dial '555-7000'.

To temporarily change a number, you can substitute part of the number with manual dialling using the dial pad.

For example, to change the number to 555-7001 you could press One-Touch key **1** and then press **7001** using the dial pad.

Pause

Press 🗐 / 🖶 Redial/Pause to insert a 3.5-second pause between numbers. If you are dialling overseas, you can press

□/₀■₀ **Redial/Pause** as many times as needed to increase the length of the pause.

Tone or Pulse

If you have a Pulse dialling service, but need to send Tone signals (for example, for telephone banking), follow the instructions below. If you have Touch Tone service, you will not need this feature to send tone signals.

Lift the handset of the external phone.

Press # on the control panel of your machine. Any digits dialled after this will send tone signals.

When you hang up, the machine will return to the Pulse dialling service.

6

Remote Fax Options

Setting Remote Fax Options

Note

You can only use one remote fax option at a time:

Fax Forwarding—OR—Paging*—OR— Fax Storage—OR—Off.

* Paging available for USA and Canada only

If you change the remote fax options and received faxes are left in your machine's memory, an LCD message will appear. (See Changing Remote Fax Options on page 6-3.)

Setting up Fax Forwarding

When you select Fax Forward, your machine stores the received fax in the memory. The machine will then dial the fax number you've programmed and forward the fax message.

Press Menu/Set, 2, 5, 1.

(for EU and Asia/Oceania)

[1.Forward/Store

(for USA and Canada)

1.Fwd/Page/Store

2 Press \blacktriangle or \triangledown to select Fax Forward.

Press Menu/Set.

The LCD will ask you to enter the fax number to which faxes will be forwarded.

Enter the forwarding number (up to 20 digits).

Press Menu/Set.

Press \blacktriangle or \blacktriangledown to select Backup Print:On or Backup Print:Off.

(Backup Print:On

Press Menu/Set.

Note

If you select Backup Print: On, the machine will also print the fax at your machine so you will have a copy. This is a safety feature in case there is a power failure before the fax is forwarded or a problem at the receiving machine. This machine can store faxes up to 4 days if there is a power failure.



Press Ø/C Stop/Exit.

Setting Fax Storage

If you select Fax Storage, your machine stores the received fax in the memory. You will be able to retrieve fax messages from another location using the Remote Retrieval commands.



Press Menu/Set, 2, 5, 1.

(for EU and Asia/Oceania)

1.Forward/Store

(for USA and Canada)

[1.Fwd/Page/Store



2 Press \blacktriangle or \triangledown to select Fax Storage.

Press Menu/Set.



Ø Note

If you have set Fax Storage, a backup copy will automatically be printed at the machine.

Programming your pager number (For USA and Canada only)

When Paging is selected, your machine dials the pager number you've programmed, and then dials your Personal Identification Number (PIN). This activates your pager so you will know that you have a fax message in the memory.

Press Menu/Set, 2, 5, 1.

(1.Fwd/Page/Store

2 Press ▲ or ▼ to select Paging.

Press Menu/Set.

3 Enter your pager phone number followed by # # (up to 20 digits).

Press Menu/Set.

Do not include the area code if it is the same as that of your machine.

For example, press: 18005551234##.

4 If your pager needs a PIN, enter the PIN, press #, press Redial/Pause, enter your fax number followed by # #.

Press Menu/Set.

For example, press: 12345#Redial/Pause 18005551212##

-OR-

If you do not need a PIN, press Redial/Pause, enter your fax number followed by # #.

Press Menu/Set.

For example, press: Redial/Pause 1 8 0 0 5 5 5 1 2 1 2 # # 5 Press Stop/Exit.

Note

- You cannot change a Paging number or PIN remotely.
- If you have set Paging, a backup copy of the received fax will automatically be printed at the machine.

Turning off Remote Fax Options

Press Menu/Set, 2, 5, 1.

(for EU and Asia/Oceania)

[1.Forward/Store

(for USA and Canada)

(1.Fwd/Page/Store

 
- 2 Press ▲ or ▼ to select Off. Press Menu/Set.
- Oress ∞/c Stop/Exit.

Note


If you set the remote fax options to Off and received faxes are left in your machine's memory, further LCD messages appear after Step 2. (See Changing Remote Fax Options.)

Changing Remote Fax Options

If received faxes are left in your machine's memory when you change the remote fax option the LCD will ask you the following question:



__OR__

 

* Erase All FAX ? will be displayed for USA and Canada.

- If you press 1, faxes in the memory will be erased or printed before the setting changes.
- If you press 2, faxes in the memory will not be erased or printed and the setting will be unchanged. If a backup copy has already been prited it will not be printed again.
- If you press 1, and Backup Print is set to On, faxes in the memory will be erased before the setting changes. If you press 1 and Backup print is set to Off, faxes in the memory will be sent to your PC before the setting changes.
- If you press 2, faxes in the memory will not be erased or transferred to your PC and the setting will be unchanged.

Setting your Remote Access Code

The remote access code lets you access the Remote Retrieval features when you are away from your machine. Before you use the remote access and retrieval features, you have to set up your own code. The default code is inactive code (--- \star).



Press Menu/Set, 2, 5, 2.

2.Remote Access

Enter a three-digit code using numbers 0-9, X or #.

Press **Menu/Set**. (The preset ' X ' cannot be changed.)

🖉 Note

Do not use the same code as your Fax Receive Code (*** 51**) or Telephone Answer Code (**#51**).

(See Operation from extension telephones on page A-13.)

B Press ©∕⊂ Stop/Exit.

🖉 Note

You can change your code at any time by entering a new one. If you want to make your

code inactive, press @/c Stop/Exit in Step 2 to restore the inactive setting (--- \star) and press Menu/Set.

Remote Retrieval

You can call your machine from any touch tone telephone or fax machine, then use the Remote Access Code and remote commands to retrieve fax messages. Be sure to cut out the Remote Retrieval Access Card on the last page and keep it with you at all times.

Using your Remote Access Code

- Dial your fax number from a telephone or another fax machine using touch tone.
- When your machine answers, immediately enter your Remote Access Code (3 digits followed by *).
- 3 The machine signals if it has received fax messages:

1 long beep — Fax messages

No beeps — No messages

- 4 The machine gives two short beeps to tell you to enter a command. The machine will hang up if you wait longer than 30 seconds to enter a command. The machine will beep three times, if you enter an invalid command.
- 5 Press **9 0** to reset the machine when you've finished.
- 6 Hang up.



If your machine is set to Manual mode and you want to use the remote retrieval features, you can access your machine by waiting about 2 minutes after it starts ringing, and then entering the Remote Access Code within 30 seconds.

Remote commands

Follow the commands below to access features when you are away from the machine. When you call the machine and enter your Remote Access Code (3 digits followed by \times), the system will give two short beeps and you must enter a remote command.

Rem	note commands	Operation details	
95	Change the Fax Forwarding or Fax Storage settings		
	1 OFF	You can select Off after you have retrieved or erased all your messages.	
	2 Fax Forwarding	If you hear one long beep, the change has been accepted. If	
	3 Paging (For USA and Canada only)	you hear three short beeps, you cannot change it because the conditions have not been met (for example, registering a fax forwarding or Paging number). You can register your Fax	
	4 Fax Forwarding number	Forwarding number by entering 4. (See Changing your Fax	
	6 Fax Storage	<i>Forwarding number</i> on page 6-6.) Once you have registered the number, Fax Forwarding will work.	
96	Retrieve a fax		
	2 Retrieve all faxes	Enter the number of a remote fax machine to receive stored fax message(s). (See page 6-6.)	
	3 Erase faxes from the memory	If you hear one long beep, fax messages have been erased from the memory.	
97	Check the receiving status		
	1 Fax	You can check whether your machine has received any faxes. If yes, you will hear one long beep. If no, you will hear three short beeps.	
98	Change the Receive Mode		
	1 External TAD	If you hear one long beep, your change has been accepted.	
	2 Fax/Tel		
	3 Fax Only	1	
90	Exit	Press 9 0 to exit Remote Retrieval. Wait for the long beep, then replace the handset.	

Retrieving fax messages

You can call your machine from any touch tone phone and have your fax messages sent to a fax machine.



Dial your fax number.

- When your machine answers, immediately enter your Remote Access Code (3 digits followed by *). If you hear one long beep, you have messages.
- 3 As soon as you hear two short beeps, use the dial pad to press **9 6 2**.
- 4 Wait for the long beep, and then use the dial pad to enter the number of the remote fax machine where you want your fax messages sent to followed by ## (up to 20 digits).

🖉 Note

You cannot use \star and # as dial numbers. However, press # if you want to store a pause.

- 5 Press **9 0** to reset the machine when you've finished.
- 6 Hang up after you hear your machine beep. Your machine will call the other fax machine, which will then print your fax messages.

Changing your Fax Forwarding number

You can change the default setting of your fax forwarding number from another telephone or fax machine using touch tone.

- Dial your fax number.
- When your machine answers, immediately enter your Remote Access Code (3 digits followed by X). If you hear one long beep, you have messages.
- When you hear two short beeps, use the dial pad to press **9 5 4**.
- 4 Wait for the long beep, and then use the dial pad to enter the new number of the remote fax machine where you want your fax messages forwarded followed by ## (up to 20 digits).

🖉 Note

You cannot use \star and # as dial numbers. However, press # if you want to store a pause.

5 Press **9 0** to reset the machine when you've finished.

Hang up after you hear your machine beep.

Printing reports

Fax settings and activity

You need to set up the Transmission Verification Report and Journal Period in the menu table.

Press Menu/Set, 2, 4, 1.

(1.XMIT Report

* Transmission will be displayed for USA and Canada.

-OR-

Press Menu/Set, 2, 4, 2.

2.Journal Period

Customizing the **Transmission Verification** Report

You can use the Transmission Report as proof that you sent a fax. This report lists the time and date of transmission and whether the transmission was successful (OK). If you select On or On+Image, the report will print for every fax you send.

If you send a lot of faxes to the same place, you may need more than the job numbers to know which faxes you must send again. Selecting On+Image or Off+Image will print a section of the fax's first page on the report to help you remember.



🖉 Note

When the Verification Report is turned Off or Off+Image, the Report will only print if there is a transmission error, with ERROR in the RESULT column.



(1.XMIT Report

 Press ▲ or ▼ to select On, On+Image, Off or Off+Image.

Press Menu/Set.

Press Ø/C Stop/Exit.

Setting the Journal Period

You can set the machine to print a journal at specific intervals (every 50 faxes, 6, 12 or 24 hours, 2 or 7 days). If you set the interval to Off, you can print the report by following the steps on Printing reports.

The default setting is Every 50 Faxes.

Press Menu/Set, 2, 4, 2.

2.Journal Period



2 Press \blacktriangle or \checkmark to choose an interval.

Press Menu/Set.

(If you choose 7 days, the LCD will ask you to choose a day on which to begin the 7-day countdown.)

3 Enter the time to begin printing in 24-hour format.

Press Menu/Set.

(For example: enter 19:45 for 7:45 PM.)

4 Press ∞/c Stop/Exit.

Note

- If you select 6, 12, 24 hours, 2 or 7 days, the machine will print the report at the selected time and then erase all jobs from its memory. If the machine's memory becomes full with 200 jobs before the time you selected has passed, the machine will print the Journal early and then erase all jobs from memory. If you want an extra report before it is due to print, you can print it without erasing the jobs from memory.
- If you select Every 50 Faxes, the machine will print the Journal when the machine has stored 50 jobs.

Printing reports

Following reports are available:

- 1.XMIT Verify/Transmission Prints a Transmission Verification Report for your last transmission.
- 2.Help List Prints the Help List so you can see at-a-glance how to guickly program your machine.
- 3.Ouick-Dial

Lists names and numbers stored in the One-Touch and Speed-Dial memory, in numerical order.

4.Fax Journal Lists information about the last incoming and outgoing faxes. (TX means Transmit.) (RX means Receive.)

5.User Settings Lists your settings.

How to print a report



Press 🖟 Reports.

Press \blacktriangle or \triangledown to select the report you want.

Press Menu/Set.

-OR-

Enter the number of the report you want to print.

For example, press 2 to print the Help List.

```
8
```

Using the machine as a copier

You can use your machine as a copier, making up to 99 copies at a time.


Enter Copy mode


Before making copies, make sure that

(Copy) is illuminated in green. If it is

not, press (Copy) to enter Copy mode.


The default setting is Fax mode. You can change the number of seconds or minutes that the machine stays in **Copy** mode. (See *Setting the Mode Timer* on page 2-4.)

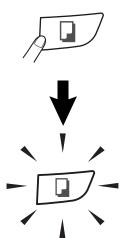

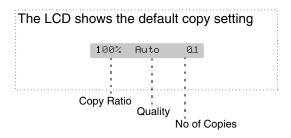


(for EU and Asia/Oceania)

The printable area of your machine begins at approximately 2 mm from both sides and 3 mm from the top or bottom of the paper.

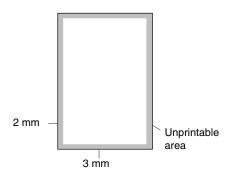

(for USA and Canada)

The printable area of your machine begins at approximately 0.16 in. (4 mm) from both sides and 0.12 in. (3 mm) from the top or bottom of the paper.

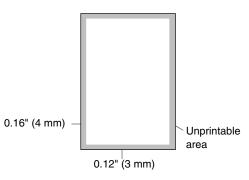



This printable area shown above is for a single copy or a 1 in 1 copy using A4 size paper. The printable area changes with the paper size.

Making a single copy

- Press [(Copy) to illuminate it in green.
- Load your document. (See Load document on page 1-8.)
- 3 Press **()** Start.

Making multiple copies

- (Copy) to illuminate it in Press green.
- Load your document.
- 3 Use the dial pad to enter the number of copies you want (up to 99).
- 4 Press 👁 Start.
- Note

To sort the copies, press $\stackrel{\square}{=}$ **Options** and \blacktriangle or ▼ to select Stack/Sort. (See Sorting copies using the ADF on page 8-5.)

 
Stop copying

To stop copying, press O/C Stop/Exit.

Using the temporary Copy key

When you want to quickly change the copy settings temporarily for the next copy, use the

Deptions key. You can use different combinations.





- The machine returns to its default settings 60 seconds after it finishes copying, or if the Mode Timer returns the machine to Fax mode. (See Setting the Mode Timer on page 2-4.)
- You can save the quality and contrast settings you use most often by setting them as default. (See Changing the default copy settings on page 8-7.)

Changing the temporary copy settings

Use the $\frac{\Box}{\Box}$ **Options** key to quickly set the following copy settings temporarily for the next copy.

Press	Menu Selections	Options	Page
(For EU) (For EU) (For USA, Canada and Asia/Oceania)	A ▼ → Menu select	△ ▼ → Menu Select	
	Enlarge/Reduce	50%/70%/78%/83%/ 85%/91%/94%/97%/ 100% / 104%/141%/200%/ Custom(50-200%)/Auto	8-4
	Quality	Auto Text Photo	8-5
	Stack/Sort	Stack Sort	8-5
	Contrast	$ \begin{array}{c} \bullet & \bullet \\ \bullet & \bullet $	8-5
	Page Layout	Off(1 in 1) 2 in 1 (P) 2 in 1 (L) 4 in 1 (P) 4 in 1 (L)	8-6

🖉 Note

The factory settings are shown in Bold.


After you choose your settings by pressing **Menu/Set**, the LCD shows Set temporarily. Press **Start** if you have finished choosing settings.

Enlarging or reducing the image copied

You can select the following enlargement or reduction ratios.

Auto automatically calculates the reduction ratio for the paper size set for the machine (**Menu/Set**, **1**, **3**).

Custom(50-200%) allows you to enter a ratio from 50% to 200%.

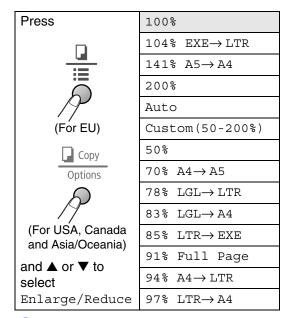

- Press (Copy) to illuminate it in green.
- 2 Load your document.
- 3 Use the dial pad to enter the number of copies you want (up to 99).
- Press ☐ Options and ▲ or ▼ to select Enlarge/Reduce.

Press Menu/Set.

5 Press ▲ or ▼ to select the enlargement or reduction ratio you want.

Press Menu/Set.

-OR-

Use the dial pad to enter an enlargement or reduction ratio from 50% to 200%.

Press Menu/Set.

(For example, press 5 3 to enter 53%.)

6 Press **()** Start.

🖉 Note

Special Copy Options (2 in 1 (P), 2 in 1 (L), 4 in 1 (P) or 4 in 1 (L)) are not available with Enlarge/Reduce.

Quality

You can select the copy quality. The default setting is Auto.

Auto	Suitable for documents that contain both text and photographs.
Text	Suitable for documents containing only text.
Photo	Suitable for copying photographs.

- Press (Copy) to illuminate it in green.
- 2 Load your document.
- 3 Use the dial pad to enter the number of copies you want (up to 99).

Press Menu/Set.

5 Press ▲ or ▼ to select the copy quality you want (Auto, Text or Photo).

Press Menu/Set.

Press I Start.

Sorting copies using the ADF

You can sort multiple copies. Pages will be stacked in the order (1, 2, 3), (1, 2, 3) and so on.

- Press (Copy) to illuminate it in green.
- 2 Load your document.
- 3 Use the dial pad to enter the number of copies you want (up to 99).
- 4 Press ☐ Options and ▲ or ▼ to select Stack/Sort.

Press Menu/Set.

- 5 Press ▲ or ▼ to select Sort. Press Menu/Set.
- 6 Press Start.

Contrast

You can adjust copy contrast to make copies darker or lighter.

- Press (Copy) to illuminate it in green.
- Load your document.
- 3 Use the dial pad to enter the number of copies you want (up to 99).
- 4 Press ☐ Options and ▲ or ▼ to select Contrast.

Press Menu/Set.

5 Press \blacktriangle to increase the contrast.

__OR__

Press ▼ to decrease the contrast.

Press Menu/Set.

Press I Start.

Making N in 1 copies (Page Layout)

You can reduce the amount of copies by using the N in 1 copy feature. This allows you to copy two or four pages onto one page, allowing you to save paper.

🖉 Note

- Please make sure paper size is set to Letter or A4.
- You can use N in 1 copy feature with 100% copy size only.
- (P) means Portrait and (L) means Landscape.
- Press (Copy) to illuminate it in green.
- 2 Load your document.
- 3 Use the dial pad to enter the number of copies you want (up to 99).
- Press ☐ Options and ▲ or ▼ to select Page Layout.


Press Menu/Set.

5 Press ▲ or ▼ to select 2 in 1 (P), 2 in 1 (L), 4 in 1 (P) or 4 in 1 (L).

Press Menu/Set.

6 Press **() Start** to scan the document.

When using the ADF, place the document face *down* in the direction shown below.

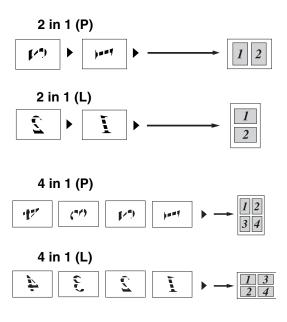

Changing the default copy settings

You can save the quality and contrast settings you use most often by setting them as default. These settings will remain until you change them again.

Quality

1 Press Menu/Set, 3, 1.

Press ▲ or ▼ to select Auto, Text or Photo.

Press Menu/Set.

 
Bress ©/C Stop/Exit.

Adjusting contrast

You can adjust copy contrast to make copies darker or lighter.

1 Press Menu/Set, 3, 2.

2.Contrast



-OR-

Press $\mathbf{\nabla}$ to decrease the contrast.

Press Menu/Set.

3 Press ∞/c Stop/Exit.

Out of Memory message

If the memory becomes full while you are making copies, the LCD message will guide you through the next step.

If you get an Out of Memory message while scanning a subsequent page, you will have the option to press **Start** to copy the pages scanned so far, or to press **C Stop/Exit** to cancel the operation.

🖉 Note

To gain extra memory, you can turn off Fax Storage. (See *Turning off Remote Fax Options on*

page 6-2.)

__OR__

Print the faxes that are in the memory. (See *Printing a fax from the memory on page* 4-5.)

When you get an Out of Memory message, you may be able to make copies if you first print incoming faxes in the memory to restore the memory to 100%. 9

Important information for EU

IEC 60825-1 Specification

This machine is a Class 1 laser product as defined in IEC60825-1:2007 (EN60825-1:F2007) specifications. The label shown below is attached in countries where required.



This machine has a Class 3B Laser Diode which emits invisible laser radiation in the Scanner Unit. The Scanner Unit should not be opened under any circumstances.

Laser Diode

Wave length:	770 - 810 nm
Output:	5 mW max.
Laser Class:	Class 3B

CAUTION

Use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

Disconnect device

This product must be installed near an electrical socket that is easily accessible. In case of emergencies, you must disconnect the power cord from the electrical socket to shut off power completely.

Radio interference (220-240V Model only)

This product complies with EN55022 (CISPR Publication 22)/Class B. When connecting the machine to a computer, ensure that you use the following interface cables.

- 1. A USB cable which must not exceed 2.0 metres in length.
- 2. A shielded parallel interface cable with twisted-pair conductors and that is marked "IEEE 1284 compliant". The cable must not exceed 2.0 metres in length.

Important safety instructions

- 1 Read all of these instructions.
- 2 Save them for later reference.
- 3 Follow all warnings and instructions marked on the product.
- 4 Unplug this product from the wall socket before cleaning inside of the machine. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- 5 Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
- Slots and openings in the cabinet and the back or bottom are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heater. This product should never be placed in a built-in installation unless proper ventilation is provided.
- 7 This product should be operated from the type of power source indicated on the label. If you are not sure of the type of power available, call your dealer or local power company.
- This product is equipped with a 3-wire grounded plug. This plug will only fit into a grounded power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, call your electrician to replace your obsolete outlet. Do not defeat the purpose of the grounded plug.

- 9 Use only the power cord supplied with this machine.
- Do not allow anything to rest on the power cord. Do not place this product where people can walk on the cord.
- Do not place anything in front of the machine that will block received faxes. Do not place anything in the path of received faxes.
- 2 Wait until pages have exited the machine before picking them up.
- Never push objects of any kind into this product through cabinet slots, since they may touch dangerous voltage points or short out parts resulting in the risk of fire or electric shock. Never spill liquid of any kind on the product. Do not attempt to service this product yourself because opening or removing covers may expose you to dangerous voltage points and other risks and may void your warranty.
- Unplug this product from the power socket and refer all servicing to your Authorized Service Personnel under the following conditions:
 - When the power cord is damaged or frayed.
 - If liquid has been spilled into the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - If the product has been dropped or the cabinet has been damaged.
 - If the product exhibits a distinct change in performance, indicating a need for service.

15 To protect your product against power surges, we recommend the use of a power protection device (Surge Protector).

16 To reduce the risk of fire, electric shock and injury to people, note the following:

- Do not use this product near appliances that use water, a swimming pool or in a wet basement.
- Do not use the machine's telephone during an electrical storm (there is the remote possibility of an electrical shock) or to report a gas leak in the vicinity of the leak.
- Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

Trademarks

Windows and Microsoft are registered trademarks of Microsoft in the U.S. and other countries.

Each company whose software title is mentioned in this manual has a Software License Agreement specific to its proprietary programs.

All other brand and product names mentioned in this User's Guide, are registered trademarks of their respective companies.

10 Important information for USA and Canada

Standard telephone and FCC Notices These notices are in effect on

models sold and used in the United States only.

This equipment is hearing-aid compatible.

When programming emergency numbers or making test calls to emergency numbers:

- Remain on the line and briefly explain to the dispatcher the reason for the call before hanging up.
- Perform these activities in the off-peak hours, such as early morning or late evening.

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the backside of this equipment is a label that contains, among other information, a product identifier in the format US: AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

You may safely connect this equipment to the telephone line by means of a standard modular jack, USOC RJ11C.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details. The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. The REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX.The digits represented by ## are the REN without a decimal point (e.g., 06 is a REN of 0.6). For earlier products, the REN is separately shown on the label.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with this equipment, for repair or warranty information, please contact please contact Ricoh Americas Corporation. CUSTOMER SUPPORT DEPT. at 1-800-FASTFIX. In the event of operation problems (document jam, copy jam, communication error indication), refer to the trouble shooting section in this manual.

If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, call your telephone company or a qualified installer. If you are not able to solve a problem with your machine, please contact RICOH CORP. CUSTOMER SUPPORT DEPT. at 1-800-FASTFIX.

WARNING

- For protection against the risk of electrical shock, always disconnect all cables from the wall outlet before servicing, modifying or installing the equipment.
- This equipment may not be used on coin service lines provided by the telephone company or connected to party lines.
- Ricoh cannot accept any financial or other responsibilities that may be the result of your use of this information, including direct, special or consequential damages. There are no warranties extended or granted by this document.
- This machine has been certified to comply with FCC standards, which are applied to the USA only. A grounded plug should be plugged into a grounded AC power outlet after checking the rating of the local power supply for the machine to operate properly and safely.

Federal Communications Commission (FCC) Declaration of Conformity (USA only)

Responsible Party:

Ricoh Americas Corporation Address: 5 Dedrick Place, West Caldwell, NJ 07006 Telephone number: 973-882-2000

declares, that the products

Product Name: Facsimile Transceiver

Model Number: FAX 1190L

comply with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Important - about the interface cable

A shield interface cable should be used to ensure compliance with the limits for a Class B digital device.

Industry Canada Compliance Statement (Canada only)

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

RESTRICTIONS CONCERNANT LE RACCORDEMENT DE MATÉRIEL

AVIS

Le présent matériel est conforme aux spécifications techniques d'Industrie Canada applicables au matériel terminal.

AVIS

L'indice d'équivalence de la sonnerie (IES) indique le nombre maximal de terminaux qui peuvent être raccordés à une interface téléphonique. La terminaison d'une interface peut consister en une combinaison quelconque de dispositifs, à la seule condition que la somme de l'IES de tous les dispositifs n'excède pas cinq.

Disconnect device

This product must be installed near an AC power outlet that is easily accessible. In case of emergencies, you must disconnect the power cord from the AC power outlet to shut off power completely.

Laser safety

This machine complies with the requirements of IEC60825-1:2007 for class 1 laser product. This equipment is certified as a Class 1 laser product under the U.S. Department of Health and Human Services (DHHS) Radiation Performance Standard according to the Radiation Control for Health and Safety Act of 1968. This means that the equipment does not produce hazardous laser radiation.

Since radiation emitted inside the equipment is completely confined within protective housings and external covers, the laser beam cannot escape from the machine during any phase of user operation.

FDA regulations

U.S. Food and Drug Administration (FDA) has implemented regulations for laser products manufactured on and after August 2, 1976. Compliance is mandatory for products marketed in the United States. One of the following labels on the back of the machine indicates compliance with the FDA regulations and must be attached to laser products marketed in the United States.

Manufactured:

RICOH COMPANY LTD,

3-6, Naka-magome 1-Chome Ohta-ku, Tokyo 143-8555, Japan

Complies with FDA performance standards for laser products except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007.

WARNING

Use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous invisible radiation exposure.

Internal laser radiation

Max. Radiation Power 5 mW

Wave Length	770 - 810 nm

Laser Class Class 3B

Important safety instructions

- Read all of these instructions.
- 2 Save them for later reference.
- Follow all warnings and instructions marked on the product.
- 4 Unplug this product from the wall outlet before cleaning inside of the machine. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- 5 Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
- 6 Slots and openings in the cabinet and the back or bottom are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heater. This product should never be placed in a built-in installation unless proper ventilation is provided.
- 7 This product should be operated from the type of power source indicated on the label. If you are not sure of the type of power available, call your dealer or local power company.
- 8 This product is equipped with a 3-wire grounded plug. This plug will only fit into a grounded power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, call your electrician to replace your obsolete outlet. Do not defeat the purpose of the grounded plug.

- 9 Do not allow anything to rest on the power cord. Do not place this product where people can walk on the cord.
- If an extension cord is used with this product, make sure that the total ampere ratings on the products plugged into the extension cord do not exceed the extension cord ampere rating. Also, make sure that the total of all products plugged into the AC power outlet does not exceed 15 amperes (USA only).
- Do not place anything in front of the machine that will block received faxes. Do not place anything in the path of received faxes.
- Wait until pages have exited the machine before picking them up.
- Never push objects of any kind into this product through cabinet slots, since they may touch dangerous voltage points or short out parts resulting in the risk of fire or electric shock. Never spill liquid of any kind on the product. Do not attempt to service this product yourself because opening or removing covers may expose you to dangerous voltage points and other risks and may void your warranty. Refer all servicing to your service representative.

- Unplug this product from the AC power outlet and refer all servicing to your service representative under the following conditions:
 - When the power cord is damaged or frayed.
 - If liquid has been spilled into the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - If the product has been dropped or the cabinet has been damaged.
 - If the product exhibits a distinct change in performance, indicating a need for service.
- 15 To protect your product against power surges, we recommend the use of a power protection device (Surge Protector).

16 To reduce the risk of fire, electric shock and injury to people, note the following:

- Do not use this product near appliances that use water, a swimming pool or in a wet basement.
- Do not use the machine's telephone during an electrical storm (there is the remote possibility of an electrical shock) or to report a gas leak in the vicinity of the leak.
- Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
- 17 Caution To reduce the risk of fire, use only No.26 AWG or larger telecommunication line cord.

Trademarks

Windows and Microsoft are registered trademarks of Microsoft in the U.S. and other countries.

Each company whose software title is mentioned in this manual has a Software License Agreement specific to its proprietary programs.

All other brand and product names mentioned in this User's Guide, are registered trademarks of their respective companies.

11 Troubleshooting and routine maintenance

Troubleshooting

Error messages

As with any sophisticated office product, errors may occur. If this happens, your machine identifies the problem and displays an error message. The most common error messages are shown below.

You can correct most problems by yourself.

ERROR MESSAGES		
ERROR MESSAGE	CAUSE	ACTION
Back Cover Open	The back cover is not completely closed.	Close the back cover of the machine.
BT Call Sign On	The machine is set BT Call Sign to On. You cannot change the Receive Mode from Manual to another mode.	Set BT Call Sign to Off. See BT Call Sign (For U.K. Only) on page A-1.
Change Drum Soon	The drum unit is near the end of its life.	Use the drum unit until you have a print quality problem; then replace the drum unit with a new one. See <i>Replacing the drum unit</i> on page 11-24.
Comm.Error	Poor phone line quality caused a communication error.	Try sending the fax again or try connecting the machine to another telephone line. If the problem continues, call the telephone company and ask them to check your phone line.
Connection Fail	You tried to poll a fax machine that is not in Polled Waiting mode.	Check the other fax machine's polling setup.
Cooling Down Wait for a while	The temperature of the drum unit or toner cartridge is too hot. The machine will pause its current print job and go into cooling down mode. During the cooling down mode, you will hear the cooling fan running while the display on the machine shows Cooling Down, and Wait for a while.	You must wait 20 minutes for it to cool.
Cover is Open	The front cover is not completely closed.	Close the front cover of the machine.
Data Remaining	Print data is left in the machine's memory.	Re-start printing from your computer.
Disconnected	The other person or other person's fax machine stopped the call.	Try to send or receive again.

ERROR MESSAGES		
ERROR MESSAGE	CAUSE	ACTION
Document Jam	The document was not inserted or fed properly, or the document scanned from the ADF was too long.	See <i>Document jams</i> on page 11-4. See <i>Using the automatic document feeder (ADF)</i> on page 1-8.
Drum Error	The drum unit needs to be cleaned.	See Cleaning the corona wire on page 11-21.
DR Mode in Use	The machine is set to Distinctive Ring mode. You can not change the Receive Mode from Manual to another mode.	Set Distinctive Ring to Off. See <i>Turning off the Distinctive Ring</i> on page A-3.
Fail to Warm up	The fuser unit is too cold.	Turn off the machine's power switch, and check the
Unit is too Hot	The fuser unit is too hot.	machine's environment. If it is in a location that is too hot or too cold, try to cool or warm the room by turning on the air conditioner or heater. Or, change the location. Then, turn on the machine's power switch. (The machine can be disconnected for up to 4 days without losing faxes stored in the memory.)
Machine too Hot	The inside of the machine is too hot.	Listen to the machine to check that the cooling fan is spinning. Make sure that the air vents are not covered up or blocked. If the fan is spinning and air vents are clear, you should let the machine cool down for several minutes before using it again. If the fan is not spinning, follow the suggestions below. Turn off the machine's power switch and then on again. If the error message continues leave the machine for several minutes and then try it again. (The machine can be turned off for up to 4 days without losing faxes stored in the memory.)
No cartridge	The toner cartridge and drum unit assembly is not installed or is not installed properly.	Reinstall the toner cartridge.
No Paper Fed	The machine is out of paper or paper is not properly loaded in the paper tray.	 Refill the paper in the paper tray and then press Start. OR— Remove the paper and load it again and then press Start.
No Response/Busy	The number you dialled does not answer or is busy.	Verify the number and try again.
Not Registered	You tried to access a One-Touch or Speed Dial number that is not programmed.	Set up the One-Touch or Speed Dial number. (See Storing One-Touch numbers on page 5-1 and Storing Speed-Dial numbers on page 5-2.)

ERROR MESSAGES		
ERROR MESSAGE	CAUSE	ACTION
Out of Memory	The machine's memory is full.	 (Fax sending or copy operation in progress) Press
		Clear the faxes from the memory. (See <i>Out of Memory message</i> on page 8-7.) Turn on the Page Protection function.
Paper jam Inside	The paper is jammed inside the machine.	(See <i>Paper jams</i> on page 11-5.)
Paper Jam Rear	The paper is jammed in the back of the machine.	(See Paper jams on page 11-5.)
Paper Jam Tray	The paper is jammed in the paper tray of machine.	(See <i>Paper jams</i> on page 11-5.)
Toner Life End	The toner cartridge and drum unit assembly is not installed properly. — OR — The toner is used up and printing is not possible.	Re-install the toner cartridge and drum unit assembly. — OR — Replace the toner cartridge with a new one. (See <i>Replacing the toner cartridge</i> on page 11-21.)
Toner Low	If the LCD shows Toner Low, you can still print, however, the machine is telling you that toner is near the end of its life and will soon need replacing.	Order a new toner cartridge now.
Unable to Init. (Initialize) Unable to Print Unable to Scan	The machine has a mechanical problem.	Turn off the machine's power switch and then on again. If the error message continues leave the machine for several minutes and then try to print, copy or scan again. (The machine can be turned off for up to 4 days without losing faxes stored in the memory.)
Wrong Paper Size	Paper is not the correct size.	Load the correct size of paper (Letter or A4) and then press Φ Start.

Checking if the machine has faxes in its memory

- 1
- Press Menu/Set, 9, 0, 1.
- If the LCD shows No Data, there are no faxes left in the machine's memory.

-OR-

If the LCD shows Enter Fax No. there are faxes in the machine's memory.



You can transfer the Fax Journal report to another fax machine by pressing **Menu/Set**, **9**, **0**, **2** in Step 1.

You can transfer the faxes to another fax machine. See *Forwarding faxes to another fax machine*.

Forwarding faxes to another fax machine

If you have not set up your Station ID you cannot enter fax forward mode. (See *Setting the Station ID* on page 2-2.)



Enter the fax number to which the faxes will be forwarded.

Press 🚸 Start.

Document jams

If the document is jammed, follow the steps below.


Documents can jam if they are not inserted or fed properly, or if they are too long. Follow the steps below to clear a document jam.



Open the control panel cover.

2

Carefully pull the jammed document toward the front of the machine.

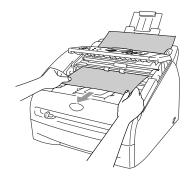

3 Close the control panel cover. Press ∞/c Stop/Exit.


Troubleshooting and routine maintenance

Paper jams

To clear paper jams, please follow the steps in this section.

CAUTION

After you have just used the machine, some parts inside the machine are extremely hot. When you open the front cover or back cover of the machine, never touch the shaded parts shown in the following diagram.

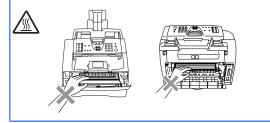


Paper is jammed inside the machine


- Pull the paper tray completely out of the machine.
- Pull the jammed paper out of the paper tray opening.



Open the front cover.

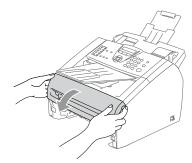


Pull out the drum unit and toner cartridge assembly. The jammed paper may be pulled out with the toner cartridge and drum unit assembly, or this may release the paper so you can pull it out of drum unit or the paper tray opening.

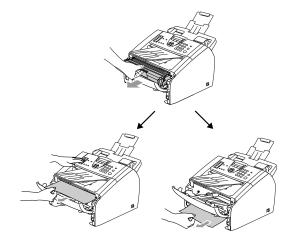

To prevent damage to the machine caused by static electricity, do not touch the electrodes shown in the following diagram.



5 Put the drum unit and toner cartridge assembly back into the machine.

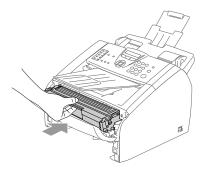

Close the front cover. 6





7 Put the paper tray in the machine.


Paper is jammed at the back of the machine

Open the front cover.






Pull out the drum unit and toner cartridge assembly.

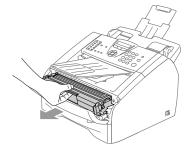





3 Open the back cover.

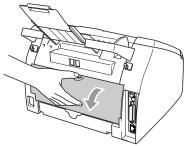

4 Pull the tab toward you to open the rear chute cover.

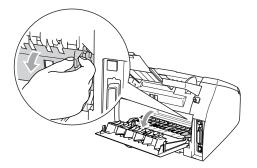


5 Pull the jammed paper out of the fuser unit. If the jammed paper cannot be pulled out easily, push down the blue tab with one hand as you gently pull out the paper with the other hand.

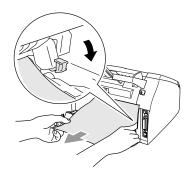

6 Close the back cover.

7 Put the drum unit and toner cartridge assembly back into the machine.

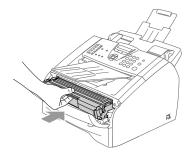


- 8 Close the front cover.


Paper is jammed inside the drum unit and toner cartridge assembly




Open the front cover.

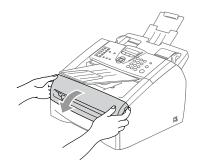


Pull out the drum unit and toner cartridge assembly.

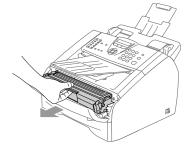

Hold down the lock lever on the left and pull the toner cartridge out of the drum unit. Take out the jammed paper if there is any inside the drum unit.

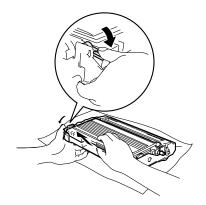


 4 Put the toner cartridge back into the drum unit until you hear it lock into place. If you put it in properly, the lock lever will lift automatically.



 5 Put the drum unit and toner cartridge assembly back into the machine.





If you are having difficulty with your machine

If you think there is a problem with the way your faxes look, make a copy first. If the copy looks good, the problem is probably not your machine. Check the chart below and follow the troubleshooting tips.

DIFFICULTY	SUGGESTIONS	
Printing or Receiving Faxes		
 Condensed print Horizontal streaks Top and bottom of sentences are cut off. Missing lines 	Usually this is caused by a poor telephone connection. If your copy looks good, you probably had a bad connection with static or interference on the telephone line. Ask the other party to send the fax again.	
Poor print quality.	See Improving the print quality on page 11-13.	
Vertical black lines when receiving	Sometimes you may see vertical streaks/black lines on the faxes you receive. Your machine's primary corona wire may be dirty, or the sending party's fax scanner may be dirty. Clean your primary corona wire (See <i>Cleaning the corona</i> <i>wire</i> on page 11-21), or ask the sender to make a copy to see if the problem is with the sending machine. Try receiving from another fax machine. If the problem continues, contact your sales or service representative.	
Received faxes appear as split or blank pages.	If the received faxes are divided and printed on two pages or if you get an extra blank page, your Paper Size setting may not be correct for the paper you are using. (See <i>Setting the Paper Size</i> on page 2-5.) Make sure that auto reduction menu setting is turned on. (See <i>Printing a reduced incoming fax (Auto Reduction)</i> on page 4-4.)	
Phone Line or Connections		
Dialling does not work.	Check for a dial tone. Change Tone/Pulse setting. (See <i>Tone or Pulse</i> on page 5-4.) Check all line cord connections. Check power cord connection. If an external phone is connected to the machine, send a manual fax by lifting the handset of the external phone and dialling the number. Wait to hear fax receiving tones before	
	pressing Φ Start.	
The machine does not answer when called.	Make sure the machine is in the correct receiving mode for your setup. (See <i>Basic sending operations</i> on page 3-4.) Check for a dial tone. If possible, call your machine to hear it answer. If there is still no answer, check the telephone line cord connection. If there is no ringing when you call your machine, ask your telephone company to check the line.	


DIFFICULTY	SUGGESTIONS	
Sending Faxes		
Poor fax send quality	Try changing your resolution to Fine or S.Fine. Make a copy to check your machine's scanner operation. If the copy quality is not good, clean the scanner. (See <i>Cleaning the scanner</i> on page 11-19.)	
Transmission Verification Report says 'RESULT:NG' or 'RESULT:ERROR'.	If you send a PC FAX message and get 'RESULT:NG' on the Transmission Verification Report, your machine may be out of memory. To gain extra memory, you can turn off Fax Storage (See <i>Turning off Remote Fax Options on page 6-2</i>), print fax messages in memory (See <i>Printing a fax from the memory on page 4-5</i>) or cancel a Delayed Fax or Polling Job (See <i>Cancelling a fax in progress</i> on page 3-8). If the problem continues, ask the telephone company to check your phone line.	
	If you frequently get transmission errors due to possible interference on the phone line, try changing the Compatibility setting to Basic or Normal. When you change the Compatibility to Basic, the ECM feature is not available.	
Vertical black lines when sending.	If the copy you made shows the same problem, your scanner is dirty. (See <i>Cleaning the scanner</i> on page 11-19.)	
Handling Incoming Calls		
The machine 'Hears' Voice as CNG Tone.	If Fax Detect is set to On, your machine is more sensitive to sounds. It may mistakenly interpret certain voices or music on the line as a calling fax machine and respond with fax receiving tones. Deactivate the machine by pressing	
	Ø/C Stop/Exit. Try avoiding this problem by turning Fax Detect to Off. (See Fax Detect (Easy Receive for USA and Canada) on page 4-3.)	
Sending a Fax Call to the machine.	If you answered at the machine, press $$ Start and hang up immediately. If you answered on an external or extension phone, press your Fax Receive Code (default setting is ($\frac{1}{3}$ 51). When your machine answers, hang up.	
Custom features on a single line.	If you have Call Waiting, Call Waiting/Caller ID, Voice Mail, an answering machine, an alarm system or other custom feature on a single phone line with your machine, it may create a problem sending or receiving faxes.	
	For Example: If you subscribe to Call Waiting or some other custom service and its signal comes through the line while your machine is sending or receiving a fax, the signal can temporarily interrupt or disrupt the faxes. The ECM feature of this product should help overcome this problem. This condition is related to the telephone system industry and is common to all devices that send and receive information on a single, shared line with custom features. If avoiding a slight interruption is crucial to your business, a separate line with no custom features is recommended.	
Menu Setting Difficulties		
The machine beeps when you try to access the Setup Receive and Setup Send menus.	If the Fax register to turn on Fax mode. The Setup Receive setting (Menu/Set , 2 , 1) and Setup Send setting (Menu/Set , 2 , 2) are available only when the machine is in Fax mode.	
Copy Quality Difficulties		
Vertical streaks appear in copies.	Sometimes you may see vertical streaks on your copies. Either the scanner or the primary corona wire is dirty. Clean them both. (See <i>Cleaning the scanner</i> on page 11-19, <i>Cleaning the laser scanner window on page 11-20</i> and <i>Cleaning the drum unit on page 11-14</i> .)	

DIFFICULTY	SUGGESTIONS	
Printer Difficulties		
The machine does not print.	Please make sure:	
	• The machine is plugged in and the power switch is turned On. (See the Quick Setup Guide on page 7.)	
	-OR-	
	The toner cartridge and drum unit are installed properly. (See <i>Replacing the drum unit</i> on page 11-24.)	
	OR	
	• The interface cable is securely connected between the machine and computer. (See the Quick Setup Guide.)	
	OR	
	The correct printer driver has been installed and selected. OR—	
	Check to see if the LCD is showing an error message. (See Error messages on page 11-1.)	
	OR	
	 The machine is online. Click Start and then Printers and Faxes. Right-click 'TYPE 1190'. Make sure that "Use Printer Offline" is unchecked. 	
The machine prints unexpectedly or it prints garbage.	Turn off the machine's power switch and then on again. If the error message continues leave the machine for several minutes and then try it again. (The machine can be turned off for up to 4 days without losing faxes stored in the memory.)	
The machine prints first couple of pages correctly, then some pages have text missing.	Your computer is not recognizing the machine's input buffer full signal. Please make sure you connect the interface cable correctly. (See the Quick Setup Guide.)	
The machine cannot print full pages	Reduce the printing resolution.	
of a document. Out of Memory message occurs.	Reduce the complexity of your document and try again. Reduce the graphic quality or the number of font sizes within your application software.	
	Turn on the Page Protection function.	
My headers or footers appear when I view my document on the screen but do not appear when I print them.	Your machine can print 62 lines per page. The top two lines and bottom two lines are a restricted area that will not accept print. Adjust the top and bottom margins in your document to allow for this.	

DIFFICULTY	SUGGESTIONS	
Paper Handling Difficulties		
The machine does not feed paper. The LCD shows No Paper Fed or a Paper Jam message.	If there is no paper, load a new stack of paper into the paper tray. If there is paper in the paper tray, make sure it is straight. If the paper is curled, you should straighten it. Sometimes it is helpful to remove the paper, turn the stack over and put it back into the paper tray. Reduce the amount of paper in the paper tray, and then try again. Check that the manual feed mode is not selected in the printer driver. If the LCD shows Paper Jam and you still have a problem, see <i>Paper jams</i> on page 11-5.	
The machine does not feed paper from the manual feed slot.	Reinsert the paper firmly, load one sheet at a time. Make sure that manual feed mode is selected in the printer driver.	
How can I load envelopes?	You can load envelopes from the manual feed slot. Your application software must be set up to print the envelope size you are using. This is usually done in the Page Setup or Document Setup menu of your software. You should refer to the manual provided with your software application.	
What paper can I use?	You can use plain paper, recycled paper, envelopes, transparencies and labels that are made for laser machines. (For information on paper you can use, see <i>About paper</i> on page 1-9.)	
How can I clear paper jams?	See Paper jams on page 11-5.	
Print Quality Difficulties		
Printed pages are curled.	Low quality thin or thick paper can cause this problem. Make sure you select the Paper Type that suits the media type you use. (See <i>About paper on page 1-9</i> .)	
Printed pages are smeared.	The Paper Type setting may be incorrect for the type of print media you are using— OR —The print media may be too thick or have a rough surface.	
Printouts are too light.	If this problem occurs when making copies or printing received faxes, turn off Toner Save mode in the machine's menu setting. (See <i>Toner Save</i> on page 2-8.) Set Toner Save mode to off in the Advanced tab in the printer driver.	

Improving the print quality

Examples of poor print quality	Recommendation
ABCDEFGH abcdefghijk A B C D a b c de 0 1 2 3 4 Faint	Check the machine's environment. Conditions such as humidity, high temperatures, and so on may cause this print fault. (See <i>Choosing a location</i> on page 1-2.) If the whole page is too light, Toner Save mode may be on. Turn off Toner Save
	mode in the Advanced tab of printer driver Properties. —OR—
	If this problem occurs when making copies or printing received faxes, turn off Toner Save mode in the machine's menu setting. (See <i>Toner Save</i> on page 2-8.)
	Clean the scanner window and the primary corona wire on the drum unit. (See <i>Cleaning the laser scanner window</i> on page 11-20 and <i>Cleaning the corona wire</i> on page 11-21.) If the print quality has not improved, install a new drum unit. (See <i>Replacing the drum unit</i> on page 11-24.)
	Install a new toner cartridge. (See <i>Replacing the toner cartridge</i> on page 11-21.)
ABCDEFGH abcdefghijk	Make sure that you use paper that meets the recommended specifications. (See <i>About paper on page 1-9</i> .)
A B C D abcde 01234 Grey background	Check the machine's environment - high temperatures and high humidity can increase the amount of background shading. (See <i>Choosing a location</i> on page 1-2.)
	Install a new toner cartridge. (See Replacing the toner cartridge on page 11-21.)
	Clean the primary corona wire on the drum unit. (See <i>Cleaning the corona wire</i> on page 11-21.) If the print quality has not improved, install a new drum unit. (See <i>Replacing the drum unit</i> on page 11-24.)
B	Make sure you use paper that meets our specifications. Rough-surfaced paper or thick print media may cause this problem. (See <i>About paper on page 1-9</i> .)
B B Ghost	Make sure that you choose the appropriate media type in the printer driver or in the machine's Paper Type menu setting. (See <i>Setting the Paper Type</i> in this User's Guide.)
	Install a new drum unit. (See <i>Replacing the drum unit</i> on page 11-24.)
	Make sure that you use paper that meets our specifications. Rough-surfaced paper may cause the problem. (See <i>About paper on page 1-9</i> .)
A B C D a be de 0 12 3 4 Toner specks	Clean the primary corona wire and the drum unit. (See <i>Cleaning the corona wire</i> on page 11-21 and <i>Cleaning the drum unit</i> on page 11-14.) If the print quality has not improved, install a new drum unit. (See <i>Replacing the drum unit</i> on page 11-24.)
B Hollow print	Make sure that you use paper that meets our specifications. (See <i>About paper on page 1-9.</i>) Choose Thick paper mode in the printer driver or in the machine's Paper Type menu setting, or use thinner paper than you are currently using. Check the machine's environment because conditions such as high humidity can cause hollow print. (See <i>Choosing a location</i> on page 1-2.)
	Clean the primary corona wire on the drum unit. (See <i>Cleaning the corona wire</i> on page 11-21.) If the print quality has not improved, install a new drum unit. (See <i>Replacing the drum unit</i> on page 11-24.)
	Clean the primary corona wire on the drum unit. (See <i>Cleaning the corona wire</i> on page 11-21.) If the print quality has not improved, install a new drum unit. (See <i>Replacing the drum unit</i> on page 11-24.)
All black	

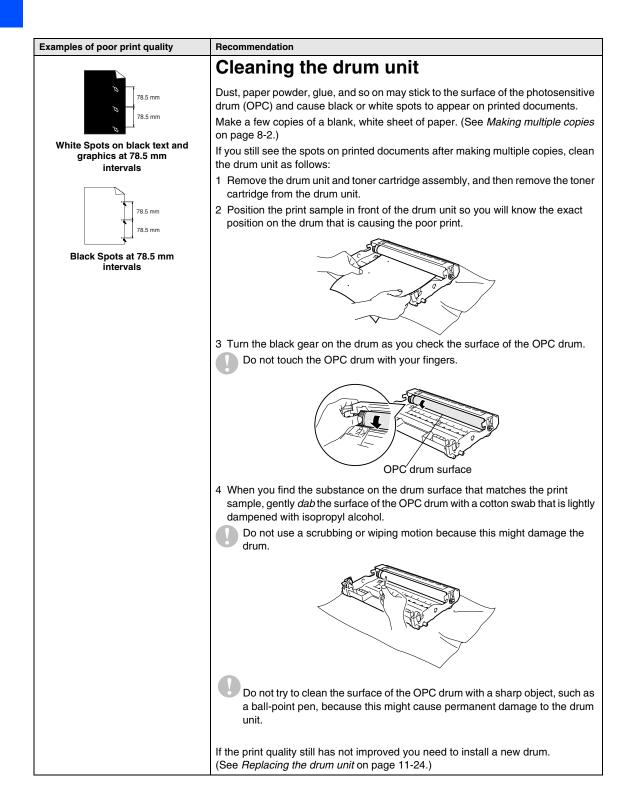

Examples of poor print quality	Recommendation
ABCDEFGH Abcodeghik A B C D a b c de 0 12 3 4 Black toner marks across the page	Make sure that you use paper that meets our specifications. (See <i>About paper on page 1-9</i> .)
	If you use label sheets for laser printers, the glue from the sheets may sometimes stick to the OPC drum surface. Clean the drum unit. (See <i>Cleaning the drum unit</i> on page 11-14.)
	Do not use paper that has clips or staples because they will scratch the surface of the drum.
	If the unpacked drum unit is in direct sunlight or room light, the unit may be damaged.
	The drum unit may be damaged. Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 11-24).
ABCDEFGH abcderghik A B C D a b c de 0 1 2 3 4 White lines across the page	Make sure that you use paper that meets our specifications. A rough surfaced paper or thick print media can cause the problem. (See <i>About paper on page 1-9.</i>)
	Make sure that you choose the appropriate media type in the printer driver or in the machine's Paper Type menu setting. (See <i>Setting the Paper Type</i> in this User's Guide.)
	The problem may disappear by itself. Try printing multiple pages to clear this problem, especially if the machine has not been used for a long time.
	You may clear the problem by wiping the laser scanner window with a soft cloth. (See <i>Cleaning the laser scanner window</i> on page 11-20.)
	The drum unit may be damaged. Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 11-24.)
Lines across the page	Clean the primary corona wire in the drum unit. (See <i>Cleaning the corona wire</i> on page 11-21.)
	You may clear the problem by wiping the laser scanner window with a soft cloth. (See <i>Cleaning the laser scanner window</i> on page 11-20.)
	The drum unit may be damaged. Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 11-24.)
AB¢DEFGH ab¢defghik A B C D a b c de 0 1 2 3 4 Black lines down the page Printed pages have toner stains down the page.	Clean the primary corona wire of the drum unit. (See <i>Cleaning the corona wire</i> on page 11-21.)
	Make sure the primary corona wire's blue tab is at the home position (\blacktriangle).
	The drum unit may be damaged. Install a new drum unit. (See <i>Replacing the drum unit</i> on page 11-24.)
	The toner cartridge may be damaged. Put in a new toner cartridge. (See <i>Replacing the toner cartridge</i> on page 11-21.) Make sure that a torn piece of paper is not inside the machine covering the laser scanner window.
	The fixing unit may be smudged. Contact your sales or service representative.
ABCDEFGH abcptorghijk ABCD abcde 01234 White lines down the page	You may clear the problem by wiping the laser scanner window with a soft cloth. (See <i>Cleaning the laser scanner window</i> on page 11-20.)
	The toner cartridge may be damaged. Put in a new toner cartridge. (See <i>Replacing the toner cartridge</i> on page 11-21.)
ABCDEFGH abcdetghik ABCCD abcde 01234 Page skewed	Make sure the paper or other print media is loaded properly in the paper tray and that the guides are not too tight or too loose against the paper stack.
	Set the paper guides correctly.
	If you are using the manual feed slot, see <i>To load paper or other media in the manual feed slot</i> on page 1-12.
	The paper tray may be too full.
	Check the paper type and quality. (See About paper on page 1-9.)

Examples of poor print quality	Recommendation
ABCORFOH abcderginik A B C D a b c d e 0 1 2 3 4 Curl or wave	Check the paper type and quality. High temperatures and high humidity will cause paper to curl.If you don't use the machine very often, the paper may have been in the paper tray too long. Turn over the stack of paper in the paper tray. Also, fan the paper stack and then rotate the paper 180° in the paper tray.
ABCDEFGH abcdefghik A B C D a b c d e 0 1 2 3 4 Wrinkles or creases	Make sure that paper is loaded properly. Check the paper type and quality. (See <i>About paper on page 1-9</i> .) Turn over the stack of paper in the tray or rotate the paper 180° in the input tray.

Compatibility

If you are having difficulty sending or receiving a fax due to possible interference on the phone line, we recommend that you adjust the Equalization for compatibility to reduce the modem speed for fax operations.

Press Menu/Set, 2, 0, 1.

1.Compatibility

2 Press ▲ or ▼ to select Basic or Normal Or High.

Press Menu/Set.



Note ____

- Basic reduces the modem speed to 9600 bps. Unless interference is a recurring problem on your phone line, you may prefer to use it only when needed.
- Normal sets the modem speed at 14400 bps.
- High sets the modem speed at 33600 bps.
- When you change the Compatibility to Basic, the ECM feature is not available.

Packing and shipping the machine

When you transport the machine, use the packing materials that came with your machine. If you do not pack the machine properly, you could void your warranty.


- 1 Turn off the machine's power switch.
- 2 Unplug the machine from the telephone wall socket.
- 3 Unplug all the cables and AC power cord from the machine.
- 4 Open the front cover.
- 5 Remove the drum unit and toner cartridge assembly. Leave the toner cartridge installed in the drum unit.
- 6 Place the drum unit and toner cartridge assembly into the plastic bag and seal the bag.
 - Close the front cover.

Remove the ADF document output support.


Remove the handset and handset curl cord. (For USA and Canada)

8 Wrap the machine in the plastic bag and place it in the original carton with the original packing material.

9 Pack the drum unit and toner cartridge assembly, AC power cord, telephone line cord, ADF document output support flap and printed materials in the original carton as shown below:

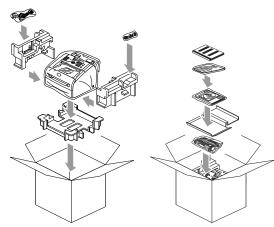

(for EU and Asia/Oceania)

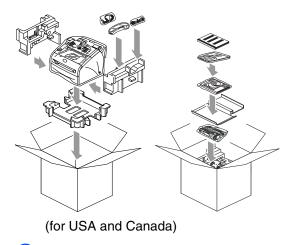



Routine maintenance

IMPORTANT

The drum unit contains toner, so handle it carefully. If toner scatters and your hands or clothes get dirty, immediately wipe or wash it off with cold water.

Cleaning the outside of the machine

IMPORTANT


- Use neutral detergents. Cleaning with volatile liquids such as thinner or benzine will damage the outside surface of the machine.
- Do *not* use cleaning materials that contain ammonia.
- Do not use isopropyl alcohol to remove dirt from the control panel. It may crack the panel.
- Pull the paper tray completely out of the machine.



2 Wipe the outside of the machine with a soft cloth to remove dust.



- 3 Remove any paper that is in the paper tray.
- 4 Wipe the inside of the paper tray with a soft cloth to remove the dust.

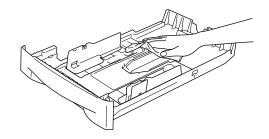


5 Re-load the paper and put the paper tray in the machine.

Cleaning the scanner

- 1 Turn off the machine's power switch.
- 2 Lift the control panel cover.
- 3 Moisten a small clean soft, lint-free cloth with isopropyl alcohol and carefully remove dirt from the glass cover and the white bar above it.

Control Panel Cover

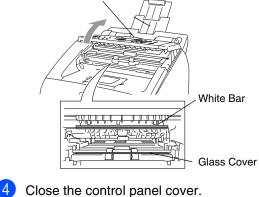

Cleaning the laser scanner window

IMPORTANT

- Do not use isopropyl alcohol to clean the laser scanner window.
- Do not touch the laser scanner window with your fingers.
- Before you clean the inside of the machine, turn off the machine's power switch.

Unplug the telephone line cord first, and then unplug the power cord from the electrical socket.

Open the front cover and pull out the drum unit and toner cartridge assembly.




CAUTION

Just after you have used the machine, some internal parts of the machine are extremely **HOT!** When you open the front cover of the machine, never touch the shaded parts shown in the diagram below.







To prevent damage to the machine from static electricity, do not touch the electrodes shown below.

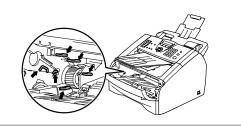

3 Gently clean the laser scanner window by wiping it with a clean soft, dry cloth. Do not use isopropyl alcohol.

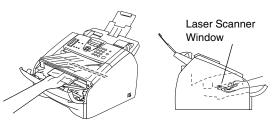

Put the drum unit and toner cartridge assembly back into the machine.

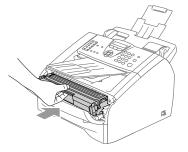

5 Close the front cover.


6 Plug the machine's power cord back into the electrical socket first, and then plug in the telephone line cord.

Turn on the machine's power switch.


Cleaning the corona wire

We recommend placing the drum unit and toner cartridge assembly on a cloth or a large piece of disposable paper to avoid spilling and scattering toner.

 Open the front cover and pull out the drum unit and toner cartridge assembly.

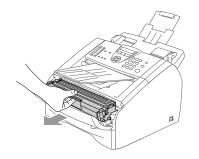

2 Clean the primary corona wire inside the drum unit by gently sliding the blue tab from right to left several times.

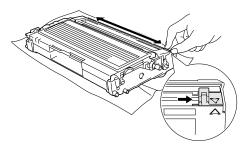

3 Return the blue tab and snap it into the Home position (▼).

IMPORTANT

If you do not return the blue tab to the Home position ($\mathbf{\nabla}$), your printed pages may have vertical black stripes on them.

Reinstall the drum unit and toner cartridge assembly in the machine.



Close the front cover.

Replacing the toner cartridge

The toner cartridge can print *up to* 2,500 pages. When the toner cartridge is running low, the LCD shows Toner Low. Actual page count will vary depending on your average type of document (i.e., standard letter, detailed graphics).

🖉 Note

It is a good idea to keep a new toner cartridge ready for use when you see the Toner Low warning.

Discard the used toner cartridge according to local regulations, keeping it separate from domestic waste. Be sure to seal the toner cartridge tightly so toner powder does not spill out of the cartridge. If you have questions, call your local waste disposal office.

We recommend that you clean the machine and drum unit when you replace the toner cartridge. (See *Cleaning the laser scanner window* on page 11-20 and *Cleaning the corona wire* on page 11-21.)

How to replace the toner cartridge

CAUTION

Just after you use the machine, some internal parts of the machine will be extremely **HOT!** Never touch the shaded parts shown in the illustration.




 Open the front cover and pull out the drum unit and toner cartridge assembly.



IMPORTANT

To prevent damage to the machine from static electricity, do not touch the electrodes shown below.

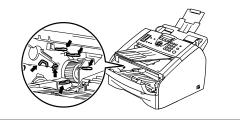

2 Hold down the lock lever on the left and pull the toner cartridge out of the drum unit.



 
IMPORTANT

- Place the drum unit on a drop cloth or large piece of disposable paper to avoid spilling and scattering the toner.
- Handle the toner cartridge carefully. If toner scatters on your hands or clothes, immediately wipe it off or wash it with cold water.
- 3 Unpack the new toner cartridge. Place the used toner cartridge into the aluminium bag and discard it according to local regulations.


Troubleshooting and routine maintenance


IMPORTANT


- This machine is designed to work with toner of a particular specification and will work to a level of optimum performance when used with genuine our branded toner cartridges. We cannot guarantee this optimum performance if toner or toner cartridges of other specifications are used. We do not therefore recommend the use of cartridges other than genuine our branded cartridges with this machine.
- If damage is caused to the drum unit or other part of this machine as a result of using other manufacter's products with this machine, any repairs required as a result may not be covered by the warranty.
- Wait to unpack the toner cartridge until immediately before you install it in the machine. If a toner cartridge is left unpacked for a long period of time, the toner life is shortened.
- Do not touch the shaded parts shown in the illustrations to prevent any degradation to the print quality.



  
Gently rock the toner cartridge from side to side five or six times to distribute the toner evenly inside the cartridge.

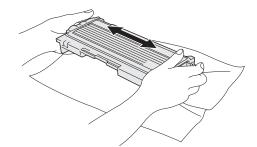






 6 Insert the new toner cartridge in the drum unit until it clicks into place. If you put it in properly, the lock lever will lift automatically.



7 Clean the primary corona wire inside the drum unit by gently sliding the blue tab from right to left several times. Return the blue tab to the Home position (▼) before reinstalling the drum unit and toner cartridge assembly.

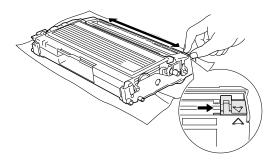

- Install the drum unit and toner cartridge assembly in the machine.
- Olose the front cover.

Replacing the drum unit

The machine uses a drum unit to create print images on paper. If the LCD shows Change Drum Soon, the drum unit is near the end of its life and it is time to buy a new one.

Even if the LCD shows Change Drum Soon, you may be able to continue printing without having to replace the drum unit for a while. However, if there is a noticeable deterioration in the output print quality (even before Change Drum Soon appears), then the drum unit should be replaced. You should clean the machine when you replace the drum unit. (See *Cleaning the laser scanner window* on page 11-20.)

IMPORTANT

When removing the drum unit, handle it carefully because it contains toner. If toner scatters and your hands or clothes get dirty, immediately wipe or wash with cold water.

🖉 Note

The drum unit is a consumable item, and it is necessary to replace it periodically. There are many factors that determine the drum life, such as temperature, humidity, type of paper and how much toner you use for the number of pages per print job. The estimated drum life is *up to* 12,000 pages. The actual number of pages your drum will print may be significantly less than these estimates. Because we have no control over the many factors that determine the actual drum life, we cannot guarantee a minimum number of pages that will be printed by your drum.


Troubleshooting and routine maintenance



Just after you have used the machine, some internal parts of the machine are extremely **HOT!** So please be careful.



Open the front cover and pull out the drum unit and toner cartridge assembly.

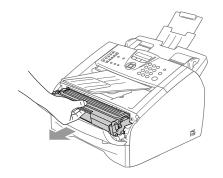


IMPORTANT

To prevent damage to the printer from static electricity, do not touch the electrodes shown below.



Hold down the lock lever on the left and pull the toner cartridge out of the drum unit.

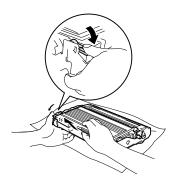

🖉 Note

 
Discard the used drum unit according to local regulations, keeping it separate from domestic waste. Be sure to seal the drum unit tightly so toner powder does not spill out of the unit. If you have questions, call your local waste disposal office.

 
IMPORTANT

Wait to unpack the new drum unit until immediately before installing it. Place the old drum unit into the plastic bag.

Unpack the new drum unit.

Install the toner cartridge into the new drum unit until it clicks into place. If you put it in properly, the lock lever will lift automatically.





Do not close the front cover.

Press - Options.

Replace Drum? 1.Yes 2.No

To confirm you are installing a new drum, press 1.

8 When the LCD shows Accepted, close the front cover.

V IMPORTANT

If toner scatters and your hands or clothes get dirty, immediately wipe off or wash with cold water.

Machine Information

Checking the Serial Numbers

You can view the machine's serial number on the LCD.

1.

	Press	Menu/Set,	4,
--	-------	-----------	----

1.Serial No.

Press Ø/C Stop/Exit.

Checking the Page Counters

You can view the machine's page counters for copies, printer pages, reports and lists, faxes or a summary total.



Press Menu/Set, 4, 2.

2.Page Counter

2 Press \blacktriangle or \triangledown to select Total, Copy, Print or List/Fax.

:XXXXXX
:XXXXXX
:XXXXXX
:XXXXXX



Press Ø/C Stop/Exit.

Troubleshooting and routine maintenance

Checking the Drum Life

You can view the machine's drum life on the LCD.



Press Menu/Set, 4, 3.

3.Drum	Life)
Remaini	ng:XXX%)

2 Press ©/C Stop/Exit.

A

Appendix A

Telephone services for U.K.

BT Call Sign (For U.K. Only)

This machine feature lets you use the BT Call Sign subscriber service which allows you to have at least two separate telephone numbers on one phone line. Each phone number has its own distinctive ringing pattern, so you know which phone number is ringing. This is one way you can have a separate phone number for your machine.

Your machine has a BT Call Sign compatible distinctive ringing function, allowing you to dedicate a second phone number (on the same phone line) just for receiving faxes.

🖉 Note

- You can switch BT Call Sign off temporarily, then turn it back on. When you get a new fax number, make sure you reset this function. The machine will automatically answer incoming calls that use your new fax number.
- When you set the BT Call Sign feature to ON, the receive mode is set to Manual automatically. Manual mode will not respond to incoming telephone calls, since the number you use for telephone calls will use the normal ring pattern.

To enable the machine to work with BT Call Sign (Only with your external phone)

- Press Menu/Set, 2, 0, 2.
 The screen displays the current setting of this feature.
- 2 Press ▲ or ▼ to select On (or Off).
- 3 Press Menu/Set.
- 4 Press ⊚/c Stop/Exit.

🖉 Note

If you turn off BT Call Sign, the receive mode stays set to Manual. You will need to set receive mode again. (See *Choosing the Receive Mode* on page 4-1.)

Setting up telephone services (for USA and Canada)

Your machine supports the Distinctive Ring and Caller ID subscriber telephone services that some telephone companies offer.

🖉 Note

- If you have Voice Mail, Call Waiting, Call Waiting/Caller ID, RingMaster, an answering service, an alarm system or other custom features on your telephone line, it may affect the way your machine works. (See Custom features on page 1-13 and Custom features on a single line. on page 11-10.)
- If you have Voice Mail on your phone line, please read the following carefully.

Distinctive Ring

This user's guide uses the term 'Distinctive Ring' but different telephone companies have other names for this service such as SmartRing, RingMaster, Teen-Ring, Indent-a-Call or Indent-a-Ring.

What does your telephone company's 'Distinctive Ring' do?

Your telephone company's Distinctive Ring service allows you to have more than one number on the same phone line. If you need more than one phone number, it is cheaper than paying for an extra line. Each phone number has its own distinctive ring pattern, so you will know which phone number is ringing. This is one way you can have a separate phone number for your machine.



Please call your telephone company for availability and rates.

What does 'Distinctive Ring' do?

The machine has a Distinctive Ring feature that allows you to use your machine to take full advantage of the telephone company's Distinctive Ring service. The new phone number on your line can just receive faxes.



You must pay for your telephone company's Distinctive Ring service before you program the machine to work with it.

Do you have Voice Mail?

If you have Voice Mail on the phone line that you will install your new machine on, *there is a strong possibility that Voice Mail and the machine will conflict with each other while receiving incoming calls.* However, the Distinctive Ring feature allows you to use more than one number on your line, so both Voice Mail and the machine can work together without any problems. If each one has a separate phone number, neither will interfere with the other's operations.

If you decide to get the Distinctive Ring service from the telephone company, you will need to follow the directions on next page to 'register' the new Distinctive Ring pattern they give you. This is so your machine can recognize its incoming calls.

Note

You can change or cancel the Distinctive Ring pattern at any time. You can switch it off temporarily, and turn it back on later. When you get a new fax number, make sure you reset this feature.

Before you choose the ring pattern to register

You can only register one Distinctive Ring pattern with the machine. Some ring patterns cannot be registered. The ring patterns below are supported by this machine. Register the one your telephone company gives you.

Ring Pattern	Rings	
1	long-long	
2	short-long- short	
3	short-short- long	
4	very long (normal pattern)	

🖉 Note

If the ring pattern you received is not on this chart, **please call your telephone company and ask for one that is shown**.

- The machine will only answer calls to its registered number.
- The first two rings are silent on the machine. This is because the fax must «listen» to the ring pattern (to compare it to the pattern that was 'registered'). (Other telephones on the same line will ring.)
- If you program the machine properly, it will recognize the registered ring pattern of the 'fax number' within 2 ring patterns and then answer with a fax tone. When the 'voice number' is called, the machine will not answer.

Registering the Distinctive Ring pattern

Very important!

After you have set the Distinctive Ring feature to ON, the receive mode is set to Manual automatically. Unless you have a TAD or Voice Mail set up on the Distinctive Ring number, Manual mode means you must answer all the calls yourself. You can not change the receive mode to another mode while the Distinctive Ring is set to on.



Press Menu/Set, 2, 0, 2.

(2.Distinctive

- Press ▲ or ▼ to select Set. Press Menu/Set.
- 3 Press ▲ or ▼ to select the stored ring pattern you want to use.

Press Menu/Set.

(You will hear each pattern as you scroll through the four patterns. Make sure you choose the pattern that the telephone company gave you.)

4 Press **Stop/Exit**. Distinctive Ring is now set to on.

Turning off the Distinctive Ring

1 Press **Menu/Set**, **2**, **0**, **2**.

2.Distinctive



Press Stop/Exit.

🖉 Note

If you turn off Distinctive Ring, the machine will stay in Manual receive mode. You will need to set the Receive Mode again. (See To select or change your Receive Mode on page 4-2.)

Caller ID



The Caller ID feature lets you use the Caller ID subscriber service offered by many local telephone companies. This service displays the telephone number, or name if it is available, of your caller as the line rings.

After a few rings, the LCD shows the telephone number of your caller (and name, if available). Once you pick up the handset, the Caller ID information disappears from the LCD, but the call information remains stored in the Caller ID memory.

- You will see the first 16 characters of the number (or name).
- Out of Area display means call originated outside your Caller ID service area.
- Private Call display means the caller has intentionally blocked transmission of information.

You can print a list of Caller ID information received by your machine. (See Printing Caller ID List on page A-4.)

Caller ID service varies with different carriers. Call your local telephone company to determine the kind of service available in your area.

Viewing Caller ID List

Caller ID memory stores information for up to thirty calls. When the thirty-first call comes in, information about the first call is erased. You can scroll through Caller ID information to review those calls made to your machine.

Press Menu/Set, 2, 0, 3.

(3.Caller ID

Press ▲ or ▼ to select Display#.

Press Menu/Set.

The caller ID of the last call will appear on the display. If no ID is stored, the beeper will sound and No Caller ID will appear on the display.

- 3 Press \blacktriangle or \triangledown to scroll through the Caller ID memory to select the Caller ID you want to view, and then press Menu/Set. The LCD shows the caller's number and the date and time of the call.
- -OR-

Press Stop/Exit.

Printing Caller ID List

Press Menu/Set, 2, 0, 3.

3.Caller ID

2 Press ▲ or ▼ to select Print Report. Press Menu/Set.

> If no ID is stored, the beeper will sound and No Caller ID will appear on the display.

Press Start.

After printing has finished, press Stop/Exit.

Call Waiting

The Call Waiting feature lets you use the Call Waiting subscriber service offered by many local telephone companies. This feature enables you to take a second call on your machine, without disconnecting the first caller.

- To answer a Call Waiting signal while you are talking on the phone, ask the other party if you can put them on Hold to catch the other call.
- 2 Press **Search/Speed Dial** to switch to the second call.
- 3 To switch back to the first call, press Search/Speed Dial again.



Either caller can hang up at any time. However, if you hang up you will disconnect both callers.

Telephone Service for Australia

Telstra[®] FaxStream[®] Duet[®] (Distinctive Ringing)

Telstra[®] FaxStream[®] Duet[®] is an enhanced Public Switched Telephone Service (PSTS) offered by Telstra[®] that allows you to have an additional number on one phone line, with its own distinctive ring pattern. Telstra[®] FaxStream[®] Duet[®] is a call handling feature that helps users distinguish voice and facsimile calls. With FaxStream[®] Duet[®], incoming calls to a fax number are announced by a different, distinctive ring signal. Only one call can be answered (or made) at any one time and while this call is in progress, incoming calls to either number will be presented with a busy tone.

Your machine has a Distinctive Ringing function, allowing you to dedicate one phone number just for receiving faxes.

🖉 Note

After you have set the Distinctive Ring feature to On, the receive mode is set to Manual automatically. If you don't have a TAD or Voice Mail set up on the Distinctive Ring number, Manual mode means you must answer all the calls yourself. You can not change the receive mode from Manual mode while the Distinctive Ring is set to on.

What is the Advantage of using Telstra[®] FaxStream[®] Duet[®] Function?


Using Telstra[®] FaxStream[®] Duet[®] is the most efficient way to receive both fax and telephone calls on the same line. When the voice call comes in, all phones (extension and external) and the fax machine will ring to alert you to pick it up. If a fax call comes in, the fax machine will answer automatically without ringing, whereas the extension and external phones will ring with a distinctive ring pattern. It is also a more efficient way of operating a Fax machine with an extension phone as you do not have to use the remote activation codes. It gives you two independent numbers without the higher cost of a second line.

How does Telstra[®] FaxStream[®] Duet[®] Work?

Incoming calls to the voice number, will have the standard ring pattern of long, long tone, followed by a pause, repeated, while the new fax number will have a different ring pattern of three short bursts of ring, repeated at regular intervals.

When FaxStream[®] Duet[®] is On and you receive a voice call all extension and external phones will ring with a standard ring pattern. The fax machine will ring on the third ring with a standard ring pattern. All external and the extension phones will continue to ring until you or a telephone answering device can answer the voice number.

When FaxStream[®] Duet[®] is On and you receive a fax call on the Duet[®] number the Fax machine will answer and automatically receive the fax message without ringing. On the other hand, all extension and external phones will ring with a distinctive ring pattern. Do not answer the phone as you are receiving a fax message.

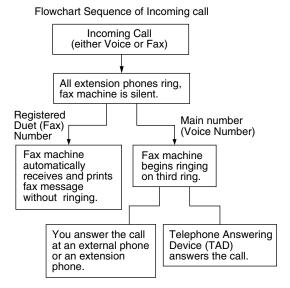

Set the Distinctive Ringing to ON

 
Press Menu/Set, 2, 0, 2.

2.Distinctive

The screen displays the current setting of this feature.

Press ▲ or ▼ to select On (or Off).

Press Menu/Set.



Caller ID (Caller IDentification)

Caller ID is a telephone service that allows the subscriber to see a display of the caller's phone number or name as the telephone rings. It is a fast way to screen your calls. You can respond quickly to calls you missed, because Caller IDs are received and stored in your machine memory.

🖉 Note

To get the Caller ID Service: apply for the Caller ID service at your local telephone company, if available.

Advantages of Caller ID

For Business

All businesses profit from a quicker response to customer calls. Businesses that provide mail order services, money-lending services or provide confidential information, can protect themselves from false orders or acceptance of false identification.

At Home

Residential customers can protect themselves from unwanted calls.

How Does the Caller ID Work?

The Caller ID Appears on the Display When Your Telephone Rings

As your telephone rings, the display shows you the caller's phone number or name if the name has stored in the One-Touch and Speed-Dial. Once you pick up the handset, the caller's ID disappears. You will see up to the first 16 characters of the number on the display.

Ø [®]Note

- If Out of Area appears on the display, it means that the call came from outside your caller ID service area or a public phone. *
- If Private Call appears on the display, it means the caller intentionally blocked the transmission of his/her ID. *
- If Unavailable appears on the display, it means that the call came from outside your caller ID service area or from a public phone.
- * Depends on network Function.

The Caller ID is Stored in Your Machine Memory

The machine can store a maximum of the last 30 incoming caller IDs in the memory, along with the time and date of reception. The 31st call will cause the oldest ID to be erased.

The Caller ID information stored in the memory can be used for the following.

 
Printing the Caller ID List.

You can review calls you received by checking the Caller IDs in memory. This report will list the Date, Time, Phone Number (Caller ID) name, and type of Call (Comment) if available.

Viewing Caller ID List

Caller ID memory stores information for up to thirty calls; when the thirty-first call comes in, information about the first call is erased. You can scroll through Caller ID information to review those calls made to your machine.

Press Menu/Set, 2, 0, 3.



- Press ▲ or ▼ to select Display# and press Menu/Set.
- Press ▲ or ▼ to scroll through the Caller ID memory to select the Caller ID you want to view and press Menu/Set.

The next screen shows the caller's telephone number and the date and time of the call.

4 Press Stop/Exit.

Printing Caller ID List



Press Menu/Set, 2, 0, 3.

2 Press ▲ or ▼ to select Print Report.

Press Menu/Set.

Press Start.

Telephone Service for New Zealand

FaxAbility

FaxAbility is a service offered by Telecom that allows you to have an additional number on one phone line, with its own distinctive ring pattern. This way, when you get an incoming call, you can identify the number being called by its ring.

How Will the Fax Machine Treat All Other Numbers?

FaxAbility mode ensures that the machine will answer calls to the FaxAbility (secondary) number. When a call comes in to your main number, all the phones will ring. You can set an external answering device (TAD) to answer calls on the other number(s). (See the chart in the following page.)


What is the Advantage of Using the FaxAbility Function?

Using FaxAbility is the most efficient way to receive both fax and telephone calls on the same line. It is much easier for your callers who dial manually. The fax machine will answer with receiving tones so they will not have to press an activation code. And the people who call to talk on your main number will not have to talk to your fax machine. Basically, it gives you two independent numbers without the higher cost of a second line.

How Does FaxAbility Work?

Your telephone number will have the standard ring pattern of long, long tone, while the new number will have a ring pattern of long, silence, long, etc. When FaxAbility is On, you will not hear the first ring of all incoming calls on the fax machine. Extension phones will ring as usual. If the fax machine recognizes the ring pattern, all ringing will stop and the fax machine will answer and automatically receive the fax message. Otherwise, you will hear the extension phones and the fax machine continue to ring. The fax machine always listens to the ring pattern before it answers, so do not pick up the phone during that time. You will guickly learn to recognize the ring pattern for faxes, so you will not be tempted to answer that number. Either you or a telephone answering device can answer the main number(s).

Flowchart Sequence of Incoming call

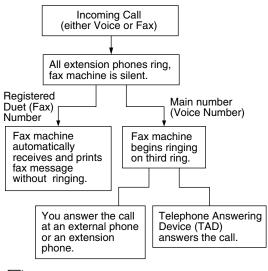

🖉 Note

After you have set the FaxAbility feature to On, the receive mode is set to Manual automatically. Unless you have a TAD or Voice Mail set up on the FaxAbility number, Manual mode means you must answer all the call yourself. You can not change the receive mode to the other mode while the FaxAbility is set to on.

How to Turn FaxAbility OFF or ON

The FaxAbility function is designed to accommodate the FaxAbility service provided by Telecom. To change the setting, repeat Steps 1-3; Step 2 is where you can select either On or Off.

Call Waiting beeps caused by incoming calls on your main number can affect fax transmissions. If you have FaxAbility Service but don't have Call Waiting, you need do nothing at this stage. If you do have Call Waiting as well as FaxAbility, set the Call Waiting menu option to On. See below.

Press Menu/Set, 2, 0, 2.

The screen displays

2.Faxability

2 Press ▲ or ▼ to set FaxAbility to On or Off.

If you have FaxAbility service, select On.

Press Menu/Set.

3 Press ▲ or ▼ to set Call Waiting to On or Off. If you have Call Waiting service, select On to avoid the trouble caused by Call Waiting.

Press Menu/Set.



Caller ID (Caller IDentification)

Caller ID is a telephone service that allows the subscriber to see a display of the caller's phone number and name if available as the telephone rings. It is a fast way to screen your calls. You can respond quickly to calls you missed, because Caller IDs are received and stored in your machine memory.

🖉 Note

To get the Caller ID Service: apply for the Caller ID service at your local telephone company, if available.

Advantages of Caller ID

For Business

All businesses profit from a quicker response to customer calls. Businesses that provide mail order services, money-lending services or provide confidential information, can protect themselves from false orders or acceptance of false identification.

At Home

Residential customers can protect themselves from unwanted calls.

How Does the Caller ID Work?

The Caller ID Appears on the Display When Your Telephone Rings

As your telephone rings, the display shows you the caller's phone number and name if available. Once you pick up the handset, the caller's ID disappears. You will see up to the first 16 characters of the number and name if available on the display.



If Out of Area appears on the display, it means that the call came from outside your caller ID service area. *

- If Private Call appears on the display, it means the caller intentionally blocked the transmission of his/her ID. *
- * Depends on network Function.

Viewing Caller ID List

Caller ID memory stores information for up to thirty calls; when the thirty-first call comes in, information about the first call is erased. You can scroll through Caller ID information to review those calls made to your machine.



Press Menu/Set, 2, 0, 3.

(3.Caller ID

Press ▲ or ▼ to select Display# and press Menu/Set.

If the name was not received, it will not be displayed.

3 Press ▲ or ▼ to scroll through the Caller ID memory to select the Caller ID you want to view and press **Menu/Set**.

 
The next screen shows the caller's telephone number and the date and time of the call.

Press Stop/Exit.

Printing Caller ID List

1 Press Menu/Set, 2, 0, 3.

Press ▲ or ▼ to select Print Report. Press Menu/Set.



🖉 Note

If you use the Caller ID for Dial back...

- Please be sure that you use appropriate dialling procedures for local and national call.
- Please be sure that you make sure of the details of the exact number to be called back, and the need to insert prefix(es) for manual dialling.
- Please understand that your machine may not display precisely the digits to be called.

Telephone Service for Some Countries

Distinctive Ringing (For Singapore and Hong Kong)

This machine feature lets you use the Distinctive Ringing subscriber service offered by some telephone companies, which allows you to have several telephone numbers on one phone line. Each phone number has its own Distinctive Ringing pattern, so you will know which phone number is ringing. This is one way you can have a separate phone number for your machine.

Your machine has a Distinctive Ringing function, allowing you to dedicate one phone number just for receiving faxes. You will need to set Distinctive Ringing to On.

🖉 Note

You can switch it off temporarily, then turn it back on. When you get a new fax number, make sure you reset this function.

The machine will answer only calls to the Distinctive Ringing number.

🖉 Note

After you have set the Distinctive Ring feature to On, the receive mode is set to Manual automatically. Unless you have a TAD or Voice Mail set up on the Distinctive Ring number, Manual mode means you must answer all the call yourself. You can not change the receive mode to the other mode while the Distinctive Ring is set to on.

Setting the Distinctive Ringing

1 Press Menu/Set, 2, 0, 2.

2.Distinctive

Press ▲ or ▼ to select On (or Off). Press Menu/Set.

Press Menu/Set.

3 Press **Stop/Exit**.

Caller ID (For Singapore and Hong Kong)

The Caller ID feature of this machine lets you use the Caller ID subscriber service offered by many local phone companies. This service provides you, by means of the screen display, the telephone number (or name) of your caller as the line rings. (See *Printing Caller ID List* on page A-12.)

After a few rings, the screen displays the telephone number of your caller (or name, if available). Once you pick up the handset, the Caller ID information disappears from the screen, but the call information remains stored in the Caller ID memory.

- You will see the first 16 characters of the number or name.
- Out of Area display means call originates outside your Caller ID service area.
- Private Call display means the caller has intentionally blocked transmission of information.

 
🖉 Note

 
You can print a list of Caller ID information received by your machine.

Caller ID service varies with different carriers. Call your local phone company to determine the kind of service available in your area.

Viewing Caller ID List

Caller ID memory stores information for up to thirty calls; when the thirty-first call comes in, information about the first call is erased. You can scroll through Caller ID information to review those calls made to your machine.





Press ▲ or ▼ to select Display# and press Menu/Set.

If the name was not received, it will not be displayed.

3 Press ▲ or ▼ to scroll through the Caller ID memory to select the Caller ID you want to view and press **Menu/Set**.

The next screen shows the caller's telephone number and the date and time of the call.

4 Press Stop/Exit.

Printing Caller ID List

- 1 Press Menu/Set, 2, 0, 3.
- 2 Press ▲ or ▼ to select Print Report. Press Menu/Set.
- 3 Press Start.

Advanced receiving operations

Operation from extension telephones

If you answer a fax call on an extension, or an external telephone that is correctly connected to the machine, you can make your machine take the call by using the Fax Receive Code. When you press the Fax Receive Code \pm 51, the machine starts to receive the fax.

If you answer a call and no one is on the line, you should assume that you're receiving a manual fax.

Press *** 51** and wait for the chirp or until the machine's LCD displays Receiving, and then hang up.

🖉 Note

You can also use the Fax Detect feature to make your machine automatically take the call. (See *Fax Detect (Easy Receive for USA and Canada) on page 4-3.*)

For Fax/Tel mode only

When the machine is in Fax/Tel mode, it will use the F/T Ring Time (pseudo/double-ringing) to alert you to pick up a voice call.

(For USA and Canada only)

If you're at the machine, you can lift the handset to answer.

(For EU model only)

If you are at the machine with external telephone connected to the EXT jack of the machine, lift the external telephone's

handset, and then press $\textcircled{\baselineskip}{\baselineskip}$ to answer.

(For Asia/Oceania model only)

If you are at the machine with external telephone connected to the EXT jack of the machine, lift the external telephone's handset, and then press **Hook/Hold** to answer.

If you're at an extension phone, you'll need to lift the handset during the F/T Ring Time and then press **#51** between the pseudo/double rings.

After taking the call, if no one is on the line, or if someone wants to send you a fax, send the call back to the machine by pressing \times 51.

Using a cordless external handset

If the base unit of the cordless telephone is connected (see page A-14) and you typically carry the cordless handset elsewhere, it is easier to answer calls during the Ring Delay.



Not all brands of cordless phones are compatible for use with your machine.

Changing the remote codes

If you want to use Remote Activation, you have to turn on the remote codes. The preset Fax Receive Code is \div **51**. The preset Telephone Answer Code is **#51**. If you want to, you can replace them with your own codes.



If it is not illuminated in green, press

(Fax).

2 Press Menu/Set, 2, 1, 4.



- 3 Press ▲ or ▼ to select On (or Off). Press Menu/Set.
- 4 Enter the new Fax Receive Code. Press **Menu/Set**.
- 5 Enter the new Telephone Answer Code. Press Menu/Set.
- 6 Press ୭/୦ Stop/Exit.

🖉 Note

- If you are always disconnected when accessing your external TAD remotely, try changing the Fax Receive Code and Telephone Answer Code to another three-digit code using the numbers 0-9, <u>×</u>, #.
- Remote Codes might not work with some telephone systems.


Connecting an external device to your machine

Connecting an external telephone

You can connect a separate telephone to your machine as shown in the diagram below in accordance with your country.


Туре А

For the countries such as USA, Canada, Spain, Netherlands, Portugal, Poland, Hungary, Czech, Norway, Asia, Oceania and etc.

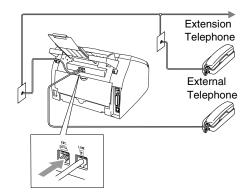

Туре В

For the countries such as UK, France, Italy, Belgium, Sweden, Denmark and Finland.

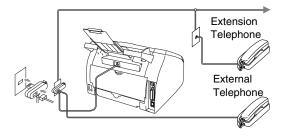


Туре С

For Germany



Type D

For Switzerland

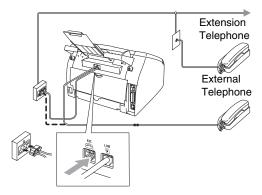

When you are using an external phone, the LCD shows Telephone.

Connecting an external telephone answering device (TAD)

Sequence

You may choose to connect an external answering device. However, when you have an **external** TAD on the same telephone line as the machine, the TAD answers all calls and the machine "listens" for fax calling (CNG) tones. If it hears them, the machine takes over the call and receives the fax. If it does not hear CNG tones, the machine lets the TAD continue playing your outgoing message so your caller can leave you a voice message. The TAD must answer within four rings (the recommended setting is two rings). The machine cannot hear CNG tones until the TAD has answered the call, and with four rings there are only 8 to 10 seconds of CNG tones left for the fax "handshake". Make sure you carefully follow the instructions in this guide for recording your outgoing message. We do not recommend using the toll saver feature on your external answering machine if it exceeds five rings.

🖉 Note

- If you do not receive all your faxes, reduce the Ring Delay setting on your external TAD.
- If You Subscribe to your Telephone Company's Distinctive Ring Service: You may connect an external TAD to a separate wall jack only if you subscribe to your telephone company's Distinctive Ring service, have registered the distinctive ring pattern on your machine, and use that number as a fax number. The recommended setting is at least four rings on the external TAD when you have the telephone company's Distinctive Ring Service. You cannot use the Toll Saver setting.
- If You Do Not Subscribe to Distinctive Ring Service:

You must plug your TAD into the EXT. jack of your machine. If your TAD is plugged into a wall jack, both your machine and the TAD will try to control the phone line. (See illustration below.)


S Improper Setup

Unless you are using Distinctive Ring, do not connect a TAD elsewhere on the same phone line.

When the TAD answers a call, the LCD shows Telephone (for EU) or Ext. Tel in Use (for USA, Canada and Asia/Oceania).


Туре А

For the countries such as USA, Canada, Spain, Netherlands, Portugal, Poland, Hungary, Czech, Norway, Asia, Oceania and etc.

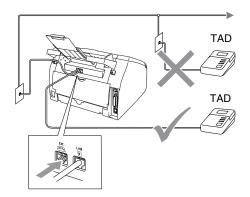

Туре В

For the countries such as UK, France, Italy, Belgium, Sweden, Denmark and Finland.

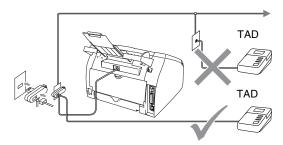


Туре С

For Germany



Type D

For Switzerland

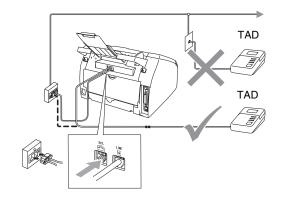

Connections

The external TAD must be connected as shown in the previous illustration.

- Set your external TAD to one or two rings. (The machine's Ring Delay setting does not apply.)
- Record the outgoing message on your external TAD.
- 3 Set the TAD to answer calls.
- Set the Receive Mode to External TAD. (See Choosing the Receive Mode on page 4-1.)

Recording outgoing message (OGM) on an external TAD

Timing is important in recording this message.

- 1 Record 5 seconds of silence at the beginning of your message. (This allows your machine time to listen for the fax CNG tones of automatic transmissions before they stop.)

Limit your speaking to 20 seconds.

🖉 Note

We recommend beginning your OGM with an initial 5-second silence because the machine cannot hear fax tones over a resonant or loud voice. You may try omitting this pause, but if your machine has trouble receiving, then you must re-record the OGM to include it.

Special line considerations for U.K.

Using extension telephones (For U.K. only)


It may be that your premises are already wired with parallel extension telephones, or you intend to add extension telephones to your line, in addition to your machine. While the simplest arrangement is straightforward parallel connection, there are some reasons as to why this arrangement will cause unsatisfactory service, the most obvious of which is inadvertent interruption of a facsimile transmission by someone picking up an extension telephone in order to make an outgoing call. Additionally, Fax receive code may not operate reliably in such a simple configuration.

This machine may also be set to make a delayed transmission (i.e. a transmission at a pre-set time). This pre-set job may coincide with someone picking up an extension handset.

Such problems can easily be eliminated however, if you arrange modification of your extension wiring circuit, such that extension devices are connected "downstream" of your machine, in a master/slave configuration (see fig. 2 on next page). In such a configuration, this machine can always detect whether a telephone is in use, thus it will not attempt to seize the line during that time. This is known as "telephone off-hook detection."

The inadvisable configuration is shown in figure 1 on the next page, and the recommended master/slave configuration is shown in figure 2.

This new connection configuration can be arranged by contacting BT, Kingston upon Hull Telecommunications, your PABX (PBX) maintainer or a qualified telephone installation company as appropriate. Simply explained, the extension telephone circuit should be terminated on a normal modular plug (BT 431A style), which in turn should be inserted into the modular socket of the white "T"-shaped connector provided as part of the line cord assembly.

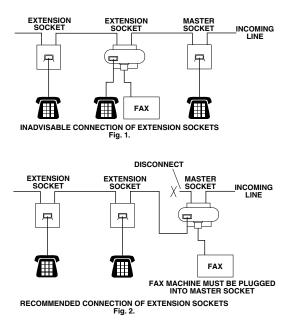

🖉 Note

These phones are now connected as external devices as per page A-14, because they are connected to the fax machine via the T-connector.

Special line considerations for USA and Canada

Roll over phone lines

A roll over phone system is a group of two or more separate telephone lines that pass incoming calls to each other if they are busy. The calls are usually passed down or "rolled over" to the next available phone line in a preset order.

Your machine can work in a roll over system as long as it is the last number in the sequence, so the call cannot roll away. Do not put the machine on any of the other numbers; when the other lines are busy and a second fax call is received, the fax call would be transferred to a line that does not have a fax machine. Your machine will work best on a dedicated line.


Two-line phone system

A two-line phone system is nothing more than two separate phone numbers on the same wall outlet. The two phone numbers can be on separate jacks (RJ11) or combined into one jack (RJ14). Your machine must be plugged into an RJ11 jack. RJ11 and RJ14 jacks may be equal in size and appearance and both may contain four wires (black, red, green, yellow). To test the type of jack, plug in a two-line phone and see if it can access both lines. If it can, you must separate the line for your machine. (See *Fax Detect (Easy Receive for USA and Canada*) on page 4-3.)

Converting telephone wall outlets

There are three ways to convert to an RJ11 jack. The first two ways may require assistance from the telephone company. You can change the wall outlets from one RJ14 jack to two RJ11 jacks. Or, you can have an RJ11 wall outlet installed and slave or jump one of the phone numbers to it.

The third way is the easiest: Buy a triplex adapter. You can plug a triplex adapter into an RJ14 outlet. It separates the wires into two separate RJ11 jacks (Line 1, Line 2) and a third RJ14 jack (Lines 1 and 2). If your machine is on Line 1, plug the machine into L1 of the triplex adapter. If your machine is on Line 2, plug it into L2 of the triple adapter.

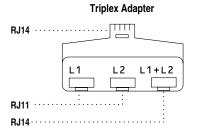


Installing machine, external two-line TAD and two-line telephone

When you are installing an external two-line telephone answering device (TAD) and a two-line telephone, your machine must be isolated on one line at both the wall jack and at the TAD. The most common connection is to put the machine on Line 2, which is explained in the following steps. The back of the two-line TAD must have two telephone jacks: one labeled L1 or L1/L2, and the other labeled L2. You will need at least three telephone line cords, the one that came with your machine and two for your external two-line TAD. You will need a fourth line cord if you add a two-line telephone.

- Place the two-line TAD and the two-line telephone next to your machine.
- Plug one end of the telephone line cord for your machine into the L2 jack of the triplex adapter. Plug the other end into the LINE jack on the back of the machine.
- Plug one end of the first telephone line cord for your TAD into the L1 jack of the triplex adapter. Plug the other end into the L1 or L1/L2 jack of the two-line TAD.
- Plug one end of the second telephone line cord for your TAD into the L2 jack of the two-line TAD. Plug the other end into the EXT. jack on the left side of the machine.

Triplex Adapter

 Two Line Phone



You can keep two-line telephones on other wall outlets as always. There are two ways to add a two-line telephone to the machine's wall outlet. You can plug the telephone line cord from the two-line telephone into the L1+L2 jack of the triplex adapter. Or, you can plug the two-line telephone into the TEL jack of the two-line TAD.

Multi-line connections (PBX)

Most offices use a central telephone system. While it is often relatively simple to connect the machine to a key system or a PBX (Private Branch Exchange), we suggest that you contact the company that installed your telephone system and ask them to connect the machine for you. It is advisable to have a separate line for the machine.

If the machine is to be connected to a multi-line system, ask your installer to connect the unit to the last line on the system. This prevents the unit from being activated each time a telephone call is received.

If you are installing the machine to work with a PBX

- It is not guaranteed that the unit will operate properly under all circumstances with a PBX. Any cases of difficulty should be reported first to the company that handles your PBX.
- If all incoming calls will be answered by a switchboard operator, it is recommended that the Receive Mode be set to Manual. All incoming calls should initially be regarded as telephone calls.
- 3 Make sure the Phone Line Type is set to PBX. (See *Setting the Phone Line Type* (*For EU model only*) on page 2-3.)

Custom features on your phone line

If you have Voice Mail, Call Waiting, Call Waiting/Caller ID, RingMaster, an answering service, an alarm system or other custom feature on one phone line it may create a problem with the operation of your machine. (See *Custom features on a single line.* on page 11-10.) B

Appendix B

On-screen programming

Your machine is designed to be easy to use with LCD on-screen programming using the navigation keys. User-friendly programming helps you take full advantage of all the menu selections your machine has to offer.

Since your programming is done on the LCD, we have created step-by-step on-screen instructions to help you program your machine. All you need to do is follow the instructions as they guide you through the menu selections and programming options.

Menu table

The Menu table that begins on page B-3 will help you understand the menu selections and options that are found in the machine's programs. Once you become familiar with programming, you can use the Menu table as a quick reference when you want to change your settings.

🖉 Note

You can program your machine by pressing **Menu/Set**, followed by the menu numbers. For example to set Beeper Volume to Low. Press **Menu/Set**, **1**, **4**, **2** and \blacktriangle or \blacktriangledown to select Low.

Press Menu/Set.

Memory storage

If there is a power failure, you will not lose your menu settings because they are stored permanently. Temporary settings (such as Contrast, Overseas Mode, and so on) will be lost. You may also have to reset the date and time.



This machine can store faxes up to 4 days if there is a power failure.

Navigation keys

Menu					
Menu Set	Access the menu Go to the next menu level Accept an option				
\sim	Scroll through the current menu level				
$\triangleleft \triangleright$	Go back to the previous menu level or forward to the next menu level				
	Exit the menu				

You can access the menu mode by pressing **Menu/Set**.

When you enter the menu, the LCD scrolls.

Press 1 for General Setup menu

(1.General Setup

-OR-

Press 2 for Fax menu

2.Fax

-OR-

Press 3 for Copy menu



Press 0 for Initial Setup

0.Initial Setup

You can scroll more quickly through each menu level by pressing the arrow for the direction you want: \blacktriangle or \blacktriangledown .

Select an option by pressing **Menu/Set** when that option appears on the LCD.

The LCD will then show the next menu level.

Press \blacktriangle or \blacktriangledown to scroll to your next menu selection.

Press Menu/Set.

When you finish setting an option, the LCD shows ${\tt Accepted}.$





 ${\color{black} \bigtriangleup}$







to exit

Select & Set

Select & Set

to accept

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
1. General Setup	1.Mode Timer		5 Mins 2 Mins 1 Min 30 Secs 0 Sec Off	Sets the time to return to Fax mode.	2-4
	2.Paper Type		Thin Plain Thick Thicker Transprncy Recycled	Sets the type of paper in the paper tray.	2-4
	3.Paper Size		A4 Letter Legal (USA and Canada only) Executive A5 A6 B5 B6	Sets the size of the paper in the paper tray.	2-5
	4.Volume	1.Ring	High Med Low Off	Adjusts the ring volume.	2-5
		2.Beeper	High Med Low Off	Adjusts the volume level of the beeper.	2-6
		3. Speaker	High Med Low Off	Adjusts the speaker volume.	2-6
		4. Handset (USA and Canada only)	High Low	Adjusts the handset volume.	2-6
		5. Volume Amplify (USA and Canada only)	On (Permanent/ Temporary) Off	For the hearing-impaired, you can set the volume to the Vol Amplify:On setting on a permanent or temporary basis.	2-7

Note











Select & Set

Select & Set

to exit

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
1. General Setup (Continued)	5. Auto Daylight (Clock change for Asia)	_	On Off	Changes for Daylight Savings Time automatically.	2-8
	6.Ecology	1.Toner Save	On Off	Increases the life of the toner cartridge.	2-8
		2.Sleep Time	(0-99)	Conserves power.	2-8
	7.LCD Contrast	—	Light Dark	Adjust the contrast of the LCD.	2-9
	8.Security	1.Mem Security		Prohibits most operations except receiving faxes into the memory.	2-9
		2.Setting Lock		Prohibits the settings for Date & Time, Station ID, Quick-Dial and General Setup.	2-11
2.Fax	1.Setup Receive	1.Ring Delay	00-04 02-10 (For Asia/Oceania) (02 for EU and Asia/Oceania) (04 for USA and Canada)	Sets the number of rings before the machine answers in Fax Only or Fax/Tel mode.	4-2
		2.F/T Ring Time	70 Sec 40 Sec 30 Sec 20 Sec (20 Sec for USA and Canada)	Sets the pseudo/double-ring time in Fax/Tel mode.	4-3
		3. Fax Detect (for EU and Asia/Oceania)	On Off	Receives fax messages without pressing (\$\phi)\$ Start.	4-3
		3. Easy Receive (USA and Canada only)	On Semi Off	Receives fax messages without pressing Start .	4-3
		4.Remote Code	On(*51, #51) Off	You can answer all calls at an extension or external phone and use codes to turn the machine on or off. You can personalize these codes.	A-14

Note











to exit

Select & Set


Select & Set

to accept

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
2. Fax (Continued)	1.Setup Receive	5. Auto Reduction	On Off	Reduces the size of incoming faxes.	4-4
	(In Fax mode only) (Continued)	6. Memory Receive (for EU and Asia/Oceania)	On Off	Automatically stores any incoming faxes in its memory if it runs out of paper.	4-6
		7. Print Density (for EU and Asia/Oceania) 6. Print Density (USA and Canada only)	▼ - □ □ ↓ ▲ ▼ - □ □ ↓ ▲ ▼ - □ □ ↓ ▲ ▼ - □ □ ↓ ▲	Makes printouts darker or lighter.	4-5
		8. Polling RX (for EU and Asia/Oceania)	Standard Secure Timer	Sets up your machine to poll another fax machine.	4-6
		7. Polling RX (USA and Canada only)	_		
	2.Setup Send (In Fax mode only)	1.Contrast	Auto Light Dark	Changes the lightness or darkness of faxes you send.	3-5
		2.Fax Resolution	Standard Fine S.Fine Photo	Sets the default resolution for outgoing faxes.	3-5
		3.Delayed Fax	_	Sets the time of day in 24 hour format that the delayed faxes will be sent.	3-11
		4.Batch TX	On Off	Combines delayed faxes to the same fax number at the same time of day into one transmission.	3-11
		5.Real Time TX	Off On Next Fax:On Next Fax:Off	You can send a fax without using the memory.	3-6

 🖉 Note











Select & Set

Select & Set

to accept

to exit

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
2. Fax (Continued)	2. Setup Send (In Fax mode only) (Continued)	6. Polled TX (for EU and Asia/Oceania)	Standard Secure	Sets up the document on your machine to be retrieved by another fax machine.	3-12
		6. Polled TX (USA and Canada only)	_		
		7.Coverpg Setup	Off On Next Fax:On Next Fax:Off Print Sample	Automatically sends a Cover Page you have programmed.	3-10
		8.Coverpage Note	—	You can set up your own comments for fax Cover Page.	3-9
		9.Overseas Mode	On Off	If you are having difficulty sending faxes overseas, set this to On.	3-10
	3.Set Quick-Dial	1.One-Touch Dial		Stores One-Touch Dial numbers, so you can dial by pressing one key (and Start).	5-1
		2.Speed-Dial	_	Stores Speed-Dial numbers, so you can dial by pressing only a few keys (and Start).	5-2
		3.Setup Groups	—	Sets up a Group number for Broadcasting.	5-3
	4.Report Setting	1.XMIT Report (For EU) 1.Transmission (For USA, Canada and Asia/Oceania)	On On+Image Off Off+Image	Initial setup for Transmission Verification Report and Fax Journal.	7-1
		2.Journal Period	Every 7 Days Every 2 Days Every 24 Hours Every 12 Hours Every 6 Hours Every 50 Faxes Off		7-2











to accept

©∕C

Select & Set

Select & Set


C₽♥

to exit

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
2. Fax (Continued)	5.Remote Fax Opt	1.Forward/Store	Off Fax Forward Fax Storage	Sets the machine to forward fax messages to store incoming faxes in the memory (so you can retrieve them while you are away from your machine).	6-1
			(Backup Print)	If you selected Fax Forward, you can turn on the safety feature Backup Print.	
		2.Remote Access	*	You must set your own code for Remote Retrieval.	6-3
		3. Print Document	—	Prints incoming faxes stored in the memory.	4-5
	6.Remaining Jobs	_	_	Checks which jobs are in the memory and lets you cancel selected jobs.	3-8
	0.Miscellaneous	1.Compatibility	High Normal Basic	Adjust the Equalization for transmission problems.	11-17
		2.BT Call Sign (For UK only)	On Off	Use with BT Call Sign.	A-1
		2. Distinctive (For USA, Canada and Asia/Oceania)	Off Set (On)	Uses the Telephone Company's Distinctive Ring subscriber service to register the ring pattern with the machine.	A-1 A-1
		3. Caller ID (ForUSA, Canada and Asia/Oceania)	Display# Print Report	View or print a list of the last 30 Caller IDs stored in the memory.	A-4 A-5
3. Сору	1.Quality	_	Text Auto Photo	Selects the Copy resolution for your type of document.	8-7
	2.Contrast	_	▼	Adjusts the contrast for copies.	8-7

 Note









to accept



Select & Set

Select & Set

 \sim

to exit

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
4. Machine Info.	1.Serial No.	—	—	Lets you check the serial number of your machine.	11-26
	2.Page Counter	_	Total Copy Print List/Fax	Lets you check the number of total pages the machine has printed during its life.	11-26
	3.Drum Life	—	—	You can check the percentage of drum life that remains available.	11-27
0.Initial Setup (For EU)	1.Receive Mode	_	Fax Only Fax/Tel External TAD Manual	You can choose the receive mode that best suits your needs.	4-1
	2.Date/Time	—	_	Puts the date and time on the LCD and in headings of faxes you send.	2-1
	3.Station ID	—	Fax: Tel: Name:	Program your name and fax number to appear on each page you fax.	2-2
	4.Tone/Pulse	—	Tone Pulse	Selects the dialing mode.	2-1
	5.Phone Line Set	_	Normal PBX ISDN	Select the phone line type.	2-3

Note









Select & Set

Select & Set

to accept

to exit

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
0.Initial Setup (For EU) (Continued)	6.Country		UK/Germany/ France/Italy/ Spain/ Netherlands/ Belgium/ Portugal/ Switzerland/ Sweden/ Denmark/ Norway/ Finland/ Hungary/ Turkey/ South Africa/ Israel/ General1/ General2*	Select the county. * General2 is for future modification. (same to General1 at present)	
	0. Local Language	_	English/ Français/ Deutsch/ Italiano/ Español/ Português/ Nederlands/ Dansk/Norsk/ Svenska/ Suomi/POLSKI/ Magyar/Cesky	Select the language.	
0.Initial Setup (For USA, Canada and Asia)	1.Receive Mode	—	Fax Only Fax/Tel External TAD Manual	You can choose the receive mode that best suits your needs.	4-1
	2.Date/Time	_	_	Puts the date and time on the LCD and in headings of faxes you send.	2-1
	3.Station ID	—	Fax: Tel: Name:	Program your name and fax number to appear on each page you fax.	2-2
	4. Tone/Pulse (Not available in USA , Singapore and New Zealand)	—	Tone Pulse	Selects the dialing mode.	2-1

🖉 Note



Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
0.Initial Setup	6.Country	—	(For USA and Canada)	Select the county.	
(For USA, Canada and Asia) (Continued)			United States/ Canada (For Asia)		
			Asia/ Singapore/ Others (For Oceania)		
			Australia/ New Zealand		
	0.Local Language	_	(For USA and Canada)	Allows you to change the LCD language for your	See Quick Setup
	(Not available in Oceania)		English/ Français/ Español/ Português (For Asia)	country.	Guide
			English/ Español/ Português		

Note

The factory settings are shown in Bold.

Entering Text

When you are setting certain menu selections, such as the Station ID, you may need to type text into the machine. Most of the number keys have three or four letters printed on them. The keys for 0, # and \times do not have printed letters because they are used for special characters.

By pressing the appropriate number key repeatedly, you can access the character you want.

Press Key	one time	two times	three times	four times
2	А	В	С	2
3	D	Е	F	3
4	G	Н	I	4
5	J	К	L	5
6	М	Ν	0	6
7	Р	Q	R	S
8	Т	U	V	8
9	W	Х	Y	Z

Inserting spaces

To enter a space in the fax number, press ► once between numbers. To enter a space in the name, press ► twice between characters.

Making corrections

If you entered a letter incorrectly and want to change it, press ◀ to move the cursor under the incorrect character. Then press ⊘/c Stop/Exit. All letters above and to the right of the cursor will be deleted. Re-enter the correct character. You can also back up and type over incorrect letters.

Repeating letters

If you need to enter a character that is on the same key as the previous character, press ► to move the cursor to the right before you press the key again.

Special characters and symbols

Press \star , # or **0**, and then press \triangleleft or \triangleright to move the cursor under the special character or symbol you want. Then press **Menu/Set** to select it.

Press X	for	(space)!" # \$ % & '() ★ +,/€
Press #	for	:;<=>?@[]^_
Press 0	for	Ä Ë Ö Ü À Ç È É 0

G

Glossary

ADF (automatic document feeder)

The document can be placed in the ADF and scanned one page at a time automatically.

Auto Reduction

Reduces the size of incoming faxes.

Automatic fax transmission

Sending a fax without picking up the handset of an external phone.

Automatic Redial

A feature that enables your machine to redial the last fax number after five minutes if the fax did not go through because the line was busy.

Backup Print

Your machine prints a copy of every fax that is received and stored in memory. This is a safety feature so you will not lose messages during a power failure.

Batch Transmission

As a cost saving feature, all delayed faxes to the same fax number will be sent as one transmission.

Beeper Volume

Volume setting for the beep when you press a key or make an error.

Broadcasting

The ability to send the same fax message to more then one location.

BT Call Sign

A service which allows you to have at least two separate telephone numbers on one phone line.

Caller ID

A service purchased from the telephone company that lets you see the number (or name) of the party calling you.

Cancel Job

Cancels a programmed job, like Delayed Fax or Polling.

CNG tones

The special tones (beeps) sent by fax machines during automatic transmission to tell the receiving machine that a fax machine is calling.

Coding method

Method of coding the information contained in the document. All fax machines must use a minimum standard of Modified Huffman (MH). Your machine is capable of greater compression methods, Modified Read (MR), Modified Modified Read (MMR) and JBIG, if the receiving machine has the same capability.

Communication error (or Comm. Error)

An error during fax sending or receiving, usually caused by line noise or static.

Compatibility group

The ability of one fax unit to communicate with another. Compatibility is assured between ITU-T Groups.

Contrast

Setting to compensate for dark or light documents, by making faxes or copies of dark documents lighter and light documents darker.

Delayed Fax

Sends your fax at a specified time later that day.

Distinctive Ring

A subscriber service purchased from the telephone company that gives you another phone number on an existing phone line. This machine uses the new number to simulate a dedicated fax line.

Dual Access

Your machine can scan outgoing faxes or scheduled jobs into memory at the same time it is sending a fax from memory or receiving or printing an incoming fax.

Easy Receive

Enables your machine to respond to CNG tones if you interrupt a fax call by answering it.

ECM (Error Correction Mode)

Detects errors during fax transmission and resends the pages of the fax that had an error.

Extension phone

A telephone using the same line as your fax but plugged into a separate wall socket.

External phone

A TAD (telephone answering device) or telephone that is connected to your machine.

F/T Ring Time

The length of time that the machine rings (when the Receive Mode setting is Fax/Tel) to notify you to pick up a voice call that it answered.

Fax Detect

Enables your machine to respond to CNG tones if you interrupt a fax call by answering it.

Fax Forwarding

Sends a fax received into the memory to another pre-programmed fax number.

Fax Journal

Lists information about the last 200 incoming and outgoing faxes. TX means Transmit. RX means Receive.

Fax Receive Code

Press this code (\times **51**) when you answer a fax call on an extension or external phone.

Fax Storage

You can store received faxes in memory.

Fax tones

The signals sent by sending and receiving fax machines while communicating information.

Fax/Tel

You can receive faxes and telephone calls. Do not use this mode if you are using a telephone answering device (TAD).

Fine resolution

Resolution is 203 x 196 dpi. It is used for small print and graphs.

Grey scale

The shades of grey available for copying and faxing photographs.

Group number

A combination of One-Touch and Speed-Dial numbers that are stored in a One-Touch key or Speed-Dial location for Broadcasting.

Help list

A printout of the complete Menu table that you can use to program your machine when you do not have the User's Guide with you.

Journal Period

The pre-programmed time period between automatically printed Fax Journal Reports. You can print the Fax Journal on demand without interrupting the cycle.

LCD (liquid crystal display)

The display screen on the machine that shows interactive messages during On-Screen Programming and shows the date and time when the machine is idle.

Manual fax (for EU and Asia/Oceania)

When you lift the handset of your external telephone or press **Tel/R** (or **Hook/Hold**) so you can hear the receiving fax machine answer before you press

Start to begin sending.

Manual fax (for USA and Canada)

When you lift the handset or press **Hook/Hold** so you can hear the receiving fax machine answer before you press **Start** to begin sending.

Menu mode

Programming mode for changing your machine's settings.

One-Touch

Keys on the machine's control panel where you can store numbers for easy dialling.

You can store a second number on each

key if you press \$Shift Shift and the One-Touch key together.

Out of Paper Reception

Receives faxes into the machine's memory when the machine is out of paper.

Overseas Mode

Makes temporary changes to the fax tones to accommodate noise and static on overseas phone lines.

Pause

Allows you to place a 3.5 second delay in the dialling sequence stored on One-Touch keys and Speed-Dial

numbers. Press <a>[7]/. Redial/Pause as many times as needed for longer pauses.

Photo resolution

A resolution setting that uses varying shades of grey for the best representation of photographs.

Polling

The process of a fax machine calling another fax machine to retrieve waiting fax messages.

Pulse

A form of rotary dialling on a telephone line.

Quick Dial List

A listing of names and numbers stored in One-Touch and Speed-Dial memory, in numerical order.

Real Time Transmission

When memory is full, you can send faxes in real time.

Remaining jobs

You can check which jobs are waiting in memory and cancel jobs individually.

Remote Access Code

Your own four-digit code (--- \star) that allows you to call and access your machine from a remote location.

Remote Retrieval Access

The ability to access your machine remotely from a touch tone phone.

Resolution

The number of vertical and horizontal lines per inch. See: Standard, Fine, Super Fine and Photo.

Ring Delay

The number of rings before the machine answers in Fax Only and Fax/Tel mode.

Ring Volume

Volume setting for the machine's ring.

Search

An electronic, alphabetical listing of stored One-Touch, Speed-Dial and Group numbers.

Speed-Dial

A pre-programmed number for easy dialling. You must press the

Comparison in the Search/Speed Dial key, #, and the

three digit code, and **Start** to start the dialling process.

Standard resolution

203 x 97 dpi. It is used for regular size text and quickest transmission.

Station ID

The stored information that appears on the top of faxed pages. It includes the sender's name and fax number.

Super Fine resolution

203 x 392 dpi. Best for very small print and line art.

TAD (telephone answering device)

You can connect an external TAD to your machine.

Telephone Answer Code (Fax/Tel mode only)

When the machine answers a voice call, it pseudo/double-rings. You can pick up at an extension phone by pressing this code (**# 5 1**).

Temporary settings

You can select certain options for each fax transmission and copy without changing the default settings.

Tone

A form of dialling on the telephone line used for Touch Tone telephones.

Transmission

The process of sending faxes over the phone lines from your machine to the receiving fax machine.

User Settings

A printed report that shows the current settings of the machine.

XMIT Verify (Transmission Verification Report)

A listing for each fax sent, that shows its date, time and number.

Volume Amplify (For USA and Canada)

Volume setting for the handset for a user who is hearing-impaired.

Product description

General

S


Memory Capacity	16 MB		
Automatic Document Feeder (ADF)	Up to 20 pages (A4: 80 g/m ² , Letter: 20lb)		
Paper Tray	250 Sheets (80 g/m ²)		
Printer Type	Laser		
Print Method	Electrophotography by semiconductor laser beam scanning		
LCD (Liquid Crystal Display)	16 characters \times 1 line		
Power Source	220 - 240V AC 50/60Hz (For EU and Asia/Oceania) 100 - 120V AC 50/60Hz (For USA and Canada)		
Power Consumption	Copying: Average 475 W Standby: Average 80 W Sleep: Average 10 W		


Dimensions


(For EU and Asia/Oceania)

  (For USA and Canada)





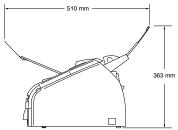



	4		
Weight	Without Drun	n/Toner Unit:	
	7.25 kg (For	EU and Asia/Oceania)	
	16.2lb (7.35k	g) (For USA and Canada)	
Noise	Operating:	53 dB A or less	
	Standby:	30 dB A or less	
Temperature	Operating:	10 - 32.5°C(50°F - 90.5°F)	
	Storage:	0 - 40°C (32°F - 104°F)	
Humidity	Operating:	20 to 80% (without condensation	n)
	Storage:	10 to 90% (without condensation	n)

Print media

Paper Input	Paper Tray				
	Paper type:				
	Plain paper, Recycled paper or Transparencies ¹				
	Paper size:				
	A4, Letter , Legal (USA and Canada) ² , Executive, A5, A6, B5 and B6				
	For more details, see About paper starting on page 1-9.				
	Paper Weight:				
	60 - 105 g/m² (16-28lb)				
	 Maximum paper tray capacity: Up to 250 sheets of 80 g/m² (20lb) plain paper or up to 10 transparencies 				
	Manual Feed Slot				
	Paper type:				
	Plain paper, Recycled paper, Transparencies ¹ , Envelopes, Bond paper or Labels ¹				
	Paper size:				
	Width: 69.9 - 215.9 mm (2.75 - 8.5 in.)				
	Length: 116 - 406.4 mm (4.56 - 16 in.)				
	For more details, see About paper starting on page 1-9.				
	Paper Weight:				
	60 - 161 g/m ² (16 - 43 lb)				
	Maximum paper tray capacity: One sheet at a time				
	Up to 100 sheets of A4 size plain paper (Face-down print delivery to the output paper tray)				

- ¹ For transparency or label, we recommend removing printed pages from the output paper tray immediately after they exit the machine to avoid smudging.
- ² Legal paper cannot be stacked on the output paper tray.

Сору

Color/Monochrome	Monochrome
Document Size	ADF Width: 147.3 to 215.9 mm (5.8 to 8.5 in.) ADF Height: 100 to 356 mm (3.9 to 14 in.)
Multiple Copies	Stacks or Sorts up to 99 pages
Reduce/Enlarge	50 % to 200% (in increments of 1%)
Resolution	Max. Print: 600 x 300 dpi Max. Scan: 200 x 300 dpi

Fax

Compatibility	ITU-T Group 3		
Coding System	MH/MR/MMR/JBIG		
Modem Speed	Automatic Fallback: 33600bps		
Document Size	ADF Width: 147.3 to 215.9 mm (5.8 to 8.5 in.) ADF Height: 100 to 356 mm (3.9 to 14 in.)		
Scanning Width	Max. 215.9 mm (8.2 in.)		
Printing Width	Max. 215.9 mm (8.2 in.)		
Grey Scale	64 levels		
Polling Types	Standard, Secure, Timer, Sequential		
Contrast Control	Automatic/Light/Dark (manual setting)		
Resolution	Horizontal 203 dot/inch (8 dot/mm)		
	Vertical Standard - 3.85 line/mm (98 line/inch) Fine - 7.7 line/mm (196 line/inch) Photo - 7.7 line/mm (196 line/inch) Superfine - 15.4 line/mm (392 line/inch)		
One-Touch Dial	20 (10 x 2)		
Speed-Dial	200 stations		
Broadcasting	270 stations		
Automatic Redial	3 times at 5 minute intervals		
Auto Answer	0, 1, 2, 3 or 4 rings (for EU, USA, and Canada) 2, 39, or 10 (for Australia) 0, 19, or 10 (for some countries)		
Communication Source	Public switched telephone network.		
Memory Transmission	Up to 600 / 500 ¹ pages		
Out of Paper Reception	Up to 600 / 500 ¹ pages		

¹ "Pages" refers to the "ITU-T Test Chart #1" (a typical business letter, Standard resolution, MMR code). Specifications and printed materials are subject to change without prior notice.

Printer

Emulation	Windows [®] GDI
Printer Driver	Support for Windows [®] 2000/XP/Vista/7
Resolution	Up to 1200 x 600 dots per inch (dpi)
Print Quality	Normal printing mode
	Economy printing mode (save toner usage)
Print Speed	up to 14 pages/minute A4 size
	up to 15 pages/minute Letter size
	Does not include the time it takes to feed the paper.
First Print	Less than 10 seconds

Interfaces

Interface USB Recommended Cable

A USB cable that is not longer than 2.0 m (6 feet).



Your machine has a USB 2.0 Full-speed interface. This interface is compatible with USB 2.0 Hi-Speed; however, the maximum data transfer rate will be 12 Mbits/s. This machine can also be connected to a computer that has a USB 1.1 interface.

Please make sure you use a USB 2.0 interface cable that is no longer than 2.0 m (6 feet).

You can download the latest printer driver from our Website

Computer requirements

Computer Platform & Operating System		Processor Minimum	Minimum RAM	Recommended RAM	Hard Disk Space to install		Supported PC	Supported PC
Version		Speed			For Drivers	For Applications	Software Functions	Interface ²
Windows [®] Operating System ¹	Windows [®] 2000 Professional	Intel [®] Pentium [®] II or equivalent	64 MB	128 MB	90 MB	130 MB	Printing, PC Fax ³	USB
	Windows [®] XP Home Windows [®] XP Professional		128 MB	256 MB	150 MB	310 MB		
	Windows [®] XP Professional x64 Edition	64-bit (Intel [®] 64 or AMD64) supported CPU	256 MB	512 MB				
	Windows Vista®	Intel [®] Pentium [®] 4 or equivalent 64-bit (Intel [®] 64 or AMD64) supported CPU	512 MB	1 GB	500 MB	500 MB		
	Windows [®] 7	Intel [®] Pentium [®] 4 or equivalent 64-bit (Intel [®] 64 or AMD64) supported CPU	1 GB (32-bit) 2 GB (64-bit)	1 GB (32-bit) 2 GB (64-bit)	650 MB	530 MB		

- ¹ Internet Explorer[®] 5.5 or greater.
- ² Third party USB ports are not supported.
- ³ PC Fax supports black and white only.

Consumable items

Toner Cartridge Life

Standard Toner Cartridge: Up to 2,500 pages * *(when printing letter or A4 size paper at 5% print coverage)



Toner life expectancy will vary depending upon the type of average print job.

Drum Unit Life Expectancy Up to 12,000 pages



There are many factors that determine the drum life, such as temperature, humidity, type of paper, toner you use and number of pages per print job.

Index

A

Access codes, storing and dialing	5-4
ADF (automatic document feeder) .	1-8
ADF cover	11-4
Answering machine (TAD)	A-15
connecting	A-17
Automatic	
fax receive	4-1
Fax Detect	4-3
fax redial	3-3
transmission	

В

Broadcasting	
setting up Groups for	5-3

С

Caller ID	A-4, A-7, A-10, A-12.
print list	A-4
view list	
Canceling	
Fax Forwarding	
fax jobs in memory	
jobs awaiting redial	
Cleaning	
corona wire	
laser scanner window	
CNG tones	
Connecting	
external TAD	A-15
external telephone	A-14
two-line external TAD	or telephoneA-19
Consumable items	S-8
Control panel overview	1-4, 1-6
Сору	
contrast	
default settings	
Enlarge/Reduce	
enter Copy mode	
multiple copies	
Out of Memory	
Page Layout	
printable area	
Quality key	

quality setting	3-7
single copy	3-2
Cordless phone A-	13
Cover page	
custom comments	3-9
for all faxes3-	10
for next fax only	3-9
printed form3-	10
Credit card numbers5	5-4
Custom telephone features on a single	
lineA-	20

D

Date and Time2- Delayed Batch Transmission3-1 Dialling	
a pause5-	-4
access codes and credit card	
numbers5-	-4
automatic fax redial3-	-3
automatic transmission3-	-3
Groups3-	-7
manual3-	-1
manual transmission3-	-3
One-Touch3-	-1
Speed-Dial3-	-2
Distinctive RingA-2, A-5, A-7, A-1	1
setting ring patternA-	
turning off A-	
Drum unit	
cleaning11-14, 11-2	21
replacing11-2	24
Dual Access3-	

Е

ECM (Error Correction Mode)	1-14
Equalization	11-17
Error messages on LCD	11-1
Comm. Error	11-1
No Paper Fed	11-2
Not Registered	3-2
Out of Memory	11-3
while scanning a document .	8-7

Unable to Init	11-3
Unable to Print	11-3
Unable to Scan	11-3
Extension telephone, using	A-13, A-17
External telephone, connecting	A-14

F

Fax	
receiving	
compatibility	
Fax Forwarding	
from extension phone	
reducing to fit on paper	
retrieving from a remote site	
Ring Delay, setting	
sending	
automatic	3-3
Broadcasting	
canceling from memory	
compatibility	11-17
contrast	
enter Fax mode	3-1
from ADF	3-3
from memory (Dual Access)	3-3, 3-6
overseas	
Real Time Transmission	
resolution	
Fax codes	
changing	6-3, A-14
changing Fax Receive Code	
Fax Receive Code	A-13
Fax Receive Code Remote Access Code	A-13 6-3
Fax Receive Code Remote Access Code Telephone Answer Code	A-13 6-3
Fax Receive Code Remote Access Code Telephone Answer Code Fax Forwarding	A-13 6-3 A-13
Fax Receive Code Remote Access Code Telephone Answer Code Fax Forwarding changing remotely	A-13 6-3 A-13 6-5, 6-6
Fax Receive Code Remote Access Code Telephone Answer Code Fax Forwarding changing remotely Fax Storage	A-13 6-3 A-13 6-5, 6-6 6-1
Fax Receive Code Remote Access Code Telephone Answer Code Fax Forwarding changing remotely Fax Storage printing from memory	A-13 6-3 A-13 6-5, 6-6 6-1 4-5
Fax Receive Code Remote Access Code Telephone Answer Code Fax Forwarding changing remotely Fax Storage printing from memory turning on	A-13 6-3 A-13 6-5, 6-6 6-1 4-5
Fax Receive Code Remote Access Code Telephone Answer Code Fax Forwarding changing remotely Fax Storage printing from memory turning on Fax, stand-alone	A-13 6-3 A-13 6-5, 6-6 6-1 4-5
Fax Receive Code Remote Access Code Telephone Answer Code Fax Forwarding changing remotely Fax Storage printing from memory turning on Fax, stand-alone receiving	A-13 6-3 A-13 6-5, 6-6 6-1 4-5 6-1
Fax Receive Code Remote Access Code Telephone Answer Code Fax Forwarding changing remotely Fax Storage printing from memory turning on Fax, stand-alone receiving at the end of a conversation	A-13 A-13 6-5, 6-6 6-1 4-5 6-1
Fax Receive Code Remote Access Code Telephone Answer Code Fax Forwarding changing remotely Fax Storage printing from memory turning on Fax, stand-alone receiving at the end of a conversation Paging	A-13 A-13 6-5, 6-6 6-1 4-5 6-1
Fax Receive Code Remote Access Code Telephone Answer Code Fax Forwarding changing remotely Fax Storage printing from memory turning on Fax, stand-alone receiving at the end of a conversation Paging sending	A-13 A-13 6-5, 6-6 6-1 4-5 6-1 6-1
Fax Receive Code Remote Access Code Telephone Answer Code Fax Forwarding changing remotely Fax Storage printing from memory turning on Fax, stand-alone receiving at the end of a conversation Paging sending at the end of a conversation	A-13 A-13 6-5, 6-6 6-1 4-5 6-1 6-1
Fax Receive Code Remote Access Code Telephone Answer Code Fax Forwarding changing remotely Fax Storage printing from memory turning on Fax, stand-alone receiving at the end of a conversation Paging sending at the end of a conversation Fax/Tel mode	A-13 6-3 A-13 6-5, 6-6 6-1 6-1 6-1 6-1 6-1 6-1
Fax Receive Code	A-13 A-13 6-5, 6-6 6-1 4-5 6-1 4-5 6-1 6-2 6-2 3-4
Fax Receive Code	A-13 6-5, 6-6 6-1 6-1 6-1 6-1 6-1 6-1 6-1 6-1 6-1 6-2 6-2
Fax Receive Code	A-13 6-5, 6-6 6-1 6-1 6-1 6-1 6-1 6-1 6-1 6-1 6-1 6-2 6-2 6-2
Fax Receive Code	A-13 6-5, 6-6 6-1 6-1 6-1 6-1 6-1 6-1 6-1 6-1 6-1 6-2 6-2 6-2

receiving faxes	A-13
Ring Delay	4-2
Telephone Answer Code	A-13
FaxStream® Duet®	A-6
FCC notices	10-1

G

Gray scale		S-4
Groups for	Broadcasting	5-3

Н

handset	2-6
Handset Volume	2-6
HELP	
Help List	7-2
LCD messages	B-1
using navigation keys	B-2
Menu Table	

J

Jacks	
convert to RJ11 jack	
triplex adapter	A-18
EXT	
external telephone	A-15
TAD (answering machine)	A-15
Jams	
document	.11-4
paper	.11-4

L

LCD	(liquid c	rystal	displa	y)	B-1,	B-2
-----	-----------	--------	--------	----	------	-----

Μ

Maintenance, routine Manual	11-18
dialling	3-1
receive	4-1
transmission	3-3
Memory Storage	B-1
Menu Selection Table	B-1
Mode, entering	
Сору	8-1
Fax	3-1
Multi-line connections (PBX)	A-20

0

One-Touch	
changing	5-2
setting up	
using	3-1
Out of Area (Caller ID)	A-4
Out of Memory message	3-4

Ρ

Paging Paper Size size of document Type	1-9, S-3 2-5 1-8
Phone line	A 47
connections	
difficulties	
multi-line (PBX)	A-20
roll over lines	A-18
two-line phone system	A-18
Power failure	
Print	
difficulties	11-9
drivers	
fax from memory	
paper jams	
report	
resolution	-
specifications	
•	
Programming your machine	B-1, B-2

Q

Quick-Dial Access codes and credit card numbers setting up 5-4 Broadcasting 3-7 using Groups 3-7 Group dial 5-2 changing 5-3 One-Touch dial 5-2 setting up 5-1 using 3-1 Search 3-2

Speed-Dial	
changing	5-2
setting up	5-2
using	3-2

R

Receive Mode	4-1
External TAD	
Fax Only	
Fax/Tel	
Manual	
Redial/Pause	
Reducing	
copies	8-4
incoming faxes	
Remote Retrieval	
access code	
getting your faxes	
Reports	
Caller ID List	
Fax Journal	
Journal Period	
Help List	
how to print	
Quick-Dial List	
Transmission Verification	
User Settings	
Resolution	
сору	5-3
fax (Standard, Fine, SuperFine,	
Photo)	S-1
print	
setting for next fax	
Ring Delay, setting	

S

Safety Instructions Setting Lock	
Setup	
Date and Time	2-1
Station ID (fax header)	
entering text	2-2
Shipping the machine	11-17
Sleep Time	2-8
Speed-Dial	
changing	5-2
dialling	
storing	

Т

TAD (telephone answering device),
external4-1, A-15, A-19
connectingA-15, A-17
receive mode4-1
recording OGMA-17
with two-line jackA-19
Telstra® FaxStream® Duet®A-5
Text, enteringB-11
special charactersB-11
Toner cartridge
replacing
Troubleshooting11-1
document jam 11-4
error messages on LCD11-1
if you are having difficulty
incoming calls11-10
paper handling11-12
phone line11-17
printer difficulties11-11
printing11-9
paper jam 11-5
Two-line phone systemA-18


V


Volume Amplify for the	
hearing-impaired	2-7
Volume, setting	2-5
beeper	2-6
handset	2-6
Volume Amplify for the	
hearing-impaired	2-7
ring	2-5
speaker	2-6

R

Remote Retrieval Access card

If you plan to receive fax messages while away from your machine, carrying the Remote Retrieval Access Card printed below will serve as a convenient reminder of the retrieval procedures. Simply cut out the card and fold it to fit your wallet or organizer. Keeping it handy will help you derive the full benefit of your machine's Fax Forwarding, and Remote Retrieval features.

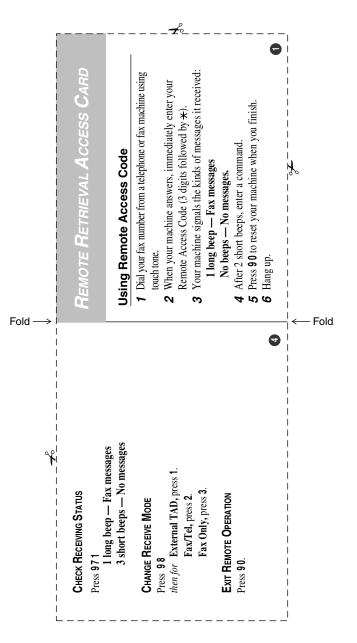

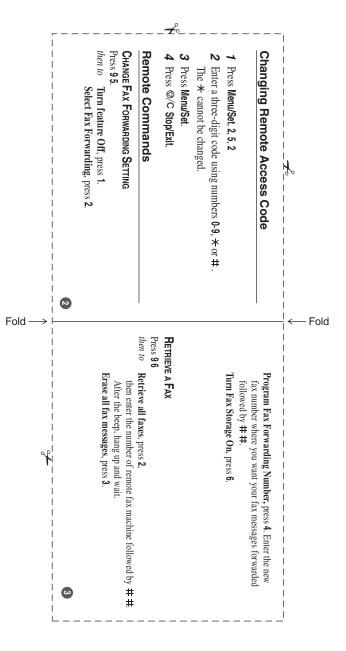

This machine is approved for use in the country of purchase only.

H558-6010 (US)