



PARTS CATALOG

FOR


RICOH FAX 3000L

[Asia]

RICOH COMPANY, LTD.

1		First edition


1. EXTERIOR

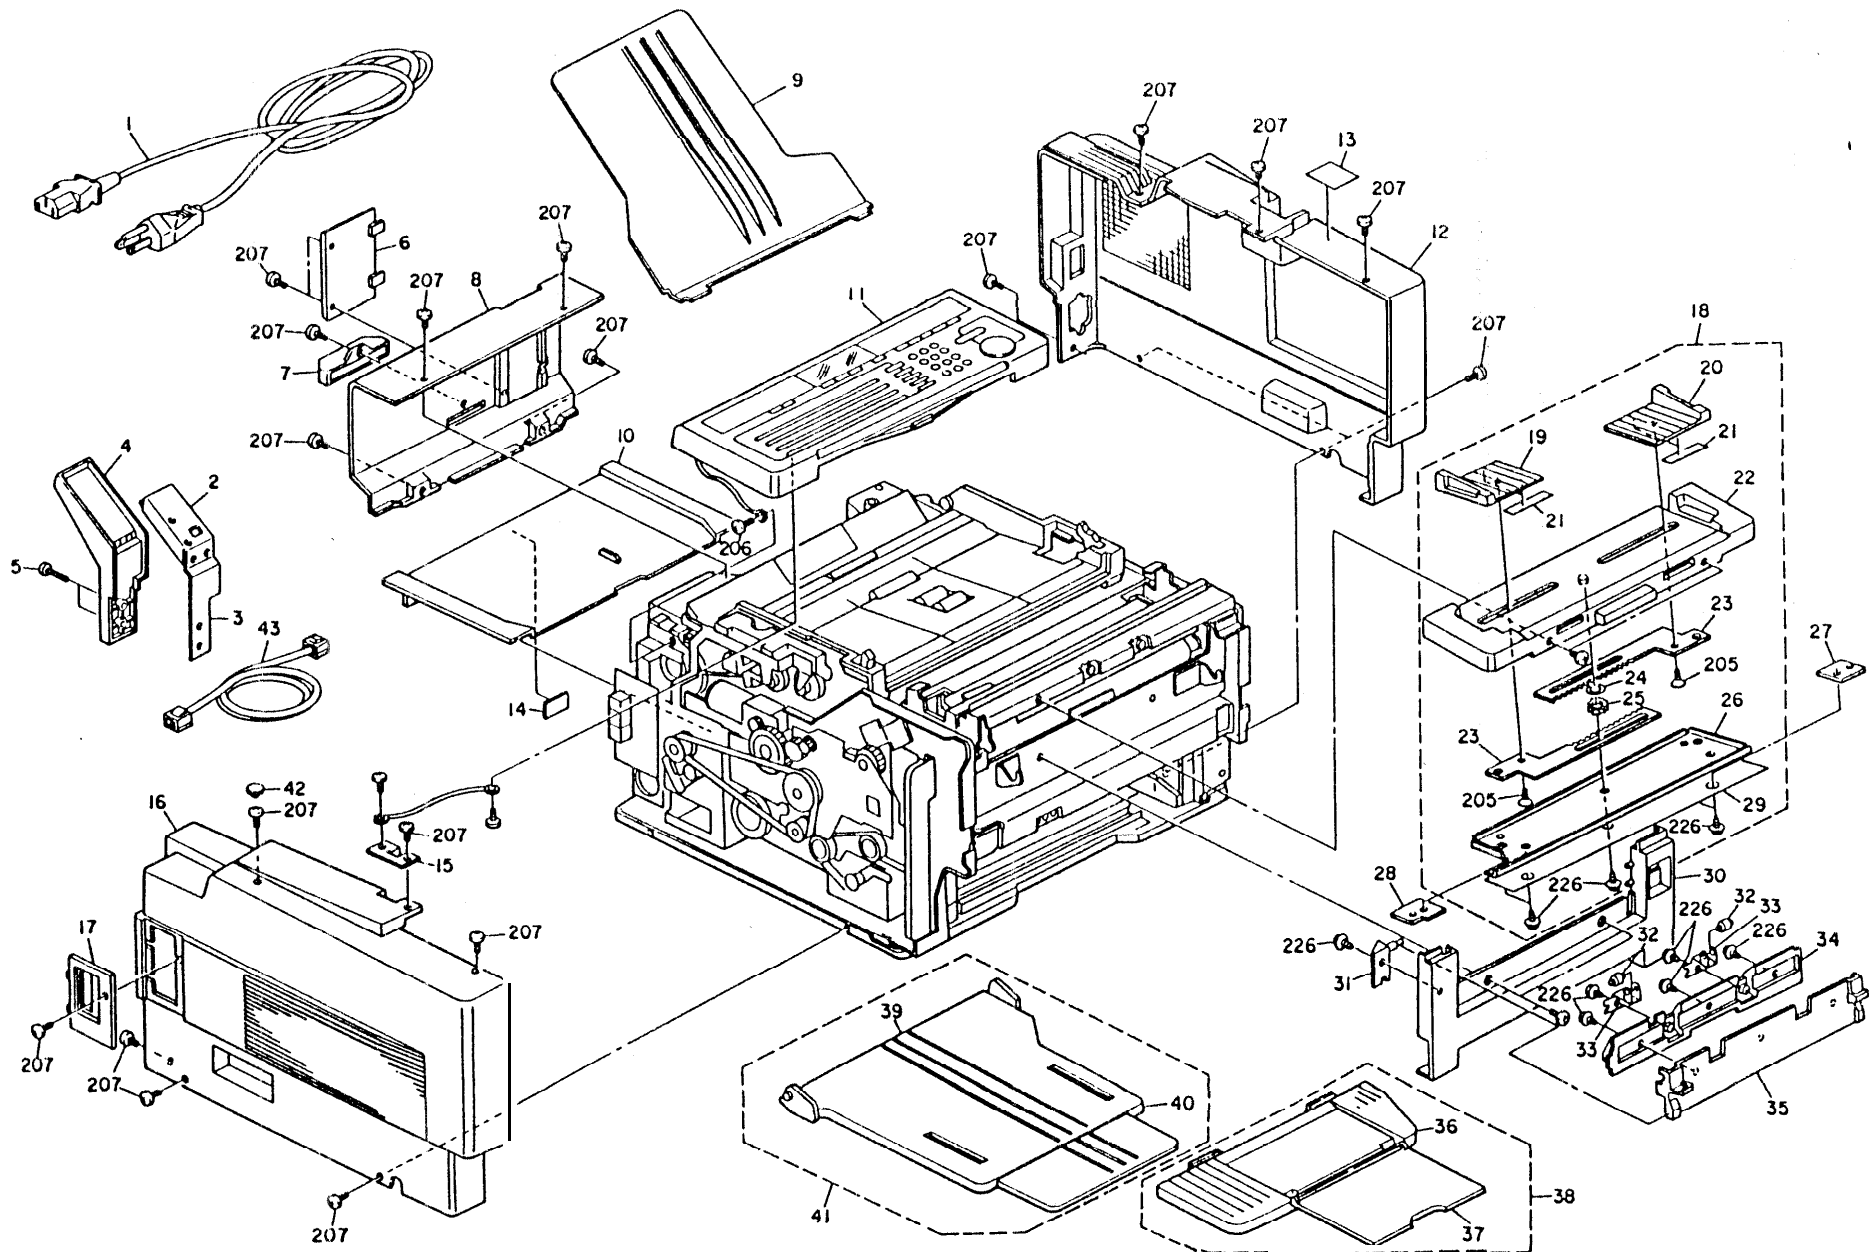

1. EXTERIOR

INDEX	PART NO.	DESCRIPTION	MODEL	INDEX	PART NO.	DESCRIPTION	MODEL
*	H084 4320	Facsimile Features Manual		32	H081 2167	Lower Exit Roller	
*	H081 4662	Operator's Manual		33	H081 2151	Exit Roller Holder	
1	1150 0024	Power Supply Cord		34	H081 2129	Lower Exit Guide Plate	
2	H081 4140	Bracket Handset Holder		35	H081 2156	Paper Exit Cover	
3	H081 4151	Lower Bracket - Handset Holder		36	H081 4109	Sub Document Tray - 1	
4	H081 4139	Handset Holder		37	H081 4110	Sub Document Tray - 2	
5	H081 4141	Screw - Handset		38	H081 4178	Sub Document Tray Ass'y	
6	H081 4118	Cover - Option		39	H081 4120	Copy Tray	
7	H081 4147	Connector Cover		40	H081 4121	Sub Copy Tray	
8	H081 4115	Rear Cover		41	H081 4179	Copy Tray Ass'y	
9	H081 4122	Document Tray		42	H081 4179	Copy Tray Ass'y	
10	H081 3331	Cassette Cover					
11	H081 4289	Op-Port Ass'y : FAX3000L					
12	H081 4182	Right Cover Ass'y					
13	H081 4183	Decal - ADF Open					
14	H081 3332	Fixing Plate - Cassette Cover					
16	H081 4113	Left Cover					
17	H081 4143	NCU Cover					
18	H081 4100	Document Table Ass'y					
19	H081 4103	Left Document Guide					
20	H081 4102	Right Document Guide					
21	H081 4107	Seal - Document Guide					
22	H081 4101	Document Table					
23	H081 4106	Document Guide Rack					
24	H008 4560	Plate Spring - Pinion					
25	5474 1307	Gear - ADF Tray					
26	H081 4105	Lower Document Table					
27	H081 4159	Right Spring Plate - CTM					
28	H081 4158	Left Spring Plate - CTM					
29	H081 4124	Mylar - Document Table					
30	H081 4111	Front Cover					
31	H081 4135	Front Cover Bracket					

2. ADF, SCANNER

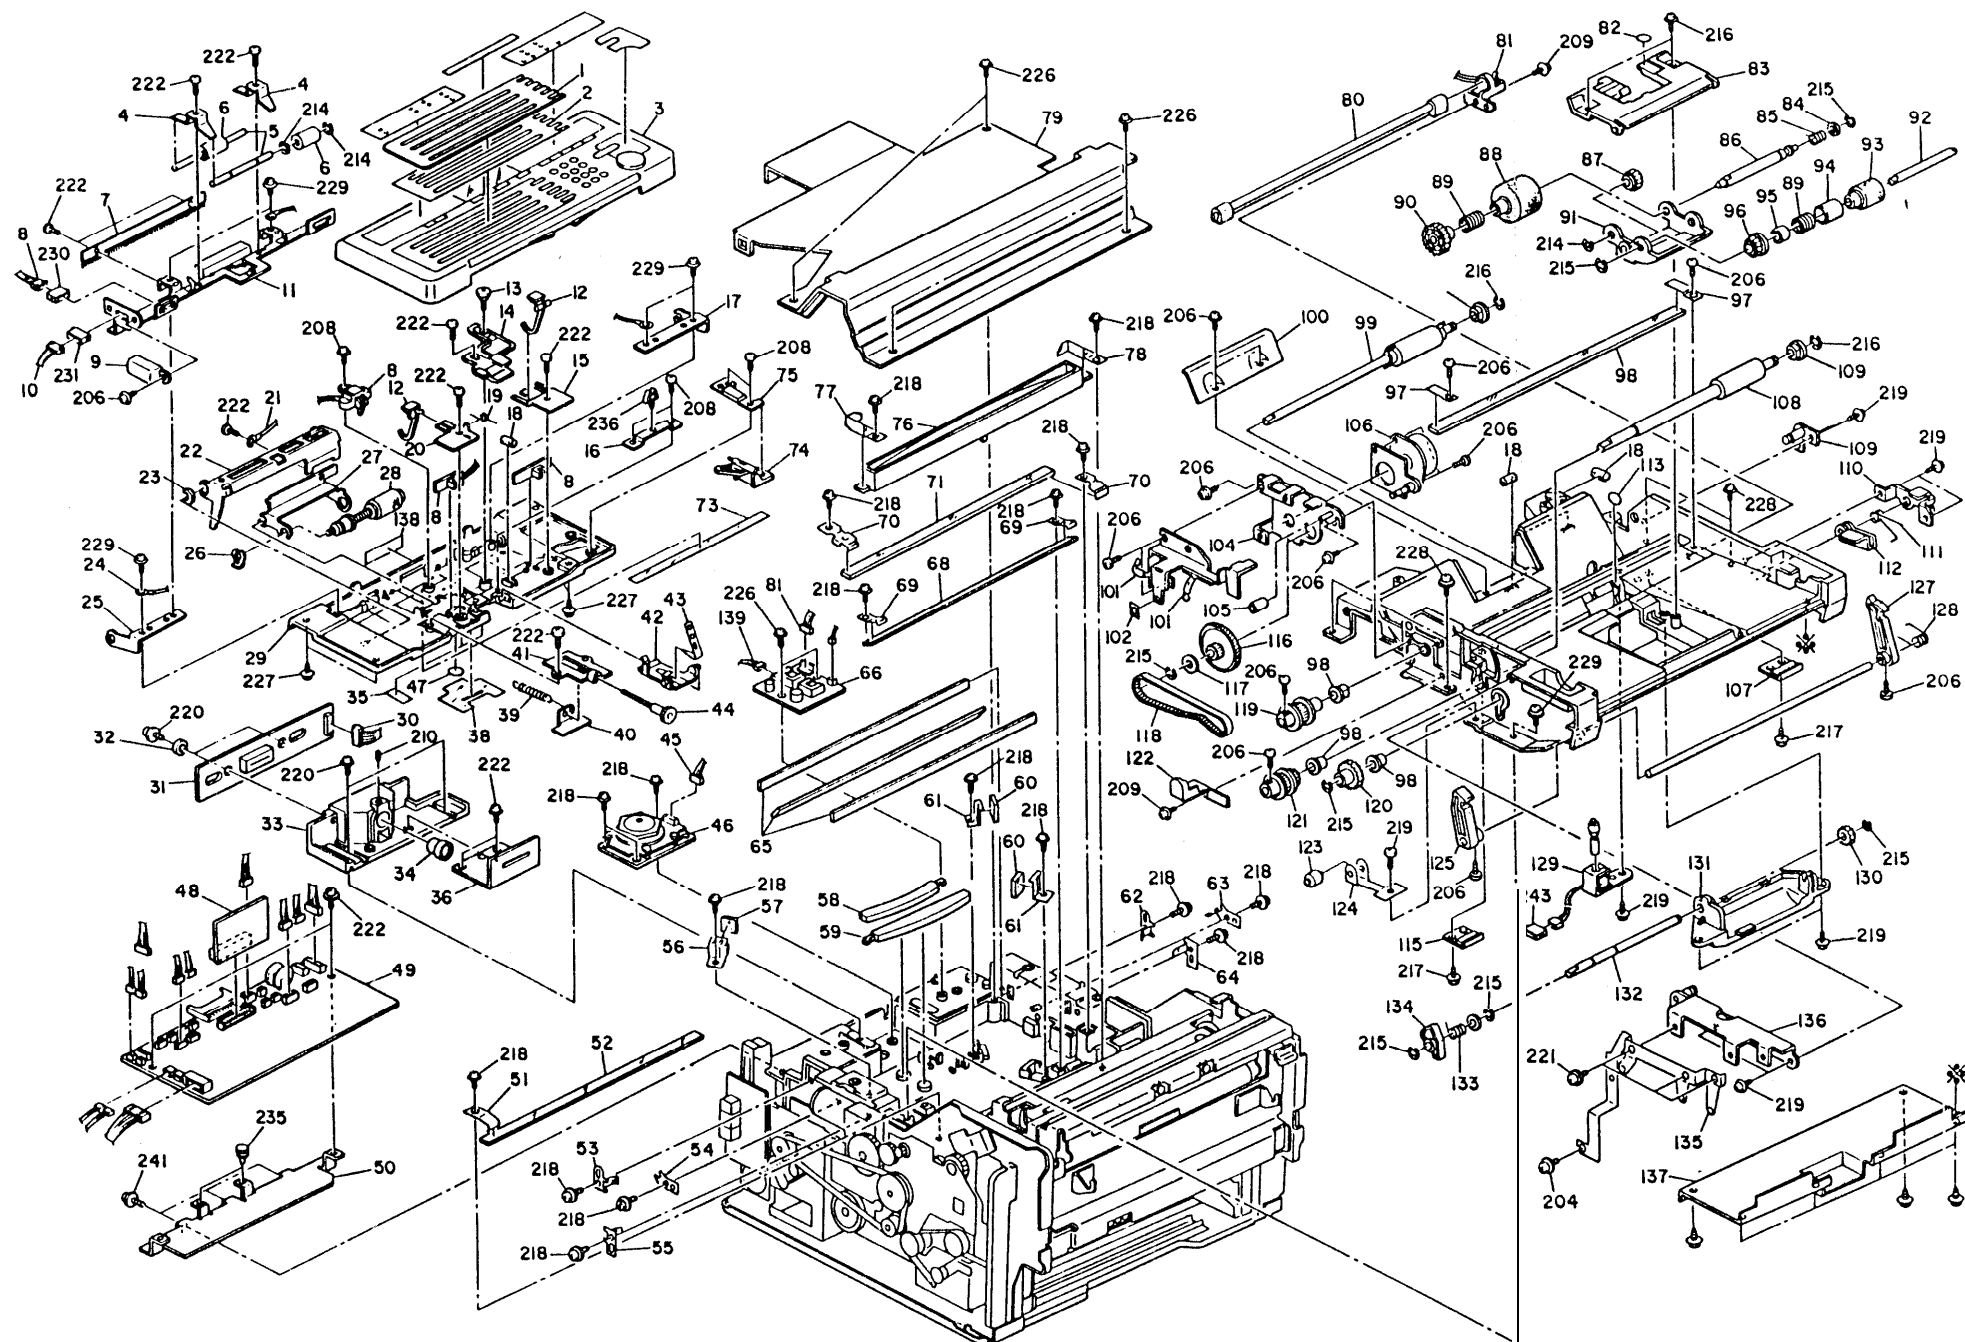

2. ADF, SCANNER

INDEX	PART NO.	DESCRIPTION	MODEL	INDEX	PART NO.	DESCRIPTION	MODEL
1	H081 4167	Cover Sheet - Speed Dial		33	H081 1050	Lens Holder	
2	H081 4258	Quick Dial List : NA		34	H041 1101	Lens - 6/30 - 24	
3	H081 6009	PCB - Op-Port		35	H081 1154	Seal - Gate	
4	H081 1139	Pressure Spring Plate		36	H081 1060	Shading Plate	
5	H081 1138	Pressure Shaft		37	H081 1129	Shutter Guide	
6	H081 1147	Pressure Roller Ass'y		38	H081 1160	Mylar - ADF Separation	
7	H081 1119	Antistatic Brush - Scanner		39	H081 1114	Separation Pressure Spring	
8	H081 5001	Document Sensor Ass'y		40	H081 1133	Slider - Separation Torque Adjuster	
9	H081 1115	ADF Harness Holder		41	H081 1132	Bracket-Separation Torque Adjuster	
10	H081 5518	Harness - Op-Port		42	H081 1135	Pressure Plate - Pick-up	
11	H081 1141	ADF Stay Ass'y		43	H081 1137	Spring Plate - Pressure Plate	
12	H081 1123	S1 Actuator		44	H081 1134	Pin - Separation Torque Adjuster	
13	AA14 3287	Stepped Screw - M3		45	H081 5510	Harness - Hexagonal Mirror Motor	
14	H081 1131	MDF Button		46	H081 5011	Hexagonal Mirror Motor	
15	H081 1124	Actuator Bracket		47	H081 1157	Maintenance Decal - 1	
16	H081 1126	MDF Bracket		48	H081 6027	PCB - MBU	
17	H081 1150	Right Fulcurm Bracket - ADF Ass'y		49	H081 6022	PCB - FCU	
18	H001 4221	Harness Clamper		50	H081 3528	FCU Bracket	
19	H081 1146	S1 Spring		51	H081 2523	Holder - Protection Glass	
20	H081 1136	S1 Bracket		52	H081 2507	Dustproof Glass	
21	H081 5040	Ground Wire - ADF		53	H081 1056	2nd Mirror Holder - Left	
22	H081 1125	Shutter		54	H081 1930	1st Mirror Holder - Left	
23	H081 1128	Bushing - Shutter		55	H081 1058	3rd Mirror Holder - Left	
24	H081 5041	Ground Wire - Guide		56	H081 2512	Holder - 1st Cylindrical Lens	
25	H081 1152	Left Fulcurm Bracket - ADF Ass'y		57	H081 2501	Lens - CYL	
26	5447 2681	Snap Ring		58	H081 2502	F0 Lens - L1	
27	H081 1130	Separation Stay		59	H081 2503	F0 Lens - L2	
28	H081 1105	Separation Roller Ass'y		60	H081 2508	1st Cylindrical Mirror	
29	H081 1101	Upper Document Guide		61	H081 2517	Holder - 2nd Cylindrical Mirror	
30	H081 5519	Harness - SBU		62	H081 1057	2nd Mirror Holder - Right	
31	H081 6010	PCB - SBU		63	H081 1931	1st Mirror Holder - Right	
32	5466 3198	Washer - SBU		64	H081 1059	3rd Mirror Holder - Right	


INDEX	PART NO.	DESCRIPTION	MODEL		INDEX	PART NO.	DESCRIPTION	MODEL
65	H081 1062	Scanner Mirror			101	H081 1089	Harness Clamp	
66	H081 5006	Xenon Lamp Stabilizer			102	H081 1072	Insuration Sheet : NCU	
68	H081 2505	1st Mirror			103	H081 1091	Harness Guide Ass'y	
69	H081 2515	Right Holder - 1st Mirror			104	H081 1034	Tx Motor Cushion Ass'y	
70	H081 2518	Right Holder - 2nd Mirror			105	H081 1042	Timing Belt - Idler 1	
71	H081 2506	2nd Mirror			106	H081 5007	Scanner Motor	
73	H081 1120	White Plate			107	H081 1074	Sheet - Protection	
74	H081 1121	Button - ADF Open			108	H081 1026	R1 Roller	
75	H081 1122	Bracket - ADF Open			109	H081 1083	Right Fulcrum Bracket Ass'y	
76	H081 2504	Lens - BTL			110	H081 1087	Lift Lever Bracket	
77	H081 2514	Left Holder - BTL			111	H081 1088	Lift Lever Spring	
78	H081 2513	Right Holder - BTL			112	H081 1086	Lift Lever - ADF	
79	H081 2552	Cover - Laser Unit			113	H081 1159	Maintenance Decal - 3	
80	H081 5000	Xenon Lamp			114	H081 1021	Lower Document Guide	
81	H081 1053	Xenon Lamp Holder - Right			115	H081 1096	Sheet - Protection : 1	
82	H081 1158	Maintenance Decal - 2			116	H081 1032	Idler - Tx Motor	
83	H081 1022	Mainte. Cover - Pick-up Roller 1			117	H081 1024	Collar - Tx Motor	
84	H006 2316	Spacer - Pick-up Clutch			118	H081 1025	Timing Belt - Tx Motor	
85	H081 1069	Torque Limitter - ADF Pick-up			119	H081 1019	Timing Pulley - R2 Roller	
86	H081 1068	Feed Shaft			120	H081 1033	Idler - ADF Gear	
87	H081 1046	Idler Gear - ADF Pick-up Roller			121	H081 1016	Timing Pulley - R1 Roller	
88	H081 1030	ADF Feed Roller			122	H081 1052	Xenon Lamp Holder - Left	
89	H081 1049	Spring Clutch - ADF Pick-up Roller			123	H081 1065	Timing Belt - Idler 2	
90	H081 1045	Feed Gear			124	H081 1098	Idler 2 Holder	
91	H081 1066	ADF Pick-up Roller Bracket			125	H081 1076	Right Hook	
92	H081 1070	ADF Pick-up Roller Shaft			126	H081 1078	Shaft - Hook	
93	H081 1031	ADF Pick-up Roller			127	H081 1077	Left Hook	
94	H081 1079	Collar - Spring Clutch			128	H081 1073	Spring Hook	
95	H081 1048	Pick-up Roller Hub			129	H081 5005	Stamper	
96	H081 1047	ADF Pick-up Roller Gear			130	H081 1041	Joint Idle Gear	
97	H081 1063	Exposure Glass Holder			131	H081 1071	Idler Shaft Holder	
98	H081 1054	Exposure Glass Ass'y			132	H081 1013	Idler Shaft	
99	H081 1027	R2 Roller Ass'y			133	H081 1015	Torque Limitter - Shutter	
100	H081 1094	Lens Cover			134	H081 1014	Shutter Lever	



INDEX	PART NO.	DESCRIPTION	MODEL
135	H081 1095	ADF Ground Plate - Lower	
136	H081 1080	Left Fulcrum Bracket Ass'y	
137	H081 1090	Dust Shield Sheet - Document Feed	
138	H081 1163	Stopper - S2 Sensor	
139	H081 5514	Harness - Driver	
140	 3 	Bushing - M6 : Cufe	

INDEX	PART NO.	DESCRIPTION	MODEL

3. FUSING, DEVELOPMENT

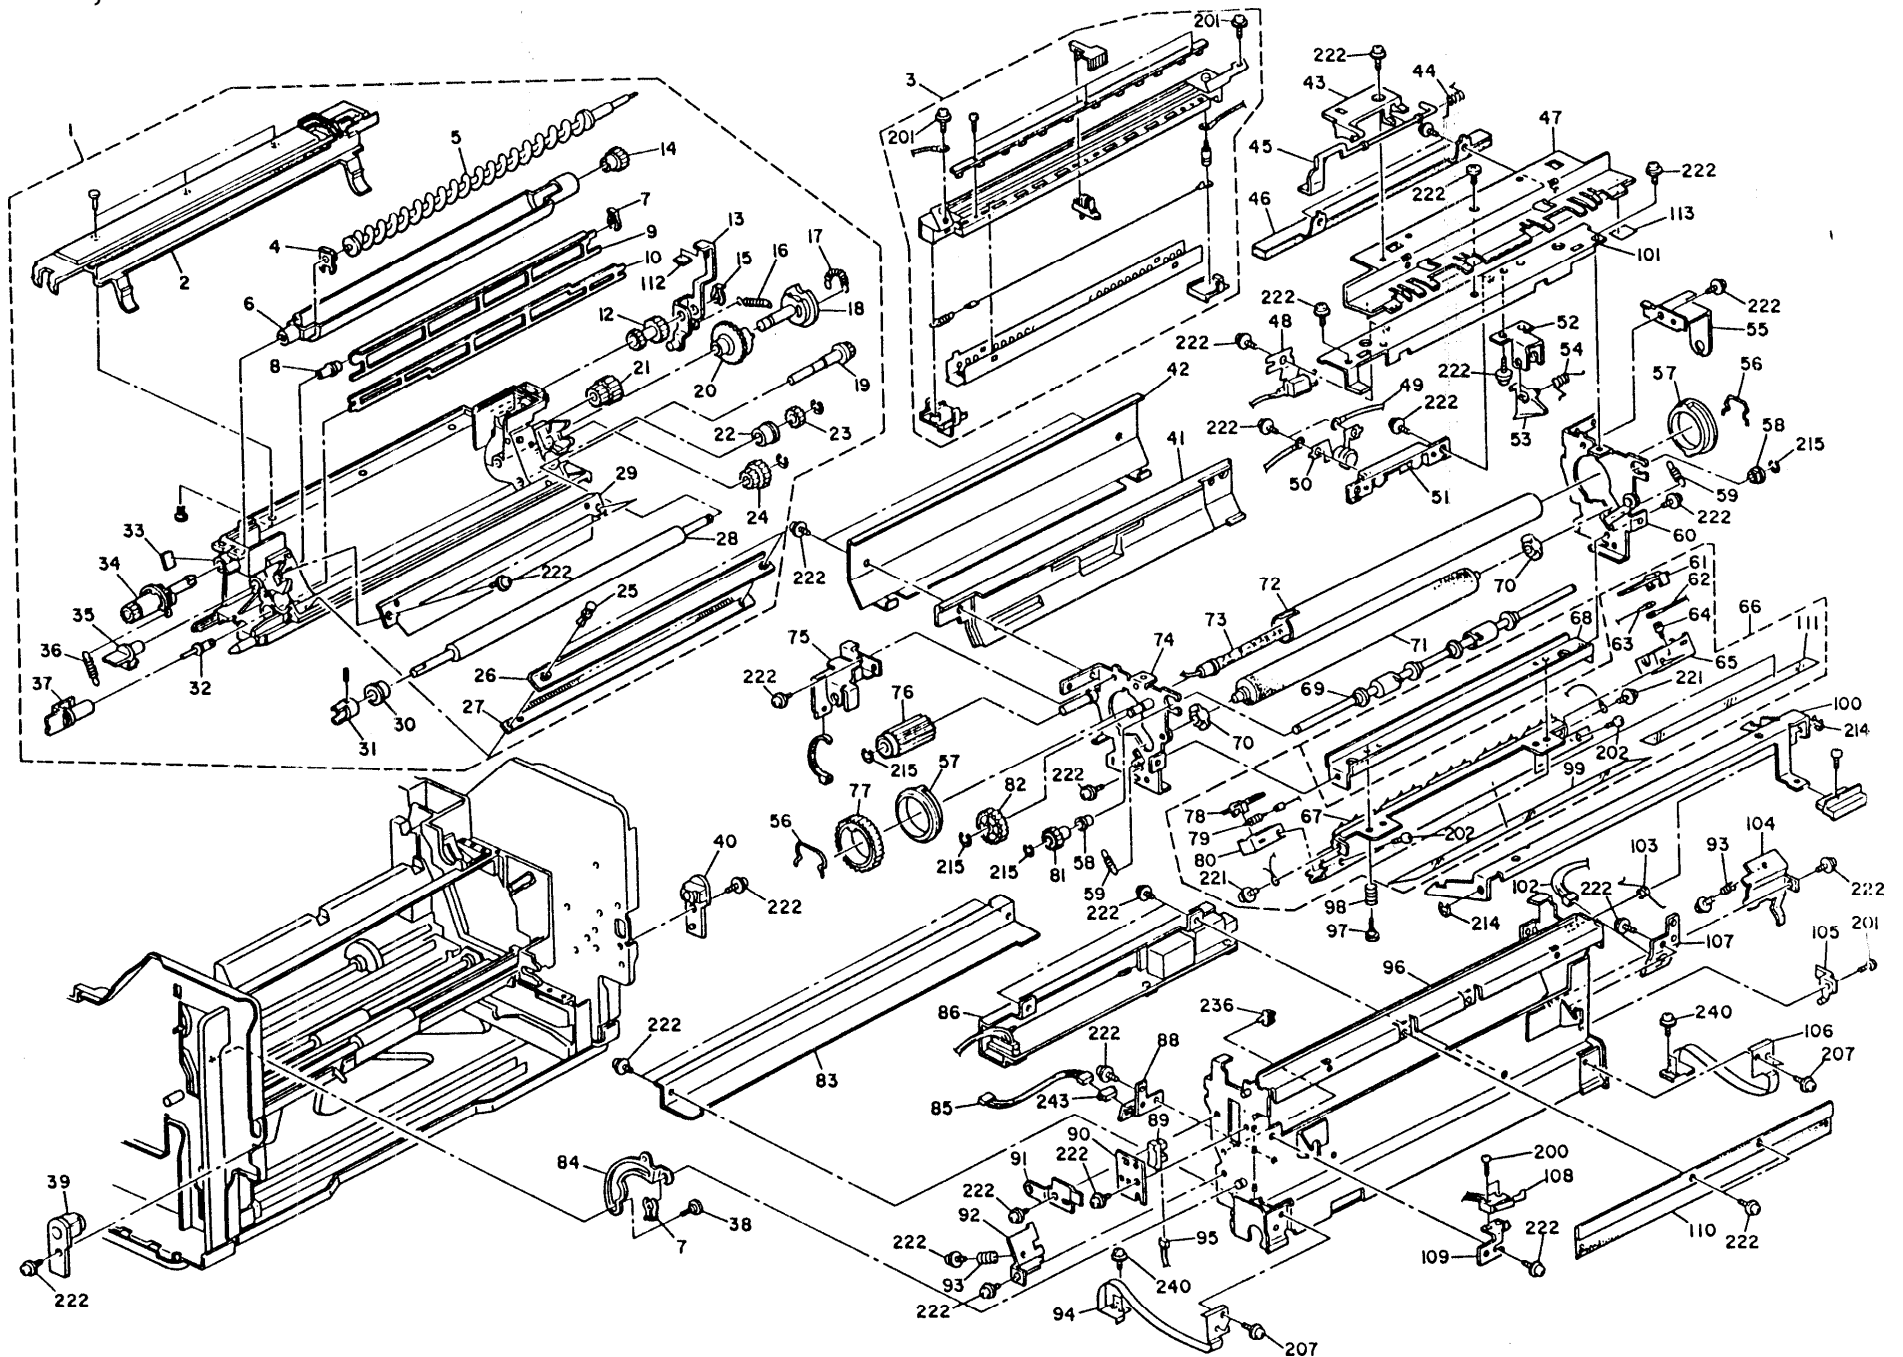

3. FUSING, DEVELOPMENT



INDEX	PART NO.	DESCRIPTION	MODEL
1	H081 2030	Development Unit	
2	H081 2412	Development Unit Cover	
3	H081 2870	Eraser Ass'y	
4	H081 2448	Snap Ring - Toner Transfer	
5	H081 2421	Toner Transfer - Developper	
6	H081 2420	Toner Trough	
7	5447 2681	Snap Ring	
8	H081 2438	Shaft - Agitator	
9	H081 2419	Agitator	
10	H081 2418	Toner Supplying Roller	
11	H081 2400	Hopper Ass'y	
12	H081 2435	Gear - Idler	
13	H081 2422	Lever - Toner End Detector	
14	H081 2436	Gear - Toner Transfer	
15	H006 3533	Snap Ring	
16	H081 2462	Spring - Toner End Lever	
17	H081 2434	Spring - Toner End Detector	
18	H081 2432	Disk - Toner End Detector	
19	H081 2427	Gear - Toner Supplying Roller	
20	H081 2431	Gear - Agitator	
21	H081 2430	Gear - Idler 2	
22	H081 2475	Bushing - Development Roller : M8	
23	H081 2459	Gear - Development Roller	
24	H081 2429	Gear - Idler 1	
25	5203 3105	Nylon Rivet	
26	H081 2458	Cover - Antistatic Brush	
27	H081 2447	Antistatic Brush - Develop. Roller	
28	H081 2410	Development Roller	
29	H081 2413	Development Blade	
30	H081 2478	Bushing - Development Roller : M6	
31	H081 2474	Joint - Development Roller	
32	H081 2451	Shaft - Toner Supplying Roller	



INDEX	PART NO.	DESCRIPTION	MODEL
33	H081 2440	Stopper - Guide Gear	
34	H081 2437	Gear - Toner Guide	
35	H081 2463	Bushing - Agitator	
36	H081 2495	Spring - Guide Gear	
37	H081 2460	Bushing - Toner Supply Roller	
38	5419 5714	Stepped Screw - M4	
39	H081 3116	Left Fulcrum Pin - Base	
40	H081 3115	Right Fulcrum Pin - Base	
41	H081 2124	Fusing Cover	
42	H081 2159	Partition Plate - Fusing	
43	H081 2163	Bushing - Actuator	
44	H081 2165	Spring - Feed-out Sensor	
45	H081 2122	Actuator - Copy Out Sensor	
46	H081 2145	Cleaning Pad	
47	H081 2174	Upper Exit Guide	
48	H081 2137	Thermistor	
49	H081 5031	Harness - Thermostat	
50	H081 2173	Thermostat Ass'y : E	
51	H081 2153	Thermostat Case	
52	H081 2144	Bracket - Fusing Stripper	
53	H081 2120	Fusing Stripper	
54	H081 2121	Stripper Spring	
55	H081 2133	Right Bracket - Fusing Lamp	
56	G003 6773	Retaning Ring	
57	H081 2102	Bushing - Hot Roller	
58	H006 2135	Bushing - M4x6	
59	H081 2118	Pressure Spring	
60	H081 2105	Right Side Plate - Fusing	
61	H081 2917	Cover - Right End Block	
62	H081 5034	Transfer Charge Harness	
63	H081 9501	Transfer Corona Wire	
64	5203 2060	Corona Wire Screw - M3x4	




INDEX	PART NO.	DESCRIPTION	MODEL
65	H081 2915	Right End Block	
66	H081 2061	Transfer Charger Unit	
67	H081 2921	Transfer Charger Housing	
68	H081 2116	Lower Fusing Stay	
69	H081 2132	Exit Roller	
70	H081 2103	Bushing - Pressure Roller	
71	H081 2101	Fusing Pressure Roller	
72	H081 2100	Hot Roller	
73	H081 5061	Fusing Lamp - 230V	
74	H081 2109	Left Side Plate - Fusing	
75	H081 2149	Left Bracket - Fusing Lamp	
76	H081 2115	Idle Gear - Z16	
77	H081 2104	Gear - Hot Roller	
78	H081 2916	Cover - Left End Block	
79	H081 2908	Spring - Transfer Charger	
80	H081 2914	Left End Block	
81	H081 2117	Exit Roller Gear	
82	H081 2114	Idle Gear - Z23	
83	H081 2263	Lower Stay - Side Plate - Copy Out	
84	H081 2264	Stopper - Side Plate - Copy Out	
85	H081 5531	Transfer Harness - Thermistor	
86	H081 5030	Power Pack	
88	H081 2281	Left Connector Bracket	
89	AW02 0021	Photointerruptor	
90	H081 2291	Bracket - Photointerruptor	
91	H081 2280	Gear Bracket	
92	H081 2261	Left Inner Cover - Copy Out	
93	H081 2273	Pressure Spring - Master Unit	
94	H081 2259	Left Ground Plate - Copy Out	
95	H081 5528	Harness - CTM/SIF/Thermistor	
96	H081 2250	Side Plate - Copy Out	
97	H081 2912	Stepped Screw - Transfer Charger	
98	H081 2913	Pressure Spring - Transfer Charger	
99	H081 2920	Seal - Transfer Charger	



INDEX	PART NO.	DESCRIPTION	MODEL
100	H081 2274	Stay - Copy Out	
101	H081 2175	Stay - Upper Exit Guide	
102	H081 5032	Transfer Harness - Fusing Heater	
103	H081 2258	Spring - Copy Out Cover Open	
104	H081 2262	Right Inner Cover - Copy Out	
105	H081 2292	Guide - Inter Lock Switch	
106	H081 2260	Right Ground Plate - Copy Out	
107	H081 2282	Right Connector Bracket	
108	H081 5033	Sensor - Copy Out Cover	
109	H081 2268	Sensor Bracket - Copy Out Cover	
110	H081 2269	Antistatic Brush - Copy Out	
111	H081 2922	Antistatic Cloth - Transfer Charger	
112	H081 2457	Shield Plate - Toner End Lever	
113	 2178	Seal - Fusing Guide Plate	

4. DRIVE AREA

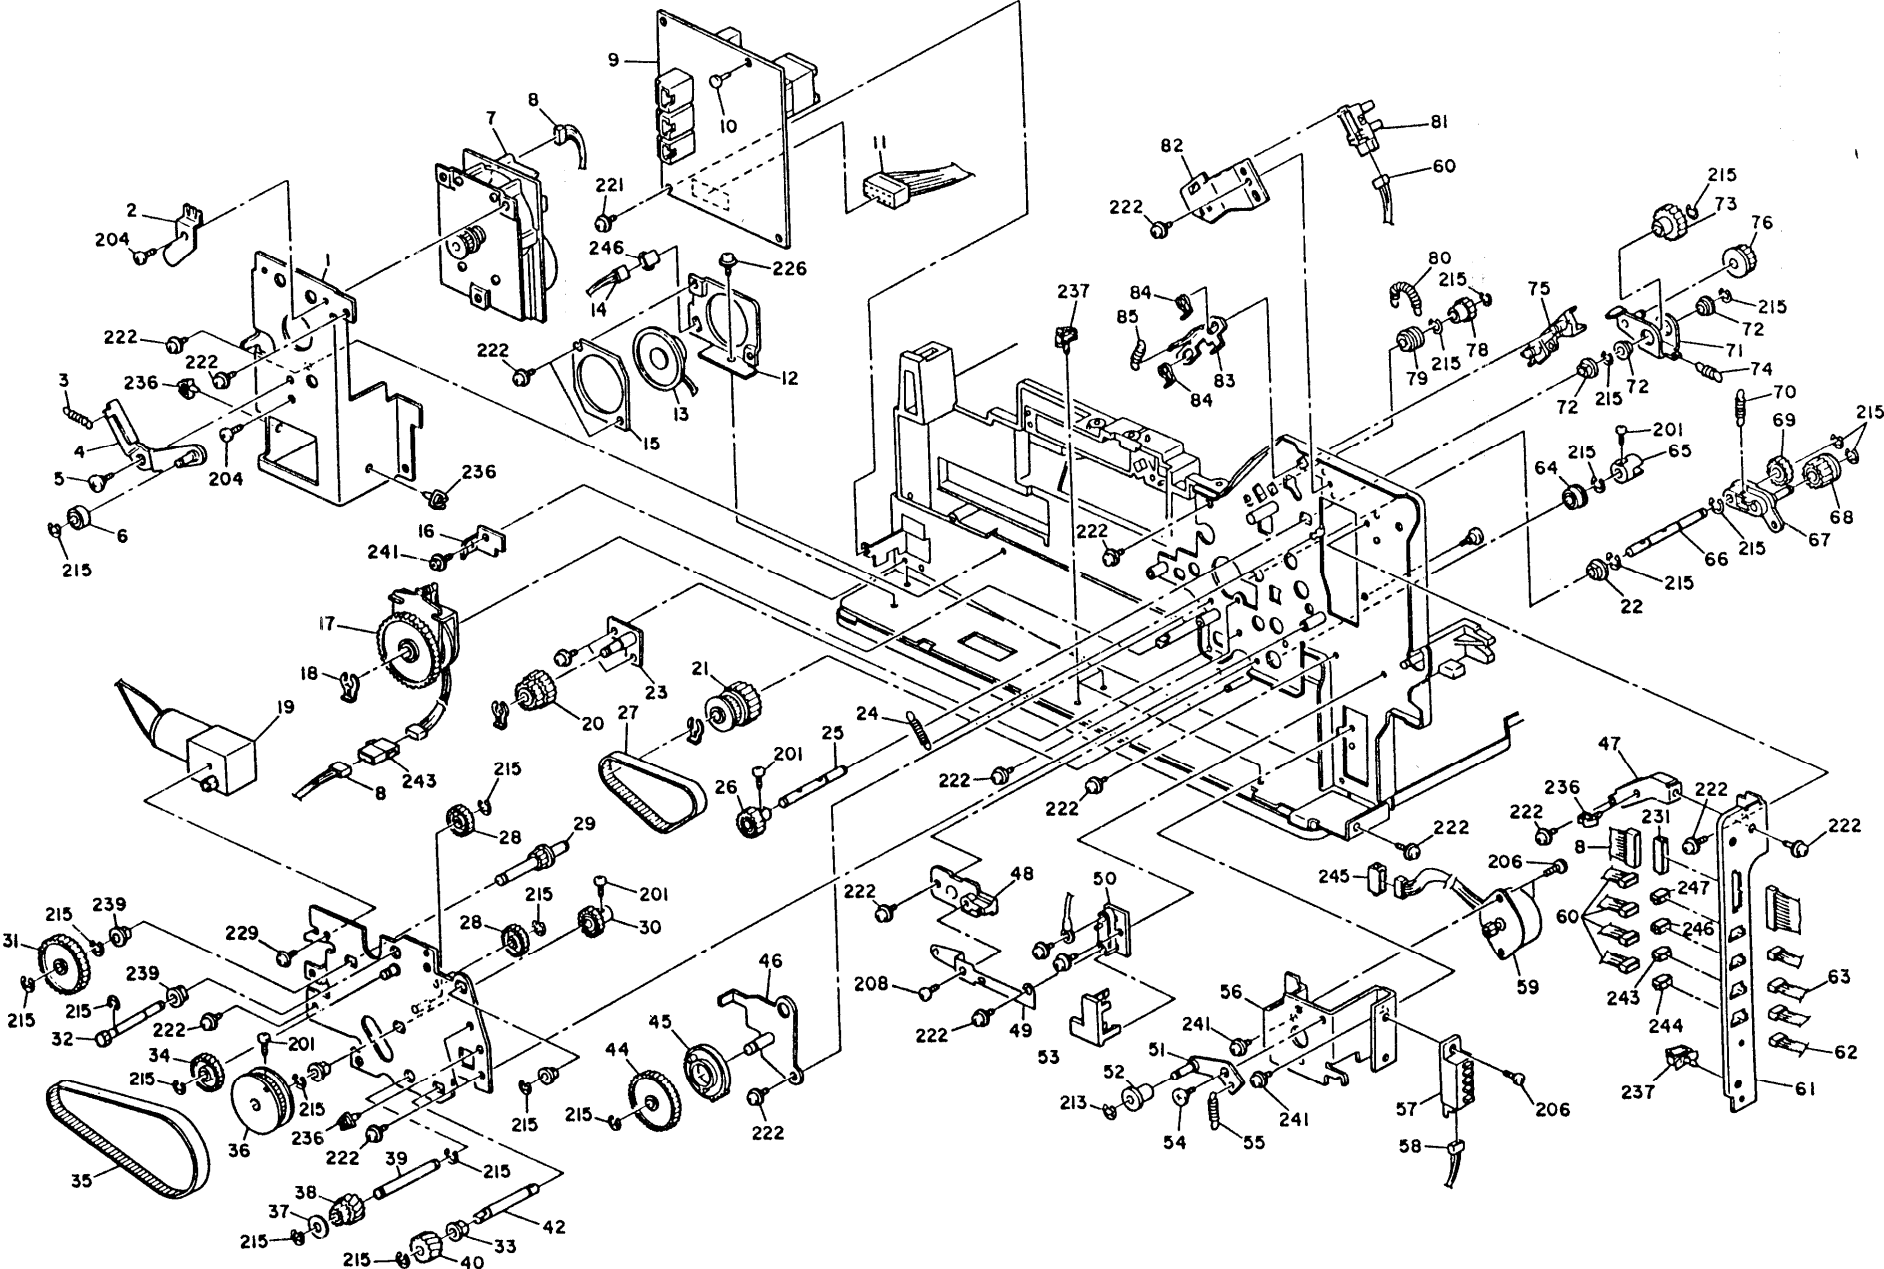

4. DRIVE AREA

INDEX	PART NO.	DESCRIPTION	MODEL	INDEX	PART NO.	DESCRIPTION	MODEL
1	H081 3240	Bracket - CTM Motor		33	H081 3262	Bushing - M6	
2	H081 3252	Ground Plate - CTM		34	H081 3227	Idle Gear - CTM	
3	H081 3148	Spring - Belt - 550		35	H081 3307	Timing Belt - Tension	
4	H081 3257	Tightener Bracket		36	H081 3233	Timing Pulley - PCU - P36	
5	5413 1882	Stepped Screw		37	H081 3286	Timing Pulley Holder	
6	H081 3256	Tightener Roller		38	H081 3275	Timing Pulley - Joint - Development	
7	H081 5077	Main Motor		39	H081 3274	Joint Shaft - Development Unit	
8	H081 5529	Harness - P.F/Motor/P.Pack/SIF 24		40	H081 3277	Development Drive Gear	
9	H081 6040	PCB - NCU		42	H081 3290	Development Drive Shaft	
10	H081 1044	Harness Clamp : P3055B		43	H081 3225	Sub Side Plate - Driver Unit	
11	H081 5511	Harness - NCU		44	H081 3231	Driver Gear - Z88	
12	H081 4132	Speaker Bracket		45	H081 3127	Spring - Sector Gear	
13	H004 5206	Monitor Speaker		45	H081 3232	Sector Gear - Z55	
14	H081 5520	Harness - Speaker		46	H081 3245	Bracket - Drive Gear Ass'y	
15	H004 1131	Speaker Holder		47	H081 3109	Stay - Left Side Plate	
16	H081 3585	Bracket - Left Cover		48	H081 3260	Development Bias Bushing	
17	H081 5015	Spring Clutch - Paper Feed		49	H081 3261	Development Bias Terminal	
18	H020 3623	Snap Ring - Registration Roller		50	H081 3172	Bias Terminal	
19	H081 5036	CTM Motor		51	H081 3487	Barcket - Tension Roller	
20	H081 3315	Gear - 19/24		52	H081 3489	Tension Roller	
21	H081 3543	Pulley/Gear - 35/24		53	H081 3174	Left Cover - Bias Terminal	
22	H012 1181	Bushing - M6		54	5447 2768	Stepped Screw - M3	
23	H081 3417	Bracket - Gear - 19/24		55	H081 3538	Spring	
24	H081 3149	Spring - Left Guide		56	H081 3304	Bracket - Paper Feed Motor Ass'y	
25	H081 3217	Shaft - Drive Arm - Fusing		57	AW50 0010	Push Switch	
26	H081 3224	Drive Gear - Fusing - Z25		58	H081 5506	Harness - Paper Size Sensor	
27	H081 3265	Timing Belt - S3M-366		59	H081 5013	Paper Feed Motor	
28	H081 3228	Idle Gear - Z28		60	H081 5528	Harness - CTM/SIF/Thermistor	
29	H081 3243	Drive Shaft Ass'y		61	H081 3182	Left Stay	
30	H081 3220	Fusing Drive Gear - Z20		62	H081 5532	Transfer Harness - Copy Out Sensor	
31	H081 3230	Drive Gear - Z75		63	H081 5508	Harness - Thermistor	
32	H081 3226	CTM Drive Gear - Z15		64	H081 3293	Bushing - Development Drive	

This is a detailed exploded view diagram of a mechanical assembly, likely a piece of industrial machinery. The diagram shows the relationship between various components, which are numbered for identification. The parts are arranged in a hierarchical manner, showing how they fit together. Key components include a large base plate (1), a central housing (15), and a top cover (80). The diagram also shows various fasteners, such as screws (e.g., 241, 222, 229) and bolts (e.g., 219, 203), as well as smaller components like washers (e.g., 225, 228) and spacers (e.g., 211, 212). The diagram is a technical drawing, using solid lines for the parts and dashed lines to indicate the assembly path and alignment. The numbers are placed next to the corresponding parts, and some parts have multiple instances, indicated by the same number being used multiple times.


5. BASE

INDEX	PART NO.	DESCRIPTION	MODEL	INDEX	PART NO.	DESCRIPTION	MODEL
1	H081 3451	Cassette Guide Rail - Left		33	H081 5526	Harness - Interlock Switch - 5V	
2	H081 3450	Cassette Guide Rail - Right		34	H081 5523	Harness - Interlock Switch - 24V	
3	H082 3413	Left FCU Holder		35	H081 3107	Lever - Interlock Switch	
4	H082 3414	Right FCU Holder		36	H081 3108	Bracket - Interlock Switch - 24V	
5	H081 3326	Actuator - Paper End Sensor		37	H081 3110	Stay - Right Side Plate	
6	H081 3346	Pin - Paper End Actuator		38	H081 3120	Snap Ring - CTM Guide	
7	H081 3584	Bracket - Right Cover		39	5413 1882	Stepped Screw	
8	H081 3421	Fixing Plate - Right:Rear		40	H081 3162	Ozone Duct	
9	H082 3300	Base - Paper Feed		41	H081 3169	Ozone Filter Holder	
10	H081 3400	Fixing Plate - Left:Rear		42	H081 3164	Ozone Filter	
11	H081 3399	Fixing Plate - Left:Front		43	H081 5038	Ozone Fan	
12	H020 3623	Snap Ring - Registration Roller		44	H081 5043	Interlock Switch - LD	
13	H081 3126	Left Reinforce Bracket		45	H081 3114	Bracket - Interlock Switch - LD	
14	H081 3407	Snap Ring - M2.5		46	H081 3523	Ground Plate	
15	H081 3303	Paper Guide Plate		47	H081 3180	Bracket - Stay - Right Side Plate	
16	H081 3416	Paper Feed Roller - A4		48	H081 3173	Right Cover - Bias Terminal	
17	H081 3541	Snap Ring - Paper Feed		49	H081 3179	Bracket - Right	
18	H081 3589	Shaft - Paper Feed Roller		50	H081 3121	Bias Terminal Plate-Develop./Charge	
19	H081 3320	Transfer Roller		51	H081 3172	Bias Terminal	
20	H081 3419	Fixing Plate - Right:Front		52	H081 3181	Cover - Development	
21	H081 3347	Cassette Ground Plate		53	H081 2510	Holder - Cylindrical Lens Ass'y	
22	H081 3125	Right Reinforce Bracket		55	H081 2521	Holder - Cylindrical Detector	
23	H081 2865	Master Unit Stopper		56	H081 2556	Harness Holder	
24	H081 3183	Positioning Bracket		57	H081 2553	Master Unit Guide - Right	
25	H081 3161	Cover - Interlock SW		59	H081 3321	Registration Roller	
26	H081 3122	Seal - Toner Duct		60	H081 2522	Film - Regist	
27	H081 3131	Spring - Right Side Plate - 750		61	H081 5014	Registration Sensor	
28	H081 3113	CTM Guide Rail - Right		62	H081 2408	CTM Duct	
29	H081 3123	CTM Guide		63	H081 2551	Base - Laser Unit	
30	H081 3100	Right Side Plate		64	H081 2557	Holder - MBU	
31	AW02 0021	Photointerruptor		65	H081 5023	Zener Diode - 720V - 0.5W : NA	
32	H081 5527	Harness - Toner End Sensor/ PSU 5V		66	H081 2530	LD Unit	



INDEX	PART NO.	DESCRIPTION	MODEL

6. CASSETTE

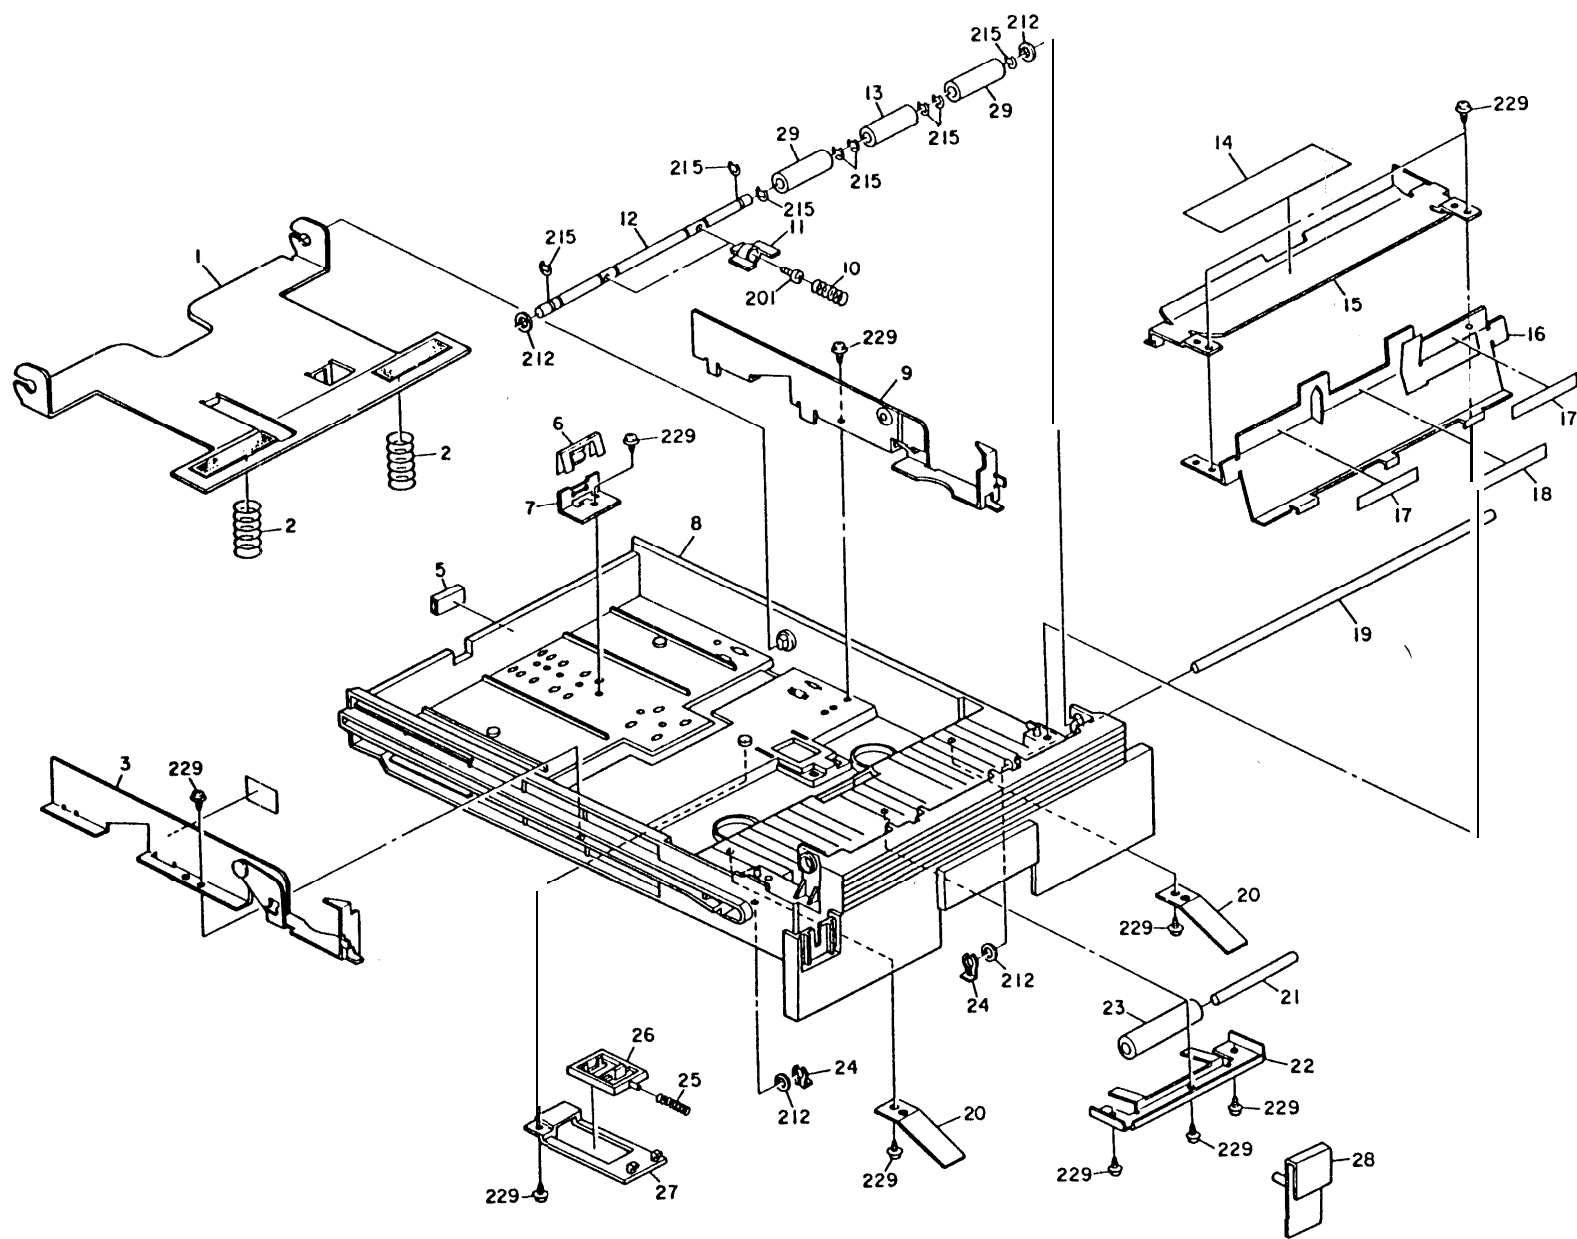



INDEX	PART NO.	DESCRIPTION	MODEL
200	0252 0080B	Screw - M2x8	
201	0313 0060B	Philips Pan Head Screw - M3x6	
202	0313 0200B	Philips Pan Head Screw - M3x20	
203	0313 0140B	Philips Pan Head Screw - M3x14	
204	0314 0060B	Philips Pan Head Screw - M4x6	
205	0323 0060B	Philips Sunk Screw - M3x6	
206	0353 0060B	Philips Truss Head Screw M3x6	
207	0353 0060Z	Philips Truss Head Screw - M3x8	
208	0433 0062B	Tapping Pan Head Screw - M3x6	
209	0433 0082B	Tapping Pan Head Screw - M3x8	
210	0573 0040E	Hexagon Headless Set Screw - M3x4	
211	0573 0060E	Hexagon Headless Set Screw - M3x6	
212	0701 0060E	Washer - M6	
213	0720 0020E	Retaining Ring - M2	
214	0720 0030E	Retaining Ring - M3	
215	0720 0040E	Retaining Ring - M4	
216	0720 0050E	Retaining Ring - M5	
217	0802 5205B	Tapping Screw M3x6	
218	0802 5206B	Tapping Screw M3x8	
219	0950 3030B	Philips Screw with Lock Washer- M3x30	
220	0950 3008B	Philips Screw with Lock Washer - M3x8	
221	0951 3005B	Philips Screw with Flat Washer M3x5	
222	0951 3006B	Philips Screw with Flat Washer - M3x6	
223	0954 3008B	Double Sems Screw - M3x8	
224	0954 3006B	Double Sems Screw - M4x8	
225	0964 3006B	Tapping Screw - M3x6	
226	0965 3006B	Tapping Screw with Flat Washer M3x6	
227	0965 3010B	Tapping Screw with Flat Washer M3x10	
228	0965 3012B	Tapping Screw with Flat Washer M3x12	
229	0965 3008B	Tapping Screw with Washer - M3x8	
230	1102 5071	Connector - 9P	
231	1102 5194	Connector - 7P	
232	1102 4473	CT Connector - 2P	
233	1105 0113	Edge Saddle - EDS2	

INDEX	PART NO.	DESCRIPTION	MODEL
234	1105 0234	Clamp	
235	1105 0246	Spacer	
236	1105 0344	Clamp	
237	1105 0260	Wire Saddle	
238	5053 0223	Bushing - 8mm	
239	5053 0447	Bushing - 6mm	
240	0964 3006Z	Tapping Screw - M3x6	
241	0443 0060W	Tapping Screw - M3x6	
242	1102 4431	Connector - Sub Harness	
243	1102 4473	CT Connector - 2P	
244	1102 4559	Connector - 3P	
245	1102 4560	CT Connector 6P	
246	1102 5142	Connector - 2P - Black	
247	1102 5145	Connector - 3P - Blue	

PARTS INDEX

PART NO.	DESCRIPTION	INDEX
H081 1013	Idler Shaft	1-5-132
H081 1014	Shutter Lever	1-5-134
H081 1015	Torque Limitter - Shutter	1-5-133
H081 1016	Timing Pulley - R1 Roller	1-5-121
H081 1019	Timing Pulley - R2 Roller	1-5-119
H081 1021	Lower Document Guide	1-5-114
H081 1022	Mainte. Cover - Pick-up Roller 1	1-5-83
H081 1024	Collar - Tx Motor	1-5-117
H081 1025	Timing Belt - Tx Motor	1-5-118
H081 1026	R1 Roller	1-5-108
H081 1027	R2 Roller Ass'y	1-5-99
H081 1030	ADF Feed Roller	1-5-88
H081 1031	ADF Pick-up Roller	1-5-93
H081 1032	Idler - Tx Motor	1-5-116
H081 1033	Idler - ADF Gear	1-5-120
H081 1034	Tx Motor Cushion Ass'y	1-5-104
H081 1041	Joint Idle Gear	1-5-130
H081 1042	Timing Belt - Idler 1	1-5-105
H081 1044	Harness Clamp : P3055B	1-9-10
H081 1045	Feed Gear	1-5-90
H081 1046	Idler Gear - ADF Pick-up Roller	1-5-87
H081 1047	ADF Pick-up Roller Gear	1-5-96
H081 1048	Pick-up Roller Hub	1-5-95
H081 1049	Spring Clutch - ADF Pick-up Roller	1-5-89
H081 1050	Lens Holder	1-5-33
H081 1052	Xenon Lamp Holder - Left	1-5-122
H081 1053	Xenon Lamp Holder - Right	1-5-81
H081 1054	Exposure Glass Ass'y	1-5-98
H081 1056	2nd Mirror Holder - Left	1-5-53
H081 1057	2nd Mirror Holder - Right	1-5-62
H081 1058	3rd Mirror Holder - Left	1-5-55
H081 1059	3rd Mirror Holder - Right	1-5-64
H081 1060	Shading Plate	1-5-36
H081 1062	Scanner Mirror	1-5-65

PART NO.	DESCRIPTION	INDEX
H081 1063	Exposure Glass Holder	1-5-97
H081 1065	Timing Belt - Idler 2	1-5-123
H081 1066	ADF Pick-up Roller Bracket	1-5-91
H081 1068	Feed Shaft	1-5-86
H081 1069	Torque Limitter - ADF Pick-up	1-5-85
H081 1070	ADF Pick-up Roller Shaft	1-5-92
H081 1071	Idler Shaft Holder	1-5-131
H081 1072	Insuration Sheet : NCU	1-5-102
H081 1073	Spring Hook	1-5-128
H081 1074	Sheet - Protection	1-5-107
H081 1076	Right Hook	1-5-125
H081 1077	Left Hook	1-5-127
H081 1078	Shaft - Hook	1-5-126
H081 1079	Collar - Spring Clutch	1-5-94
H081 1080	Left Fulcrum Bracket Ass'y	1-5-136
H081 1083	Right Fulcrum Bracket Ass'y	1-5-109
H081 1086	Lift Lever - ADF	1-5-112
H081 1087	Lift Lever Bracket	1-5-110
H081 1088	Lift Lever Spring	1-5-111
H081 1089	Harness Clamp	1-5-101
H081 1090	Dust Shield Sheet - Document Feed	1-5-137
H081 1091	Harness Guide Ass'y	1-5-103
H081 1094	Lens Cover	1-5-100
H081 1095	ADF Ground Plate - Lower	1-5-135
H081 1096	Sheet - Protection : 1	1-5-115
H081 1098	Idler 2 Holder	1-5-124
H081 1101	Upper Document Guide	1-5-29
H081 1105	Separation Roller Ass'y	1-5-28
H081 1114	Separation Pressure Spring	1-5-39
H081 1115	ADF Harness Holder	1-5-9
H081 1119	Antistatic Brush - Scanner	1-5-7
H081 1120	White Plate	1-5-73
H081 1121	Button - ADF Open	1-5-74
H081 1122	Bracket - ADF Open	1-5-75

PART NO.	DESCRIPTION	INDEX
H081 1123	S1 Actuator	1-5-12
H081 1124	Actuator Bracket	1-5-15
H081 1125	Shutter	1-5-22
H081 1126	MDF Bracket	1-5-16
H081 1128	Bushing - Shutter	1-5-23
H081 1129	Shutter Guide	1-5-37
H081 1130	Separation Stay	1-5-27
H081 1131	MDF Button	1-5-14
H081 1132	Bracket-Separation Torque Adjuster	1-5-41
H081 1133	Slider - Separation Torque Adjuster	1-5-40
H081 1134	Pin - Separation Torque Adjuster	1-5-44
H081 1135	Pressure Plate - Pick-up	1-5-42
H081 1136	S1 Bracket	1-5-20
H081 1137	Spring Plate - Pressure Plate	1-5-43
H081 1138	Pressure Shaft	1-5-5
H081 1139	Pressure Spring Plate	1-5-4
H081 1141	ADF Stay Ass'y	1-5-11
H081 1146	S1 Spring	1-5-19
H081 1147	Pressure Roller Ass'y	1-5-6
H081 1150	Right Fulcrum Bracket - ADF Ass'y	1-5-17
H081 1152	Left Fulcrum Bracket - ADF Ass'y	1-5-25
H081 1154	Seal - Gate	1-5-35
H081 1157	Maintenance Decal - 1	1-5-47
H081 1158	Maintenance Decal - 2	1-5-82
H081 1159	Maintenance Decal - 3	1-5-113
H081 1160	Mylar - ADF Separation	1-5-38
H081 1163	Stopper - S2 Sensor	1-5-138
H081 1930	1st Mirror Holder - Left	1-5-54
H081 1931	1st Mirror Holder - Right	1-5-63
H081 2030	Development Unit	1-7-1
H081 2061	Transfer Charger Unit	1-7-66
H081 2100	Hot Roller	1-7-72
H081 2101	Fusing Pressure Roller	1-7-71
H081 2102	Bushing - Hot Roller	1-7-57

PART NO.	DESCRIPTION	INDEX
H081 2103	Bushing - Pressure Roller	1-7-70
H081 2104	Gear - Hot Roller	1-7-77
H081 2105	Right Side Plate - Fusing	1-7-60
H081 2109	Left Side Plate - Fusing	1-7-74
H081 2114	Idle Gear - Z23	1-7-82
H081 2115	Idle Gear - Z16	1-7-76
H081 2116	Lower Fusing Stay	1-7-68
H081 2117	Exit Roller Gear	1-7-81
H081 2118	Pressure Spring	1-7-59
H081 2120	Fusing Stripper	1-7-53
H081 2121	Stripper Spring	1-7-54
H081 2122	Actuator - Copy Out Sensor	1-7-45
H081 2124	Fusing Cover	1-7-41
H081 2129	Lower Exit Guide Plate	1-3-34
H081 2132	Exit Roller	1-7-69
H081 2133	Right Bracket - Fusing Lamp	1-7-55
H081 2137	Thermistor	1-7-48
H081 2144	Bracket - Fusing Stripper	1-7-52
H081 2145	Cleaning Pad	1-7-46
H081 2149	Left Bracket - Fusing Lamp	1-7-75
H081 2151	Exit Roller Holder	1-3-33
H081 2153	Thermostat Case	1-7-51
H081 2156	Paper Exit Cover	1-3-35
H081 2159	Partition Plate - Fusing	1-7-42
H081 2163	Bushing - Actuator	1-7-43
H081 2165	Spring - Feed-out Sensor	1-7-44
H081 2167	Lower Exit Roller	1-3-32
H081 2173	Thermostat Ass'y : E	1-7-50
H081 2174	Upper Exit Guide	1-7-47
H081 2175	Stay - Upper Exit Guide	1-7-101
H081 2178	Seal - Fusing Guide Plate	1-7-113
H081 2250	Side Plate - Copy Out	1-7-96
H081 2258	Spring - Copy Out Cover Open	1-7-103
H081 2259	Left Ground Plate - Copy Out	1-7-94

PART NO.	DESCRIPTION	INDEX
H081 2260	Right Ground Plate - Copy Out	1-7-106
H081 2261	Left Inner Cover - Copy Out	1-7-92
H081 2262	Right Inner Cover - Copy Out	1-7-104
H081 2263	Lower Stay - Side Plate - Copy Out	1-7-83
H081 2264	Stopper - Side Plate - Copy Out	1-7-84
H081 2268	Sensor Bracket - Copy Out Cover	1-7-109
H081 2269	Antistatic Brush - Copy Out	1-7-110
H081 2273	Pressure Spring - Master Unit	1-7-93
H081 2274	Stay - Copy Out	1-7-100
H081 2280	Gear Bracket	1-7-91
H081 2281	Left Connector Bracket	1-7-88
H081 2282	Right Connector Bracket	1-7-107
H081 2291	Bracket - Photointerruptor	1-7-90
H081 2292	Guide - Inter Lock Switch	1-7-105
H081 2400	Hopper Ass'y	1-7-11
H081 2408	CTM Duct	1-11-62
H081 2410	Developmant Roller	1-7-28
H081 2412	Development Unit Cover	1-7-2
H081 2413	Development Blade	1-7-29
H081 2418	Toner Supplying Roller	1-7-10
H081 2419	Agitator	1-7-9
H081 2420	Toner Trough	1-7-6
H081 2421	Toner Transfer - Developper	1-7-5
H081 2422	Lever - Toner End Detector	1-7-13
H081 2427	Gear - Toner Supplying Roller	1-7-19
H081 2429	Gear - Idler 1	1-7-24
H081 2430	Gear - Idler 2	1-7-21
H081 2431	Gear - Agitator	1-7-20
H081 2432	Disk - Toner End Detector	1-7-18
H081 2434	Spring - Toner End Detector	1-7-17
H081 2435	Gear - Idler	1-7-12
H081 2436	Gear - Toner Transfer	1-7-14
H081 2437	Gear - Toner Guide	1-7-34
H081 2438	Shaft - Agitator	1-7-8

PART NO.	DESCRIPTION	INDEX
H081 2440	Stopper - Guide Gear	1-7-33
H081 2447	Antistatic Brush - Develop. Roller	1-7-27
H081 2448	Snap Ring - Toner Transfer	1-7-4
H081 2451	Shaft - Toner Supplying Roller	1-7-32
H081 2457	Shield Plate - Toner End Lever	1-7-112
H081 2458	Cover - Antistatic Brush	1-7-26
H081 2459	Gear - Development Roller	1-7-23
H081 2460	Bushing - Toner Supply Roller	1-7-37
H081 2462	Spring - Toner End Lever	1-7-16
H081 2463	Bushing - Agitator	1-7-35
H081 2474	Joint - Development Roller	1-7-31
H081 2475	Bushing - Development Roller : M8	1-7-22
H081 2478	Bushing - Development Roller : M6	1-7-30
H081 2495	Spring - Guide Gear	1-7-36
H081 2501	Lens - CYL	1-5-57
H081 2502	F0 Lens - L1	1-5-58
H081 2503	F0 Lens - L2	1-5-59
H081 2504	Lens - BTL	1-5-76
H081 2505	1st Mirror	1-5-68
H081 2506	2nd Mirror	1-5-71
H081 2507	Dustproof Glass	1-5-52
H081 2508	1st Cylindrical Mirror	1-5-60
H081 2510	Holder - Cylindrical Lens Ass'y	1-11-53
H081 2512	Holder - 1st Cylindrical Lens	1-5-56
H081 2513	Right Holder - BTL	1-5-78
H081 2514	Left Holder - BTL	1-5-77
H081 2515	Right Holder - 1st Mirror	1-5-69
H081 2517	Holder - 2nd Cylindrical Mirror	1-5-61
H081 2518	Right Holder - 2nd Mirror	1-5-70
H081 2521	Holder - Cylindrical Detector	1-11-55
H081 2522	Film - Regist	1-11-60
H081 2523	Holder - Protection Glass	1-5-51
H081 2524	LD Unit Cover	1-11-68
H081 2530	LD Unit	1-11-66

PART NO.	DESCRIPTION	INDEX
H081 2551	Base - Laser Unit	1-11-63
H081 2552	Cover - Laser Unit	1-5-79
H081 2553	Master Unit Guide - Right	1-11-57
H081 2554	Master Unit Guide - Left	1-11-70
H081 2556	Harness Holder	1-11-56
H081 2557	Holder - MBU	1-11-64
H081 2865	Master Unit Stopper	1-11-23
H081 2870	Eraser Ass'y	1-7-3
H081 2908	Spring - Transfer Charger	1-7-79
H081 2912	Stepped Screw - Transfer Charger	1-7-97
H081 2913	Pressure Spring - Transfer Charger	1-7-98
H081 2914	Left End Block	1-7-80
H081 2915	Right End Block	1-7-65
H081 2916	Cover - Left End Block	1-7-78
H081 2917	Cover - Right End Block	1-7-61
H081 2920	Seal - Transfer Charger	1-7-99
H081 2921	Transfer Charger Housing	1-7-67
H081 2922	Antistatic Cloth - Transfer Charger	1-7-111
H081 3100	Right Side Plate	1-11-30
H081 3107	Lever - Interlock Switch	1-11-35
H081 3108	Bracket - Interlock Switch - 24V	1-11-36
H081 3109	Stay - Left Side Plate	1-9-47
H081 3110	Stay - Right Side Plate	1-11-37
H081 3113	CTM Guide Rail - Right	1-11-28
H081 3114	Bracket - Interlock Switch - LD	1-11-45
H081 3115	Right Fulcurm Pin - Base	1-7-40
H081 3116	Left Fulcurm Pin - Base	1-7-39
H081 3120	Snap Ring - CTM Guide	1-9-84
H081 3120	Snap Ring - CTM Guide	1-11-38
H081 3121	Bias Terminal Plate-Develop./Charge	1-11-50
H081 3122	Seal - Toner Duct	1-11-26
H081 3123	CTM Guide	1-11-29
H081 3125	Right Reinforce Bracket	1-11-22
H081 3126	Left Reinforce Bracket	1-11-13

PART NO.	DESCRIPTION	INDEX
H081 3127	Spring - Sector Gear	1-9-45
H081 3128	Joint Spring - Fusing	1-9-74
H081 3130	Joint Spring - Master Unit	1-9-70
H081 3131	Spring - Right Side Plate - 750	1-11-27
H081 3139	Spring - PCU Set Lever	1-9-85
H081 3140	Spring - Transfer Screw	1-9-80
H081 3148	Spring - Belt - 550	1-9-3
H081 3149	Spring - Left Guide	1-9-24
H081 3161	Cover - Interlock SW	1-11-25
H081 3162	Ozone Duct	1-11-40
H081 3164	Ozone Filter	1-11-42
H081 3169	Ozone Filter Holder	1-11-41
H081 3172	Bias Terminal	1-9-50
H081 3172	Bias Terminal	1-11-51
H081 3173	Right Cover - Bias Terminal	1-11-48
H081 3174	Left Cover - Bias Terminal	1-9-53
H081 3179	Bracket - Right	1-11-49
H081 3180	Bracket - Stay - Right Side Plate	1-11-47
H081 3181	Cover - Development	1-11-52
H081 3182	Left Stay	1-9-61
H081 3183	Positioning Bracket	1-11-24
H081 3200	Left Side Plate	1-9-77
H081 3215	Shaft Drive Arm - PCU	1-9-66
H081 3216	Bushing - Fusing	1-9-72
H081 3217	Shaft - Drive Arm - Fusing	1-9-25
H081 3218	Drive Gear - Fusing - Z18	1-9-76
H081 3219	Drive Gear - Fusing - Z24	1-9-73
H081 3220	Fusing Drive Gear - Z20	1-9-30
H081 3221	Arm - Joint Gear - Fusing	1-9-71
H081 3224	Drive Gear - Fusing - Z25	1-9-26
H081 3225	Sub Side Plate - Driver Unit	1-9-43
H081 3226	CTM Drive Gear - Z15	1-9-32
H081 3227	Idle Gear - CTM	1-9-34
H081 3228	Idle Gear - Z28	1-9-28

PART NO.	DESCRIPTION	INDEX
H081 3229	CTM Drive Gear - Z16	1-9-78
H081 3230	Drive Gear - Z75	1-9-31
H081 3231	Driver Gear - Z88	1-9-44
H081 3232	Sector Gear - Z55	1-9-45
H081 3233	Timing Pulley - PCU - P36	1-9-36
H081 3240	Bracket - CTM Motor	1-9-1
H081 3243	Drive Shaft Ass'y	1-9-29
H081 3245	Bracket - Drive Gear Ass'y	1-9-46
H081 3250	Left Guide Rail - CTM	1-9-75
H081 3251	CTM Sensor Lever	1-9-83
H081 3252	Ground Plate - CTM	1-9-2
H081 3253	Bracket - CTM Sensor	1-9-82
H081 3254	Bushing - CTM	1-9-79
H081 3256	Tightener Roller	1-9-6
H081 3257	Tightener Bracket	1-9-4
H081 3260	Development Bias Bushing	1-9-48
H081 3261	Development Bias Terminal	1-9-49
H081 3262	Bushing - M6	1-9-33
H081 3265	Timing Belt - S3M-366	1-9-27
H081 3274	Joint Shaft - Development Unit	1-9-39
H081 3275	Timing Pulley - Joint - Development	1-9-38
H081 3277	Development Drive Gear	1-9-40
H081 3283	Drive Gear - Master Unit : Roller	1-9-68
H081 3284	Drive Gear - Master Unit	1-9-69
H081 3286	Timing Pulley Holder	1-9-37
H081 3287	Joint Arm - Master Unit	1-9-67
H081 3290	Development Drive Shaft	1-9-42
H081 3292	Joint - Development Drive	1-9-65
H081 3293	Bushing - Development Drive	1-9-64
H081 3303	Paper Guide Plate	1-11-15
H081 3304	Bracket - Paper Feed Motor Ass'y	1-9-56
H081 3305	Rubber Foot	1-11-77
H081 3307	Timing Belt - Tension	1-9-35
H081 3315	Gear - 19/24	1-9-20

PART NO.	DESCRIPTION	INDEX
H081 3320	Transfer Roller	1-11-19
H081 3321	Registration Roller	1-11-59
H081 3325	Sensor Bracket	1-11-69
H081 3326	Actuator - Paper End Sensor	1-11-5
H081 3331	Cassette Cover	1-3-10
H081 3332	Fixing Plate - Cassette Cover	1-3-14
H081 3346	Pin - Paper End Actuator	1-11-6
H081 3347	Cassette Ground Plate	1-11-21
H081 3350	Cassette - B4	1-13-8
H081 3352	Cassette Bottom Plate	1-13-1
H081 3354	Pressure Spring - Cassette	1-13-2
H081 3357	Right Side Fence	1-13-9
H081 3361	Left Side Fence	1-13-3
H081 3364	End Fence	1-13-7
H081 3365	Magnet - Cassette Cover	1-13-5
H081 3366	Slider - Cassette	1-13-26
H081 3367	Slider Cover	1-13-27
H081 3368	Spring - Slider	1-13-25
H081 3369	Pressure Plate - End Fence	1-13-6
H081 3370	Transfer Pressure Roller	1-13-23
H081 3371	Shaft - Transfer Perssure Roller	1-13-21
H081 3372	Pressure Plate - Transfer Roller	1-13-22
H081 3376	Guide Plate - Transfer Roller	1-13-15
H081 3377	Registration Pressure Roller	1-13-13
H081 3378	Shaft - Regist. Pressure Roller	1-13-12
H081 3379	Holder - Registration Spring	1-13-11
H081 3381	Registration Spring	1-13-10
H081 3387	Paper Size Detector Pin - A4	1-13-28
H081 3390	Paper Size Detector Pin - A5	1-13-28
H081 3394	Pressure Roller - Registration	1-13-29
H081 3395	Cassette Retaining Shaft	1-13-19
H081 3397	Pressure Plate - Cassette Ret.Shaft	1-13-20
H081 3399	Fixing Plate - Left:Front	1-11-11
H081 3400	Fixing Plate - Left:Rear	1-11-10

PART NO.	DESCRIPTION	INDEX
H081 3407	Snap Ring - M2.5	1-11-14
H081 3409	Standard Pin	1-11-78
H081 3416	Paper Feed Roller - A4	1-11-11
H081 3417	Bracket - Gear - 19/24	1-9-23
H081 3419	Fixing Plate - Right:Front	1-11-20
H081 3421	Fixing Plate - Right:Rear	1-11-8
H081 3450	Cassette Guide Rail - Right	1-11-2
H081 3451	Cassette Guide Rail - Left	1-11-1
H081 3487	Barcket - Tension Roller	1-9-51
H081 3489	Tension Roller	1-9-52
H081 3520	Film - Regist Guide Plate - Middle	1-13-18
H081 3521	Film - Regist Guide Plate - Side	1-13-17
H081 3523	Ground Plate	1-11-46
H081 3526	Registration Guide Plate	1-13-16
H081 3528	FCU Bracket	1-5-50
H081 3538	Spring	1-9-55
H081 3541	Snap Ring - Paper Feed	1-11-17
H081 3543	Pulley/Gear - 35/24	1-9-21
H081 3544	Stay - Base	1-11-80
H081 3553	Pulley 35	1-11-71
H081 3558	Connector - Cover	1-11-82
H081 3561	Standard Pin - Stay	1-11-79
H081 3584	Bracket - Right Cover	1-11-7
H081 3585	Bracket - Left Cover	1-9-16
H081 3587	Stopper - Left Cassette	1-11-84
H081 3588	Stopper - Right Cassette	1-11-76
H081 3589	Shaft - Paper Feed Roller	1-11-13
H0813940	Paper Size Detection Pin - F	1-9-28
H0813941	Paper Size Detection Pin - F4	1-9-28
H081 4100	Document Table Ass'y	1-3-18
H081 4101	Document Table	1-3-22
H081 4102	Right Document Guide	1-3-20
H081 4103	Left Document Guide	1-3-19
H081 4105	Lower Document Table	1-3-26

PART NO.	DESCRIPTION	INDEX
H081 4106	Document Guide Rack	1-3-23
H081 4107	Seal - Document Guide	1-3-21
H081 4109	Sub Document Tray - 1	1-3-36
H081 4110	Sub Document Tray - 2	1-3-37
H081 4111	Front Cover	1-3-30
H081 4113	Left Cover	1-3-16
H081 4115	Rear Cover	1-3-8
H081 4118	Cover - Option	1-3-6
H081 4120	Copy Tray	1-3-39
H081 4121	Sub Copy Tray	1-3-40
H081 4122	Document Tray	1-3-9
H081 4124	Mylar - Document Table	1-3-29
H081 4132	Speaker Bracket	1-9-12
H081 4135	Front Cover Bracket	1-3-31
H081 4139	Handset Holder	1-3-4
H081 4140	Bracket Handset Holder	1-3-2
H081 4141	Screw - Handset	1-3-5
H081 4141	Screw - Handset	1-11-83
H081 4143	NCU Cover	1-3-17
H081 4147	Connector Cover	1-3-7
H081 4151	Lower Bracket - Handset Holder	1-3-3
H081 4154	Rubber Cap - M3	1-3-42
H081 4158	Left Spring Plate - CTM	1-3-28
H081 4159	Right Spring Plate - CTM	1-3-27
H081 4167	Cover Sheet - Speed Dial	1-5-1
H081 4178	Sub Document Tray Ass'y	1-3-38
H081 4179	Copy Tray Ass'y	1-3-41
H081 4182	Right Cover Ass'y	1-3-12
H081 4183	Decal - ADF Open	1-3-13
H081 4258	Quick Dial List : NA	1-5-2
H081 4289	Op-Port Ass'y : FAX3000L	1-3-11
H081 4297	Decal - Paper Set	1-13-14
H081 4662	Operator's Manual	1-3-*
H081 5000	Xenon Lamp	1-5-80

PART NO.	DESCRIPTION	INDEX
H081 5001	Document Sensor Ass'y	1-5-8
H081 5005	Stamper	1-5-129
H081 5006	Xenon Lamp Stabilizer	1-5-66
H081 5007	Scanner Motor	1-5-106
H081 5011	Hexagonal Mirror Motor	1-5-46
H081 5013	Paper Feed Motor	1-9-59
H081 5014	Registration Sensor	1-11-61
H081 5015	Spring Clutch - Paper Feed	1-9-17
H081 5023	Zener Diode - 720V - 0.5W : NA	1-11-65
H081 5030	Power Pack	1-7-86
H081 5031	Harness - Thermostat	1-7-49
H081 5032	Transfer Harness - Fusing Heater	1-7-102
H081 5033	Sensor - Copy Out Cover	1-7-108
H081 5034	Transfer Charge Harness	1-7-62
H081 5036	CTM Motor	1-9-19
H081 5038	Ozone Fan	1-11-43
H081 5040	Ground Wire - ADF	1-5-21
H081 5041	Ground Wire - Guide	1-5-24
H081 5043	Interlock Switch - LD	1-11-44
H081 5061	Fusing Lamp - 230V	1-7-73
H081 5077	Main Motor	1-9-7
H081 5506	Harness - Paper Size Sensor	1-9-58
H081 5508	Harness - Thermistor	1-9-63
H081 5510	Harness - Hexagonal Mirror Motor	1-5-45
H081 5511	Harness - NCU	1-9-11
H081 5514	Harness - Driver	1-5-139
H081 5515	Harness - FCU	1-11-74
H081 5518	Harness - Op-Port	1-5-10
H081 5519	Harness - SBU	1-5-30
H081 5520	Harness - Speaker	1-9-14
H081 5523	Harness - Interlock Switch - 24V	1-11-34
H081 5526	Harness - Interlock Switch - 5V	1-11-33
H081 5527	Harness - Toner End Sensor/ PSU 5V	1-11-32
H081 5528	Harness - CTM/SIF/Thermistor	1-7-95

PART NO.	DESCRIPTION	INDEX
H081 5528	Harness - CTM/SIF/Thermistor	1-9-60
H081 5529	Harness - P.F/Motor/P.Pack/SIF 24	1-9-8
H081 5529	Harness - P.F/M.Motor/P.Pack/SIF 24	1-11-81
H081 5531	Transfer Harness - Thermistor	1-7-85
H081 5532	Transfer Harness - Copy Out Sensor	1-9-62
H081 5533	Harness - LDDR	1-11-67
H081 5535	Ground Wire - PSU	1-11-73
H081 5603	PSU Ass'y - 230V	1-11-72
H081 6009	PCB - Op-Port	1-5-3
H081 6010	PCB - SBU	1-5-31
H081 6022	PCB - FCU	1-5-49
H081 6027	PCB - MBU	1-5-48
H081 6040	PCB - NCU	1-9-9
H081 9501	Transfer Corona Wire	1-7-63

PART NO.	DESCRIPTION	INDEX
AA14 3287	Stepped Screw - M3	1-5-13
AW02 0021	Photointerruptor	1-7-89
AW02 0021	Photointerruptor	1-9-81
AW02 0021	Photointerruptor	1-11-31
AW50 0010	Push Switch	1-9-57
G003 6773	Retaning Ring	1-7-56
H001 4221	Harness Clamper	1-5-18
H004 1131	Speaker Holder	1-9-15
H004 5206	Monitor Speaker	1-9-13
H006 2135	Bushing - M4x6	1-7-58
H006 2316	Spacer - Pick-up Clutch	1-5-84
H006 2383	Snap Ring	1-13-24
H006 3533	Snap Ring	1-7-15
H008 4560	Plate Spring - Pinion	1-3-24
H012 1181	Bushing - M6	1-9-22
H020 3623	Snap Ring - Registration Roller	1-9-18
H020 3623	Snap Ring - Registration Roller	1-11-12
H041 1101	Lens - 6/30 - 24	1-5-34
H053 1600	Bushing - M6 : Cufe	1-5-140
H082 3300	Base - Paper Feed	1-11-9
H082 3414	Right FCU Holder	1-11-4
H082 3413	Left FCU Holder	1-11-3
5203 2060	Corona Wire Screw - M3x4	1-7-64
5203 3105	Nylon Rivet	1-7-25
5413 1882	Stepped Screw	1-9-5
5413 1882	Stepped Screw	1-11-39
5419 5714	Stepped Screw - M4	1-7-38
5447 2681	Snap Ring	1-5-26
5447 2681	Snap Ring	1-7-7
5447 2768	Stepped Screw - M3	1-9-54
5466 3198	Washer - SBU	1-5-32
5474 1307	Gear - ADF Tray	1-3-25

PART NO.	DESCRIPTION	INDEX
0252 0080B	Screw - M2x8	200
0313 0060B	Philips Pan Head Screw - M3x6	201
0313 0140B	Philips Pan Head Screw - M3x14	203
0313 0200B	Philips Pan Head Screw - M3x20	202
0314 0060B	Philips Pan Head Screw - M4x6	204
0323 0060B	Philips Sunk Screw - M3x6	205
0353 0060B	Philips Truss Head Screw M3x6	206
0353 0060Z	Philips Truss Head Screw - M3x8	207
0433 0062B	Tapping Pan Head Screw - M3x6	208
0433 0082B	Tapping Pan Head Screw - M3x8	209
0443 0060W	Tapping Screw - M3x6	241
0573 0040E	Hexagon Headless Set Screw - M3x4	210
0573 0060E	Hexagon Headless Set Screw - M3x6	211
0701 0060E	Washer - M6	212
0720 0020E	Retaining Ring - M2	213
0720 0030E	Retaining Ring - M3	214
0720 0040E	Retaining Ring - M4	215
0720 0050E	Retaining Ring - M5	216
0802 5205B	Tapping Screw M3x6	217
0802 5206B	Tapping Screw M3x8	218
0950 3008B	Philips Screw with Lock Washer - M3x8	220
0950 3030B	Philips Screw with Lock Washer - M3x30	219
0951 3005B	Philips Screw with Flat Washer M3x5	221
0951 3006B	Philips Screw with Flat Washer - M3x6	222
0954 3006B	Double Sems Screw - M4x8	224
0954 3008B	Double Sems Screw - M3x8	223
0964 3006B	Tapping Screw - M3x6	225
0964 3006Z	Tapping Screw - M3x6	240
0965 3006B	Tapping Screw with Flat Washer M3x6	226
0965 3008B	Tapping Screw with Washer - M3x8	229
0965 3010B	Tapping Screw with Flat Washer M3x10	227
0965 3012B	Tapping Screw with Flat Washer M3x12	228
1102 4431	Connector - Sub Harness	242
1102 4473	CT Connector - 2P	232

PART NO.	DESCRIPTION	INDEX
1102 4473	CT Connector - 2P	243
1102 4559	Connector - 3P	244
1102 4560	CT Connector 6P	245
1102 5071	Connector - 9P	230
1102 5142	Connector - 2P - Black	246
1102 5145	Connector - 3P - Blue	247
1102 5194	Connector - 7P	231
1105 0113	Edge Saddle - EDS2	233
1105 0234	Clamp	234
1105 0246	Spacer	235
1105 0260	Wire Saddle	237
1105 0344	Clamp	236
1150 0024	Power Supply Cord	1-3-1
5053 0223	Bushing - 8mm	238
5053 0447	Bushing - 6mm	239

PART NO.	DESCRIPTION	INDEX