



PARTS CATALOG

FOR

RICOH FAX 3000L/3200L

[CS0]

RICOH COMPANY, LTD.

1		First edition

PARTS CATALOG

INTRODUCTION

This chapter instructs you the numbers and names of this parts on this machine.


INDEX to PARTS CATALOG

Section 1. Part Location and List

1. Exterior	1-2
2. ADF, Scanner	1- 4
3. Fusing, Development	1-6
4. Drive Area	1-8
5. Base	1-10
6. Cassette	1-12

Section 2. Parts index	2-1
----------------------------------	-----


1. EXTERIOR

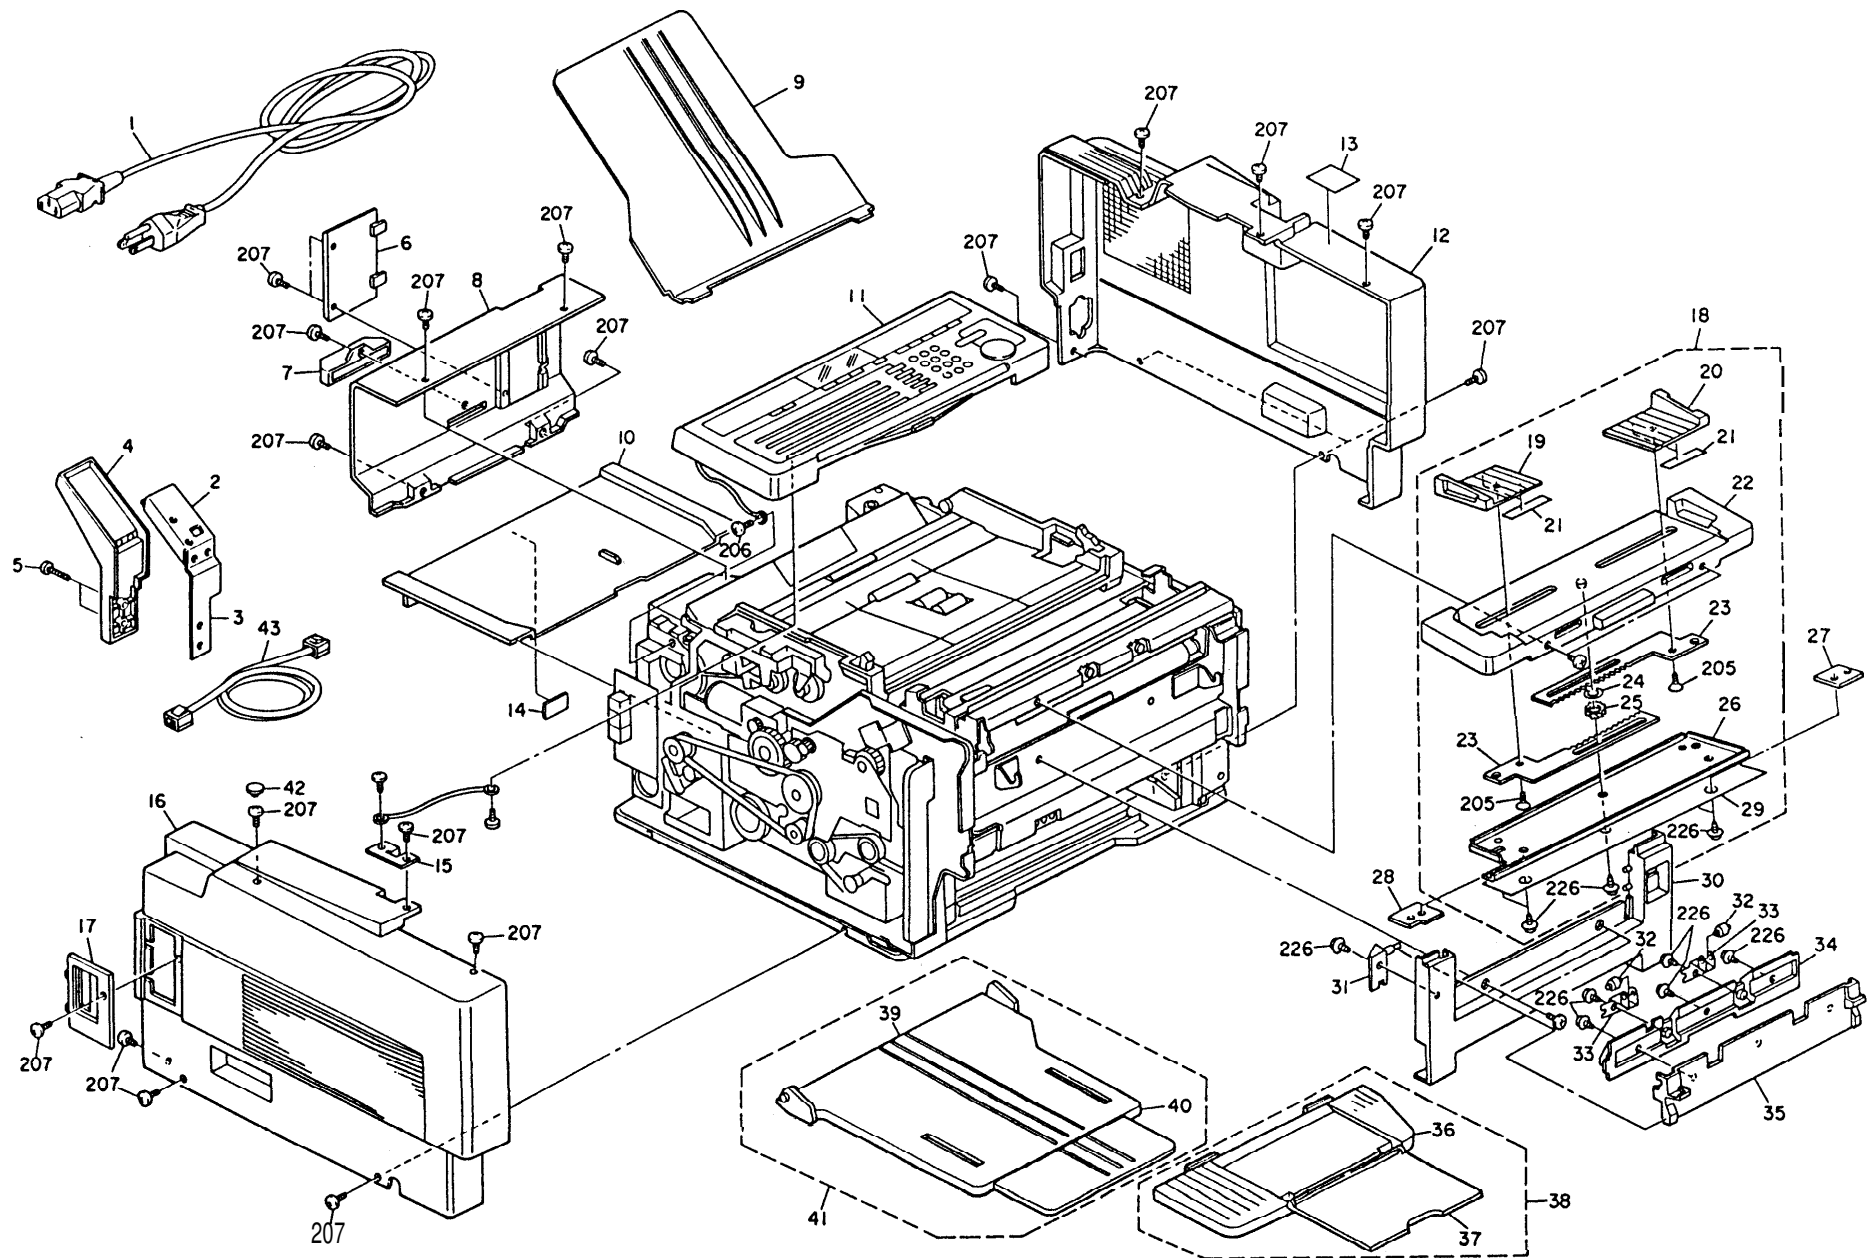

1. EXTERIOR

INDEX	PART NO.	DESCRIPTION	MODEL	INDEX	PART NO.	DESCRIPTION	MODEL
	* H084 4320	Facsimile Featurs Manual		34	H081 2129	Lower Exit Guide Plate	
	* H081 4661	Operator's Manual		35	H081 2156	Paper Exit Cover	
1	H081 5540	Power Supply Cord		36	H081 4109	Sub Document Tray -1	
2	H081 4140	Bracket Handset Holder		37	H081 4110	Sub Document Tray -2	
3	H081 4151	Lower Bracket - Handset Holder		38	H081 4178	Sub Document Tray Ass'y	
4	H081 4139	Handset Holder		39	H081 4120	Copy Tray	
5	H081 4141	Screw - Handset		40	H081 4121	Sub Copy Tray	
6	H081 4118	Cover - Option		41	H081 4179	Copy Tray Ass'y	
7	H081 4147	Connector Cover		42	H081 4154	Rubber Cap - M3	
8	H081 4115	Rear Cover		43	H081 5700	Modular Cord - 6P/6P	
9	H081 4122	Document Tray					
10	H081 3331	Cassette Cover					
11	H081 4250	Op-Port Ass'y : FAX3000L					
11	H081 4292	Op-Port Ass'y : FAX3200L					
12	H081 4182	Right Cover Ass'y					
13	H081 4183	Decal - ADF Open					
14	H081 3332	Fixing Plate - Cassette Cover					
16	H081 4113	Left Cover					
17	H081 4117	NCU Cover					
18	H081 4100	Document Table Ass'y					
19	H081 4103	Left Document Guide					
20	H081 4102	Right Document Guide					
21	H081 4107	Seal - Document Guide					
22	H081 4101	Document Table					
23	H081 4106	Document Guide Rack					
24	H008 4560	Plate Spring - Pinion					
25	54741307	Gear - ADF Tray					
26	H081 4105	Lower Document Table					
27	H081 4159	Right Spring Plate - CTM					
28	H081 4158	Left Spring Plate - CTM					
29	H081 4124	Mylar - Document Table					
30	H081 4111	Front Cover					
31	H081 4135	Front Cover Bracket					
32	H081 2167	Lower Exit Roller					
33	H081 2151	Exit Roller Holder					

2. ADF, SCANNER

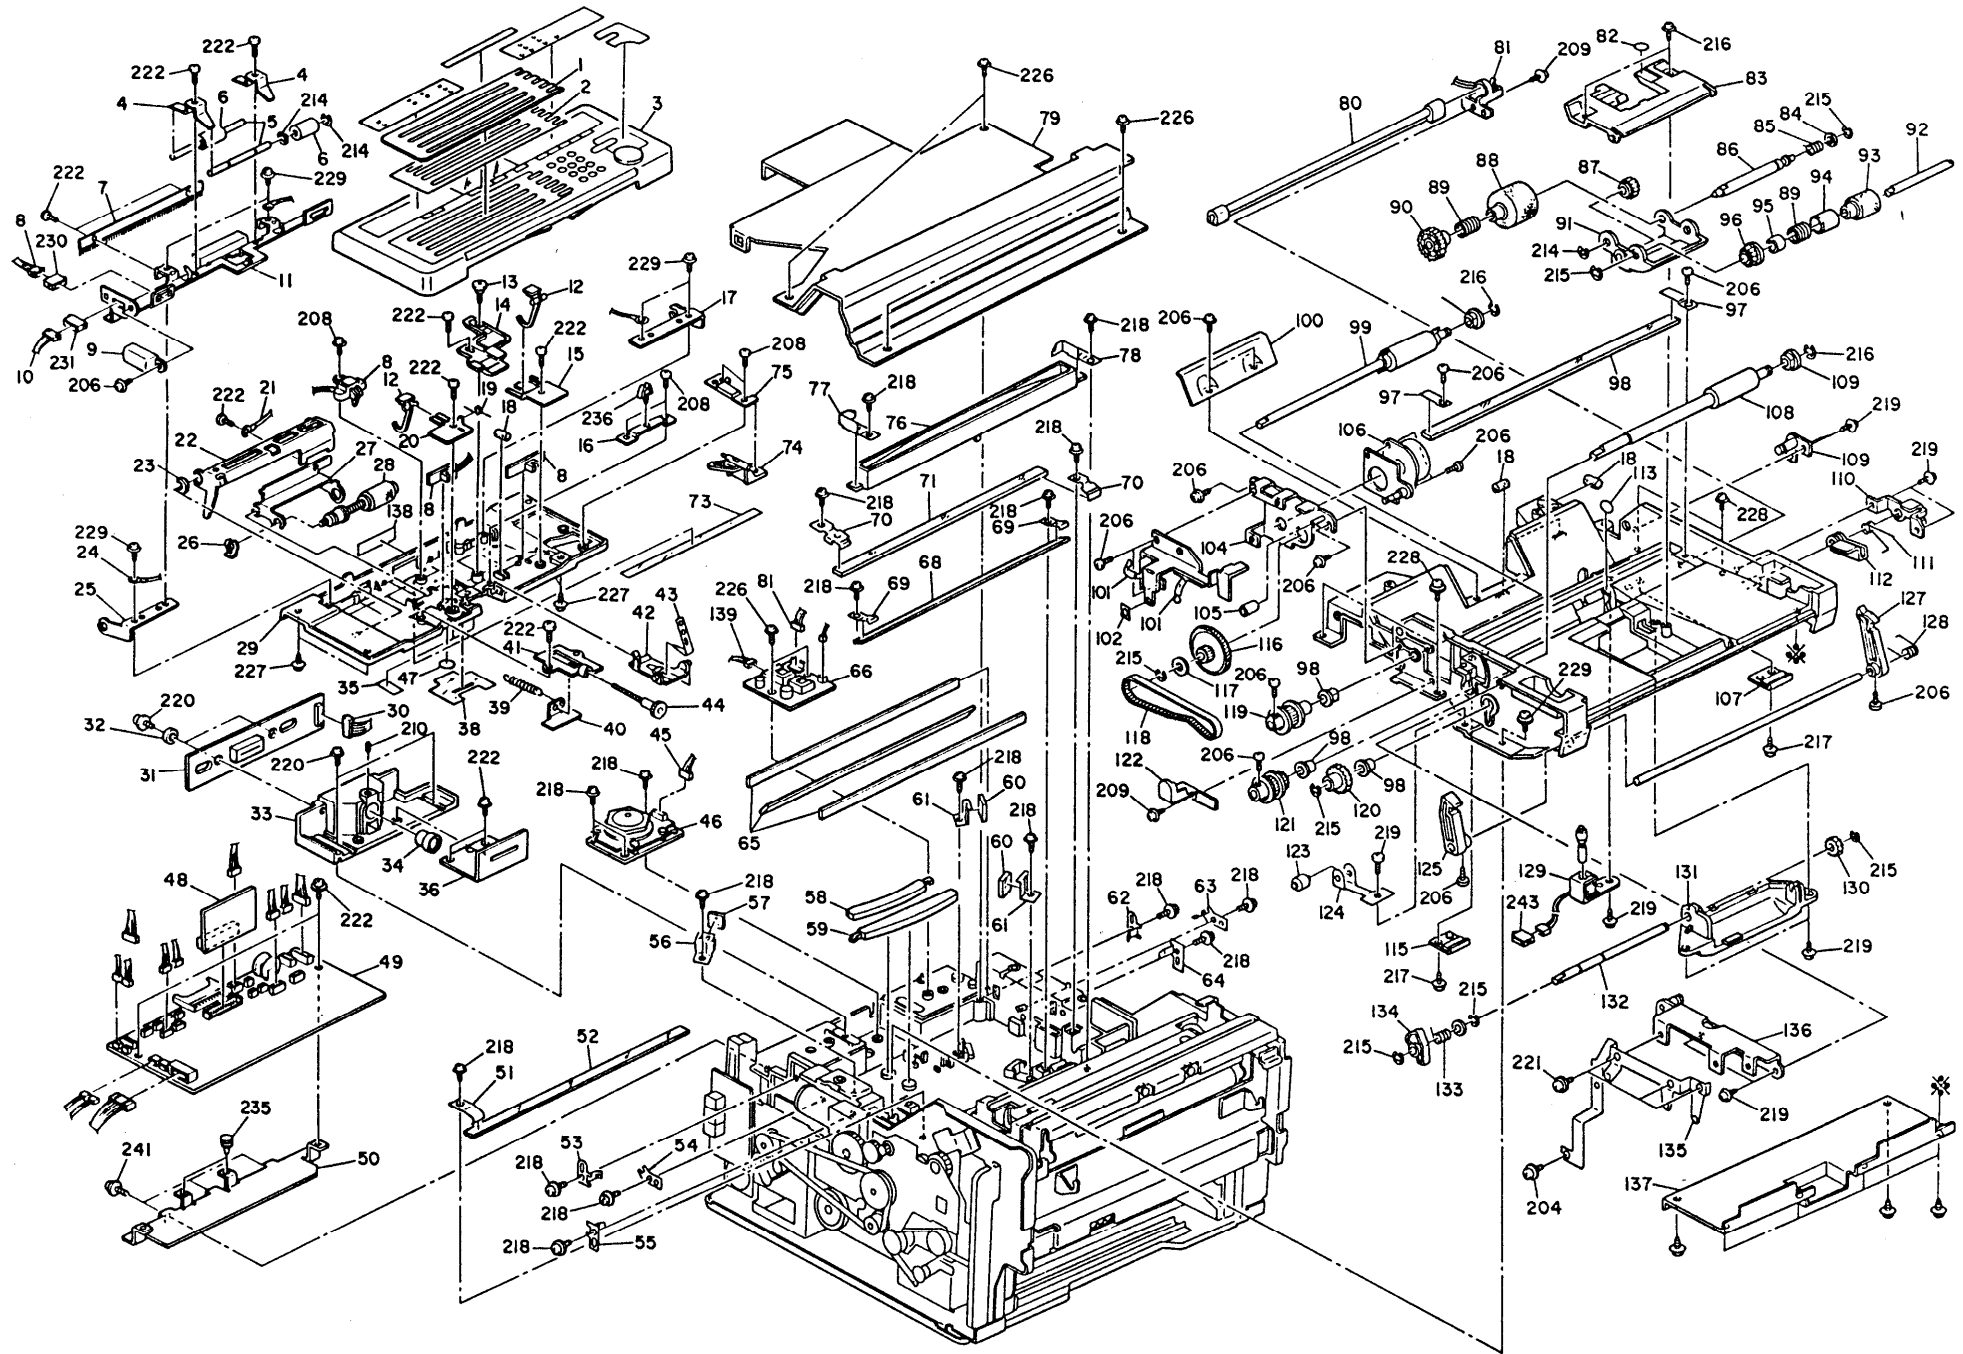

2. ADF, SCANNER


INDEX	PART NO.	DESCRIPTION	MODEL
1	H0814167	Cover Sheet - Speed Dial	
2	H0814258	Quick Dial List: NA	
3	H0816009	PCB - Op-Port	
4	H0811139	Pressure Spring Plate	
5	H0811138	Pressure Shaft	
6	H0811147	Pressure Roller Ass'y	
7	H0811119	Antistatic Brush - Scanner	
8	H0815001	Document Sensor Ass'y	
9	H0811115	ADF Harness Holder	
10	H0815518	Harness - Op-Port	
11	H0811141	ADF Stay Ass'y	
12	H0811123	S1 Actuator	
13	AAI4 3287	Stepped Screw - M3	
14	H0811131	MDF Button	
15	H0811124	Actuator Bracket	
16	H0811126	MDF Bracket	
17	H0811150	Right Fulcrum Bracket - ADF Ass'y	
18	H0014221	Harness Clamper	
19	H0811146	S1 Spring	
20	H0811136	S1 Bracket	
21	H0815040	Ground Wire - ADF	
22	H0811125	Shutter	
23	H0811128	Bushing - Shutter	
24	H0815041	Ground Wire - Guide	
25	H0811152	Left Fulcrum Bracket - ADF Ass'y	
26	5447 2681	Snap Ring	
27	H0811130	Separation Stay	
28	H0811105	Separation Roller Ass'y	
29	H0811101	Upper Document Guide	
30	H0815519	Harness - SBU	
31	H0816010	PCB - SBU	
32	5466 3198	Washer - SBU	
33	H0811050	Lens Holder	
34	H0411101	Lens - 6/30 -24	
35	H0811154	Seal - Gate	

INDEX	PART NO.	DESCRIPTION	MODEL
36	H0811060	Shading Plate	
37	H0811129	Shutter Guide	
38	H0811160	Mylar - ADF Separation	
39	H0811114	Separation Pressure Spring	
40	H0811133	Slider - Separation Torque Adjuster	
41	H0811132	Bracket-Separation Torque Adjuster	
42	H0811135	Pressure Plate - Pick-up	
43	H0811137	Spring Plate - Pressure Plate	
44	H0811134	Pin - Separation Torque Adjuster	
45	H0815510	Harness - Hexagonal Mirror Motor	
46	H0815011	Hexagonal Mirror Motor	
47	H0811157	Maintenance Decal - 1	
48	H0816026	PCB - MBU : USA	
49	H0816042	PCB - FCU : USA	
50	H0813528	FCU Bracket	
51	H0812523	Holder - Protection Glass	
52	H0812507	Dustproof Glass	
53	H0811056	2nd Mirror Holder - Left	
54	H0811930	1st Mirror Holder - Left	
55	H0811058	3rd Mirror Holder - Left	
56	H0812512	Holder - 1st Cylindrical Lens	
57	H0812501	Lens - CYL	
58	H0812502	F0 Lens - L1	
59	H0812503	F0 Lens - L2	
60	H0812508	1st Cylindrical Mirror	
61	H0812517	Holder - 2nd Cylindrical Mirror	
62	H0811057	2nd Mirror Holder - Right	
63	H0811931	1st Mirror Holder - Right	
64	H0811059	3rd Mirror Holder - Right	
65	H0811062	Scanner Mirror	
66	H0815006	Xenon Lamp Stabilizer	
68	H0812505	1st Mirror	
69	H0812515	Right Holder - 1st Mirror	
70	H0812518	Right Holder - 2nd Mirror	
71	H0812506	2nd Mirror	

INDEX	PART NO.	DESCRIPTION	MODEL
73	H081 1120	White Plate	                     
74	H081 1121	Button - ADF Open	
75	H081 1122	Bracket - ADF Open	
76	H081 2504	Lens - BTL	
77	H081 2514	Left Holder - BTL	
78	H081 2513	Right Holder - BTL	
79	H081 2552	Cover - Laser Unit	
80	H081 5000	Xenon Lamp	
81	H081 1053	Xenon Lamp Holder - Right	
82	H081 1158	Maintenance Decal -2	
83	H081 1022	Mainte. Cover - Pick-up Roller 1	
84	H006 2316	Spacer - Pick-up Clutch	
85	H081 1069	Torque Limitter - ADF Pick-up	
86	H081 1068	Feed Shaft	
87	H081 1046	Idler Gear - ADF Pick-up Roller	
88	H081 1030	ADF Feed Roller	
89	H081 1049	Spring Clutch - ADF Pick-up Roller	
90	H081 1045	Feed Gear	
91	H081 1066	ADF Pick-up Roller Bracket	
92	H081 1070	ADF Pick-up Roller Shaft	
93	H081 1031	ADF Pick-up Roller	
94	H081 1079	Collar - Spring Clutch	
95	H081 1048	Pick-up Roller Hub	
96	H081 1047	ADF Pick-up Roller Gear	
97	H081 1063	Exposure Glass Holder	
98	H081 1054	Exposure Glass Ass'y	
99	H081 1027	R2 Roller Ass'y	
100	H081 1094	Lens Cover	
101	H081 1089	Harness Clamp	
102	H081 1072	Induration Sheet: NCU	
103	H081 1091	Harness Guide Ass'y	
104	H081 1034	Tx Motor Cushion Ass'y	
105	H081 1042	Timing Belt - Idler 1	
106	H081 5007	Scanner Motor	
107	H081 1074	Sheet - Protection	

INDEX	PART NO.	DESCRIPTION	MODEL
108	H081 1026	R1 Roller	 
109	H081 1083	Right Fulcrum Bracket Ass'y	
110	H081 1087	Lift Lever Bracket	
111	H081 1088	Lift Lever Spring	
112	H081 1086	Lift Lever - ADF	
113	H081 1159	Maintenance Decal -3	
114	H081 1021	Lower Document Guide	
115	H081 1096	Sheet - Protection : 1	
116	H081 1032	Idler - Tx Motor	
117	H081 1024	Collar - Tx Motor	
118	H081 1025	Timing Belt - Tx Motor	
119	H081 1019	Timing Pulley - R2 Roller	
120	H081 1033	Idler - ADF Gear	
121	H081 1016	Timing Pulley - R1 Roller	
122	H081 1052	Xenon Lamp Holder - Left	
123	H081 1065	Timing Belt - Idler 2	
124	H081 1098	Idler 2 Holder	
125	H081 1076	Right Hook	
126	H081 1078	Shaft - Hook	
127	H081 1077	Left Hook	
128	H081 1073	Spring Hook	
129	H081 5005	Stamper	
130	H081 1041	Joint Idle Gear	
131	H081 1071	Idler Shaft Holder	
132	H081 1013	Idler Shaft	
133	H081 1015	Torque Limitter - Shutter	
134	H081 1014	Shutter Lever	
135	H081 1095	ADF Ground Plate - Lower	
136	H081 1080	Left Fulcrum Bracket Ass'y	
137	H081 1090	Dust Shield Sheet - Document Feed	
138	H081 1163	Stopper - S2 Sensor	
139	H081 5514	Harness - Driver	
140	H053 1600	Bushing - M6 : Cufe	

3. FUSING, DEVELOPMENT

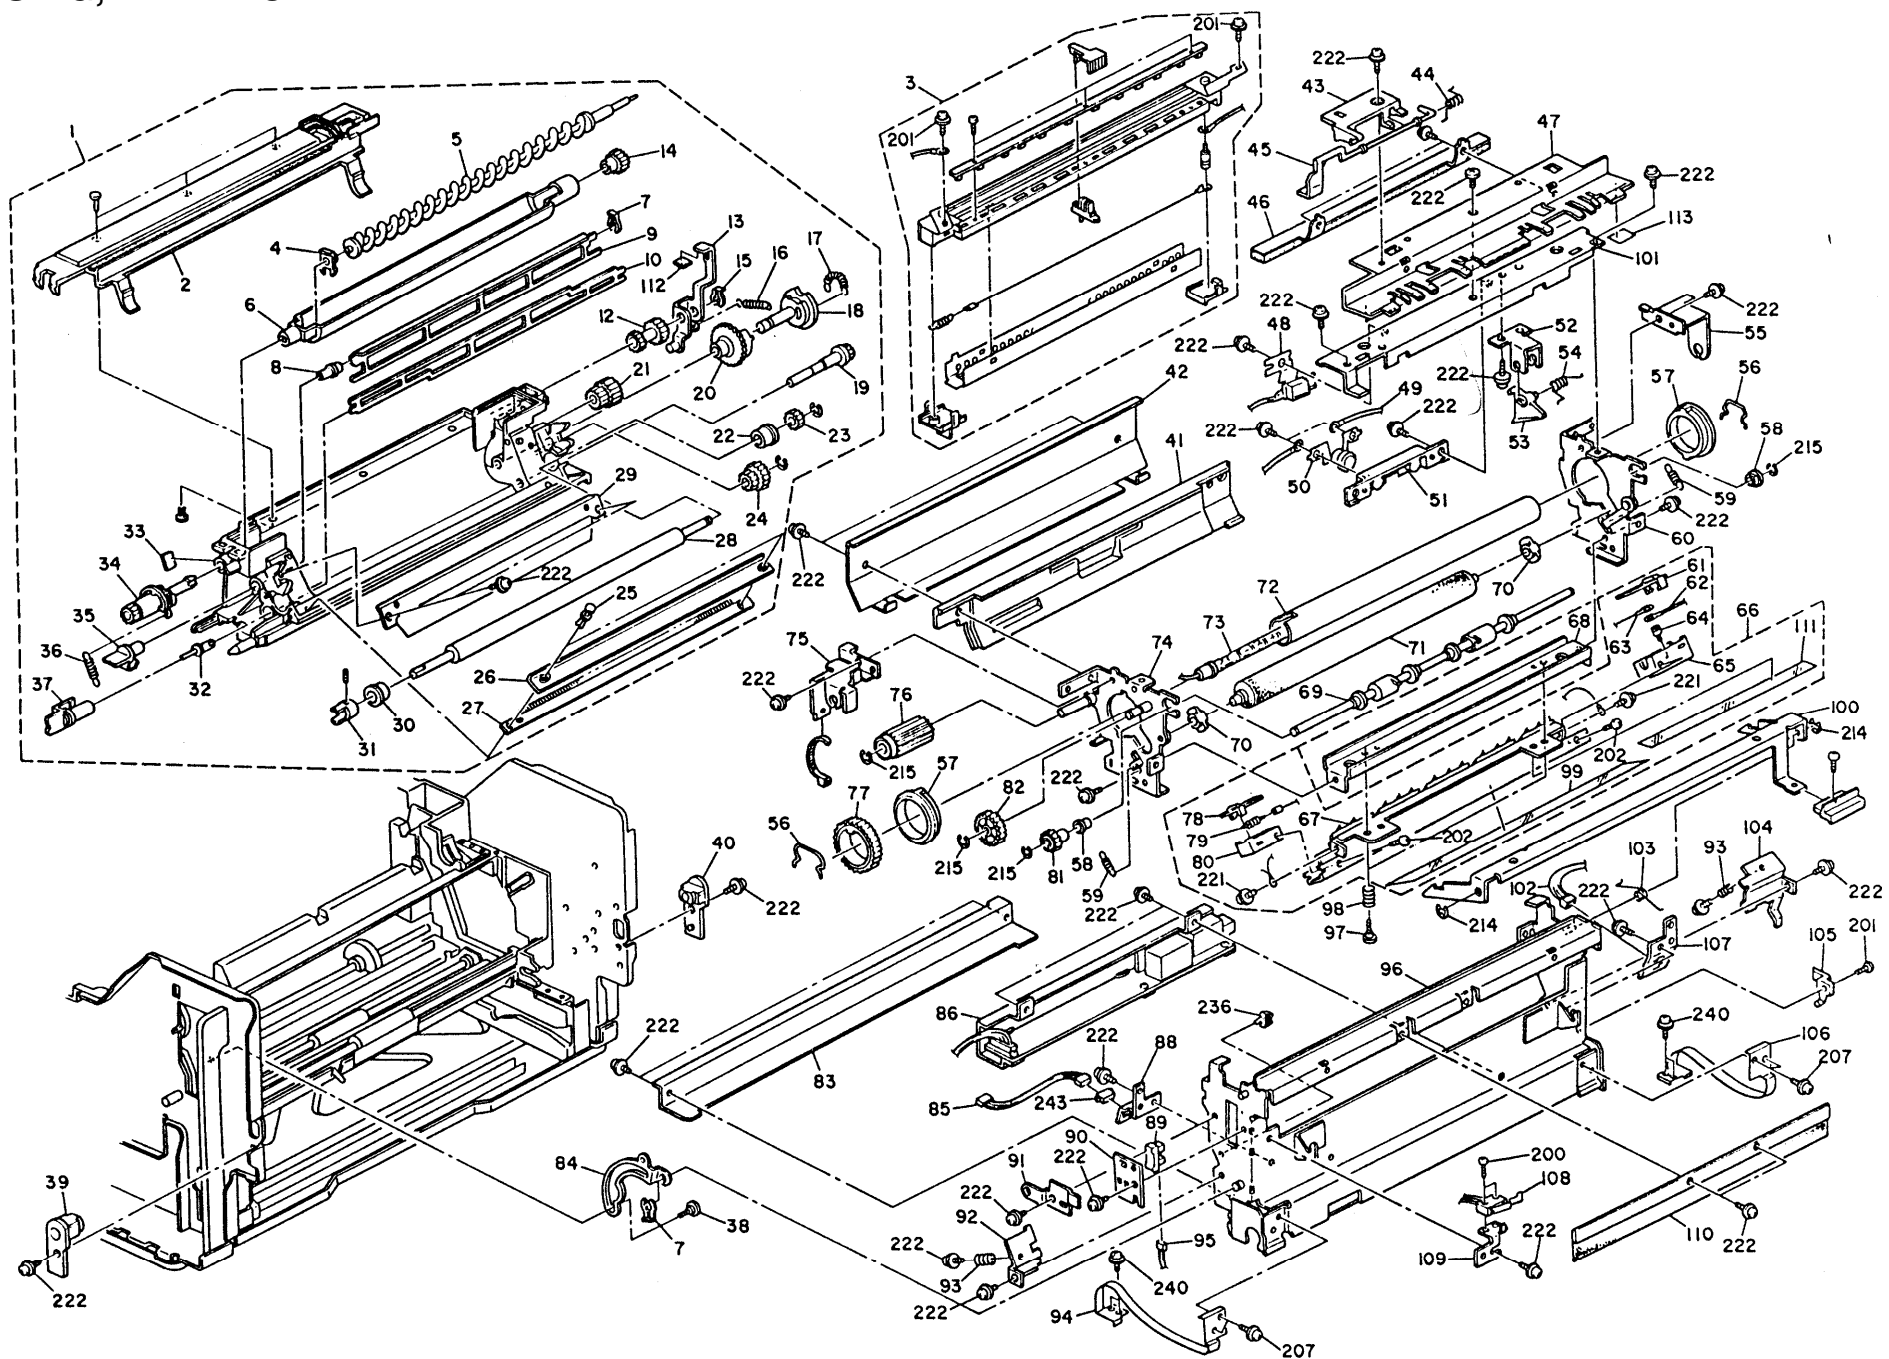

3. FUSING, DEVELOPMENT

INDEX	PART NO.	DESCRIPTION	MODEL
1	H081 2030	Development Unit	
2	H081 2412	Development Unit Cover	
3	H081 2870	Eraser Ass'y	
4	H081 2448	Snap Ring - Toner Transfer	
5	H081 2421	Toner Transfer - Developer	
6	H081 2420	Toner Tor	
7	5447 2681	Snap Ring	
8	H081 2438	Shaft - Agitator	
9	H081 2419	Agitator	
10	H081 2418	Toner Supplying Roller	
11	H081 2400	Hopper Ass'y	
12	H081 2435	Gear - Idler	
13	H081 2422	Lever - Toner End Detector	
14	H081 2436	Gear - Toner Transfer	
15	H006 3533	Snap Ring	
16	H081 2462	Spring - Toner End Lever	
17	H081 2434	Spring - Toner End Detector	
18	H081 2432	Disk - Toner End Detector	
19	H081 2427	Gear - Toner Supplying Roller	
20	H081 2431	Gear - Agitator	
21	H081 2430	Gear - Idler 2	
22	H081 2475	Bushing - Development Roller: M8	
23	H081 2459	Gear - Development Roller	
24	H081 2429	Gear - Idler 1	
25	5203 3105	Nylon Rivet	
26	H081 2458	Cover - Antistatic Brush	
27	H081 2447	Antistatic Brush - Develop. Roller	
28	H081 2410	Development Roller	
29	H081 2413	Development Blade	
30	H081 2478	Bushing - Development Roller: M6	
31	H081 2474	Joint - Development Roller	
32	H081 2451	Shaft - Toner Supplying Roller	
33	H081 2440	Stopper - Guide Gear	
34	H081 2437	Gear - Toner Guide	
35	H081 2463	Bushing - Agitator	

INDEX	PART NO.	DESCRIPTION	MODEL
36	H081 2495	Spring - Guide Gear	
37	H081 2460	Bushing - Toner Supply Roller	
38	5419 5714	Stepped Screw - M4	
39	H081 3116	Left Fulcrum Pin - Base	
40	H081 3115	Right Fulcrum Pin - Base	
41	H081 2124	Fusing Cover	
42	H081 2159	Partition Plate - Fusing	
43	H081 2163	Bushing - Actuator	
44	H081 2165	Spring - Feed-out Sensor	
45	H081 2122	Actuator - Copy Out Sensor	
46	H081 2145	Cleaning Pad	
47	H081 2174	Upper Exit Guide	
48	H081 2137	Thermistor	
49	H081 5031	Harness - Thermostat	
50	H081 2134	Thermostat Ass'y: E	
51	H081 2153	Thermostat Case	
52	H081 2144	Bracket - Fusing Stripper	
53	H081 2120	Fusing Stripper	
54	H081 2121	Stripper Spring	
55	H081 2133	Right Bracket - Fusing Lamp	
56	G003 6773	Retaining Ring, Fusing	
57	H081 2102	Bushing - Hot Roller	
58	H006 2135	Bushing - M4x6	
59	H081 2118	Pressure Spring	
60	H081 2105	Right Side Plate - Fusing	
61	H081 2917	Cover - Right End Block	
62	H081 5034	Transfer Charge Harness	
63	H081 9501	Transfer Corona Wire	
64	5203 2060	Corona Wire Screw - M3x4	
65	H081 2915	Right End Block	
66	H081 2061	Transfer Charger Unit	
67	H081 2921	Transfer Charger Housing	
68	H081 2116	Lower Fusing Stay	
69	H081 2132	Exit Roller	
70	H081 2103	Bushing - Pressure Roller	




INDEX	PART NO.	DESCRIPTION	MODEL
71	H0812101	Fusing Pressure Roller	
72	H0812100	Hot Roller	
73	H0815062	Fusing Lamp - 115V	
74	H0812109	Left Side Plate - Fusing	
75	H0812149	Left Bracket - Fusing Lamp	
76	H0812115	Idle Gear - Z16	
77	H0812104	Gear - Hot Roller	
78	H0812916	Cover - Left End Block	
79	H0812908	Spring - Transfer Charger	
80	H0812914	Left End Block	
81	H0812117	Exit Roller Gear	
82	H0812114	Idle Gear - Z23	
83	H0812263	Lower Stay - Side Plate - Copy Out	
84	H0812264	Stopper - Side Plate - Copy Out	
85	H0815531	Transfer Harness - Thermistor	
86	H0815030	Power Pack	
88	H0812281	Left Connector Bracket	
89	AW02 0021	Photointerruptor	
90	H0812291	Bracket - Photointerruptor	
91	H0812280	Gear Bracket	
92	H0812261	Left Inner Cover - Copy Out	
93	H0812273	Pressure Spring - Master Unit	
94	H0812259	Left Ground Plate - Copy Out	
95	H0815528	Harness - CTM/SIF/Thermistor	
96	H0812250	Side Plate - Copy Out	
97	H0812912	Stepped Screw - Transfer Charger	
98	H0812913	Pressure Spring - Transfer Charger	
99	H0812920	Seal - Transfer Charger	
100	H0812274	Stay - Copy Out	
101	H0812175	Stay - Upper Exit Guide	
102	H0815032	Transfer Harness - Fusing Heater	
103	H0812258	Spring - Copy Out Cover Open	
104	H0812262	Right Inner Cover - Copy Out	
105	H0812292	Guide - Inter Lock Switch	
106	H0812260	Right Ground Plate - Copy Out	



INDEX	PART NO.	DESCRIPTION	MODEL
107	H0812282	Right Connector Bracket	
108	H0815033	Sensor - Copy Out Cover	
109	H0812268	Sensor Bracket - Copy Out Cover	
110	H0812269	Antistatic Brush - Copy Out	
111	H0812922	Antistatic Cloth - Transfer Charger	
112	H0812457	Shield Plate - Toner End Lever	
113	H0812178	Seal - Fusing Guide Plate	

4. DRIVE AREA

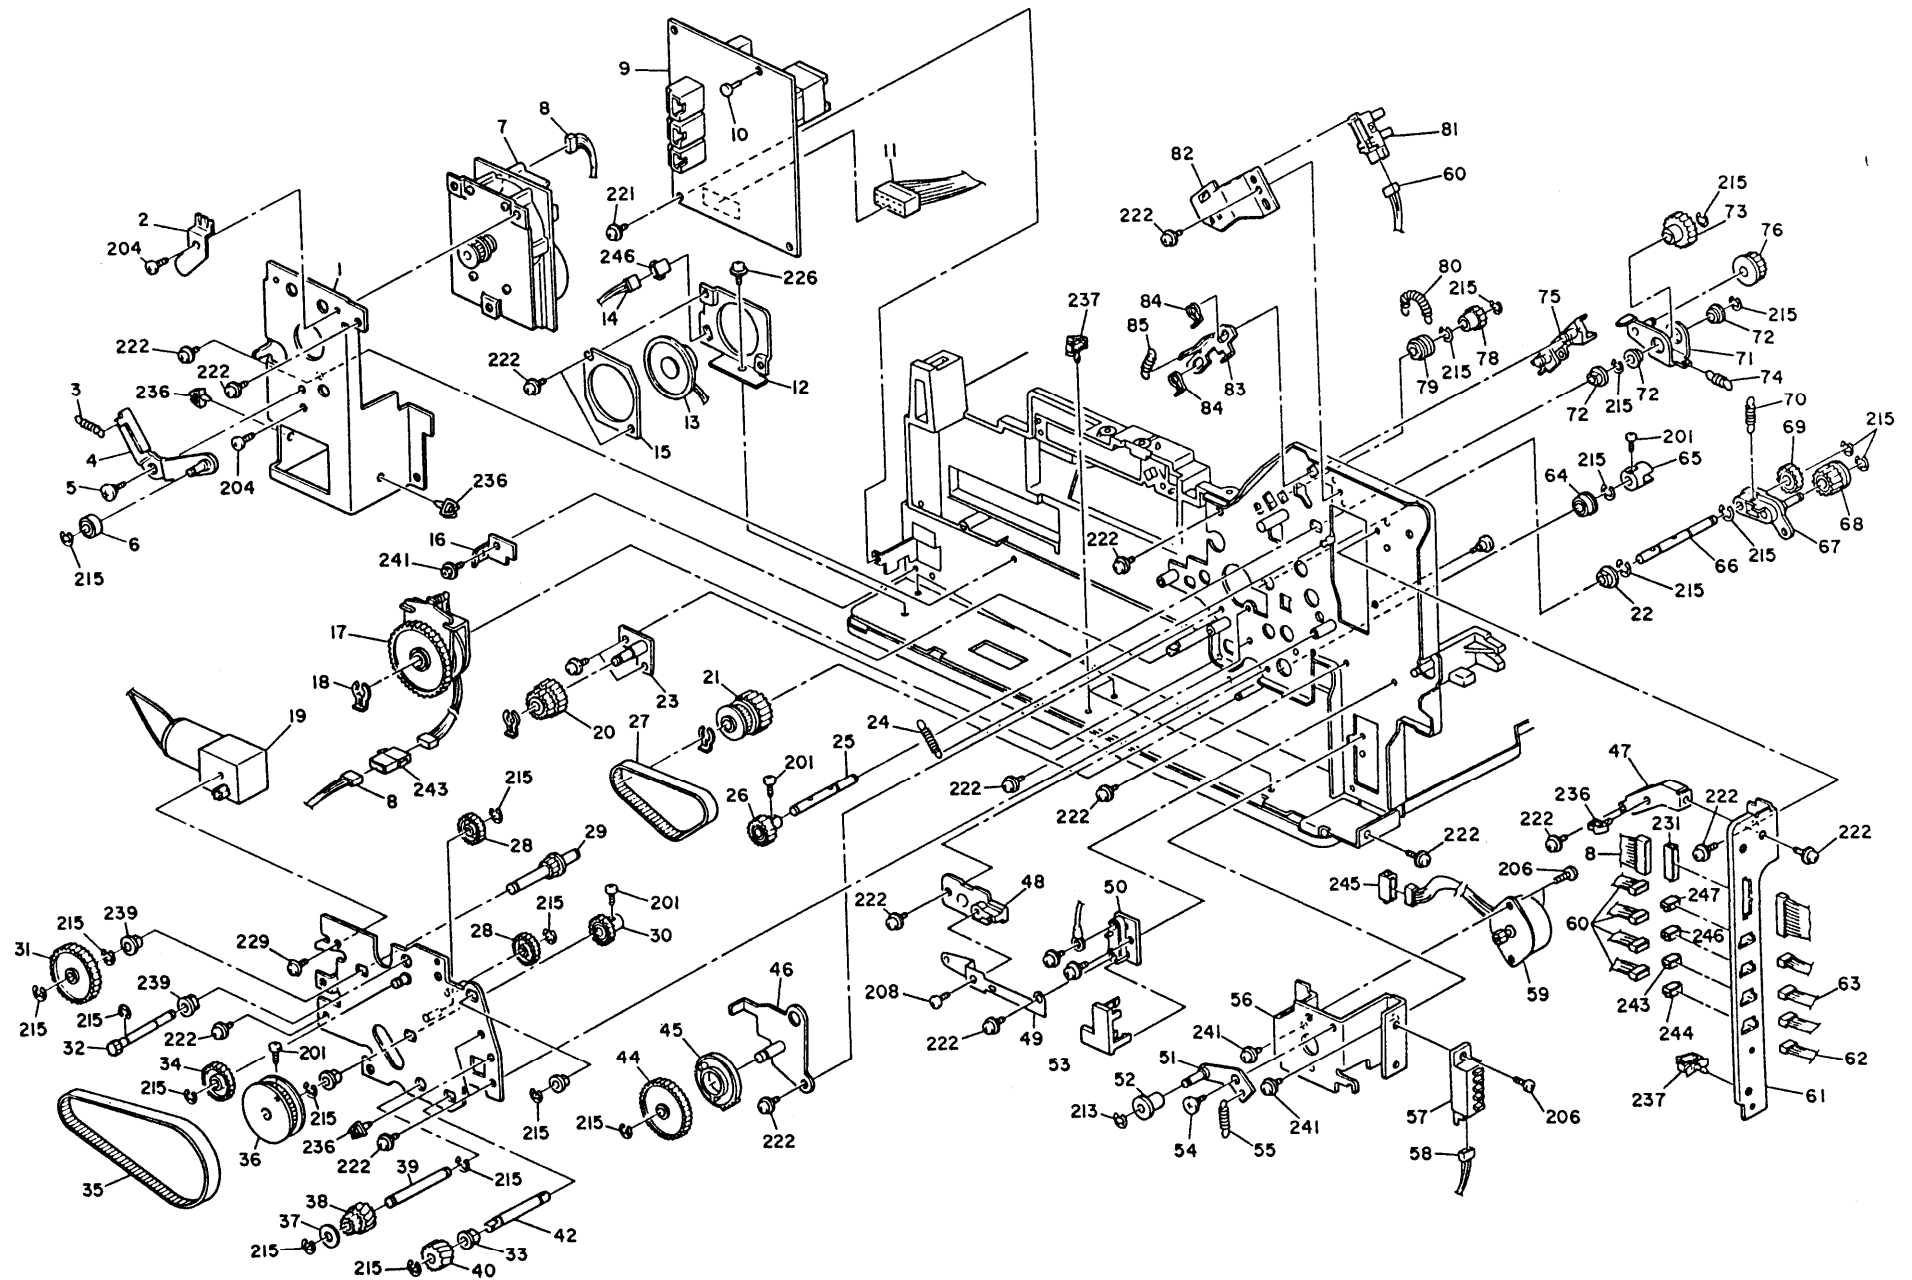

4. DRIVE AREA


INDEX	PART NO.	DESCRIPTION	MODEL		INDEX	PART NO.	DESCRIPTION	MODEL
1	H0813240	Bracket - CTM Motor			36	H0813233	Timing Pulley - PCU - P36	
2	H0813252	Ground Plate - CTM			37	H0813286	Timing Pulley Holder	
3	H0813148	Spring - Belt - 550			38	H0813275	Timing Pulley - Joint - Development	
4	H0813257	Tightener Bracket			39	H0813274	Joint Shaft - Development Unit	
5	5413 1882	Stepped Screw			40	H0813277	Development Drive Gear	
6	H0813256	Tightener Roller			42	H0813290	Development Drive Shaft	
7	H0815077	Main Motor			43	H0813225	Sub Side Plate - Driver Unit	
8	H0815529	Harness - P. F/M. Motor/P. Pack/SIF 24			44	H0813231	Driver Gear - Z88	
 9	H0816014	PCB - NCU : USA			45	H0813127	Spring - Sector Gear	
10	H0811044	Harness Clamp: P3055B			45	H0813232	Sector Gear - Z55	
11	H0815511	Harness - NCU			46	H0813245	Bracket - Drive Gear Ass'y	
12	H0814132	Speaker Bracket			47	H0813109	Stay - Left Side Plate	
13	H0045206	Monitor Speaker			48	H0813260	Development Bias Bushing	
14	H0815520	Harness - Speaker			49	H0813261	Development Bias Terminal	
15	H0041131	Speaker Holder			50	H0813172	Bias Terminal	
16	H0813585	Bracket - Left Cover			51	H0813487	Bracket - Tension Roller	
17	H0815015	Spring Clutch - Paper Feed			52	H0813489	Tension Roller	
18	H0203623	Snap Ring - Registration Roller			53	H0813174	Left Cover - Bias Terminal	
19	H0815036	CTM Motor			54	5447 2768	Stepped Screw - M3	
20	H0813315	Gear - 19/24			55	H0813538	Spring	
21	H0813543	Pulley/Gear - 35/24			56	H0813304	Bracket - Paper Feed Motor Ass'y	
 22	H0121181	Bushing - M6			57	AW50 0010	Push Switch	
23	H0813417	Bracket - Gear - 19/24			58	H0815506	Harness - Paper Size Sensor	
24	H0813149	Spring - Left Guide			59	H0815013	Paper Feed Motor	
25	H0813217	Shaft - Drive Arm - Fusing			60	H0815528	Harness - CTM/SIF/Thermistor	
26	H0813224	Drive Gear - Fusing - Z25			61	H0813182	Left Stay	
 27	H0813265	Timing Belt - S3M-366			62	H0815532	Transfer Harness - Copy Out Sensor	
28	H0813228	Idle Gear - Z28			63	H0815508	Harness - Thermistor	
 29	H0813243	Drive Shaft Ass'y			64	H0813293	Bushing - Development Drive	
30	H0813220	Fusing Drive Gear - Z20			65	H0813292	Joint - Development Drive	
31	H0813230	Drive Gear -275			66	H0813215	Shaft Drive Arm - PCU	
 32	H0813226	CTM Drive Gear - Z15			67	H0813287	Joint Arm - Master Unit	
33	H0813262	Bushing - M6			68	H0813283	Drive Gear - Master Unit: Roller	
34	H0813227	Idle Gear - CTM			69	H0813284	Drive Gear - Master Unit	
 35	H0813307	Timing Belt - Tension			70	H0813130	Joint Spring - Master Unit	



INDEX	PART NO.	DESCRIPTION	MODEL
71	H0813221	Arm - Joint Gear - Fusing	
72	H0813216	Bushing - Fusing	
73	H0813219	Drive Gear - Fusing -224	
74	H0813128	Joint Spring - Fusing	
75	H0813250	Left Guide Rail - CTM	
76	H0813218	Drive Gear - Fusing -218	
77	H0813200	Left Side Plate	
78	H0813229	CTM Drive Gear -216	
79	H0813254	Bushing - CTM	
80	H0813140	Spring - Transfer Screw	
81	AW02 0021	Photointerruptor	
82	H0813253	Bracket - CTM Sensor	
83	H0813251	CTM Sensor Lever	
84	H0813120	Snap Ring - CTM Guide	
85	H0813139	Spring - PCU Set Lever	

INDEX	PART NO.	DESCRIPTION	MODEL

5. BASE

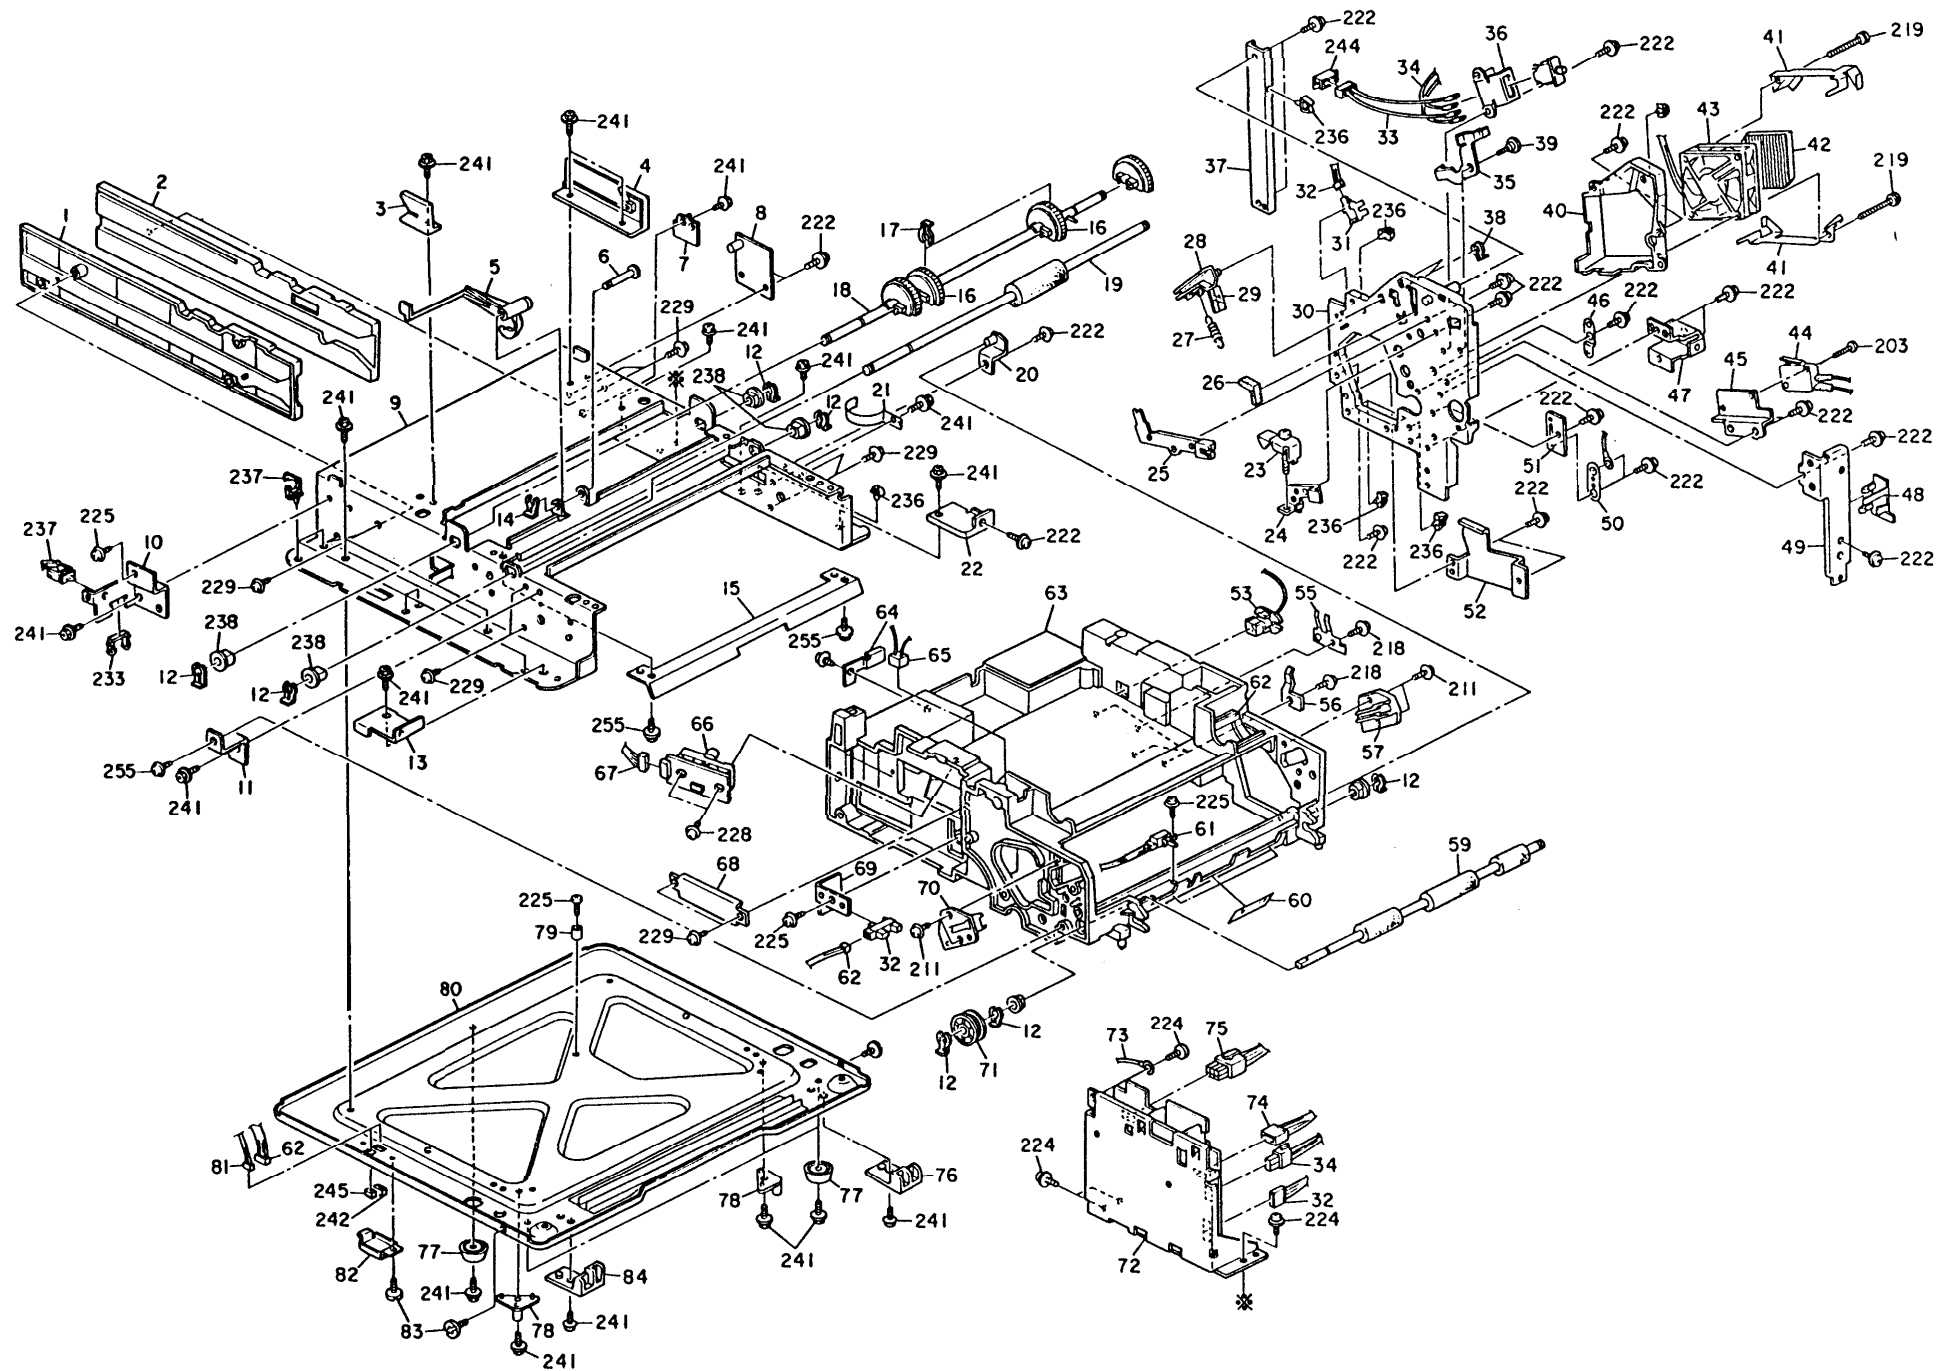

5. BASE

INDEX	PART NO.	DESCRIPTION	MODEL
1	H081 3451	Cassette Guide Rail - Left	
2	H081 3450	Cassette Guide Rail - Right	
3	H081 3413	Left FCU Holder	
4	H081 3412	Right FCU Holder	
5	H081 3326	Actuator - Paper End Sensor	
6	H081 3346	Pin - Paper End Actuator	
7	H081 3584	Bracket - Right Cover	
8	H081 3421	Fixing Plate - Right:Rear	
9	H081 3300	Base - Paper Feed	
10	H081 3400	Fixing Plate - Left:Rear	
11	H081 3399	Fixing Plate - Left:Front	
12	H020 3623	Snap Ring - Registration Roller	
13	H081 3126	Left Reinforce Bracket	
14	H081 3407	Snap Ring - M2.5	
15	H081 3303	Paper Guide Plate	
16	H081 3416	Paper Feed Roller - A4	
17	H081 3541	Snap Ring - Paper Feed	
18	H081 3589	Shaft - Paper Feed Roller	
19	H081 3320	Transfer Roller	
20	H081 3419	Fixing Plate - Right:Front	
21	H081 3347	Cassette Ground Plate	
22	H081 3125	Right Reinforce Bracket	
23	H081 2865	Master Unit Stopper	
24	H081 3183	Positioning Bracket	
25	H081 3161	Cover - Interlock SW	
26	H081 3122	Seal - Toner Duct	
27	H081 3131	Spring - Right Side Plate - 7'50	
28	H081 3113	CTM Guide Rail - Right	
29	H081 3123	CTM Guide	
30	H081 3100	Right Side Plate	
31	AW02 0021	Photointerruptor	
32	H081 5527	Harness - Toner End Sensor/ PSU 5V	
33	H081 5526	Harness - Interlock Switch - 5V	
34	H081 5523	Harness - Interlock Switch - 24V	
35	H081 3107	Lever - Interlock Switch	


INDEX	PART NO.	DESCRIPTION	MODEL
36	H081 3108	Bracket - Interlock Switch - 24V	
37	H081 3110	Stay - Right Side Plate	
38	H081 3120	Snap Ring - CTM Guide	
39	5413 1882	Stepped Screw	
40	H081 3162	Ozone Duct	
41	H081 3169	Ozone Filter Holder	
42	H081 3164	Ozone Filter	
43	H081 5038	Ozone Fan	
44	H081 5043	Interlock Switch - LD	
45	H081 3114	Bracket - Interlock Switch - LD	
46	H081 3523	Ground Plate	
47	H081 3180	Bracket - Stay - Right Side Plate	
48	H081 3173	Right Cover - Bias Terminal	
49	H081 3179	Bracket - Right	
50	H081 3121	Bias Terminal Plate-Develop./Charge	
51	H081 3172	Bias Terminal	
52	H081 3181	Cover - Development	
53	H081 2510	Holder - Cylindrical Lens Ass'y	
55	H081 2521	Holder - Cylindrical Detector	
56	H081 2556	Harness Holder	
57	H081 2553	Master Unit Guide - Right	
59	H081 3321	Registration Roller	
60	H081 2522	Film - Regist	
61	H081 5014	Registration Sensor	
62	H081 2408	CTM Duct	
63	H081 2551	Base - Laser Unit	
64	H081 2557	Holder - MBU	
65	H081 5024	Zener Diode - 720V - 0.5W: NA	
66	H081 2530	LD Unit	
67	H081 5533	Harness - LDDR	
68	H081 2524	LO Unit Cover	
69	H081 3325	Sensor Bracket	
70	H081 2554	Master Unit Guide - Left	
71	H081 3553	Pulley 35	
72	H081 5601	PSU Ass'y - 115V	



INDEX	PART NO.	DESCRIPTION	MODEL
73	H081 5535	Ground Wire - PSU	
74	H081 5515	Harness - FCU	
76	H081 3588	Stopper - Right Cassette	
77	H081 3305	Rubber Foot	
78	H081 3409	Standard Pin	
79	H081 3561	Standard Pin - Stay	
80	H081 3544	Stay - Base	
81	H081 5529	Harness - P. F/M. Motor/P. Pack/SIF 24	
82	H081 3558	Connector - Cover	
83	H081 4141	Screw - Handset	
84	H081 3587	Stopper - Left Cassette	

INDEX	PART NO.	DESCRIPTION	MODEL

6. CASSEITE

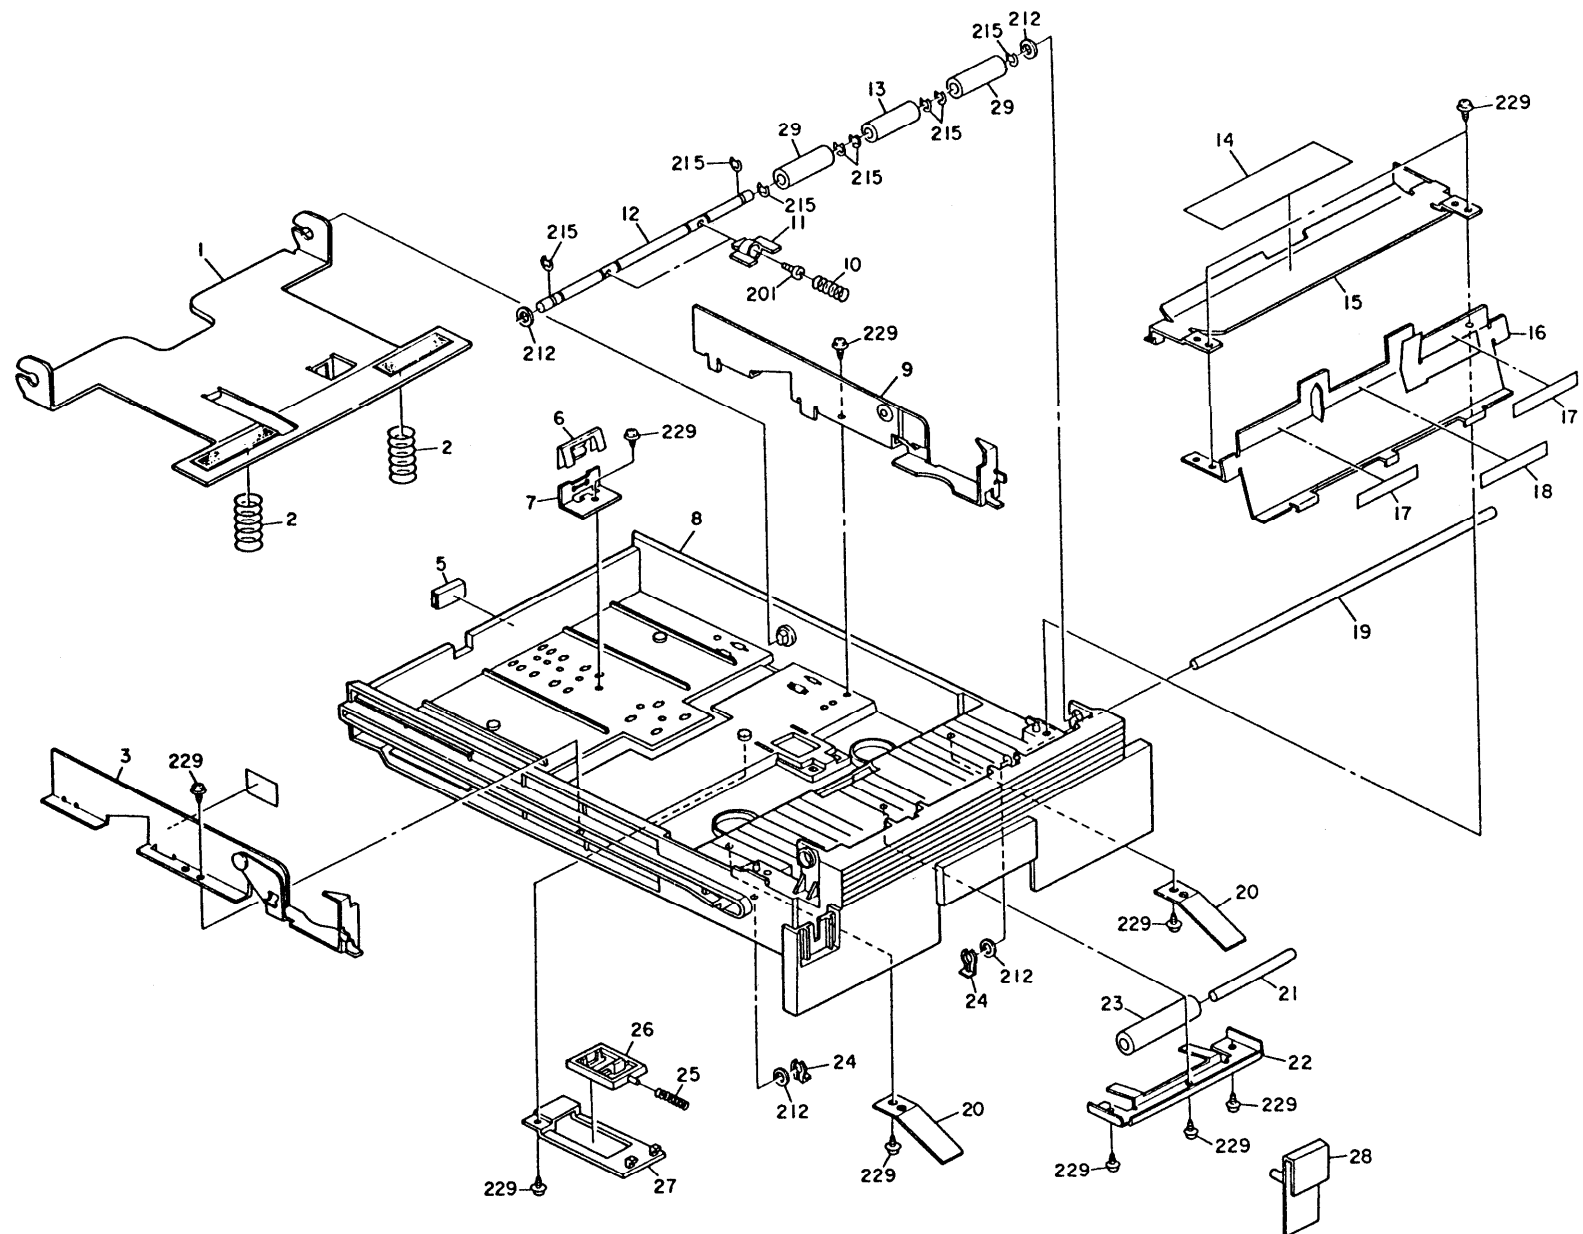

INDEX	PART NO.	DESCRIPTION	MODEL
200	0252 0080B	Screw - M2x8	
201	0313 0060B	Philips Pan Head Screw - M3x6	
202	0313 0200B	Philips Pan Head Screw - M3x20	
203	0313 0140B	Philips Pan Head Screw - M3x14	
204	0314 0060B	Philips Pan Head Screw - M4x6	
205	0323 0060B	Philips Sunk Screw - M3x6	
206	0353 0060B	Philips Truss Head Screw M3x6	
207	0353 0060Z	Philips Truss Head Screw - M3x6	
208	0433 0062B	Tapping Pan Head Screw - M3x6	
209	0433 0082B	Tapping Pan Head Screw - M3x8	
210	0573 0040E	Hexagon Headless Set Screw - M3x4	
211	0573 0060E	Hexagon Headless Set Screw - M3x6	
212	0701 0060E	Washer - M6	
213	0720 0020E	Retaining Ring - M2	
214	0720 0030E	Retaining Ring - M3	
215	0720 0040E	Retaining Ring - M4	
216	0720 0050E	Retaining Ring - M5	
217	0802 5205B	Tapping Screw M3x6	
218	0802 5206B	Tapping Screw M3x8	
219	0950 3030B	Philips Screw with Lock Washer - M3x30	
220	0950 3008B	Philips Screw with Lock Washer - M3x8	
221	0951 3005B	Philips Screw with Flat Washer M3x5	
222	0951 3006B	Philips Screw with Flat Washer - M3x6	
223	0954 3008B	Double Sems Screw - M3x8	
224	0954 3006B	Double Sems Screw - M4x8	
225	0964 3006B	Tapping Screw - M3x6	
226	0965 3006B	Tapping Screw with Flat Washer M3x6	
227	0965 3010B	Tapping Screw with Flat Washer M3x10	
228	0965 3012B	Tapping Screw with Flat Washer M3x12	
229	0965 3008B	Tapping Screw with Washer - M3x8	
230	1102 5071	Connector - 9P	
231	1102 5194	Connector - 7P	
232	1102 4473	CT Connector -2P	
233	1105 0113	Edge Saddle - EDS2	
234	1105 0234	Clamp	

INDEX	PART NO.	DESCRIPTION	MODEL
235	1105 0246	Spacer	
236	1105 0344	Clamp	
237	1105 0260	Wire Saddle	
238	5053 0223	Bushing - 8mm	
239	5053 0447	Bushing - 6mm	
240	0964 3006Z	Tapping Screw - M3x6	
241	0443 0060W	Tapping Screw - M3x6	
242	1102 4431	Connector - Sub Harness	
243	1102 4473	CT Connector -2P	
244	1102 4559	Connector - 3P	
245	1102 4560	CT Connector 6P	
246	1102 5142	Connector - 2P - Black	
247	1102 5145	Connector - 3P - Blue	

PARTS INDEX

PART NO.	DESCRIPTION	PAGE AND INDEX NO.
H081 1013	Idler Shaft	1-5-132
H081 1014	Shutter Lever	1-5-134
H081 1015	Torque Limiter - Shutter	1-5-133
H081 1016	Timing Pulley-R1 Roller	1-5-121
H081 1019	Timing Pulley - R2 Roller	1-5-119
H081 1021	Lower Document Guide	1-5-114
H081 1022	Mainte. Cover - Pick-up Roller 1	1-5- 83
H081 1024	Collar - Tx Motor	1-5-117
H081 1025	Timing Belt - Tx Motor	1-5-118
H081 1026	R1 Roller	1-5-108
H081 1027	R2 Roller Ass'y	1-5- 99
H081 1030	ADF Feed Roller	1-5- 88
H081 1031	ADF Pick-up Roller	1- 5- 93
H081 1032	Idler - Tx Motor	1- 5-116
H081 1033	Idler - ADF Gear	1- 5-120
H081 1034	Tx Motor Cushion Ass'y	1- 5-104
H081 1041	Joint Idle Gear	1-5-130
H081 1042	Timing Belt - Idler 1	1-5-105
H081 1044	Harness Clamp: P3055B	1-9- 10
H081 1045	Feed Gear	1-5- 90
H081 1046	Idler Gear - ADF Pick-up Roller	1-5- 87
H081 1047	ADF Pick-up Roller Gear	1-5- 96
H081 1048	Pick-up Roller Hub	1- 5-95
H081 1049	Spring Clutch - ADF Pick-up Roller	1-5- 89
H081 1050	Lens Holder	1- 5-33
H081 1052	Xenon Lamp Holder - Left	1-5-122
H081 1053	Xenon Lamp Holder - Right	1-5- 81
H081 1054	Exposure Glass Ass'y	1-5-98
H081 1056	2nd Mirror Holder - Left	1-5-53
H081 1057	2nd Mirror Holder - Right	1- 5-62
H081 1058	3rd Mirror Holder - Left	1-5- 55
H081 1059	3rd Mirror Holder - Right	1-5-64
H081 1060	Shading Plate	1-5- 36
H081 1062	Scanner Mirror	1-5-65
H081 1063	Exposure Glass Holder	1- 5- 97

PART NO.	DESCRIPTION	PAGE AND INDEX NO.
H081 1065	Timing Belt - Idler 2	1- 5-123
H081 1066	ADF Pick-up Roller Bracket	1- 5- 91
H081 1068	Feed Shaft	1- 5- 86
H081 1069	Torque Limiter - ADF Pick-up	1- 5- 85
H081 1070	ADF Pick-up Roller Shaft	1- 5- 92
H081 1071	Idler Shaft Holder	1- 5-131
H081 1072	Induration Sheet: NCU	1- 5-102
H081 1073	Spring Hook	1- 5-128
H081 1074	Sheet - Protection	1- 5-107
H081 1076	Right Hook	1- 5-125
H081 1077	Left Hook	1- 5-127
H081 1078	Shaft - Hook	1- 5-126
H081 1079	Collar - Spring Clutch	1- 5- 94
H081 1080	Left Fulcrum Bracket Ass'y	1- 5-136
H081 1083	Right Fulcrum Bracket Ass'y	1- 5-109
H081 1086	Lift Lever - ADF	1- 5-112
H081 1087	Lift Lever Bracket	1-5-110
H081 1088	Lift Lever Spring	1- 5-111
H081 1089	Harness Clamp	1- 5-101
H081 1090	Dust Shield Sheet - Document Feed	1- 5-137
H081 1091	Harness Guide Ass'y	1- 5-103
H081 1094	Lens Cover	1- 5-100
H081 1095	ADF Ground Plate - Lower	1-5-135
H081 1096	Sheet - Protection: 1	1-5-115
H081 1098	Idler 2 Holder	1- 5-124
H081 1101	Upper Document Guide	1- 5- 29
H081 1105	Separation Roller Ass'y	1- 5- 28
H081 1114	Separation Pressure Spring	1- 5- 39
H081 1115	ADF Harness Holder	1- 5- 9
H081 1119	Antistatic Brush - Scanner	1- 5- 7
H081 1120	White Plate	1-5- 73
H081 1121	Button - ADF Open	1- 5- 74
H081 1122	Bracket - ADF Open	1- 5- 75
H081 1123	S1 Actuator	1- 5- 12
H081 1124	Actuator Bracket	1- 5- 15

PART NO.	DESCRIPTION	PAGE AND INDEX NO.
H081 1125	Shutter	1-5-22
H081 1126	MDF Bracket	1-5- 16
H081 1128	Bushing - Shutter	1-5-23
H081 1129	Shutter Guide	1-5-37
H081 1130	Separation Stay	1-5-27
H081 1131	MDF Button	1-5- 14
H081 1132	Bracket-Separation Torque Adjuster	1-5-41
H081 1133	Slider - Separation Torque Adjuster	1-5-40
H081 1134	Pin - Separation Torque Adjuster	1-5-44
H081 1135	Pressure Plate - Pick-up	1-5-42
H081 1136	S1 Bracket	1-5- 20
H081 1137	Spring Plate - Pressure Plate	1- 5-43
H081 1138	Pressure Shaft	1-5- 5
H081 1139	Pressure Spring Plate	1-5- 4
H081 1141	ADF Stay Ass'y	1- 5- 11
H081 1146	S1 Spring	1-5- 19
H081 1147	Pressure Roller Ass'y	1-5- 6
H081 1150	Right Fulcrum Bracket - ADF Ass'y	1-5- 17
H081 1152	Left Fulcrum Bracket -ADF Ass'y	1-5-25
H081 1154	Seal - Gate	1-5-35
H081 1157	Maintenance Decal -1	1-5-47
H081 1158	Maintenance Decal -2	1-5- 82
H081 1159	Maintenance Decal -3	1-5-113
H081 1160	Mylar -ADF Separation	1- 5-38
H081 1163	Stopper-S2 Sensor	1- 5-138
H081 1930	1st Mirror Holder- Left	1-5- 54
H081 1931	1st Mirror Holder - Right	1-5-63
H081 2030	Development Unit	1- 7- 1
H081 2061	Transfer Charger Unit	1-7-66
H081 2100	Hot Roller	1- 7- 72
H081 2101	Fusing Pressure Roller	1-7-71
H081 2102	Bushing - Hot Roller	1-7-57
H081 2103	Bushing - Pressure Roller	1- 7- 70
H081 2104	Gear - Hot Roller	1- 7- 77
H081 2105	Right Side Plate - Fusing	1- 7-60

PART NO.	DESCRIPTION	PAGE AND INDEX NO.
H081 2109	Left Side Plate - Fusing	1- 7- 74
H081 2114	Idle Gear - Z23	1- 7- 82
H081 2115	Idle Gear - Z16	1- 7- 76
H081 2116	Lower Fusing Stay	1- 7- 68
H081 2117	Exit Roller Gear	1- 7- 81
H081 2118	Pressure Spring	1- 7-59
H081 2120	Fusing Stripper	1- 7- 53
H081 2121	Stripper Spring	1- 7- 54
H081 2122	Actuator - Copy Out Sensor	1- 7-45
H081 2124	Fusing Cover	1- 7- 41
H081 2129	Lower Exit Guide Plate	1- 3- 34
H081 2132	Exit Roller	1- 7- 69
H081 2133	Right Bracket - Fusing Lamp	1- 7- 55
H081 2134	Thermostat Ass'y: E	1- 7- 50
H081 2137	Thermistor	1- 7- 48
H081 2144	Bracket - Fusing Stripper	1- 7-52
H081 2145	Cleaning Pad	1- 7- 46
H081 2149	Left Bracket - Fusing Lamp	1- 7- 75
H081 2151	Exit Roller Holder	1-3- 33
H081 2153	Thermostat Case	1- 7- 51
H081 2156	Paper Exit Cover	1- 3- 35
H081 2159	Partition Plate - Fusing	1- 7- 42
H081 2163	Bushing - Actuator	1- 7- 43
H081 2165	Spring - Feed-out Sensor	1- 7- 44
H081 2167	Lower Exit Roller	1- 3- 32
H081 2174	Upper Exit Guide	1- 7- 47
H081 2175	Stay - Upper Exit Guide	1- 7-101
H081 2178	Seal - Fusing Guide Plate	1- 7-113
H081 2250	Side Plate - Copy Out	1- 7- 96
H081 2258	Spring - Copy Out Cover Open	1- 7-103
H081 2259	Left Ground Plate - Copy Out	1- 7- 94
H081 2260	Right Ground Plate - Copy Out	1- 7-106
H081 2261	Left Inner Cover - Copy Out	1- 7- 92
H081 2262	Right Inner Cover - Copy Out	1- 7-104
H081 2263	Lower Stay - Side Plate - Copy Out	1- 7- 83

PART NO.	DESCRIPTION	PAGE AND INDEX NO.
H081 2264	Stopper - Side Plate - Copy Out	1-7-84
H081 2268	Sensor Bracket - Copy Out Cover	1- 7-109
H081 2269	Antistatic Brush - Copy Out	1-7-110
H081 2273	Pressure Spring - Master Unit	1-7-93
H081 2274	Stay - Copy Out	1-7-100
H081 2280	Gear Bracket	1-7-91
H081 2281	Left Connector Bracket	1- 7- 88
H081 2282	Right Connector Bracket	1- 7-107
H081 2291	Bracket - Photointerruptor	1- 7-90
H081 2292	Guide - Inter Lock Switch	1- 7-105
H081 2400	Hopper Ass'y	1- 7- 11
H081 2408	CTM Duct	1-11- 62
H081 2410	Development Roller	1- 7- 28
H081 2412	Development Unit Cover	1- 7- 2
H081 2413	Development Blade	1- 7- 29
H081 2418	Toner Supplying Roller	1- 7- 10
H081 2419	Agitator	1- 7- 9
H081 2420	Toner Tor	1- 7- 6
H081 2421	Toner Transfer - Developer	1- 7- 5
H081 2422	Lever - Toner End Detector	1- 7- 13
H081 2427	Gear - Toner Supplying Roller	1- 7- 19
H081 2429	Gear - Idler 1	1- 7-24
H081 2430	Gear - Idler 2	1- 7- 21
H081 2431	Gear - Agitator	1- 7- 20
H081 2432	Disk - Toner End Detector	1- 7- 18
H081 2434	Spring - Toner End Detector	1- 7- 17
H081 2435	Gear - Idler	1- 7- 12
H081 2436	Gear - Toner Transfer	1- 7- 14
H081 2437	Gear - Toner Guide	1- 7-34
H081 2438	Shaft - Agitator	1-7- 8
H081 2440	Stopper - Guide Gear	1-7-33
H081 2447	Antistatic Brush - Develop. Roller	1- 7- 27
H081 2448	Snap Ring - Toner Transfer	1- 7- 4
H081 2451	Shaft - Toner Supplying Roller	1- 7-32
H081 2457	Shield Plate - Toner End Lever	1- 7-112

PART NO.	DESCRIPTION	PAGE AND INDEX NO.
H081 2458	Cover - Antistatic Brush	1- 7- 26
H081 2459	Gear - Development Roller	1- 7- 23
H081 2460	Bushing - Toner Supply Roller	1- 7- 37
H081 2462	Spring - Toner End Lever	1- 7- 16
H081 2463	Bushing - Agitator	1- 7- 35
H081 2474	Joint - Development Roller	1- 7-31
H081 2475	Bushing - Development Roller: M8	1- 7- 22
H081 2478	Bushing - Development Roller: M6	1- 7- 30
H081 2495	Spring - Guide Gear	1- 7-36
H081 2501	Lens - CYL	1- 5- 57
H081 2502	FO Lens - L1	1- 5- 58
H081 2503	FO Lens - L2	1- 5- 59
H081 2504	Lens - BTL	1- 5- 76
H081 2505	1st Mirror	1- 5- 68
H081 2506	2nd Mirror	1- 5- 71
H081 2507	Dustproof Glass	1- 5-52
H081 2508	1st Cylindrical Mirror	1- 5- 60
H081 2510	Holder - Cylindrical Lens Ass'y	1-11- 53
H081 2512	Holder - 1st Cylindrical Lens	1-5-56
H081 2513	Right Holder - BTL	1-5-78
H081 2514	Left Holder - BTL	1- 5- 77
H081 2515	Right Holder - 1st Mirror	1- 5- 69
H081 2517	Holder - 2nd Cylindrical Mirror	1- 5- 61
H081 2518	Right Holder - 2nd Mirror	1- 5- 70
H081 2521	Holder - Cylindrical Detector	1-11-55
H081 2522	Film - Regist	1-11-60
H081 2523	Holder - Protection Glass	1- 5- 51
H081 2524	LD Unit Cover	1-11- 68
H081 2530	LD Unit	1-11- 66
H081 2551	Base - Laser Unit	1-11- 63
H081 2552	Cover - Laser Unit	1- 5- 79
H081 2553	Master Unit Guide - Right	1-11- 57
H081 2554	Master Unit Guide - Left	1-11- 70
H081 2556	Harness Holder	1-11- 56
H081 2557	Holder - MBU	1-11- 64

PART NO.	DESCRIPTION	PAGE AND INDEX NO.
H081 2865	Master Unit Stopper	1-11-23
H081 2870	Eraser Ass'y	1-7- 3
H081 2908	Spring - Transfer Charger	1- 7-79
H081 2912	Stepped Screw - Transfer Charger	1-7-97
H081 2913	Pressure Spring - Transfer Charger	1- 7-98
H081 2914	Left End Block	1- 7- 80
H081 2915	Right End Block	1- 7-65
H081 2916	Cover - Left End Block	1- 7- 78
H081 2917	Cover - Right End Block	1- 7-61
H081 2920	Seal - Transfer Charger	1- 7-99
H081 2921	Transfer Charger Housing	1- 7- 67
H081 2922	Antistatic Cloth - Transfer Charger	1-7-111
H081 3100	Right Side Plate	1-11- 30
H081 3107	Lever - Interlock Switch	1-11-35
H081 3108	Bracket - Interlock Switch - 24V	1-11-36
H081 3109	Stay - Left Side Plate	1-9-47
H081 3110	Stay - Right Side Plate	1-11-37
H081 3113	CTM Guide Rail - Right	1-11-28
H081 3114	Bracket - Interlock Switch - LD	1-11-45
H081 3115	Right Fulcurm Pin - Base	1-7-40
H081 3116	Left Fulcurm Pin - Base	1-7-39
H081 3120	Snap Ring - CTM Guide	1-9- 84
H081 3120	Snap Ring - CTM Guide	1-11-38
H081 3121	Bias Terminal Plate-Develop./Charge	1-11-50
H081 3122	Seal - Toner Duct	1-11- 26
H081 3123	CTM Guide	1-11-29
H081 3125	Right Reinforce Bracket	1-11-22
H081 3126	Left Reinforce Bracket	1-11- 13
H081 3127	Spring - Sector Gear	1-9-45
H081 3128	Joint Spring - Fusing	1-9-74
H081 3130	Joint Spring - Master Unit	1-9-70
H081 3131	Spring - Right Side Plate -750	1-11-27
H081 3139	Spring - PCU Set Lever	1-9- 85
H081 3140	Spring - Transfer Screw	1-9-80
H081 3148	Spring - Belt -550	1-9- 3

PART NO.	DESCRIPTION	PAGE AND INDEX NO.
H081 3149	Spring - Left Guide	1- 9- 24
H081 3161	Cover - Interlock SW	1-11- 25
H081 3162	Ozone Duct	1-11- 40
H081 3164	Ozone Filter	1-11- 42
H081 3169	Ozone Filter Holder	1-11-41
H081 3172	Bias Terminal	1- 9-50
H081 3172	Bias Terminal	1-11- 51
H081 3173	Right Cover - Bias Terminal	1-11- 48
H081 3174	Left Cover - Bias Terminal	1- 9- 53
H081 3179	Bracket - Right	1-11- 49
H081 3180	Bracket - Stay - Right Side Plate	1-11- 47
H081 3181	Cover - Development	1-11- 52
H081 3182	Left Stay	1- 9- 61
H081 3183	Positioning Bracket	1-11- 24
H081 3200	Left Side Plate	1- 9- 77
H081 3215	Shaft Drive Arm - PCU	1- 9- 66
H081 3216	Bushing - Fusing	1-9- 72
H081 3217	Shaft - Drive Arm - Fusing	1- 9- 25
H081 3218	Drive Gear - Fusing - Z18	1- 9- 76
H081 3219	Drive Gear - Fusing - Z24	1- 9- 73
H081 3220	Fusing Drive Gear - Z20	1- 9- 30
H081 3221	Arm - Joint Gear - Fusing	1- 9- 71
H081 3224	Drive Gear - Fusing - Z25	1-9- 26
H081 3225	Sub Side Plate - Driver Unit	1-9-43
H081 3226	CTM Drive Gear-Z15	1- 9- 32
H081 3227	Idle Gear - CTM	1-9- 34
H081 3228	Idle Gear - Z28	1-9- 28
H081 3229	CTM Drive Gear - Z16	1- 9- 78
H081 3230	Drive Gear - Z75	1- 9- 31
H081 3231	Driver Gear - Z88	1- 9- 44
H081 3232	Sector Gear - Z55	1-9- 45
H081 3233	Timing Pulley - PCU - P36	1- 9- 36
H081 3240	Bracket - CTM Motor	1- 9- 1
H081 3243	Drive Shaft Ass'y	1- 9- 29
H081 3245	Bracket - Drive Gear Ass'y	1- 9- 46

PART NO.	DESCRIPTION	PAGE AND INDEX NO.
H081 3250	Left Guide Rail - CTM	1-9-75
H081 3251	CTM Sensor Lever	1-9- 83
H081 3252	Ground Plate - CTM	1-9- 2
H081 3253	Bracket - CTM Sensor	1-9- 82
H081 3254	Bushing - CTM	1-9- 79
H081 3256	Tightener Roller	1-9- 6
H081 3257	Tightener Bracket	1-9- 4
H081 3260	Development Bias Bushing	1-9-48
H081 3261	Development Bias Terminal	1-9-49
H081 3262	Bushing - M6	1-9-33
H081 3265	Timing Belt - S3M-366	1-9- 27
H081 3274	Joint Shaft - Development Unit	1-9-39
H081 3275	Timing Pulley - Joint - Development	1-9-38
H081 3277	Development Drive Gear	1-9-40
H081 3283	Drive Gear - Master Unit: Roller	1- 9- 68
H081 3284	Drive Gear - Master Unit	1-9-69
H081 3286	Timing Pulley Holder	1-9-37
H081 3287	Joint Arm - Master Unit	1-9-67
H081 3290	Development Drive Shaft	1-9-42
H081 3292	Joint - Development Drive	1-9-65
H081 3293	Bushing - Development Drive	1-9-64
H081 3300	Base - Paper Feed	1-11- 9
H081 3303	Paper Guide Plate	1-11- 15
H081 3304	Bracket - Paper Feed Motor Ass'y	1-9- 56
H081 3305	Rubber Foot	1-11- 77
H081 3307	Timing Belt - Tension	1-9- 35
H081 3315	Gear - 19/24	1-9- 20
H081 3320	Transfer Roller	1-11- 19
H081 3321	Registration Roller	1-11-59
H081 3325	Sensor Bracket	1-11- 69
H081 3326	Actuator - Paper End Sensor	1-11- 5
H081 3331	Cassette Cover	1-3- 10
H081 3332	Fixing Plate - Cassette Cover	1-3- 14
H081 3346	Pin - Paper End Actuator	1-11- 6
H081 3347	Cassette Ground Plate	1-11-21

PART NO.	DESCRIPTION	PAGE AND INDEX NO.
H081 3350	Cassette - B4	1-13- 8
H081 3352	Cassette Bottom Plate	1-13- 1
H081 3354	Pressure Spring - Cassette	1-13- 2
H081 3357	Right Side Fence	1-13- 9
H081 3361	Left Side Fence	1-13- 3
H081 3364	End Fence	1-13- 7
H081 3365	Magnet - Cassette Cover	1-13- 5
H081 3366	Slider - Cassette	1-13- 26
H081 3367	Slider Cover	1-13- 27
H081 3368	Spring - Slider	1-13- 25
H081 3369	Pressure Plate - End Fence	1-13- 6
H081 3370	Transfer Pressure Roller	1-13- 23
H081 3371	Shaft - Transfer Pressure Roller	1-13- 21
H081 3372	Pressure Plate - Transfer Roller	1-13- 22
H081 3376	Guide Plate - Transfer Roller	1-13- 15
H081 3377	Registration Pressure Roller	1-13- 13
H081 3378	Shaft - Regist. Pressure Roller	1-13- 12
H081 3379	Holder - Registration Spring	1-13- 11
H081 3381	Registration Spring	1-13- 10
H081 3386	Paper Size Detector Pin - Letter	1-13- 28
H081 3388	Paper Size Detector Pin - Legal	1-13- 28
H081 3394	Pressure Roller - Registration	1-13- 29
H081 3395	Cassette Retaining Shaft	1-13- 19
H081 3397	Pressure Plate - Cassette Ret. Shaft	1-13- 20
H081 3399	Fixing Plate - Left: Front	1-11- 11
H081 3400	Fixing Plate - Left:Rear	1-11- 10
H081 3407	Snap Ring - M2.5	1-11- 14
H081 3409	Standard Pin	1-11- 78
H081 3412	Right FCU Holder	1-11- 4
H081 3413	Left FCU Holder	1-11- 3
H081 3416	Paper Feed Roller - A4	1-11- 16
H081 3417	Bracket - Gear - 19/24	1-9- 23
H081 3419	Fixing Plate - Right: Front	1-11- 20
H081 3421	Fixing Plate - Right:Rear	1-11- 8
H081 3450	Cassette Guide Rail - Right	1-11- 2

PART NO.	DESCRIPTION	PAGE AND INDEX NO.
H081 3451	Cassette Guide Rail - Left	1-11- 1
H081 3487	Bracket - Tension Roller	1-9-51
H081 3489	Tension Roller	1-9-52
H081 3520	Film - Regist Guide Plate - Middle	1-13- 18
H081 3521	Film - Regist Guide Plate - Side	1-13- 17
H081 3523	Ground Plate	1-11-46
H081 3526	Registration Guide Plate	1-13- 16
H081 3528	FCU Bracket	1-5-50
H081 3538	Spring	1-9-55
H081 3541	Snap Ring - Paper Feed	1-11- 17
H081 3543	Pulley/Gear - 35/24	1-9-21
H081 3544	Stay - Base	1-11- 80
H081 3553	Pulley 35	1-11- 71
H081 3558	Connector - Cover	1-11- 82
H081 3561	Standard Pin - Stay	1-11- 79
H081 3584	Bracket - Right Cover	1-11- 7
H081 3585	Bracket - Left Cover	1- 9- 16
H081 3587	Stopper - Left Cassette	1-11- 84
H081 3588	Stopper - Right Cassette	1-11- 76
H081 3589	Shaft - Paper Feed Roller	1-11- 18
H081 4100	Document Table Ass'y	1-3- 18
H081 4101	Document Table	1- 3- 22
H081 4102	Right Document Guide	1-3-20
H081 4103	Left Document Guide	1-3- 19
H081 4105	Lower Document Table	1-3- 26
H081 4106	Document Guide Rack	1-3-23
H081 4107	Seal - Document Guide	1-3-21
H081 4109	Sub Document Tray -1	1-3-36
H081 4110	Sub Document Tray -2	1-3-37
H081 4111	Front Cover	1-3-30
H081 4113	Left Cover	1-3- 16
H081 4115	Rear Cover	1-3- 8
H081 4117	NCU Cover	1- 3- 17
H081 4118	Cover - Option	1-3- 6
H081 4120	Copy Tray	1-3-39

PART NO.	DESCRIPTION	PAGE AND INDEX NO.
H081 4121	Sub Copy Tray	1- 3- 40
H081 4122	Document Tray	1- 3- 9
H081 4124	Mylar - Document Table	1- 3- 29
H081 4132	Speaker Bracket	1- 9- 12
H081 4135	Front Cover Bracket	1- 3-31
H081 4139	Handset Holder	1- 3- 4
H081 4140	Bracket Handset Holder	1- 3- 2
H081 4141	Screw - Handset	1-3- 5
H081 4141	Screw - Handset	1-11- 83
H081 4147	Connector Cover	1- 3- 7
H081 4151	Lower Bracket - Handset Holder	1- 3- 3
H081 4154	Rubber Cap - M3	1- 3- 42
H081 4158	Left Spring Plate - CTM	1- 3- 28
H081 4159	Right Spring Plate - CTM	1- 3- 27
H081 4167	Cover Sheet - Speed Dial	1- 5- 1
H081 4178	Sub Document Tray Ass'y	1-3-38
H081 4179	Copy Tray Ass'y	1- 3- 41
H081 4182	Right Cover Ass'y	1-3- 12
H081 4183	Decal - ADF Open	1-3- 13
H081 4250	Op-Port Ass'y : FAX3000L	1-3- 11
H081 4258	Quick Dial List: NA	1- 5- 2
H081 4292	Op-port Ass'y : FAX3200L	1-3-11
H081 4297	Decal - Paper Set	1-13- 14
H081 4661	Operator's Manual	1- 3- *
H081 5000	Xenon Lamp	1- 5- 80
H081 5001	Document Sensor Ass'y	1- 5- 8
H081 5005	Stamper	1- 5-129
H081 5006	Xenon Lamp Stabilizer	1-5-66
H081 5007	Scanner Motor	1- 5-106
H081 5011	Hexagonal Mirror Motor	1- 5- 46
H081 5013	Paper Feed Motor	1- 9-59
H081 5014	Registration Sensor	1-11- 61
H081 5015	Spring Clutch - Paper Feed	1- 9- 17
H081 5024	Zener Diode - 720V - 0.5W: NA	1-11-65
H081 5030	Power Pack	1- 7- 86

PART NO.	DESCRIPTION	PAGE AND INDEX NO.
H081 5031	Harness - Thermostat	1- 7-49
H081 5032	Transfer Harness - Fusing Heater	1- 7-102
H081 5033	Sensor - Copy Out Cover	1- 7-108
H081 5034	Transfer Charge Harness	1- 7-62
H081 5036	CTM Motor	1-9- 19
H081 5038	Ozone Fan	1-11-43
H081 5040	Ground Wire - ADF	1-5-21
H081 5041	Ground Wire - Guide	1- 5- 24
H081 5043	Interlock Switch - LD	1-11-44
H081 5062	Fusing Lamp - 115V	1- 7-73
H081 5077	Main Motor	1- 9- 7
H081 5506	Harness - Paper Size Sensor	1- 9- 58
H081 5508	Harness - Thermistor	1-9-63
H081 5510	Harness - Hexagonal Mirror Motor	1- 5- 45
H081 5511	Harness - NCU	1-9- 11
H081 5514	Harness - Driver	1- 5-139
H081 5515	Harness - FCU	1-11- 74
H081 5518	Harness - Op-Port	1- 5- 10
H081 5519	Harness - SBU	1- 5- 30
H081 5520	Harness - Speaker	1- 9- 14
H081 5523	Harness - Interlock Switch - 24V	1-11-34
H081 5526	Harness - Interlock Switch - 5V	1-11-33
H081 5527	Harness - Toner End Sensor/ PSU 5V	1-11-32
H081 5528	Harness - CTM/SIF/Thermistor	1-7-95
H081 5528	Harness - CTM/SIF/Thermistor	1-9-60
H081 5529	Harness - P. F/M. Motor/P. Pack/SIF 24	1- 9- 8
H081 5529	Harness - P, F/M. Motor/P. Pack/SIF 24	1-11-81
H081 5531	Transfer Harness - Thermistor	1-7- 85
H081 5532	Transfer Harness - Copy Out Sensor	1-9-62
H081 5533	Harness - LDDR	1-11-67
H081 5535	Ground Wire - PSU	1-11-73
H081 5540	Power Supply Cord	1-3- 1
H081 5601	PSU Ass'y - 115V	1-11- 72
H081 5700	Modular Cord - 6P/6P	1-3-43
H081 6009	PCB - Op-Port	1- 5- 3

PART NO.	DESCRIPTION	
H081 6010	PCB - SBU	1- 5- 31
H081 6014	PCB - NCU : USA	1- 9- 9
H081 6026	PCB - MBU : USA	1- 5- 48
H081 6042	PCB - FCU : USA	1- 5- 49
H081 9501	Transfer Corona Wire	1- 7- 63

PART NO.	DESCRIPTION	PAGE AND INDEX NO.
AA14 3287	Stepped Screw - M3	1-5- 13
AW02 0021	Photointerruptor	1- 7- 89
AW02 0021	Photointerruptor	1-9-81
AW02 0021	Photointerruptor	1-11-31
AW50 0010	Push Switch	1-9-57
G003 6773	Retaining Ring, Fusing	1-7-56
H001 4221	Harness Clamper	1-5- 18
H004 1131	Speaker Holder	1-9- 15
H004 5206	Monitor Speaker	1-9- 13
H006 2135	Bushing - M4x6	1- 7- 58
H006 2316	Spacer - Pick-up Clutch	1-5-84
H006 2383	Snap Ring	1-13-24
H006 3533	Snap Ring	1- 7- 15
H008 4560	Plate Spring - Pinion	1- 3- 24
H012 1181	Bushing - M6	1-9-22
H020 3623	Snap Ring - Registration Roller	1-9- 18
H020 3623	Snap Ring - Registration Roller	1-11- 12
H041 1101	Lens - 6/30 -24	1- 5-34
H053 1600	Bushing - M6: Cufe	1- 5-140
5203 2060	Corona Wire Screw - M3x4	1-7-64
5203 3105	Nylon Rivet	1-7-25
5413 1882	Stepped Screw	1-9- 5
5413 1882	Stepped Screw	1-11-39
5419 5714	Stepped Screw - M4	1- 7-38
5447 2681	Snap Ring	1-5-26
5447 2681	Snap Ring	1- 7- 7
5447 2768	Stepped Screw - M3	1-9-54
5466 3198	Washer - SBU	1-5-32
5474 1307	Gear - ADF Tray	1-3-25

PART NO.	DESCRIPTION	
0252 0080B	Screw - M2x8	200
0313 0060B	Philips Pan Head Screw - M3x6	201
0313 0140B	Philips Pan Head Screw - M3x14	203
0313 0200B	Philips Pan Head Screw - M3x20	202
0314 0060B	Philips Pan Head Screw - M4x6	204
0323 0060B	Philips Sunk Screw - M3x6	205
0353 0060B	Philips Truss Head Screw M3x6	206
0353 0060Z	Philips Truss Head Screw - M3x6	207
0433 0062B	Tapping Pan Head Screw - M3x6	208
0433 0082B	Tapping Pan Head Screw - M3x8	209
0443 0060W	Tapping Screw - M3x6	241
0573 0040E	Hexagon Headless Set Screw - M3x4	210
0573 0060E	Hexagon Headless Set Screw - M3x6	211
0701 0060E	Washer - M6	212
0720 0020E	Retaining Ring - M2	213
0720 0030E	Retaining Ring - M3	214
0720 0040E	Retaining Ring - M4	215
0720 0050E	Retaining Ring - M5	216
0802 5205B	Tapping Screw M3x6	217
0802 5206B	Tapping Screw M3x8	218
0950 3008B	Philips Screw with Lock Washer - M3x8	220
0950 3030B	Philips Screw with Lock Washer - M3x30	219
0951 3005B	Philips Screw with Flat Washer M3x5	221
0951 3006B	Philips Screw with Flat Washer - M3x6	222
0954 3006B	Double Sems Screw - M4x8	224
0954 3008B	Double Sems Screw - M3x8	223
0964 3006B	Tapping Screw - M3x6	225
0964 3006Z	Tapping Screw - M3x6	240
0965 3006B	Tapping Screw with Flat Washer M3x6	226
0965 3008B	Tapping Screw with Washer - M3x8	229
0965 3010B	Tapping Screw with Flat Washer M3x10	227
0965 3012B	Tapping Screw with Flat Washer M3x12	228
1102 4431	Connector - Sub Harness	242
1102 4473	CT Connector -2P	232
1102 4473	CT Connector -2P	243

PART NO.	DESCRIPTION	PAGE AND INDEX NO.
1102 4559	Connector - 3P	244
1102 4560	CT Connector 6P	245
1102 5071	Connector - 9P	230
1102 5142	Connector - 2P - Black	246
1102 5145	Connector - 3P - Blue	247
1102 5194	Connector - 7P	231
1105 0113	Edge Saddle - EDS2	233
1105 0234	Clamp	234
1105 0246	Spacer	235
1105 0260	Wire Saddle	237
1105 0344	Clamp	236
5053 0223	Bushing - 8mm	238
50530447	Bushing - 6mm	239

PART NO.	DESCRIPTION	PAGE AND INDEX NO.