




MV310 Multi-Function Fax

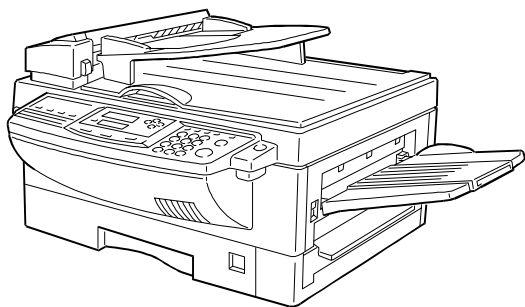

<i>Faxing</i>	<i>page 1</i>
<i>Copying</i>	<i>page 63</i>
<i>Installation</i>	<i>page 127</i>
<i>Adding paper</i>	<i>page 79</i>
<i>Adding toner</i>	<i>page 82</i>
<i>Finding parts and keys</i>	<i>page 110</i>
<i>Troubleshooting</i>	<i>page 95</i>

Read the safety instructions on page i to iv

Operator's Manual



Optional equipment

PC Printer Interface Kit (PRINTER INTERFACE TYPE 130)

This allows you to use the machine as a laser printer for an IBM¹ or compatible personal computer.

PAPER CASSETTE TYPE 100

This gives this machine additional 100 sheet paper capacity with single sheet bypass.

COUNTER TYPE 100

PC-FAX EXPANDER TYPE 100

This allows use of this machine as a scanner, PC Fax.

¹Copyright Notice

IBM is a registered trademark of International Business Machines Corporation.

Caution

Use of control or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure

Shielded interconnect cables must be employed with this equipment to ensure compliance with the pertinent RF emission limits governing this device.

In accordance with ISO 7001, this machine uses the following symbols for the main switch:

- I means POWER ON
- means POWER OFF

WARNING



This symbol is attached to some components to alert the user not to touch them because they may be very hot.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the machine.

Important Safety Instructions

All safety messages in the main text of this manual are labeled **WARNING** or **CAUTION**. These mean the following:

WARNING: Important information to alert you to a situation that might cause serious injury and damage to your property if instructions are not followed properly.

CAUTION: Important information that tells how to prevent damage to your equipment or how to avoid a situation that might cause minor injury.

In addition to the warnings and cautions included in the text of this manual, please read and observe the following safety instructions.

1. Read all of these instructions.
2. Save these instructions for later use.
3. Follow all warnings and cautions marked on the product.
4. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
5. Do not use this product near water.
6. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product or injuring the user.
7. Slots and openings in the cabinet and the back or bottom are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation unless proper ventilation is provided.
8. This product should be operated from the type of power source indicated on the marking label. If you are not sure of the type of power available, consult an authorized sales person or your local power company.
9. This product is equipped with a 3-wire grounding type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the purpose of the grounding type plug. (This does not apply in countries in which the 2-wire, non-grounded type of plug is used.)

10. Do not allow anything to rest on the power cord. Do not locate this product where persons will walk on the cord.
11. If an extension cord is used with this product, make sure that the total of the ampere ratings on the products plugged into the extension cord does not exceed the extension cord ampere rating.
12. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
13. Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.

When to Call Your Service Representative

WARNING: Do not attempt any maintenance or troubleshooting other than that mentioned in this manual. This machine contains a laser beam generator and direct exposure to laser beams can cause permanent eye damage.

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- A. When the power cord or plug is damaged or frayed.
- B. If liquid has been spilled into the product.
- C. If the product has been exposed to rain or water.
- D. If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
- E. If the product has been dropped or the cabinet has been damaged.
- F. If the product exhibits a distinct change in performance, indicating a need for service.

Power and Grounding

Power Supply

1. Power requirements: 220-240Vac, 50 Hz
2. Insert the power plug securely into the wall socket.
3. Make sure that the wall outlet is near the machine and readily accessible.
4. Do not connect other equipment to the same socket.
5. Do not step on or set anything on the power cord.
6. Do not connect other equipment to the same extension cord.
7. Be sure that the power cord is not in a position where it would trip someone.
8. The wall outlet must be easily accessible.

Grounding

Ground the machine and the lightning protection circuit in accordance with regulations. Do not ground to gas or water pipes, or to a telephone ground plug. Proper grounding is to the ground terminal of the power outlet. Be sure that the ground terminal of the power outlet is properly grounded.

The lightning protection circuit for the machine requires the machine to be properly grounded. If proper grounding is provided, about 90% of lightning damage can be prevented. For safety, be sure to connect the machine to a three-prong grounded outlet.

Cold Weather Power-up

Avoid raising the room temperature abruptly when it is below 14°C, or condensation may form inside the machine.

1. Raise the room temperature to 20°C at less than 10°C per hour.
2. Wait for 30 to 60 minutes.
3. Turn the power on.
4. Do not use the machine near a humidifier.

Thunderstorms

With proper grounding, about 90% of lightning damage can be prevented. However, if possible, during severe electric storms turn the power switch off and disconnect the power cord and telephone line cord.

Caution: All fax messages stored in the memory may be erased if power is switched off for more than an hour.

GENERAL

1. Since some parts of the machine are supplied with high voltage, make sure that you do not attempt any repairs or attempt to access any part of the machine except those described in this manual.
2. Do not make modifications or replacements other than those mentioned in this manual.
3. When not using the machine for a long period, disconnect the power cord.

Ozone

The machine generates ozone during operation. Normally, the ozone level is safe for operators. However, during a long copy run or while printing a long message, ozone odor may appear; in such a case, ventilate the room.

Symbols & Conventions Used In This Manual

Documents: A document is anything you put on the feed table of your machine (or on the exposure glass) whether you are faxing it or copying it.

Prints: A print is anything that comes out of the machine: a fax message you received, a copy you made, or a printout from your computer.

Procedures: Procedures are described step by step. Perform them in order. When you see an LCD display, it always shows what comes after performing the step it accompanies. Other illustrations accompanying steps help you find the right key or handle, or show you how to perform the step.



This is a step in a procedure.

THIS CORRESPONDS TO
THE LCD DISPLAY.

TABLE OF CONTENTS

SAFETY	i
Important Safety Instructions	i
When to Call Your Service Representative	ii
Power and Grounding	iii
Cold Weather Power-up	iii
Thunderstorms	iv
Symbols & Conventions Used In This Manual	iv
What Does a Fax Machine Do?	viii
Telephone Line Problems Affect Fax Communication	viii
 FAXING	 1
Recommended Types of Document	2
How to Set the Document	4
Memory Transmission and Immediate Transmission	5
Receiving Calls & Fax Messages (Faxes/Phone Calls)	14
Printing a Message Received & Stored (Substitute Reception)	16
Faxing a Page With Very Fine Detail	17
Optional Feature for Transmission	20
Sending the Same Message to Many Destinations	23
Using the Stamp	25
Redialing	26
Storing & Editing Fax Numbers (Functions 31 & 32)	28
Storing & Editing a Group of Fax Numbers (Function 33)	37
Erasing a Stored Message Before It Is Sent (Functions 21 & 22)	42
Printing a Stored Message (Function 51)	43
Polling Reception (Function 11)	44
Talking Before Sending a Fax (On Hook Dial)	46
Sending a Fax using the Handset	46
 OTHER FEATURES	 47
Verifying Communications, Errors, Counters, etc.	47
Rejecting Messages From Certain Senders	52
Saving Energy	57
Printing the Sender's Identification	61
Tonal Signals	61
Things a Service Technician Can Change	62
 COPYING	 63
Basic Copying Procedure	63
Functions That Can Be Used Together	65
Selecting the Paper Size	66
Copying/Printing Using the Bypass	67
Enlarging & Reducing	70
Copying Darker or Lighter Originals	71

Copying Photographs	73
Clearing the Previously Used Settings	73
Options.....	74
MAINTAINING YOUR MACHINE.....	79
Setting / Adding the Paper (📄)	79
Replace Toner Cassette & Cleaning Pad	82
Replacing the Photoconductor Drum	85
Replacing the Stamp	89
Daily Maintenance	90
TROUBLESHOOTING.....	95
If an Indicator Lights Up on the Operation Panel	95
Other Possible Problems.....	95
Clearing a Document Jam	96
Copy, Fax, or Print Jams	97
If Messages You Receive Don't Fit on Your Paper.....	102
Communication problems.....	102
RDS (Remote Diagnostic System).....	103
Operational Difficulties	104
Displayed Error Messages	108
TECHNICAL REFERENCE.....	110
Operation panel	110
Machine Exterior.....	112
Access Code for Functions 61 to 94	113
User Parameters (Function 63).....	113
Copier Settings (Function 72).....	118
Adjusting the Volume of Various Features	120
Selecting the Display's Language	121
Counters (Function 94, see page 52.)	121
Entering Characters	122
Document & Paper Specifications.....	123
Capabilities	124
Specifications.....	125
APPENDIX A: INSTALLATION.....	127
Machine Environment.....	127
Removing the Clip on the Upper Unit	129
Attaching the Labels to the Operation Panel	129
Installing the Photoconductor, Toner Cassette and Cleaning Pad	130
Attaching the Print Tray	133
Attaching the Auto Document Table	133
Attaching the Stop	133
Setting the Paper.....	133
Connecting the Machine.....	134

Connecting to the Phone Lines.....	135
Connecting the Power	136
Initial Settings & Adjustments.....	137
APPENDIX B: OPTIONAL SIDE CASSETTE	143
Installing the Side Cassette	143
Installing the Extension	145
INDEX & GLOSSARY	146
Mini-Glossary	148
Position of the Laser Label.....	149

Thank you for purchasing this product. This multi-function office machine offers a wide range of fax, copier, printer, and convenience features.

What Does a Fax Machine Do?

When you write a letter, you normally seal it in an envelope, attach a stamp, and post it in the nearest mail box. Then, in a few days, depending on the postal service, the letter will arrive at its destination. However, you may not be aware of its arrival until you get a return letter.

A fax machine speeds up this process. After you have written your letter, place it in your fax machine's document feeder or on the exposure glass, dial the destination's fax number, then press the Start key.

The fax machine scans your letter, and converts it into a series of black and white dots (the number of dots that there are across and down the page depends on the resolution that you selected; refer to the specifications section of this manual for details). This series of dots is transformed into an electrical signal and sent out over the telephone line to the destination fax machine.

The receiving fax machine reconstructs your letter from the incoming signal, and prints it.

If you are worried about whether the message arrived at the destination, you can check a report called the Journal. When you print this report, you will see the results of the most recent fax communications made by your machine.


You can use your fax machine to send and receive many types of documents, even photographs.

Telephone Line Problems Affect Fax Communication

Quick and accurate transmission of fax messages depends on the condition of the telephone line. If the line condition is very good, this machine will transmit a A4 size page in about 9 seconds. However, if the line is noisy, the speed may be reduced significantly, and the data may be damaged.

The symptoms of data loss caused by a noisy telephone line are seen on the printouts of received messages. An example is shown opposite. Note that lines are missing from the page at the indicated locations. ECM (Error Correction Mode) is an effective countermeasure against this type of error; you have the choice of having the ECM feature switched on or off. It is switched on before the machine leaves the factory. (Refer to page 62 for more information about ECM).

The line condition is affected by the weather; thunderstorms can cause electrical noise on telephone lines. In addition, the quality and condition of switching equipment used by your phone company can affect fax communication.

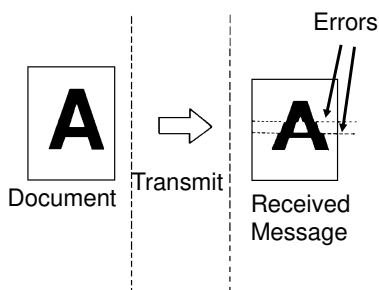

If you have not yet installed your fax machine, do so now. See Appendix A, Installation, on page 127.

This section covers what you'll most often need to do:

Recommended Types of Document	2
How to Set the Document	4
Memory Transmission and Immediate Transmission	5
Receiving Calls & Fax Messages (Faxes/Phone Calls)	14
Printing a Message Received & Stored (Substitute Reception)	16
Faxing a Page With Very Fine Detail	17
Optional Feature for Transmission.....	20
Sending the Same Message to Many Destinations	23
Using the Stamp	25
Radiating	26
Storing & Editing Fax Numbers (Functions 31 & 32).....	28
Storing & Editing a Group of Fax Numbers (Function 33).....	37
Erasing a Stored Message Before It Is Sent (Functions 21 & 22).....	42
Printing a Stored Message (Function 51)	43
Polling Reception (Function 11)	44
Talking Before Sending a Fax (On Hook Dial)	46
Sending a Fax using the Handset	46

A Few Hints...

Press **Clear** to erase the last letter or digit that you entered.

Press **No** to erase the entire name or number and start again.


To enter characters and labels, turn to page 122.

Recommended Types of Document


Before you send your document, make sure that it meets the following requirements.

CAUTION: Documents that do not meet these requirements can cause your machine to jam or may cause some components of the machine to become damaged or dirty.


Minimum size from the auto document feeder

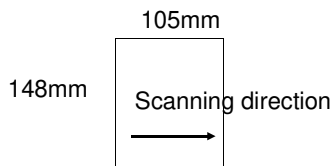


Maximum size from the exposure glass

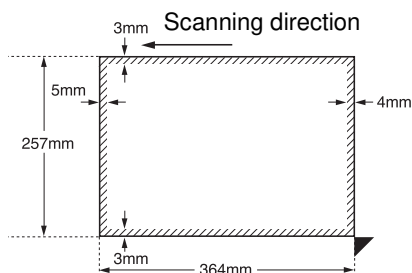

Maximum size from the auto document feeder

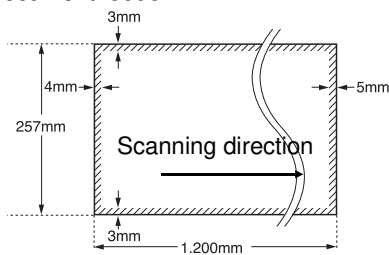

Note: The part shaded  will not be scanned, because it is outside the maximum scanning range.

Correct Size for the Auto Document Feeder

Thickness: 0.05 to 0.2 mm (70 g/m² paper)

Length and Width: See the above diagram.

If the page is too short, put it inside a document carrier or enlarge it with the copier function.

If the page is too long, divide it into two or more sheets.

Note: If you place the page on the exposure glass, you can transmit pages smaller than the minimum size shown above.

Clearly Written


Small faint characters may not be transmitted clearly.

Uniform Page Size


When using the document feeder, do not use different sizes of document in the same transmission.

Page Condition

Do not place damaged pages in the automatic document feeder.

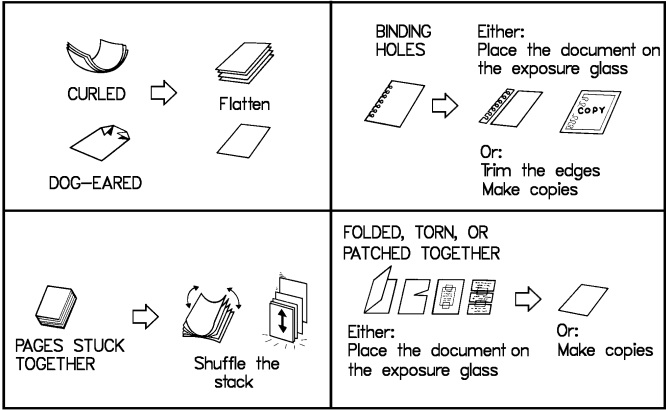

Originals that contain the following materials should not be placed in the document feeder. Place them directly on the exposure glass.

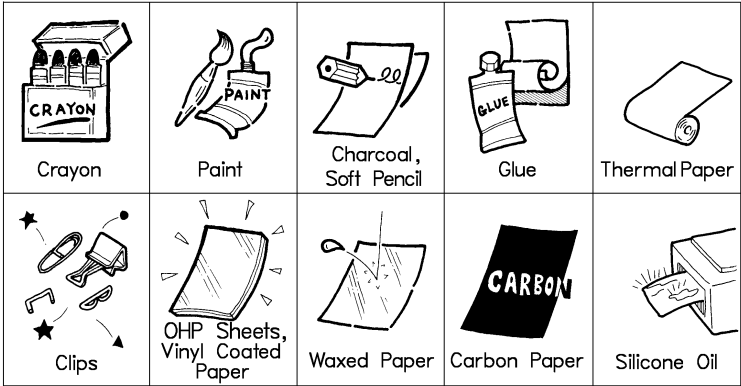


Note: Copies made with a copier that uses silicone oil may cause a misfeed. To avoid this, do not scan such copies until five or ten minutes after copying.

How to Set the Document

Setting the document in the Auto Document Feeder (ADF)

- 1 Carefully place the document face up into the auto document feeder. Then adjust the guides to fit the width of the document.

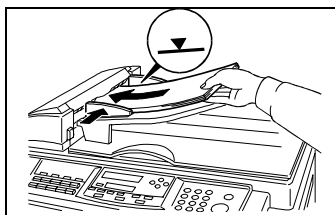


Note: Do not feed in more than 30 pages.

Do not stack documents in the feeder so that they exceed the load limit marker.

Setting the document to the exposure glass

- 1 Lift up the top cover (make sure you raise it by at least 35°, or halfway) and place the first page of your document face down on the exposure glass. Then lower the top cover.

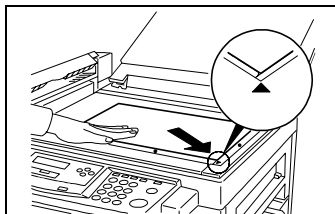

Memory Transmission and Immediate Transmission

There are two ways to send a fax message.

- ☐ Immediate Transmission
- ☐ Memory Transmission

Immediate Transmission

Immediate Transmission is convenient when:

- ☐ You wish to send a message immediately
- ☐ You wish to quickly check whether you have successfully connected with the other party
- ☐ Your machine's memory is getting full

The machine dials immediately after you press Start (or at the specified later time, if you used a time-delay feature like Send Later). The message is scanned and transmitted page by page without being stored in memory.

Memory Transmission

Memory Transmission is convenient because:

- ☐ Fax messages can be scanned much more quickly (you can take your document away from the fax machine without waiting too long).
- ☐ While your fax message is being sent, another user can operate the machine (people will not have to wait by the fax machine too long).
- ☐ You can send the same message to more than one place with the same operation.

After you press **Start**, the machine doesn't dial until all the pages of your fax message have been stored in the memory.

The default mode of this machine is Memory Transmission, so the procedures described in this manual will be based on the assumption that you are using Memory Transmission. Immediate Transmission is described in a separate section.

Memory Transmission


Sending a Message with the Auto Document Feeder

If at any time you want to completely start over, just remove the document, then open and close the top cover.

Caution: If your document gets stuck while it is being processed, press the Stop key, and turn to page 96 for instructions on how to safely remove the original.

1 Remove any document left in the tray or on the exposure glass.

2 The FAX indicator must be lit. Press the **Fax/ Copy** key if it is not lit.

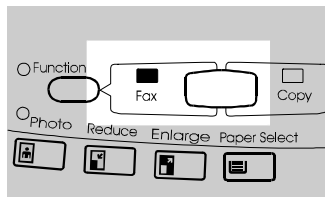

Make sure that the machine is in standby mode for faxing. The display should look like this:

READY 100% 10:00
SET DOC. OR DIAL NO.

If the display isn't as above, press the Clear Modes key to clear any previously programmed destinations.

3 Fan your document stack (at most 30 pages) to make sure all pages are loose, then square it.


All pages in your document must be one-sided and be of the same size.

- 4** Insert the document **face up** in the feeder and adjust the guides to fit the width of the document.

Note: Set the pages with the first page at the top of the stack.

Do not stack documents in the feeder so that they exceed the load limit marker.

Note: You can dial before you set the document. Place the document after you dial the number and go to step 8.

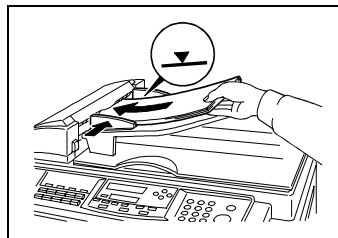

- 5** The display will look like this:

TRANSMIT	OPTION ►
DIAL FAX NUMBER	

- 6** If the memory indicator is not lit, press the **Memory** key.

Dial the number in one of the following ways.

TRANSMIT	Y/START
5551234	

a) Ten Key Pad	b) Quick Dial	c) Speed Dial	d) Handset ☆
	<p>Example : Quick Dial 12</p>	<p>Example : Speed Dial 10</p>	

☆: Only if the telephone handset is installed.

If you want to erase a digit of the phone number, press the **Clear** key.
If you want to erase the entire number, press the **No** key.

7 Press the **Start** key and wait. The machine will dial the destination's number.

If the other party's line is busy, your machine will dial again.

If the other party's fax machine answers, both machines will connect and yours will send the message.

5551234 DIAL FAX NUMBER

READY 100% 10:04 SET DOC. OR DIAL NO.
--


(a number or label) SET DOC. OR DIAL NO.

Tip: If your line goes through a local switchboard (a PBX) remember to dial the exit code. Press the Pause key immediately after the code. If the number includes a country code, press the Pause key after the country code, then dial the rest of the number.

Sending a Message with the Exposure Glass

- 1 Remove any document left in the auto document feeder or on the exposure glass.


- 2 The FAX indicator must be lit.
Press the **Fax/ Copy** key if it is not lit.

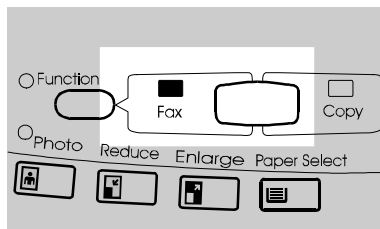

Make sure that the machine is in standby mode. The display should look like this:

READY 100% 10:00
SET DOC. OR DIAL NO.

- 3 Lift up the top cover and place the first page of your document face down on the exposure glass, as shown in the diagram. Then lower the top cover.

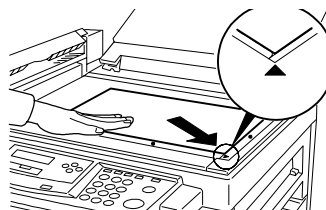

Note: You can dial before you set the document. Place the document after you dial the number and go to step 6.

- 4 If the memory indicator is not lit, press the **Memory** key.

- 5** Dial the number in one of the following ways.

TRANSMIT	Y/START
5551234	

a) Ten Key Pad	b) Quick Dial	c) Speed Dial	d) Handset ☆
	<p>Example: Quick Dial 12</p>	<p>Example: Speed Dial 10</p>	

☆: Only if the telephone handset is installed.

If you want to erase a digit of the phone number, press the **Clear** key.
If you want to erase the entire number, press the **No** key.

- 6** Press **Start** key

If the document size cannot be detected, the right display appears. Select the scanning area by ◀ and ▶ key. Then press **Start**.


START/◀▶	
▶A5◻	A4◻ B5◻ B4◻

The machine scans and stores your page. After the page has been stored, the display appears as shown on the right

TO SEND-Y/OPTION ▶
NEXT PAGE THEN START

The machine is asking you to place the next page on the exposure glass.

Indicators show how much time you have left to place the next page on the exposure glass and press **Start** key.

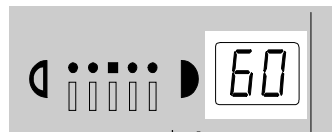

You have 60 seconds.

If you do not place a page on the exposure glass and press Start key within the remaining time, the machine will start to dial.

7 Either;

Place the next page on the exposure glass if any and press **Start**. And repeat the step 6 for replacing the page.

If you have no more pages, press **Yes**.


8 The machine dials, and the line to the other party is connected. On the display, the identification of the other party will appear.

9 After sending the message, the machine hangs up automatically.

Immediate Transmission

1 Remove any document left in the auto document feeder or on the exposure glass.

2 The FAX indicator must be lit. Press the **Fax/ Copy** key if it is not lit.

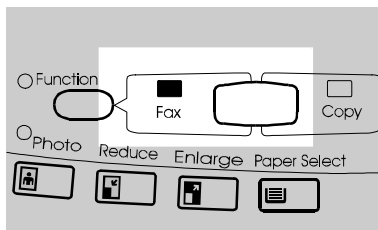

Make sure that the machine is in standby mode. The display should look like this:

```
READY 100% 10:00
SET DOC. OR DIAL NO.
```

3 Press **Memory** key. The Memory indicator should go out.

4 Either:
Place the first page of the document on the exposure glass.
or
Place the entire document face up into the feeder. (No more than 30 pages)

```
TRANSMIT OPTION▶
DIAL FAX NUMBER
```

How to set document see page 4.

Note: You can dial before you set the document. Place the document after you dial the number and go to step 6.

5 Dial. (See page 7 for how to dial.)

```
TRANSMIT Y/START
5551234
```



6 Press **Start** key

5551234
DIALLING

7 The machine dials and the line to the other party is connected. The number that you dialed and the other party's RTI or CSI is displayed. (RTI, CSI: see page 137.)

Placing the document on the exposure glass

After a page has been sent, the machine asks you to place the next page on the exposure glass. The indicator shows how much time you have left to place the next page on the feeder and press **Start** key.

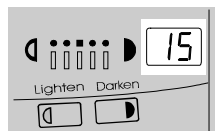

READY TO TRANS

For Immediate Transmission, you have 15 seconds. If you do not place a page on the exposure glass and press **Start** within the remaining time, the machine will disconnect the line.

Either:

Wait until the following message appears. Then, place the next page on the exposure glass and press **Start**.

TO SEND-Y/OPTION ►
NEXT PAGE THEN START

or

The page will be scanned and sent out. When you have get the last page, press **Yes**.

The machine will disconnect the line and return to standby mode.


Receiving Calls & Fax Messages (Faxes/Phone Calls)

Your fax machine can treat all incoming calls as fax messages or as voice calls.

To use your phone line only for fax messages, set your machine to Auto Receive. It will accept fax messages automatically. To give priority to phone calls, set your machine to Manual Receive (a telephone needed).

If you set your machine to Manual Receive you have to be by the machine when a fax message comes in (see below). To use an answering machine on the same line, set your fax machine to Manual Receive.

Press the **Receive** key to choose how your machine accepts messages.

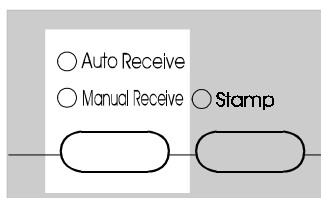


Accepting Fax Messages Automatically

This mode is selected when the Auto Receive indicator is lit.

- 1** The machine automatically starts to receive the message.

Accepting Fax Messages Manually (Handset or Phone Needed)

- 1** To enable this feature, the Manual Receive indicator should be lit. If it isn't, press the **Receive** key.

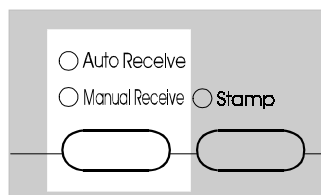

- 2** Answer the call with the handset.
If you hear a voice from the other end, speak in reply.
If you hear a tone every few seconds, a fax message is coming in.

Note: Remove any documents left in the feeder before you press **Start**.


- 3** If the person at the other end wishes to send you a fax message, press the **Start** key and hang up the handset. Your fax machine will accept the message. The Communicating indicator lights.


Printing a Message Received & Stored (Substitute Reception)

Caution: If the machine is turned off for more than an hour, messages stored in memory will be lost. If this happens, the machine will print out a report (once it can) telling you which messages were lost. Contact the senders to have them send you the message again.

If the Receive File indicator is lit, a message was stored in memory using substitute reception. It was not printed, maybe because the machine is jammed or out of supplies, or the night timer has turned the heater off.

Night Timer: Press the Energy Saver key to print messages received while the night timer (page 57) has turned the heater off. Otherwise, check if any of the following indicators are lit. and follow instructions.

 Your fax machine is out of paper. Add paper: see page 79.

 Your fax machine is out of toner. Change the toner cassette: page 82.

Or The Check Display indicator is lit.
There might be a paper jam (see page 97) or an open cover.

<p><i>-Message appears here-</i> SET DOC. OR DIAL NO.</p>

As soon as the machine is back in working condition, messages stored in memory will be printed. The Receive File indicator will turn off and the messages will be erased from memory.

If a message comes in while you are copying, the fax machine will store the message in memory and the Receive File indicator will light. The message will be printed as soon as copying is done.

To turn substitute reception off or back on, set bit 0 of user parameter switch 05. See page 113.

Faxing a Page With Very Fine Detail

If you wish to fax a message which must arrive as clearly as possible, adjust the resolution (for documents with fine detail) and the contrast (for documents printed on a dark background or in faint ink). You can also set the imaging process for sending photographs.

You can select different settings for each page of your message. Simply change the settings for page 2 while page 1 is being scanned.

Resolution & Shading

If your document contains fine print, detailed diagrams, or photographs, use a higher resolution setting. There are three settings for general documents.

Standard: Use for most printed or typewritten documents.

Detail: Use for documents with small print or fine details.

Fine: Use this for high quality reproduction.

There is also an independent photo setting suitable for photographs or diagrams with complex shading patterns or grays.

Important: Faxing at a higher resolution requires more time. Frequent use of high resolution could cause an increase in your phone bill, especially for long distance transmissions.

Contrast (density)

Manual Image Density

The text and diagrams in your document must stand out clearly from the paper they are written on. If your document has a background darker than pure white (for example, a newspaper clipping) or if the writing is faint, adjust the contrast. There are five grades.


Normal: Suitable for most documents

Darken 1 & 2

(Slightly Darken & Darken): Use for documents with faint writing


Lighten 1 & 2

(Slightly Lighten & Lighten): Use for documents that have a dark or patchy background

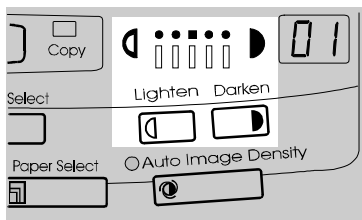

Auto Image Density

If you select the Auto Image Density mode, the appropriate contrast is set automatically. Lit the **Auto Image Density** indicator.

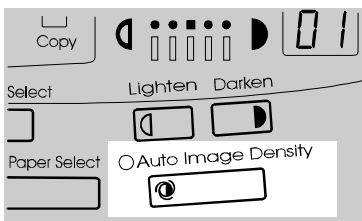


Increasing Photo Quality

Your machine can transmit photographs and other images by using a halftone process which simulates colors and grays by using a pattern of black and white dots.


To use the above features, follow these steps:

- 1** If needed, press the **Photo** key.

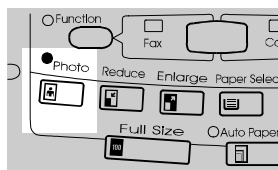


- 2** Press the **Resolution** key to select standard, fine, or detailed.

This doesn't change the photo setting you set in step 1.

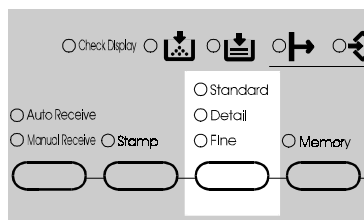

- 3** Press the **Lighten** or **Darken** key to change the contrast, if desired.

Note: You cannot select the Auto Image Density when you use the Photo mode.

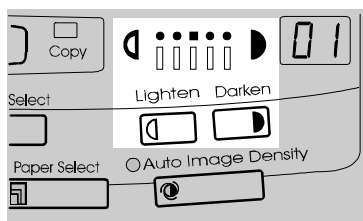

- 4** Proceed as for a usual fax transmission.

Optional Feature for Transmission

Sending Later

Using this feature, you can instruct the machine to delay transmission of your fax message until a specified time. This allows you to take advantage of off-peak telephone line charges without having to be by the machine at the time.

CAUTION: If your machine's memory is full, you will have to send the message from the document feeder. This means that anybody removing your document would automatically cancel the operation.

1 Proceed as for a usual fax message but don't press Start.

2 Press **▶** once and press **Yes**.
(**▶** is also the **Option** key).

SET OPTION	Y/▶
SEND LATER?	

3 Enter a sending time that falls within the following 24 hours.
For example: To send at 23:30, press **2**, **3**, **3**, and **0** from the keypad. If you enter wrongly, press **No** and enter again. You'll get:

SET OPTION	KPAD/Y
TIME 23: <u>30</u>	10: 00

4 Press **Yes**.

Use function 21 to erase a stored fax message before it is sent, (see page 42).

Page Count (Immediate Transmission only)

When your fax message is printed at the other end, page numbers will be printed on the top of each page. Using the Page Count feature, you can select the format in which the page numbers are printed.

If you use Page Count:

Page numbers will be printed in batch-numbering format (for example, p1/3, p2/3, and p3/3 for a three-page message). This makes it easy for the other party to see how many pages you sent, and if any are missing. However, you have to input the number of pages at the keypad before sending.

If you do not use Page Count:

Page numbers will be printed only as a sequence (for example, p1, p2, p3). This makes it difficult for the other party to tell at a glance whether any pages are missing (for example, due to a double feed in your machine's document feeder).

Note: If you do not select Immediate Transmission, Page Count is automatically switched on, and the pages are counted automatically.

1 Press ► until the right display appears.

SET OPTION	Y/►
SET PAGES?	

2 Yes.

SET OPTION	KPAD
PAGES:	

3 Example: 10 pages
1 0

SET OPTION	Y/N
PAGES: 10	

4 Yes.

TTI

Normally, the TTI programmed in your machine is printed at the top of each of the pages you transmit when they are received at the other end. The top of the image will be overprinted if there is no margin at the top of the transmitted page.

In some cases, you may wish the other party to receive an unmarked copy of your original. In this case, you can switch TTI off.

- 1** Press **▶** until the right display appears.

```
SET OPTION      Y/▶
TTI PRINT?
```

- 2** Yes.

```
SET OPTION      Y/◀▶
▶ON             OFF
```

- 3** If you wish to change the TTI setting, press **◀** or **▶** until the displayed setting is correct.

```
SET OPTION      Y/◀▶
ON             ▶OFF
```

- 4** Yes when you have finished.

Document size

If you are going to send a page that is not of a normal size, your machine may have trouble scanning the entire page. For example, if your page is larger than a certain size but smaller than the next size up, you should use the document size selection feature to select the larger size. Otherwise, your machine will not scan the outer margins of your page. This feature is only available if you send a document placed directly on the exposure glass, not with the auto document feeder.

- 1** Press **▶** until the right display appears.

```
SET OPTION      Y/▶
SET DOCUMENT SIZE?
```

- 2** Yes.

```
SET OPTION      Y/◀▶
▶A5D A4D B5D B4D
```

- 3** Select the scanning area using **◀** and **▶** key.

```
SET OPTION      Y/◀▶
A5D ▶A4D B5D B4D
```

- 4** Yes when you have finished.

Sending the Same Message to Many Destinations

This is also called broadcasting.

Caution:

There is a limit of 100 stored numbers overall.


Do not store more than 100 numbers (including those in groups). If you do, your machine will not send the message to all numbers in the group. See page 124 for more details.

1 Remove any document left in the tray or on the exposure glass.

2 Make sure that the machine is in standby mode for faxing .

READY 100% 10:00
SET DOC. OR DIAL NO.

3 The FAX indicator must be lit.
Press the **Fax/ Copy** key if it is not lit.

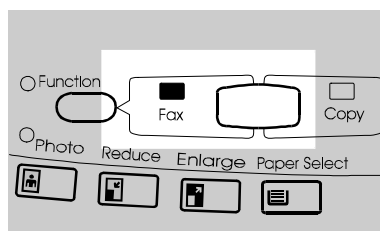

4 Make sure the **Memory** indicator is turned on.
☐ If it is not lit, press the **Memory** key




5 Either:
Place the first page of the document on the exposure glass.
or
Place the entire document face up into the feeder.

TRANSMIT OPTION▶
DIAL FAX NUMBER

How to set the document: see page 4.

- 6** Dial a fax number in one of the following ways.

TRANSMIT	Y/START
00144215842261	

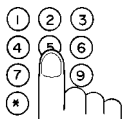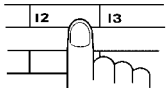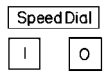a) Ten Key Pad	b) Quick Dial	c) Speed Dial	d) Group Dial
	<p>Example: Quick Dial 12</p> 	<p>Example: Speed Dial 10</p> 	<p>Example:</p> <p>Method 1 *</p> <p>08 of the Quick Dial key.</p> <p>Method 2 **</p> <p>20 of the Quick Dial key and 1 of the ten key pad.</p>

*: This is the example of the case where Group Dial is programmed in 08 of the Quick Dial key.

**: This is the example of the case where Quick Dial key 20 is programmed as the Group key, and Group dial number 1 is programmed.

Programming the Quick Dial: see page 28.

Programming the Speed Dial: see page 32.

Programming the Group Dial: see page 37.

Programming the Group key: see page 41.

Note: The maximum destinations you can dial using the ten key pad is 49. However, this limitation is up to the machine condition.

If you enter the wrong number,
press **No** or **Clear** and enter
again.

Clear to delete one digit.

No to delete the whole number.

- 7** Press **Yes** (not the Start key).
You'll get:

TRANSMIT	DIAL/START
DIAL NEXT FAX NUMBER	


- 8** Repeat steps 6 and 7 until all destinations are entered.

- 9** Press the **Start** key.

The machine stores your message and dials the first number (or, if you selected Send Later, it will return to standby mode and the fax message will be sent at the time that you selected). Send later: see page 20 .

For users who place the document on the contact glass

After a page has been stored, the machine asks you to place the next page on the exposure glass. The indicator shows how much time you have left to place the next page on the feeder and press **Start** key.

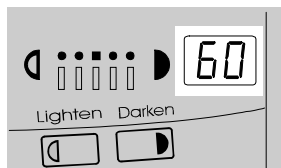

You have 60 seconds. If you do not place a page on the exposure glass and press **Start** within the remaining time, the machine will start to dial.

Either:

Place the next page on the exposure glass and press **Start**. The page will be scanned and stored.

or

If you have no more pages, press **Yes**. The machine will dial the first destination (or, if you selected Send Later, it will return to standby mode and the fax message will be sent at the time that you selected.)

Using the Stamp

Press the Stamp key to achieve the transmission verification stamp. When the Stamp indicator is lit, the machine stamps a small mark on the bottom of each page. During memory transmission, the stamp indicates that the page was successfully stored. For immediate transmission, it shows that the page was sent successfully. You must switch the stamp on before you press **Start**, or the machine will not stamp the first page.

If you wish to change the Stamp default setting, set by user parameter switch 00, bit 0.

0: Verification stamp off

1: Verification stamp on

Redialing

If a message was not transmitted successfully, that does not mean that you have to enter the telephone number again. In many cases, the machine will redial the destination automatically. Or, with the Redial key, you can redial with just a few keystrokes.

Automatic Redialing

The machine will automatically redial the other party if any of the following conditions occurred.

- ☐ The other party was busy
- ☐ There was no reply from the other party

The message was rejected by the machine at the other end because of excessive errors (in this case, redialing will only take place if Memory Transmission was used)

Redialing is done 4 times at 5 minute intervals (for a memory transmission) or 2 times at 2 minute intervals (for an immediate transmission).

The number of redials and the redial interval may be adjusted by a service technician.

During redialing, the number being dialed is displayed as shown on the right.

21255551234 DIALING

Using the Redial Key

The machine remembers the last telephone number that you input. If you have to redial this number, just press the Redial key, then press the Start key.

This feature has the following uses.

If the machine is waiting to redial the other party, you do not have to wait for the redialing interval to expire.


If you wish to send another message to the same address that you just sent last time, you don't have to dial the full number again.

Place the message in the feeder, then press the Redial key, then press the Start key.

To send a fax using Redial, do the following:

1 Remove any document left in the auto document feeder or on the exposure glass.

2 The FAX indicator must be lit.
Press the **Fax/ Copy** key if it is not lit.

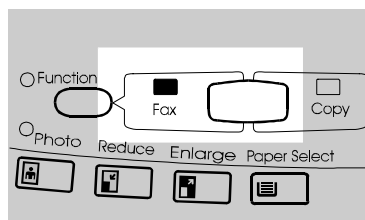

Make sure that the machine is in standby mode for faxing. The display should look like this:

READY	100%	10:00
SET DOC.	OR DIAL NO.	

3 Set your document. How to set the document, see page 4.

4 Press **Redial**.

REDIAL	Y
2125551234	

5 Press **Start**.

Storing & Editing Fax Numbers (Functions 31 & 32)

Numbers that you often use can be stored in memory. A stored number will remain in memory even if the power is cut.

There are two ways to store individual phone numbers. Firstly, you can store a number in its own assigned key. This is called Quick Dial. Secondly, you can store a number as a two-digit code. This is called Speed Dial.

Storing, Editing, & Erasing Quick Dial Numbers (Function 31)

Storing a Number

You can store up to 20 telephone number as Quick Dial keys. In this is example you'll be storing a number in Quick Dial key 01.

1 Press the **Function** key then press **3** and **1**. You'll get this:

```
PROGRAMMING  Y/NEXT▶
31 PROGR. QUICK DIAL
```


2 Press **Yes** and you'll get this:
(At this time, you can print a list of the numbers and groups stored in Quick Dial keys. Press ◀ and **Start**.)

```
QUICK/▶
PRINT LIST◀/SEARCH▶
```

3 Press **Quick Dial 01** You'll see this:

```
01 PROGRAM?  Y/▶
```

Flip the plate, if needed. Make sure you push the flap down until it lies flat.

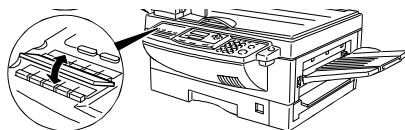

4 Press **Yes**. You'll see this:

(If you're editing a number already stored, the lower line will display a number.)

```
01 KPAD/N
.....
```


- 5** Enter the telephone number.

01 KPAD/Y/N
2125551234

- 6** Press **Yes**. You'll get this:

01 Y/N
PROGRAM LABEL?

- 7** If you *do* wish to enter a label, press **Yes**.

01 ABC
[Patterned area]

Press **No**. And go to step 10

- 8** Enter the label using the Quick Dial keys (see page 122).

01 ABC Y/N
NEW YORK OFFICE [Patterned area]

- 9** Press **Yes**.

[Patterned area] QUICK/◀
PRINT LIST▶/SEARCH▶

- 10** Go to step 2 to store another number, or press the **Function** key if you're done.

Editing a Number

- 1** Press the **Function** key then press **3** and **1**. You'll get this:

PROGRAMMING Y/NEXT▶
31 PROGR. QUICK DIAL

- 2** Press **Yes** and you'll get this:

[Patterned area] QUICK/◀
PRINT LIST▶/SEARCH▶

- 3** Press the Quick Dial Key that you want to edit. Example: **Quick Dial 01**.

01 CHANGE? Y/◀
(a number or label appears here)

- ☐ If the wrong number is displayed, use the ◀ and ▶ keys to scroll through the Quick Dial Keys on the screen.

- 4** Press **Yes**. You'll get this:

01 KPAD/Y/N
2125551234 [Patterned area]

- 5** Edit the number.
Use ◀ and ▶ to move the cursor. Use **Clear** or **No** to delete the number.

01	KPAD/Y/N
2125551234	

No to delete the whole number
Clear to delete the digit on cursor

- 6** Press **Yes**.

01	Y/N
PROGRAM LABEL?	

- 7** Either:

01	Y/N
NEW YORK OFFICE	

- ☐ Change the label: Press **Yes**. And go to step 8.
☐ Keep the label as it is: Press **Yes** twice. Go to step 10.

- 8** Edit the label.
Use ◀ and ▶ to move the cursor. Use **Clear** or **No** to delete the number.
Clear to delete one character
No to delete the whole characters at the cursor
How to enter characters :see page 122.
Example: ABC OFFICE

01	Y/N
ABC OFFICE	

- 9** Yes

	QUICK/◀▶
PRINT LIST◀/SEARCH▶	

- 10** Either:
☐ Edit another: Go to step 3.
☐ Finish: Press **Function**.

Erasing a Quick Dial

For this example, we'll erase the number stored in Quick Dial 01.

- 1** Press the **Function** key then press **3** and **1**. You'll see this:

```
PROGRAMMING  Y/NEXT▶
31 PROGR.  QUICK DIAL
```

- 2** Press **Yes** and you'll see this:

```
    █          QUICK/◀▶
PRINT LIST◀/SEARCH▶
```

(At this time, you can print a list of the numbers and groups stored in Quick Dial keys. Press **◀** and **Start**.)

- 3** Press **Quick Dial 01** (flip the plate, if needed). You'll see this:

```
    01          CHANGE? Y/◀▶
NEW YORK OFFICE
```

- 4** Press **Yes**. You'll see this:

```
    01          KPAD/Y/N
12125551234█
```

- 5** Press **No**. You'll see this:

```
    01          KPAD/N
████████████████████
```

- 6** Press **Yes**. The word **CLEARED** will appear briefly, and then this:

```
    █          QUICK/◀▶
PRINT LIST◀/SEARCH▶
```

- 7** Go to step 2 to erase another number, or press the **Function** key if you're done.

You can store up to 50 telephone numbers as two-digit Speed Dial codes. You can program the Speed Dial code from 00 through 49.

For this example, we'll assume you will store a number in Speed Dial code 00.

- PROGRAMMING Y/NEXT▶
32 PROGR. SPEED DIAL

- PRINT LIST◀/SEARCH▶

(At this time, you can print a list of the numbers stored as Speed Dial codes. Press **◀** and **Start**.)

- ```

01 PROGRAM? Y/◀▶

```

- |     |        |
|-----|--------|
| Ø 1 | KPAD/N |
|-----|--------|

- |            |        |
|------------|--------|
| Ø 1        | KPAD/N |
| 2125551234 |        |


- |                |     |
|----------------|-----|
| 01             | Y/N |
| PROGRAM LABEL? |     |

- 7** You have two options:
- ☐ If you want to program the label for this Speed Dial, press **Yes**.
  - ☐ If you don't want to program the label for this number, Press **No** and go to step 10.

- |     |     |
|-----|-----|
| Ø 1 | ABC |
|     |     |

- |                |         |
|----------------|---------|
| 01             | ABC/Y/N |
| XYZ CO. LONDON |         |

 **9** Press **Yes**.



- 10** Either:
- ☐ Program another: Go to step 3
  - ☐ Finish: Press Function.

**1** Press the **Function** key then press **3** and **2**. You'll get this:

PROGRAMMING Y/NEXT▶  
32 PROG. SPEED DIAL

**2** Press **Yes** and you'll get this:

PRINT LIST◀/SEARCH▶

(At this time, you can print a list of the numbers stored as Speed Dial codes. Press **◀** and **Start**.)

**3** Input the Speed Dial code that that you wish to edit.  
Example: If you edit the Speed Dial code 01, press 0 and 1 from the ten key pad. Or press ► then search the Speed Dial code using ◀ and ►.

01 CHANGE? Y/◀▶  
NEW YORK OFFICE

**4** Press **Yes**.

|            |          |
|------------|----------|
| 01         | KPAD/Y/N |
| 2125551234 |          |

Edit the number.  
Use ◀ and ▶ to move the cursor.  
Use Clear or No to delete the number.

|            |          |
|------------|----------|
| 01         | KPAD/Y/N |
| 2125551235 |          |

**No** to delete the whole number  
**Clear** to delete the digit on cursor

**5** Press **Yes**.

```

01 Y/N
PROGRAM LABEL?

```

**6** Either

01 Y/N  
NEW YORK OFFICE

- ☐ Change the label: Press **Yes**. And go to step 8.
- ☐ Keep the label as it is: Press **Yes** twice. Go to step 10

- 7** Edit the label.  
Use ◀ and ▶ to move the cursor. Use Clear or No to delete the number.

**Clear** to delete one character

**No** to delete the whole characters at the cursor

How to enter characters :see page 122.

Example: LONDON OFFICE

|        |         |
|--------|---------|
| 01     | ABC/Y/N |
| LONDON | OFFICE  |

- 8** Press **Yes**.

|            |           |
|------------|-----------|
| ⓧ          | KPAD/◀▶   |
| PRINT LIST | ◀/SEARCH▶ |

- 9** Either
- ☐ Edit another: Go to step 3.
  - ☐ Finish: Press **Function**.

*Erasing a Speed Dial Number*

For this example, we'll erase the number stored in Speed Dial 01.

- 1** Press the **Function** key then press **3** and **2**. You'll set this:

```
PROGRAMMING Y/NEXT▶
32 PROG. SPEED DIAL
```

- 2** Press **Yes** and you'll set this:

(At this time, you can print a list of the numbers stored as Speed Dial codes. Press ◀ and **Start**.)

```
QUICK/▶
PRINT LIST◀/SEARCH▶
```

- 3** Input the Speed Dial Code that you wish to erase.  
Example: If you want to erase Speed Dial code 01, press **0** and **1**. Or press ▶ then search for the Speed Dial code using ◀ and ▶.  
You'll get this:

```
01 CHANGE? Y/▶
XYZ CO. LONDON
```

- 4** Press **Yes**. You'll set this:

```
01 KPAD/Y/N
2125551234
```

- 5** Press **No**. You'll set this:

```
01 KPAD/N
```

- 6** Press **Yes**. The word **CLEARED** will appear briefly, and then this:

```
PROGRAMMING Y/NEXT▶
32 PROG. SPEED DIAL
```

- 7** Go to step 3 to erase another number, or press the **Function** key if you're done.



## Storing & Editing a Group of Fax Numbers (Function 33)

You can combine many numbers into one group, for easy sequential transmission to all the numbers in that group. These numbers can be selected from those already stored in Quick Dial keys or Speed Dial codes, or you can enter other numbers from the keypad.

There are three groups available, ranging from group 1 to group 3.

You can program the 100 numbers in a Group.

### Storing Numbers In a Group

In this example, we will program numbers into group 1. We will store group 1 in Quick Dial key 08.

**1** Press **Function, 3 and 3** .

```
PROGRAMMING Y/NEXT▶
33 PROGR. GROUP
```

**2** Press **Yes**.

```
GROUP █ 1-3/◀▶
PRINT LIST◀/SEARCH▶
```

**3** Input the number of the group that you wish to program.  
Example: press **1**. You'll get this:

```
GROUP 1 Y/◀▶
-label appears here, if any-
```

**4** Press **Yes**.

```
GROUP 1 Y/N
PROGRAM QUICK?
```

**5** There are two options:

```
GROUP 1 QUICK/N
█
```

- ☐ If you want to program this group into a Quick Dial Key, press **Yes**. And go to step 6.
- ☐ If you don't want to program this group into a Quick Dial key, press **No** and go to step 8.

- 6** Press the Quick Dial key in which you wish to store this new group. Example: Quick Dial 08. Press **Quick Dial 08**. You'll get:

|         |     |
|---------|-----|
| GROUP 1 | Y/N |
| 08      |     |

- 7** Press **Yes**. You'll get:

|                |     |
|----------------|-----|
| GROUP 1        | Y/N |
| PROGRAM LABEL? |     |

- 8** If you *do* wish to enter a label, press **Yes** and use the Quick Dial keys to enter characters (see page 122). Then press **Yes** to accept the label.

|                                                             |        |
|-------------------------------------------------------------|--------|
| GROUP 1                                                     | DIAL/N |
| <div style="background-color: #cccccc; height: 1em;"></div> |        |

- Or** If you do not wish to program the label: press **No**.

- 9** Enter the fax number that you wish to store in the group. For example:

Press **Quick Dial 01**.

|         |     |
|---------|-----|
| GROUP 1 | Y/N |
| 01      |     |

- Or:** Press **Speed Dial, 0**, and **0**.

|         |     |
|---------|-----|
| GROUP 1 | Y/N |
| 00      |     |

- Or:** Dial a full number from the key pad.

|                |                                                             |
|----------------|-------------------------------------------------------------|
| GROUP 1        | Y/N                                                         |
| 00144215842261 | <div style="background-color: #cccccc; height: 1em;"></div> |

**Caution:** The numbers you can program using the ten key pad is up to the machine's condition. You can program up to 48 numbers in the whole groups using the ten key pad.

- 10** Press **Yes**. (If the message **ALREADY PROGRAMMED** appears, either erase the number by pressing Yes, or keep the number by pressing No.)

- 11** Go back to step 9 to enter another number or press **No** if you are finished entering numbers for this group.
  
- 12** Go to step 3 to start working on another group, or press **Function** if you are done with all groups.

## Editing and Erasing from the Group

**1** Press **Function 3** and **3**.

```
PROGRAMMING Y/NEXT▶
33 PROG. GROUP
```

**2** Press **Yes**.

```
GROUP 1-3/◀▶
PRINT LIST◀/SEARCH▶
```

**3** Input the number of the group that you wish to program.  
Example: If you want to delete or edit the contents of the Group1: press 1 on the ten key pad. Then press **Yes**.

```
GROUP 1 Y/N
PROGRAM QUICK?
```

**4** If you want to change the Quick Dial key where that Group is stored: Press **Yes**.

```
GROUP 1 Y/N
08
```

And press **No** and press a new Quick Dial Key.

```
GROUP 1 Y/N
16
```

Note: If that group is not programmed into a Quick Dial key, you don't have to do it.

And press **Yes**. Then go to step 5.

```
GROUP 1 Y/N
PROGRAM LABEL?
```

**5** There are two options:

- ☐ If you want to change the label, press **Yes**. Then Edit the label and press **Yes**.
- ☐ If you keep this label, press **No**.

```
GROUP 1 ABC Y/N
DISTRIBUTOR
```

```
GROUP 1 DIAL/N

```

**6** Input a number that you wish to store in or erase from the group.

```
GROUP 1 Y/N
30
```

Example:

Quick Dial 01: Quick Dial key 01.

Speed Dial 30: Speed Dial, 3 and 0 on the ten key pad.

Full number: Enter it on the 10 key pad.

- 7** Press **Yes**.  
If "ALREADY PROGRAMMED" appears, either:

- ☐ To keep the number, press **No**.
- ☐ To erase the number, press **Yes**.

|         |        |
|---------|--------|
| GROUP 1 | DIAL/N |
|         |        |

- 8** Either
- ☐ To store or erase another number: Go to step 6.
  - ☐ To finish, press **Function**.
  - ☐ To erase a group completely, you have to erase every telephone number from the group one by one, using step 6 and 7.

### Programming the Group key

You can program three groups. However, if there is no Quick Dial Key available, this Group key is helpful. You have to program Quick Dial 20 as the Group key.

- 1** Press **Function 3 1** and **Yes**.

|                                                                                   |         |
|-----------------------------------------------------------------------------------|---------|
|  | QUICK/◀ |
| PRINT LIST▼/SEARCH▶                                                               |         |


- 2** Press **20** of the Quick Dial key.

|             |     |
|-------------|-----|
| 20 PROGRAM? | Y/▶ |
|-------------|-----|

- 3** Press **Yes**.  
Quick Dial 20 is programmed as a Group key.

|                    |     |
|--------------------|-----|
| 20                 | Y/N |
| PROGRAM GROUP KEY? |     |

- 4** Press **Yes**. Quick Dial 20 is now programmed as the Group key.  
To finish, press **Function**.

|                                                                                     |         |
|-------------------------------------------------------------------------------------|---------|
|  | QUICK/◀ |
| PRINT LIST▼/SEARCH▶                                                                 |         |

## Erasing a Stored Message Before It Is Sent (Functions 21 & 22)

Every time you store a fax message in your machine's memory, a new file is created. A file is also created for storing instructions to pick up a fax message left elsewhere (polling, page 44). Each file is given a number. This number appears on the memory storage report, Journal. To see which files are currently in memory, print a file list.

- 1** To erase a fax message stored in memory:  
Press **Function, 2, 1**, and **Yes**

|            |           |         |
|------------|-----------|---------|
| FILE NO.   | ■■■■■     | KPAD/◀▶ |
| PRINT LIST | ◀/SEARCH▶ |         |

- Or* To erase instructions to *pick up* a message (polling):  
Press **Function, 2, 2**, and **Yes**

- 2** Press ▶ to scroll through the files.  
You'll get this.

|          |     |      |
|----------|-----|------|
| FILE NO. | 027 | Y/◀▶ |
|----------|-----|------|

- Or:* Press ◀ to obtain a list of all the files and their number. If you already know the number of the file to erase, enter it directly from the keypad and skip to step 4.

- 3** Scroll through the files with ◀ or ▶.

|                    |     |      |
|--------------------|-----|------|
| FILE NO.           | 028 | Y/◀▶ |
| - number or label- |     |      |

- 4** Press **Yes**.

|          |     |     |
|----------|-----|-----|
| FILE NO. | 028 | Y/N |
| CLEAR?   |     |     |

- 5** Press **Yes** again to erase the file.

## Printing a Stored Message (Function 51)

If you need to see the contents of any of the files, use this feature.

- 1** Press **Function, 5, 1,** and **Yes.**

|                                                                                            |         |
|--------------------------------------------------------------------------------------------|---------|
| FILE NO.  | KPAD/◀▶ |
| PRINT LIST◀/SEARCH▶                                                                        |         |

- 2** Press ▶ to scroll through the messages. You'll see this.

|              |     |
|--------------|-----|
| FILE NO. 115 | Y/▶ |
|--------------|-----|

Or: Press ◀ to obtain a list of all the files and their number. If you already know the number of the file to print, enter it directly from the keypad and skip to step 4.

- 3** Scroll through the message files with ◀ or ▶.

|                          |     |
|--------------------------|-----|
| FILE NO. 116             | Y/▶ |
| <i>-number or label-</i> |     |

- 4** Press **Yes.**

|                          |         |
|--------------------------|---------|
| FILE NO. 116             | START/N |
| <i>-number or label-</i> |         |

- 5** Press **Start** to print the message.

## Polling Reception (Function 11)

Use this feature when you wish to pick up a message from another terminal.

You can poll documents from many terminals with one operation, similar to broadcasting.

The maximum number of terminals that you can poll is 100.

- 1** Press **Function, 1** and **1**

```
TRANS. MODE Y/NEXT▶
11 POLLING RECEIVE
```

- 2** Press **Yes**.

```
POLLING RECV OPTION▶
DIAL FAX NUMBER
```

- 3** Dial the number from where you will pick up the message.

```
POLLING RECV Y/START
-number or label-
```

You can use Quick Dial keys,  
Speed Dial codes, or groups

- 4** Press **Yes**. If you want to dial more numbers, go to step 3.

```
POLLING RECV D/START
DIAL NEXT FAX NUMBER
```

- 5** Press **Start**.

Note: Another terminal should have the polling feature. You cannot poll from a machine that has set secure polling with ID number. Ask the other end to make a polling file without polling ID.

## Polling Options

You can set the time when you poll the message. If you pick up the document, do as following.

- 1** Carry out the steps 1-4 for polling reception, but don't press Start.

```
POLLING RECV D/START
DIAL NEXT FAX NUMBER
```



**2** Press Option (►) and then **Yes**.

|            |        |
|------------|--------|
| SET OPTION | KPAD/Y |
| TIME 10:00 | 10:00  |

**3** Use the ten key pad to enter the time when you want polling to happen. For example enter **1 1 3** and **0**. If you enter wrongly, press Clear or No and enter again. You'll get:

|            |        |
|------------|--------|
| SET OPTION | KPAD/Y |
| TIME 11:30 | 10:00  |

**No** to clear the whole number  
**Clear** to delete one digit

**4** Press **Yes**.

|                      |
|----------------------|
| POLLING RECV D/START |
| DIAL NEXT FAX NUMBER |

**5** Press **Start**.  
The other terminal(s) will be polled at the time you have just set.

## Deleting a Preset Polling Reception (Function 22)

Use function 22. For details, see Erasing a Stored Message on page 42.

## Talking Before Sending a Fax (On Hook Dial)

- 1** Press the **On Hook Dial** key
- 2** Proceed as for a usual fax message but don't press **Start**. (Do not use the handset).
- 3** If you hear a voice from the machine's built-in speaker, pick up the handset and speak to the other party.

If you hear a high-pitched tone instead of a voice, place your fax message in the auto document feeder or on the exposure glass, then press **Start**.

- 4** When you are ready to send your fax message, place your message in the feeder, then ask the other party to press **Start**.
- 5** When you hear a high-pitched tone, press **Start**.
- 6** Replace the handset.

## Sending a Fax using the Handset

You can send a fax message using the handset (External telephone is required)

- 1** Set the document then pick up the handset.
- 2** Dial the other party.
- 3** If you hear a voice, speak to the other party.  
If you hear a high-pitched tone instead of a voice, press **Start**.
- 4** When you are ready to send your fax message, ask the other party to press **Start**.
- 5** When you hear a high-pitched tone, press **Start**.
- 6** Replace the handset.

---

## OTHER FEATURES

Other features are listed here that you might find useful but that you will not set very often.

|                                                      |    |
|------------------------------------------------------|----|
| Verifying Communications, Errors, Counters, etc..... | 47 |
| Rejecting Messages From Certain Senders.....         | 52 |
| Saving Energy .....                                  | 57 |
| Printing the Sender's Identification .....           | 61 |
| Tonal Signals.....                                   | 61 |
| Things a Service Technician Can Change.....          | 62 |

### Verifying Communications, Errors, Counters, etc.

You can obtain reports from your machine either by having your machine print them out automatically, or by printing them out yourself.

#### Automatically Printed Reports

Unless otherwise indicated, the automatic printing of these reports can be turned on or off by changing the bit of the switch of the user parameters (see page 113) indicated in the subtitle.

##### Journal (Switch 03, bit 7)

This report gives detail on each communication made by your terminal. It is automatically output after 35 number of communications.

##### File Reserve Report (Memory Storage Report) (Switch 03, bit 2)

If you switch this report on, it is printed immediately after you store a document in memory for Memory Transmission. It gives the file number, the time that it was stored, and the destinations (including any Group numbers that were selected).

##### Power Failure Report (Stays on)

This report is printed if the machine's power was off for long enough to erase files from the memory. The report gives details of the files that were lost. With this information, you may store messages for transmission again, and contact the senders of any received messages that were lost.

(Note: Phone numbers stored in Quick/Speed/Groups are not lost.)

Communication Result Report (Memory Transmission) (Switch 03, bit 0)

This report is printed out after memory transmission showing whether it was successful or not. If you have switched this report off, a Communication Failure Report will be printed when a communication fails.

Transmission Result Report (Switch 03, bit 5)

This report is printed out after immediate transmission showing whether it was successful or not.

File Reserve Report (polling reserve report) (Switch 03, bit 3)

If you switch this report on, it is printed automatically after you program the machine for polling reception (immediate or send later). It gives the file number, time of polling, and destinations (including any Group numbers that you selected).

Communication Result Report (polling result report) (Switch 03, bit 4)

This report is printed after your machine polls a message from another machine.

Communication Failure Report (ON if Transmission Result Report is OFF)

This report is printed if a memory transmission failure occurred, after a job is completed. It is only printed if the Transmission Result Report is switched off.

Error Report (Turned on/off by a Service Technician)

This report is printed after each unsuccessful communication. The communication failure report (above) is printed after a job has been completed. So while doing a broadcast, the machine may print a number of error reports, and at the end, it prints a communication failure or transmission result report. Check it, and retransmit any pages that were not sent. If a particular problem continues or gets worse, keep the error reports for the service technician.

Printing Part of the Image on the Report (Switch 04, bit 7)

For reference purposes, the machine prints the first few inches of the fax message on the following reports.

- ☐ Transmission Result Report
- ☐ Memory Storage Report
- ☐ Communication Failure Report

Report Formats

Example 1. Error Report\*

|                                               |         |      |      |      |        |
|-----------------------------------------------|---------|------|------|------|--------|
| * * * ERROR REPORT (AUG 01 1995 -06:00) * * * |         |      |      |      |        |
| TTI XYZ COMPANY                               |         |      |      |      |        |
| FILE                                          | ADDRESS | MODE | TIME | PAGE | RESULT |
| -----                                         |         |      |      |      |        |
| Report details appear here                    |         |      |      |      |        |

Example 2. Journal\*

|                                         |      |         |      |      |                  |
|-----------------------------------------|------|---------|------|------|------------------|
| * * * JOURNAL (AUG 01 1995 07:00) * * * |      |         |      |      |                  |
| TTI XYZ COMPANY                         |      |         |      |      |                  |
| <TX>                                    |      |         |      |      |                  |
| DATE                                    | TIME | ADDRESS | MODE | TIME | PAGE RESULT FILE |
| -----                                   |      |         |      |      |                  |
| Transmission details appear here        |      |         |      |      |                  |
| <RX>                                    |      |         |      |      |                  |
| DATE                                    | TIME | ADDRESS | MODE | TIME | PAGE RESULT FILE |
| -----                                   |      |         |      |      |                  |
| Reception details appear here           |      |         |      |      |                  |

The Mode Column

See the bottom of the Journal for a full listing of symbols on the Journal. On other reports a code is given, informing the type of communication. These codes are explained below.

The Result Column

- OK: Successful Communication
- E: An error occurred
- STANDBY: Ready to transmit

The Footnote on the Journal

- TX counter: Total number of transmitted pages
- RX counter: Total number of received pages

Counters listed on the User Parameter List

- SCN: Total number of pages scanned
- PRN: Total number of pages printed

In the Result column, an "E" followed by a code might appear, and a message might also appear at the bottom of the report. This code and message indicate that a problem occurred. The codes are explained below.

| Code | Message                 | Explanation                                                                                                            |
|------|-------------------------|------------------------------------------------------------------------------------------------------------------------|
| 1    | Hang up or line fail    | The other party either hung up or had no message on polling standby. Or there could have been a problem with the line. |
| 2    | Busy                    | The machine at the other end was busy.                                                                                 |
| 3    | No answer               | The machine at the other end did not answer.                                                                           |
| 4    | No facsimile connection | The machine at the other end is not a facsimile.                                                                       |

## Reports You Can Printout Yourself

You can print these reports at any time by following the steps below.

### *Journal (Function 41)*

In addition to the automatic output of this report, which we've described earlier, you can print the Journal at any time.

**1** Press **Function, 4, 1** and **Yes**.

```

 START
PRINT JOURNAL

```

**2** Press **Start** to print out the report.

### *File List (Function 42)*

This is a list of memory transmission files still in memory. It gives information about each stored file, such as the fax numbers, start time, and status.

**1** Press **Function, 4, 2** and **Yes**.

```

 START
PRINT LIST FILE

```

**2** Press **Start** to print out the report.

*Telephone Number List (Function 43)*

You can obtain a list of all the phone numbers stored in the machine. (You can also obtain a list of stored numbers as you edit them. See the section on storing numbers, beginning on page 28.

- 1** Press **Function**, **4**, and **3**.

|                   |         |
|-------------------|---------|
| REPORTS           | Y/NEXT▶ |
| 43 PRINT TEL LIST |         |

- 2** Press **Yes**.

|                   |         |
|-------------------|---------|
| ALL LISTS?        | START/N |
| QUICK/SPEED/GROUP |         |

- 3** To print all the numbers (Quick Dial, Speed Dial, and Group numbers) press **Start**. Then press **Function** and skip steps 4 to 8. Three lists will come out.

- Or** Press **No** and you'll see this:

|                  |     |
|------------------|-----|
| SELECT LISTS     | Y/N |
| QUICK DIAL LIST? |     |

- 4** Either;  
If you want Quick Dial list, press **Yes**.  
If you don't press **No**.

|                  |     |
|------------------|-----|
| SELECT LISTS     | Y/N |
| SPEED DIAL LIST? |     |

- 5** Either;  
If you want Speed Dial list, press **Yes**.  
If you don't press **No**.

|              |     |
|--------------|-----|
| SELECT LISTS | Y/N |
| GROUP LIST?  |     |

- 6** Either;  
If you want Group list, press **Yes**.  
If you don't press **No**.

|       |
|-------|
| START |
|-------|

- 7** Press **Start**.

|                         |
|-------------------------|
| -Message appears here - |
|-------------------------|

- 8** Press **Function**.

## Counters (Function 94)

These counters will help you if you wish to keep a regular check on how many pages your machine has sent, received, and copied. The machine has the following counters:

**TX Counter:** The number of pages that your machine has sent (transmitted)

**RX Counter:** The number of pages that your machine has received

**Scan Counter:** The number of pages that your machine has scanned (including copies)

**Print Counter:** The number of pages that your machine has printed (including copies, reports, lists and pages printed using the printer option.)

- 1** Press **Function, 6**, and enter the access code **2222**, then press **9**, **4**, and **Yes**.

|    |          |
|----|----------|
| TX | : 003256 |
| RX | : 002648 |

- 2** Press **Yes** to check the SCAN and PRINT counter.

|       |          |
|-------|----------|
| SCAN  | : 003287 |
| PRINT | : 002703 |

- 3** When you have finished, press **Function**.

## Rejecting Messages From Certain Senders

### Rejecting Messages From Senders Who Don't Identify Themselves

Your fax machine can reject incoming messages lacking an identifier signal. Follow the user parameter procedure on page 113 to enter these settings.

Switch 05, bit 1

0: Accept such messages

1: Reject such messages

### Rejecting or Accepting Messages from Specified Senders

This feature is called Authorized Reception. It helps you reject junk fax mail. It lets you specify which terminals you wish to receive fax messages from; all others will be shut out.

- 1 - You must specify a list of senders (function 81). See page 54.



- 2 - You must turn Authorized Reception on (function 62). See page 56.
- 3 - You must set your machine to accept or reject messages from senders in that list (user parameters, switch 08, bit 2 and 3; see page 56).

If you *accept* them, the general public will not have access to your fax machine. You accept messages only from a group of people you know.

If you *reject* them, everyone will be able to send you messages *except* the people in the list. This is useful to reject the junk fax mail.

You can store up to 30 identifications with this feature. You can program part of an identification and accept (or reject) messages from all senders whose identification contains that part. See Wild Cards, page 148.

| List of the Authorized Senders (Function 81) | Authorized Reception on/off (Function 62) | Accept messages from special terminals listed or not listed (Function 63) | Result                                                                 |
|----------------------------------------------|-------------------------------------------|---------------------------------------------------------------------------|------------------------------------------------------------------------|
| Empty                                        | On                                        | Either                                                                    | No messages are accepted.                                              |
| Empty/Not empty                              | Off                                       | Either                                                                    | All messages are accepted.                                             |
| Not empty                                    | On                                        | Listed                                                                    | Only messages from special terminals are accepted.                     |
| Not empty                                    | On                                        | non-listed                                                                | All messages are accepted <b><u>except</u></b> from special terminals. |

## Creating the List of Authorized Senders

- ```
SETTING?          Y/◀▶
PRINT LIST◀/SEARCH▶
```

(At this time, you can print an Authorized Reception List by pressing ◀ and **Start** if it has already been created.)

- RTI/CSI ABC ◀▶

- | | |
|-------------|-----|
| RTI/CSI ABC | Y/N |
| XYZ COMPANY | |

- ```
RTI/CSI Y/N
STORE AS WILD CARD?
```

- RTI/CSI      ABC      ◀▶

- 6** Go back to step 3 to enter another RTI or CSI or press **Function** if you are done.

*Editing the Authorized Senders*

- 1** Press **Function, 6** and enter the access code **2 2 2 2**. Then, press **8, 1, and Yes**.
- 2** Press **►** to scroll the RTI/CSI. And the RTI/CSI you want to delete appears, press **Yes**.
- 3** Edit the RTI/CSI of the special terminal.  
**◀** and **►** to move the cursor.  
**Clear** to delete one character.  
**No** to delete the whole characters.  
 How to enter characters, see page 122.
- 4** Press **Yes**.
- 5** To store this as a wild card, (see glossary) press **Yes**, otherwise press **No**. The word PRO-GRAMMED will appear briefly. And you'll see:
- 6** Press **Function**.

```
SETTING? Y/◀▶
PRINT LIST ◀/SEARCH ▶
```

```
RTI/CSI ABC Y/N
XYZ COMPANY
```

```
RTI/CSI ABC Y/N
ABC COMPANY
```

```
RTI/CSI Y/N
STORE AS WILD CARD?
```

```
RTI/CSI ABC ▶◀
████████████████████
```

*Erasing the Authorized Senders*

- 1** Press **Function, 6** and enter the access code **2 2 2 2**. Then, press **8, 1, and Yes**.
- 2** Press **►** to scroll the RTI/CSI. And the RTI/CSI you want to delete appears, press **Yes**.
- 3** Press **No** and **Yes**.
- 4** Press **Function**.

```
SETTING? Y/◀▶
PRINT LIST ◀/SEARCH ▶
```

```
RTI/CSI ABC Y/N
XYZ COMPANY
```

## Switching Authorized Reception On or Off (Function 62)

Before you use Authorized Reception, you have to switch the feature on.

- 1** Press **Function, 6** and enter the access code **2 2 2 2**. Then, press **6, 2**, and **Yes**.

```

SELECT LINE Y/NEXT▶

```

- 2** Press **▶** until the screen is as shown at right.

```

 Y/NEXT▶
AUTHORIZED ON/OFF

```

- 3** Press **Yes**.

```

AUTHORIZED Y/◀▶
▶ON OFF

```

- 4** Press **◀** or **▶** to change the on or off setting.

- 5** Press **Yes** and **Function**.

## Accepting or Rejecting Messages From Senders in the List

You can select accepting or rejecting messages from senders in the list. Follow the user parameter procedure on page 113 to enter the following settings.

Switch 08, bit 2

You have to set it "1"

Switch 08, bit 3

0: Accept calls from senders in the list of special terminals.

1: Reject calls from senders in the list of special terminals.

## Hints for Using Authorized Reception

You must specify the sender's identification code (their CSI or RTI, see page 137) which could be a little different from their phone number.

To get the other party's identification, call and ask for their CSI or RTI code. Explain that you need the number programmed into their fax machine for identification purposes. Or, attempt a communication with their fax machine and print out a transaction confirmation report (function 41, see page 49). Read the identification under the RTI or CSI heading of the report.

## Saving Energy

Laser printing requires the application of heat to bond toner to the printer paper. For incoming messages to be output quickly, a heating element inside the machine must be kept hot. Keeping the fusing unit at the correct high temperature uses electricity. To overcome this waste of energy your machine is equipped with an energy saving feature.

If your machine is left idle for 5 minutes (or if you hold down the **Energy Saver** key for 2 seconds) the heating element will cool. You have three choices: You can let the machine cool to room temperature, you can let it cool halfway or you can let it fully on.

The messages in the display will disappear.

Letting the heating roller cool to room temperature will reduce the amount of electricity the fax machine consumes. However, the fax machine will need to warm-up before it can print out anything. It takes about 30 seconds or less to warm up. Adjust the user parameters to match the settings below (see page 113)

Letting the heating roller cool halfway is not as economical as letting it cool to room temperature, but incoming fax messages and copies can be printed soon after the heating element becomes hot. It takes about 20 seconds or less to warm up. At the factory, this mode is set.

Letting the heating roller fully on is not as economical as other two modes, but incoming fax messages and copies can be printed can be printed right away. Adjust the user parameters to match the settings below (see page 113)

Switch 05 bits 6 & 7

Letting the heating roller cool to room temperature: Bit 6 at 0, Bit 7 at 0

Letting the heating roller cool halfway: Bit 6 at 1, Bit 7 at 0

Leaving the heating roller fully on: Bit 6 at 0, Bit 7 at 1

## Saving Energy with the Night Timer

The Night Timer feature lets you program timers to switch the heating element on and off. There are two differences between the energy saver described above and the night timer:

- ☐ If a fax message comes in while the night timer has switch off the heating element, the message is stored in the memory. It is printed only when the heating element is switched back on.

- ☐ The night timer switches the heater off completely, but the energy saver can also switch it to a midway temperature.

If you wish to print a fax message while the heating element is off, you can temporarily override the timer and print the message. Just press the **Energy Saver** key. The timer will activate again automatically a few minutes after you have printed your message.

As a typical example, you could program the heating element inside the printer to stay off at night and over the weekend. (You can program different settings for every day of the week.)

To use the Night Timer, you must:

1. Program the timers for each day of the week.
2. Switch the Night Timer feature on.

### *Setting the Timer (Function 71)*

**Caution:** While the heating element is disabled, all incoming calls are refused when the memory fills up.

**Example:** For Tuesday, set the Night Timer to switch the heater on at 9:00 and off at 18:00.

- 1** Press **Function, 6** and enter access code **2 2 2 2**. Then, press **7,1** and **Yes**.

```

 Y/N
SET NIGHT TIMER

```

- 2** Press **Yes**.

```

SET TIMER Y/N/◀▶
SUN

```

- 3** Use the **◀** and **▶** keys to scroll through the days of the week.  
Example: Press **▶** twice to go to Tuesday.

```

SET TIMER Y/N/◀▶
TUE

```

- 4** Press **Yes**.

```

TIMER#1 TUE KPAD/Y
ON FROM 00: 00

```

**5** There are two timers for each day, each with an ON/OFF setting. "ON" means that the heater will switch on at the time indicated. "OFF" means that the heater will switch off at the time indicated. To change the ON to OFF, or the other way round, press \* or #. When the ON/OFF display is correct: Go to step 6.

**6** Press ► to move the cursor under the time.

```
TIMER#1 TUE KPAD/Y
ON FROM 00: 00
```

**7** Input the time(9:00): Press **0**, **9**, **0**, and **0** from the key pad.

```
TIMER#1 TUE KPAD/Y
ON FROM 09: 00
```

**8** Press **Yes**.

```
TIMER#2 TUE */#/Y
ON FROM 00: 00
```

**9** Repeat steps 5 to 7 for the second timer (18:00)

**Tip:** If you want the heater on all day, set both timers to ON = 00:00. If you want the heater off all day, set both timers to OFF = 00:00.

**10** Either press **Yes** and **Function** to finish, or go back to step 3 to program the timer for another day.

*Switching the Night Timer On or Off (Function 62)*

The Night Timer feature must be switched on using Function 62.

- 1** Press **Function, 6** and enter access code **2 2 2 2**. Then, press **6, 2** and **Yes**.

```
Y/NEXT▶
SELECT LINE
```

- 2** Scroll through the list of features with ▶ until the screen is as shown opposite.

```
Y/NEXT▶
NIGHT TIMER ON/OFF
```

- 3** Press **Yes**.

```
NIGHT TIMER Y/◀▶
ON ▶OFF
```

- 4** Change the on/off setting by pressing ◀ or ▶.

```
NIGHT TIMER Y/◀▶
▶ON OFF
```

- 5** Finish: **Yes** and **Function**.



## Printing the Sender's Identification

This feature *prints* at the top of the message, the sender's identification (the CSI or RTI, see page 148) that appears on the display. This is useful if you receive messages that don't include identification at the header. Follow the user parameter procedure on page 113 to enter the following setting.

Switch 02, bit 3

0: Don't print the identification code

1: Print the identification code

## Tonal Signals

If your machine is set for a pulse line, it will generate pulses rather than tones. This feature allows you to generate tones from the keypad when your machine is set for pulse dialing. Before you can use this feature, you must program **Quick Dial 19** as the tone key (see below). If your machine is already set for touch tone dialing, you do not need this feature at all.)

To use the feature, dial the other party, then after you are connected, press the tone key (Quick Dial 19) and dial numbers as needed. Once done, hang up.

### If You Have the Optional Handset or Your Own Touch Tone Phone

This will let you to keep Quick Dial 19 for storing a fax number. If you do this, don't forget to switch the handset back after you're done.

### Setting Quick Dial 19 as the Tone Key.

**1** Press **Function, 3, 1**, and **Yes**.

```

 QUICK◀▶
PRINT LIST◀/SEARCH▶

```

**2** Press **Quick Dial 19**.

```

19 PROGRAM? Y/◀▶

```

**3** Press **Yes**.

```

19 Y/N
PROGRAM TONE KEY?

```

**4** Press **Yes** again. Quick dial 19 can now be used as the Tone key.

## Things a Service Technician Can Change

### Sending Reliably vs. Sending More Cheaply

Your machine uses one of two methods for correcting errors in transmission due to bad lines: Error Correction Mode (ECM) or Page Retransmission. Page Retransmission does not work with Immediate Transmission but ECM does. ECM is turned on at the factory.

ECM is more efficient, because it only resends the damaged parts of the transmission, but the number of retransmission attempts is much higher. If you wish reliable communication and do not mind paying extra communication charges when you get a poor line, keep ECM switched on.

Pages can be sent up to 3 times before the machine gives up. If you wish to change the number of retries, contact a service technician.

### Protection Against Wrong Connections

This feature prevents accidentally connecting you to the wrong fax terminal. However, it does not help you if you dialed the wrong number yourself. Also, you will be unable to send messages to a phone number that forwards the connection elsewhere.

Your machine compares the number that you dialed with the identification received from the other end. This identification (called a CSI, see page 137) corresponds to the other party's fax number *as they've stored it in their machine*. Only the last 8 digits are checked, spaces and pauses in the telephone number are ignored. If the CSI is not the same as the telephone number, the transmission is stopped.


**Note:** If you cannot send a message to a certain location using this feature, contact the other end and make sure that they have stored the phone number identification (the CSI) correctly.

This feature has to be switched on by a service technician.


## Basic Copying Procedure

**CAUTION** If your document gets stuck while it is being processed, press the Stop key, and turn to page 97 for instructions on how to safely remove the original. If you make a mistake and want to start over, press the Clear Modes key.

- 1** Make sure your machine is set to copy. If it isn't press the **Fax/Copy** key. The Copy light will be lit.

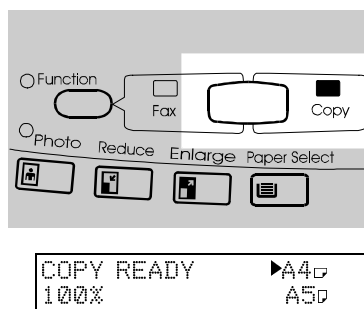


- 2** Lift up the top cover (make sure you raise it by at least 35°, or half way) and place the first page of your document face down on the exposure glass. Then lower the top cover.

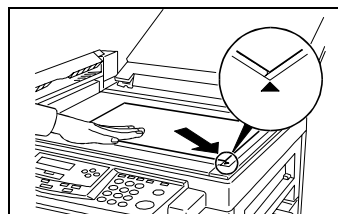



*Or*

Insert the document face up in the feeder and adjust the guides to fit the width of the document. There should be no more than 30 pages in your document.


**Note:** Do not stack documents in the feeder so that they exceed the load limit marker.

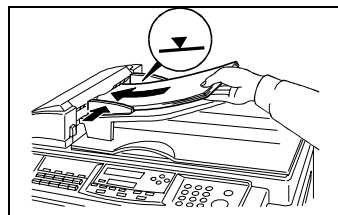


- 3** Select the contrast and the Photo mode. (the following pages describe these).

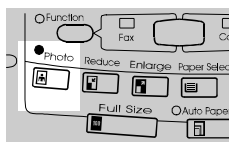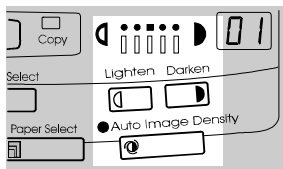

- 4** Select the paper size.


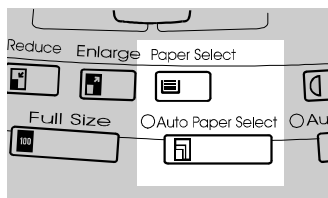


- 5** Select the ratio for reduction or enlargement.

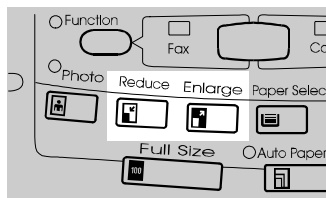

- 6** Enter the number of copies using the ten key pad.

If you enter the wrong number press **Clear** and enter again.

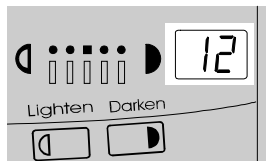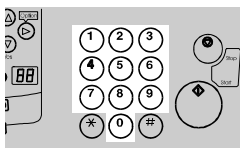

- 7** Press the **Start** key.

**Or** If the Auto Paper Select indicator is lit and you don't have the right size of paper loaded, load the appropriate paper size and press **Start** again.

## Functions That Can Be Used Together

| Second Selection \ First Selection | 1    | 2    | 3    | 4    | 5    | 6    | 7    | 8    |
|------------------------------------|------|------|------|------|------|------|------|------|
| 1. Reduce/Enlarge                  |      | ✓/-- | ✓/-- | ✓    | ✓    | ✓    | ✓/-- | ✓    |
| 2. Erase Center                    | ✓/-- |      | ✓/-- | ✓/-- | ✓/-- | ✓/-- | ✓/-- | ✓/-- |
| 3. Erase Border                    | ✓/-- | ✓/-- |      | ✓/-- | ✓/-- | ✓/-- | ✓/-- | ✓/-- |
| 4. Number Copies                   | ✓    | ✓/-- | ✓/-- |      | ✓    | ✓    | ✓/-- | ●    |
| 5. Center Marks                    | ✓    | ✓/-- | ✓/-- | ✓    |      | ✓    | ✓/-- | ●    |
| 6. Auto Image Density              | ✓    | ✓/-- | ✓/-- | ✓    | ✓    |      | ✓/-- | ✓    |
| 7. Auto Paper Select               | ✓/-- | ✓/-- | ✓/-- | ✓/-- | ✓/-- | ✓/-- |      | ●/-- |
| 8. Manual Feed                     | ✓    | ✓/-- | ✓/-- | ▲    | ▲    | ✓    | ▲/-- |      |

✓: Possible

▲: The second selection is not possible.

●: Second setting is possible, but it cancels the currently selected mode.

--: Erase center, erase border and auto paper select cannot be used with the auto document feeder.

" / " means that " with exposure glass / with auto document feeder"

 

It doesn't care with exposure or with auto document feeder if there is no " / "

## Selecting the Paper Size

### Manual Paper Select

The manual selection mode is useful when you wish to select the copy paper size yourself.


Press **Paper Select** or ▲ ▼ to select the size you require. The current selection is indicated by a ►.

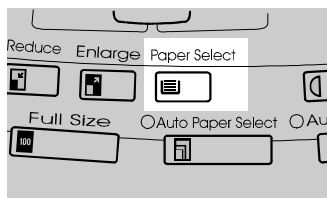

### Auto Paper Select

The machine automatically selects the appropriate copy paper size, based on the original's size and the reproduction ratio that you selected.

Lit the **Auto Paper Select** indicator pressing the key.

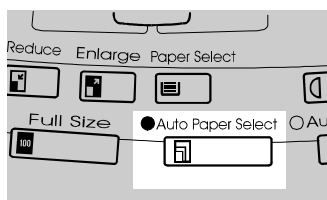

**Note:** You cannot choose this function when using the auto document feeder or the bypass.

## Copying/Printing Using the Bypass

Use the bypass feed table for the following types of copy paper.

- ☐ Paper of a different size from those currently in the paper trays
- ☐ Paper of non-standard size or weight, such as OHP transparencies, adhesive labels, or postcard.

Load one sheet at a time onto the bypass feed table.

**Caution:** Do not put paper on the bypass feed table while printing is in progress. Wait for the page to finish printing before placing the next sheet.

### Usage condition

Paper weight: 60 to 90g/m<sup>2</sup>


Width: 100 to 257mm

Length: 148 to 364mm

### How to Use the Bypass

- 1** Insert the sheet with the printing side down. The edge should touch the right side of the entrance.

Make sure that the paper has advanced into the manual feeder.

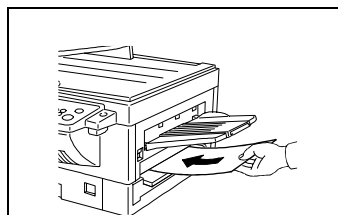

**Note:** If a paper is left in the manual feeder for 3 minutes, it will be fed out automatically.

- 2** To enter the paper size, press **►**.

**Note:** If you do not enter the paper size, the back side of next paper might be dirty.

```
COPY READY SIZE►
100% ►BYPASS FEED
```

```
SET COPY OPTION Y/►
PAPER SIZE
```

- 3** Press **Yes**.

```
PAPER SIZE KPAD/Y
WIDTH■■■■■MM
```

- 4** Enter the paper width. You can enter from 100 through 257mm

|             |        |
|-------------|--------|
| PAPER SIZE  | KPAD/Y |
| WIDTH 216MM |        |

Example:

216mm; Press **2,1** and **6** of the ten key pad.

- 5** Press **Yes**.


|            |              |
|------------|--------------|
| COPY READY | SIZE▶        |
| 100%       | ▶BYPASS FEED |

- 6** Set the document and press **Start**.




**If you install the optional paper cassette**

- 1** Slide the side cassette cover into the machine.

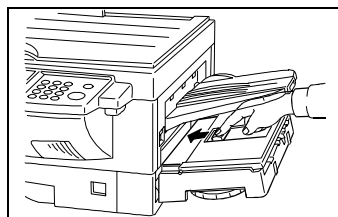


- 2** Insert the sheet with the printing side down. The edge should touch the far side of the entrance.

Make sure that the paper has advanced into the manual feeder.

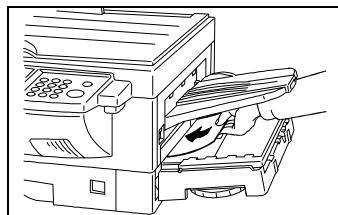

**Note:** If a paper is left in the manual feeder for 3 minutes, it will be fed out automatically.

- 3** Follow copying procedure in the above section titled "How to use the Bypass". After taking copy, slide the side cassette cover back.

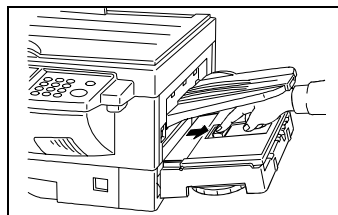


# Enlarging & Reducing

## Selecting a Magnification Ratio

- 1 Set the document. (See page 63.)
- 2 Press the **Reduce** or **Enlarge** key repeatedly to reach the desired ratio.

Enlargement ratios:  
115, 122, 141 and 200%.  
Reduction ratios:  
50, 71, 82, 87, and 93%

Press the **Full Size** key to return to 100%.

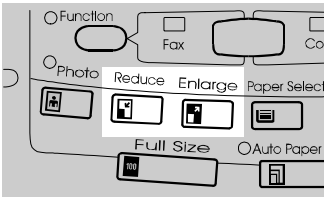

- 3 Follow the the standard copying. See page 63.

## Which Ratio Do I Choose?

The preset ratios will enlarge or reduce from one standard size to another, or they will allow you to create a border around the copy without losing any part of the original image. For example 141% enlarges a A5 document to a A4 size copy, while reducing a A4 document 93% will ensure the entire document will be reproduced, including the border area.

### Reduction ratios

- 50%
- 71%: A4 to A5, B4 to B5
- 82%: B4 to A4
- 87%: A4 to B5
- 93%: Create a margin

### Enlargement ratio

- 115%: B5 to A4
- 122%: A4 to B4, A5 to B5
- 141%: A5 to A4, B5 to B4
- 200%


## Copying Darker or Lighter Originals

### Manual Image Density Mode

**1** Set the document. (See page 63)

**2** Press either **Lighten** or **Darken**.  
There are 5 density levels in all.

If the **Auto Image Density** indicators is on, turn it off by pressing the **Auto image Density** key.

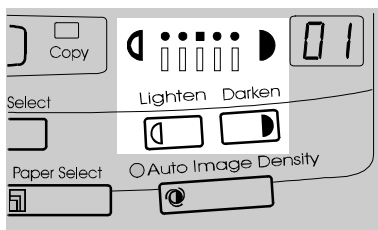


**3** Follow the the standard copying. See page 63.

### Auto Image Density Mode

Use this setting when you wish the machine to adjust the copy image density automatically to maintain a clear background.

**1** Set the document. See page 63.

**2** Make sure that the **Auto Image Density** indicator is lit.  
☐ If it is not, press the **Auto Image Density** key.

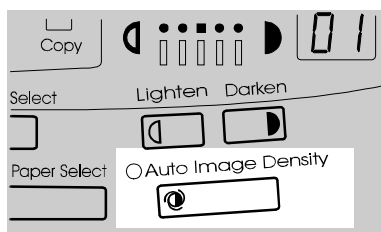


**3** Follow the the standard copying. See page 63.

## Combination Setting

Use this setting if you wish to make minor adjustment to the copy image density that was automatically selected by the machine.

- 1** Press the **Auto Image Density** key to turn on the Auto Image Density indicator.

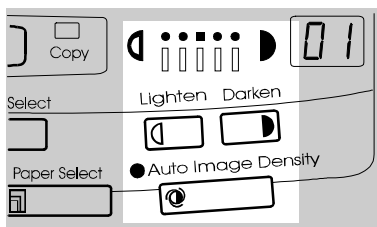


- 2** Press the **Manual Image Density** key to select the image density level.

## Copying Photographs

If your document contains a photograph, or diagrams with complex shading patterns or grays, switch Photo Mode on to achieve optimum image quality.

**1** Set the document. (See page 63)

**2** Press the **Photo** and the Photo indicator will illuminate.

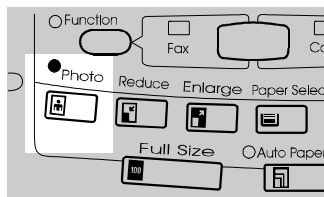

**3** Follow the the standard copying procedure. See page 63.

**4** Press **Start**.

Note: You cannot select the Auto Image Density with the Photo mode.

## Clearing the Previously Used Settings

All previously entered settings and modes will be automatically cleared three minutes after finishing copying. However, if you need to clear all modes immediately, press the **Clear Modes** key.

## Options


The option key lets you set several features.

### Erase centre

When taking copies from a book, you can erase the shadow caused by a spine that won't lie flat on the glass. You can set its width by Function 72. See page 118.

**Note:** Erasing centre is not successful with document sizes other than B4, A4, A5, B5 or F size.

Scanning direction

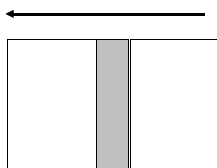

The shaded part will be erased.

- 1** Set the document.
- 2** Press the option (►) key until the opposite display appears.
- 3** Press **Yes** to set the option.
- 4** Press ◀ to turn Erase Centre on.
- 5** Press **Yes** to accept the setting.
- 6** Follow the standard copying procedure. See page 63.

```
SET COPY OPTION Y/►
ERASE CENTRE
```

```
ERASE CENTRE Y/◀►
ON ►OFF
```


```
ERASE CENTRE Y/◀►
►ON OFF
```

```
COPY READY A4◻
100%
```

## Erase border

 Erasing border lets you create a white border around the copy. You can set its width by Function 72. See page 118.

**Note:** Erasing border is not successful with document sizes other than B4, A4, A5, B5 or F size.



The shaded  area will be erased.

- 1** Set the document.
- 2** Press the option (▶) key until the opposite display appears.
- 3** Press **Yes** to set the option.
- 4** Press ◀ to turn Erase Border on.
- 5** Press **Yes** to accept the setting.
- 6** Follow the standard copying procedure. See page 63.

```
SET COPY OPTION Y/▶
ERASE BORDER
```

```
ERASE BORDER Y/◀▶
ON ▶OFF
```

```
ERASE BORDER Y/◀▶
▶ON OFF
```

```
COPY READY A4◻
100%
```

## Number Copies

When making several copies of a document, this feature identifies each copy with a different number.

The control number will be printed as following diagram.



## Example

If you enter the starting number 20 and make 10 copies, each copy has its number as "#020, #021, #022.....#029".

- 1** Set the document.
- 2** Press the option (▶) key until the opposite display appears.  
  
Press **Yes** to set the option.
- 3** Press ◀ to turn Number Copies on.
- 4** Press **Yes** to accept the setting.

```
SET COPY OPTION Y/▶
NUMBER COPIES?
```

```
NUMBER COPIES? Y/◀▶
ON ▶OFF
```

```
NUMBER COPIES? Y/◀▶
▶ON OFF
```

```
NUMBER COPIES Y/▶
START AT 001
```



- 5** Enter the starting number using the ten key pad.

**Example:**

If you want start the number from "#012", press 1 and 2.

- ☐ If you enter the wrong number press **No** or **Clear** and enter the correct number.

|               |        |
|---------------|--------|
| NUMBER COPIES | KPAD/▶ |
| START AT 012  |        |

**Clear** to delete the one digit.

**No** to delete the whole number.

- 6** Press **Yes** to accept the setting.

|            |    |
|------------|----|
| COPY READY | A4 |
| 100%       |    |

- 7** Follow the standard copying procedure. (See page 63.)

## Center marks

Prints small triangular center marks at the top and left sides. These allow you to accurately center your copies when punching holes in them.

**1** Set the document.

**2** Press the option (►) key until the opposite display appears.

```
SET COPY OPTION Y/►
CENTER MARKS
```

**3** Press **Yes** to set the option.

```
CENTER MARKS Y/◀►
ON ►OFF
```

**4** Press ◀ to turn Erase Center on.

```
CENTER MARKS Y/◀►
►ON OFF
```

**5** Press **Yes** to accept the setting.

```
COPY READY A4□
100%
```

**6** Follow the standard copying procedure. (See page 63.)

# MAINTAINING YOUR MACHINE

## Setting / Adding the Paper (📄)

Before you use the machine, set the paper in the cassette.

And when the Add Paper indicator (📄) on the operation panel is lit, the drawer or optional side cassette is empty. To add paper to the side cassette option, see appendix B, on page 143.


**Caution:** To avoid dropping the drawer, hold it by the front and side while pulling it out.

**Caution:** Keep unused indicator plates. The plate actuates the proper inner switch for the indicated paper size.

**Caution:** Make sure the paper conforms to the specifications on page 123.


- 1** Slide the drawer all the way out, and place it on a large flat surface.

Remove the paper if you change paper size.

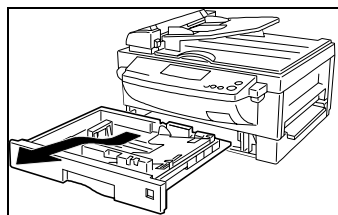


- 2** \* Press the lock and adjust the side fence to the proper size.


\* If you aren't changing the paper size, skip this step and all others marked with an asterisk.

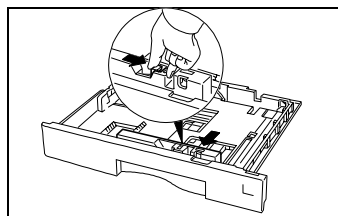


- 3** \* Pinch the rear fence firmly and slide to the proper size setting.

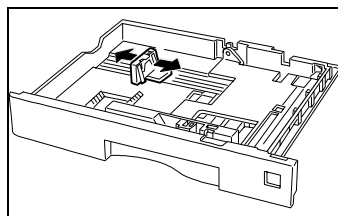


- 4** Flex the new stack of paper a few times.

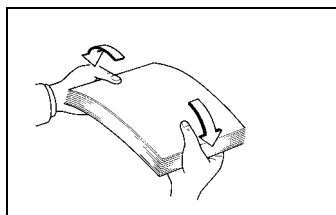


- 5** Press the plate (or paper when you add paper) until the bottom plate locks itself.

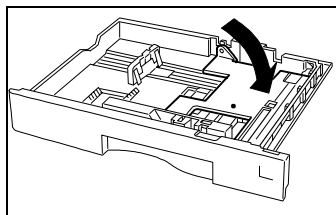


- 6** Put the stack in the drawer. Do not fill the drawer past the load limit marker and make sure the stack of paper fits under the corners. Push the side and rear fence toward the paper.

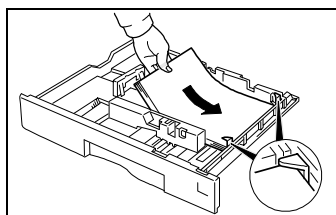


- 7** \* Pinch the paper size indicator plate, push it up, and slide it out.

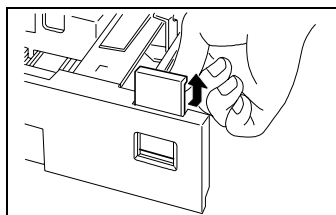

- 8** \* Slide in the plate for the new paper size.

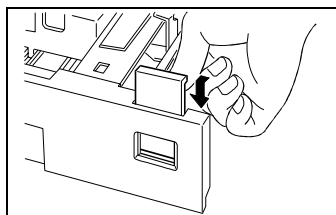

- 9** Replace the drawer in the machine.

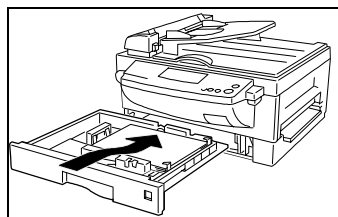

### Storage Condition of the Copy Paper

- ☐ 60 to 90g/m<sup>2</sup> copy paper is recommended: A4 or A5 sizes are the most commonly used.
- ☐ Do not use damp paper, or copies will be defective.
- ☐ Do not touch copy paper if your fingers are wet or oily; fingerprints may appear on the copy.
- ☐ Keep paper in a vinyl bag if it will not be used for a long time.
- ☐ Store in a cool dry place.
- ☐ Store flat. Do not stand upright.
- ☐ The following materials cannot be used in the paper cassettes : Post cards, Tracing paper, OHP sheets, Adhesive labels
- ☐ Do not overload the paper trays.
- ☐ If multi-sheet feeding occurs or dog-eared copies are made when using recycled paper in the paper cassette, fan the recycled paper and load it in the paper cassette again.

## Replace Toner Cassette & Cleaning Pad

When the Add Toner indicator (🔍) starts to blink, the toner cassette is almost empty. You will be able to make 100 more copies before you have to change it. When the indicator remains lit, it is time to install a new toner cassette.


And replace the cleaning pad at the same time. The cleaning pad cleans the fusing roller. When the indicator starts to blink, prepare a new toner cassette.

**WARNING:** Do not incinerate waste toner or depleted cassettes. Toner dust might ignite suddenly if exposed to flames.

**Caution:** Lift the toner cartridge by the holes on top.


**Caution:** Do not touch any parts other than those specified in the procedure.

**1** Open the top unit and lift it until it lock in place.

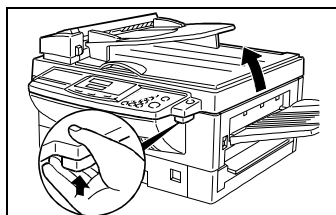


**2** Put your thumbs in the holes and carefully slide out the old toner cassette without shaking it.



**Caution :** Never touch the photo-conductor under the toner cassette (green drum).

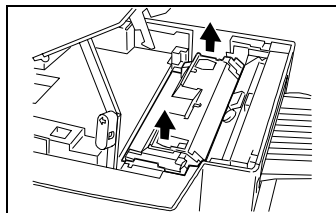


- 3** Unpack the new toner cartridge. Pull out the sheet of the new toner cassette. And remove the black sheet.

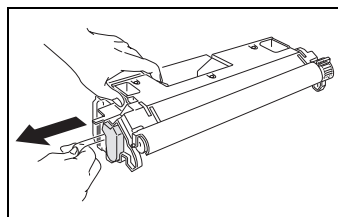


- 4** Slide the toner cassette into the machine as far as it will go. Gently push down the cassette to secure it in place.

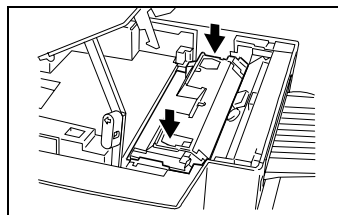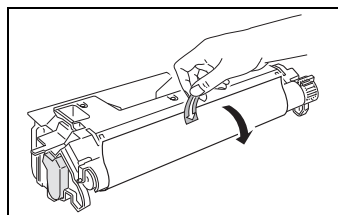



- 5** Remove the old cleaning pad.

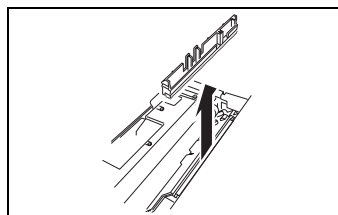

- 6** Install the new cleaning pad. Match the position of the arrow on the cleaning pad with the arrow on the inside the machine.  
**Note:** Push the cleaning pad until you hear it clicking.

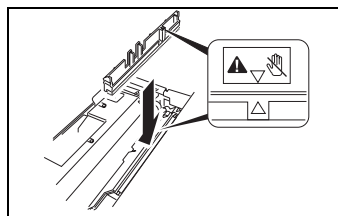

- 7** Push the lever arm inwards lifting up the top unit, let the top unit sink slowly in place, and press down to lock it.

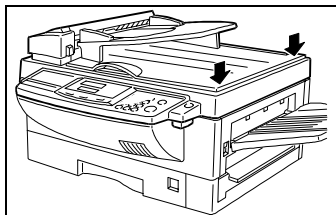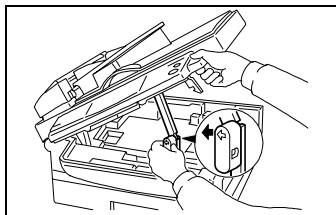

### Storage Condition of the Toner Cassettes

- ☐ Store in a cool, dark place.
- ☐ Never store where they may be exposed to heat.
- ☐ Keep out of the reach of children.
- ☐ Do not eat toner.
- ☐ Do not lay heavy objects on toner cassettes.
- ☐ Do not incinerate toner or toner containers. Toner dust may cause flash-back when exposed to an open flame.



## Replacing the Photoconductor Drum

The photoconductor receives the print image before it is transferred to paper. To ensure optimal quality, replace them every 30 000 copies.

If the following display appears, replace the photoconductor.

REPLACE PC ▼  
SET DOC. OR DIAL NO.

To check how many sheets you've printed, please refer the section titled "Counters" (See page 52.)


**Caution:** Do not expose the photoconductor drum to light for an extended period.

**Caution:** Do not touch or scratch the drum: it cannot be repaired. Any scratch on the drum would be reproduced on prints.


**Caution:** Do not touch any parts other than those specified in the procedure.

**Caution:** Though organic photoconductor drums are safe for the environment, dispose of used drums according to local regulations.


**1** Remove the print tray.

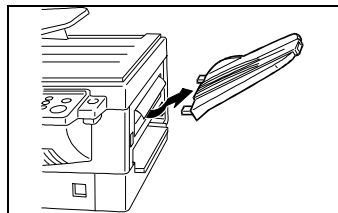


**2** Open the top cover unit and lift it until it locks in place.

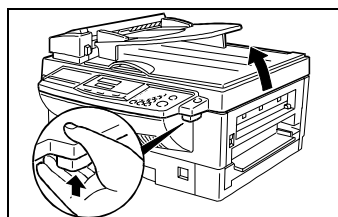



- 3** Open the side cover.

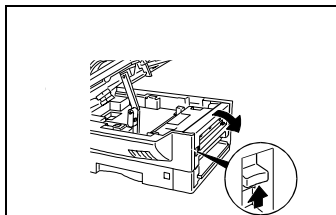

- 4** Put your thumbs in the holes and carefully slide out the old toner cassette without shaking it.

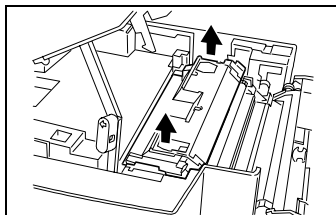



- 5** Remove the old photoconductor. Roll up the green plates on the old drum. Hold the used drum by the plates and carefully pull it out.

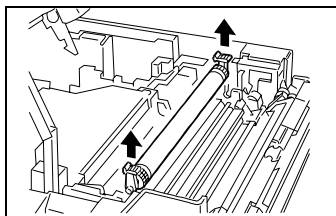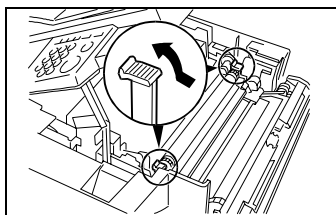


**Caution:** Do not expose the new drum to light for an extended period of time. Do not touch the surface of the drum.

- 6** Put the drum as shown in the illustration with the plate marked "R" at the rear of the machine. And remove the sheet of the photoconductor.


**Caution:** Never touch surface on the photoconductor. (Green drum)

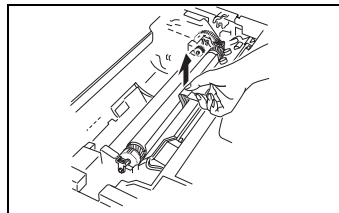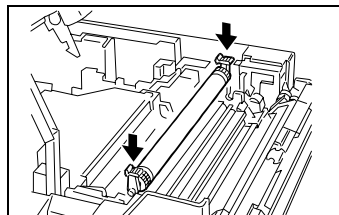


- 7** Turn the lever by gently pushing it.

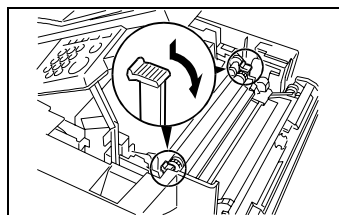



- 8** Reinstall the toner cartridge (see page 82).

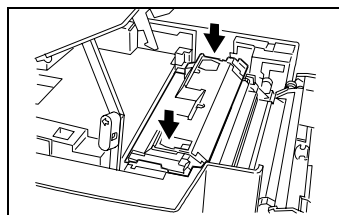


- 9** Close the side cover. Push the both end of the side cover until it clicks.

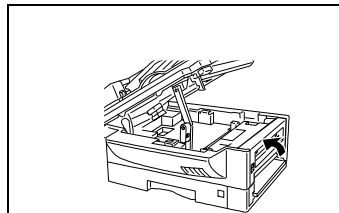

- 10** Push the lever arm inwards lifting up the top unit, let the top unit sink slowly in place, and press down to lock it.

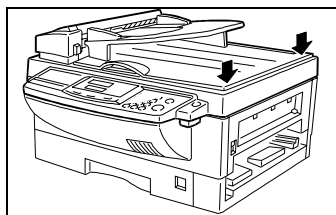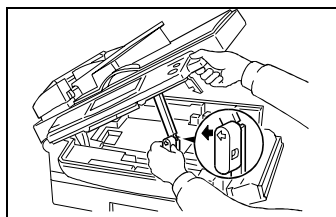

- 11** Reinstall the print tray.

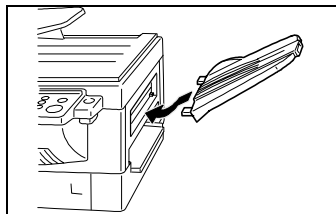

After you replace the photoconductor, reset the counter for photoconductor inside the machine.

- 1** The display is shown as opposite.

REPLACE PC ▼  
SET DOC. OR DIAL NO.

- 2** Press ▼.

REPLACE PC? Y/N


- 3** Press **Yes**.  
The counter resets.

READY 100% 10:00  
SET DOC. OR DIAL NO.


## Replacing the Stamp

When the marks made by the stamp becomes pale, replace the stamp as described below.

- 1** Push the ADF (auto document feeder) release button and pull up the ADF.

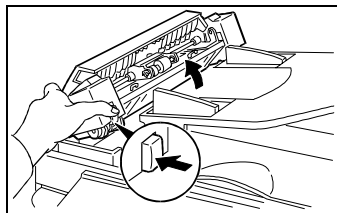

- 2** Take out the old stamp by tweezers. If tweezers are not available, you may press the point of a pencil down vertically into the stamp and remove it by lifting straight up. Replace the stamp as shown.

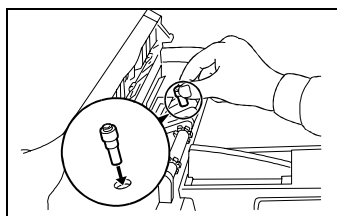


- 3** Close the ADF.

## Daily Maintenance


**Caution:** When wiping or cleaning components, do not use any sort of cleaning agent or abrasive powder. Use a damp soft cloth to clean and a dry soft cloth to wipe dry.

### Cleaning the exposure glass and the platen cover

- 1** Lift up the upper cover and clean the exposure glass with a damp soft cloth and wipe with a dry one.

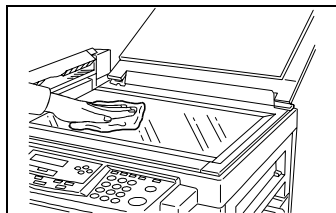


- 2** Clean the platen cover with a damp cloth and wipe it with a dry cloth. Use a weak cleaning solution if stains do not come off.

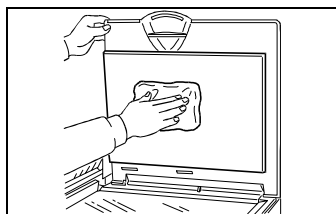


## Cleaning the ADF roller


- 1 Open the ADF cover.

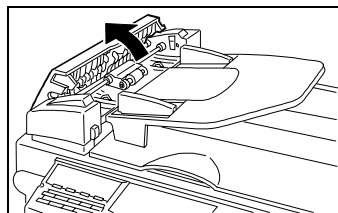


- 2 Remove the feed unit. Push to the side, then pull it toward you.

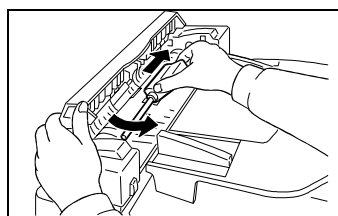


- 3 Clean the feed roller and the separation rollers with a damp cloth.

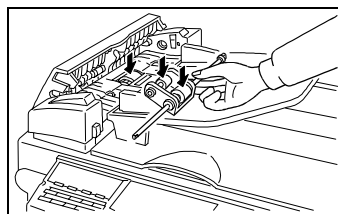


- 4 Reinstall the feed unit. Push to the side then set the feed unit.

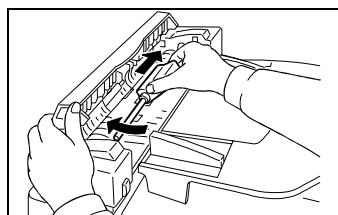


- 5** Close the ADF cover.

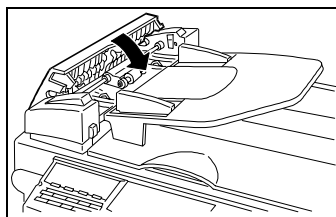

- 6** Lift up the top cover. And push the scanner release button and pull up the scanner.

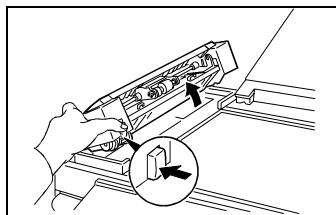

- 7** Clean the roller and white strip with a damp cloth then clean the exposure glass with a dry cloth

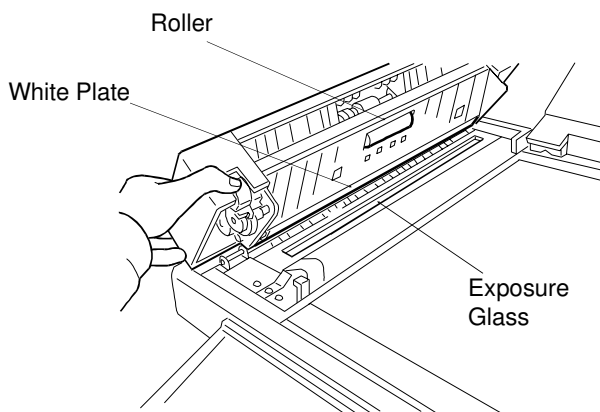


- 8** Close the scanner and lower the upper cover.




## Cleaning the Corona Wire

Please clean the corona wire on the toner cassette if the vertical black line appears on the printing image.


- 1** Open the top cover unit and lift it until it locks in place.

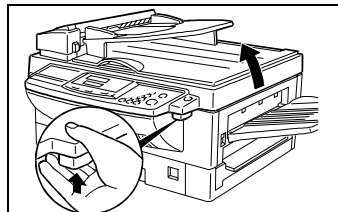


- 2** Put your thumbs in the holes and carefully slide out the old toner cassette without shaking it. And place it on a sheet of paper on a flat surface.

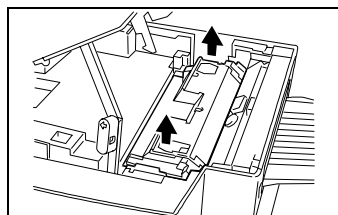



- 3** Gently drag the lever from end to end twice. Make sure that the lever returns to the original position after cleaning.

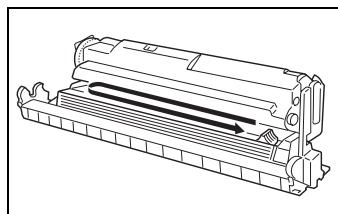

- 4** Reinstall the toner cassette.

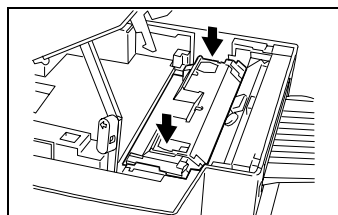

- 5** Push the lever arm inwards lifting up the top unit, let the top unit sink slowly in place, and press down to lock it.

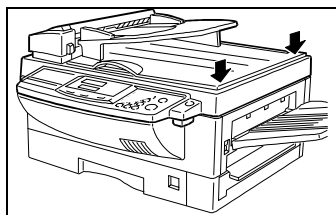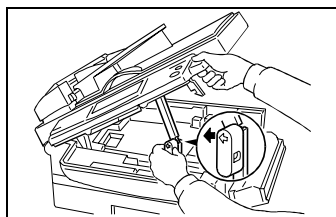

---

## TROUBLESHOOTING

**Caution:** Do not attempt to make any repairs other than those described in this manual. Removing covers may expose you to dangerous voltages and other risks. Refer all servicing to qualified personnel.

Check the indicators and the display panel. The indicators light if there are any problems. Check the description in the display.

### If an Indicator Lights Up on the Operation Panel


#### If **ERROR PRESS STOP KEY** appears in the display:


If the Communicating indicator is not lit, press **Stop**.

If the Communicating indicator lit, wait until it goes out, then press **Stop**.

**The Receive File indicator is lit:** You've received a fax message which is now stored in the machine. See page 16 for instructions on how to print it out.

**The Check Display indicator is lit:** Read the message on the LCD display and check the descriptions listed on page 108.

 **is blinking or lit:** You are either out of toner or about to be out of toner. See page 82 to change the toner cassette and the cleaning pad.

 **is lit:** You're out of paper. See page 79 for adding paper to the front cassette and see page 143 for adding paper to the side cassette.

One of the Printer indicators is lit: please refer to the Printer Interface Operator Manual for instructions.

### Other Possible Problems

#### You want to take out the document

Open the document feeder, and take out the document.

**Caution:** Do not pull out the document without opening the auto document feeder, or you will damage the scanning mechanism.


## Clearing a Document Jam

If **CLEAR ORIGINAL** appears in the display:


**Problem:** There is a document jammed in the feeder. Remove the jammed document and repeat the transmission procedure.

**Cause:** The document may be longer than the maximum limit (see the document specifications on page 123).


**1** Pull up and open the ADF cover.

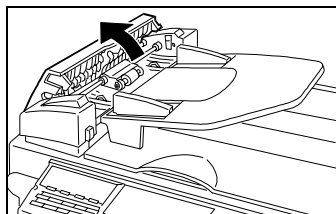


**2** Carefully take out the jammed original. Do not leave any pieces inside. Then close the scanner.

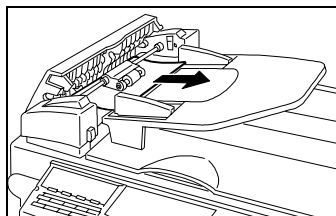

**3** If you can not remove the document, lift up the top cover. Then open the ADF unit pressing the ADF release button.

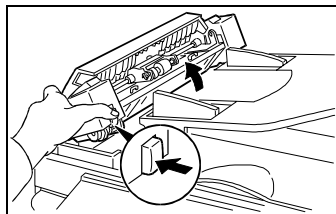

**4** Carefully take out the jammed original. Do not leave any pieces inside.

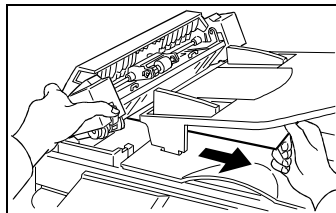


**5** Close the ADF unit and the ADF cover until it clicks.

## Copy, Fax, or Print Jams


If **CLEAR COPY** appears in the display, there is a copy jam. There are two possible locations: the drawer or the inside of the machine (including the copy feed-out area).

### Copy exit area


- 1** Remove the paper tray.

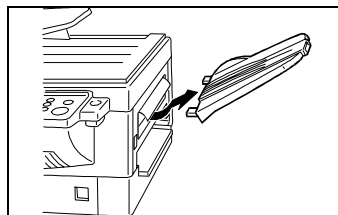

- 2** Open the copy exit cover and carefully take out the jammed paper. Do not leave any pieces inside.

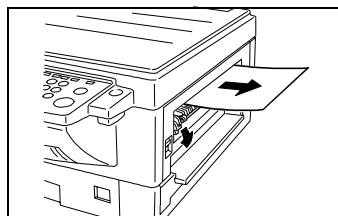


- 3** Close the copy exit cover

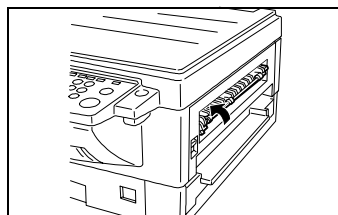


- 4** Replace the print tray.

## Manual Feeder Area (or Optional Side Cassette Entrance)

- 1 Remove the print tray.

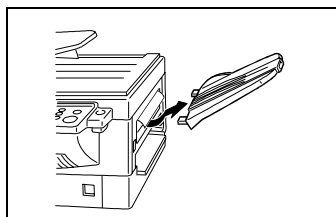


- 2 Pull out the cover with manual feeder or optional side cassette.

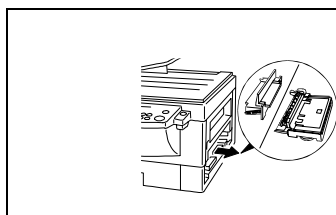


- 3 Gently pull out the misfed paper. Do not leave any pieces inside.

**Note:** Push the lever inside the machine.

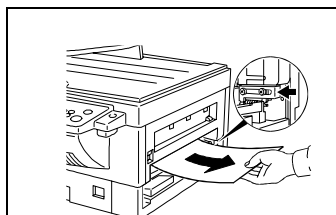

- 4 Replace the cover with the manual feeder or the optional side cassette.

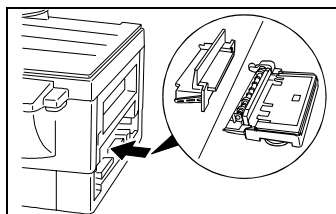

- 5 Replace the paper tray.


## Inside the Machine

**CAUTION:** Do not touch the fusing unit. It may be hot.


**CAUTION:** Do not touch the photoconductor drum (Green drum).

**CAUTION:** Any toner on the paper will not be fixed to the paper. Be careful not to get your hands or clothing dirty.


- 1** Remove the paper tray.

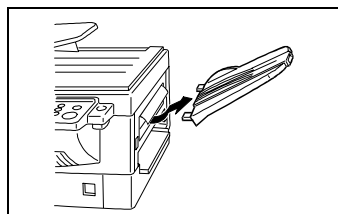


- 2** Pull off the cover with the exit cover or optional side cassette. Use both hands to remove the side tray.

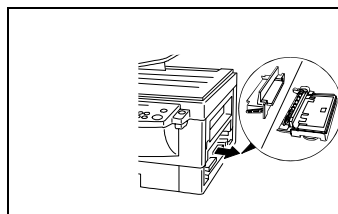


- 3** Open the top unit and lift it until it lock in place.

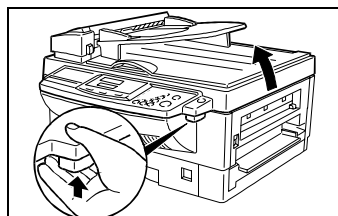


- 4** Open the side cover.

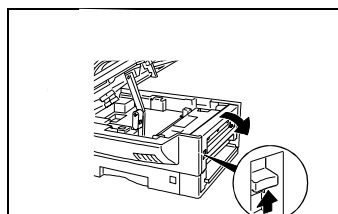


- 5** Pull out the jammed paper carefully.

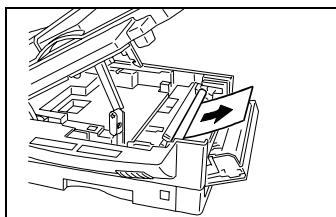


- 6** If you cannot remove the jammed paper, pull out the paper drawer completely and remove the jammed paper.

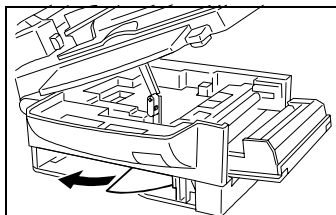


- 7** Push the stack of paper until it clicks. Make sure that the paper is under the corner.

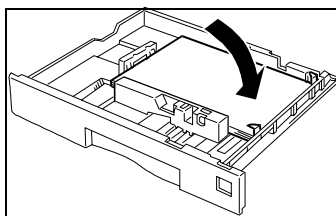

- 8** Set the paper cassette.


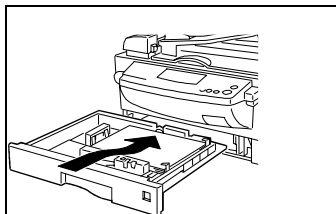


- 9** Close the side cover. Push the both end of the side cover until it clicks.

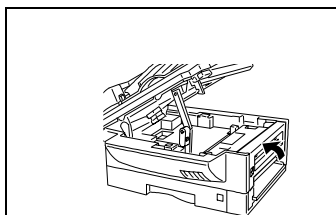





- 10** Push the lever arm inwards lifting up the top unit, let the top unit sink slowly in place, and press down to lock it.

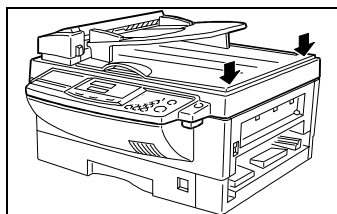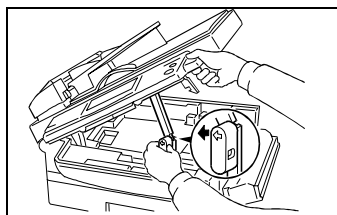

- 11** Reinstall the optional side cassette or the exit cover.

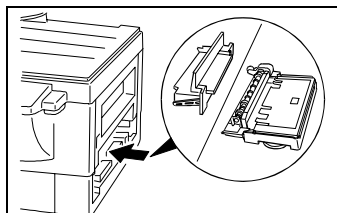

- 12** Replace the print tray.

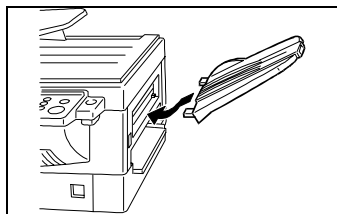

## If Messages You Receive Don't Fit on Your Paper

### Breaking Down Large Format Messages

If the incoming document is longer than the paper in your fax machine, the machine will split it into many sheets. The tail end of the message will be reproduced at the head of the next page. The images overlap each other by 10 mm. (You can ask a service technician to turn off the overlap.)

### Length Reduction

If the incoming document is too long but still within the limits below, the machine can reduce it so that it will fit on one page.

| Paper size in the cassette | Maximum reducible length |
|----------------------------|--------------------------|
| A5 sideways                | 190.1 mm                 |
| B5 sideways                | 235.8 mm                 |
| A4 lengthwise              | 388.8 mm                 |
| F/F4                       | 433.2 mm                 |
| B4                         | 478.2 mm                 |

## Communication problems

If **PRESS STOP** appears in the display: Press **Stop**.

- Causes:**
- A poor line caused the communication to fail.
  - The line is busy or noisy. Try to retransmit.
  - The other machine is out of order. Ask the other party to check their machine.

## **RDS (Remote Diagnostic System)**

### **Overview**

If your machine has a problem, a service technician can perform various diagnostic tasks over the telephone line from the service station to try to find out what is wrong with your machine. The service technician can also use RDS to change some of your machine's settings if you request it.

## Operational Difficulties




| Problem                                                                               | Required Action                                                                                                                                    |
|---------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| STANDBY MODE                                                                          |                                                                                                                                                    |
| Nothing happens when the switch is turned on.                                         | <p>Check the power cord. Is it properly plugged into the outlet?</p> <p>➤ Plug it in firmly</p>                                                    |
| SET DOC. OR DIAL NO. is not displayed.                                                | <p>Switch the power on.</p> <p>➤ If the Power indicator does not light, check that the power cord is plugged in.</p>                               |
|                                                                                       | <p>The machine might be the Energy Saver mode.</p> <p>➤ Hold the Energy Saver key for two seconds.</p>                                             |
| The display does not show the Ready condition, or the machine stops during operation. | <p>Does CLEAR ORIGINAL or CLEAR COPY appear in the display ?</p> <p>➤ Clear the misfeed. See page 97.</p>                                          |
|                                                                                       | <p>Does ADD PAPER appear in the display?</p> <p>➤ Load paper into the paper tray. See page 79.</p>                                                 |
|                                                                                       | <p>Does CLOSE COVER appear in the display?</p> <p>➤ Close all covers.</p>                                                                          |
|                                                                                       | <p>Is the Add Toner indicator on?</p> <p>➤ Load a new toner cartridge. See page 82.</p>                                                            |
| TRANSMISSION                                                                          |                                                                                                                                                    |
| The original is not pulled into the auto document feeder.                             | <p>You did not feed the document far enough into the feeder.</p> <p>➤ Insert the document into the feeder until it stops. Retransmit.</p>          |
|                                                                                       | <p>Clean the ADF rollers (see page 91).</p> <p>➤ If the same problem still exists after user maintenance, contact your service representative.</p> |
| The machine cannot dial out.                                                          | <p>The telephone line is disconnected.</p> <p>➤ Check that the line is connected properly.</p>                                                     |
|                                                                                       | <p>The telephone line type setting is incorrect.</p> <p>➤ Check the telephone line type setting<br/>See page 136.</p>                              |

| Problem                                                                | Required Action                                                                                                                                                                                                                            |
|------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The machine cannot dial out from behind a private switchboard (a PBX). | <p>The dialed number does not contain an access code or a pause, or not enough pauses.</p> <p>➤ Include the access number and a pause before the telephone number, or add pauses between the access code and the number, if necessary.</p> |
| Frequent original misfeeds                                             | <b>Multifeeds</b> or non feeds                                                                                                                                                                                                             |
|                                                                        | <p>Incorrect positioning of originals</p> <p>➤ Put the document in the feeder correctly.</p>                                                                                                                                               |
|                                                                        | <p>Incorrect alignment of originals</p> <p>➤ Align the edges of the document.</p>                                                                                                                                                          |
|                                                                        | <p>Curled pages</p> <p>➤ Flatten the document.</p>                                                                                                                                                                                         |
|                                                                        | <p>Incorrect document type</p> <p>➤ Use a proper document type. See page 123.</p>                                                                                                                                                          |
|                                                                        | <p>Mixed document types</p> <p>➤ The pages must all be of the same type.</p>                                                                                                                                                               |
|                                                                        | <p>Static electricity on the originals</p> <p>➤ Shuffle the document.</p>                                                                                                                                                                  |
|                                                                        | <p>Clean the ADF rollers (see page 90).</p> <p>➤ If the same problem still exists after user maintenance, contact your service representative.</p>                                                                                         |
|                                                                        | <p>Copier silicone oil on the originals</p> <p>➤ Wait a few minutes, then try again.</p>                                                                                                                                                   |
|                                                                        | <p>More than 30 pages in the feeder</p> <p>➤ Do not place more than 30 pages in the automatic document feeder at once.</p>                                                                                                                 |
|                                                                        | <p>The document may be longer than the maximum limit (see page 123).</p> <p>➤ Make sure that none of your originals exceed this limit.</p>                                                                                                 |

| Problem                                                                                                      | Required Action                                                                                                                                                                                                                                                                           |
|--------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Transmission cannot take place                                                                               | The other machine is out of order.<br>➤ Check the error report.<br>➤ Ask the other party to check their machine and correct the fault.                                                                                                                                                    |
| Note: Before taking action, wait until the Communicating indicator goes out, then press the <b>Stop</b> key. | The line is busy or noisy.<br>➤ Check that the dial tone is sent out.<br>Try to retransmit.                                                                                                                                                                                               |
| Consistent difficulty in communicating with a particular terminal                                            | There are some bad lines between you and that other terminal.<br>➤ Store that terminal's number as a Quick Dial Key or Speed Dial Code.<br>Then call a service technician. Inform the nature of the problem and give the Quick Dial Key or Speed Dial Code that you stored the number in. |
| Consistent poor image quality when communicating with a particular terminal                                  |                                                                                                                                                                                                                                                                                           |
| RECEPTION                                                                                                    |                                                                                                                                                                                                                                                                                           |
| The telephone keeps ringing and no fax is printed.                                                           | You are in Manual Receive mode.<br>➤ Change to Auto Receive mode (see page 14).                                                                                                                                                                                                           |
|                                                                                                              | Power is switched off.<br>➤ Switch the power on.                                                                                                                                                                                                                                          |
| RECEPTION/COPYING                                                                                            |                                                                                                                                                                                                                                                                                           |
| No printout; the Add Paper indicator is lit.                                                                 | The cassettes are empty.<br>➤ Add paper (see page 79).                                                                                                                                                                                                                                    |
| No printout; the Clear Copy indicator blinks.                                                                | The printer has jammed.<br>➤ Clear the jam (see page 97).                                                                                                                                                                                                                                 |
| Copies appear dirty.                                                                                         | Does the original have a gray or colored background?<br>➤ Select the Lighten contrast setting.                                                                                                                                                                                            |
| Copies are too light.                                                                                        | Does the original have a low contrast image?<br>➤ Select the Darken contrast setting.                                                                                                                                                                                                     |
| Copies are blank.                                                                                            | The original must be placed <u>face up</u> in the document feeder<br>➤ Position the original correctly. See page 63.                                                                                                                                                                      |

| Problem                                                                              | Required Action                                                                                                                                                                   |
|--------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Copy paper misfeeds occur frequently.                                                | Is the proper paper in the paper tray?<br>➤ Use appropriate paper. See page 123.                                                                                                  |
|                                                                                      | Is folded, wrinkled, damp, or curled paper in the paper tray?<br>➤ Always use dry, undamaged paper.                                                                               |
|                                                                                      | Is the paper set properly in the paper tray?<br>➤ Always load paper correctly. See page 79.<br>Do not load too much paper in the trays.                                           |
|                                                                                      | Are there any pieces of misfed paper or other foreign objects in the machine?<br>➤ Make sure that the paper path is completely clear of paper and other material after a misfeed. |
|                                                                                      | Are you copying onto recycled paper?<br>➤ Fan the stack of recycled paper and load it in the paper tray.                                                                          |
| Stripes on copies.                                                                   | The exposure glass for the auto document feeder is dirty.<br>➤ Clean the exposure glass (see page 90).                                                                            |
| TELEPHONING                                                                          |                                                                                                                                                                                   |
| You can't receive phone calls; the unit only rings once then goes into receive mode. | You are in Auto Receive mode.<br>➤ Change to Manual Receive mode (see page 14).                                                                                                   |
| You can't receive phone calls; the unit does not ring.                               | The telephone line is not connected.<br>➤ Connect the line (see page 136).                                                                                                        |
| POLLING                                                                              |                                                                                                                                                                                   |
| Dialing took place, but polling could not.                                           | Polling with ID is set in the other terminal.<br>➤ Contact the person at the other end and make sure that <u>free polling</u> is available.                                       |

## Displayed Error Messages


|                                                                                                                                                                                                                                                                              |                                                                                                                                                                                                                                    |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CHECK AUTO-DIALING                                                                                                                                                                                                                                                           | You cannot use the auto-dialer at the moment. Use the ten-key pad or the handset.                                                                                                                                                  |
| NO FILE EXISTS                                                                                                                                                                                                                                                               | No polling reception operations have been programmed.                                                                                                                                                                              |
|                                                                                                                                                                                                                                                                              | There are no messages in memory waiting for transmission.                                                                                                                                                                          |
|                                                                                                                                                                                                                                                                              | Incorrect file number. Check the file number and try again.                                                                                                                                                                        |
| TOO MANY DEST.                                                                                                                                                                                                                                                               | The memory cannot hold any more telephone numbers.<br>Either: Delete some numbers then try again.<br>Or: Wait until some of the Send Later or other delayed transmissions waiting in memory have been carried out, then try again. |
| USED AS GROUP                                                                                                                                                                                                                                                                | This Quick Dial Key has a Group stored in it.                                                                                                                                                                                      |
| USED AS DIAL                                                                                                                                                                                                                                                                 | This Quick Dial Key has a telephone number stored in it.                                                                                                                                                                           |
| USED AS TONE KEY                                                                                                                                                                                                                                                             | This Quick Dial Key is programmed as Tone Key.                                                                                                                                                                                     |
| USED AS GROUP KEY                                                                                                                                                                                                                                                            | This Quick Dial Key is programmed as Group Key.                                                                                                                                                                                    |
| NOT PROGRAMMED                                                                                                                                                                                                                                                               | This Quick Dial Key or Speed Dial Code does not contain a number.                                                                                                                                                                  |
| ALREADY PROGRAMMED                                                                                                                                                                                                                                                           | Either:<br>This number is already included in this Group.<br>This RTI/CSI has already been stored for use with this feature.                                                                                                       |
| PLEASE SET PAUSE                                                                                                                                                                                                                                                             | You must add a pause after your area code when you input your fax terminal's own telephone number.                                                                                                                                 |
| ADD TONER                                                                                                                                                                                                                                                                    | The toner cartridge is empty. Install a new cartridge.                                                                                                                                                                             |
| ADD PAPER                                                                                                                                                                                                                                                                    | The cassette is now empty.                                                                                                                                                                                                         |
| CLEAR ORIGINAL                                                                                                                                                                                                                                                               | A document is jammed in the feeder.                                                                                                                                                                                                |
| CLEAR COPY                                                                                                                                                                                                                                                                   | Paper is jammed in the printer.                                                                                                                                                                                                    |
| CLOSE COVER                                                                                                                                                                                                                                                                  | A cover is not closed properly. Check that all covers are closed.                                                                                                                                                                  |
| UNABLE USE PRINTER                                                                                                                                                                                                                                                           | Machine cannot print a list/file, because the heater is not warm enough or plotter is not ready.                                                                                                                                   |
| SERVICE CALL  -   H | Machine is out of order. Contact with your service representative.                                                                                                                                                                 |





# TECHNICAL REFERENCE

## Operation panel

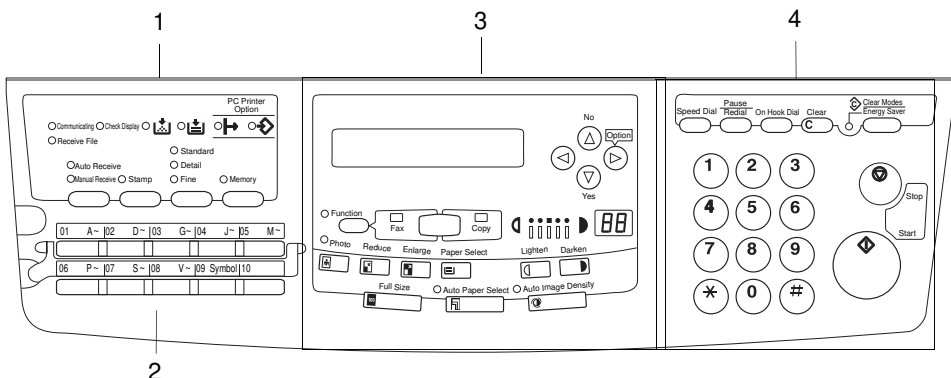

### Area 1

- 1- The **Communicating** indicator lights when a fax message is being transmitted or received.
- 2- The **Receive Files** indicator lights when a fax message was stored in memory (see page 16).
- 3- The **Check Display** indicator lights to tell you to read the display.
- 4- The **Add Toner** indicator blinks when toner is about to run out and lights continuously when toner has run out (see page 82).
- 5- The **Add Paper** indicator lights when you need to add paper.
- 6- Refer to the **PC Printer Interface** manual for details.
- 7- The Receive button lets you switch between automatic and manual reception of fax messages (see page 14) while the indicators automatic and manual reception indicators tell you how the machine is set.
- 8- The **Stamp** button turns the stamp on and off and the indicator lights if it is on. (See page 25).
- 9- The resolution is indicated by these three indicators and can be changed by the Resolution button.

- 10- When the **Memory** indicator is on, then memory transmission is in effect, if it is off, immediate transmission is in effect. Switch between the two with the Memory button.

### Area 2

- 11- There are ten **Quick Dial** keys and a plate you can flip to get another ten keys. Use them to store individual numbers (see page 28) or groups (see page 37). Use the keys to enter characters (see page 122). Use Quick Dial 19 as a tone key if you are connected to a pulse dial line (see page 61). Use Quick Dial 20 as a Group key (see page 41).

### Area 3


- 12- The Liquid Crystal Display guides you through tasks and informs you of the state of the machine. Messages appear here. The LCD consists of two 20-character lines.
- 13- Use the arrow buttons to navigate through functions, to accept or reject settings, or to set function options.

- 14- Press the **Function** key and enter a two digit code to access functions 11 to 51. (For functions 61 to 94, enter 6, the access code on page 113 and the function number.)
- 15- The **Fax/Copy** key lets you switch between faxing and copying. The fax indicator lights for faxing and the Copy indicator lights for copying.
- 16- Press the **Photo** key to copy or fax photographs or other multi-tone images. When Photo processing is on, the Photo indicator lights.
- 17- Press the **Enlarge** key to enlarge your image. The available ratios are: 115% 122% 141% 200%.
- 18- Press the **Reduce** key to reduce your image. The available ratios are: 50% 71% 82% 87% 93%. Press the Full Size key to reset the magnification to 100%.
- 19- Press the **Paper Select** key to choose between having paper come from the optional side cassette or the main cassette. If you don't have the side cassette, pressing the key has no effect. The paper size selected appears in the LCD.
- 20- Press the **Lighten** and **Darken** keys to change the density. The Density indicator shows the selected density.
- 21- Press the **Auto Image Density** key to have the machine select the proper density. If the feature is on, the indicator lights.
- 22- Press the **Auto Paper Select** key to have the machine choose the right size of paper from the available kinds. If you don't have the needed size loaded, the machine will request it from the LCD.
- 23- If you have the optional side cassette and if the size of the paper it contains is different from what is loaded in the main tray, press the **Paper Select** to choose between the two.
- 27- Press the **Clear** key to erase the last character or digit entered, or use the left and right arrow keys to move the cursor and then press Clear to erase whatever is at the cursor.
- 28- Press the **Clear Modes/Energy Saver** key to clear all the operation settings. Stored fax numbers are not cleared, nor are stored messages and polling jobs. Press and hold the key for three seconds to engage the Energy Saver function (see page 57).
- 29- Press the **Stop** key to stop a transmission or a document scanning or to stop a long copy run. The machine will finish printing out the sheet being printed and then stop.
- 30- Press the **Start** key to start all tasks.
- 31- Use the numeral keypad (sometimes called the 10 keys) to dial fax numbers, to enter the numbers of copies, etc.
- 32- Before pressing the start key, the Copy Counter indicates the number of copies to make. After pressing the Start key, the Copy Counter shows the number of copies made.

## Area 4


- 24- Press the **Speed Dial** key and enter a two digit code (between 00 & 49) to dial or store individual numbers (see page 32).
- 25- The **Pause/Redial** key inserts a pause when you are dialing or storing a fax number. Or, press the key to redial the last number dialed. (The redial feature doesn't work once you've started dialing a new number.)
- 26- Press the **On Hook Dial** key to dial a phone call from the keypad without having to lift the phone or handset off the hook (phone or handset option needed).

## Machine Exterior

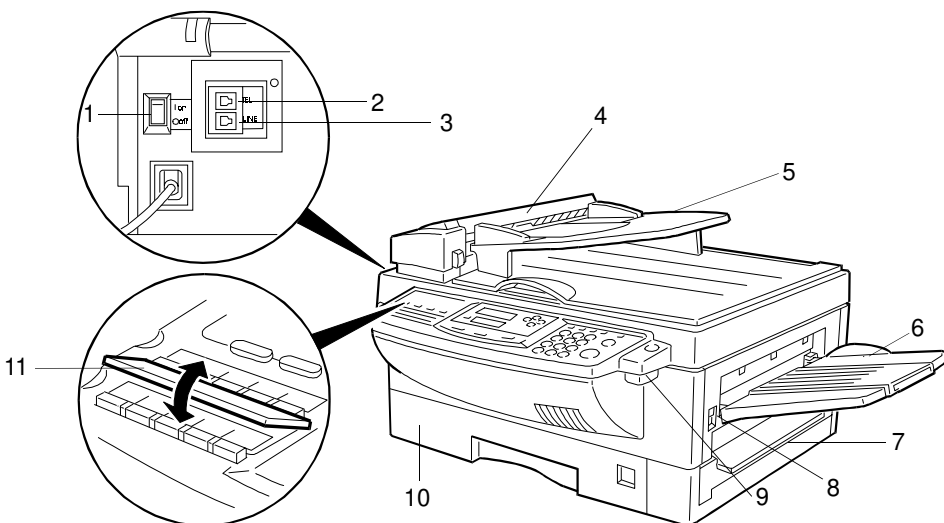

- 1- The **main switch** turns your machine on and off.
- 2- The **phone connection (TEL)** is where you plug in the line that goes to your telephone or handset (see page 136).
- 3- The **line connection (LINE)** is where you plug in the line to the telephone system's outlet.
- 4- The **automatic document feeder (ADF)** allows you to set up to 30 sheets at once so that they are fed in one at a time.
- 5- Set the document on the **ADF table**.
- 6- The **paper tray** receives all prints.
- 7- The **by-pass** tray allows you to copy to paper without having to load that paper in a tray.
- 8- The **side cover** can be opened (after opening the top unit) to let you change the toner cassette, the photoconductor, and to clear jams.
- 9- The top unit release lever
- 10- The **paper drawer** can hold 250 sheets (70g/m<sup>2</sup> paper) of B4, A4, A5, B5 and F size.
- 11- 20 Quick Dial keys are available by flipping the plate.
- 12- You can load another size of paper in the **optional paper cassette**.


- 13- Slide the lever and close the optional paper cassette cover when you set a sheet of paper using manual feed

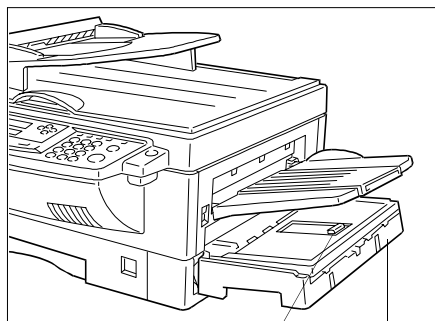

13 12



 **3** To change bit 3, press **3** on the key pad. Bit 3 will change from 1 to 0 or from 0 to 1.



(To change bit 0, press 0, to change bit 1, press 1, and so on.)

**4** Press **Yes** and **Function**.

Here is a list of all relevant user parameters. Many bit settings have no effect and are not listed. (Never change these.)

| SW | Bits & Definition                                              | Settings                                                                                                      |
|----|----------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|
| 00 | 0: Default stamp setting<br>STAMP                              | Off: 1<br>Off: 0                                                                                              |
|    | 1, 2, and 3: Default manual density<br>SCANNING CONTRAST       | Bit 1 2 3<br>Normal 0 0 0<br>Slightly Darken 0 1 1<br>Darken 0 1 0<br>Slightly Lighten 1 0 1<br>Lighten 1 0 0 |
|    | 4, 5: Default resolution when you send a message<br>RESOLUTION | Bit 4 5<br>Standard 0 0<br>Detail 1 0<br>Fine 0 1                                                             |
|    | 6: Default setting for transmission<br>TRANSMISSION MODE       | Memory: 0<br>Immediate: 1                                                                                     |
|    | 7: Default Photo setting.<br>HALFTONE                          | Off: 0<br>On:1                                                                                                |
|    | 0: Default Auto Contrast setting<br>AUTO CONTRAST              | Off: 0<br>On: 1                                                                                               |
|    | 1: Default Auto Select setting<br>AUTOMATIC PAPER SELECTION    | Off: 0<br>On: 1                                                                                               |
| 01 | 2: Copy/Fax default<br>COPY FAX                                | Fax: 0<br>Copy: 1                                                                                             |
|    | 7: Clear Modes after sending a fax.<br>RETURN TO HOME POSITION | Off: 0<br>On: 1                                                                                               |

| SW | Bits & Definition                                                                                            | Settings                                |
|----|--------------------------------------------------------------------------------------------------------------|-----------------------------------------|
| 02 | 1: Print a center mark on faxes.<br>CENTER MARK                                                              | Off: 0<br>On: 1                         |
|    | 3: Print sender's ID on incoming messages. TSI PRINT                                                         | Off: 0<br>On: 1                         |
| 03 | 0: Automatically print memory transmission reports.<br>COMMUNICATION RESULT<br>REPORT (MEMORY TX)            | Off: 0<br>On: 1                         |
|    | 2: Automatically print storage reports for memory transmission.<br>FILE RESERVE REPORT<br>(MEMORY TX)        | Off: 0<br>On: 1                         |
|    | 3: Automatically print storage reports for polling.<br>FILE RESERVE REPORT<br>(POLLING RX)                   | Off: 0<br>On: 1                         |
|    | 4: Automatically print polling reception reports.<br>COMMUNICATION RESULT<br>REPORT (POLLING RX)             | Off: 0<br>On: 1                         |
|    | 5: Automatically print immediate transmission reports.<br>TRANSMISSION RESULT REPORT                         | Off: 0<br>On: 1                         |
|    | 7: Automatically print communication reports. Journal                                                        | Off: 0<br>Yes: 1                        |
| 04 | 7: Include the first half of the first page with reports?<br>INCLUSION OF PART OF IMAGE                      | Off: 0<br>On: 1                         |
| 05 | 0: Store incoming faxes when machine is out of supplies.<br>SUBSTITUTE RECEPTION                             | Off: 0<br>On: 1                         |
|    | 1: Allow automatic reception from senders that do not identify themselves. CONDITIONS OF<br>MEMORY RECEPTION | Accept (Free): 0<br>Reject (RTI/CSI): 1 |

| SW | Bits & Definition                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | Settings                                                               |       |   |
|----|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------|-------|---|
| 05 | 6, 7: Level for the Energy Saving feature<br>ENERGY SAVING                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | Bits:                                                                  | 6     | 7 |
|    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | Heater off:                                                            | 0     | 0 |
|    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | Heater half cool:                                                      | 1     | 0 |
|    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | Heater full on:                                                        | 0     | 1 |
| 06 | 0: Send a header with each page.<br>TTI                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | Off: 0                                                                 |       |   |
|    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | On: 1                                                                  |       |   |
| 07 | 3: Reduce your message when sending.<br>AUTO REDUCTION                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Off: 0                                                                 |       |   |
|    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | On: 1                                                                  |       |   |
| 08 | 2, 3: AUTHORIZED RECEPTION<br>(Can also use function 62)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Bits                                                                   |       |   |
|    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | 2 3 :                                                                  |       |   |
|    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | 0 X: Off                                                               |       |   |
|    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | 1 0: Receive messages only from senders whose RTI/CSIs are programmed. |       |   |
|    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | 1 1: Receive messages only from senders whose RTI/CSIs are programmed. |       |   |
| 10 | 7: Use dithering halftone (SPD) or standard halftone (STD)?<br>HALFTONE METHOD                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | STD: 0                                                                 |       |   |
|    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | SPD: 1                                                                 |       |   |
| 12 | 2: Faxing & Report Toner Saving<br>ECONOMY PRINTING MODE                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Off: 0                                                                 | On: 1 |   |
|    | <p>Note:</p> <p>If on, contrast will be set to "Normal" automatically, preserving image quality. This is available when receiving fax messages and printing reports, but not for copying or printing from a PC.</p> <p>Further, messages sent to you in halftone mode will automatically turn off toner saving to insure a clear image.</p> <p>To make sure that the fax quality is acceptable with toner saving on, print a few reports.</p> <p>(Note: If the sender is using a machine made by another manufacturer, toner saving will stay on and this could lower image quality.)</p> |                                                                        |       |   |
|    | 3, 4: Fax reception & PC printer density<br>PRINT DENSITY                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Bit                                                                    | 3     | 4 |
|    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | Normal:                                                                | 0     | 0 |
|    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | Darken:                                                                | 0     | 1 |
|    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | Lighten:                                                               | 1     | 0 |



## User Parameter Hints

### Changing your machine's default settings

These are the settings your machine assumes immediately after it is turned on, after clearing the machine, or after you or the night timer reactivates it. Many of the user parameters determine your machine's default settings.

### Clear modes after sending or loading a fax message (Switch 01, bit 7)

Your machine can either reset itself or keep its settings (for a few minutes) after it sends a fax message.

### Printing the sender's identification on the message (TSI, Switch 02, bit 3)

If you receive messages that do not include an identifying header on the printout, you can your machine to print the identification displayed on the LCD during the communication (the CSI or RTI, see page 148).

### Automatic reports

Many types of automatic reports can be switch on or off. See page 47 for details.

### Accepting messages when out of supplies (Switch 05, bit 0)

This is also called substitute reception. You can accept messages even when out of toner or paper by storing them in memory. See page 16 .

### Saving toner (Switch 12, bit 2)

You can reduce the amount of toner used for fax messages and for reports. Messages sent to you in halftone (e.g. photographs) will switch this feature off to ensure the best image quality available, but the feature will stay on if the sender is using a machine made by another manufacturer. To make sure the fax quality is acceptable, print a few reports (see page 47). If you find that your fax messages and reports are too light, turn this feature off.

### Adjusting the density for faxes and PC printouts (Switch 12, bits 3 & 4)

If your printouts or *received* fax messages are too light or too dark, adjust the printing density over three levels: Normal, Darken, and Lighten.

## Copier Settings (Function 72)

Use function 72 to adjust the width of the blank margin left around copies, and of the center column to be erased (when copying a book for example).

- 1** Press **Function**, **6**, and enter the access number **2222**. Then press **7**, **2**.

|             |         |
|-------------|---------|
| PROGRAMMING | Y/NEXT▶ |
| 72 COPY SET |         |

- 2** Press **Yes**

|                   |         |
|-------------------|---------|
|                   | Y/NEXT▶ |
| # OF COPIES LIMIT |         |

- 3** Press **Yes** again and get this:  
or press No to skip to step 6.

|             |     |
|-------------|-----|
| # OF COPIES | Y/N |
| 99 SHEETS   |     |

- 4** Press **No**, then enter a number between 01 & 99.(for the number of copies). Example: If you set to 3 sheets, enter **0** and **3**.

|             |     |
|-------------|-----|
| # OF COPIES | Y/N |
| 03 SHEETS   |     |

- 5** Press **Yes**. PROGRAMMED will flash across the screen.

|              |     |
|--------------|-----|
|              | Y/N |
| ERASE CENTRE |     |

- 6** Press **Yes** to make the adjustment or press No to skip to step 8.

|       |     |
|-------|-----|
| ERASE | Y/N |
| 10 MM |     |

- 7** Press **No**, then enter a number between 5 & 50.  
Example: 5 mm, press 0 and 5.  
25mm, press 2 and 5.

|       |     |
|-------|-----|
| ERASE | Y/N |
| 05 MM |     |

- 8** Press **Yes**. PROGRAMMED will flash across the screen and you'll get this:

|              |     |
|--------------|-----|
|              | Y/N |
| ERASE BORDER |     |

- 9** Press **Yes** to make the adjustment or press No to skip to step 11.

|       |     |
|-------|-----|
| ERASE | Y/N |
| 10 MM |     |

- 10** Press **No**, then enter a number between 5 & 50.

|       |     |
|-------|-----|
| ERASE | Y/N |
| 25 MM |     |

- 11** Press **Yes**. PROGRAMMED will flash across the screen and you'll get this:

|             |         |
|-------------|---------|
| PROGRAMMING | Y/NEXT▶ |
| 72 COPY SET |         |

- 12** Press **Function** to return to the ready state.

## Adjusting the Volume of Various Features (Function 92)

You can change the beeper (monitor) volume of the desired feature.

|                 |                                                       |
|-----------------|-------------------------------------------------------|
| TRANS MONITOR   | Beeps to signal transmissions.                        |
| RECV MONITOR    | Beeps to signal receptions.                           |
| ON HOOK MONITOR | Beeps to signal on hook dialing.                      |
| DIAL MONITOR    | Beeps when a number is dialed.                        |
| BUZZER          | Beeps (doesn't buzz) to signal something going amiss. |
| KEY             | Beeps when a key is pressed.                          |

**1** Press **Function, 6**, and enter the access number **2222**. Then press **9, 2**.

ADJUSTMENTY/NEXT▶  
92 ADJUST VOLUME

**2** Press **Yes**.

TRANS MONITORY/◀▶  
MIN▶▶▶MAX

**3** Adjust the transmission monitor volume with **◀ & ▶** and press **Yes** when you're done.

RECV MONITORY/◀▶  
MIN▶▶▶MAX

**4** Adjust the reception monitor volume with **◀ & ▶** and press **Yes** when you're done.

ONHOOK MONITORY/◀▶  
MIN▶▶▶MAX

**5** Adjust the dial monitor volume with **◀ & ▶** and press **Yes** when you're done.

DIAL MONITORY/◀▶  
MIN▶▶▶MAX

**6** Adjust the buzzer volume with **◀ & ▶** and press **Yes** when you're done.

BUZZERY/◀▶  
MIN▶▶▶MAX

**7** Adjust the key press monitor volume with **◀ & ▶** and press **Yes** when you're done.

KEYY/◀▶  
MIN▶▶▶MAX

**8** Press **Function** to return to the ready state.

## Selecting the Display's Language (Function 93)

If you would rather use another language for messages and displays, follow the procedure below. The three languages available are: English, French, and Spanish.

- 1** Press **Function, 6**, and enter the access number **2222**. Then press **9, 3**, and **Yes**.

SELECT LANGUAGE Y/◀▶  
ENGLISH

- 2** Use ◀ and ▶ to scroll through the available languages.

SELECT LANGUAGE Y/◀▶  
FRENCH

- 3** Press **Yes** to accept the language displayed, then press **Function** to return to the ready state.

**Counters (Function 94, see page 52. )**

## Entering Characters

Use the key pad for entering numbers. Use Quick Dial keys 1 to 8 for entering letters, the ◀ & ▶ keys to change to another letter, the **Yes** key to accept a character, and Quick Dial key 09 for spaces and other characters.

If at any time you make a mistake when entering a character or digit, press the **Clear** key to erase it. To correct a character or number already entered, use the ◀ and ▶ keys to reach the mistake, enter the new character, and press clear to erase the mistaken character. If you press **No** key, whole characters are erased.

| Quick Dial Key | Letter |
|----------------|--------|
| 01 & 11        | A      |
| 02 & 12        | D      |
| 03 & 13        | G      |
| 04 & 14        | J      |
| 05 & 15        | M      |

| Quick Dial Key | Letter          |
|----------------|-----------------|
| 06 & 16        | P               |
| 07 & 17        | S               |
| 08 & 18        | V               |
| 09 & 19        | Space & Symbols |
| 10 & 20        | Nothing         |

## Entering Symbols

**1** Press **09** or **19** of the Quick Dial key.

**2** Press ◀ or ▶ to scroll symbols.

You can enter the following symbols.

"Space" & \$ ! " # \$ % & ' ( ) \* + , / : ; < > ? @ [ ¥ ] ^

**3** Press **Yes**.

## Entering Numbers

**1** Enter numbers using the ten key pad.

## Document & Paper Specifications

### Documents (Using the Auto Document Feeder)

|                                         |               |
|-----------------------------------------|---------------|
| Length (automatic feed):                | 105~364 mm    |
| Length (manually assisted feed in fax): | Up to 1200 mm |
| Width:                                  | 148~257 mm    |
| Thickness :                             | 0.05~0.2 mm   |

### Document Feeder Requirements

- ☐ Do not insert torn, heavily curled, wavy, creased, dog-eared, damp, or otherwise damaged documents. Copy or fax from the exposure glass.
- ☐ Do not insert folded, stapled, clipped, glued, or taped documents, or documents with a metallic coating. Copy or fax from the exposure glass.
- ☐ Do not insert documents on which there is undried ink or correction fluid. Wait for the document to dry.
- ☐ If the document has an uneven or slanted edge, do not insert that edge in first.

### Documents (On Exposure Glass)

|                                 |                    |
|---------------------------------|--------------------|
| Size:                           | Up to 257 x 364 mm |
| Maximum Thickness               | Closed cover, 30mm |
| Maximum weight of the document: | 5 kg               |

### Paper Requirements

- ☐ Acceptable sizes are B4, A4, A5 and F. Load other sizes from the bypass.
- ☐ Do not print to torn, heavily curled, wavy, creased, dog-eared, damp, or otherwise damaged paper.
- ☐ Do not print to folded, stapled, clipped, glued, or taped paper.
- ☐ Do not print to paper with any kind of coating or printing. Do not print to metallic paper. Do not print to the reverse side of a print.

## Capabilities

### Functions That Can Be Used Together (Dual Access)

| Job currently in progress<br>(First selection) | Job you wish to carry out at the same time<br>(Second selection) |    |    |    |    |    |    |    |    |
|------------------------------------------------|------------------------------------------------------------------|----|----|----|----|----|----|----|----|
|                                                | 1.                                                               | 2. | 3. | 4. | 5. | 6. | 7. | 8. | 9. |
| 1. Storing to Memory                           |                                                                  | ✗  | ✗  | ✗  | ✗  | ✗  | ✗  | ✗  | ✗  |
| 2. Printing from Memory                        | ✗                                                                |    | ●  | ✗  | ✗  | ✗  | ✗  | ✗  | ✗  |
| 3. Copying                                     | ✗                                                                | ▲  |    | ✗  | ✗  | ✓  | ✗  | ✓  | ✗  |
| 4. Printing an Automatic Report                | ✗                                                                | ✗  | ✗  |    | ✗  | ✗  | ✗  | ✗  | ✗  |
| 5. Immediate Transmission                      | ✗                                                                | ✗  | ✗  | ✗  |    | ✗  | ✗  | ✗  | ✗  |
| 6. Memory Transmission                         | ✗                                                                | ✗  | ✓  | ✗  | ✗  |    | ✗  | ✗  | ✓  |
| 7. Receiving and Printing aFax                 | ✗                                                                | ✗  | ✗  | ✗  | ✗  | ✗  |    | ✗  | ✗  |
| 8. Receiving a Fax to Memory                   | ✗                                                                | ✗  | ✓  | ✗  | ✗  | ✗  | ✗  |    | ✓  |
| 9. Printing a Fax or Report Manually           | ✗                                                                | ✗  | ✗  | ✗  | ✗  | ✓  | ✗  | ✓  |    |

✓: Possible, ✗: Not possible ▲: The second selection is not possible.

●: The second selection is possible, but it cancels the correctly selected mode.

### Stored Numbers (Long term)

- ☐ 20 Quick Dial keys, each of which can hold an individual number. Any three of the Quick Dial keys can hold a group of numbers and Quick Dial 19 can be used as a tone key.
- ☐ 50 individual numbers stored as two-digit Speed Dial codes (see page 32).
- ☐ Three groups, each of which can hold up to 100 destinations.
- ☐ 30 CSI or RTI codes (possibly used as wild cards) for authorized reception.

### Stored Destinations

- ☐ You can send to (or pick up from) as many as 100 locations for one job.
- ☐ Up to 200 destinations can be set at any one time. (Ex: message A to 75 destinations, message B to 25, message C to 75, then a polling job from 49 numbers, and finally one immediate transmission job you're programming in now. Total: 200)



## File Storage

- ☐ You can have as many as 100 files stored in the machine: this includes memory transmission files and polling reception files. This is a theoretical maximum. The actual number of files you can have in your machine depends on the types of the documents.

## Specifications

### Electrical Specifications (Base machine)

Power supply: 220-240 Vac, 50 Hz

#### Power consumption

Energy saver mode: Average 2 W

Standby mode: Average 25 W

Copier standby mode: Average 70 W

Transmission: Average 35 W

Reception: Average 200 W

Copying: Average 300 W

Maximum power consumption: 800 W

### Fax Specifications

Protocol: G3

Memory Capacity: 45 pages/A4 size

Data rate: 9600/7200/4800/2400 bps, automatic fallback.

Transmission time: 9 seconds at 9600 bps, G3 ECM, using memory for a ITU-T #1 test document (Slerexe letter) at standard resolution

General Specifications

|                                |                                                                                                             |
|--------------------------------|-------------------------------------------------------------------------------------------------------------|
| Fax mode resolution:           | (main scan x subscan)<br>Standard: 8 x 3.85 lines/mm<br>Detail: 8 x 7.7 lines/mm<br>Fine: 8 x 15.4 lines/mm |
| Copy mode resolution:          | 16 x 15.4 lines/mm                                                                                          |
| Printer mode resolution:       | 300 dpi<br>Pseudo 600 dpi with resolution improvement technology                                            |
| Copying/printing speed:        | 10 ppm (A4 paper)                                                                                           |
| Paper cassette capacity:       | 250 sheets                                                                                                  |
| By-pass feeder capacity:       | 1 sheet                                                                                                     |
| Auto document feeder capacity: | 30 sheets, face up                                                                                          |
| Paper size:                    | A4, B4, B5, A5 sideways, F/F4                                                                               |
| Reduction ratios:              | 50%, 71%, 82%, 87%, 93%                                                                                     |
| Enlargement ratios:            | 115%, 122%, 141%, 200%                                                                                      |
| Dimensions (W x D x H):        | 555 x 555 x 342 mm                                                                                          |

*exclusive of trays, handsets, and options*

|         |                                                          |
|---------|----------------------------------------------------------|
| Weight: | 30kg<br><i>exclusive of trays, handsets, and options</i> |
|---------|----------------------------------------------------------|

Optional Side Paper Cassette

|             |                               |
|-------------|-------------------------------|
| Capacity:   | 100 sheets                    |
| Usage:      | Paper Cassette & By-Pass tray |
| Paper Size: | A4, A5 F/F4                   |

---

## APPENDIX A: INSTALLATION

Before installing your machine, read the safety instructions at the beginning of this manual. To install the machine, follow these procedures:

- 1-Find a suitable location for the machine.
- 2-Remove all the pieces of tape attached to the machine and remove the red clip on the upper unit (See page 129.)
- 3-Install the photoconductor, cleaning pad and toner. (See page 130.)
- 4-Attach the accessories and load the paper in the drawer. (See page 133.)
- 5-Connect the phone line. (See page 136.)
- 6-Connect the power. (See page 136.)
- 7-Enter all necessary information and settings in your machine's memory. (See page 137.)

### Machine Environment


**WARNING:** When choosing a location for your machine, please follow the safety instruction given on pages i to iv of this manual.

#### Location

For the best possible performance, install your machine in a place which satisfies the following conditions.

- ☐ Not exposed to direct sunlight
- ☐ Well ventilated (air turnover at least three times per hour); to avoid the build-up of ozone, make sure to locate the machine in a large well-ventilated room which has an air turnover of more than 30 m<sup>3</sup>/hr per person.
- ☐ Level
- ☐ Not subject to vibration
- ☐ Away from other electronic equipment, to avoid interference
- ☐ Away from areas containing corrosive gas
- ☐ Dust-free
- ☐ Condensation-free
- ☐ Temperature 17 to 28°C
- ☐ Humidity 40 to 70% RH (do not install near a humidifier)
- ☐ Away from heaters and air conditioners, to avoid sudden changes of temperature
- ☐ Within 5 meters of a three-pin grounded power outlet (220-240 Volts, 50 Hz)

- ❑ Ensure there is clearance around the machine, as indicated in the diagram below.

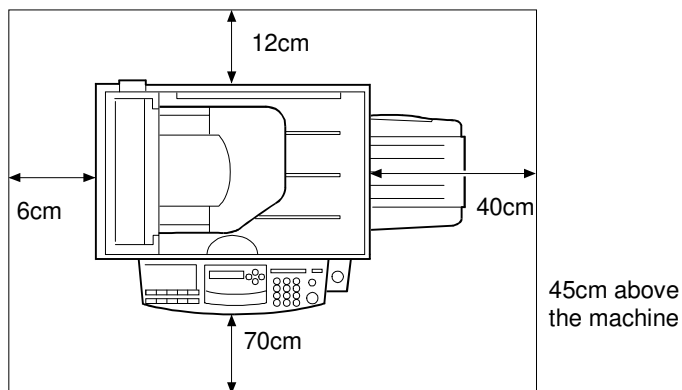

**NOTE:** This machine generates a certain amount of ozone. Although the amount generated is within safety requirements, it is recommended that, to avoid ozone buildup, you install the machine in a room which is properly ventilated.

### Operating Precautions


- ❑ While the machine is in operation, do not turn off the main switch or unplug the power cord.
- ❑ Keep corrosive liquids, such as acid, off the machine.
- ❑ Do not allow paper clips, staples, or other small metallic objects to fall inside the machine.
- ❑ The fusing unit may be very hot. Be careful when handling it.

- First of all, remove all the pieces of tape attached with the machine.


## Removing the Clip on the Upper Unit

You have to remove the clip on the rear side of the upper unit before you use the machine.

- Open the upper unit and lift it until it lock in place.

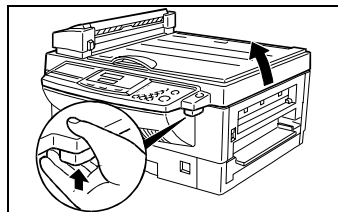

- Pull out and remove the red clip with the label.

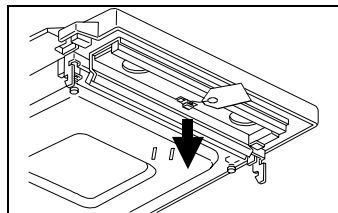

## Attaching the Labels to the Operation Panel

There are 8 labels which need to be put in place when you install the machine. First, attach the Quick Dial key labels. Make sure the flap (located on the Quick Dial keypad) is flipped over so that it points downwards.

Attach label one (keys 01-05) above the top row of keys.


Attach label two (keys 06-10) onto the visible side of the flap.

Flip the Quick Dial flap over so it points upwards.

Attach label three (keys 11-15) onto the side of the flap which is now visible.

Attach label four (keys 16-20) above the lower row of keys.


Then attach the other 4 labels to the operation panel. It should look as shown below.

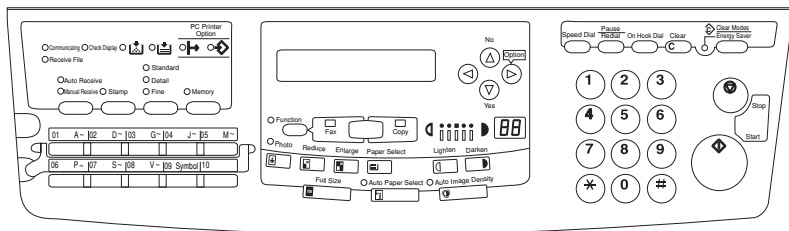


## Installing the Photoconductor, Toner Cassette and Cleaning Pad

Before using the machine, install the photoconductor, toner cassette and the cleaning pad as in the following procedure:

- 1 Open the upper unit and lift it until it locks in place.

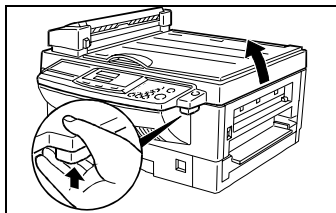


- 2 Open the side cover.

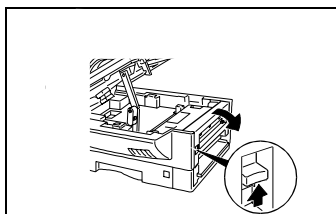


- 3 Put the photoconductor as shown in the illustration. Pay attention to the green knob are in both edge. One of them is marked "R" for rear (back) side. Then remove the black sheets.


**Caution:** Never touch the photoconductor (green drum).

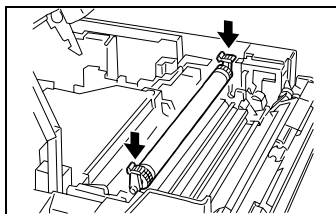


- 4 Turn the lever by gently pushing it.

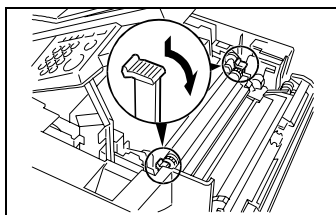



- 5** Pull out the film and remove the black sheet of the toner cassette.

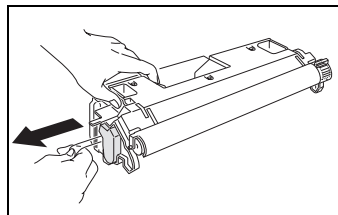


- 6** Slide the toner cassette into the machine as far as it will go. Gently push down the cassette to secure it in place.

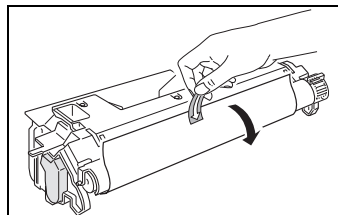

- 7** Install the cleaning pad as shown in the illustration. Match the position of the arrow on the cleaning pad with the arrow on the inside the machine.
- Note:** Push the cleaning pad until you hear it clicking.

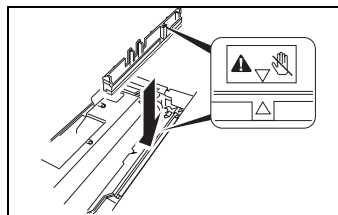
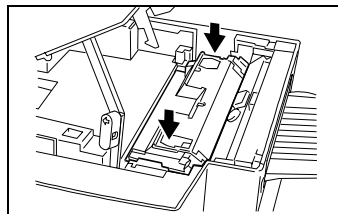


- 8** Close the side cover.  
Push the both end of the side cover until it clicks.

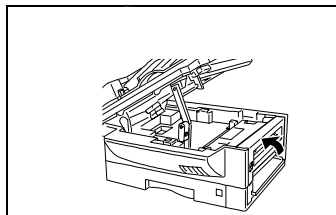

- 9** Push the lever arm inwards, let the top unit sink slowly in place, and press down to lock it.


**Note:** If the top unit does not close, the toner cassette, photoconductor or cleaning pad is not fitted correctly.

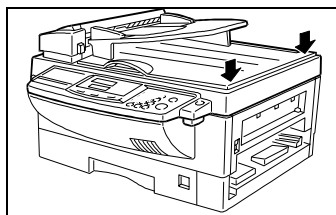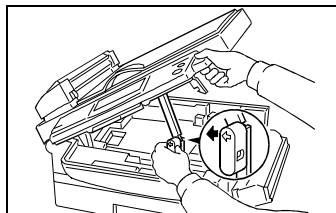




## Attaching the Print Tray

- 1** Attach the print tray.

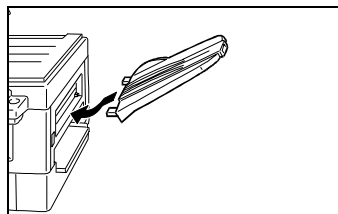

## Attaching the Auto Document Table


- 1** Insert the document table into the holes on the top cover.

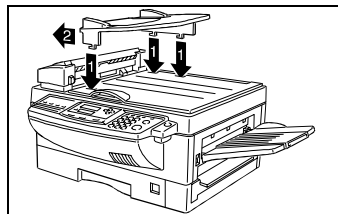

- 2** Slide the document table until you hear it clicks.

## Attaching the Stop

- 1** Insert the stop by pushing it in direction 1 as shown in the diagram.

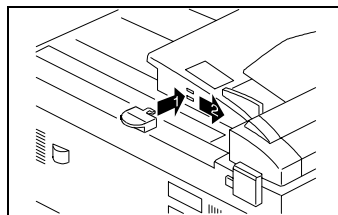

- 2** When fully in, slide it towards direction 2 to fix it in place.

## Setting the Paper

See the section titled "Setting / Adding the paper". See page 79 .


## Connecting the Machine

Before using the machine, connect the machine to the telephone line properly. And plug the power cable and switch on.

Make sure that it is properly connected to the telephone line and the power outlet, as shown below.

**CAUTION**

Do not switch on until everything is connected properly.

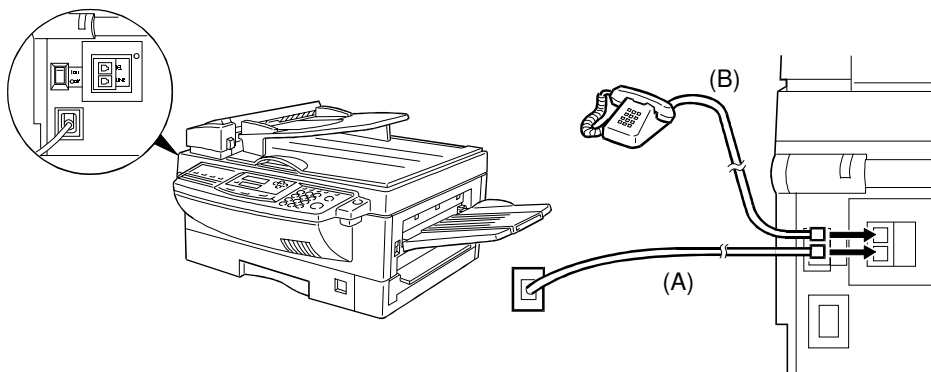

Program the Telephone Line Type setting (use Function 62; see page 41). If your telephone normally sends out tones(touch tone) when dialing, use the TT setting; if it normally sends out pulses (rotary dial), use the DP setting. Also, make sure that the switch on the handset is set up correctly.

## Connecting to the Phone Lines

- 1** Connect the phone line cord to the fax jack marked Line.(A)
- 2** Connect the other end of the line into the phone line jack (on the wall or on a cable).
- 3** Connect the external telephone to the jack marked Tel (B).
- 4** Connect the other end of the line to the telephone.

## Connecting the Power

### IMPORTANT POINTS ABOUT POWER CONNECTION

If you have to use an extension cord, make sure that it is capable of carrying 300V/10A, and that your facsimile terminal is the only piece of equipment connected to that cord. The supply from the wall outlet must not fluctuate more than 10 V either side of 230 Vac.

The power cord should not be laid in a place where it might trip somebody.

Do not lay anything on the power cord.


**WARNING:** The power source must conform to the specifications on page 125.

**WARNING:** Make sure the power source is properly grounded.

**WARNING:** Follow the safety instructions given of pages i to iv.

**1** Insert the plug into the wall outlet.

**2** Turn on the power.

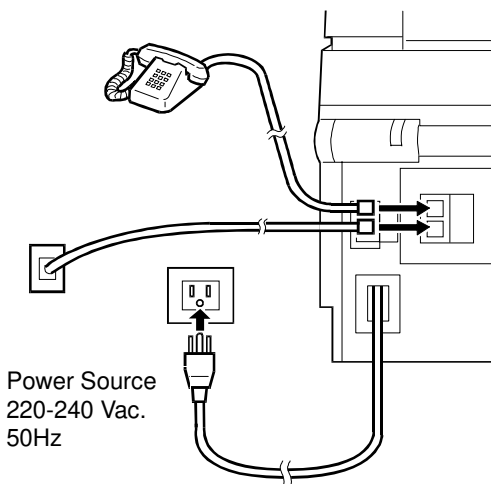

## Initial Settings & Adjustments

**Important:** The CSI code (see below) is required by international law. You cannot legally connect a fax machine to the telephone system if the CSI code is not programmed. Further, the TTI code and the date and time of transmission must be included in the header of all pages faxed to, from, or within the United States.

Before you connect your machine to the telephone system, you must enter a few settings and make a few adjustments.

**Own number:** The phone number used by your fax line.

**CSI** (Called Station Identification, required by international law): This is your fax machine's phone number, which must include country and area codes. During any communication, your CSI appears on their display. (Conversely their CSI appears on your display.)

**RTI** (Receive Terminal Identification): This should be your name or company name, in 20 characters or less. During a communication, if the other party's fax machine supports RTI, then this replaces the CSI above. The other party's name will appear on your display, and yours on theirs.

**TTI** (Transmitter Terminal Identification): This should be the same as your RTI or CSI code. It will be printed on the header of every page you send. Required in the USA.

**Line:** You must match the fax machine to the type of line you use: a tone line or a pulse line. Then, you should connect the line to the machine.

**Date & Time:** Necessary for many functions.

### Initial Settings (Function 61)

During the course of this procedure you'll have to enter letters and other characters.

Use the key pad for entering numbers. Use Quick Dial keys 1 to 8 *for entering letters*, the ◀ & ▶ keys to change to another letter, the Clear Key to erase a letter, Yes key to accept a character, and Quick Dial key 09 for spaces and other characters. See page 122 for details.

If these settings have been made before, the messages on the display will not always match those shown here. The setting already entered will appear along with the word [CHANGE?]. In this case, press **Yes** to change the setting.

- 1** Press **Function** and **6**, enter the access code **2222**, then enter **61**. You'll get this:

```
INITIAL MODE Y/NEXT▶
61 INITIAL SET
```

- 2** Press **Yes**.

```
Y/NEXT▶
SET OWN NUMBER
```

- 3** Press **Yes** again.

```
OWN NO. KPAD
XXXXXXXXXX
```

- 4** Enter your phone number.

```
OWN NO. KPAD/Y/N
0111212-5551234XXXX
```

- ☐ **The format of the number must be as follows:**

International Dial Prefix, Your Country Code, Your Area Code, **then you must add a Pause**, followed by your telephone number.

Check the International Dialing Prefix and the Country Code with your local telecommunications operator. The example shown is for the USA; the codes to add are 011 and 1.

- 5** Press **Yes**. PROGRAMMED will flash on the display and you'll get:

```
Y/NEXT▶
SET RTI
```

- 6** Press **Yes**.

```
RTI ABC
XXXXXXXXXX
```

- 7** Enter your office, company, or personal name, or any other appropriate identification. (Use the quick Dial keys. See page 122 for details.)

```
RTI ABC Y/N
XYZ COMPANY.
```

- 8** Press **Yes**. PROGRAMMED will flash on the display and you'll get:

```
Y/NEXT▶
SET TTI
```

- 9** Press **Yes**. The RTI programmed in step 7 appears. You should keep it.

If you wish to change it, press **Yes** and edit the TTI.

- 10** Press **No** to keep the TTI as is. You'll get:

```
TTI CHANGE? ABC Y/N
XYZ COMPANY.
```

- 11** Press **Yes**.

```
SET CSI Y/NEXT▶
```

```
CSI KPAD
████████████████████
```

- 12** Enter your phone number and include the country and area code, (but no pauses). Should be the same as in step 4.

```
CSI KPAD/Y/N
15145551234████████
```

- 13** Press **Yes**. PROGRAMMED will flash on the display and you'll get:

- 14** Press **Function**.

```
READY 100% 10:00
SET DOC. OR DIAL NO.
```

## Setting the Phone Line (Function 62)

- 1** Press **Function** and **6**, enter the access code **2 2 2 2** on page 113, then enter **62**. You'll get this:

```
INITIAL MODE Y/NEXT▶
62 SELECT FUNCTION
```

- 2** Press **Yes**.

```
SELECT LINE Y/NEXT▶
```

- 3** Press **Yes** again.

```
SELECT LINE Y/◀▶
▶TT PD
```

- 4** Press **◀** & **▶** to set your machine for a tone dial line (TT) or a pulse dial line (PD).

```
SELECT LINE Y/◀▶
TT ▶PD
```

- 5** Press **Yes**. **PROGRAMMED** will flash on the display and you'll get this.

```
PROGRAMMED Y/NEXT▶
AUTHORIZED ON/OFF
```

At this point, you could turn on the Authorized Sender function (page 52). We will skip this

- 6** Press **Function**.

```
READY 100% 10:00
SET DOC OR DIAL NO.
```



## Setting the Date &amp; Time (Function 91)

- 1** Press **Function, 6**, and enter the access code **2 2 2 2**. Then enter **9 1**.

```
ADJUSTMENT Y/NEXT▶
91 ADJUST CLOCK
```

- 2** Press **Yes**. A date and time will appear.

```
FRI KPAD/Y
21 APR 1995 01:35
```

- 3** Change the date with the ten keypad as 09.

```
SUN */#/Y
09 APR 1995 01:35
```

- 4** Change the month using **\*** or **#** (**\*** to scroll forward, or **#** to scroll backward) on the ten keypad and press **▶** to move the cursor.

```
TUE */#/Y
09 MAY 1995 01:35
```

- 5** Type in the year and time at the keypad as 9 5 1 0 2 5.

```
TUE KPAD/Y
09 MAY 1995 10:25
```

- 6** When the display is correct, press **Yes** and **Function**

## Daylight Saving Time

Whenever local custom requires advancing the clock or setting the clock back, use this feature. You can easily move the clock forwards when daylight saving time begins, and back when it ends.

When you install the machine for the first time, take care that the setting is correct before you set the date and time.

- 1** Press **Function, 6**, and enter the access code **2 2 2 2**. Then enter **6 2**.

|             |         |
|-------------|---------|
| SELECT LINE | Y/NEXT▶ |
|-------------|---------|

- 2** Press ▶ until the screen is as shown opposite, and then press **Yes**.

|                      |         |
|----------------------|---------|
| DAYLIGHT TIME ON/OFF | Y/NEXT▶ |
|----------------------|---------|

- 3** Use the ◀ and ▶ arrows on the scroll key to switch the feature on or off. This mode is off if the display is shown as opposite.

|          |      |
|----------|------|
| DAYLIGHT | Y/◀▶ |
| ON ▶OFF  |      |


- 4** To store your setting: **Yes**

## APPENDIX B: OPTIONAL SIDE CASSETTE


### Installing the Side Cassette

Followings are the installation procedure of the optional paper cassette and paper in it.


- 1** Remove the cover just under the copy exit.

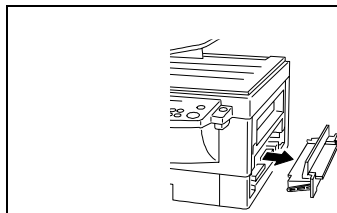

- 2** Remove the cover from the cassette.

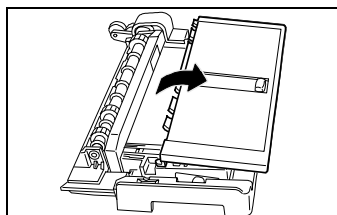


- 3** Press on the bottom plate(or paper stack) until it locks in place.

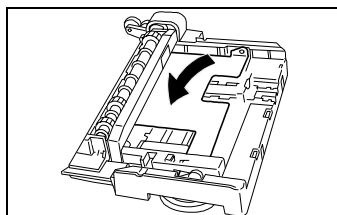


- 4\*** If necessary, remove the paper stack.

\*You do need to follow steps marked with an asterisk unless you are changing the paper size setting.

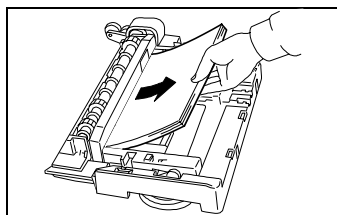


**5\*** If the new paper size is A4 or F, install the extender (see next page). Otherwise you do not need it, and you can remove it if it is installed.


**6\*** Pinch and hold the side fence lock, and slide the fence to the proper size setting.

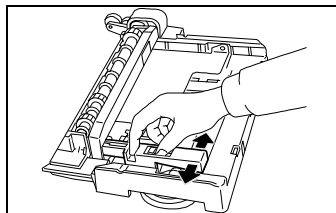


**7\*** Slide the back fence to the proper size setting.

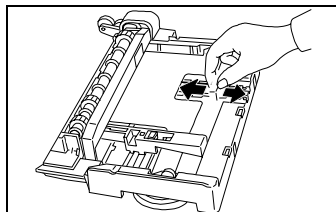


**8\*** Set the dial for the proper size.

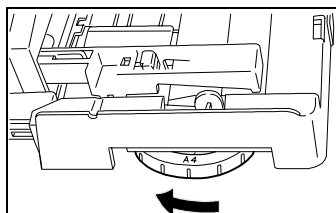


**9** Bend your stack of paper (not exceeding the limit mark) and insert in the tray. Make sure the paper fits under the corners and push the side and back fence toward the paper.

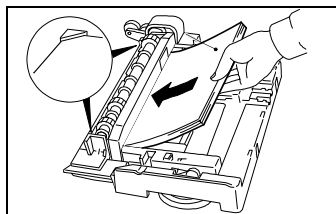

**10** Replace the cover on the cassette.

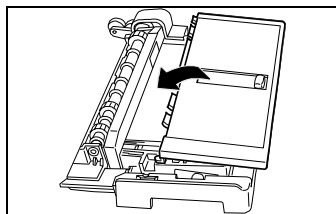

- 11 Install the side cassette as illustrated. Use both hands.

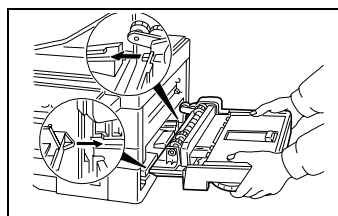


**Note:** Keep the cover of the side cassette in the outer position when you do not use the manual feeder.

## Installing the Extension


When you set the A4 or F size in the optional side cassette, install the extension.

- 1 Remove the extension from underneath the cassette as indicated by the arrows.

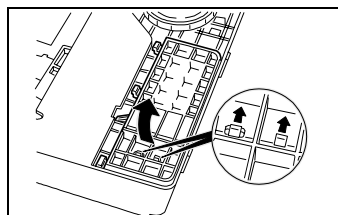

- 2 Install the extension.

When not using the extension, keep it stored under the bottom of the cassette.

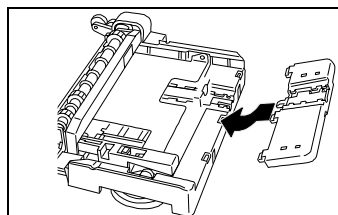

# INDEX & GLOSSARY

## A

- access code 113
- Add Paper Indicator 79
- adding
  - paper 79
  - toner 82
- authorized reception 52
- authorized senders 52
- automatic
  - reception 14
  - reports 47

## B

- broadcasting 23

## C

- calls (receiving) 14
- characters
  - entering 122
- cleaning pad
  - replacing 83
- communication
  - capabilities 124
  - problems 102
- connection
  - power 136
- contrast 18
  - faxing 17
- copier
  - settings 118
- copying 63 - 78
  - density 71
  - document feeder 63
  - magnification 70
  - photos 73
- Correcting Mistakes
  - Dialing 95
- counters 52
- CSI 137

## D

- date & time 141
- Daylight Saving Time 142
- default settings 117
- density
  - copying 71
  - fax & PC printouts 117
  - faxing 17

- detail
  - faxing 17
- document
  - specifications 123
- Document Feeder
  - Acceptable originals 2 - 3
  - copying 63
  - faxing 6
- Document size, allowable 2
- Document types, allowable 3
- dual access 124

## E

- energy
  - saving 57
- enlarging 70
- environment (machine) 127
- erasing
  - a quick dial 31
  - a speed dial 36
  - stored message 42
- error messages 108

## F

- faxing 1 - 46
  - document feeder 6
  - photos 19
  - send later 20
  - to many destinations 23
  - to one destination 6
- file
  - report 50
- function
  - 21 erasing a stored message 42
  - 22 erasing a polling job 42
  - 31 setting a quick dial 28
  - 32 setting a speed dial 32
  - 33 setting a group 37
  - 41 TCR report 50
  - 42 file report 50
  - 43 stored number report 51
  - 51 printing a stored message 43
  - 62 initial settings 56, 60, 140
  - 63 user parameters 113
  - 71 night timer 58
  - 72 copier settings 118
  - 81 authorized senders 54
  - 91 date & time 141

- 92 sound volume 120
- 93 language 121
- 94 counters 52
- function
  - 61 initial settings 137

## G

- Grounding iii
- groups
  - storing 37

## H

- handset
  - on hook dial 46

## I

- Indicators 110
  - Add Paper 79
- initial settings
  - copier 118
  - general 137
- installation 127 - 142
  - side cassette 143

## J

- jams
  - copy/print 97
  - document 96

## K

- keys 110

## L

- labels
  - entering characters for 122
- language 121
- LCD 110
- length reduction 102
- Lightning protection iii - iv

## M

- machine exterior 112
- magnification 70
- maintenance
  - cleaning pad 83
  - daily 90
  - paper 79
  - photoconductor 86
  - stamp 89

toner 82  
 manual  
   reception 14  
   reports 50  
 Marker (Stamp) 25  
 Memory Transmission 5  
   erasing 42  
   printing 43  
 messages  
   error 108

## N

night timer 16, 57  
 numbers  
   erasing a quick dial 31  
   erasing a speed dial 36  
   storing 28

## O

on hook dial 46  
 On/Off Switches  
   RDS 103  
   Reject Messages from  
   Unidentified Senders 52  
 operation panel 110  
 option  
   fax: send later 20

## P

Page Count 21  
 paper  
   adding 79  
   specifications 123  
   when out of 16  
 phone  
   see handset  
 photoconductor  
   replacing 86  
 photos  
   copying 73  
   faxing 19  
 polling  
   cancel 42  
 power 125, 136  
 Power supply iii  
 printing  
   sender's CSI/RTI 61, 117  
   stored message 16, 43  
 Printing a file from memory 43  
 problems 95  
   communication 102  
   document jams 96

error messages 108  
 indicator 95  
 operation 104  
 print/copy jams 97  
 Programming  
   Daylight Saving Time 142  
 pulse line 140

## Q

quick dial  
   erasing a 31  
   storing 28  
   tone key 61

## R

RDS (Remote Diagnostic System) 103  
 reception 14  
   authorized 52  
   substitute 16  
 reducing 70  
 reduction  
   length reduction 102  
 report  
   communication failure 48  
   communication result 48  
   error 48  
   format 49  
   list of files 50  
   list of numbers 51  
   memory storage 47  
   power failure 47  
   TCR 47, 50  
   transmission result 48  
 reports 47 - 51  
   automatic 47  
 resolution  
   see detail  
 RTI 137  
 RTI/TTI  
   entering characters for 122

## S

saving  
   toner 117  
 saving energy 57  
 send later 20  
   cancel 42  
   printing 43  
 sending  
   see faxing  
 side cassette

extension 145  
 installation 143  
 solutions 95  
 sound volume 120  
 specifications  
   general 125  
   paper & documents 123  
 speed dial  
   erasing 36  
   storing 32  
 Stamp  
   replacing 89  
   Use during transmission 25  
 stored message  
   printing 43  
 stored numbers  
   printing 51  
 storing numbers 28  
   in groups 37  
   quick dial 28  
   speed dial 32  
 storing numbers  
   capacity 124  
 substitute reception 117  
 substitute reception 16

## T

TCR 47, 50  
 time & date 141  
 timer  
   night 57  
 tonal signals 61, 140  
 tone line 140  
 toner  
   adding 82  
   saving 117  
   when out of 16  
 Transmission  
   Memory 5  
   Using Redial 27  
 troubleshooting 95  
 TSI  
   printing 61, 117  
 TTI 137  
 TTI On/Off 22

## U

user parameters 113 - 117

## V

Verification Stamp 25  
 volume 120

## Mini-Glossary

**CSI:** Called Station Identification. This is your fax number, programmed in your machine for identification purposes. During a communication, it appears on the other party's display, and vice versa. By international law, the CSI must be programmed in your machine before you connect it to the public phone network. The CSI consists of your fax number, and should include the country and area codes, but not hyphens.

**TTI:** Transmitting Terminal Identification. This is the identification printed at the header of every page you send. It should be identical to the RTI (see below).

**RTI:** Receiving Terminal Identification This is a 20 character identification, such as your name or company name. The RTI replaces the CSI during a communication if the other party's machine is compatible with this function. (This is legal).

**TCR:** Transmission Confirmation Report. A report generated by your fax machine to attest to the success or failure of all communications, including receptions.


**Wild cards:** A wild card is a partial RTI or CSI. A caller whose RTI or CSI contains the wild card will be treated differently (e.g. for authorized reception, see page 52).




---

## Position of the Laser Label

**WARNING:** Do not attempt any maintenance or troubleshooting other than that mentioned in this manual. This machine contains a laser beam generator and direct exposure to laser beams can cause permanent eye damage. So, do not open the laser unit or look along the laser beam path while the main power is on.

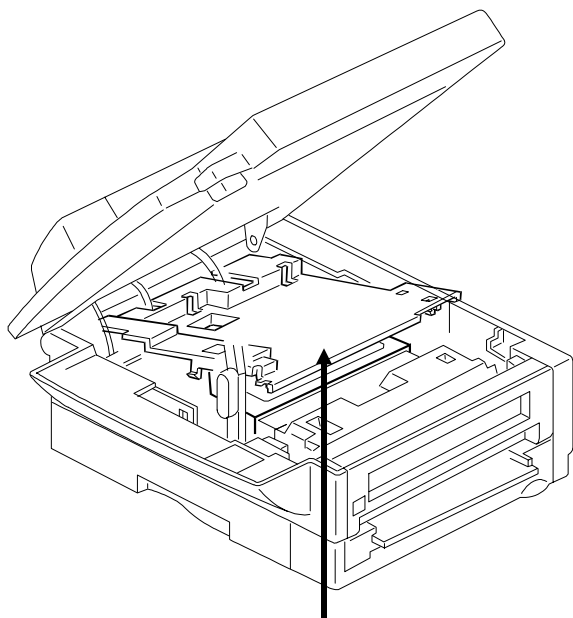

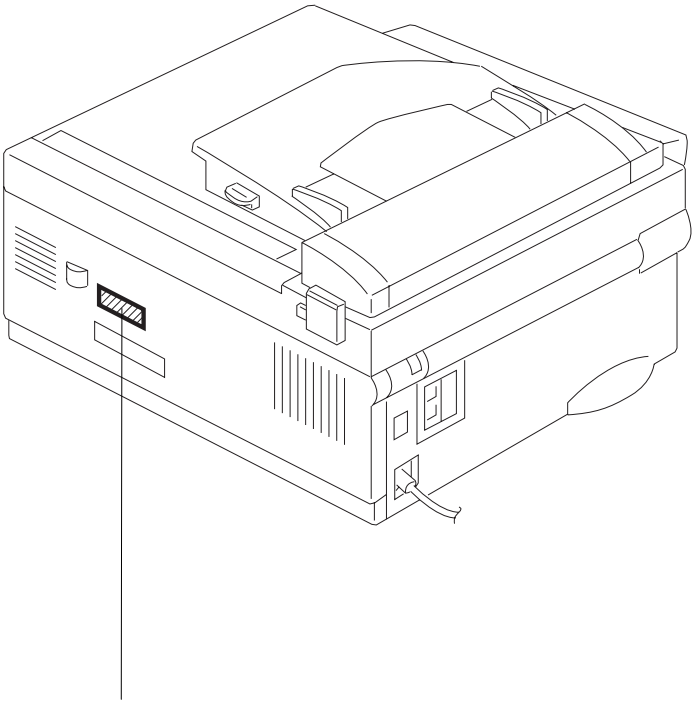

## Faxing at a Glance

### Option key

|                |                                                          |
|----------------|----------------------------------------------------------|
| SEND LATER     | Sending or picking up a fax message later (page 20 & 22) |
| SET PAGES?     | Setting the number of pages                              |
| TTI PRINT?     | Printing an ID at the top of your message                |
| DOCUMENT SIZE? | Selecting the scanning area                              |

### Hints

- ☐ Problem? See page 95.
- ☐ Follow the safety instructions at the beginning of this manual.
- ☐ To change the toner cartridge, see page 82.
- ☐ To add paper, see page 79.
- ☐ Use the **Function**, **◀**, and **▶** keys to navigate through functions and options.
- ☐ To use the side cassette option, see page 143.
- ☐ Use the **Yes & No** keys (**▼** & **▲**) to accept or reject settings.
- ☐ If your telephone line uses pulse dialing, see page 61 for how to generate tones.
- ☐ Use **Quick Dial keys 01** to **08** (or 11 to 18, on the left side) to enter letters and **Quick Dial key 09** (or 19) to enter spaces and symbols.

- 1** Select Faxing with the **Fax/Copy** key.
- 2** Fan your stack. (At most 30 one sided pages)
- 3** Insert the document face up in the feeder.
- 4** Select Memory (LED on) or Immediate Transmission (LED off) with the **Memory** key.
- 5** Dial the number either from the keypad, with a Quick Dial key (at the left), or with a Speed Dial code.
- 6** Press **Yes** and dial more numbers (if needed). Finally press the **Start** key.

**Functions:** Press the function key followed by one of the numbers below.

|    |                                                                                   |     |                                                                                                                                                                                      |
|----|-----------------------------------------------------------------------------------|-----|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 11 | Picking a document stored elsewhere (page 22)                                     | 61* | Initial Settings:<br>Own telephone number<br>RTI (a name ID sent to other machines)<br>TTI (an ID printed on messages you send),<br>CSI (phone ID sent to other machines) (page 137) |
| 21 | Erasing a message stored for transmission (page 42)                               | 62* | Selecting the phone line, turning authorized reception, and the timer on or off. (page 140)                                                                                          |
| 22 | Erasing instructions to pick up a document (page 42)                              | 63* | Printing and setting user parameters (bit switch settings for a variety of functions, page 113)                                                                                      |
| 31 | Storing a number in one of the Quick Dial keys at left (page 28)                  | 71* | Night timer (page 57)                                                                                                                                                                |
| 32 | Storing a number as a two-digit code (page 32)                                    | 72* | Copier settings (page 118)                                                                                                                                                           |
| 33 | Storing a group of numbers (page 37)                                              | 81* | Setting the list of specified senders (for authorized reception, page 52)                                                                                                            |
| 41 | Checking the last 35 communications (prints out a report, page 49)                | 91* | Adjusting the clock (page 141)                                                                                                                                                       |
| 42 | Printing a list of all messages and pick-up files stored in the machine (page 50) | 92* | Adjust the volume (page 120)                                                                                                                                                         |
| 43 | Printing a list of all the telephone numbers stored in the fax machine (page 51)  | 93* | Selecting a different language (page 121)                                                                                                                                            |
| 51 | Printing a message stored in the machine (page 43)                                | 94* | Counters (page 52)                                                                                                                                                                   |

\*These functions require the access code on page 113.

## **NOTICE TO USERS (Great Britain)**

This model is designed and approved for connection to the following circuits.

British Telecom Public Switched Telephone Network

Hull Public Switched Telephone Network

PABX Extensions

Mercury Communications Limited Public Switched Telephone Network

## **CONNECTION TO THE PSTN OR A PABX EXTENSION**

If there is a line or jack socket already installed you may connect this model using the line lead supplied. If you require a socket to be fitted, complete the attached form and send it to your local telephone manager's office.

## **IMPORTANT NOTICE**

1. The connection to the BT network must be unplugged before the earth is disconnected.
2. The connection to the BT network must not be hard wired.
3. Please ensure that connection to the mains supply (240VAC), is correctly made and that the power is switched on before use.
4. The apparatus is suitable for direct connection to exclusive lines of Public Switched Telephone Network, and for connection to compatible PABXs (consult your authorised dealer for the list of compatible PABXs and for installation thereon), or via an RBS. The definition of an RBS (Relevant Branch System) for PSTN lines, is given in BS6789 section 6.1, clause 2.4.
5. When idle, this model allows normal use of an associated main telephone, which must be plugged into the BS6312 compatible connector, provided for telephone line connection. Only one such connection may be made.
6. The apparatus must be connected to PSTN lines which use loop disconnect or DTMF signalling.
7. The machine is not suitable as an extension to a payphone, for use on shared service lines, or on 1 - 1 carrier systems.
8. The Terminal operates in mode 1 (autodialling).
9. The user is advised to check all numbers stored in the register before making a call.

10. The approval of this terminal for connection to the British Telecom public switched telephone network is INVALIDATED if the apparatus is subject to any modification in any material way not authorised by BABT or it is used with, or connected to:

- a) Internal software that has not been formally accepted by BABT.
- b) External control software or external control apparatus which causes the operation of the terminal or associated call set-up equipment to contravene the requirements of the approval.

All apparatus connected to this terminal and thereby connected directly to the British Telecom public switched telephone network must be approved apparatus as defined in Section 22 of the British Telecommunications Act 1984.

11. This apparatus has been approved for the use of the following facilities:

Storage of Telephone Numbers for Retrieval by Predetermined Code  
Automatic Call Initiation  
Operation in the Absence of Proceed Indication (Although not Detected)  
Automatic Dialling Facilities  
Auto-Calling Facility  
Loudspeaking Facility  
Series Connection Facility  
Automatic Storage of Last Number Dialed  
Tone Detection - Busy Tone  
Repeat Attempt Facilities: Multiple (Automatic)  
Auto Clear from Call Originating End  
Integral Modem

Any other usage will invalidate the approval of the apparatus if as a result it then ceased to conform to the standard against which approval was granted.

13. Connection to a PBX - it cannot be guaranteed that the apparatus will operate correctly under all possible conditions connection to compatible PBX's. Any cases of difficulty should be referred in the first instance to the supplier of the telephone apparatus.

14. This apparatus provides an off hook detector and switching of the line between the telephone and modem. The voltage drop introduced by this apparatus into the loop connection between the main telephone and the network at a current of 40ma d.c. is 0.3 volts.

15. Only apparatus conforming with BS6301 or EN41003 may be connected to the series socket. Any interconnection between the above socket and other connections, directly or by the way of other apparatus, may produce hazardous conditions on the BT network. Advice should be obtained from a competent engineer before any such connection is made.

16. With reference to EN41003 cl 4.1.3 the apparatus is supplied with a connection to the Public switched telephone network, which is referred to as a TNV circuit. There is also an optional printer port that may be fitted, which is referred to as a SELV circuit. Please ensure that the TNV circuit is only connected to another TNV circuit and that the SELV circuit is only connected to other SELV circuits.

17. The apparatus does not recognise a secondary proceed indication.

We wish to install a RICOH MV310 facsimile transceiver, Approval Number 605642 at the address shown below:

Please supply a \*direct exchange line/\*master jack unit/

\*telephone type: .....

Installation Address: .....

.....

.....

Contact Name: .....

Company Address: .....

.....

.....

The RICOH MV310 is a BABT approved facsimile supplied by:

RICOH U.K. Limited,

Ricoh House,

1 Plane Tree Crescent,

Feltham,

Middlesex,

TW13 7HG

Telephone: 0181 751 6611

Facsimile: 0181 890 5566

\*Delete where necessary



Declaration of Conformity

"The Product complies with the requirements of the **EMC Directive 89/336/EEC** and the **Low Voltage Directive 73/23/EEC**."

## SUPPLIES

**CAUTION:** Ricoh shall not be responsible for any damage or expense that may result from the use of parts other than recommended parts.

For good copy quality, Ricoh recommends that use genuine Ricoh toner.

## TONER CASSETTES

- ☐ RICOH TONER CASSETTE TYPE 300 is recommended for the best performance.

## STAMP

- ☐ MARKER TYPE 30 is recommended for the best performance.

## PHOTOCONDUCTOR

- ☐ RICOH PHOTOCONDUCTOR TYPE 300 is recommended for the best performance.

## Overseas Affiliates

### The Netherlands

RICOH EUROPE B.V.  
Groenelaan 3 P.O. Box 114  
1180 AC Amstelveen, The Netherlands  
TEL: +31-(0)20-5474111  
FAX: +31-(0)20-6418601

### Germany

RICOH DEUTSCHLAND GMBH  
Mergenthalerallee 38-40  
65760 Eschborn, Germany  
TEL: +49-(0)6196-906-0  
FAX: +49-(0)6196-45104

### United Kingdom

RICOH U.K. LTD.  
RicoH House  
1 Plane Tree Crescent, Feltham  
Middlesex TW13 7HG, U.K.  
TEL: +44-(0)181-751-6611  
FAX: +44-(0)181-890-5566

### USA

RICOH CORPORATION  
5 Dedrick Place,  
West Caldwell,  
New Jersey 07006, USA  
TEL: +1-201-882-2000  
FAX: +1-201-673-6934

# RICOH

Ricoh Company, Ltd.

15-5, Minami-Aoyama 1-Chome, Minato-ku, Tokyo 107, Japan



Part No. H5218601 Printed in the Netherlands