

RICOH

PARTS CATALOG

FOR

FAX1700L/1700LF

MV106/FAX1750MP/FAX1750MPF

RICOH COMPANY, LTD.

1	November 1th, 1996	First edition

PARTS CATALOG

INTRODUCTION


This chapter instructs you the numbers and names of this parts on this machine.

INDEX to PARTS CATALOG

Section1.Part Location and List

1.EXTERIOR	2
2.SCANNER (UPPER UNIT)	4
3.SCANNER (LOWER UNIT)	6
4.UPPER SECTION	8
5.FUSING UNIT	10
6.ELECTRICAL SECTION.....	12
7.MIDDLE SECTION	14
8.LOWR SECTION/LASER UNIT	16
Section2.Parts Index.....	18

1. EXTERIOR

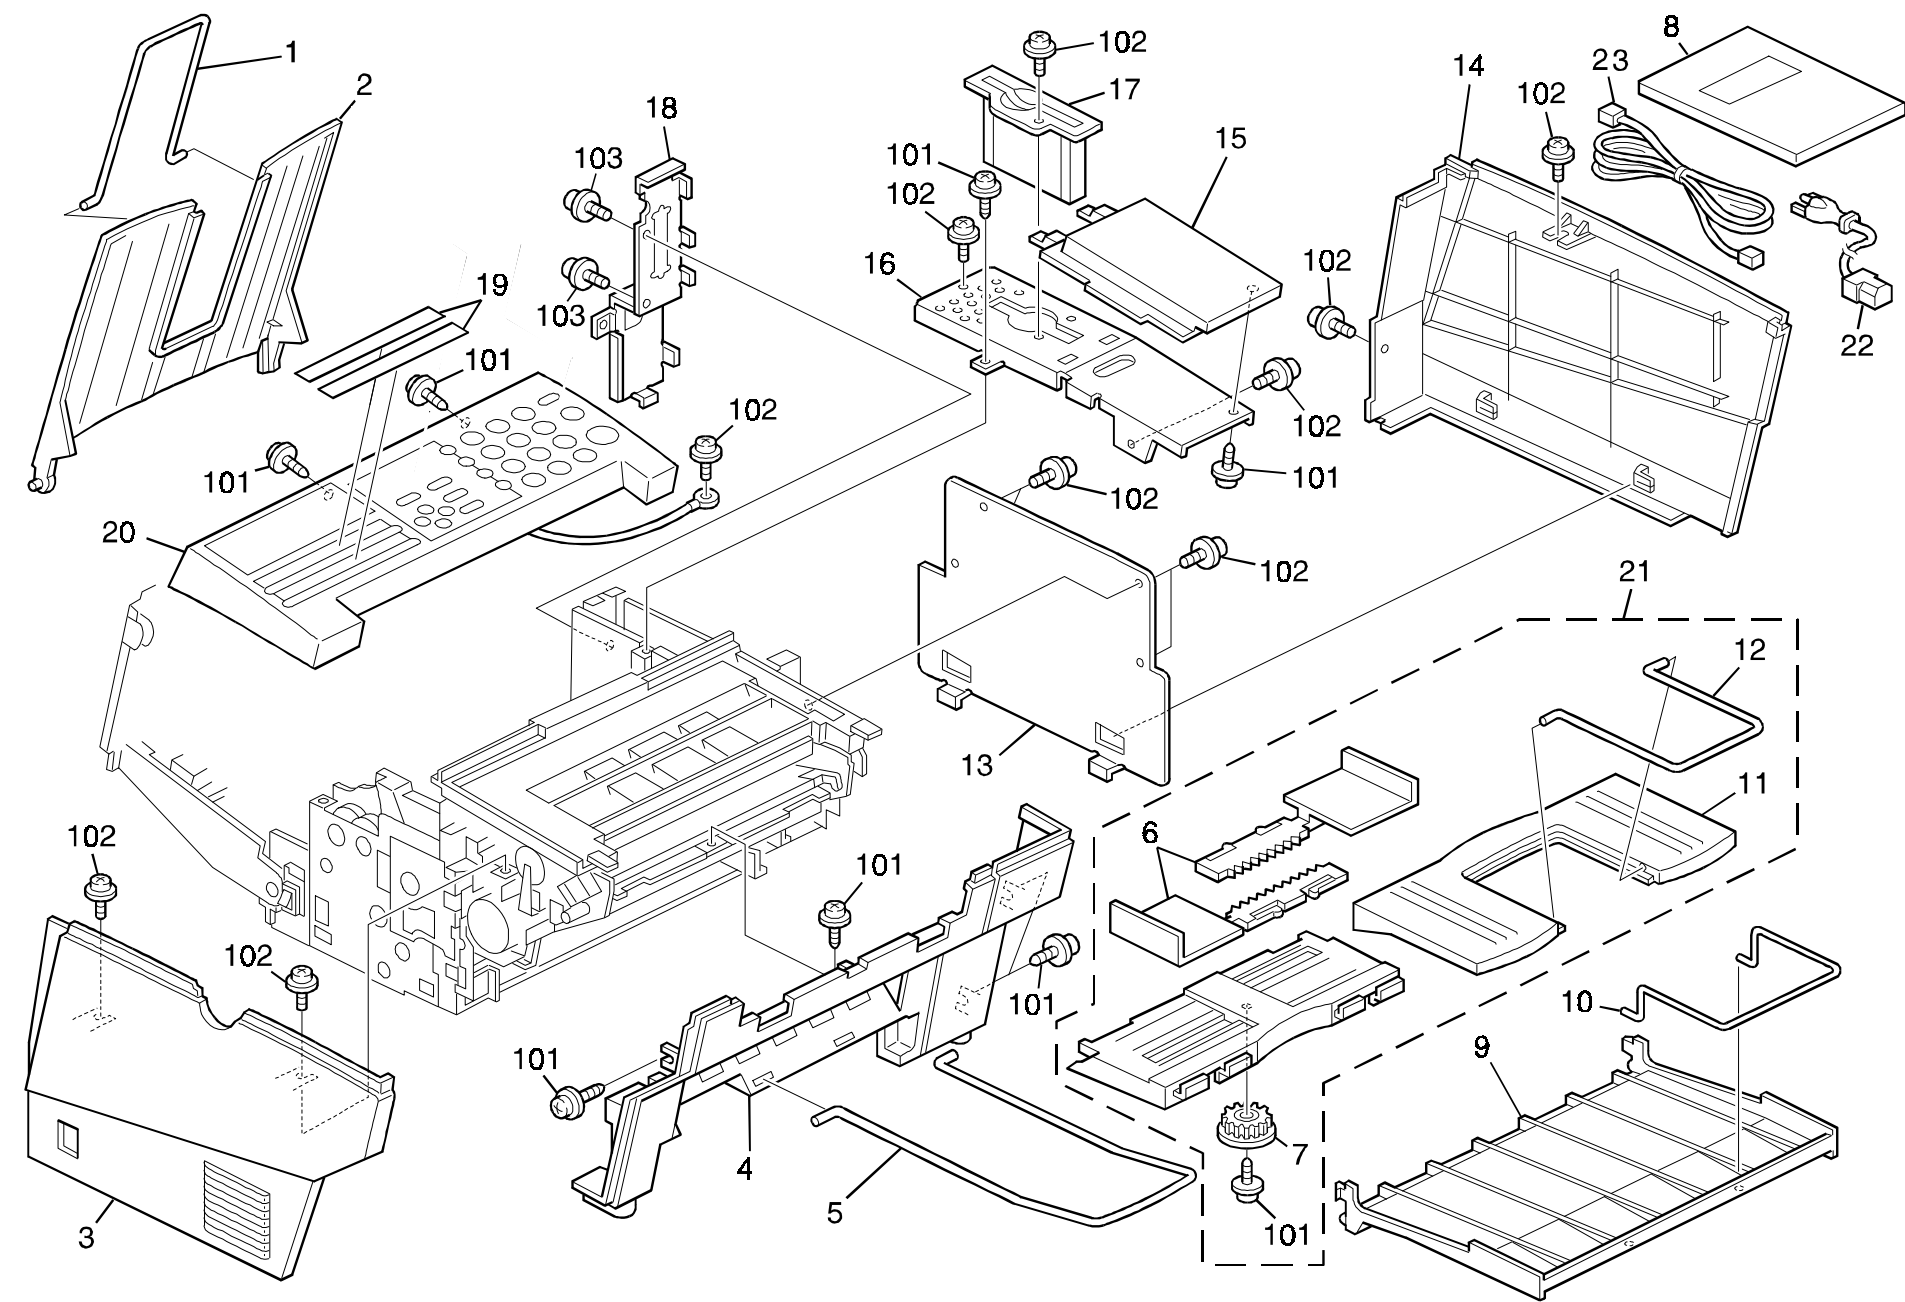

1. EXTERIOR

INDEX	PARTS NO.	DESCRIPTION	Note
1	H529 3161	Paper Tray Extention	
2	H529 3159	Paper Tray	
3	H529 3152	Left Cover	
4	H529 3158	Front Cover	
5	H529 3154	Document Tray	
6	H529 3157	Document Guide	
7	H529 3165	Pinion Gear	
8	H528 8600	Operation Manual - US	
8	H528 8609	Operation Manual - Asia	
8	H528 8607	Operation Manual - TWN	
9	H529 3153	Paper Tray	
10	H529 3164	Paper Tray Extention	
11	H529 3156	Document Table	
12	H529 3166	Document Table Extention	
13	H529 3167	Shield Cover - Right	
14	H528 3100	Right Cover - FX7	
15	H529 3101	Upper Right Cover	
16	H529 4102	Shield Cover - Upper Right	
17	H529 3102	Guide - IC Memory Card	
18	H529 4101	Right Rear Cover	
19	H529 4209	Quick Dial Sheet	
20	H528 4015	Operation Panel Ass'y - US	
20	H528 4016	Operation Panel Ass'y - EUR	
20	H528 4017	Operation Panel Ass'y - France	
20	H528 4018	Operation Panel Ass'y - Asia	
20	H528 4019	Operation Panel Ass'y - TWN	
21	H529 1001	Document Tray Ass'y	
22	H505 5029	Power Cord - US/TWN	
22	H505 5003	Power Cord - Asia	
23	H505 5047	Telephone Cable - 6P / 6P - US/TWN	
23	H090 4025	Telephone Cable - France	


INDEX	PARTS NO.	DESCRIPTION	Note
101	0965 3008B	Tapping Screw With Washer - M3x8	
102	0964 3008B	Tapping Screw - M3x8	
103	0964 3006B	Tapping Screw - M3x6	

1. EXTERIOR (MODEL MV106/1750 ONLY)

INDEX	PARTS NO.	DESCRIPTION	Note
8	H529 8600	Operation Manual - US	
8	H529 8607	Operation Manual - TWN	
8	H529 8609	Operation Manual - Asia	
8	H529 8700	Operation Manual - Drivef	
8	H529 8710	Operation Manual - Bitware	
14	H529 3100	Right Cover	
20	H529 4015	Operation Panel Ass'y - US	
20	H529 4016	Operation Panel Ass'y - EUR	
20	H529 4017	Operation Panel Ass'y - France	
20	H529 4018	Operation Panel Ass'y - Asia	
20	H529 4019	Operation Panel Ass'y - TWN	

INDEX	PARTS NO.	DESCRIPTION	Note

2. SCANNER (UPPER UNIT)

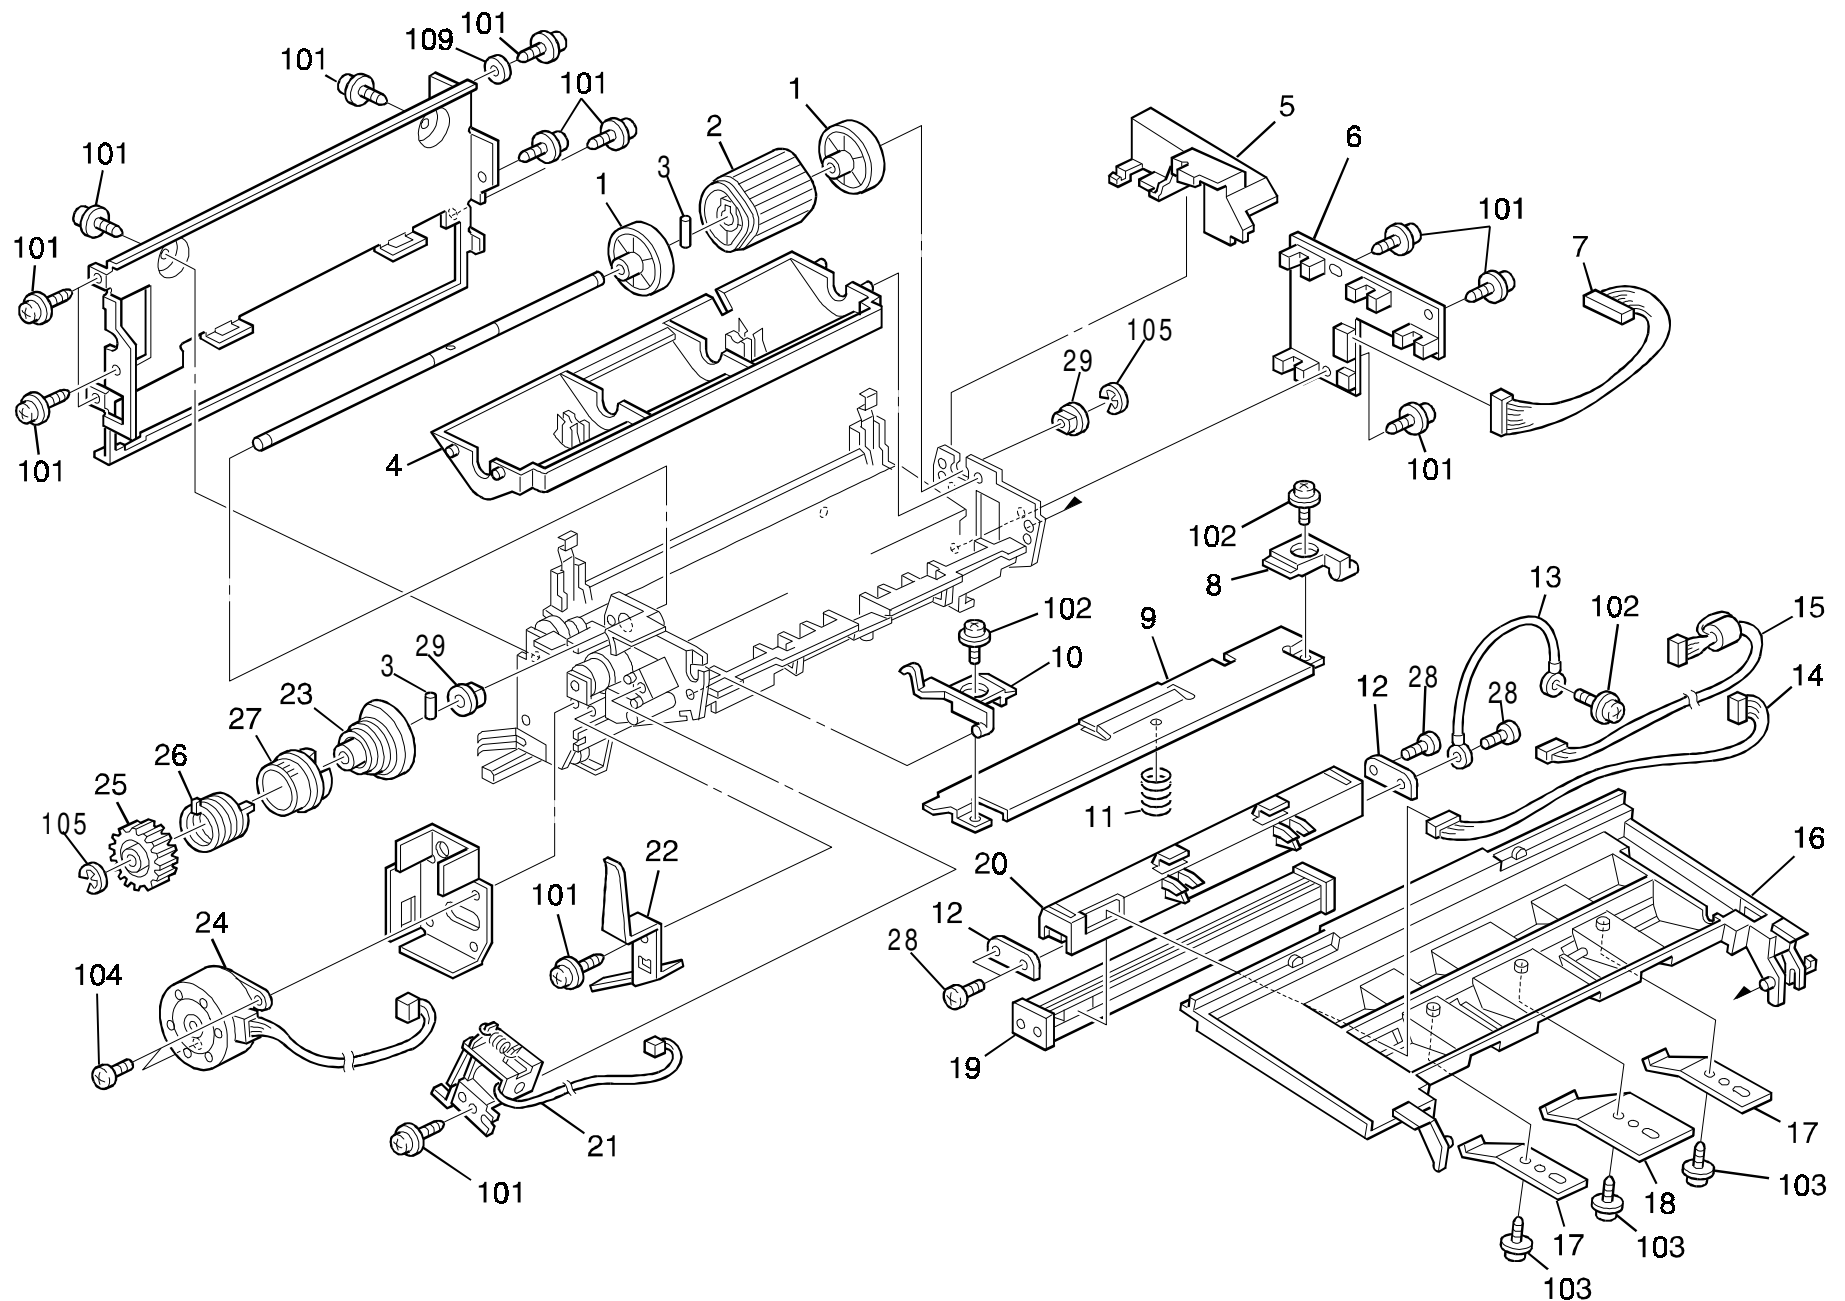


2. SCANNER (UPPER UNIT)

INDEX	PARTS NO.	DESCRIPTION	Note
1	H529 1121	Guide Roller	
2	H529 1154	Document Pick-up Roller	
3	H529 1123	Pin - Pick-up Roller	
4	H529 1122	Guide Plate - Document Pick-up Roller	
5	H529 1125	Cover - Scanner Base	
6	H529 5053	Scanner Sensor Board	
7	H529 5080	Harness - Scanner Sensor Board - FCU	
8	H529 1146	Holder - Scanner Plate	
9	H529 1147	Document Friction Plate	
10	H529 1148	Friction Lever	
11	H529 1145	Spring - Scanner Plate	
12	H529 1127	Ground Plate - CIS	
13	H529 5081	Ground Wire - CIS	
14	H529 5005	Harness - OPU - FCU	
15	H529 5082	Harness - CIS - FCU	
16	H529 1129	Scanner Guide Plate	
17	H529 1132	Scanner Spring Plate - Side	
18	H529 1133	Scanner Spring Plate - Middle	
19	H529 5055	Contact Image Sensor	
20	H529 1151	CIS Holder	
21	H529 5066	Document Pick-up Solenoid	
22	H529 1108	Ground Plate	
23	H529 1118	Cam - Document Pick-up Roller	
24	H529 5061	TX Motor	
25	H529 1115	Gear - Document Pick-up Roller	
26	H529 1116	Clutch Spring	
27	H529 1117	Holder - Clutch Spring	
28	H529 1126	Pan Head Screw - CIS	
29	H529 1119	Bushing - Scanner Roller	

INDEX	PARTS NO.	DESCRIPTION	Note
101	0965 3008B	Tapping Screw With Washer - M3x8	
102	0964 3006B	Tapping Screw - M3x6	
103	0965 3006B	Tapping Screw With Flate Washer - M3x6	
104	0433 0060B	Philips Tapping Screw - M3x6	
105	0720 0040G	Retaining Ring - M4	

3. SCANNER (LOWER UNIT)

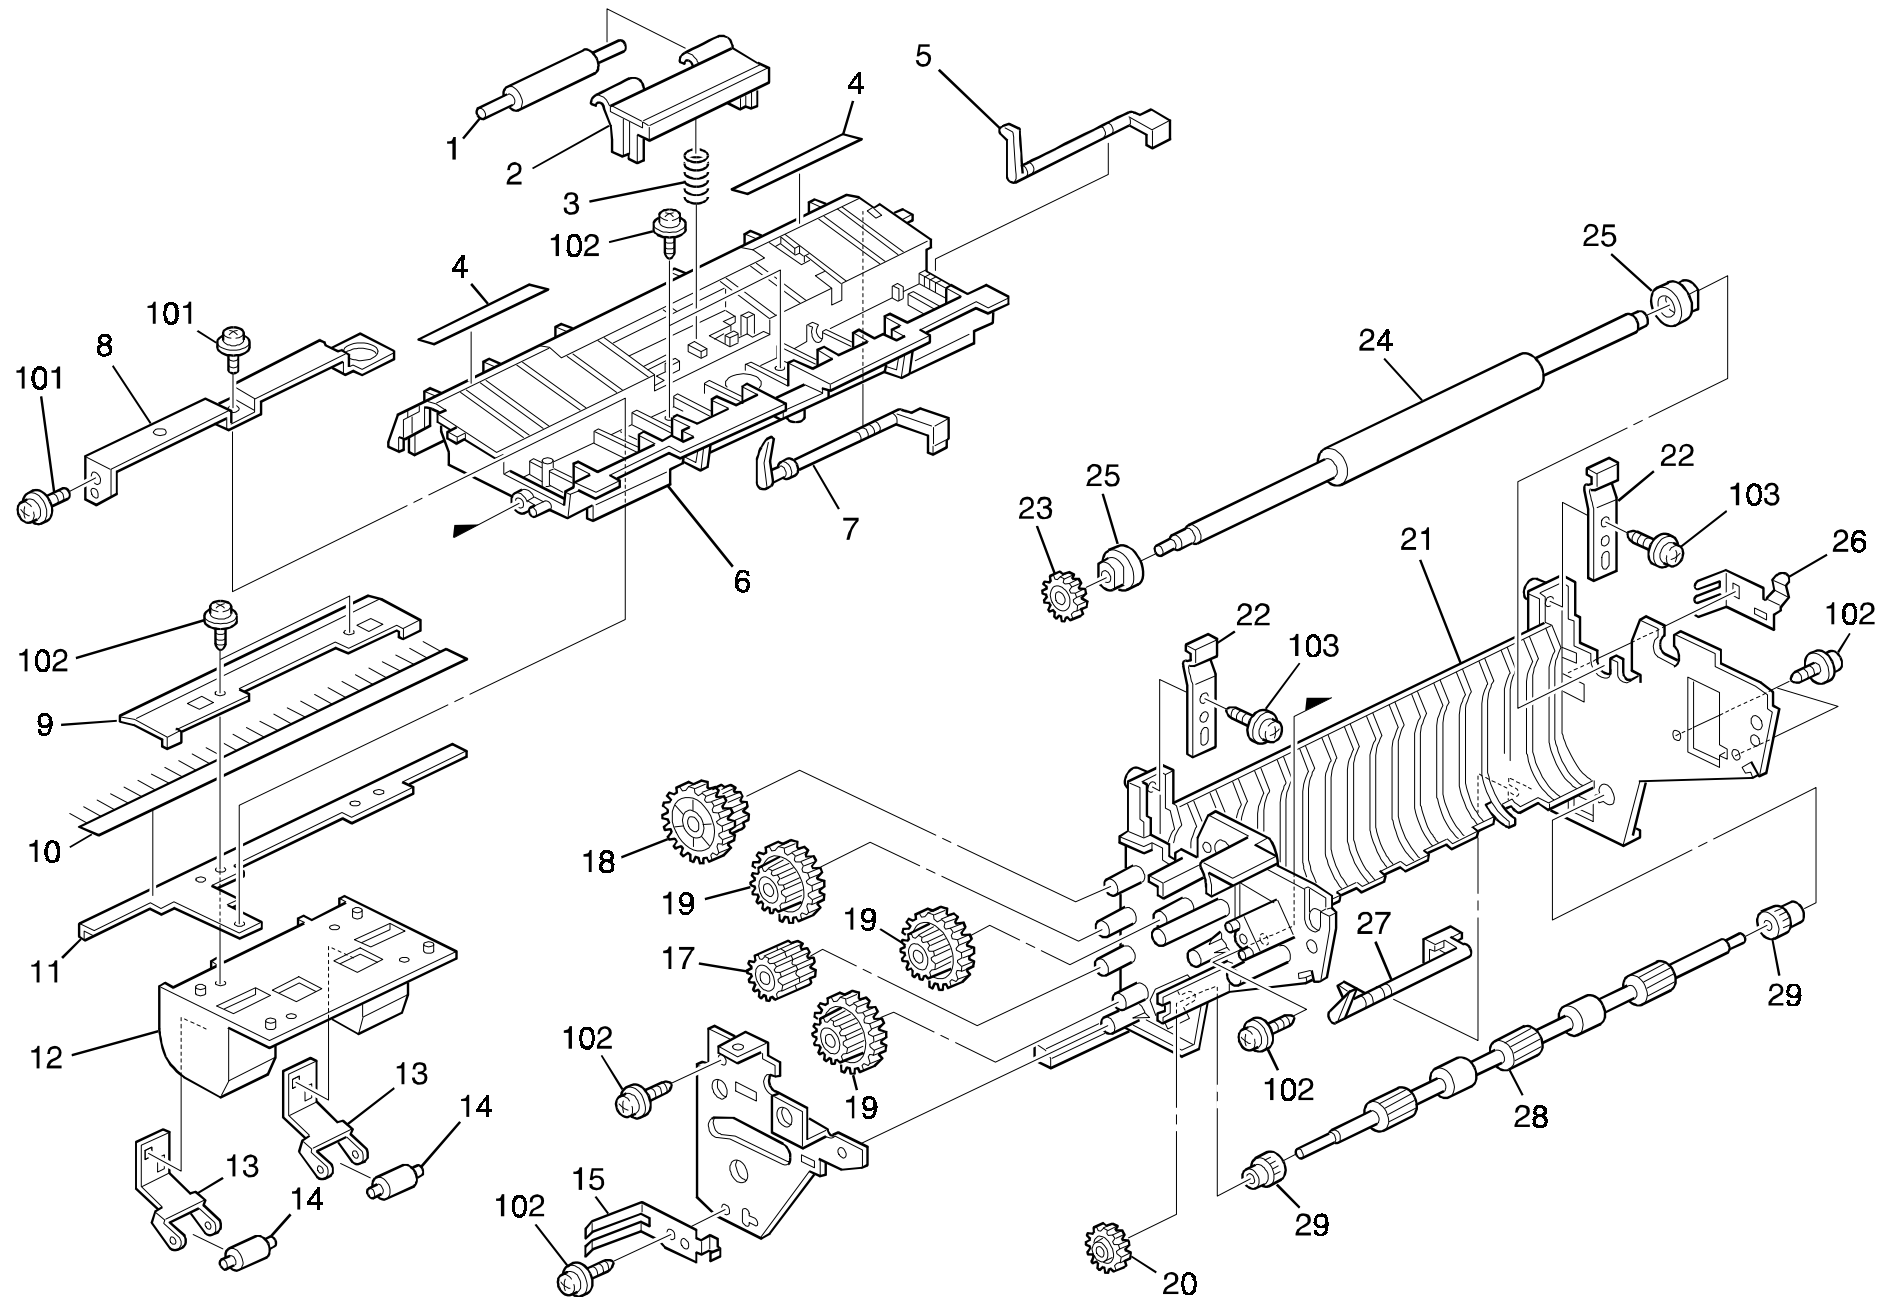


3. SCANNER (LOWER UNIT)

INDEX	PARTS NO.	DESCRIPTION	Note
1	H529 1143	Document Feed Roller	
2	H529 1101	Document Separation Pad	
3	H529 1134	Spring - Document Separation Pad	
4	H529 1135	Sheet - Document Guide	
5	H529 1103	Actuator - Document Sensor	
6	H529 1136	Document Guide	
7	H529 1104	Actuator - Scanner Sensor	
8	H529 1144	Ground Plate	
9	H529 1140	Ground Plate 2	
10	H529 1142	Grounding Brush	
11	H529 1152	Plate - Grounding Brush	
12	H529 1139	Document Exit Guide	
13	H529 1137	Holder - Exit Feed Roller	
14	H529 1138	Exit Feed Roller	
15	H529 1107	Ground Plate - Exit Guide	
16	H529 1120	Bushing - Exit Roller	
17	H529 1109	Gear - 19/27T	
18	H529 1112	Gear - 18/37T	
19	H529 1111	Gear - 18/32T	
20	H529 1110	Gear - 22T	
21	H529 1131	Document Feed Frame	
22	H529 1130	Spring Plate - Feed Frame	
23	H529 1114	Gear - 19T	
24	H529 1100	Scanner Roller	
25	H529 1106	Bushing - Scanner Roller	
26	H529 1149	Ground Plate - Scanner Roller	
27	H529 1105	Actuator - Exit Sensor	
28	H529 1124	Document Exit Roller	

INDEX	PARTS NO.	DESCRIPTION	Note
101	0964 3006B	Tapping Screw - M3x6	
102	0965 3008B	Tapping Screw With Washer - M3x8	
103	0965 3006B	Tapping Screw With Flate Washer - M3x6	

4. UPPER SECTION

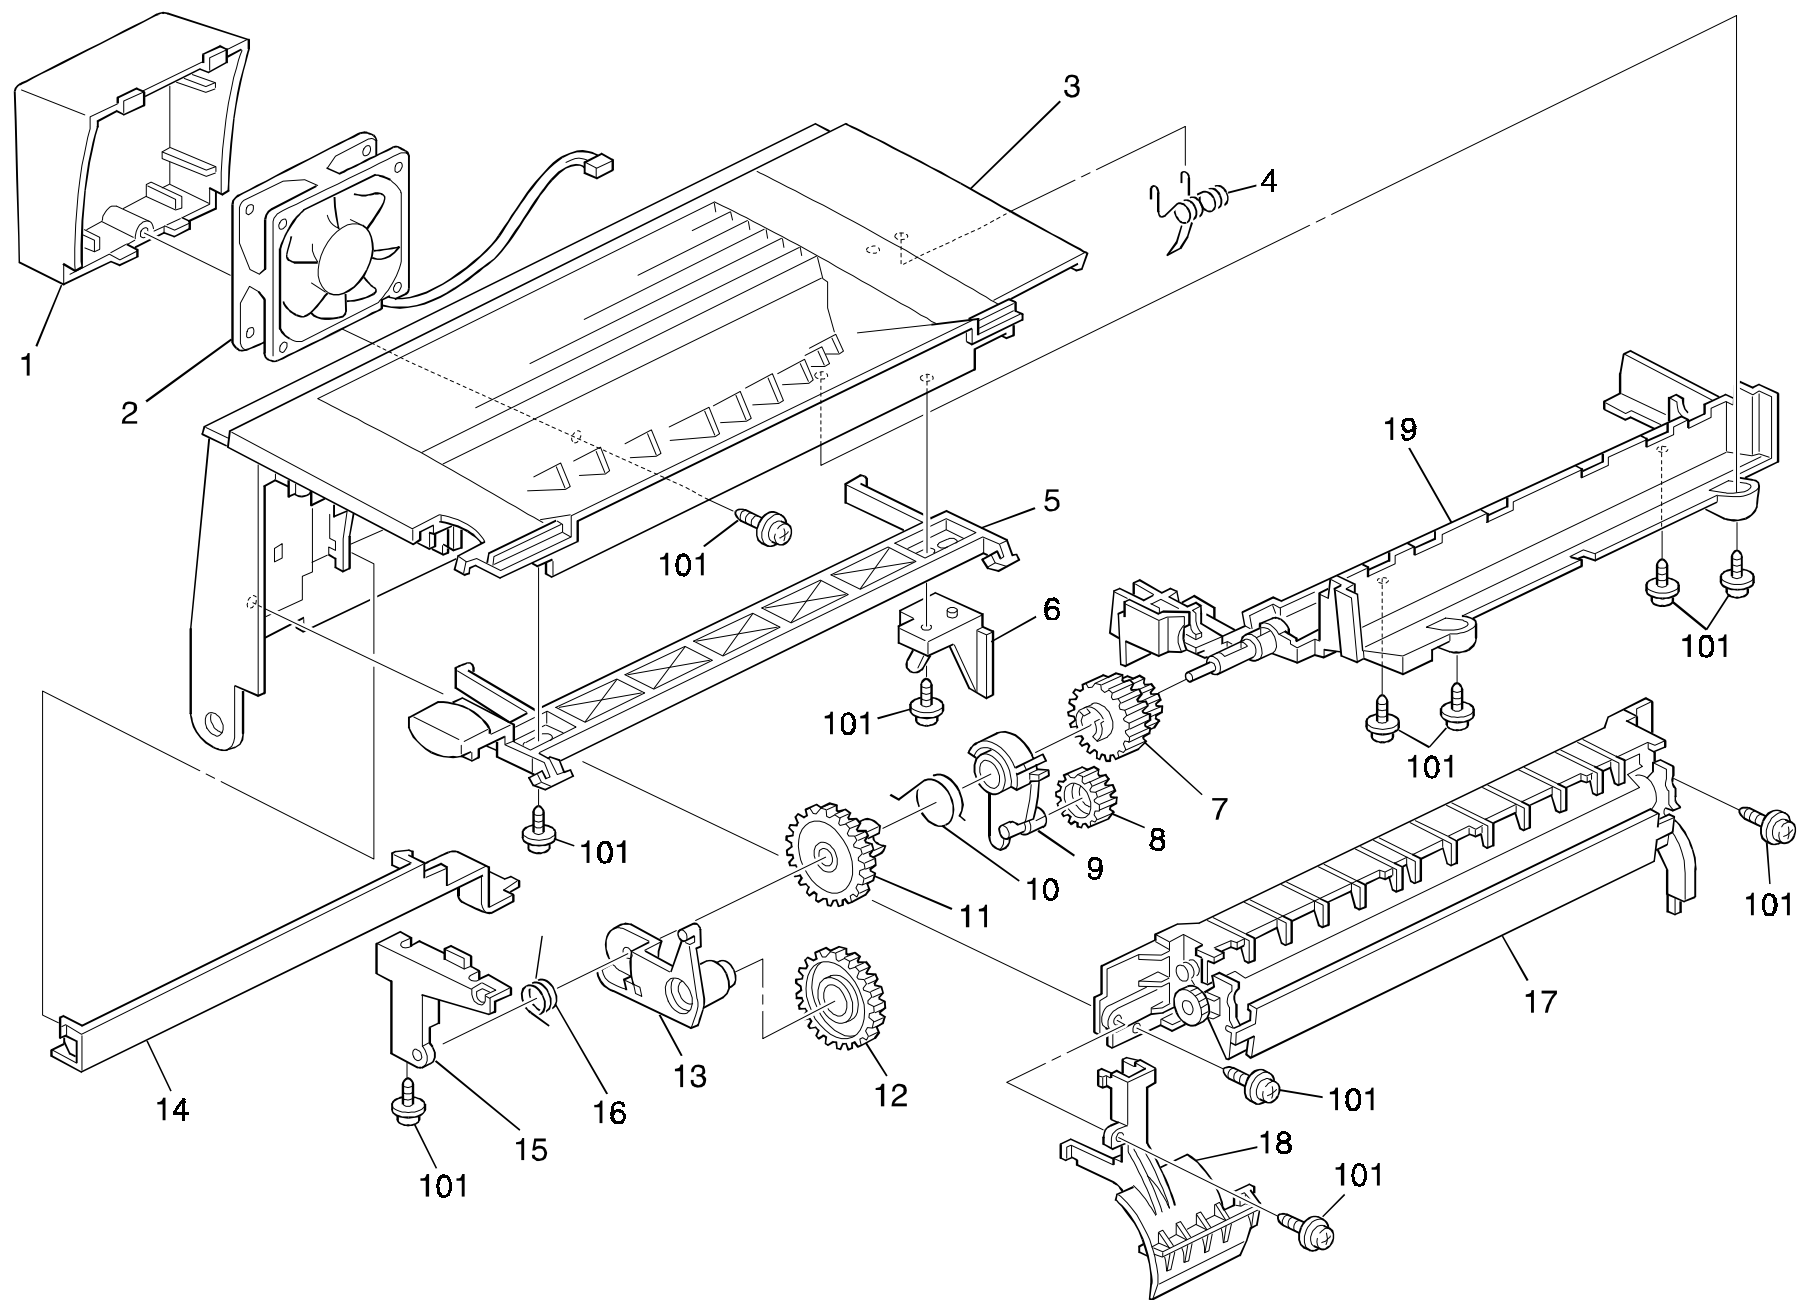

4. UPPER SECTION

INDEX	PARTS NO.	DESCRIPTION	Note
1	H529 3151	Fan Motor Cover	
2	H529 5062	Fan Motor	
3	H529 3150	Top Cover	
4	H529 2179	Torsion Spring	
5	H529 3160	Lock Lever	
6	H529 2107	Top Cover Actuator	
7	H529 2190	Gear - 21/38T	
8	H529 2189	Gear - 22T	
9	H529 2188	Lever - Feed Out Roller	
10	H529 2187	Torsion Spring	
11	H529 2186	Gear - 25/50T	
12	H529 2185	Gear - 25/50T	
13	H529 2184	Arm - Feed Out Roller	
14	H529 3162	Bracket - Top Cover	
15	H529 2182	Holder - Feed Out Roller	
16	H529 2183	Torsion Spring	
17	H529 2053	Transfer Unit	
18	H529 3163	Cover - Harness - PSU	
19	H529 2181	Cover - Fusing Unit	

INDEX	PARTS NO.	DESCRIPTION	Note
101	0965 3008B	Tapping Screw With Washer - M3x8	

This technical drawing is an exploded view of a mechanical assembly, likely a door lock or latch mechanism. The components are numbered as follows:


- 1**: Main housing or frame.
- 2**: Small bracket or pin.
- 3**: Small pin or screw.
- 4**: Small bracket or pin.
- 5**: Small pin or screw.
- 6**: Small bracket or pin.
- 7**: Small bracket or pin.
- 8**: Small bracket or pin.
- 9**: Small bracket or pin.
- 10**: Small bracket or pin.
- 11**: Cable or wire.
- 12**: Long shaft or rod.
- 13**: Small pin or screw.
- 14**: Gear or pulley.
- 15**: Small pin or screw.
- 16**: Small bracket or pin.
- 17**: Small bracket or pin.
- 18**: Small bracket or pin.
- 19**: Small bracket or pin.
- 20**: Long shaft or rod.
- 21**: Small bracket or pin.
- 22**: Small bracket or pin.
- 23**: Cable or wire.
- 24**: Small bracket or pin.
- 25**: Long bracket or pin.
- 26**: Gear or pulley.
- 27**: Small bracket or pin.
- 28**: Small bracket or pin.
- 29**: Long shaft or rod.
- 30**: Small bracket or pin.
- 101**: Small pin or screw (multiple instances).
- 102**: Small pin or screw (multiple instances).
- 103**: Small pin or screw (multiple instances).

5. FUSING UNIT

INDEX	PARTS NO.	DESCRIPTION	Note
1	H529 2050	Fusing Unit - 120V	
1	H529 2052	Fusing Unit - 230V	
2	H529 2199	Separation Hook	
3	H529 2200	Separator Roll - Fusing	
4	H529 2202	Actuator - Exit Sensor	
5	H529 2203	Torsion Spring	
6	H529 2174	Ground Plate - Top Cover	
7	H529 5052	PCB - R	
8	H529 2175	Ground Plate - PCB - R	
9	H529 2176	Holder - Exit Feed Roller	
10	H529 1138	Exit Feed Roller	
11	H529 5091	Harness - Exit Sensor	
12	H529 2178	Documrnt Exit Roller	
13	H529 1120	Bushing - Exit Roller	
14	H529 2177	Gear - 15T	
15	H529 2193	Gear - 30T	
16	H529 2194	Bushing - Hot Roller	
17	H529 2197	Bracket Thermistor	
18	H529 2195	Pressure Spring	
19	H529 2198	Bushing - Pressure Spring	
20	H529 2104	Fusing Pressure Roller	
21	H529 5072	Thermostat	
22	H529 5073	Thermistor	
23	H529 5090	Harness - PSU - Fusing Unit	
24	H529 2196	Terminal	
25	H529 2191	Guide - Fusing Unit	
26	H529 2201	Gear - 40T	
27	H529 2192	C-Ring	
28	H529 2103	Hot Roller	
29	H529 5067	Fusing Lamp - 120V	
29	H529 5068	Fusing Lamp - 230V	
30	H529 5070	Photo Interruptor	

INDEX	PARTS NO.	DESCRIPTION	Note
101	0965 3008B	Tapping Screw With Washer - M3x8	
102	0954 3006B	Screw - M3x6	
103	0433 0100B	Philips Tapping Screw - M3x10	

6. ELECTRICAL SECTION

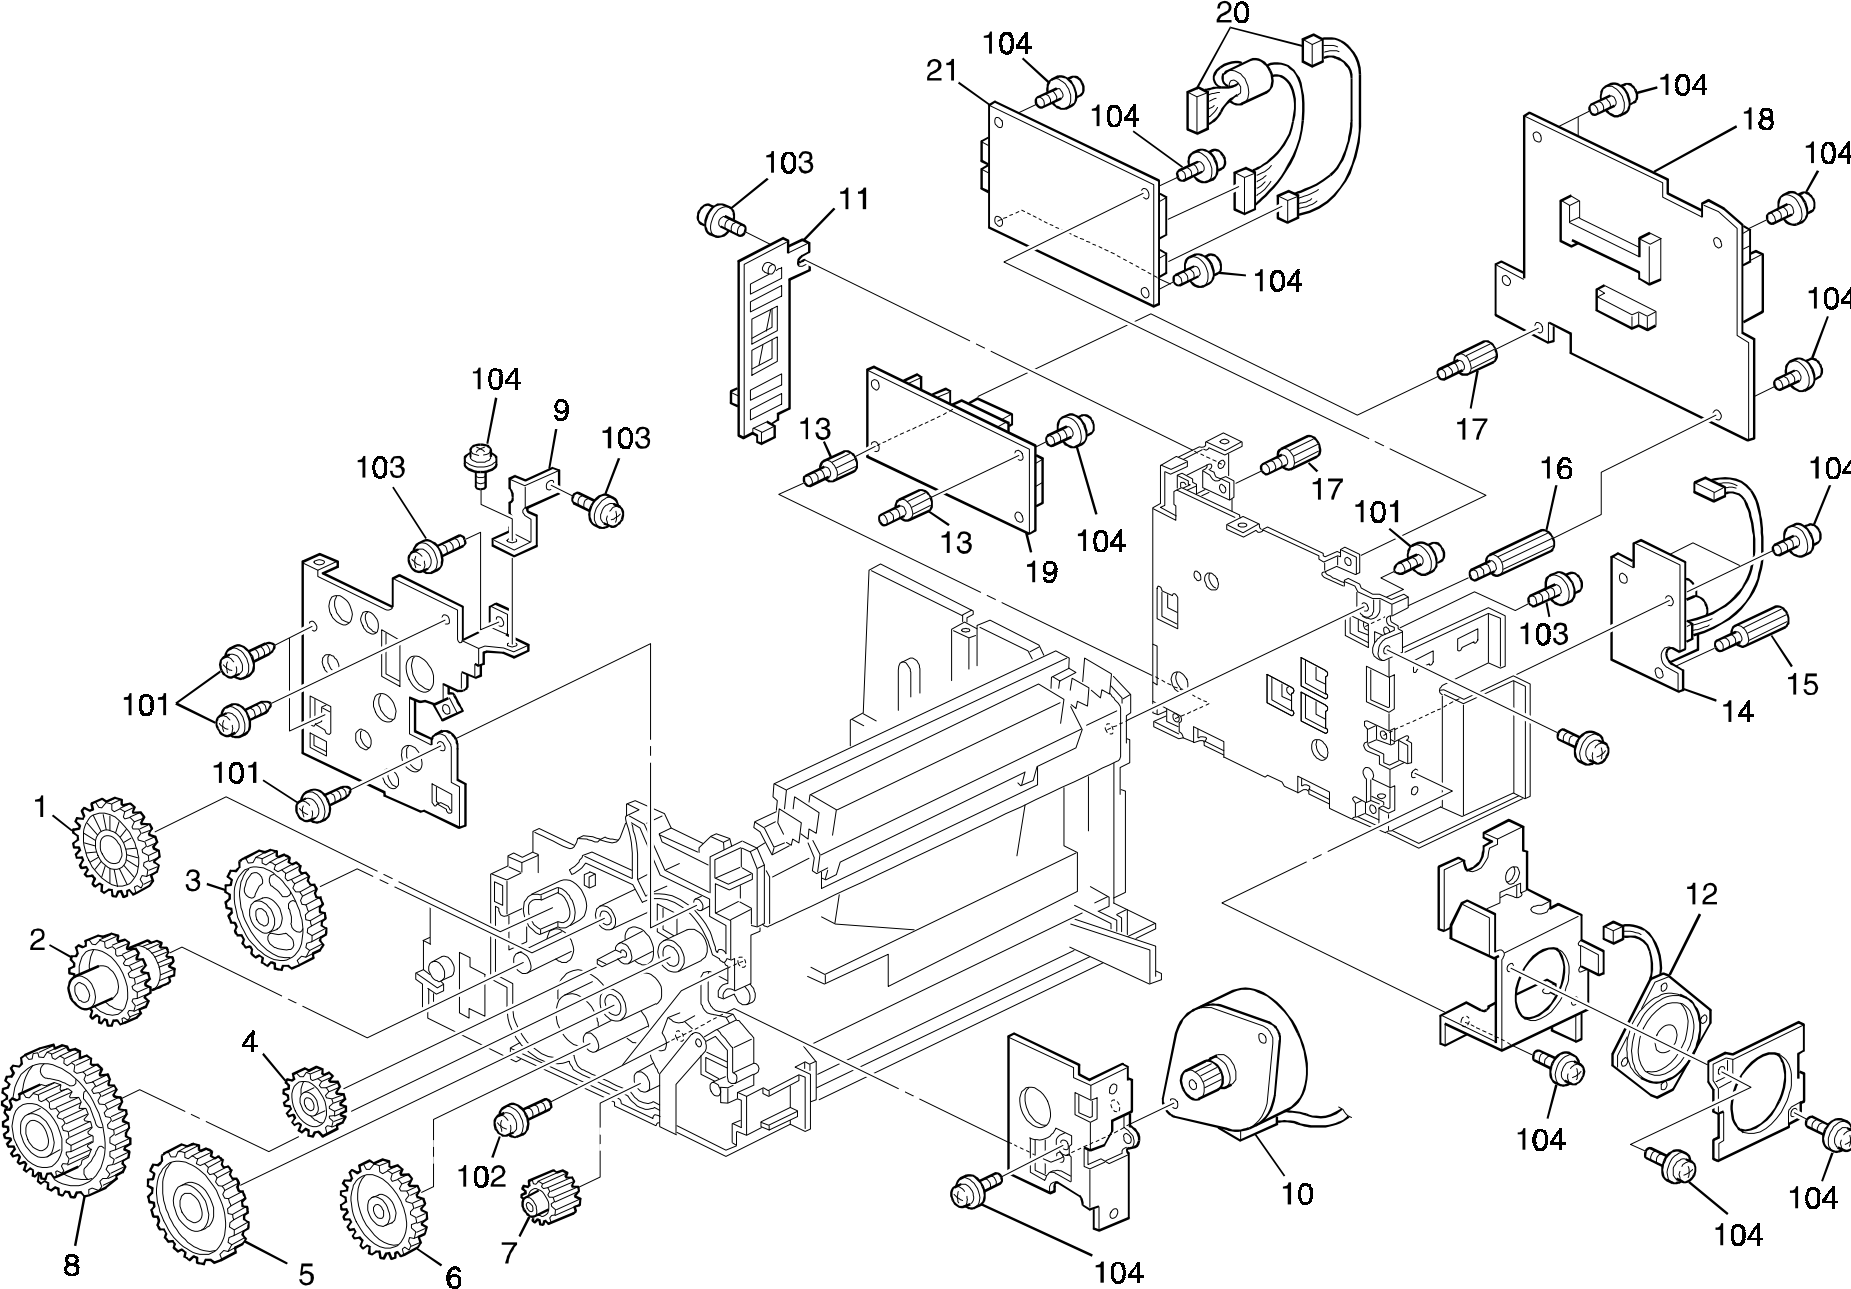

6. ELECTRICAL SECTION

INDEX	PARTS NO.	DESCRIPTION	Note
1	H529 2116	Gear - 50T	
2	H529 2117	Gear - 22/45T	
3	H529 2119	Gear - 25/72T	
4	H529 2123	Gear - 20/41T	
5	H529 2120	Gear - 29/65T	
6	H529 2122	Gear - 22/57T	
7	H529 2124	Gear - 29T	
8	H529 2121	Gear - 44/109T	
9	H529 2114	Ground Plate - Main Motor	
10	H529 5060	Main Motor	
11	H529 3103	Cover - Modular Connector	
12	H529 5071	Speaker	
14	H529 5000	PCB - PSU - 5V	
15	H529 4105	Shaft - 5V Board	
16	H529 4103	Shaft - MCB-2	
17	H529 4104	Shaft - MCB-1	
18	H528 6040	PCB - FCU	
19	H529 5050	PCB - MCB	
20	H529 5006	Harness - NCU - FCU - 15P	
20	H529 5007	Harness - NCU - FCU - EUR/Asia	
21	H529 6001	PCB - NCU - US	
21	5488 6045	PCB - NCU - EUR/Asia	
21	5488 6065	PCB - NCU - France	

INDEX	PARTS NO.	DESCRIPTION	Note
101	0965 3008B	Tapping Screw With Washer - M3x8	
102	0954 3010B	Philips Screw - M3x10	
103	0964 3008B	Tapping Screw - M3x8	
104	0964 3006B	Tapping Screw - M3x6	


6. ELECTRICAL SECTION (MODEL MV106/1750 ONLY)



INDEX	PARTS NO.	DESCRIPTION	Note
18	H529 6040	PCB - MCU	

INDEX	PARTS NO.	DESCRIPTION	Note

7. MIDDLE SECTION

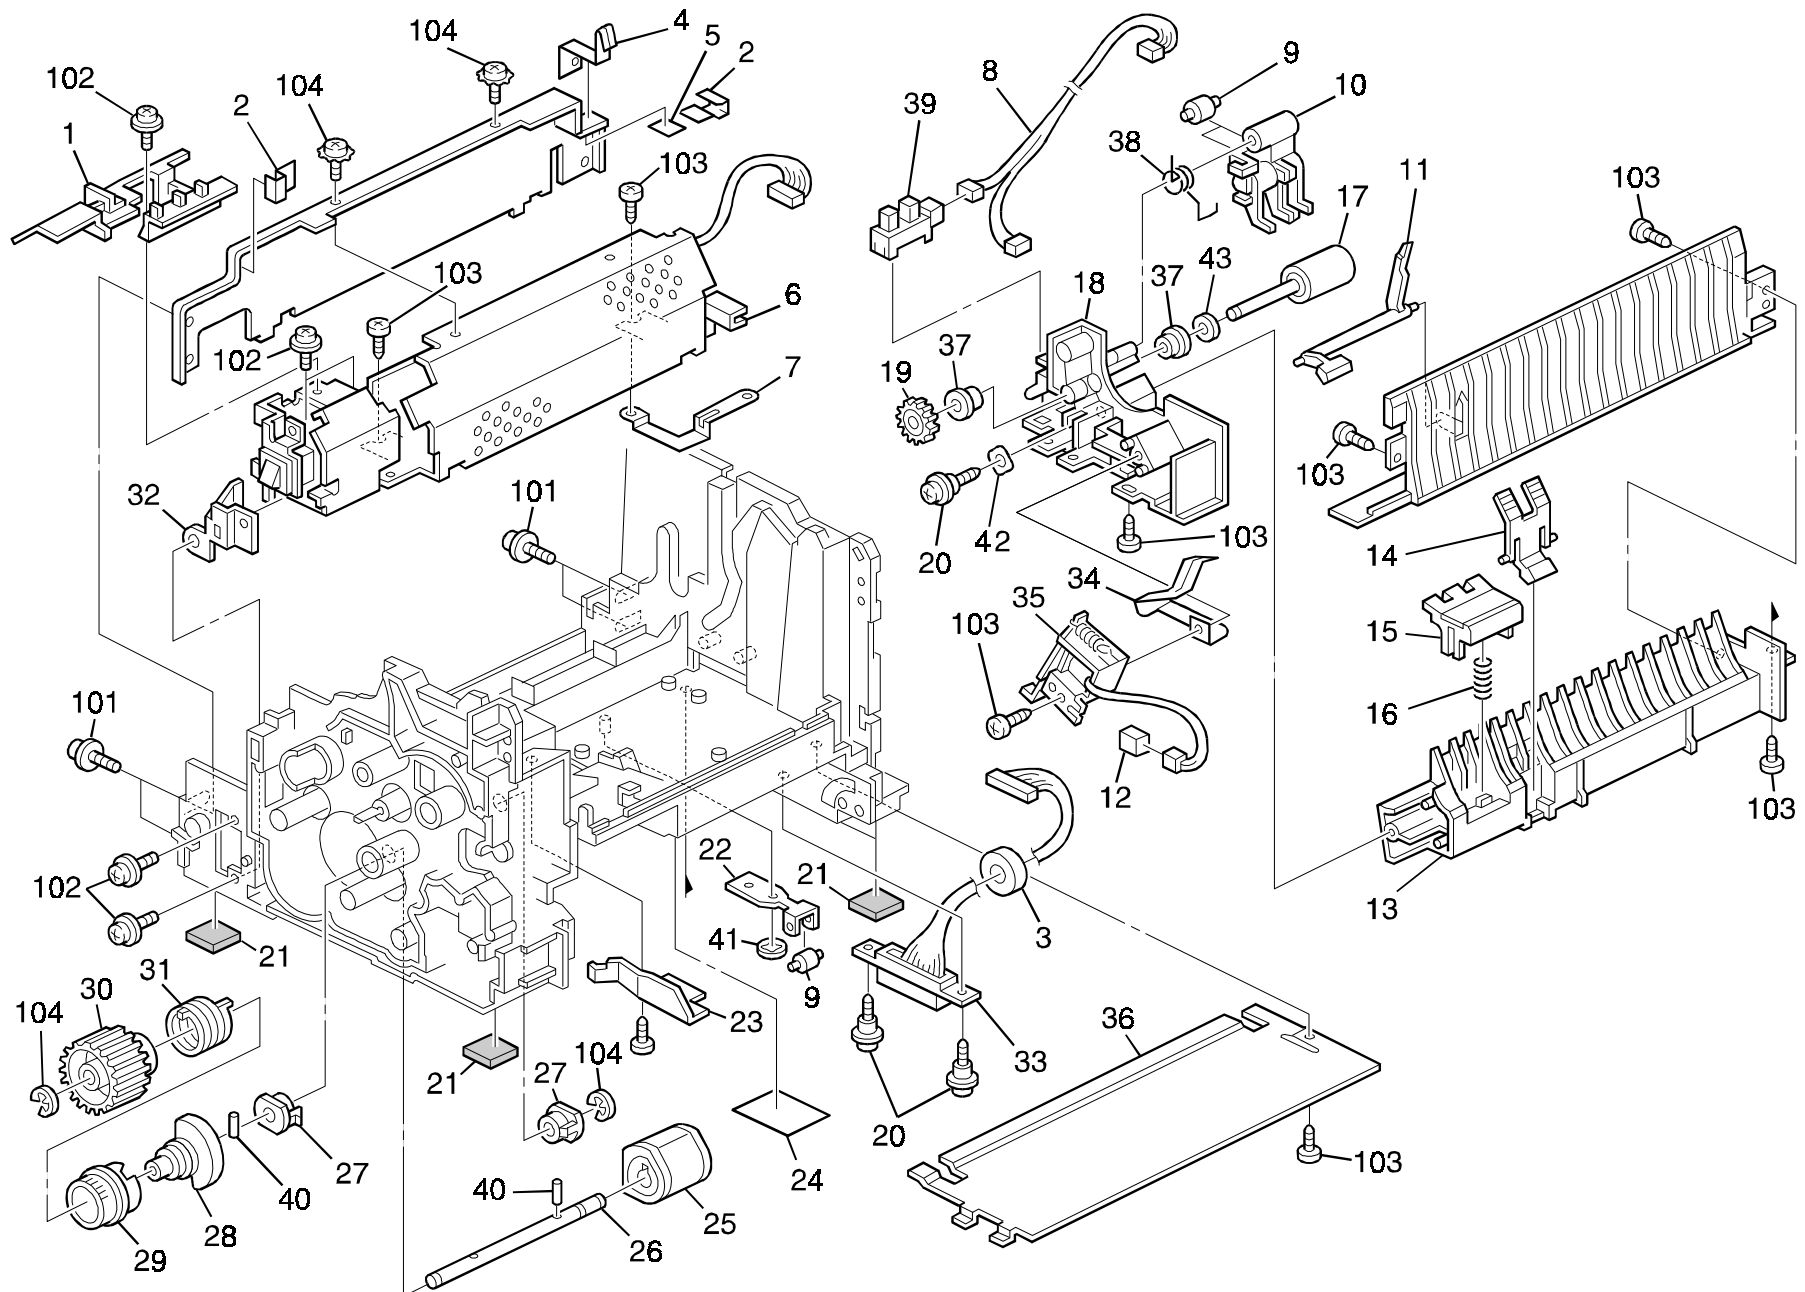


7. MIDDLE SECTION

INDEX	PARTS NO.	DESCRIPTION	Note
1	H529 2113	Bracket - PSU	
2	H529 2105	Edge Cover - PSU	
3	H529 2173	Ferrite Core	
4	H529 2106	Ground Plate - PSU	
5	H529 2139	Polyester Film	
6	H529 5111	PCB - PSU - 115V	
6	H529 5112	PCB - PSU - 230V	
7	H529 2110	Ground Plate - Base Frame	
8	H529 5083	Harness - FCU - Solenoid	
9	H529 2131	Roll	
10	H529 2133	Holder - Roll	
11	H529 2108	Paper End Actuator	
12	H529 5057	Connector - Paper Pick-up Solenoid	
13	H529 2134	Paper Feed Guide	
14	H529 2135	Stopper - Separation Pad	
15	H529 2101	Paper Separation Pad	
16	H529 1134	Spring - Document Separation Pad	
17	H529 2100	Paper Feed Roller	
18	H529 2130	Holder - Paper Feed Guide	
19	H529 2125	Gear - 16T	
20	H529 2126	Shoulder Screw	
21	H529 2143	Rubber Foot	
22	H529 2155	Holder - Roll	
23	H529 2154	Plate Spring - Base Frame - 1	
24	H529 2138	Seal	
25	H529 2102	Paper Pick-up Roller	
26	H529 2112	Shaft - Document Pick-up Roller	
27	H529 2111	Bushing - Paper Pick-up Roller	
28	H529 2115	Cam - Paper Pick-up Roller	
29	H529 1117	Holder - Clutch Spring	
30	H529 2118	Gear - 40T	
31	H529 1116	Clutch Spring	

INDEX	PARTS NO.	DESCRIPTION	Note
32	H529 2151	Plate Spring - Base Frame -2	
33	H529 5088	Harness - PFU - MCB	
34	H529 2127	Ground Plate - Paper Pick-up Solenoid	
35	H529 5065	Paper Pick-up Solenoid	
36	H529 2153	Guide Plate - Paper Feed	
37	H529 2129	Bushing - Paper Feed Roller	
38	H529 2132	Torsion Spring	
39	H529 5070	Photo Interruptor	
40	H529 1123	Pin - Pick-up Roller	
41	H529 2156	C-Ring	
42	H529 2128	Washer - Solenoid Screw	
43	H529 2136	Washer	
101	0964 3008B	Tapping Screw - M3x8	
102	0964 3006B	Tapping Screw - M3x6	
103	0413 0084B	Binding Self Tapping Screw - M3x8	
104	0720 0040G	Retaining Ring - M4	

8. LOWR SECTION/LASER UNIT

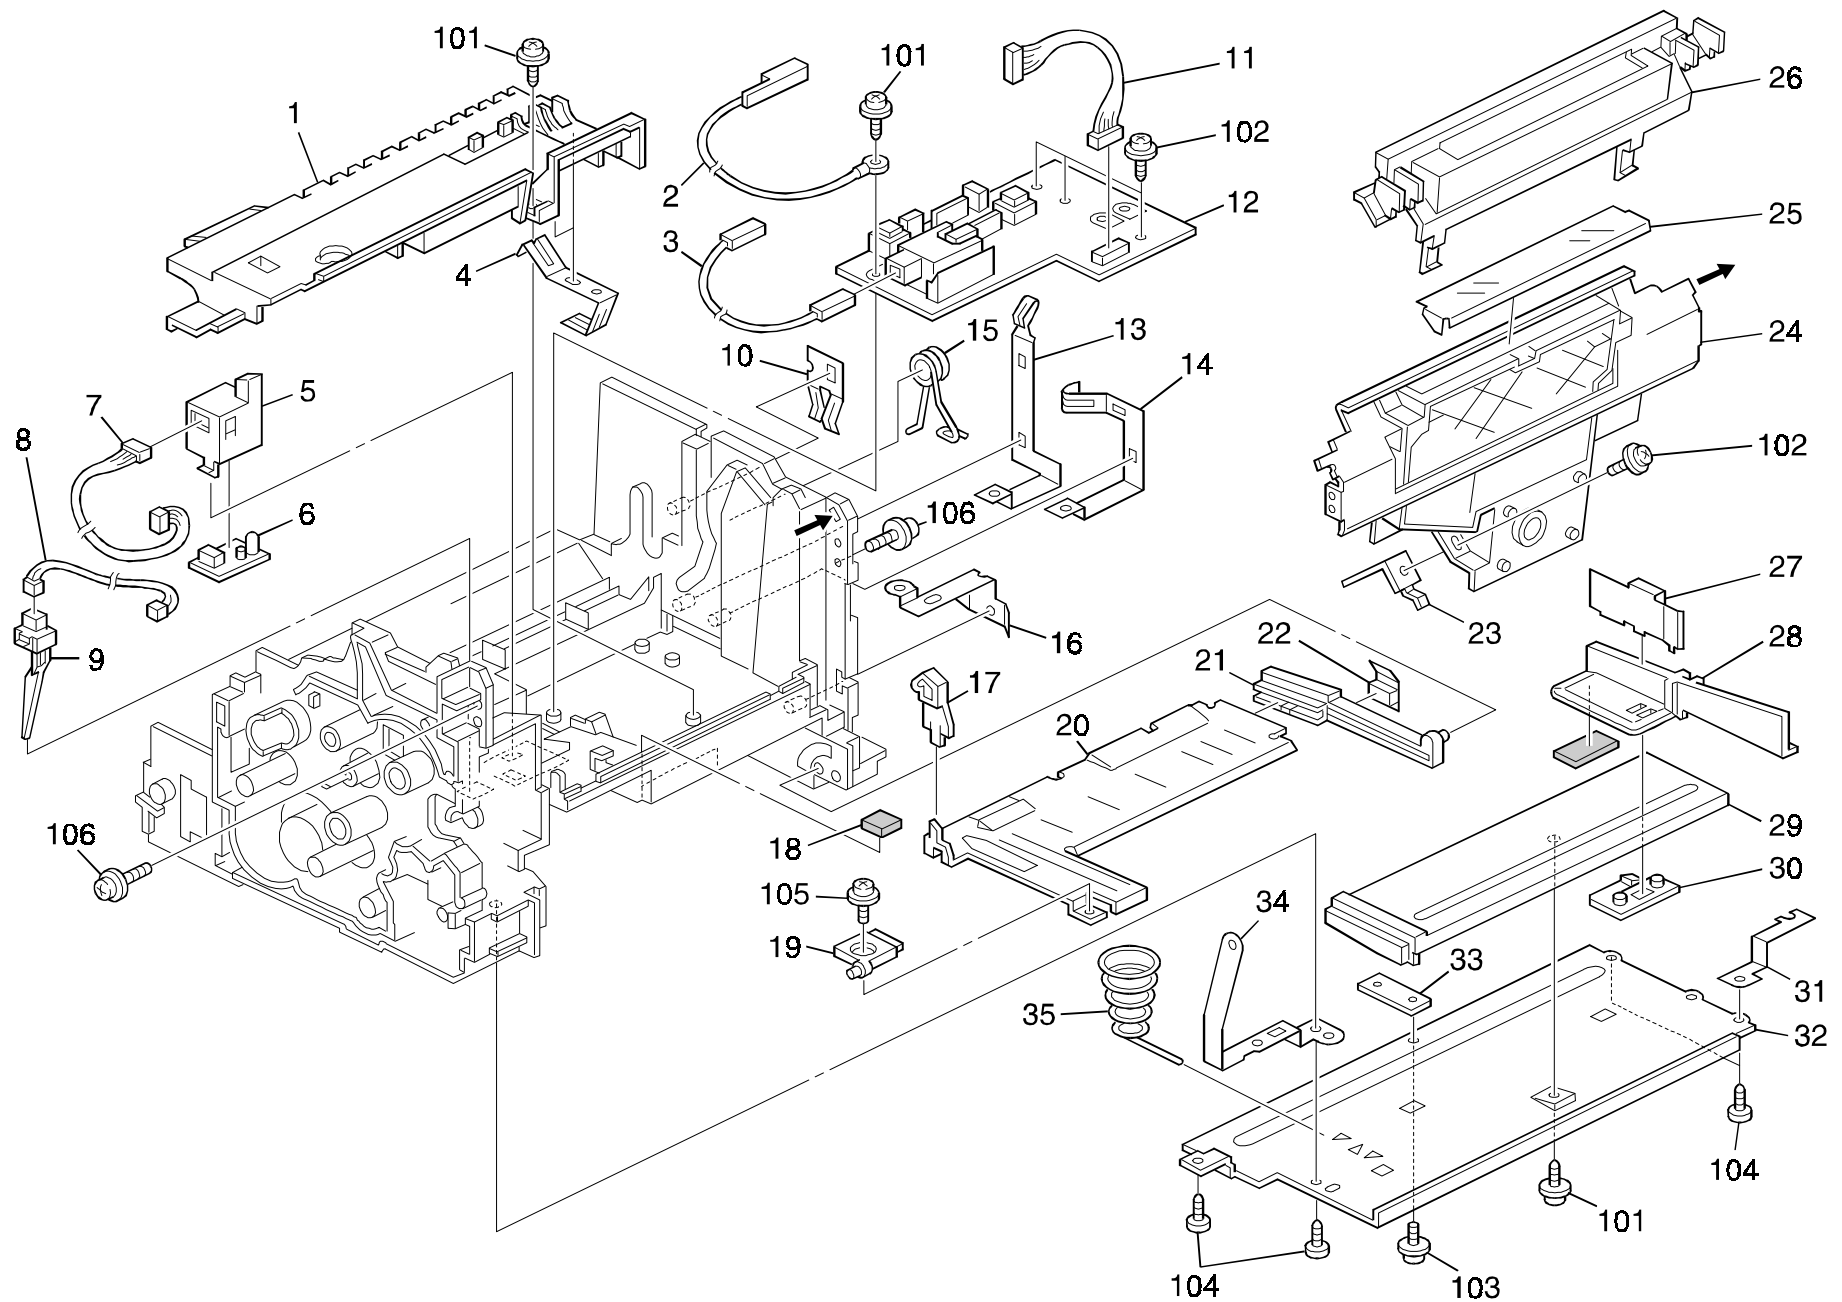

8. LOWR SECTION/LASER UNIT

INDEX	PARTS NO.	DESCRIPTION	Note
1	H529 2140	Cover - High Voltage Supply	
2	H529 5086	Harness - High Voltage Supply - 1	
3	H529 5087	Harness - High Voltage Supply - 2	
4	H529 2141	Terminal	
5	H529 2157	Holder - Toner End Sensor	
6	H529 5051	Toner End Sensor	
7	H529 5089	Harness - Toner End Sensor	
8	H529 5085	Harness - Paper End Sensor	
9	H529 5069	Photo Interrupter 1	
10	H529 2145	Terminal - Base Frame - 1	
11	H529 5084	Harness - High Voltage Supply - MCB	
12	H529 5056	High-Voltage Power Supply	
13	H529 2146	Terminal - Base Frame - 2	
14	H529 2147	Terminal - Base Frame - 3	
15	H529 2149	Torsion Spring	
16	H529 2148	Ground Plate - Base Frame	
17	H529 2158	Cam - Lifting Plate	
18	H529 2137	Rubber Foot	
19	H529 2159	Support	
20	H529 2166	Lifting Plate	
21	H529 2167	Lever - Lifting Plate	
22	H529 2168	Sponge	
23	H529 2150	Bracket - Laser Unit	
24	H529 2051	Laser Unit	
25	H529 2171	Polyester Film	
26	H529 2170	Cover - Laser Unit	
27	H529 2169	Regulating Plate	
28	H529 2109	Paper Side Fence	
29	H529 2172	Guide - Side Fence	
30	H529 2164	Spacer - Paper Fence	
31	H529 2163	Ground Plate - Paper Fence	
32	H529 2161	Holder - Paper Fence	

INDEX	PARTS NO.	DESCRIPTION	Note
33	H529 2162	Plate - Paper Fence	
34	H529 2152	Plate Spring - Base Frame - 3	
35	H529 2160	Pressure Spring - Lifting Plate	
101	0433 0140B	Pan Head Self Tapping Screw - M3x14	
102	0964 3012B	Tapping Screw With Flat Wahser - M3x12	
103	0964 3005B	Tapping Screw With Flat Wahser - M3x5	
104	0413 0084B	Binding Self Tapping Screw - M3x8	
105	0964 3006B	Tapping Screw - M3x6	

PARTS INDEX

PART N O.	DESCRIPTION	INDEX
H528 3100	Right Cover - FX7	3- 14
H528 4015	Operation Panel Ass'y - US	3- 20
H528 4016	Operation Panel Ass'y - EUR	3- 20
H528 4017	Operation Panel Ass'y - France	3- 20
H528 4018	Operation Panel Ass'y - Asia	3- 20
H528 4019	Operation Panel Ass'y - TWN	3- 20
H528 6040	PCB - FCU	13- 18
H528 8600	Operation Manual - US	3- 8
H528 8607	Operation Manual - TWN	3- 8
H528 8609	Operation Manual - Asia	3- 8

PART N O.	DESCRIPTION	INDEX
H090 4025	Telephone Cable - France	3- 23
H505 5003	Power Cord - Asia	3- 22
H505 5029	Power Cord - US/TWN	3- 22
H505 5047	Telephone Cable - 6P / 6P - US/TWN	3- 23
H528 3100	Right Cover - FX7	3- 14
H528 4015	Operation Panel Ass'y - US	3- 20
H528 4016	Operation Panel Ass'y - EUR	3- 20
H528 4017	Operation Panel Ass'y - France	3- 20
H528 4018	Operation Panel Ass'y - Asia	3- 20
H528 4019	Operation Panel Ass'y - TWN	3- 20
H528 6040	PCB - FCU	13- 18
H528 8600	Operation Manual - US	3- 8
H528 8607	Operation Manual - TWN	3- 8
H528 8609	Operation Manual - Asia	3- 8
H529 1001	Document Tray Ass'y	3- 21
H529 1100	Scanner Roller	7- 24
H529 1101	Document Separation Pad	7- 2
H529 1103	Actuator - Document Sensor	7- 5
H529 1104	Actuator - Scanner Sensor	7- 7
H529 1105	Actuator - Exit Sensor	7- 27
H529 1106	Bushing - Scanner Roller	7- 25
H529 1107	Ground Plate - Exit Guide	7- 15
H529 1108	Ground Plate	5- 22
H529 1109	Gear - 19/27T	7- 17
H529 1110	Gear - 22T	7- 20
H529 1111	Gear - 18/32T	7- 19
H529 1112	Gear - 18/37T	7- 18
H529 1114	Gear - 19T	7- 23
H529 1115	Gear - Document Pick-up Roller	5- 25
H529 1116	Clutch Spring	5- 26
H529 1116	Clutch Spring	15- 31
H529 1117	Holder - Clutch Spring	5- 27
H529 1117	Holder - Clutch Spring	15- 29

PART N O.	DESCRIPTION	INDEX
H529 1118	Cam - Document Pick-up Roller	5- 23
H529 1119	Bushing - Scanner Roller	5- 29
H529 1120	Bushing - Exit Roller	7- 16
H529 1120	Bushing - Exit Roller	11- 13
H529 1121	Guide Roller	5- 1
H529 1122	Guide Plate - Document Pick-up Roller	5- 4
H529 1123	Pin - Pick-up Roller	5- 3
H529 1123	Pin - Pick-up Roller	15- 40
H529 1124	Document Exit Roller	7- 28
H529 1125	Cover - Scanner Base	5- 5
H529 1126	Pan Head Screw - CIS	5- 28
H529 1127	Ground Plate - CIS	5- 12
H529 1129	Scanner Guide Plate	5- 16
H529 1130	Spring Plate - Feed Frame	7- 22
H529 1131	Document Feed Frame	7- 21
H529 1132	Scanner Spring Plate - Side	5- 17
H529 1133	Scanner Spring Plate - Middle	5- 18
H529 1134	Spring - Document Separation Pad	7- 3
H529 1134	Spring - Document Separation Pad	15- 16
H529 1135	Sheet - Document Guide	7- 4
H529 1136	Document Guide	7- 6
H529 1137	Holder - Exit Feed Roller	7- 13
H529 1138	Exit Feed Roller	7- 14
H529 1138	Exit Feed Roller	11- 10
H529 1139	Document Exit Guide	7- 12
H529 1140	Ground Plate 2	7- 9
H529 1142	Grounding Brush	7- 10
H529 1143	Document Feed Roller	7- 1
H529 1144	Ground Plate	7- 8
H529 1145	Spring - Scanner Plate	5- 11
H529 1146	Holder - Scanner Plate	5- 8
H529 1147	Document Friction Plate	5- 9
H529 1148	Friction Lever	5- 10

PART N O.	DESCRIPTION	INDEX
H529 1149	Ground Plate - Scanner Roller	7- 26
H529 1151	CIS Holder	5- 20
H529 1152	Plate - Grounding Brush	7- 11
H529 1154	Document Pick-up Roller	5- 2
H529 2050	Fusing Unit - 120V	11- 1
H529 2051	Laser Unit	17- 24
H529 2052	Fusing Unit - 230V	11- 1
H529 2053	Transfer Unit	9- 17
H529 2100	Paper Feed Roller	15- 17
H529 2101	Paper Separation Pad	15- 15
H529 2102	Paper Pick-up Roller	15- 25
H529 2103	Hot Roller	11- 28
H529 2104	Fusing Pressure Roller	11- 20
H529 2105	Edge Cover - PSU	15- 2
H529 2106	Ground Plate - PSU	15- 4
H529 2107	Top Cover Actuator	9- 6
H529 2108	Paper End Actuator	15- 11
H529 2109	Paper Side Fence	17- 28
H529 2110	Ground Plate - Base Frame	15- 7
H529 2111	Bushing - Paper Pick-up Roller	15- 27
H529 2112	Shaft - Document Pick-up Roller	15- 26
H529 2113	Bracket - PSU	15- 1
H529 2114	Ground Plate - Main Motor	13- 9
H529 2115	Cam - Paper Pick-up Roller	15- 28
H529 2116	Gear - 50T	13- 1
H529 2117	Gear - 22/45T	13- 2
H529 2118	Gear - 40T	15- 30
H529 2119	Gear - 25/72T	13- 3
H529 2120	Gear - 29/65T	13- 5
H529 2121	Gear - 44/109T	13- 8
H529 2122	Gear - 22/57T	13- 6
H529 2123	Gear - 20/41T	13- 4
H529 2124	Gear - 29T	13- 7

PART N O.	DESCRIPTION	INDEX
H529 2125	Gear - 16T	15- 19
H529 2126	Shoulder Screw	15- 20
H529 2127	Ground Plate - Paper Pick-up Solenoid	15- 34
H529 2128	Washer - Solenoid Screw	15- 42
H529 2129	Bushing - Paper Feed Roller	15- 37
H529 2130	Holder - Paper Feed Guide	15- 18
H529 2131	Roll	15- 9
H529 2132	Torsion Spring	15- 38
H529 2133	Holder - Roll	15- 10
H529 2134	Paper Feed Guide	15- 13
H529 2135	Stopper - Separation Pad	15- 14
H529 2136	Washer	15- 43
H529 2137	Rubber Foot	17- 18
H529 2138	Seal	15- 24
H529 2139	Polyester Film	15- 5
H529 2140	Cover - High Voltage Supply	17- 1
H529 2141	Terminal	17- 4
H529 2143	Rubber Foot	15- 21
H529 2145	Terminal - Base Frame - 1	17- 10
H529 2146	Terminal - Base Frame - 2	17- 13
H529 2147	Terminal - Base Frame - 3	17- 14
H529 2148	Ground Plate - Base Frame	17- 16
H529 2149	Torsion Spring	17- 15
H529 2150	Bracket - Laser Unit	17- 23
H529 2151	Plate Spring - Base Frame -2	15- 32
H529 2152	Plate Spring - Base Frame - 3	17- 34
H529 2153	Guide Plate - Paper Feed	15- 36
H529 2154	Plate Spring - Base Frame - 1	15- 23
H529 2155	Holder - Roll	15- 22
H529 2156	C-Ring	15- 41
H529 2157	Holder - Toner End Sensor	17- 5
H529 2158	Cam - Lifting Plate	17- 17
H529 2159	Support	17- 19

PART N O.	DESCRIPTION	INDEX
H529 2160	Pressure Spring - Lifting Plate	17- 35
H529 2161	Holder - Paper Fence	17- 32
H529 2162	Plate - Paper Fence	17- 33
H529 2163	Ground Plate - Paper Fence	17- 31
H529 2164	Spacer - Paper Fence	17- 30
H529 2166	Lifting Plate	17- 20
H529 2167	Lever - Lifting Plate	17- 21
H529 2168	Sponge	17- 22
H529 2169	Regulating Plate	17- 27
H529 2170	Cover - Laser Unit	17- 26
H529 2171	Polyester Film	17- 25
H529 2172	Guide - Side Fence	17- 29
H529 2173	Ferrite Core	15- 3
H529 2174	Ground Plate - Top Cover	11- 6
H529 2175	Ground Plate - PCB - R	11- 8
H529 2176	Holder - Exit Feed Roller	11- 9
H529 2177	Gear - 15T	11- 14
H529 2178	Documrnt Exit Roller	11- 12
H529 2179	Torsion Spring	9- 4
H529 2181	Cover - Fusing Unit	9- 19
H529 2182	Holder - Feed Out Roller	9- 15
H529 2183	Torsion Spring	9- 16
H529 2184	Arm - Feed Out Roller	9- 13
H529 2185	Gear - 25/50T	9- 12
H529 2186	Gear - 25/50T	9- 11
H529 2187	Torsion Spring	9- 10
H529 2188	Lever - Feed Out Roller	9- 9
H529 2189	Gear - 22T	9- 8
H529 2190	Gear - 21/38T	9- 7
H529 2191	Guide - Fusing Unit	11- 25
H529 2192	C-Ring	11- 27
H529 2193	Gear - 30T	11- 15
H529 2194	Bushing - Hot Roller	11- 16

PART N O.	DESCRIPTION	INDEX
H529 2195	Pressure Spring	11- 18
H529 2196	Terminal	11- 24
H529 2197	Bracket Thermistor	11- 17
H529 2198	Bushing - Pressure Spring	11- 19
H529 2199	Separation Hook	11- 2
H529 2200	Separator Roll - Fusing	11- 3
H529 2201	Gear - 40T	11- 26
H529 2202	Actuator - Exit Sensor	11- 4
H529 2203	Torsion Spring	11- 5
H529 3100	Right Cover	3- 14
H529 3101	Upper Right Cover	3- 15
H529 3102	Guide - IC Memory Card	3- 17
H529 3103	Cover - Modular Connector	13- 11
H529 3150	Top Cover	9- 3
H529 3151	Fan Motor Cover	9- 1
H529 3152	Left Cover	3- 3
H529 3153	Paper Tray	3- 9
H529 3154	Document Tray	3- 5
H529 3156	Document Table	3- 11
H529 3157	Document Guide	3- 6
H529 3158	Front Cover	3- 4
H529 3159	Paper Tray	3- 2
H529 3160	Lock Lever	9- 5
H529 3161	Paper Tray Extention	3- 1
H529 3162	Bracket - Top Cover	9- 14
H529 3163	Cover - Harness - PSU	9- 18
H529 3164	Paper Tray Extention	3- 10
H529 3165	Pinion Gear	3- 7
H529 3166	Document Table Extention	3- 12
H529 3167	Shield Cover - Right	3- 13
H529 4015	Operation Panel Ass'y - US	3- 20
H529 4016	Operation Panel Ass'y - EUR	3- 20
H529 4017	Operation Panel Ass'y - France	3- 20

PART N O.	DESCRIPTION	INDEX
H529 4018	Operation Panel Ass'y - Asia	3- 20
H529 4019	Operation Panel Ass'y - TWN	3- 20
H529 4101	Right Rear Cover	3- 18
H529 4102	Shield Cover - Upper Right	3- 16
H529 4103	Shaft - MCB-2	13- 16
H529 4104	Shaft - MCB-1	13- 17
H529 4105	Shaft - 5V Board	13- 15
H529 4209	Quick Dial Sheet	3- 19
H529 5000	PCB - PSU - 5V	13- 14
H529 5005	Harness - OPU - FCU	5- 14
H529 5006	Harness - NCU - FCU - 15P	13- 20
H529 5007	Harness - NCU - FCU - EUR/Asia	13- 20
H529 5050	PCB - MCB	13- 19
H529 5051	Toner End Sensor	17- 6
H529 5052	PCB - R	11- 7
H529 5053	Scanner Sensor Board	5- 6
H529 5055	Contact Image Sensor	5- 19
H529 5056	High-Voltage Power Supply	17- 12
H529 5057	Connector - Paper Pick-up Solenoid	15- 12
H529 5060	Main Motor	13- 10
H529 5061	TX Motor	5- 24
H529 5062	Fan Motor	9- 2
H529 5065	Paper Pick-up Solenoid	15- 35
H529 5066	Document Pick-up Solenoid	5- 21
H529 5067	Fusing Lamp - 120V	11- 29
H529 5068	Fusing Lamp - 230V	11- 29
H529 5069	Photo Interrupter 1	17- 9
H529 5070	Photo Interruptor	11- 30
H529 5070	Photo Interruptor	15- 39
H529 5071	Speaker	13- 12
H529 5072	Thermostat	11- 21
H529 5073	Thermistor	11- 22
H529 5080	Harness - Scanner Sensor Board - FCU	5- 7

PART N O.	DESCRIPTION	INDEX
H529 5081	Ground Wire - CIS	5- 13
H529 5082	Harness - CIS - FCU	5- 15
H529 5083	Harness - FCU - Solenoid	15- 8
H529 5084	Harness - High Voltage Supply - MCB	17- 11
H529 5085	Harness - Paper End Sensor	17- 8
H529 5086	Harness - High Voltage Supply - 1	17- 2
H529 5087	Harness - High Voltage Supply - 2	17- 3
H529 5088	Harness - PFU - MCB	15- 33
H529 5089	Harness - Toner End Sensor	17- 7
H529 5090	Harness - PSU - Fusing Unit	11- 23
H529 5091	Harness - Exit Sensor	11- 11
H529 5111	PCB - PSU - 115V	15- 6
H529 5112	PCB - PSU - 230V	15- 6
H529 6001	PCB - NCU - US	13- 21
H529 6040	PCB - MCU	13- 18
H529 8600	Operation Manual - US	3- 8
H529 8607	Operation Manual - TWN	3- 8
H529 8609	Operation Manual - Asia	3- 8
H529 8700	Operation Manual - Drivef	3- 8
H529 8710	Operation Manual - Bitware	3- 8

PART N O.	DESCRIPTION	INDEX
5488 6045	PCB - NCU - EUR/Asia	13- 21
5488 6065	PCB - NCU - France	13- 21

PART N O.	DESCRIPTION	INDEX
0413 0084B	Binding Self Tapping Screw - M3x8	15-103
0413 0084B	Binding Self Tapping Screw - M3x8	17-104
0433 0060B	Philips Tapping Screw - M3x6	5-104
0433 0100B	Philips Tapping Screw - M3x10	11-103
0433 0140B	Pan Head Self Tapping Screw - M3x14	17-101
0720 0040G	Retaining Ring - M4	5-105
0720 0040G	Retaining Ring - M4	15-104
0954 3006B	Screw - M3x6	11-102
0954 3010B	Philips Screw - M3x10	13-102
0964 3005B	Tapping Screw With Flat Wahser - M3x5	17-103
0964 3006B	Tapping Screw - M3x6	3-103
0964 3006B	Tapping Screw - M3x6	5-102
0964 3006B	Tapping Screw - M3x6	7-101
0964 3006B	Tapping Screw - M3x6	13-104
0964 3006B	Tapping Screw - M3x6	15-102
0964 3006B	Tapping Screw - M3x6	17-105
0964 3008B	Tapping Screw - M3x8	3-102
0964 3008B	Tapping Screw - M3x8	13-103
0964 3008B	Tapping Screw - M3x8	15-101
0964 3012B	Tapping Screw With Flat Wahser - M3x12	17-102
0965 3006B	Tapping Screw With Flate Washer - M3x6	5-103
0965 3006B	Tapping Screw With Flate Washer - M3x6	7-103
0965 3008B	Tapping Screw With Washer - M3x8	3-101
0965 3008B	Tapping Screw With Washer - M3x8	5-101
0965 3008B	Tapping Screw With Washer - M3x8	7-102
0965 3008B	Tapping Screw With Washer - M3x8	9-101
0965 3008B	Tapping Screw With Washer - M3x8	11-101
0965 3008B	Tapping Screw With Washer - M3x8	13-101

PART N O.	DESCRIPTION	INDEX