

R I C O H

PARTS CATALOG

FOR

RICOH FAX880MP [Europe/Asia/Taiwan]

RICOH FAX880 MPF [France]

RICOH MV74 [North America]

RICOH COMPANY, LTD.

2	December 1st, 1995	Second edition
1	October 30th, 1995	First edition

PARTS CATALOG


INTRODUCTION

This chapter instructs you the numbers and names of this parts on this machine.

INDEX to PARTS CATALOG

1.EXTERIOR.....	1- 2
2.ADF AND OPERATION.....	1- 4
3.PAPER TRAY	1- 6
4.PAPER FEED.....	1- 8
5.PAPER EXIT	1-10
Parts Index.....	2- 1

1. EXTERIOR

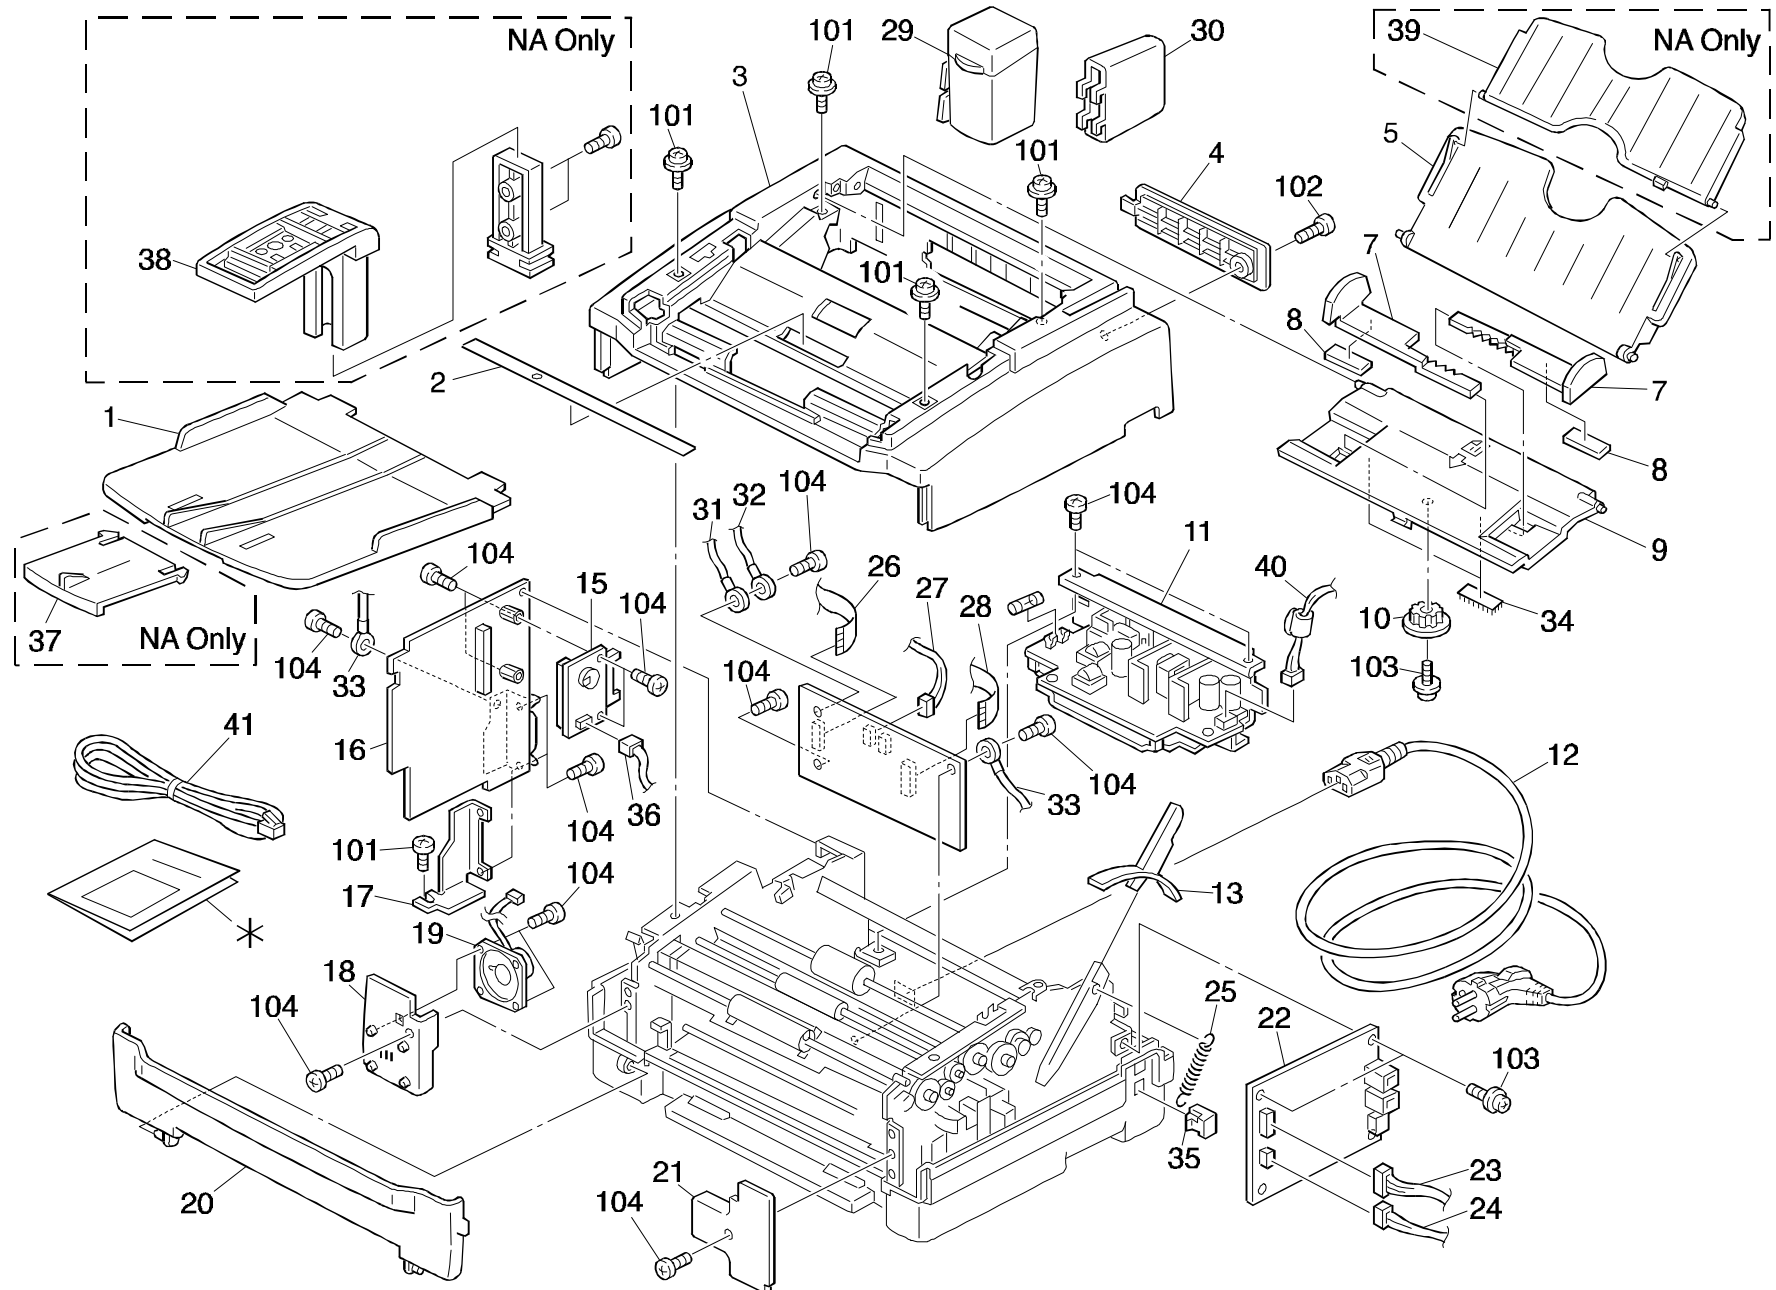


1. EXTERIOR

INDEX	PARTS NO.	DESCRIPTION	Note
*	H505 8601	Operator's Manual - English - EUR	
*	H505 8700	Operator's Manual - English - USA	
*	H505 8701	Operator's Manual - English - Asia	
*	H505 8602	Operator's Manual - German	
*	H505 8603	Operator's Manual - Italian	
*	H505 8604	Operator's Manual - Spanish	
*	H505 8605	Operator's Manual - French	
*	H505 8606	Operator's Manual - Swedish	
*	H505 8607	Operator's Manual - English - Taiwan	
*	H505 8608	Operator's Manual - FRANCE	
1	H505 4101	Paper Tray	
2	H505 4110	CIS Guide Plate	
3	H505 4121	Upper Cover	
4	H505 4147	RS232C Cover	
5	H505 4100	Document Table	
7	H505 4123	Document Guide	
8	H505 4126	Guide Plate Spacer	
9	H505 4122	Document Guide Cover	
10	G011 3305	Gear - 16T	
11	H505 5023	PCB - PSU - 115V	
11	H505 5024	PCB - PSU - 230V	
12	H505 5029	Power Supply Cord - 115V (USA)	
13	H505 3130	Paper Feed Lever	
14	H505 6010	PCB - FDU	
15	H505 6016	PCB - FCE - USA	
15	H505 6022	PCB - FCE - EUR/Asia/Taiwan	
16	H505 6011	PCB - IJC	
17	H505 4308	Bracket - IJC	
18	H505 4142	Left Inner Cover	
19	H516 5032	Monitor Speaker	
20	H505 4125	Front Cover	
21	H505 4141	Right Inner Cover	

INDEX	PARTS NO.	DESCRIPTION	Note
22	5488 6021	PCB - NCU - USA/Taiwan	
22	5488 6041	PCB - NCU - EUR/Asia	
22	5488 6061	PCB - NCU - FRANCE	
23	H505 5012	Harness - NCU/IJC1	
24	H505 5013	Harness - NCU/IJC2 (EUR/Asia)	
25	H505 3132	Lever Spring	
26	H505 5015	Harness - IJC/FDU2	
27	H505 5014	Harness - FDU/IJC1	
28	H505 5020	Harness - IJC/FDU3	
29	H505 2509	Telephone Socket	
30	H505 4157	IC Card Cover	
31	H505 5030	Grounding Wire - FDU 1	
32	H505 5031	Grounding Wire - FDU 1	
33	H505 5043	Grounding Wire - FDU/IJC	
34	H505 4129	Original Guide Pad	
35	H504 4901	Cap - Telephone Socket (EUR)	
36	H505 5041	Harness - FCE/RS232C (USA)	
37	H505 4117	Paper Tray Extension (USA)	
38	H505 4243	Handset Holder (USA)	
39	H504 4116	Document Table Extension (USA)	
40	H505 5008	Harness - PSU/FDU (EUR/Asia/Taiwan)	
40	H505 5045	Harness - PSU/FDU (USA)	
41	H081 5700	Telephone Cable	
42	H505 4177	Handset Bracket (USA)	
101	0353 0080Z	Philips Trass Head Scrw - M3x8	
102	H081 4141	Screw - Handset (USA)	
103	0802 5205	Tapping Screw - M3x6	
104	0313 0050B	Philips Pan Head Screw - M3x5	
105	3006B	Philips Screw - With Flat Washer - M3x6	
106	0954 3006B	Screw - M3x6	

2. ADF AND OPERATION

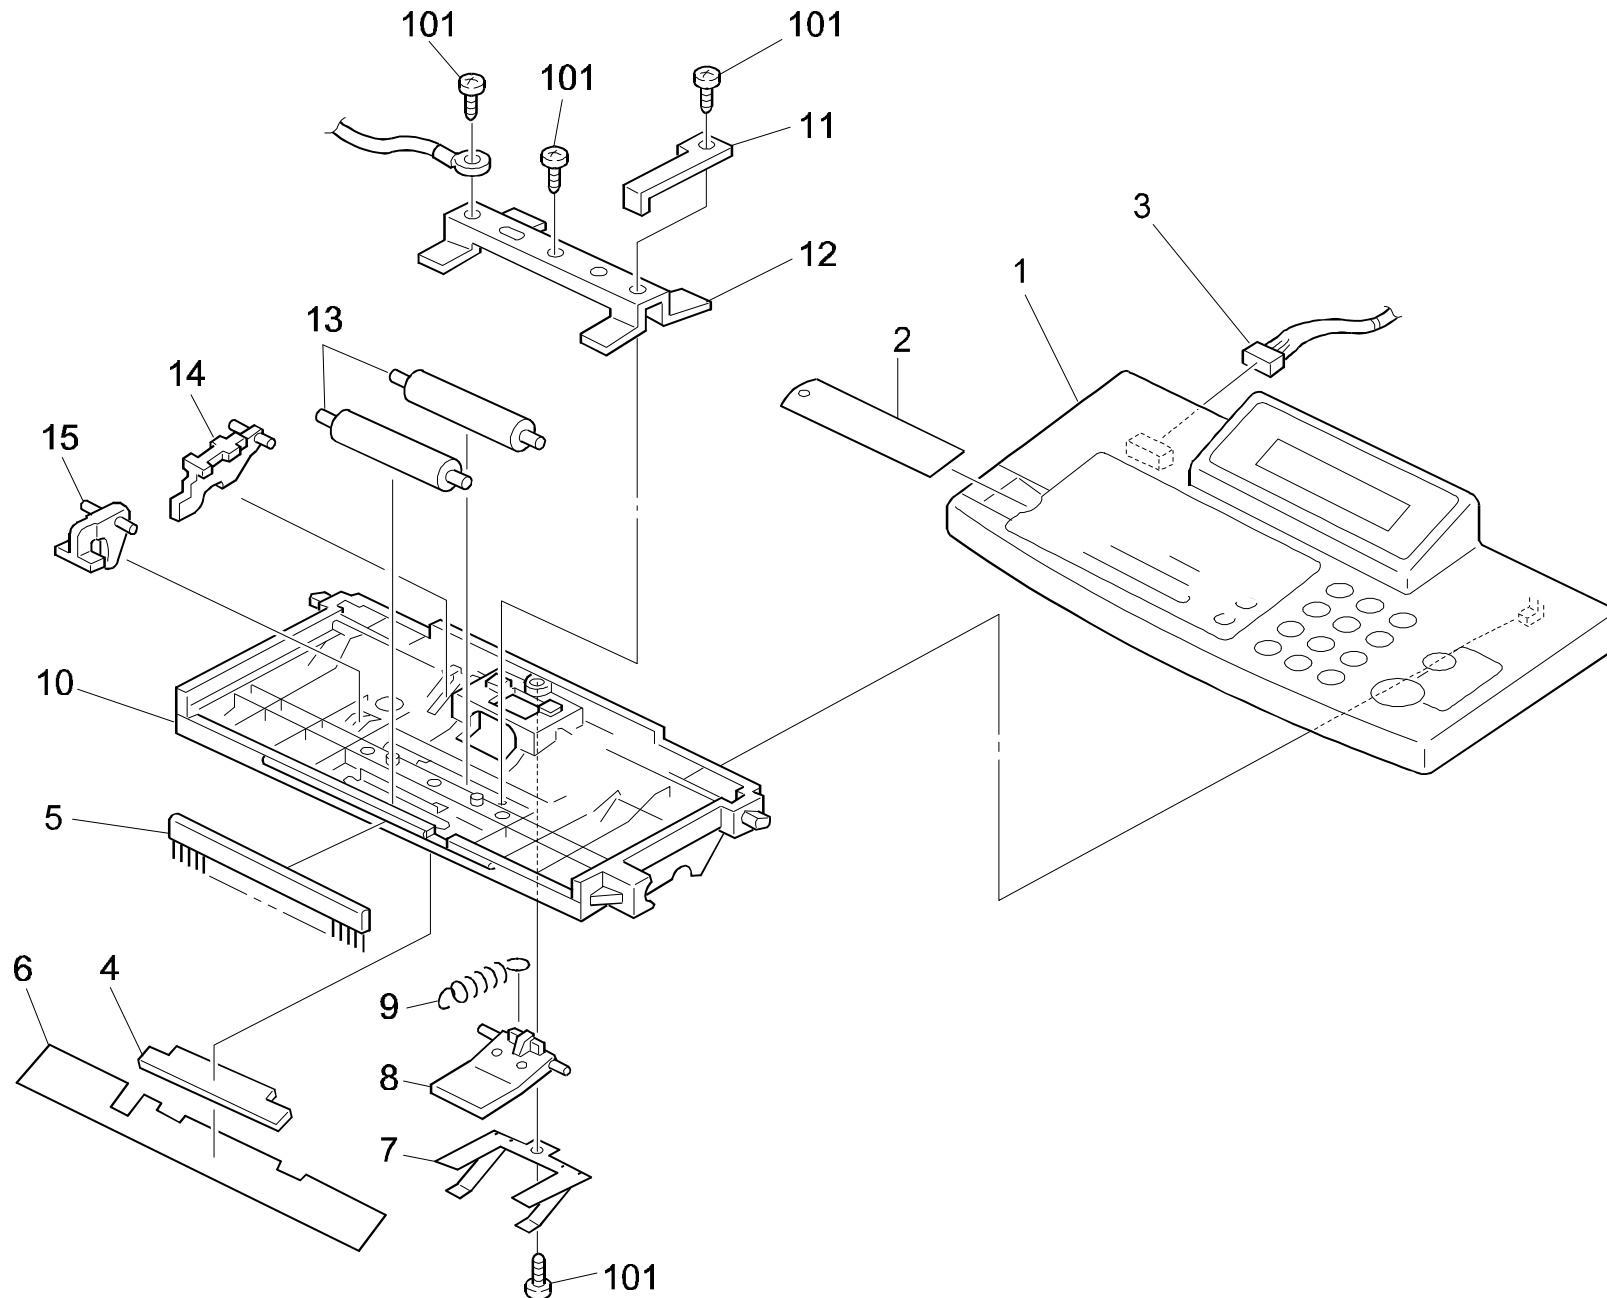

2. ADF AND OPERATION




INDEX	PARTS NO.	DESCRIPTION	Note
1	H505 4020	Op-port Ass'y - USA	
1	H505 4021	Op-port Ass'y - EUR	
1	H505 4022	Op-port Ass'y - Asia	
1	H505 4025	Op-port Ass'y - Taiwan	
1	H505 4054	Op-port Ass'y - FRANCE	
2	H505 4200	Quick Dial Sheet	
3	H505 5009	Harness - OPU/IJC	
4	H505 1106	Spacer	
5	H085 1110	Antistatic Brush - Scanner	
6	H505 1101	Shading Plate	
7	H505 1508	Spring Plate - ADF	
8	H505 1005	Separation Plate Ass'y	
9	H505 1521	Spring - ADF	
10	H505 1501	ADF Guide Plate	
11	H505 1523	Antistatic Brush	
12	H505 1517	Spring Plate - Feed	
13	H505 1504	Upper Feed Roller	
14	H505 1510	Original Sensor - S1	
15	H505 1511	Original Sensor - S2	




INDEX	PARTS NO.	DESCRIPTION	Note
101	0802 5146	Tapping Screw - M3x8	


3. PAPER TRAY

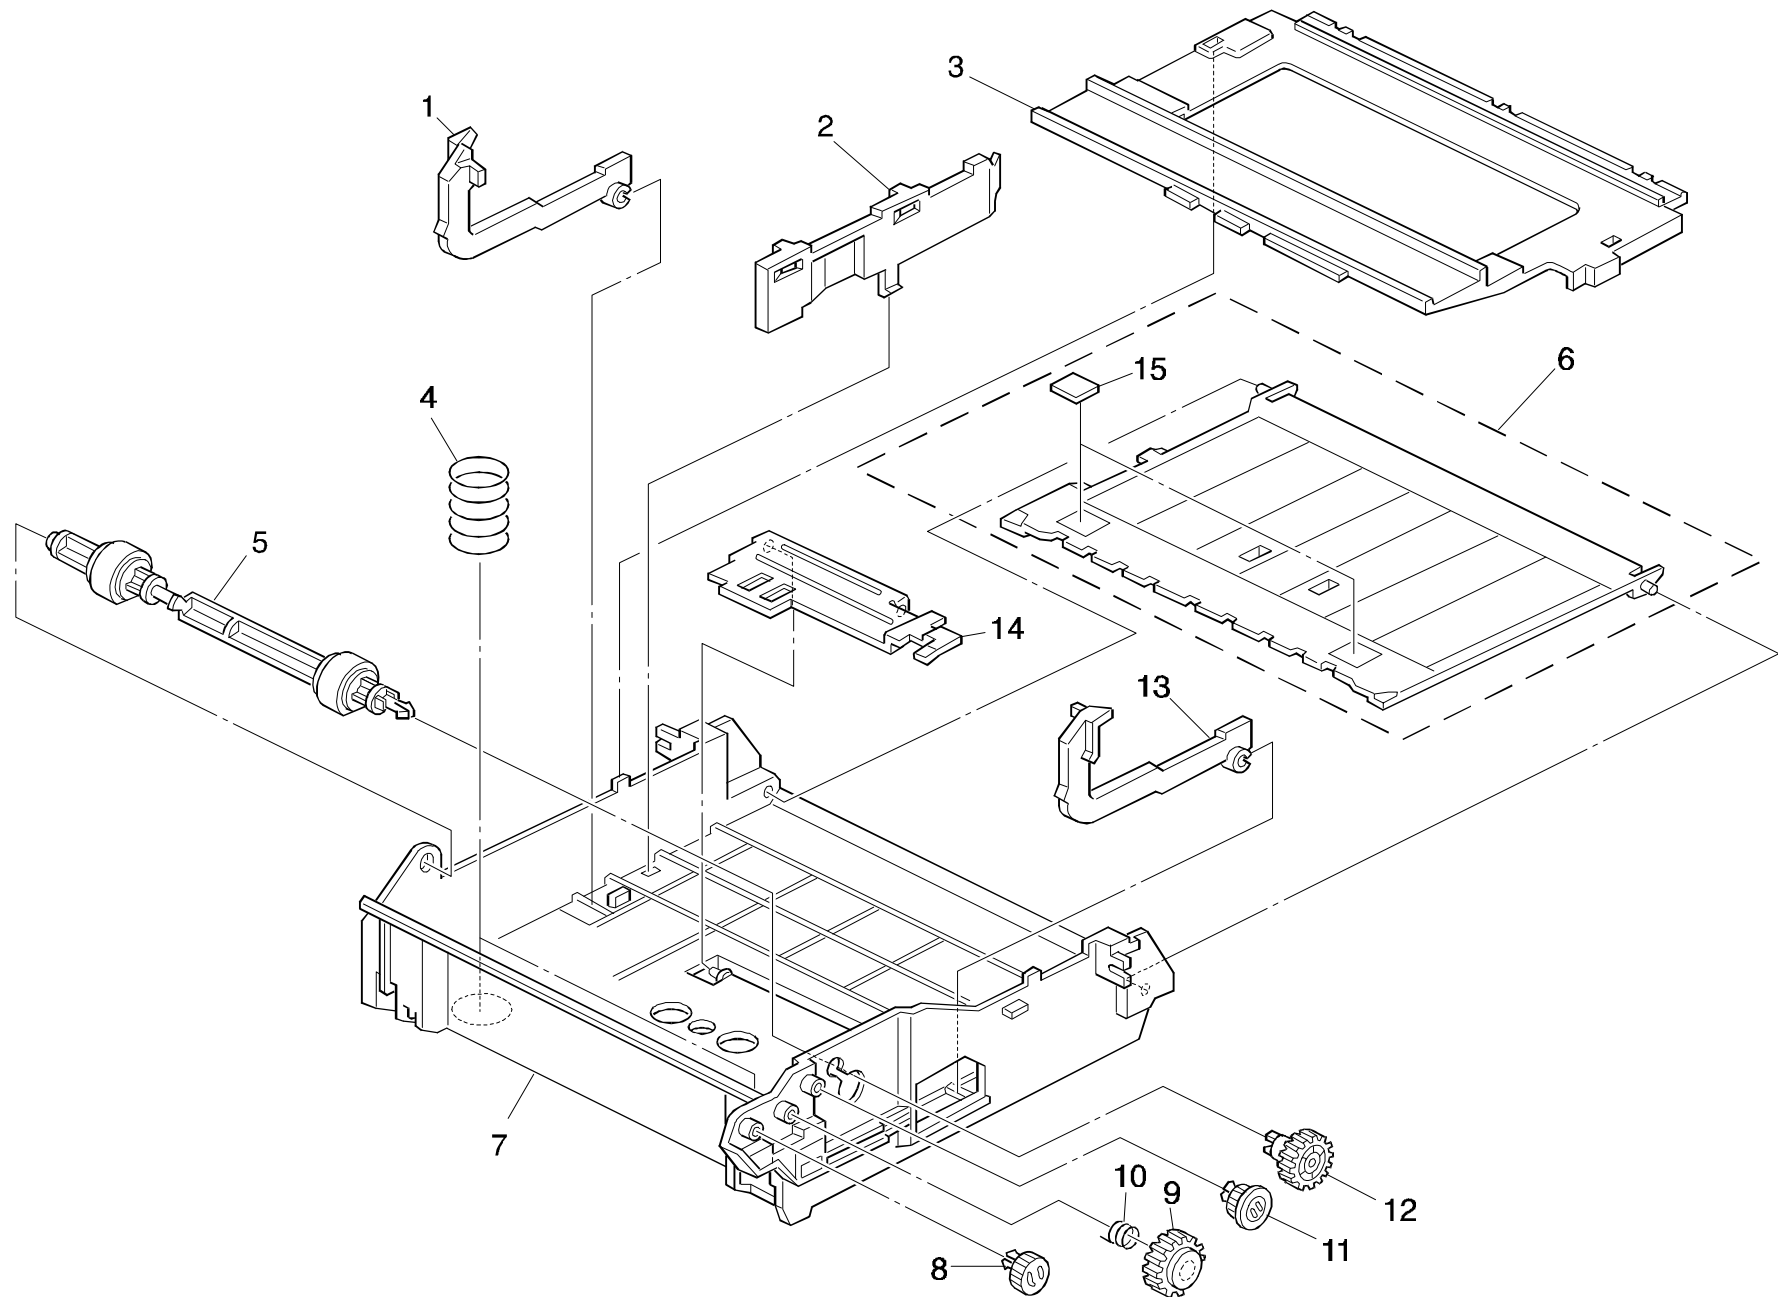



INDEX	PARTS NO.	DESCRIPTION	Note

4. PAPER FEED

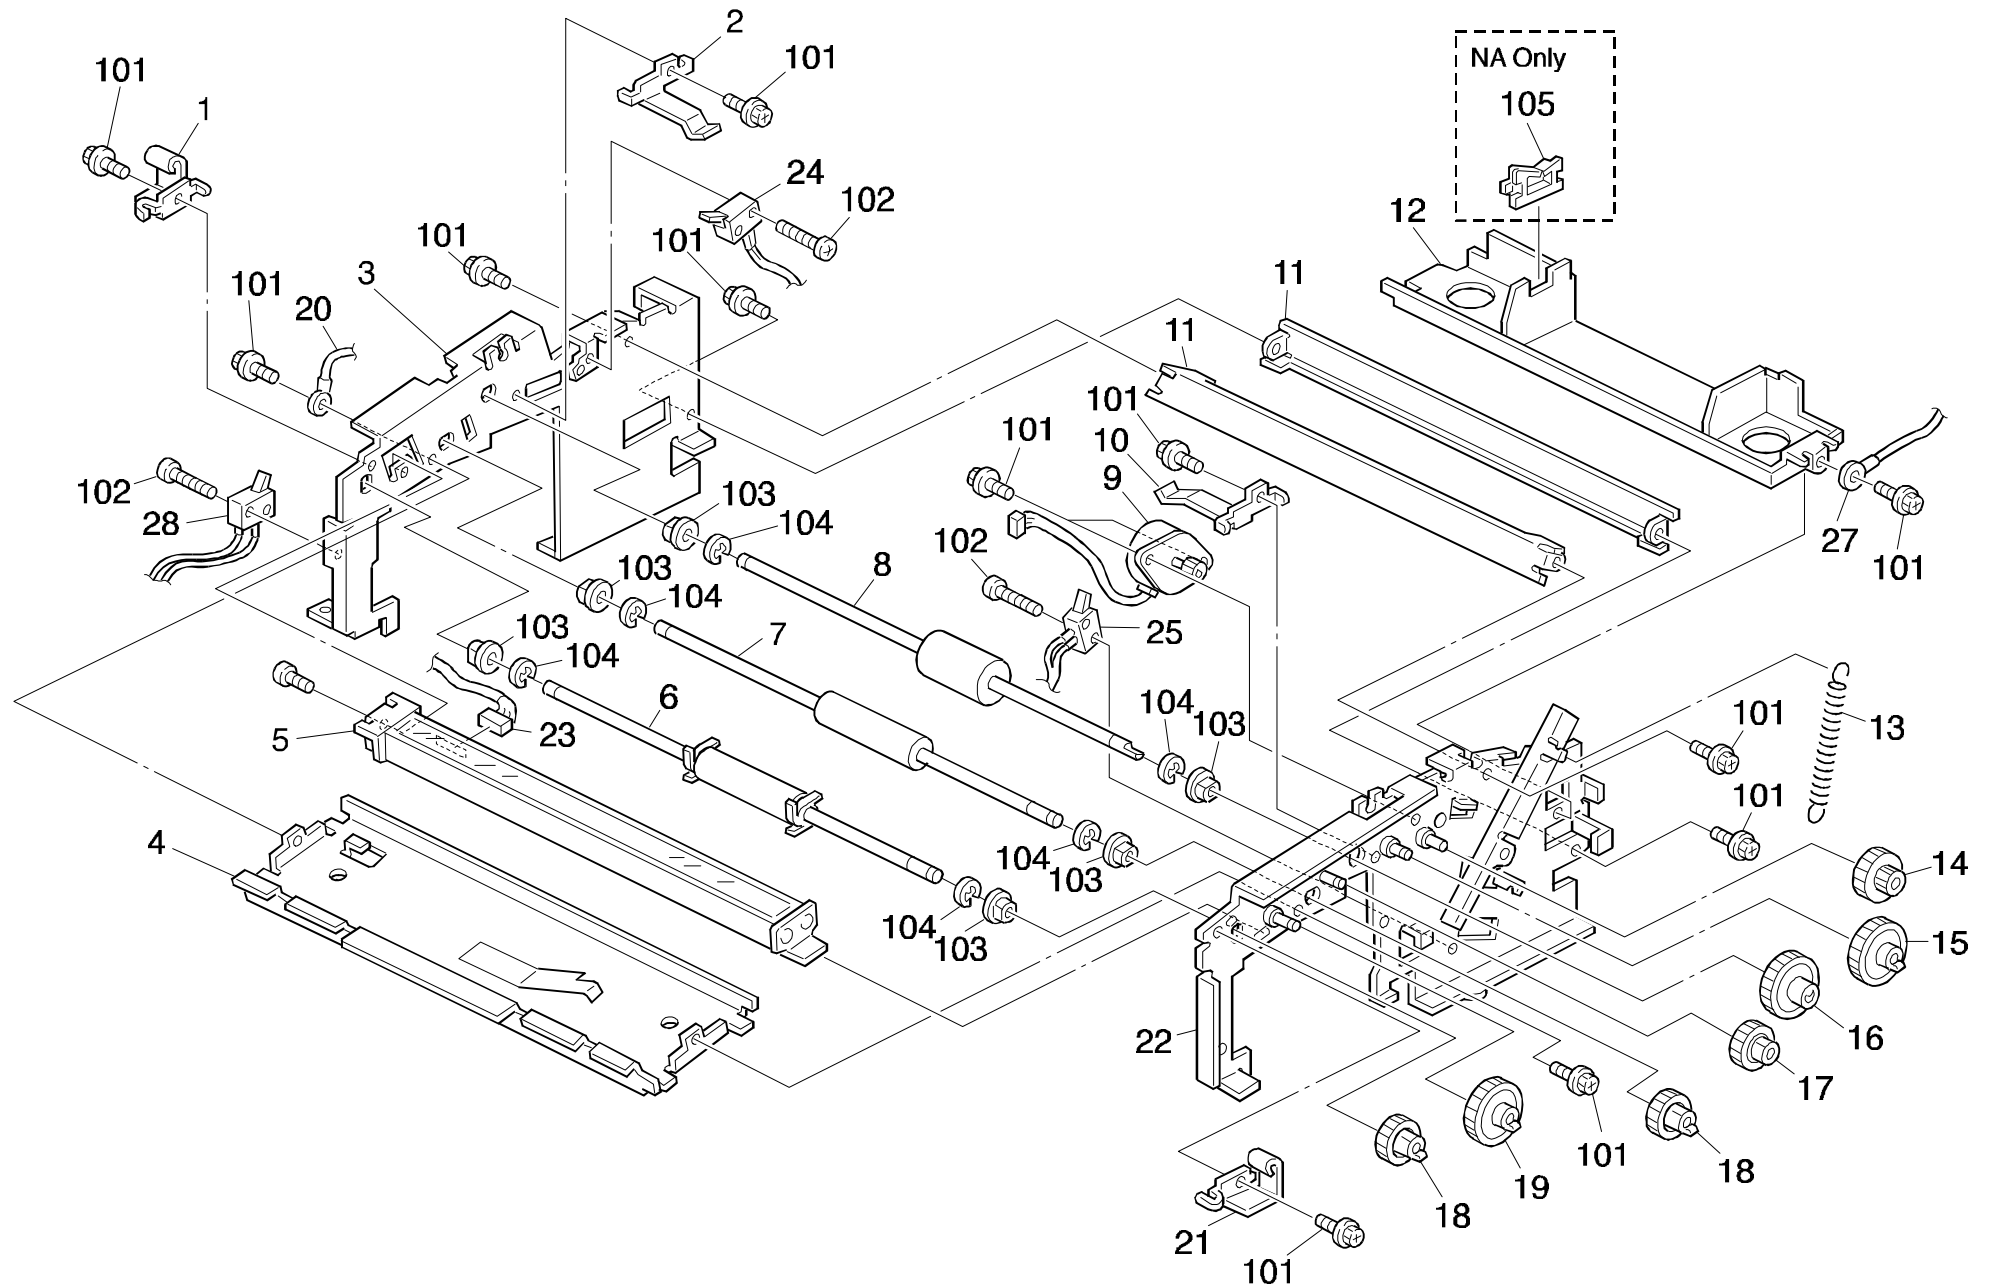


4. PAPER FEED

INDEX	PARTS NO.	DESCRIPTION	Note
1	H505 4311	Left Spring - Lock	
2	H505 4322	Grounding Plate - Left Upper	
3	H505 4315	Left Side Plate	
4	H505 4290	Front Stay	
5	H505 5042	Contact Image Sensor Ass'y	
6	H505 1500	R2 Roller	
7	H505 1503	R1 Roller	
8	H505 1502	ADF Feed Roller	
9	H505 5018	TX Motor	
10	H505 4321	Grounding Plate - Right Upper	
11	H505 4306	Rear Stay	
12	H505 4291	Stay - RS232C	
13	H505 3132	Lever Spring	
14	H505 1509	Brake Gear 1	
15	H505 1512	Brake Gear 2	
16	H505 1513	Feed Roller Gear	
17	H505 1514	Idle Gear 1	
18	H505 1515	R1 Roller Gear	
19	H505 1516	Idle Gear 2	
20	H505 5021	Grounding Wire - ADF	
21	H505 4309	Right Spring - Lock	
22	H505 4300	Right Side Plate	
23	H505 5011	Harness - CIS/IJC	
24	H505 5017	Document Guide Cover Switch	
25	H505 5027	Paper Release Lever Switch	
27	H505 5044	Grounding Wire - PSU	
28	H505 5016	Front Cover Switch	



INDEX	PARTS NO.	DESCRIPTION	Note
101	0443 0060W	Hexagon Head Tapping Screw - Ma3x6	
102	0312 0080B	Pan Head Screw - M2x8	
103	5053 0447	Bushing - 6mm	
104	0720 0040E	Retaining Ring - M4	
105	1105 0243	Wire Saddle (USA)	
106	0453 3006B	Screw - M3x6	

5. PAPER EXIT

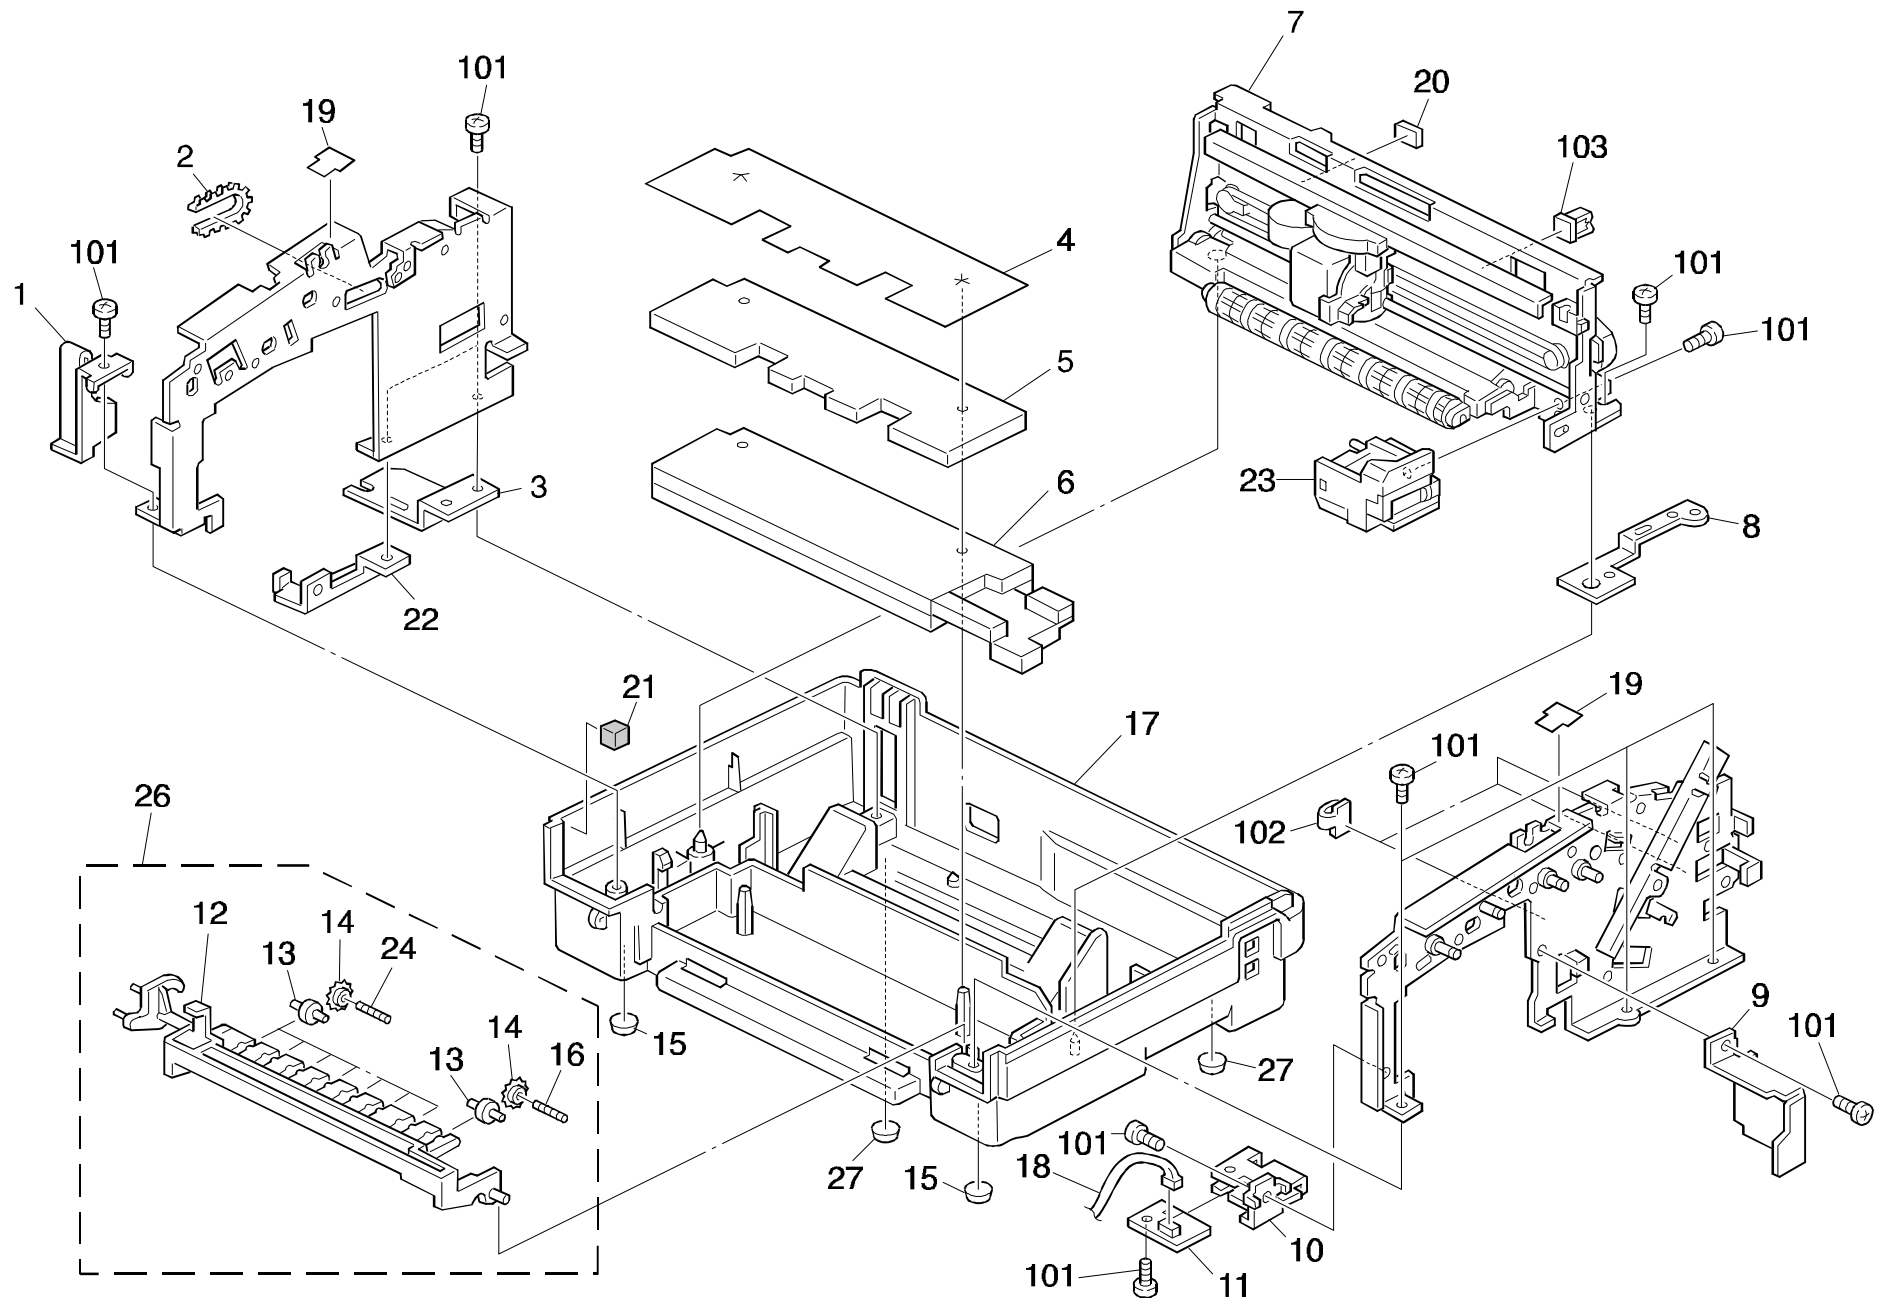

5. PAPER EXIT

INDEX	PARTS NO.	DESCRIPTION	Note
1	H505 4139	Spring Plate	
2	H505 4317	Bushing	
3	H505 4323	Grounding Plate - IJC	
4	H505 4146	Ink Absorber Holder	
5	H505 4144	Upper Ink Absorber	
6	H505 4145	Lower Ink Absorber	
7	H505 2510	TIJ Unit	
8	H505 4319	Grounding Plate - Right Lower	
9	H505 4324	Motor Cover	
10	H505 4327	Ink End Sensor Bracket	
11	H505 5025	Ink End Sensor	
12	H505 4140	Exit Guide Plate	
13	H505 2506	Cleaning Roller	
14	H505 2505	Paper Exit Roller	
15	H012 2111	Rubber Foot - Front	
16	H505 4143	Exit Roller Spring - Short	
17	H505 4115	Bottom Cover	
18	H505 5010	Harness - INK/IJC	
19	H505 4128	Cover Plate	
20	H012 2111	Rubber Foot - Front	
21	H505 4127	Inner Cover Holder	
22	H505 4320	Grounding Plate - Left Lower	
23	H505 2530	Cleaning Unit - TIJ	
24	H505 4109	Exit Roller Spring - Long	
26	H505 4016	Output Guide Ass'y	



INDEX	PARTS NO.	DESCRIPTION	Note
101	0313 0050B	Philips Pan Head Screw - M3x5	
102	1105 0189	Cable Holder	
103	1105 0368	Cable Clamp	
104	0802 5146	Tapping Screw - M3x8	



PARTS INDEX

PART N O.	DESCRIPTION	INDEX
H505 1005	Separation Plate Ass'y	5- 8
H505 1101	Shading Plate	5- 6
H505 1106	Spacer	5- 4
H505 1500	R2 Roller	9- 6
H505 1501	ADF Guide Plate	5- 10
H505 1502	ADF Feed Roller	9- 8
H505 1503	R1 Roller	9- 7
H505 1504	Upper Feed Roller	5- 13
H505 1508	Spring Plate - ADF	5- 7
H505 1509	Brake Gear 1	9- 14
H505 1510	Original Sensor - S1	5- 14
H505 1511	Original Sensor - S2	5- 15
H505 1512	Brake Gear 2	9- 15
H505 1513	Feed Roller Gear	9- 16
H505 1514	Idle Gear 1	9- 17
H505 1515	R1 Roller Gear	9- 18
H505 1516	Idle Gear 2	9- 19
H505 1517	Spring Plate - Feed	5- 12
H505 1521	Spring - ADF	5- 9
H505 1523	Antistatic Brush	5- 11
H505 2505	Paper Exit Roller	11- 14
H505 2506	Cleaning Roller	11- 13
H505 2509	Telephone Socket	3- 29
H505 2510	TIJ Unit	11- 7
H505 2530	Cleaning Unit - TIJ	11- 23
H505 3000	Paper Feed Unit - (USA)	7- *
H505 3001	Paper Feed Unit - (EUR/Asia/Taiwan)	7- *
H505 3010	Bottom Plate - EUR/Asia/Taiwan	7- 6
H505 3011	Paper Feed Roller Ass'y (RX)	7- 5
H505 3012	Bottom Plate - USA	7- 6
H505 3103	Paper Tray Case	7- 7
H505 3105	Corner Separator - Right	7- 13
H505 3106	Corner Separatir - Left	7- 1

PART N O.	DESCRIPTION	INDEX
H505 3107	Spacer A4 (EUR/Asia/Taiwan)	7- 2
H505 3108	Paper Tray Cover	7- 3
H505 3110	Gear - 1	7- 8
H505 3111	Gear - 2	7- 9
H505 3112	Gear - 3	7- 11
H505 3116	Gear - 4	7- 12
H505 3119	Paper Lift Plate	7- 14
H505 3124	Friction Pad - A4 (EUR/Taiwan)	7- 15
H505 3125	Friction Pad - LT (USA)	7- 15
H505 3127	Bottom Plate Spring	7- 4
H505 3130	Paper Feed Lever	3- 13
H505 3132	Lever Spring	3- 25
H505 3132	Lever Spring	9- 13
H505 3150	Spring Clutch	7- 10
H505 4016	Output Guide Ass'y	11- 26
H505 4020	Op-port Ass'y - USA	5- 1
H505 4021	Op-port Ass'y - EUR	5- 1
H505 4022	Op-port Ass'y - Asia	5- 1
H505 4025	Op-port Ass'y - Taiwan	5- 1
H505 4054	Op-port Ass'y - FRANCE	5- 1
H505 4100	Document Table	3- 5
H505 4101	Paper Tray	3- 1
H505 4109	Exit Roller Spring - Long	11- 24
H505 4110	CIS Guide Plate	3- 2
H505 4115	Bottom Cover	11- 17
H505 4117	Paper Tray Extension (USA)	3- 37
H505 4121	Upper Cover	3- 3
H505 4122	Document Guide Cover	3- 9
H505 4123	Document Guide	3- 7
H505 4125	Front Cover	3- 20
H505 4126	Guide Plate Spacer	3- 8
H505 4127	Inner Cover Holder	11- 21
H505 4128	Cover Plate	11- 19

PART N O.	DESCRIPTION	INDEX
H505 4129	Original Guide Pad	3- 34
H505 4139	Spring Plate	11- 1
H505 4140	Exit Guide Plate	11- 12
H505 4141	Right Inner Cover	3- 21
H505 4142	Left Inner Cover	3- 18
H505 4143	Exit Roller Spring - Short	11- 16
H505 4144	Upper Ink Absorber	11- 5
H505 4145	Lower Ink Absorber	11- 6
H505 4146	Ink Absorber Holder	11- 4
H505 4147	RS232C Cover	3- 4
H505 4157	IC Card Cover	3- 30
H505 4177	Handset Bracket (USA)	3- 42
H505 4200	Quick Dial Sheet	5- 2
H505 4243	Handset Holder (USA)	3- 38
H505 4290	Front Stay	9- 4
H505 4291	Stay - RS232C	9- 12
H505 4300	Right Side Plate	9- 22
H505 4306	Rear Stay	9- 11
H505 4308	Bracket - IJC	3- 17
H505 4309	Right Spring - Lock	9- 21
H505 4311	Left Spring - Lock	9- 1
H505 4315	Left Side Plate	9- 3
H505 4317	Bushing	11- 2
H505 4319	Grounding Plate - Right Lower	11- 8
H505 4320	Grounding Plate - Left Lower	11- 22
H505 4321	Grounding Plate - Right Upper	9- 10
H505 4322	Grounding Plate - Left Upper	9- 2
H505 4323	Grounding Plate - IJC	11- 3
H505 4324	Motor Cover	11- 9
H505 4327	Ink End Sensor Bracket	11- 10
H505 5008	Harness - PSU/FDU (EUR/Asia/Taiwan)	3- 40
H505 5009	Harness - OPU/IJC	5- 3
H505 5010	Harness - INK/IJC	11- 18

PART N O.	DESCRIPTION	INDEX
H505 5011	Harness - CIS/IJC	9- 23
H505 5012	Harness - NCU/IJC1	3- 23
H505 5013	Harness - NCU/IJC2 (EUR/Asia)	3- 24
H505 5014	Harness - FDU/IJC1	3- 27
H505 5015	Harness - IJC/FDU2	3- 26
H505 5016	Front Cover Switch	9- 28
H505 5017	Document Guide Cover Switch	9- 24
H505 5018	TX Motor	9- 9
H505 5020	Harness - IJC/FDU3	3- 28
H505 5021	Grounding Wire - ADF	9- 20
H505 5023	PCB - PSU - 115V	3- 11
H505 5024	PCB - PSU - 230V	3- 11
H505 5025	Ink End Sensor	11- 11
H505 5027	Paper Release Lever Switch	9- 25
H505 5029	Power Supply Cord - 115V (USA)	3- 12
H505 5030	Grounding Wire - FDU 1	3- 31
H505 5031	Grounding Wire - FDU 1	3- 32
H505 5041	Harness - FCE/RS232C (USA)	3- 36
H505 5042	Contact Image Sensor Ass'y	9- 5
H505 5043	Grounding Wire - FDU/IJC	3- 33
H505 5044	Grounding Wire - PSU	9- 27
H505 5045	Harness - PSU/FDU (USA)	3- 40
H505 6010	PCB - FDU	3- 14
H505 6011	PCB - IJC	3- 16
H505 6016	PCB - FCE - USA	3- 15
H505 6022	PCB - FCE - EUR/Asia/Taiwan	3- 15
H505 8601	Operator's Manual - English - EUR	3- *
H505 8602	Operator's Manual - German	3- *
H505 8603	Operator's Manual - Italian	3- *
H505 8604	Operator's Manual - Spanish	3- *
H505 8605	Operator's Manual - French	3- *
H505 8606	Operator's Manual - Swedish	3- *
H505 8607	Operator's Manual - English - Taiwan	3- *

PART N O.	DESCRIPTION	INDEX
H505 8608	Operator's Manual - FRANCE	3- *
H505 8700	Operator's Manual - English - USA	3- *
H505 8701	Operator's Manual - English - Asia	3- *

PART N O.	DESCRIPTION	INDEX
G011 3305	Gear - 16T	3- 10
H012 2111	Rubber Foot - Front	11- 15
H012 2111	Rubber Foot - Front	11- 20
H081 4141	Screw - Handset (USA)	3-102
H081 5700	Telephone Cable	3- 41
H085 1110	Antistatic Brush - Scanner	5- 5
H504 4116	Document Table Extension (USA)	3- 39
H504 4901	Cap - Telephone Socket (EUR)	3- 35
H505 1005	Separation Plate Ass'y	5- 8
H505 1101	Shading Plate	5- 6
H505 1106	Spacer	5- 4
H505 1500	R2 Roller	9- 6
H505 1501	ADF Guide Plate	5- 10
H505 1502	ADF Feed Roller	9- 8
H505 1503	R1 Roller	9- 7
H505 1504	Upper Feed Roller	5- 13
H505 1508	Spring Plate - ADF	5- 7
H505 1509	Brake Gear 1	9- 14
H505 1510	Original Sensor - S1	5- 14
H505 1511	Original Sensor - S2	5- 15
H505 1512	Brake Gear 2	9- 15
H505 1513	Feed Roller Gear	9- 16
H505 1514	Idle Gear 1	9- 17
H505 1515	R1 Roller Gear	9- 18
H505 1516	Idle Gear 2	9- 19
H505 1517	Spring Plate - Feed	5- 12
H505 1521	Spring - ADF	5- 9
H505 1523	Antistatic Brush	5- 11
H505 2505	Paper Exit Roller	11- 14
H505 2506	Cleaning Roller	11- 13
H505 2509	Telephone Socket	3- 29
H505 2510	TIJ Unit	11- 7
H505 2530	Cleaning Unit - TIJ	11- 23

PART N O.	DESCRIPTION	INDEX
H505 3000	Paper Feed Unit - (USA)	7- 0
H505 3001	Paper Feed Unit - (EUR/Asia/Taiwan)	7- 0
H505 3010	Bottom Plate - EUR/Asia/Taiwan	7- 6
H505 3011	Paper Feed Roller Ass'y (RX)	7- 5
H505 3012	Bottom Plate - USA	7- 6
H505 3103	Paper Tray Case	7- 7
H505 3105	Corner Separator - Right	7- 13
H505 3106	Corner Separatir - Left	7- 1
H505 3107	Spacer A4 (EUR/Asia/Taiwan)	7- 2
H505 3108	Paper Tray Cover	7- 3
H505 3110	Gear - 1	7- 8
H505 3111	Gear - 2	7- 9
H505 3112	Gear - 3	7- 11
H505 3116	Gear - 4	7- 12
H505 3119	Paper Lift Plate	7- 14
H505 3124	Friction Pad - A4 (EUR/Taiwan)	7- 15
H505 3125	Friction Pad - LT (USA)	7- 15
H505 3127	Bottom Plate Spring	7- 4
H505 3130	Paper Feed Lever	3- 13
H505 3132	Lever Spring	3- 25
H505 3132	Lever Spring	9- 13
H505 3150	Spring Clutch	7- 10
H505 4016	Output Guide Ass'y	11- 26
H505 4020	Op-port Ass'y - USA	5- 1
H505 4021	Op-port Ass'y - EUR	5- 1
H505 4022	Op-port Ass'y - Asia	5- 1
H505 4025	Op-port Ass'y - Taiwan	5- 1
H505 4054	Op-port Ass'y - FRANCE	5- 1
H505 4100	Document Table	3- 5
H505 4101	Paper Tray	3- 1
H505 4109	Exit Roller Spring - Long	11- 24
H505 4110	CIS Guide Plate	3- 2
H505 4115	Bottom Cover	11- 17

PART N O.	DESCRIPTION	INDEX
H505 4117	Paper Tray Extension (USA)	3- 37
H505 4121	Upper Cover	3- 3
H505 4122	Document Guide Cover	3- 9
H505 4123	Document Guide	3- 7
H505 4125	Front Cover	3- 20
H505 4126	Guide Plate Spacer	3- 8
H505 4127	Inner Cover Holder	11- 21
H505 4128	Cover Plate	11- 19
H505 4129	Original Guide Pad	3- 34
H505 4139	Spring Plate	11- 1
H505 4140	Exit Guide Plate	11- 12
H505 4141	Right Inner Cover	3- 21
H505 4142	Left Inner Cover	3- 18
H505 4143	Exit Roller Spring - Short	11- 16
H505 4144	Upper Ink Absorber	11- 5
H505 4145	Lower Ink Absorber	11- 6
H505 4146	Ink Absober Holder	11- 4
H505 4147	RS232C Cover	3- 4
H505 4157	IC Card Cover	3- 30
H505 4177	Handset Bracket (USA)	3- 42
H505 4200	Quick Dial Sheet	5- 2
H505 4243	Handset Holder (USA)	3- 38
H505 4290	Front Stay	9- 4
H505 4291	Stay - RS232C	9- 12
H505 4300	Right Side Plate	9- 22
H505 4306	Rear Stay	9- 11
H505 4308	Bracket - IJC	3- 17
H505 4309	Right Spring - Lock	9- 21
H505 4311	Left Spring - Lock	9- 1
H505 4315	Left Side Plate	9- 3
H505 4317	Bushing	11- 2
H505 4319	Grounding Plate - Right Lower	11- 8
H505 4320	Grounding Plate - Left Lower	11- 22

PART N O.	DESCRIPTION	INDEX
H505 4321	Grounding Plate - Right Upper	9- 10
H505 4322	Grounding Plate - Left Upper	9- 2
H505 4323	Grounding Plate - IJC	11- 3
H505 4324	Motor Cover	11- 9
H505 4327	Ink End Sensor Bracket	11- 10
H505 5008	Harness - PSU/FDU (EUR/Asia/Taiwan)	3- 40
H505 5009	Harness - OPU/IJC	5- 3
H505 5010	Harness - INK/IJC	11- 18
H505 5011	Harness - CIS/IJC	9- 23
H505 5012	Harness - NCU/IJC1	3- 23
H505 5013	Harness - NCU/IJC2 (EUR/Asia)	3- 24
H505 5014	Harness - FDU/IJC1	3- 27
H505 5015	Harness - IJC/FDU2	3- 26
H505 5016	Front Cover Switch	9- 28
H505 5017	Document Guide Cover Switch	9- 24
H505 5018	TX Motor	9- 9
H505 5020	Harness - IJC/FDU3	3- 28
H505 5021	Grounding Wire - ADF	9- 20
H505 5023	PCB - PSU - 115V	3- 11
H505 5024	PCB - PSU - 230V	3- 11
H505 5025	Ink End Sensor	11- 11
H505 5027	Paper Release Lever Switch	9- 25
H505 5029	Power Supply Cord - 115V (USA)	3- 12
H505 5030	Grounding Wire - FDU 1	3- 31
H505 5031	Grounding Wire - FDU 1	3- 32
H505 5041	Harness - FCE/RS232C (USA)	3- 36
H505 5042	Contact Image Sensor Ass'y	9- 5
H505 5043	Grounding Wire - FDU/IJC	3- 33
H505 5044	Grounding Wire - PSU	9- 27
H505 5045	Harness - PSU/FDU (USA)	3- 40
H505 6010	PCB - FDU	3- 14
H505 6011	PCB - IJC	3- 16
H505 6016	PCB - FCE - USA	3- 15

PART N O.	DESCRIPTION	INDEX
H505 6022	PCB - FCE - EUR/Asia/Taiwan	3- 15
H505 8601	Operator's Manual - English - EUR	3- 0
H505 8602	Operator's Manual - German	3- 0
H505 8603	Operator's Manual - Italian	3- 0
H505 8604	Operator's Manual - Spanish	3- 0
H505 8605	Operator's Manual - French	3- 0
H505 8606	Operator's Manual - Swedish	3- 0
H505 8607	Operator's Manual - English - Taiwan	3- 0
H505 8608	Operator's Manual - FRANCE	3- 0
H505 8700	Operator's Manual - English - USA	3- 0
H505 8701	Operator's Manual - English - Asia	3- 0
H516 5032	Monitor Speaker	3- 19

PART N O.	DESCRIPTION	INDEX
5053 0447	Bushing - 6mm	9-103
5488 6021	PCB - NCU - USA/Taiwan	3- 22
5488 6041	PCB - NCU - EUR/Asia	3- 22
5488 6061	PCB - NCU - FRANCE	3- 22

PART N O.	DESCRIPTION	INDEX
0312 0080B	Pan Head Screw - M2x8	9-102
0313 0050B	Philips Pan Head Screw - M3x5	3-104
0353 0080Z	Philips Trass Head Scrw - M3x8	3-101
0443 0060W	Hexagon Head Tapping Screw - Ma3x6	9-101
0453 3006B	Screw - M3x6	9-106
0720 0040E	Retaining Ring - M4	9-104
0802 5146	Tapping Screw - M3x8	5-101
0802 5205	Tapping Screw - M3x6	3-103
0951 3006B	Philips Screw - With Flat Washer - M3x6	3-105
0954 3006B	Screw - M3x6	3-106
1105 0243	Wire Saddle (USA)	9-105