

MULTI PURPOSE

PARTS CATALOG


INTRODUCTION

This chapter instructs you the numbers and names of this parts on this machine.

INDEX to PARTS CATALOG

1.MULTI PURPOSE UNIT (H11069)	2
PARTS INDEX	5

1.MULTI PURPOSE UNIT (H11069)

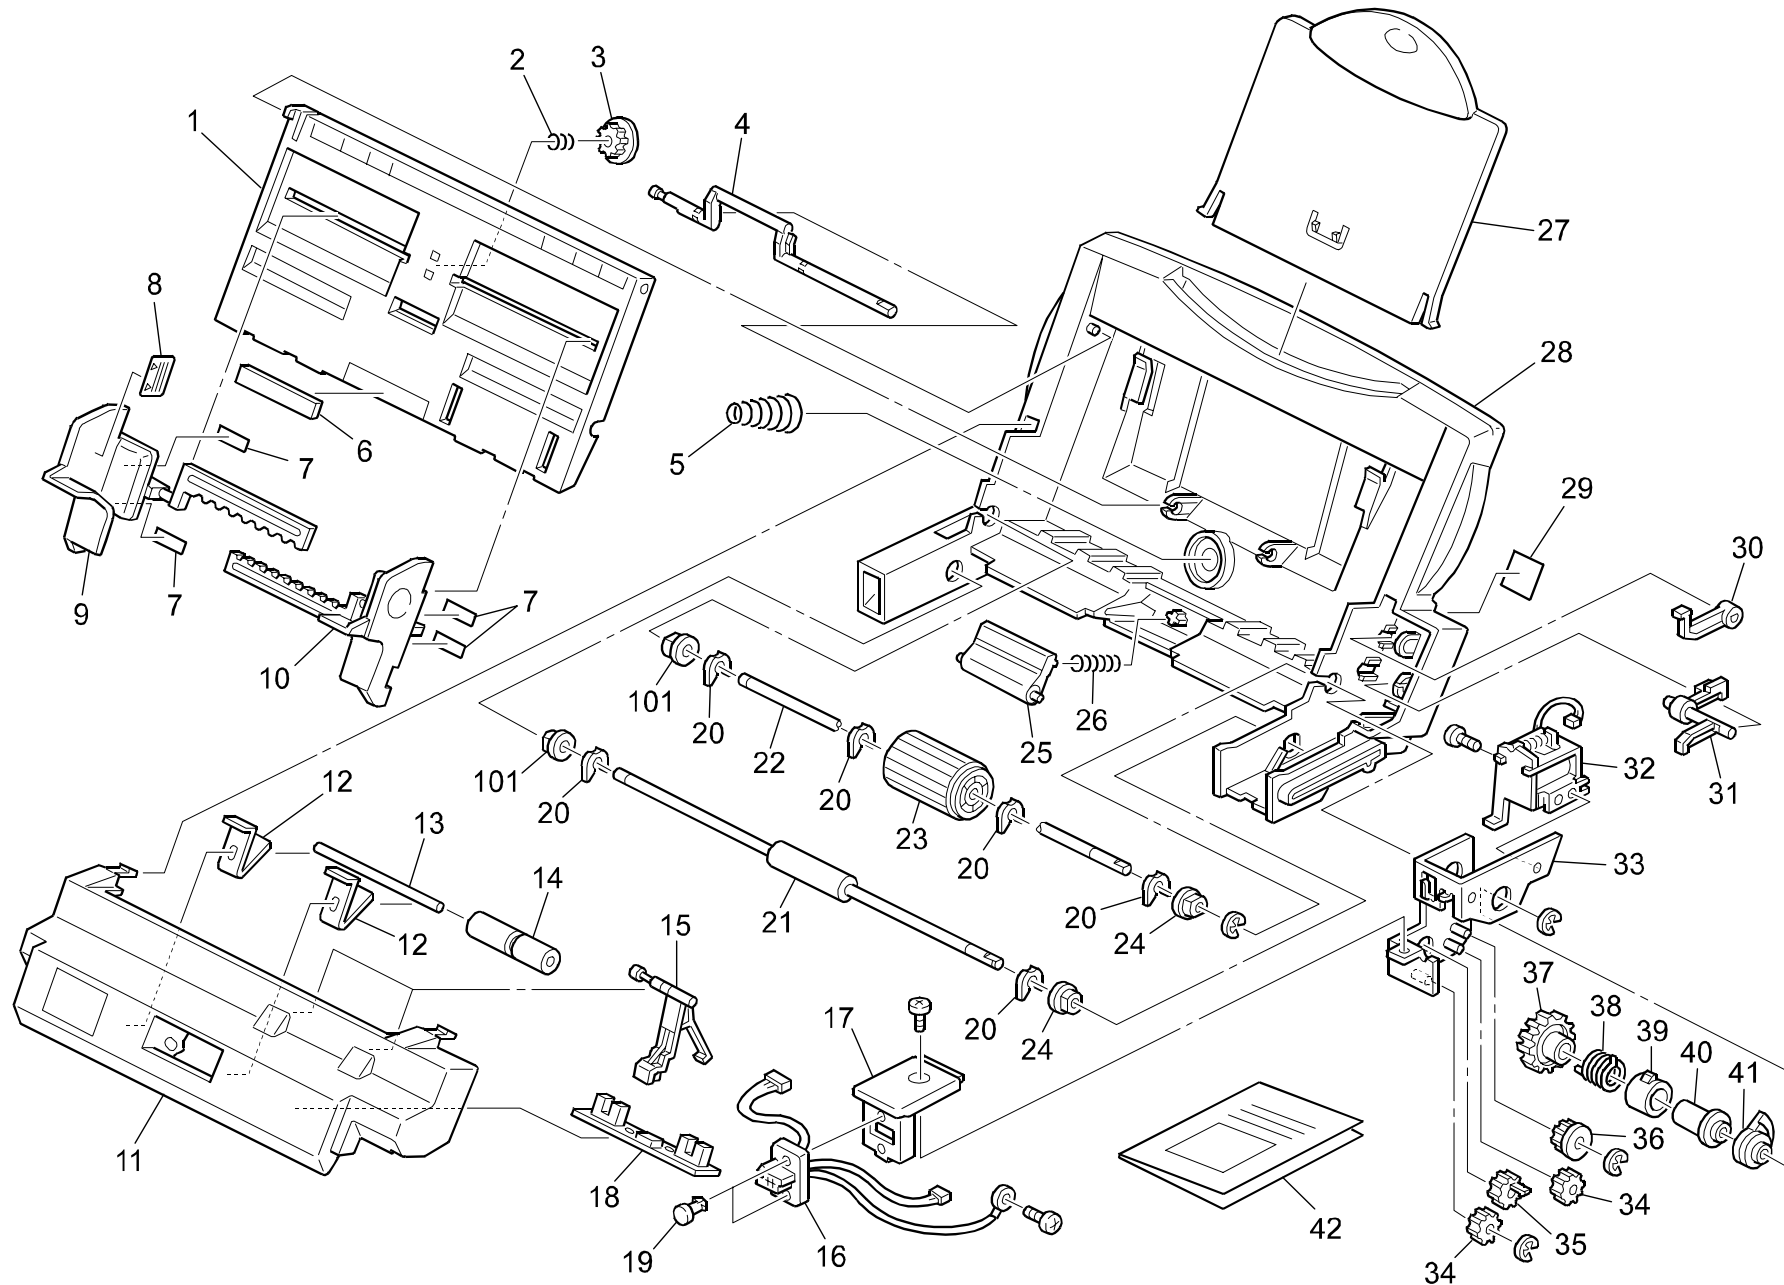

1.MULTI PURPOSE UNIT (H11069)

INDEX	PARTS NO.	DESCRIPTION	Note
1	H545 3412	Tray Bottom Plate	1
2	H545 3420	Pinion Spring	1
3	H545 4308	Gear - Original Guide - 16Z	1
4	H545 3423	3rd Link	1
5	H545 3419	Bottom Plate Spring	1
6	H545 3425	Bottom Plate Pad	1
7	H545 3581	Side Fence Sheet	4
8	H545 3580	Decal - Side Fence	1
9	H545 3414	Left Side Fence	1
10	H545 3415	Right Side Fence	1
11	H545 3411	Upper Cover	1
12	H545 3430	Spring Plate	2
13	H545 3434	Roller Shaft	1
14	H545 3143	Transfer Driven Roller	1
15	H545 3426	Paper End Sensor Actuator	2
16	H545 5118	Multch Harness	1
17	H545 3439	Connector Cover	1
18	H545 5056	PFU Control Board	1
19	H515 3542	Rivet	2
20	H515 3543	E-Ring - JR-E4	6
21	H545 3401	Transport Roller - Multch	1
22	H545 3463	Paper Feed Shaft	1
23	H545 3460	Paper Feed Roller	1
24	H068 2102	Bushing - M6/m10 - 9	2
25	H545 3413	Friction Pad Ass'y	1
26	H545 3418	Separation Spring	1
27	H545 3417	Paper Feed Table	1
28	H545 3410	Multch Tray Cover	1
29	H545 3582	Cover Sheet	1
30	H545 3422	2nd Link	1
31	H545 3421	1st Link	1
32	H545 5058	DC Sorenoide	1

INDEX	PARTS NO.	DESCRIPTION	Note
33	H545 3407	Bracket Multch	1
34	H545 3405	Joint Gear - 15z	2
35	H545 3406	Transport Gear - 14z	1
36	H545 3404	Idler Gear - 14z	1
37	H545 3454	Feed Roller Gear Ass'y	1
38	H545 3437	Magnetick Clutch	1
39	H545 3403	Stopper Bushing	1
40	H545 3435	Joint Clutch	1
41	H545 3436	Clutch Cam	1
42	H545 8100	Installation Procedure - Multi	1

PARTS INDEX

PART N O.	DESCRIPTION	INDEX
H068 2102	Bushing - M6/m10 - 9	3- 24
H515 3542	Rivet	3- 19
H515 3543	E-Ring - JR-E4	3- 20
H545 3143	Transfer Driven Roller	3- 14
H545 3401	Transport Roller - Multch	3- 21
H545 3403	Stopper Bushing	3- 39
H545 3404	Idler Gear - 14z	3- 36
H545 3405	Joint Gear - 15z	3- 34
H545 3406	Transport Gear - 14z	3- 35
H545 3407	Bracket Multch	3- 33
H545 3410	Multch Tray Cover	3- 28
H545 3411	Upper Cover	3- 11
H545 3412	Tray Bottom Plate	3- 1
H545 3413	Friction Pad Ass'y	3- 25
H545 3414	Left Side Fence	3- 9
H545 3415	Right Side Fence	3- 10
H545 3417	Paper Feed Table	3- 27
H545 3418	Separation Spring	3- 26
H545 3419	Bottom Plate Spring	3- 5
H545 3420	Pinion Spring	3- 2
H545 3421	1st Link	3- 31
H545 3422	2nd Link	3- 30
H545 3423	3rd Link	3- 4
H545 3425	Bottom Plate Pad	3- 6
H545 3426	Paper End Sensor Actuator	3- 15
H545 3430	Spring Plate	3- 12
H545 3434	Roller Shaft	3- 13
H545 3435	Joint Clutch	3- 40
H545 3436	Clutch Cam	3- 41
H545 3437	Magnetick Clutch	3- 38
H545 3439	Connector Cover	3- 17
H545 3454	Feed Roller Gear Ass'y	3- 37
H545 3460	Paper Feed Roller	3- 23

PART N O.	DESCRIPTION	INDEX
H545 3463	Paper Feed Shaft	3- 22
H545 3580	Decal - Side Fence	3- 8
H545 3581	Side Fence Sheet	3- 7
H545 3582	Cover Sheet	3- 29
H545 4308	Gear - Original Guide - 16Z	3- 3
H545 5056	PFU Control Board	3- 18
H545 5058	DC Sorenoid	3- 32
H545 5118	Multch Harness	3- 16
H545 8100	Installation Procedure - Multi	3- 42