

**Operating Instructions** 

Mode d'emploi

Manual de usuario

For safe and correct use of this machine, please be sure to read the Safety Information in the Basic Features manual before you use it.

#### Introduction

Thank you for purchasing NIC FAX.

You are authorized to agree with the terms and conditions of the User License Agreement before using NIC FAX Driver and Utilities and NIC FAX Unit manual.

This CD-ROM contains the following:

#### NIC FAX Driver and Utilities

- LAN-Fax F2 (LAN FAX Driver)
- Address Book
- LAN-Fax Cover Sheet Editor
- SmartNetMonitor for Client/Admin
- DeskTopBinder V2 Lite
- ScanRouter V2 Lite
- Online Help
  - Online Help for using a Web browser
- NIC FAX Unit Manual
  - NIC FAX UNIT TYPE510 Operating Instructions
- Acrobat Reader

# Trademarks

Adobe, the Adobe logo, and Adobe Acrobat are registered trademarks of Adobe Systems Incorporated.

Microsoft<sup>®</sup>, Windows<sup>®</sup>, Windows NT<sup>®</sup> are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Pentium is a registered trademark of Intel Corporation.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights in those marks.

# How to Read Documents on the CD-ROM

The manual on this CD-ROM is stored in PDF format. To read it, you must install Adobe Acrobat Reader on your computer.



# System Requirements

You need the following when using Quick Install to run NIC FAX Driver and Utilities and to read NIC FAX Unit manual. (For detailed information on each utility and the driver, refer to the specific Readme files.)

Computer	:	IBM PC/AT or compatible running Windows 95, Windows 98, Windows Me, Windows NT 4.0, Windows 2000, or Windows XP
CPU	:	133-MHz Pentium (or a CPU that satisfies the minimum require- ments of your Operating System)
Free Memory	:	32 MB minimum (or a size that satisfies the minimum requirements of your Operating System)
Disk Space	:	16 MB minimum
Operating System	:	Windows 95, Windows 98, Windows Me, Windows NT 4.0, Windows 2000, or Windows XP

# Important

Operation cannot be guaranteed for all system configurations. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine (hardware/software) and NIC FAX Driver and Utilities/NIC FAX Unit manual.

# Using the CD-ROM

Before using the CD-ROM, please make sure that Adobe Acrobat Reader is installed on your computer.

1 Start up the computer.

**2** Insert the CD-ROM into the CD-ROM drive.

**3** Select the language you wish to choose, then click [OK].

# 4 Click [Browse This CD-ROM] on the Printer Drivers and Utilities screen, or open the following folder.

D:\Manual\English

(If your CD-ROM is assigned to drive D.)

**5** Double-click on the "NIC FAX.pdf" file to view it.

# Settings and Installation

- ① Adjust the NIC FAX Settings. For details, see Chapter 1 "Before Using Network Functions", "NIC FAX Initial Settings" and Chapter 2 "E-mail Server Settings" in the NIC FAX Unit manual.
- ② Install the NIC FAX Driver and Utilities. For details, refer to the "Installing the Software" section of the NIC FAX Unit manual. This section should be printed out for reference.

NIC FAX UNIT CD-ROM Operating Instructions

Printed in Japan



H210-8691B