 


Operating Instructions Facsimile Reference <Basic Features>





2 Faxing

- 3 Registering
- 4 Troubleshooting

For safe and correct use of this machine, please be sure to read the Safety Information in the General Settings Guide before you use it.

Introduction

This manual describes detailed instructions on the operation and notes about the use of this machine. To get maximum versatility from this machine all operators are requested to read this manual carefully and follow the instructions. Please keep this manual in a handy place near the machine.

Notes

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

NOTICE TO USERS (NEW ZEALAND)

- ① The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services.
- ② This equipment is not capable, under all operating conditions, of correct operation at the higher speeds for which it is designed. Telecom will accept no responsibility should difficulties arise in such circumstances.
- ③ This equipment shall not be set up to make automatic calls to the Telecom "111" Emergency Service.
- ④ If a charge for local calls is unacceptable, the "Dial" button should NOT be used for local calls. Only the 7-digits of the local number should be dialled from your telephone. DO NOT dial the area code degit or the "0" prefix.
- ⑤ This equipment may not provide for the effective hand-over of a call to another device connected to the same line.
- ③ This device may be subject to ringing or bell tinkle when calls are made from another device on the same line. If this occurs, the problem <u>should not</u> be referred to the Telecom Faults Service.
- ⑦ This equipment shoule not be used under any circumstances, which may constitute a nuisance to other Telecom custmers. For example, repeated attempts to make unsolicited sales offers to the same number or group of numbers, such as when a block of numbers terminate on the same PABX.
- The call log incorporated in this equipment does not record all answered calls. The call log, therefore may not agree with the Telecom account which may include calls not shown on the log.
- Not all telephones will respond to incoming ringing when connected to the extension socket.

Manuals for This machine

The following manuals describe the operational procedures of this machine. For particular functions, see the relevant parts of the manual.

🖉 Note

- □ Manuals provided are specific to machine type.
- □ Adobe Acrobat Reader is necessary to view the manuals as a PDF file.
- □ Two CD-ROMs are provided:
 - CD-ROM 1"Operating Instructions for Printer/Scanner"
 - CD-ROM 2"Scanner Driver & Document Management Utilities"

General Settings Guide

Provides an overview of the machine.

It also describes System Settings (such as paper trays and user codes settings), Document Server functions, and troubleshooting.

Network Guide (PDF file - CD-ROM1)

Describes procedures for configuring the machine and computers in a network environment.

Copy Reference

Describes operations, functions, and troubleshooting for the machine's copier function.

Facsimile Reference <Basic Features> (this manual)

Describes operations, functions, and troubleshooting for the machine's facsimile function.

Facsimile Reference <Advanced Features>

Describes advanced functions and settings for key operators.

Printer Reference 1

Describes system settings and operations for the machine's printer function.

Printer Reference 2 (PDF file - CD-ROM1)

Describes operations, functions, and troubleshooting for the machine's printer function.

Scanner Reference (PDF file - CD-ROM1)

Describes operations, functions, and troubleshooting for the machine's scanner function.

Manuals for DeskTopBinder V2 Lite

DeskTopBinder V2 Lite is a utility included on the CD-ROM labeled "Scanner Driver & Document Management Utilities".

- DeskTopBinder V2 Lite Setup Guide (PDF file CD-ROM2) Describes installation of, and the operating environment for DeskTop-Binder V2 Lite in detail. This guide can be displayed from the **[Setup]** dialog box when DeskTopBinder V2 Lite is installed.
- DeskTopBinder V2 Lite Introduction Guide (PDF file CD-ROM2) Describes operations of DeskTopBinder V2 Lite and provides an overview of its functions. This guide is added to the **[Start]** menu when DeskTop-Binder V2 Lite is installed.
- Auto Document Link Guide (PDF file CD-ROM2) Describes operations and functions of Auto Document Link installed with DeskTopBinder V2 Lite. This guide is added to the **[Start]** menu when DeskTopBinder V2 Lite is installed.

Manuals for ScanRouter V2 Lite

ScanRouter V2 Lite Setup Guide (PDF file - CD-ROM2) Describes installation of, settings, and the operating environment for Scan-Router V2 Lite in detail. This guide can be displayed from the **[Setup]** dialog box when ScanRouter V2 Lite is installed.

- ScanRouter V2 Lite Setup Guide (PDF file CD-ROM2) Describes installation of, settings, and the operating environment for Scan-Router V2 Lite in detail. This guide can be displayed from the **[Setup]** dialog box when ScanRouter V2 Lite is installed.
- ScanRouter V2 Lite Management Guide (PDF file CD-ROM2) Describes delivery server management and operations, and provides an overview of ScanRouter V2 Lite functions. This guide is added to the **[Start]** menu when ScanRouter V2 Lite is installed.

Other manuals

- PS3 Supplement (PDF file CD-ROM1)
- Unix Supplement (Available from an authorized dealer, or as a PDF file on our Web site.)

TABLE OF CONTENTS

NOTICE	i
Manuals for This machine	ii
How to Read This Manual	1
Symbols	1
,	

1. Getting Started

Control Panel	3
Reading the Display	
Reading the Display Panel and Using Keys	
Standby Display	
Communication Display	7
User Code Entry Display	8

2. Faxing

Transmission Modes	9
Switching between Memory Transmission and Immediate Transmission	10
Placing Originals	11
Placing a Single Original on the Exposure Glass	12
Bound original page order	13
Placing Originals in the Optional Auto Document Feeder (ADF)	13
Originals unsuitable for the optional Auto Document Feeder (ADF)	
Setting a Scan Area	
Original sizes difficult to detect	
Memory Transmission	18
Canceling a Memory Transmission	
Before the Original Is Scanned	
While the Original Is Being Scanned	
While the Original Is Being Transmitted	
Before the Transmission Is Started	
Immediate Transmission	24
Canceling an Immediate Transmission	26
Before You Have Pressed the [Start] Key	
	26
After You Have Pressed the [Start] Key	20
Scan Settings	
	27
Scan Settings Resolution Original Type	27 27 28
Scan Settings Resolution Original Type Image Density (Contrast)	27 27 28 29
Scan Settings Resolution Original Type Image Density (Contrast) Mixing Scan Settings for a Multiple Page Original	27 27 28 29 31
Scan Settings Resolution Original Type Image Density (Contrast) Mixing Scan Settings for a Multiple Page Original When placing originals on the exposure glass	27 27 28 29 31 31
Scan Settings Resolution Original Type Image Density (Contrast) Mixing Scan Settings for a Multiple Page Original When placing originals on the exposure glass When placing originals in the optional Auto Document Feeder (ADF)	27 27 28 29 31 31 31
Scan Settings Resolution Original Type Image Density (Contrast) Mixing Scan Settings for a Multiple Page Original When placing originals on the exposure glass When placing originals in the optional Auto Document Feeder (ADF)	27 27 28 29 31 31 31 31 32
Scan Settings Resolution Original Type Image Density (Contrast) Mixing Scan Settings for a Multiple Page Original When placing originals on the exposure glass When placing originals in the optional Auto Document Feeder (ADF) Dialing Number Keys	27 27 28 29 31 31 31 31 31 31 32
Scan Settings Resolution Original Type Image Density (Contrast) Mixing Scan Settings for a Multiple Page Original When placing originals on the exposure glass When placing originals in the optional Auto Document Feeder (ADF) Dialing Number Keys Pause	27 27 28 29 31 31 31 31 32 32 32
Scan Settings Resolution Original Type Image Density (Contrast) Mixing Scan Settings for a Multiple Page Original When placing originals on the exposure glass When placing originals in the optional Auto Document Feeder (ADF) Dialing Number Keys Pause Tone	27 28 29 31 31 31 31 32 32 33
Scan Settings Resolution Original Type Image Density (Contrast) Mixing Scan Settings for a Multiple Page Original When placing originals on the exposure glass When placing originals in the optional Auto Document Feeder (ADF) Dialing Number Keys Pause	27 28 29 31 31 31 31 32 32 32 33 33

Searching for a Destination	36
Search by Destination Name	
Search by Fax Number	
Specifying a Registration Number	
Reception	
Switching the Reception Mode	
Receiving a Fax in Manual Reception Mode	40

3. Registering

Initial Settings and Adjustments	
Programming	
Editing	
Deleting	
Programming Fax Destinations	

4. Troubleshooting

Adjusting the Volume	
When the [Facsimile] Key Is Lit in Red	
When Toner Runs Out	51
Error Messages and Their Meanings	
Solving Problems	54
Finding Operational Solutions	56
INDEX	

How to Read This Manual

Symbols

In this manual, the following symbols are used:

A WARNING:

This symbol indicates a potentially hazardous situation that might result in death or serious injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are included in "Safety Information", *General Settings Guide*.

A CAUTION:

This symbol indicates a potentially hazardous situation that might result in minor or moderate injury or property damage that does not involve personal injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are included in "Safety Information", *General Settings Guide*.

* The statements above are notes for your safety.

∰Important

If this instruction is not followed, paper might be misfed, originals might be damaged, or data might be lost. Be sure to read this.

Preparation

This symbol indicates information or preparations required prior to operating.

🖉 Note

This symbol indicates precautions for operation, or actions to take after abnormal operation.

Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions under which a particular function cannot be used.

This symbol indicates a reference.

[

Keys that appear on the machine's panel display.

[


Keys and buttons that appear on the computer's display.

Keys built into the machine's control panel.

1. Getting Started

Control Panel

The actual machine control panel may differ from this illustration depending on installed optional units. This illustration has all options installed.

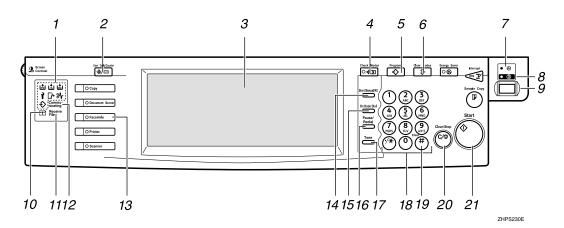

1. Indicators

Shows errors and machine status.

- ↔: Data In indicator
- P: Service Call indicator
- ₩: Misfeed indicator
- 🕼: Open Cover indicator
- 🛓: Add Staple indicator

🛓: Add Toner indicator

🛓: Paper run-out indicator

See"Control Panel", General Settings Guide.

2. [User Tools/Counter] key

User Tools:

Press to enter User Tools mode. These tools allow you to customize default settings. See p.125 "Facsimile Features", *Facsimile Reference <Advanced Features>*.

Counter:

Displays and prints the total number of copied or printed pages.

3. Display Panel

This guides you through tasks and displays the machine status. Messages appear here.

4. [Check Modes] key

Press before pressing the **[Start]** key to check the settings selected for the fax about to be sent.

5. [Program] key

Enables you to program frequently used settings and recall previously programmed settings. See p.113 "Programs", Facsimile Reference <Advanced Features>.

6. [Clear Modes] key

Press to cancel the current settings.

7. Main power indicator

This indicator lights when the main power switch is turned on.

8. On indicator

This indicator lights when the operation switch is turned on.

∰Important

Do not turn off the main power switch while the On indicator stays lighted or is blinking. Neglecting this may damage the hard disk.

🖉 Note

□ If the main power switch is on even when the On indicator is off, the machine will receive a fax message.

9. Operation switch

Press to turn the power on (the On indicator lights). To turn the power off, press this switch again (the On indicator goes off). See p.175 "Power Failure Report", *Facsimile Reference <Advanced Features>*.

🖉 Note

□ The Operation switch does not function when the **[User Tools/Counter/Inquiry]** display is shown.

10. Confidential file indicator

Lights when a message is received into memory with Confidential Reception or Personal Box. See p.32 "Printing a Confidential Message", *Facsimile Reference <Advanced Features>*. See p.36 "Printing Personal Box Messages", *Facsimile Reference <Advanced Features>*.

Blinks when a Memory Lock file is received into memory. See p.34 "Printing a File Received with Memory Lock", *Facsimile Reference <Advanced Features>*.

11. Receive file indicator

Lights when a message other than a Confidential Reception or Memory Lock file is received. See p.79 "Substitute Reception", *Facsimile Reference <Advanced Features>*.

With Store Received File activated, also lights when a message is received. See p.172 "Storing or Printing Received Documents", *Facsimile Reference <Advanced Features>*.

12. Communicating indicator

Lights during transmission or reception.

13. [Facsimile] key

Press to switch to facsimile mode.

- Lights up in yellow Facsimile mode has been selected.
- Lights up in green Printing while in facsimile mode.

• Lights up in red

Lights up whenever a facsimile error occurs. Press the **[Facsimile]** key to display the error message and take appropriate action. See p.50 "When the **[Facsimile]** Key Is Lit in Red".

14. [Start Manual RX] key

Press when Reception mode is set to Manual Reception. See p.40 "Receiving a Fax in Manual Reception Mode".

15. [On Hook Dial] key

Press when manual facsimile reception is set, or using facsimile information services. See p.51 "On Hook Dial", *Facsimile Reference <Advanced Features>*.

16. [Pause/Redial] key

Pause:

Inserts a pause when you are dialing or storing a fax number. A pause cannot be inserted as the first digit. See p.32 "Pause".

Redial:

Press to redial one of the last ten numbers. See p.43 "Redial", *Facsimile Reference <Advanced Features>*.

17. [Tone] key

Press to send tonal signals down a pulse dialing line. See p.33 "Tone".

18. Number keys

Use to dial fax numbers, or enter the number of copies.

19. [#] key (Enter key)

Registers entered numbers or settings.

20. [Clear/Stop] key

Clear:

Cancels entered numbers.

Stop:

Interrupts the current operation (transmission, scanning, copying, or printing).

21. [Start] key

Press to start faxing, or printing reports, or lists.

Reading the Display

The display shows you the machine status, messages, and guides you through operations.


🖉 Note

□ This machine automatically returns to standby mode if you do not use the machine for a certain period of time. You can select the period using the Fax Reset Timer. See "Timer Settings", *General Settings Guide*.

Reading the Display Panel and Using Keys

Display contents will differ depending on installed optional units.

Initial Display

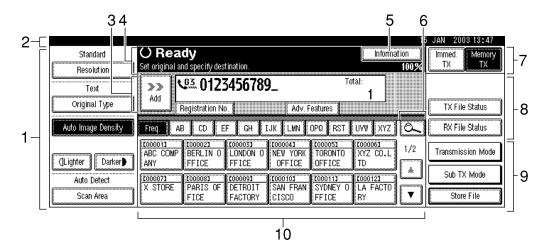

1. Displays the scanning conditions and sizes you can select.

2. Displays the date and time, the name and facsimile number of a destination when transmitting, and the size of the original.

3. Displays the entered number of a destination. When adding destinations using the number keys, press [Add].

4. Displays messages and the machine status.

5. Press to display various information about transmission.

6. Allows you to search for a destination by destination name or fax number.

ZDPS131E

7. Switches transmission mode between Memory Transmission and Immediate Transmission.

8. Displays Quick Operation Keys set for often used functions. [TX File Status] and [RX File Status] are preset.

9. Displays various functions for transmitting.

10. Displays the Destination lists of programmed destinations.

Destination List

Freq. AB CD	والمستسبية المستسبية		OPQ RST	UVW XYZ	8
ABC COMP BERLIN	10000033 10 LONDON 0 FFICE	1000043 NEW YORK OFFICE	TORONTO OFFICE	<u>1000061</u> XYZ CO.L TD	1/2
100001333 #144 [0000083] ALL BRAN PARIS CHES FICE		<u>100010]</u> SAN FRAN CISCO	<u>1000113</u> SYDNEY O FFICE	E000143 → B→ MAIN OFF ICE	V
1				2	ZHPX430E

1. Appears on Quick Dial keys programmed with a group of destinations.

2. Appears on Quick Dial keys programmed as a transfer station.

Standby Display

While the machine is in standby mode (immediately after the **[Facsimile]** key is pressed or after the **[Clear Modes]** key is pressed), the following display appears.

Memory Transmission (initial display)

		15 JAN 2003 13:49
Standard	O Ready Information	Immed. Memory
Resolution	Set original and specify destination. 100	
Text	CGX _ Total:	
Original Type	Registration No. Adv. Foolures	TX File Status
Auto Image Density	Freq. AB CD EF GH IJK LMN OPO RST UVW XYZ 🕰	RX File Status
(]Lighter Darker)	E000013 E000023 E000033 E000043 E000053 E000053 <t< td=""><td>Transinission Mode</td></t<>	Transinission Mode
Auto Detect	C000073 C000083 C000093 C000103 C000113 C000123	
Scan Area	X STORE PARIS OF DETROIT SAN FRAN SYDNEY O LA FACTO	Store File

Immediate Transmission

Standard	() Ready			Information	السس	Immed. Memory
Resolution	Set original and specify des	tination.	Τα	tal:		
Original Type	Registration N	0.	Adv. Feelures	0		TX File Status
Auto Image Density	Freq. AB CD E	F GH IJK		UVW XYZ 🕻		RX File Status
(Lighter Darker)	C000013 ABC COMP BERLIN O ANY FEICE	LONDON O NE	00043 000053 EW YORK TORONTO DEFICE DEFICE	ATZ 60.L	/2	Transmission Mode
Auto Detect	1000073 1000083	1000001 L0	00103 2000113	[00012]		Sub TX Mode
Scan Area	X STORE PARIS OF FICE		AN FRAN SYDNEY O ISCO FFICE	LA FACTO RY	¥	Store File

🖉 Note

T To return to standby mode, do one of the following:

- If you have placed the original in the optional Auto Document Feeder (ADF) and have not pressed the **[Start]** key, remove the original.
- If you have not placed an original, press the [Clear Modes] key.
- If you are in User Tools mode, press the **[User tools/Counter]** key.

Communication Display

While communicating, the machine status is displayed.

Memory Transmission

		A4->A4 P.002	1	5 JAN 2003 16:54
Standard	O Ready	Change/Stop TX File	Information	Immed. Memory
Resolution	Set original and specify destinat	ion.	99%	TX TX
Text	Registration No.	1	iotal: O	
Original Type	Registration No.			TX File Status
Auto Image Density	Freq. AB CD EF	GH IJK LMN OPQ RST	UVW XYZ 🕰	RX File Status
(Lighter Darker)	ABC COMP LONDON 0 BE	0023 000043 000053 RLIN 0 NEW YORK TORONTO ICE 0EFICE 0EFICE	TD 1/2	Transmission Mode
Auto Detect	[000007] [00008] [00	0093 2000103 2000113		Sub TX Mode
Scan Area	The store and the store and the	TROIT SAN FRAN SYDNEY (CTORY CISCO FFICE	RY	Store File

Reception

		Receiving	15 JAN 2003 16:54
Standard	() Ready	Information	Immed. Memory
Resolution	Set original and specify destination.	99%	
Text	L ⁰³ _	Total:	
Original Type	Registration No.		TX File Status
Auto Image Density	Freq. AB CD EF GH I.	JK LMN OPQ RST UVW XYZ 🕰	RX File Status
(Lighter Darker)	C000013 C000033 C000023 ABC COMP LONDON 0 BERLIN 0 ANY FFICE FFICE	C000043 C000053 C000063 1/2 NEW YORK TORONTO XYZ CO.L 1/2 OFFICE OFFICE TD III IIII	Transmission Mode
Auto Detect	1000073 1000083 1000093		Sub TX Mode
Scan Area	X STORE PARIS OF DETROIT FICE FACTORY	SAN FRAN SYDNEY O LA FACTO CISCO FFICE RY	Store File

🖉 Note

- □ Even when the machine is using memory to fax a message or receive a message, you can still scan another original into memory. See p.73 "Dual Access", *Facsimile Reference <Advanced Features>*.
- □ Even when the machine is being used as a copier, printer, or scanner, the sender name or number will appear for received faxes.

Immediate Transmission

		A4->A4	P.003		1	5 JAN 2003 16:54
Standard	Trans	smitting	Stop Transmission	м	emory:	Immed. Memory
Resolution		-			99%	TX IX
Text		V ^{G3} 0123456789		18	Dest.	
TEAL	3				sets	
Original Type						
Auto Image Density						Transmission Mode
(Linhter Darker)						
						Sub TX Mode
Auto Detect						Sub TX Mode
Stati Anas						Store File
<u>i</u>						

User Code Entry Display

1

When the following message appears on the display, User Code Management is
active. Enter a user code to deactivate User Code Management.

Standard Resolution	O Ready Set original and specify destination.	Information	D JAN 2003 13:47
Text Original Type Auto Image Density	Enter user code with Number keys, then press .		TX File Status RX File Status
(Lighter) Darker) Auto Detect Scan Area		Clear (#)	Transmission Mode Sub TX Mode Store File

The machine can be set up so that no one can use it without entering a user code. This prevents unauthorized people from sending fax messages and helps track the activity of each user or department.

🖉 Note

- □ You can specify a user code with "System Settings". See the *General Settings Guide*.
- Even when User Code Management is on, you can still receive and print fax messages as normal.

1 Enter a user code of up to eight digits using the number keys.

2 Press [**#**].

🖉 Note

□ If an unprogrammed user code is entered, the display returns to that of step **1**.

2. Faxing


Transmission Modes

There are two types of transmission:

- Memory Transmission
- Immediate Transmission


Memory Transmission

Transmission starts automatically after the original has been stored in memory. It is a convenient method for when you are in a hurry and want to take the document away with you. You can also send the same original to several destinations (broadcasting).

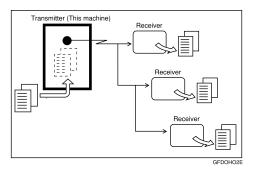

Immediate Transmission

Immediately dials the destination number, and while reading the original, sends it. It is very convenient when you want to send an original quickly or when you want to check the destination you are sending to. When using this type of transmission, the original is not stored in memory. You can only specify one address.

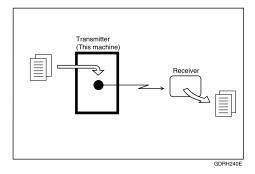


∰Important

□ If the machine is switched off for more than one hour, all files stored in memory are deleted. If files are deleted, once the machine is switched on again, a Power Failure Report will be printed. On this report, you can see which files were deleted. See p.175 "Power Failure Report", *Facsimile Reference <Advanced Features>*.

Switching between Memory Transmission and Immediate Transmission

Check the display to see which mode is currently active. You can change transmission mode by pressing [Immed. TX] or [Memory TX].

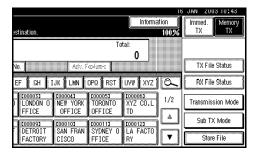

🔗 Note


- □ You can select the transmission mode that is operative when the machine is turned on with [Memory/Immed. Transmission Switch] under [Gen. Settings/Adjust]. See p.130 "General Settings/Adjustment", Facsimile Reference <Advanced Features>.
- □ You can have the machine return to default mode after each transmission using [Scan End Reset] under [Gen. Settings/Adjust]. See p.130 "General Settings/Adjustment", Facsimile Reference <Advanced Features>.

Placing Originals

You can place the originals either in the optional Auto Document Feeder (ADF) or on the exposure glass. Some types of originals are unsuitable for the ADF, so they must be placed on the exposure glass.

Which way you place the original depends on its size and whether you are using the ADF or the exposure glass. See p.17 "Original sizes difficult to detect".


How to place A4, B4 JIS (Japanese Industrial Standard), A3, 8¹/₂"×11", 11"×14", and 11"×17" size originals

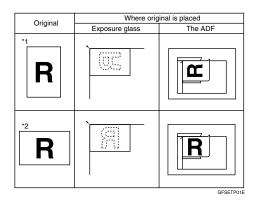

🖉 Note

- When you place originals as shown in the above illustration, the fax header will be printed on received faxes at the destination as follows:
 - *1 On the top of the fax
 - *2 On the left side of the fax

How to place A5 and B5 JIS size originals

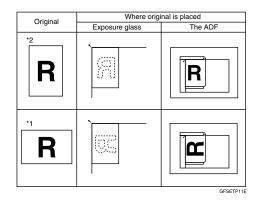

Limitation

A5 size documents are not detected on the exposure glass. Place A5 size documents in the ADF.

🖉 Note

- When you place originals as shown in the above illustration, the fax header will be printed on the received faxes at the destination as follows:
 - *1 On the top of the fax
 - *2 On the left side of the fax

Limitation

If you place A5 size documents on the exposure glass, they will not be detected. A5 size documents placed in the ADF are sent as A4 size. See p.17 "Original sizes difficult to detect".

🖉 Note

- □ When sending a fax, the image output at the other end depends on the size and orientation of paper used in the receiver's terminal. If the receciver does not use paper of the same size and orientation as that of the original, the fax image may be reduced in size, trimmed at both edges, or divided into two or more sheets. When sending an important original, we recommend you ask the receiver about the size and orientation of the paper used in their terminal.
- When sending an original of irregular (i.e. custom) size or part of a large original, you can specify the scan area precisely. See p.14 "Setting a Scan Area".
- Custom size documents are scanned as regular size documents, so the receiver may find extra blank margins or edges of images missing. If you specify a scan area, only that area will be scanned regardless of actual document size.
- Make sure that all ink, correcting fluid etc., has completely dried before placing your original. If it is still wet, the exposure glass will be marked and those marks will appear on the received image.
- □ If you place an A4 size original in the portrait orientation, the machine rotates the image by 90 degrees before sending. See p.73 "Transmission with Image Rotation", Facsimile Reference <Advanced Features>.
- □ You can send the first pages from the exposure glass then the remaining pages from the ADF. After you have removed the last page from the exposure glass, insert the remaining pages in the ADF, and then press the **[Start]** key.

₽ Reference


For how to place two-sided documents, see p.56 "Two-Sided Transmission (Double-Sided Transmission)", *Facsimile Reference <Advanced Features>*.

Placing a Single Original on the Exposure Glass

Place originals that cannot be placed in the optional Auto Document Feeder (ADF), such as a book, on the exposure glass one page at a time.

Lift the exposure glass cover or the ADF by at least 30 degrees.

- If you do not lift the ADF by at least 30 degrees, the original size will not be detected.
- **2** Place the original face down and align its upper left corner with the reference mark at the upper left corner of the exposure glass.

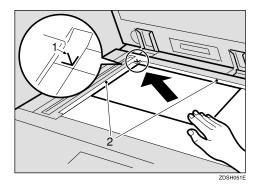

- 1. Positioning mark
- 2. Scale

3 Lower the ADF.

🖉 Note

When setting a bound original, the received image may contain some black areas. To reduce this effect, hold down the original to prevent the bound part from rising.

Bound original page order

When setting bound originals (books, magazines, etc.), you can select to have either the left page or right page sent first. See p.55 "Book Fax", *Facsimile Reference <Advanced Features>*.

🖉 Note

□ You can select whether the left page or right page is sent first. See p.147 "Changing the User Parameters", Facsimile Reference <Advanced Features> (switch 06, bit 6).


Placing Originals in the Optional Auto Document Feeder (ADF)

Use the ADF to scan in a stack of originals in one operation. The ADF can handle both one-sided and two-sided originals.

Limitation

- Place all the originals to be sent in a single stack.
- You cannot place originals in the ADF one page at a time or in sheaves.

- □ The maximum document length is 1200 mm (47").
- □ If you send documents longer than 420 mm (17"), specify the area to be scanned. If you send such documents frequently, select Long Document mode with the User Parameters. If a jam occurs, the document might be damaged because scanning will not stop. See p.14 "Setting a Scan Area". See p.147 "Changing the User Parameters", Facsimile Reference < Advanced Features> (switch 14, bit 1).
- Documents longer than 800 mm (32") must be sent by memory transmission (immediate transmission is not possible).
- □ If your original is bent or folded, flatten it before you place it.
- □ When sending thin originals, place them on the exposure glass.
- □ If a paper jam occurred, press the **[Clear/Stop]** key, and then slowly remove the original.
- □ You can check information about the sizes and number of originals that can be placed in the ADF. See p.181 "Acceptable Types of Originals", Facsimile Reference <Advanced Features>.
- **1** Adjust the document guide to match the size of the originals.

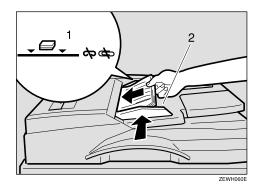

- **1.** Limit mark
- 2. Document guide

Originals unsuitable for the optional Auto Document Feeder (ADF)

Do not place the following types of originals in the ADF because they may be damaged. Place them on the exposure glass instead.

- Originals in unacceptable sizes (See p.181 "Acceptable Types of Originals", *Facsimile Reference <Advanced Features>*.)
- Originals containing staples or clips
- Perforated or torn originals
- Curled, folded, or creased originals
- Pasted originals
- Originals with any kind of coating, such as thermosensitive paper, art paper, aluminum foil, carbon paper, or conductive paper
- Originals with index tabs, tags, or other projecting parts
- Sticky originals, such as translucent paper
- Thin and soft originals

- Originals of inappropriate weight
- Originals in bound form, such as books
- Transparent originals, such as OHP transparencies or translucent paper

Setting a Scan Area

Normally, a placed document is scanned according to the automatically detected size. If a scan area is specified, the document is scanned accordingly. Thus, documents can be sent without extra space or blank margins.

Auto Detect

The placed document is scanned according to the automatically detected size.

🖉 Note

If the machine cannot detect the original size, a confirmation message appears. Replace the original and make the copy again.

Regular

The placed document is scanned according to specified size regard-less of actual size.

The sizes that can be specified are A4 \square \square , B4 JIS \square , A3 \square , 8¹/₂"×11" \square \square , 11"×14" \square , and 11"×17" \square .

Area

Enter the area to be scanned. Only the area in the specified size is scanned regardless of the actual size of a placed document. See p.140 "Programming and Changing a Scan Size", *Facsimile Reference <Advanced Features>*.

Mixed Original Sizes

Select this to individually scan the size of originals loaded in the ADF. For example, when A4 and B4 JIS size originals are sent together, usually all are sent using the size of the first original. By selecting Mixed Original Sizes, the machine scans and sends each document according to its size.

- 🖉 Note
- To cancel the selected scan area, select [Auto Detect]. See p.16 "Specifying Auto Detect".
- When using the Mixed Original Sizes, the machine sends the originals by memory transmission.
- When using the Mixed Original Sizes, rotation transmission is disabled. See p.73 "Transmission with Image Rotation", Facsimile Reference <Advanced Features>.

Place the originals, and then select any scan settings you require.

🖉 Note

- When placing different size originals into the ADF, adjust the document guide to the largest original.
- Small-size originals may be sent at a slight slant since they do not match the document guide.

2 Press [Scan Area].

Standard	() Ready				
Resolution	Set original and specify destination.				
Text	€ ³ _				
Original Type	Registration No. Adv. Foxiliares				
Auto Image Density	Freq. AB CD EF GH IJK LMN OPQ				
(]Lighter Darker	C000013 C000023 C000033 C000043 C000043 ABC COMP BERLIN 0 LONDON NEW YORK TORDI ANY FFICE FFICE OFFIC OFFIC OFFIC OFFIC				
Auto Detect Scan Area	E000073 E000083 E000093 E000103 E0001 X STORE PARIS OF FICE DETROIT FACTORY SAN FRAN CISCO FFICI				

The Scan Area menu is shown.


3 Select the scan area.

🖉 Note

To cancel the selected scan area, select [Auto Detect]. See p.16 "Specifying Auto Detect".

Specifying standard sizes


Press [Regular].

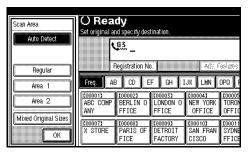

2 Press the size of the originals to be sent, and then press [OK].

Regular	() Ready
A4C A4C	Set original and specify destination.
B4 JISCO A3CO	<u><u><u></u></u></u>
8 1/2 x 11	Select Line Adv. Fasiures
81/2×11 @	Freq. 001-240 241-480 481-720 721-9
8 1/2 × 14/7	[0001] 65-1 [0002] 63* [0003] 63* [0004] 63* [0005]
11 x 17m	ABC COMP BERLIN O LONDON O NEW YORK TORON ANY FFICE FFICE OFFICE OFFIC
	100072 63* 100082 63* 100092 63* 100102 63* 100112
Cancel OK	X STORE PARIS OF DETROIT SAN FRAN SYDNE FICE FACTORY CISCO FFICE

3 Press [OK].

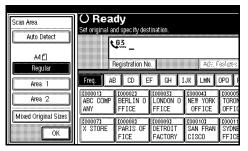

The selected size is shown above the highlighted **[Scan Ar-ea]**.

Specifying programmed sizes

Press [Area 1] or [Area 2].

Scan Area	O Ready Set original and specify destination.				
Auto Detect		<u>G3</u>			
Regular		Registration No).	Adv. F	sdure:
Area 1	Freq. AE	B CD E	F GH I	JK LMN	OPQ F
Area 2		2000023 BERLIN 0	1000033	1000041 NEW YORK	100005
	ANY	FFICE	FFICE	OFFICE	OFFIC
Mixed Original Sizes	£000073	[00008]	[00009]	C 00010 3	000011
ОК	X STORE	PARIS OF FICE	DETROIT FACTORY	SAN FRAN CISCO	SYDNE

2 Press [OK].

Scan Area	() Ready					
Auto Detect	Set original and specify destination.					
t 297 m ↔ Auto Detect		<u>63</u>				
Regular	Registration No. Adv. Foolures					
Area 1	Freq. AE	CD E		JK LMN	OPQ	
Area 2	ABC COMP	ECOCOCES BERLIN O	<u>1000033</u> London 0	LOOOO41 New York	<u>000005</u> TORO	
Mived Original Sizes	ANY	FFICE	FFICE	OFFICE	OFFIC	
INITAEU OFIGINAL SIZES	X STORE	COODORD PARIS OF		COODIDI SAN FRAN	1000011	
ОК	A STURE	FICE	FACTORY	CISCO	FFICE	

The selected scan area is shown above the highlighted **[Scan Area]**.

Specifying Mixed Original Sizes

Press [Mixed Original Sizes].

		_			
Scan Area	() Ready				
Auto Detect	Set original and specify destination.				
Auto Detect		<u>63</u> _			
Regular	F	Registration No).	Adr. F	esi ures
	Freg. AF	B CD E	F GH T	IV THAN	
Area 1					
Area 2	2000013	£000023	£000031	£000043	100005
	ABC COMP	BERLIN U	LUNDUN U	NEW YORK	TURUP
E	ANY	FFICE	FFICE	OFFICE	OFFIC
Mixed Original Sizes	[C000073	000083	C000093	C 000103	000011
· · · · · · · · · · · · · · · · · · ·	X STORE	PARIS OF	DETROIT	SAN FRAN	SYDNE
ОК		FICE	FACTORY	CISCO	FFICE

Press [OK].

Scan Area	O Rea Set original an		tination		
Auto Detect		<u>63</u>	(Inactor).		
Regular	E	Registration No).	Adv. F	odure:
Area 1	Freq. AB	B CD E	F GH I	JK LMN I	OPQ F
Area 2	ABC COMP	COODO23 BERLIN O FFICE	LONDON 0 FFICE	COODO43 NEW YORK	TORON
Mixed Original Sizes	E000073	[00008]	[000093	000101	000011
ОК	X STORE	PARIS OF FICE	DETROIT FACTORY	SAN FRAN CISCO	SYDNE

"Mixed original sizes" is shown above the highlighted **[Scan Area]**.

Specifying Auto Detect

Press [Auto Detect].

I	Scan Area	() Ready						
	Auto Detect	Set original and specify destination.						
	A4 🗂	۲	eqistration No).	Adv 5	adument		
	Regular Area, 1	Freq. A		F GH I	JK LMN	OPQ F		
Ì	Area 2	ABC COMP ANY	<u>COOOO23</u> BERLIN O FFICE	COODOSI LONDON O FFICE	COODO43 NEW YORK OFFICE	100005 TORON OFFIC		
	Mixed Original Sizes	2000073 X STORE	TOOOO83 PARIS OF FICE	COODO93 DETROIT FACTORY	COOO103 SAN FRAN CISCO	COOD11 SYDNE FFICE		

2 Press [OK].

Scan Area	() Rea					
Auto Detect	Set original ar		tination.			
	۲. ۲	63				
Regular	F	Registration No		Ad∀. F	siere:	
Area 1	Freq. AB CD EF GH IJK LMN OPQ F					
Area 2	ABC COMP	1000021 BERLIN 0		LOOOO41 NEW YORK	100005	
	ANY	FFICE	FFICE	OFFICE	OFFIC	
Mixed Original Sizes	1000073	LOOOOBI PARIS OF	LOOOO91	COODIDI SAN FRAN	200011 SYDNE	
ОК		FICE	FACTORY	CISCO	FFICE	

"Auto Detect" is shown above **[Scan Area]**.

Dial a destination and press the [Start] key.

Original sizes difficult to detect

The machine finds it difficult to detect the size of the following kinds of originals. If this happens, the receiving machine may not select print paper of the correct size.

- Documents placed on the exposure glass of sizes other than those listed in the table below
- Originals with index tabs, tags, or protruding parts
- Transparent originals, such as OHP transparencies or translucent paper
- Dark originals with dense text or drawings
- Originals which partially contain solid printing
- Originals which have solid printing around their edges
- Originals with glossy surfaces
- Bound originals of more than 10 mm (0.3") in thickness, such as books.

The following paper sizes are automatically detected in facsimile mode.

Metric Version

Paper size where original is placed	A3D	8 ¹ / ₂ "×13" (F4)	B4 JIS	A4 🖓 🗗	B5 JIS ₽₽	A5 🕽 🗗
Exposure glass	0	0	0	0	0	×
ADF	0	0	0	0	0	0

Inch Version

Paper size where original is placed	11"×17" D	8 ¹ / ₂ "×14"□	8 ¹ /2"×11"	5 ¹ / ₂ "×8 ¹ / ₂ "
Exposure glass	0	0	0	×
ADF	0	0	0	0

O - Auto detect

 \times - Unable to auto detect

Memory Transmission

In Memory Transmission mode, after you press the **[Start]** key, the machine does not dial the destination until all pages of your fax message have been scanned into memory (in contrast to Immediate Transmission, where the number is dialed first and pages are scanned and sent one by one).

Memory Transmission is useful because:

- You can take your original away from the machine without having to wait too long.
- While your message is being sent, other people can use the machine.
- You can send the same message to more than one place in a single operation (broadcasting).

∰Important

- □ If there is a power failure (the main power switch is off) or the machine is unplugged out for more than one hour, all the documents stored in memory are deleted. As soon as the main power switch is turned on, the Power Failure Report is printed to help you identify deleted files. If you turn only the operation switch off, documents are not deleted. See p.175 "Power Failure Report", Facsimile Reference <Advanced Features>.
- We recommend you call the receiver and confirm with them when sending important messages.

Limitation

If memory is full (0% appears on the display), Memory Transmission is disabled. Use Immediate Transmission instead.

- Maximum number of destinations per Memory Transmission: 500.
- Combined total number of destinations that can be programmed:
 500 (2,000 with the optional fax function upgrade unit).
- □ After the total number of programmed fax numbers exceeds 500 (2,000 with the optional fax function upgrade unit), you can perform only Immediate Transmission.
- □ The number of programs you can store is 400. You can store 800 programs with the optional fax function upgrade unit.
- The number of pages you can store in memory depends on the original images and the scan settings. You can store up to 320 standard pages (ITU-T #4 chart, Resolution: Standard, Original Type: Text). You can store up to 2,240 standard pages, with the optional expansion memory installed.
- □ You can have the machine set to Memory Transmission mode or Immediate Transmission mode right after the power is turned on or the [Clear Modes] key is pressed. See p.130 "General Settings/Adjustment", Facsimile Reference <Advanced Features>.
- □ You can have the machine return to the default transmission mode (Memory Transmission or Immediate Transmission) after every transmission. You can change this so that the desired setting is maintained. See p.130 "General Settings/Adjustment", Facsimile Reference <Advanced Features>.

1 Make sure that Memory Transmission is selected.

			JAN 2003 10:43
	Total: 0		TV File Order
No. Adv. Ex EF GH IJK LMN O	Aures PQ RST UVW XYZ	اهـ	TX File Status RX File Status
D LONDON O NEW YORK	0000053 0000063 TORONTO XYZ CO.L OFFICE TD	1/2	Transmission Mode
F DETROIT SAN FRAN	COODII3 COODI23 SYDNEY O LA FACTO FFICE RY	j 🌢	Sub TX Mode Store File

If it is not, press [Memory TX].

2 Place the original.

🖉 Note

- You can send the first few pages from the exposure glass then the remaining pages from the ADF. After you remove the last page from the exposure glass, you have 60 seconds to insert the remaining pages in the ADF.
- Note that you cannot place pages on the exposure glass after you have started using the ADF.
- □ The original can be placed either in the ADF or on the exposure glass, until the **[Start]** key is pressed.

✓ Reference

p.11 "Placing Originals"

B Make the settings you require.

Standard	() Rea	dv			
Resolution	Set original a		tination.		
Text	۲	63			
Original Type	L. F	Registration No).	Ady, F	adores.
Auto Image Density	Freq. A	B CD E	F GH I	JK LMN	OPQ F
(Lighter Darker)	ABC COMP ANY	COODO23 BERLIN O FFICE	LOODO31 LONDON O FFICE	COODO43 NEW YORK OFFICE	<u>100005</u> TORON OFFIC
Auto Detect Scan Area	2000073 X STORE	COODOSI PARIS OF FICE	<u>COOOO93</u> DETROIT FACTORY	<u>COOO103</u> SAN FRAN CISCO	COOD11 SYDNE FFICE

Reference

p.27 "Scan Settings"

4 Dial a destination.

O Rea Set original an	Informa					
	63		arter S		al: O	
Freq. AE	<u>,</u>	4 4	4 4	OPQ RST	UVW XYZ	a_
ABC COMP ANY	1000023 BERLIN O FFICE	LONDON 0 FFICE	LOOOO43 NEW YORK OFFICE	TORONTO OFFICE	<u>000063</u> XYZ CO.L TD	1/2
2000073 X STORE	COODOBJ PARIS OF FICE	COODO93 DETROIT FACTORY	COODIDI SAN FRAN CISCO	COOO112 SYDNEY O FFICE	LA FACTO RY	▼

🔗 Note

□ If you make a mistake, press the **[Clear/Stop]** key, and then enter the correct number.


Reference

- p.32 "Dialing"
- p.33 "Using Destination Lists"

p.43 "Chain Dial", Facsimile Reference <Advanced Features>

p.43 "Redial", Facsimile Reference <Advanced Features>

• When sending the same orignal to several destinations (broadcasting), press [Add] to specify the destinations.

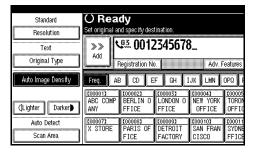

- You do not have to press [Add] when adding a destination using the destination list.
- If you do not want to do a broadcast transmission, proceed to step 2.

6 Specify a destination.

O Rea					Informa	
	G3	tination.		Tot	tal:	1009 A Prev.
F	Registration N).	Adv. F	isdures 🚛		¥ Next
Freq. AB	B CD E	F GH I	UK LMN	OPQ RST	UVW XYZ	الص
ABC COMP	1000021 BERLIN 0	LONDON O	LOOCO43 NEW YORK	TORONTO	1000061 XYZ CO.L	1/2
E000073	FFICE	FFICE	OFFICE	OFFICE	ID [00012]	
X STORE	PARIS OF FICE	DETROIT FACTORY	SAN FRAN CISCO	SYDNEY O FFICE	LA FACTO RY	▼

🖉 Note

If you want to specify another destination, repeat steps **5** and **6**.

7 Press the **[Start]** key.

🖉 Note

Do not lift the ADF during scanning.

After scanning, the standby display appears.

Sending originals using the exposure glass

- Place the first page of your original face down on the exposure glass.
- Dial a destination.
- ③ Make the scan settings you require.
- ④ Press the **[Start]** key. The machine starts scanning.
- ⑤ Place the next original on the exposure glass within 60 seconds after the machine has finished scanning the first original.

6 Repeat steps (3) to (5) for all originals.



⑦ Place the last original, and then press [#].

Checking the transmission settings

You can check the transmission settings (e.g. destination and transmission mode) on the display.

① Press the **[Check Modes]** key.



The following display appears.

		15	JAN 200314:26
estination.	j. kitiri	100%	inmed. Memory TX TX
3456789	Change	Dest. 1 sets	
	. ::: 		Send Later 23:00
			Transmission Mode
			Book fax
			Sub TX Mode
			Store File

② After checking the settings on the display, press the [Check Modes] key.

The display before the **[Check Modes]** key was pressed appears.

.

Canceling a Memory Transmission

Before the Original Is Scanned

Use this procedure to cancel a transmission before pressing the **[Start]** key.

Press the [Clear Modes] key.




🖉 Note

When documents are placed in the ADF, you can cancel transmission simply by removing them.

While the Original Is Being Scanned

Use this procedure to cancel a transmission after pressing the **[Start]** key.

Press the [Clear/Stop] key.

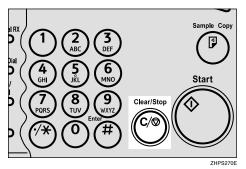

The machine stops scanning.


🖉 Note

- □ You can also cancel scanning by pressing **[Stop Scanning]**.
- □ Scanning may be completed while you are performing the cancel operation.

While the Original Is Being Transmitted

🖉 Note

- □ If the transmission finishes while you are carrying out this procedure, it will not be canceled.
- If you cancel a message while it is being sent, the transmission is halted as soon as you finish the cancellation procedure. However, some pages of your message may have already been sent and received at the other end.
- Press the [Clear/Stop] key.

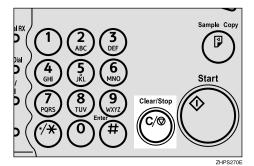

- You can also cancel a Memory Transmission by pressing [Change/Stop TX File].
- **2** Select the file you want to cancel.

Select file to stop	transmission	
Transmission Mode	Destination	Dest. (
Memory TX	LONDON OFFICE	Ttl 1
	Transmission Mode	

🖉 Note

□ If the desired file is not shown, press [▲ Prev.] or [▼ Next] to find it.

Vialling

B Press [Stop Transmission].



Select file to stop transmission

anomics ion Mode Destination Dest Orn File Nn Status

Transmission being stopped.
Scanned files will be deleted.
Is it OK?

File No.: 0015

G3. LONDON OFFICE

Save
Stop Transmission

🔗 Note

□ To cancel another file, repeat steps 2 and 3.

4 Press [Exit].

stination	Dest		Org.	File No	Status	File List
TROIT FACTORY	Ttl	1	1 shts	0030	Standby	Files under TX
FACTORY	Ttl	1	1 shts	0029	Standby	L
RONTO OFFICE	Ttl	1	1 shts	0028	Standby	Print List
STORE	Ttl	1	1 shts	0027	► Trnsmtg.	
C COMPANY	Ttl	1	1 shts	0026	Standby	

The standby display appears.

Before the Transmission Is Started

Use this procedure to cancel a transmission after the original has been scanned.

Press [Change/Stop TX File].

() Rea			Change/S	top TX File	Informa		
٦	63	e glass.		To		999	
Registration No. Adv. Factures							
LITEQ. AL	ECODOC21 BERLIN O	LONDON O	COODO43 NEW YORK	COODOSI TORONTO	C000061 XYZ CO.L TD	1/2	
X STORE	TOOOOSI PARIS OF FICE	DETROIT FACTORY	CISCO	COOO113 SYDNEY O FFICE	1000123 LA FACTO RY	 ▼	

The list of stored files being transmitted or waiting for transmission appears.

2 Select the file you want to cancel.

Change/Stop TX File	Select file to stop	transmission	
Scanning Date/Time	Transmission Mode	Destination	Dest. Or
15Jan. 14:52	Memory TX	DETROIT FACTORY	Ttl 1
15Jan. 14:52	Memory TX	LA FACTORY	TtI 1
15Jan. 14 : 52	Memory TX	TORONTO OFFICE	Ttl 1
15Jan. 14:52	Memory TX	X STORE	Ttl 1
15Jan. 14:51	Memory TX	ABC COMPANY	Ttl 1
Check/Change Set	tings Print File	Stop Transmis	sion

🖉 Note

□ If the desired file is not shown, press [▲ Prev.] or [▼ Next] to find it.

3 Press [Stop Transmission].



🔗 Note

□ To cancel another file, repeat steps **2** and **3**.

4 Press [Exit].

				Dialli	ng 1	5 JAN 200314:53	
mission							
stination	Dest		Org.	File No	Status	- File List	
TROIT FACTORY	Ttl	1	1 shts	0030	Standby	Files under TX	
FACTORY	Ttl	1	1 shts	0029	Standby		
RONTO OFFICE	Ttl	1	1 shts	0028	Standby	Print List	
STORE	Ttl	1	1 shts	0027	► Trnsmtg.]	
C COMPANY	TtI	1	1 shts	0026	Standby]	
Stop Transmission Exit							

The standby display appears.

2

Immediate Transmission

With Immediate Transmission, when you press the **[Start]** key, the fax number is dialed immediately. The message is scanned and transmitted page by page without being stored in memory. This contrasts with Memory Transmission which scans all pages into memory before dialing the destination.

Immediate Transmission is useful if you want immediate confirmation that the message is being sent to the correct destination (just check the other terminal's Own Name or Own Fax Number on the control panel during transmission).

🖉 Note

- You cannot send the same document to multiple destinations (broadcasting). Memory Transmission allows this function.
- □ You can have the machine set to Memory Transmission mode or Immediate Transmission mode right after the power is turned on. See p.130 "General Settings/Adjustment", Facsimile Reference <Advanced Features>.
- □ You can have the machine return to the default transmission mode (Memory Transmission or Immediate Transmission) after every transmission. You can change this so that the desired setting is maintained. See p.130 "General Settings/Adjustment", Facsimile Reference <Advanced Features>.

1 Make sure that Immediate Transmission is selected.

				13) JAN 200314:58
estination.			Informa		Immed. Memory TX TX
		To	tal: O		
No.	Adv. F	aaiures			TX File Status
		OPQ RST	UVW XYZ	<u>8</u>	RX File Status
0000033 1 LONDON 0 FFICE	COODO41 NEW YORK	TORONTO	1000061 XYZ CO.L	1/2	Transmission Mode
[00000]	0FFILE	0FF1CE	10 [00012]		Sub TX Mode
F DETROIT FACTORY	SAN FRAN CISCO	SYDNEY O FFICE	LA FACTO RY	T	Store File

🖉 Note

□ If it is not selected, press [Immed. TX].

2 Place the original.

🖉 Note

- You can scan a few pages of your original from the exposure glass and the remainning pages from the ADF. When you have finished scanning from the exposure glass, place the remainning pages in the ADF and press the [Start] key within ten seconds.
- □ The original can be placed whenever, before the **[Start]** key is pressed.
- Place the original on the exposure glass or in the ADF. To send two or more pages using the exposure glass, set them one page at a time.

p.11 "Placing Originals"

3 Select the scan settings you require.

Standard	() Rea				
Resolution	Set original a	nd specify des	tination.		
Text	٩	63			
Original Type	F	Registration No).	Adv. F	sdure:
Auto Image Density	Freq. AB	B CD E	F GH I	JK LMN	OPQ F
(]Lighter Darker	LOOOO13 ABC COMP ANY	E000023 BERLIN O FFICE	LOODOSI LONDON O FFICE	COODO43 NEW YORK OFFICE	100005 TORON OFFIC
Auto Detect Scan Area	X STORE	COODOBI PARIS OF FICE	COODO93 DETROIT FACTORY	E000103 SAN FRAN CISCO	COOD11 SYDNE FFICE

p.27 "Scan Settings"

4 Dial a destination.

O Ready							
Set original and specify destination. 10							
>>> Add	<u>₿</u> 3 0123	3456789)_	To	lati.		
Registration No. Adv. Features							
Freq. AB CD EF GH IJK LMN OPO RST UVW XYZ 🕰							
ABC COMP	[00002] BERLIN 0	1000033 London 0	COOOO43 NEW YORK	COOOOSCI TORONTO	<u>000061</u> XYZ CO.L	1/2	
ANY	FFICE	FFICE	OFFICE	OFFICE	TD	*	
1000073 X STORE	TOOOOSI PARIS OF FICE	COOOO93 DETROIT FACTORY	<u>COOO101</u> SAN FRAN CISCO	COOOTID SYDNEY O FFICE	1000123 LA FACTO RY		

🖉 Note

□ If you make a mistake, press the **[Clear/Stop]** key, and then enter the correct number.

Reference

p.32 "Dialing"

p.43 "Chain Dial", Facsimile Reference <Advanced Features>

p.43 "Redial", Facsimile Reference <Advanced Features>

5 Press the **[Start]** key.

🖉 Note

Do not lift the ADF during scanning.

After transmission, the standby display appears.

.

Sending originals using the exposure glass

- Place the first page face down on the exposure glass.
- Dial a destination.
- ③ Make the scan settings you require.
- ④ Press the **[Start]** key.
- ⑤ Place the next original on the exposure glass within 10 seconds after the machine has finished scanning the first original.
- Repeat steps ③ to ⑤ for all origi-nals.

Trans	smit	ting]			⊘ Sto	p Transmi:	ssion	Memory
Place next	original	within	9 se	c., then pr	ress [Starl	t]. If none	, press (#).	1009
Original: 1	L <u>G</u> <u>3</u>	057	6340	22					Dest. 1 set
a									
٣									

⑦ Place the last original, and then press [①].

Canceling an Immediate Transmission

Before You Have Pressed the [Start] Key

Press the [Clear Modes] key.




🖉 Note

When the original is placed in the ADF, you can also cancel an Immediate Transmission by removing the original.

After You Have Pressed the [Start] Key

1 Press the **[Clear/Stop]** key, and then remove the original.

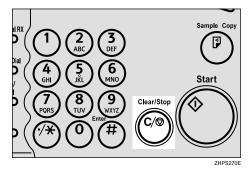

- You can also cancel an Immediate Transmission by pressing [Stop Transmission].
- □ If the transmission finishes while you are carrying out this procedure, it will not be canceled.

2

Scan Settings

You may want to send many different types of fax messages. Some of these may be difficult to reproduce at the receiver's end. However, your machine has three settings that you can adjust to help you transmit your document with the best possible image quality.

Resolution:

Standard, Detail, Super Fine (optional)

Original Type:

Text, Text/Photo, Photo

Image Density (Contrast):

Auto Image Density, Manual Image Density (seven levels)

Resolution

Images and text are scanned into the machine by converting them to sequences of dots. The density of the dots determines the quality of the image and how long it takes to transmit. Therefore, images scanned at high resolution (Super Fine) have high quality but transmission takes longer. Conversely, low resolution (Standards) scanning results in lower quality but your original is sent more quickly. Select the setting that matches your needs based upon this trade off between speed and image clarity.

- Standard (8 x 3.85 lines/mm, 200 x 100 dpi) Select for originals containing normal size characters.
- Detail (8 x 7.7 lines/mm, 200 x 200 dpi) Select for originals containing small characters or when you require greater clarity. This resolution is twice as fine as Standard.

Super Fine (optional expansion memory required: 16 x 15.4 lines/mm, 400 x 400 dpi)

Select for originals with very fine details or when you require the best possible image clarity. This resolution is eight times finer than Standard.

Limitation

- If the other party's machine does not support the resolution at which you are sending, this machine automatically switches to a resolution that is supported.
- Sending with Super Fine resolution requires that your machine has the optional expansion memory, and the other party's msachine has the capability to receive fax messages at Super Fine resolution.

- Note that even if the option is installed on your machine, transmission and reception may take place using Detail resolution if the other party's machine does not support this function.
- The machine supports Standard, Detail, and (with the optional expansion memory) Super Fine resolutions.
- □ You can select the resolution type that is selected right after the machine is turned on or modes are cleared with [Scan End Reset] under [Gen. Settings/Adjust]. See p.130 "General Settings/Adjustment", Facsimile Reference <Advanced Features>.

 You can have the machine return to the resolution default setting after every transmission, with [Text Size Priority] under [Gen. Settings/Adjust]. See p.130 "General Settings/Adjustment", Facsimile Reference <Advanced Features>.

Press [Resolution].

Standard	() Ready						
Resolution	Set original and specify destination.						
Text	V ^g <u></u> ³ _						
Original Type	Registration No. Adv. Sociares						
Auto Image Density	Freq. AB CD EF GH IJK LMN OPQ F						
(]Lighter Darker	C000013 C000023 C000033 C000043 C000053 ABC COMP BERLIN 0 LONDON NEW YORK TORON ANY FFICE FFICE OFFICE OFFICE OFFICE OFFICE						
Auto Detect Scan Area	C000073 C000083 C000093 C000103 C00011 X STORE PARIS OF FICE FACTORY SAN FRAN CISCO FFICE						

2 Select the resolution you require, and then press [OK].

Resolution	() Ready						
	Set original and specify destination.						
Standard	t G3						
(:	— — — — — — — — — — — — — — — — — — —						
Detail		agistist bl					
	Registration No.						
	Freq. AB CD EF GH IJK LMN OPQ						
	£000013	C000023	[00003]	C000043	100005		
	ABC COMP	BERLIN O	LONDON O	NEW YORK	TORON		
	ANY	FFICE	FFICE	OFFICE	OFFIC		
	C000071	C000083	C000093	C000103	000011		
	X STORE	PARIS OF	DETROIT	SAN FRAN	SYDNE		
OK		FICE	FACTORY	CISCO	FFICE		

🖉 Note

□ If you install the optional expansion memory, "**Super Fine**" will be displayed in the Resolution box.

Original Type

If your original contains photographs, illustrations, or diagrams with complex shading patterns or grays, select the appropriate original type to optimize image clarity.

Text

Select **[Text]** to send high-contrast black-and-white image originals. Use this setting even if your original contains text and photographs, or if you only want to send clearer text.

Text/Photo

Select **[Text/Photo]** to send an original containing both a high-contrast black-and-white image, such as text, and a halftone image, such as a photograph.

Photo

Select **[Photo]** to send an original containing a halftone image, such as a photograph or a color original.

- □ If you select **[Text/Photo]** or **[Photo]**, the transmission will take longer than when **[Text]** is selected.
- □ If you send a fax message with [Text/Photo] or [Photo] and the background of the received image is dirty, reduce the density setting and resend the fax. See p.29 "Image Density (Contrast)".
- □ You can set the original type that is selected right after the machine is turned on or modes are cleared, with [Scan End Reset] under [Gen. Settings/Adjust]. See p.130 "General Settings/Adjustment", Facsimile Reference <Advanced Features>.

 You can have the machine return to the original type default setting after every transmission, with [Original Type Priority] under [Gen. Settings/Adjust]. See p.130 "General Settings/Adjustment", Facsimile Reference <Advanced Features>.

Press [Original Type].

Standard	O Rea	dy			
Resolution	Set original and specify destination.				
Text	۲	<u>63</u>			
Original Type		Registration No).	Adv. F	siere:
Auto Image Density	Freq. AB	CD E	F GH I	JK LMN I	OPQ F
()Lighter Darker	COODO 13 ABC COMP ANY	COOOO23 BERLIN O FFICE	LOODOSI LONDON O FFICE	COOOO43 NEW YORK OFFICE	100005 TORON OFFIC
Auto Detect Scan Area	X STORE	COODOBD PARIS OF FICE	COODODI DETROIT FACTORY	COOO103 SAN FRAN CISCO	COOD11 SYDNE FFICE

2 Select the original type you require, and then press [OK].

Original Type	() Ready				
Text	Set original and specify destination.				
16/4	63				
Text/Photo					
<u>L</u>	Registration No.				
Photo	Freq. AB CD EF GH IJK L				
	[000001] [000002] [000003] [000004	12 100005			
	The com a seneral of control of the	YORK TORON			
	ANY FFICE FFICE OFF	ICE OFFIC			
	[C00007] [C00008] [C00009] [C00010	03 [000011			
	X STORE PARIS OF DETROIT SAN F	FRAN SYDNE			
UK	FICE FACTORY CISCO	D FFICE			

Image Density (Contrast)

The text and diagrams on originals should stand out clearly from the paper they are on. If your original has a darker background than normal (for example, a newspaper clipping), or if the writing is faint, adjust the image density.

Auto Image Density

The appropriate density setting for the original is automatically selected.

Manual Image Density

Use manual image density to set image density yourself.

You can select one of seven image density levels.

Combined Auto and Manual Image Density

You can only adjust image density for photographs, illustrations, or diagrams if the original has a dark background.

You can select one of seven image density levels.

🔗 Note

- □ Selecting **[Text]** or **[Text/Photo]** for the original type causes **[Auto Image Density]** to be selected.
- □ You can set the image density that is selected right after the machine is turned on or modes are cleared, with [Auto Image Density] under [Gen. Settings/Adjust]. See p.130 "General Settings/Adjustment", Facsimile Reference <Advanced Features>.

You can have the machine return to the image density default setting after every transmission, with [Scan End Reset] under [Gen. Settings/Adjust]. See p.130 "General Settings/Adjustment", Facsimile Reference <Advanced Features>.

1 Select the type of image density.

Auto Image Density

• Make sure that [Auto Image Density] is selected.

Standard	() Ready						
Resolution	Set original and specify destination.						
Text	۲	<u>63</u> _					
Original Type	Registration No. Adv. Excluse				adures		
Auto Image Density	Freq. A	B CD E	F GH I	JK LMN	OPQ F		
(]Lighter Darker	COODO 13 ABC COMP ANY	COODO23 BERLIN O FFICE	LOODOSI LONDON O FFICE	COODO43 NEW YORK OFFICE	100005 TORON OFFIC		
Auto Detect Scan Area	10000073 X STORE	COODORI PARIS OF FICE	COODO93 DETROIT FACTORY	COOO103 SAN FRAN CISCO	COOD11 SYDNE FFICE		

🖉 Note

If [Auto Image Density] has not been selected, press [Auto Image Density].

Manual Image Density

Make sure that [Auto Image Density] is not selected. If it has been selected, press [Auto Image Density] to turn it off.

🖉 Note

 If [Auto Image Density] has not been selected, proceed to step 2.

2 Press [Lighter] or [Darker] to adjust the density.

Standard	() Ready					
Resolution	Set original and specify destination.					
Text	<u> 63</u>					
Original Type	Registration No. Adv. Sociares					
Auto Image Density	Freq. AB CD E	F GH I	JK LMN	OPQ F		
Ulighter	C000013 ABC COMP BERLIN O ANY FFICE	LOODO31 LONDON O FFICE	COODO43 NEW YORK OFFICE	100005 TORON OFFIC		
Auto Detect Scan Area	X STORE FICE	DETROIT FACTORY	COODIOJ SAN FRAN CISCO	COODII SYDNE FFICE		

Combined Auto and Manual Image Density

• Make sure that [Auto Image Density] is selected.

🖉 Note

- If [Auto Image Density] has not been selected, press [Auto Image Density].
- 2 Press [↓ Lighter] or [Darker ▶] to adjust the density.

Standard							
Resolution	Set original and specify destination.						
Text	۲	<u>63</u>					
Original Type	F	Registration No).	Ady, F	odure:		
Auto Image Density	Freq. A	CD E	F GH I	IJK LMN	OPQ F		
(Lighter Darker)	COODO 13 ABC COMP ANY	COOOO23 BERLIN O FFICE	LOODO33 LONDON O FFICE	1000041 NEW YORK OFFICE	100005 TORON OFFIC		
Auto Detect Scan Area	X STORE	COODORS PARIS OF FICE	DETROIT FACTORY	1000103 SAN FRAN CISCO	<u>COOD11</u> SYDNE FFICE		

Mixing Scan Settings for a **Multiple Page Original**

When sending an original of several pages, you can select a different image density, resolution, and original type setting for each page.

Place the original, select the scan settings for the first page, dial, and then press the **[Start]** key as you would normally. Then follow one of the following two procedures.

Solution Note


□ It is recommended that originals be placed on the exposure glass when mixing scan settings for a multiple page original.

When placing originals on the exposure glass

Note 🖉

- □ While the machine is beeping, you have about 60 seconds (10 seconds for Immediate Transmission) to select density, resolution, and original type. The remaining time is shown on the display.
- Check which pages you want to scan with different settings.
- **2** Remove the previous page and place the next page.

3 Select the image density, resolution, and original type.

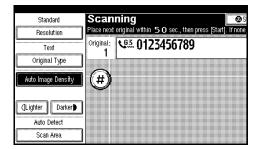

Note

□ Adjust the settings for each page before you press the [Start] key.

When placing originals in the optional Auto Document Feeder (ADF)

S Note

- **D** Depending on what time the scan settings are adjusted, the settings may not be reflected in the resulting operation.
- 1 Check which pages you want to scan with different settings.

2 Select the image density, resolution, and original type before the next page is scanned.

Standard	Scanning Transmitting scanned originals.				
Resolution					
Text	Original: V.3. 0123456789				
Original Type					
Auto Image Density					
(Lighter Darker)					
Auto Detect					
Scan Aire					

Dialing

There are two main ways to dial a number:

Number Keys

p.32 "Number Keys"

Quick Dials

p.33 "Using Destination Lists"

This section covers these functions and others in more detail.

🖉 Note

The display shows the percentage of free memory space for storing originals. Since fax numbers are programmed in separate memory, dialing fax numbers using the number keys does not change the percentage on the display.

Number Keys

Enter numbers directly using the key pad on the right side of the control panel.

🖉 Note

- Maximum length of a fax number: 128 digits.
- You can insert pauses and tones in a fax number. See p.32 "Pause", p.33 "Tone".

1 Enter the fax number using the number keys.

O Rea Set original ar	dy nd specify des	tination.			Informa	ation
>>> Total: Add Registration No. Adv. Features						
Find AB CD EF GH J.X LMN OPO RST UVW XYZ Colonols E000017 E000023 E000023						
ANY 2000073 X STORE	FFICE COODOBJ PARIS OF FICE	FFICE COODOD DETROIT FACTORY	OFFICE COODIDJ SAN FRAN CISCO	OFFICE <u>COOO113</u> SYDNEY O FFICE	TD LA FACTO RY	

🖉 Note

- □ If you make a mistake, press the **[Clear/Stop]** key, and then enter again.
- □ If the optional extra G3 interface unit is installed, select G3 before you proceed to the next step. See p.53 "Changing the Line Port", Facsimile Reference <Advanced Features>.

Pause

Press the **[Pause/Redial]** key when dialing or storing a number to insert a pause of about two seconds.



🖉 Note

- □ You cannot insert a pause before the first digit of a fax number. If you press the **[Pause/Redial]** key at the first digit, a redial occurs. See p.43 "Redial", *Facsimile Reference* <*Advanced Features*>.
- □ A pause is shown as a "-" on the display.

O Rea Set original	ady and specify des	tination.			Inform	nation 999
>> Add	VEX 0123	5 . 1	Adv. F	acturac	^{tal:} 1	
	AB CD E	F GH 1	IJK LMN	OPQ RST		إلام
ABC COM	P BERLIN 0 FFICE	LONDON O FFICE	NEW YORK OFFICE	TORONTO OFFICE	XYZ CO.L TD	1/2
X STORE	PARIS OF FICE	COODO93 DETROIT FACTORY	COODIDI SAN FRAN CISCO	COODINI SYDNEY O FFICE	LOOO123 LA FACTO RY	

2

🖉 Note

You can also register numbers including pauses in Destination lists.

Tone

This function allows a machine connected to a pulse dialing line to send tonal signals (for example if you want to use a special service on a tone dialing line). When you press the **[Tone]** key, the machine dials the number using tonal signals.

Limitation


□ Certain services may be unavailable when using the **[Tone]** key.

🖉 Note

□ A tone is shown as a "•" on the display.


Using the [Tone] key with On Hook Dial

Press the [On Hook Dial] key.

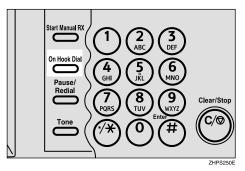

2 Enter the fax number using the number keys.

B Press the **[Tone]** key.

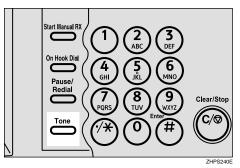

4 Enter the ID number using the number keys.

Using Destination Lists

When you program a destination number into a Destination list, you can dial the number by just selecting the destination from the Destination list.

Additionally, you can store a name that will appear on the display.

If you frequently send the same message to more than one place, program these numbers into a Group. Then you can send messages to all the destinations in that Group with just a few keystrokes. You can also program a name for the Group (for example, "Branch Offices"), this will be displayed before you press the **[Start]** key.

Preparation

In the Destination list, program individual destinations and/or groups of destinations. See "Programming Address Book", *General Settings Guide*.

Limitation

Group Dial can be used only for Memory Transmission; it cannot be used for Immediate Transmission. The machine automatically changes to Memory Transmission when you use Group Dial.

🔗 Note

- When you press the title key above the destination keys, the destination keys programmed in that title key appear.
- To check the contents of Quick Dial, print the Destination list. See "Key Operator Tools", General Settings Guide.
- □ A stored name can be printed out on the first page of a received fax at the other end. See p.68 "Label Insertion", *Facsimile Reference <Advanced Features>*.
- □ To check the contents of the Groups, print the list. See "Key Operator Tools", *General Settings Guide*.
- A total of 500 destinations (per message) can be programmed for Group Dial.
- Place the original, and then select the scan settings you require.
- **2** Press the title key of the desired Quick Dial.


O Rea Set original ar		tination.			Informa	tion 1009
	63		Adv. F	Tot	0	
Registration No. Add: Facebook Freq. AB CD EF GH IJK LINN OPO RST UVW XYZ (Č						
ABC COMP ANY	E000021 BERLIN O FFICE	LONDON O FFICE	COODO41 NEW YORK OFFICE	TORONTO OFFICE	<u>000063</u> XYZ CO.L TD	1/2
2000073 X STORE	1000081 PARIS OF FICE	<u>COOOO93</u> DETROIT FACTORY	<u>COOO103</u> SAN FRAN CISCO	E000113 SYDNEY O FFICE	LA FACTO RY	L.®. ▼

🖉 Note

There are three types of title for Destination lists; "Title 1", "Title 2", and "Title 3" Switching the titles of Destination lists


- Press 🤍.
- **2** Press [Switch Title].
- **3** Select the type of the title, and then press [Exit].

3 Select a destination.

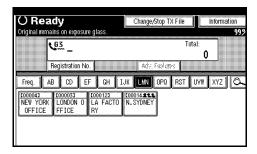

Specifying a single destination

Press the Quick Dial key programmed with the desired destination.

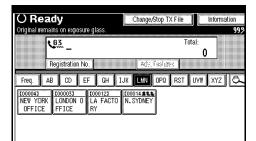


🖉 Note

- □ If the desired Quick Dial key is not shown, press [▲] and
 [▼] to scroll through the list.
- □ To cancel the selection, press the selected Quick Dial key once more. You can also press the **[Clear / Stop]** key to cancel the selection.
- □ To select more destinations, repeat steps 2 and 3.

Specifying a group of destinations

Press the Quick Dial key programmed with the desired group.

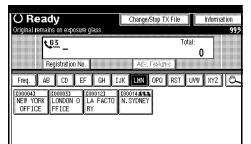

🖉 Note

- □ If the desired Quick Dial key is not shown, press [▲] and
 [▼] to look through the list.
- To cancel the selection, press the selected Quick Dial key again. You can also press the [Clear/Stop] key to cancel the selection.
- □ To select more groups, repeat steps 2 and 3.
- □ If the selected group includes destinations other than fax destinations, such a message appears that asks whether only valid destinations are to be selected. Press [Select] to select only valid destinations.

4 Press the [Start] key.

Searching for a Destination

Use this procedure to search through the Destination lists for a particular destination.

- Search by Destination Name See p.36 "Search by Destination Name".
- Search by Fax Number See p.37 "Search by Fax Number".
- Specifying a Registration Number See p.38 "Specifying a Registration Number".

Search by Destination Name

🖉 Note


- The search returns only destinations whose beginnings match the entered name.
- □ This function distinguishes between small and capital letters.
- Press 🦳 , the magnifier icon.

				18	JAN 200316:04
estination.			Informa	tion 100%	Immed. Memory TX TX
		Τσ	tal: O		
No.	Adv. f	selures			TX File Status
EF GH I	JK LMN I	OPQ RST	UVW XYZ	ð.	RX File Status
LONDON 0	LOODO43 NEW YORK OFFICE	TORONTO	2000063 XYZ CO.L	1/2	Transmission Mode
[FF102]	000103	C000113	10 (00012)		Sub TX Mode
F DETROIT FACTORY	SAN FRAN CISCO	SYDNEY O FFICE	LA FACTO RY	V	Store File

2 Press [Serch.by Dest. Name].

-		
	Search/Switch List	Select item.
	Search by Dest. Name	
	Search by Fax No.	
	Switch Title	Search

Enter a destination name to search for, and then press [OK].

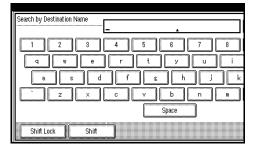


A search-in-progress message appears.

When the search is finished, a result appears.

🖉 Note

□ A warning appears if the search returns more than 100 items. Press **[OK]** to proceed to step **[**.

4 Select a destination.

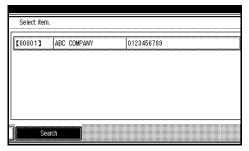

🖉 Note

- □ If the desired destination does not appear, use [▲] or [▼] to scroll through the list.
- □ If the search returns more than 100 destinations, only 100 will appear. Change the destination name to view fewer destinations.

Search by Fax Number

🖉 Note

1

□ The search returns only destinations whose beginnings match the entered number.


Press	a.,	the	magnifier	icon
-------	-----	-----	-----------	------

			6	18	JAN 200316:04
estination.			Informa	tion 100%	Immed. Memory TX TX
		Tol	al: O		
No.	Adv. F	gdures			TX File Status
EF GH 1	JK LMN	OPQ RST	UVW XYZ	6	RX File Status
0000033 1 LONDON 0 FFICE	COOOO43 NEW YORK OFFICE	COODOSI TORONTO OFFICE	1000063 XYZ CO.L	1/2	Transmission Mode
[[[[]]]	£000103	L000111	10 1000123		Sub TX Mode
F DETROIT FACTORY	SAN FRAN CISCO	SYDNEY O FFICE	LA FACTO RY	V	Store File

2 Press [Search by Fax No.].

ſ	
Search/Switch List	Select item.
Search by Dest. Name	
Search by Fax No.	
Switch Title	Search

Enter a number to search for, and then press [OK].

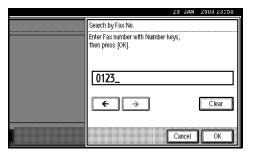

🖉 Note

□ If you enter a wrong number, press [←]/[→] and [Clear], and then enter the number again.

A search-in-progress message appears.

When the search is finished, a result appears.

🖉 Note

□ A warning appears if the search returns more than 100 items. Press **[OK]** to proceed to step **4**.

4 Select a destination.

[00001]	ABC COMPANY	0123456789	
[00002]	BERLIN OFFICE	0123678945	
[00011]	SYDNEY OFFICE	0123894567	
(00011]	SYDNEY OFFICE	0123894567	

🖉 Note

□ If the desired destination does not appear, use [▲] or [▼] to scroll through the list.

Limitation

If the search rerurns more than 100 destinations, only 100 will appear. Change the number to view fewer destinations.

Specifying a Registration Number

Use this procedure to select a destination by specifying a registration number.

Press [Registration No.].

O Rea	dy nd specify des	tination			Informa	
	<u>63</u>			Tơ	0	- 33/
Freq. A	Registration Ni 3 CD E	D. IF GH I			UVW XYZ	ام
ABC COMP ANY	<u>COOOO21</u> BERLIN O FFICE	LONDON O FFICE	COODO43 NEW YORK OFFICE	TORONTO OFFICE	<u>000063</u> XYZ CO.L TD	1/2
1000073 X STORE	1000081 PARIS OF FICE	LOOOO93 DETROIT FACTORY	COODIDI SAN FRAN CISCO	COODIID SYDNEY O FFICE	<u>0000123</u> LA FACTO RY	L. ▼

The registration number entry display appears.

2 Enter a registration number using the number keys.

O Rea Set original a		tination.			Informa	
	Registration N		Adv. F		tal: O	
Freq. A	ال	F GH I	JK LMN	OPQ RST	UVW XYZ	<u>ا</u> گ
ABC COMP ANY	E000021 BERLIN O FFICE	LONDON O FFICE	LOOCO41 NEW YORK OFFICE	TORONTO OFFICE	<u>1000063</u> XYZ CO.L TD	1/2
1000073 X STORE	1000081 PARIS OF FICE	1000093 DETROIT FACTORY	<u>COOO103</u> SAN FRAN CISCO	COODIII SYDNEY O FFICE	<u>000123</u> LA FACTO RY	\

🖉 Note

□ You need not enter the first zeros of a registration number when the display prompts you to enter five digits. If you do not enter 5 digits, press the **[#]** key to complete the entry.

The corresponding destination appears.

O Re Set origina	ady al and specify des				Informa	tion
Add	AB CD E).	Adv. F	Tot eatures	ldl. Imme	۵
COODO13 ABC COL ANY	1000021	LONDON O FFICE	LOODO43 NEW YORK OFFICE	TORONTO OFFICE	1000063 XYZ CO.L TD	1/2
<u>0000073</u> X STORI	E PARIS OF FICE	COODO93 DETROIT FACTORY	COODIDI SAN FRAN CISCO	COOD113 SYDNEY O FFICE	100012 1 LA FACTO RY	•

🔗 Note

 If the entered registration number has not been programmed, an error message appears. Press [Exit]. The screen returns to that of step
 O.

O Rea	ady	Information
Set original	and specify destination.	1009
	Cannot find the specified Registration No.	Exit

Reception

There are two ways you can set up your machine to handle incoming calls:

- Manual Reception (external telephone required)
- Auto Reception

You can change the reception mode only if a standard G3 line is used.

You cannot change the reception mode when a line other than the standard G3 line (G3-2 or G3-3) is used.

Manual Reception

When a telephone call comes in, the machine rings. If the call is a fax message, you must swich manually to facsimile mode.

Auto Reception

When a telephone call comes in, the machine automatically receives it as a fax message. Use this setting on a dedicated fax line.

🖉 Note

□ The external telephone is required to use this machine as a telephone.

Switching the Reception Mode

You can switch reception modes using the Reception Settings menu (under Facsimile Features). See p.132 "Reception Setting", *Facsimile Reference <Advanced Features>*.

If you program a Quick Operation key with Switch Reception Mode, you can switch reception mode quickly.

🖉 Note

- You can only use this function after programming a Quick Operation key as the reception mode switch with [Quick Operation Key] under [Gen. Settings/Adjust]. See p.130 "General Settings/Adjust-ment", Facsimile Reference <Advanced Features>.
- **1** Press the [Switch RX Mode] Quick Operation key.

30	JAN 2003 15:22
estination. 99%	Immed. TX TX
Total: 0	Switch RX Mode
No. Adv. Factures	TX File Status
EF GH IJK LMN OPO RST UVW XYZ 🕰	RX File Status
CO00033 C000043 C000053 C000063 1/2 D LONDON 0 NEW YORK TORONTO XYZ CO.L 1/2 FEICE OFFICE OFFICE TORONTO XYZ CO.L 1/2	Transmission Mode
	Sub TX Mode
F DETROIT SAN FRAN SYDNEY 0 LA FACTO	Store File

2 Select the reception mode, and then press [OK].

		30	JAN	2003	15:28
estination.	Reception Mode Switch Select item, then press [OK].				
NO. AGY. F	Manual Reception Auto Reception				
CO000033 LONDON 0 FFICE OFFICE					
C000093 DETROIT SAN FRAN FACTORY CISCO		Са	ncel		ж

The standby display appears.

- 🖉 Note
- □ To cancel the selection, press [Cancel].

Receiving a Fax in Manual Reception Mode

- **1** When the machine rings, pick up the handset of the external telephone.
- 2 If you hear beeps, press the [Start] key or the [Start Manual RX] key. (The [Start] key is only available in facsimile mode when an original is not placed.)
- **3** Replace the handset of the external telephone. The machine will start receiving.

Limitation

When printing documents stored in the Document Server, the [Start Manual RX] key or the [Start] key cannot be used to switch to facsimile mode. Press the [2] key of the external telephone.

3. Registering

Initial Settings and Adjustments

You can send information to the other party when transmitting or receiving a fax message. This information is shown on the display of the other machine and printed as a report. The following information can be sent.

∰Important

□ You can confirm programmed settings from the user parameter list. We recommend that you print and keep the user parameter list when you program or change settings. See p.152 "Printing the User Parameter list", *Facsimile Reference <Advanced Features>*.

Fax Header

The Fax Header is printed as the header of every fax you send. You should include your name in the Fax Header.

You can program Fax Header1 or Fax Header2. When you send originals using Quick Dial, you can select which Fax Header will be printed on the message received by the other party.

🖉 Note

- □ You can register up to 32 characters in the Fax Header.
- □ You can use characters, symbols, numbers, and spaces.
- □ You can set whether or not to print a Fax Header using **[Fax Header Print]** under **[options]**.
- In program No. 1 you can register a preference about whether or not the Fax Header is always printed. You will then switch the setting using the Fax Header Print function only when necessary.

Reference

p.114 "Registering a priority function using a program", Facsimile Reference <Advanced Features>

p.67 "Fax Header Print", Facsimile Reference <Advanced Features>

Own Name

The Own Name is sent to the other party when you send or receive a fax using a G3 line. This name should include your name. The Own Name is shown on the display of the other machine and printed in a report.

Limitation

Own Name works only when the other machine is of the same manufacturer, and has the Own Name function.

🖉 Note

- □ You can use characters, symbols, numbers, and spaces.
- □ You can register up to 20 characters as an Own Name.

Own Fax Number (facsimile number of sender)

The sender's Own Fax Number is sent to the other party when sending a fax using a G3 line. The received facsimile number is shown on the display of the other machine and printed in a report. This function is available regardless of the manufacturer of the other party's machine.

🖉 Note

□ You can register up to 20 characters in Own Fax Number.

41

🔗 Note


When the Key Operator Code is registered and turned on, user have to enter registered the Key Operator Code (maximum 8 digit) to operate Key Operator Tools.This prevents unauthorized people from changing registration.

Programming

Press the [User tools/Counter] key.



2 Press [Facsimile Features].

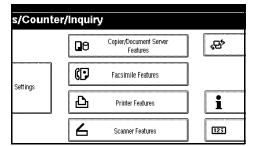

🖉 Note

□ If the key operator code is registered and turned on, enter the key operator code and press the **[OK]** key.

E Press [Program Fax Information].

		15 JAN 2003 16:54 Exit
perator Tools		
Transmission	Select Title	Title 1
	Change Initial Mode	Standard
	Adjust Sound Volume	
	Program Fax Information	
	1/2	.≰ Prev. 🛛 🔍 Next


4 Program the name and facsimile number.

Registering a Fax Header

Press [First Name] or [Second Name].

(🗗 Facsimile	Program Fax Information
Select one of following defau	Select item to program.
Gen. Settings/Adjust Re	First Name * Not programed
Memory/Immed. Transmis	Second Name * Not programed
Text Size Priori	
Original Type Pri	
Auto Image Dens	
Adjust Scan Den:	Fax Header Own Name Own Fax Nu

2 Enter a fax header, and then press [OK].

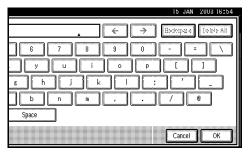

PReference


"Entering Text", General Settings Guide

Registering an Own Name


Press [Own Name].

	15	JAN	2003	16:54
* Not programed				
k blet amammed				
* Not programed				
Own Name Own Fax Number			E F	
				u J

2 Press [Own Name].

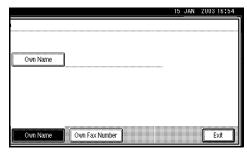

3 Enter an own name, and then press [OK].

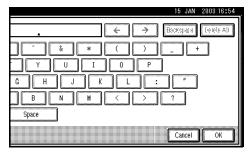

PReference

"Entering Text", General Settings Guide

Registering an Own Fax Number

Pres	s LOwn Fa	x Numberj.	
		15 JAN	2003 16:54
* Not programed			
* Not programed			
Own Name	Own Fax Number]	Exit

2 Select line type to program.

Select item to	Information program	 	
	, program.		
-		For G3-1	
is			
-			

🖉 Note

- □ The display differs depending on the optional units installed on your machine.
- 3 Enter your own facsimile's number using the number keys, and then press [OK].

		30	JAN	2003	0:02
	G3-1 Fax No.				
	Enter No. with Number keys, the	n pre	ss [OH	[] .	
	0122456700				
	0123456789_				
	+ Space			Cle	
Own Name Own		Ca	ncel		к

🖉 Note

- □ To enter a + sign or a space, press [+] or [Space].
- If you make a mistake, press [Clear] or the [Clear / Stop] key, and then enter the facsimile number again.

5 Press [Exit].

6 Press the **[User tools/Counter]** key.

The initial display appears.

Editing

🖉 Note

The following procedure explains how to edit Own Name, as an example of editing.

Press the [User tools/Counter] key.

Screen User Tods/Cautier

2 Press [Facsimile Features].

s/Counter/Inquiry				
	00	Copier/Document Server Features		æ
Settings	C	Facsimile Features		
	Ъ	Printer Features		i
	4	Scanner Features		123

3 Press [Program Fax Information].

Feature	s		
wit settings.			
eception Settings	Key Operator Tools		
ission Switch	Memory Transmission	Select Title	
rity	Standard	Change Initial Mode	
riority	Text	Adjust Sound Volume	
nsity	ON	Program Fax Information	
nsity	Level 4] 1/2	


Press [Fax Header], [Own Name], or [Own Fax Number] for editing.

	Program Fax Information
ı	Colort item to program
1	Select item to program.
,	
	First Name DEF COMPANY
2	Second Name SALES DIV.
	Second Name SALES DIV.
1	
1	
2	
	Fax Header Own Name Own Fax Number

5 Press the item you want to edit.

Select item to pr	ogram.			
	Own N	ame DEF COMP	PANY	
11				


6 Press [Backspace] or [Delete All], and then reenter the name or number.

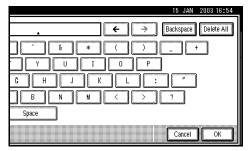


🖉 Note

□ Press [Clear] or the [Clear/Stop] key if you want to edit Own Fax Number.

Press [OK].

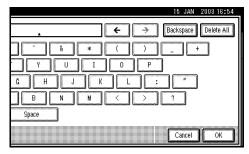

8 Press [Exit].

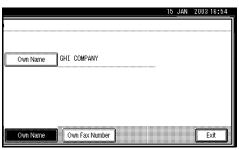

9 Press the **[User tools/Counter]** key.

The initial display appears.

Deleting

🖉 Note

□ The following procedure explains how to delete Own Name, as an example of deleting.

Press the [User tools/Counter] key.



2 Press [Facsimile Features].

s/Counter/Inquiry				
	۵	Copier/Document Server Features		\$ 3
Settings	ø	Facsimile Features		
	Ъ	Printer Features		1
	6	Scanner Features		123

B Press [Program Fax Information].

ult settings.	
eception Settings Key Operator Tools	
ission Switch Memory Transmission	Select Title
rity Standard	Change Initial Mode
riority Text	Adjust Sound Volume
nsity ON	Program Fax Information
nsity Level 4	1/2



Press	[Fax Header],	[Own	Name],	or
[Own F	ax Number] to	dele	te.	

IJ	Program Fax Information Select item to program.
ei 	First Name DEF COMPANY
	Second Name SALES DIV.
1	
n:	Fax Header Own Name Own Fax Number

5 Press the item you want to delete.

I	Program Fax Information
w	Select item to program.
ei Lis	Own Name DEF COMPANY
ri Ti	
n	Fax Header Own Name Own Fax Number

6 Press [Backspace] or [Delete All], and then press [OK].



🖉 Note

□ Press [Clear] or the [Clear/Stop] key if you want to edit Own Fax Number.

7 Press [Exit].

	15	JAN	2003	16:54
Own Name				
Own Name Own Fax Number			F	xit 🚺

8 Press the [User tools/Counter] key.

The initial display appears.

Programming Fax Destinations

You can program fax destinations using Address Book Management in the Key Operator Tools menu under System Settings.

You can also register the programmed fax numbers in a Group.

🖉 Note

□ When you press the **[Facsimile]** key after changing the contents of the Address Book, such a message appears that indicates that the destination list has been updated. Press **[Exit]**. The initial display appears.

"Key Operator Tools", General Settings Guide

4. Troubleshooting

Adjusting the Volume

You can change the volume of the following sounds that the machine makes.

On Hook Mode

Heard when the **[On Hook Dial]** key is pressed.

At Transmission

Heard when the machine sends a message.

At Reception

Heard when the machine receives a message.

When Dialing

Heard after pressing the **[Start]** key, until the line connects to the destination.

At Printing

Heard when a received message is printed. See p.84 "Print Completion Beep", *Facsimile Reference <Advanced Features>*.

🖉 Note

You can adjust the On Hook volume when you press the [On Hook Dial] key. See p.51 "On Hook Dial", *Facsimile Reference <Advanced Features>*.

Press the [User tools/Counter] key.




2 Press [Facsimile Features].

	۵	Copier/Document Server Features	¢\$*
Settings	ø	Facsimile Features	
Jerrings	Ъ	Printer Features	1
	4	Scanner Features	123

B Press [Adjust Sound Volume].

ult settings.		
eception Setting	s Key Operator Tools	
ission Switch	Memory Transmission	Select Title
rity	Standard	Change Initial Mode
riority	Text	Adjust Sound Volume
nsity] ON	Program Fax Information
nsity	Level 4	1/2

4 Press [Lower] or [Louder] for each item, and then press [OK].

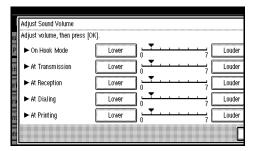

🖉 Note


- □ You can hear the actual volume by pressing **[Check]**.
- □ If you press **[Cancel]**, the volume setting is canceled. The display returns to that of step **§**.

5 Press the **[User tools/Counter]** key.

The initial display appears.

When the [Facsimile] Key Is Lit in Red

If this key is lit, refer to the table below and take the appropriate action.

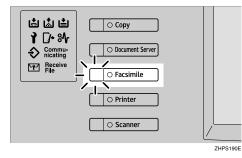

Problem	Solutions
The paper output tray is full.	Remove the paper from the tray.
A facsimile error has occurred.	The facsimile has a problem. Contact your service representative. The copier will still function normally.
Out of paper.	Add more paper. "Loading Paper", <i>General Settings Guide</i>

When Toner Runs Out

When the machine has run out of toner the symbol appears on the display. Note that even if there is no toner left, you can still send fax messages.

∰Important


□ If you continue receiving and sending faxes after the toner has run out, communication will not be possible after 200 transmissions (1000 with the optional expansion memory installed).

Limitation

The Memory Storage Report, Polling Reserve Report, and Confidential File Report are not printed.

🖉 Note

- □ If the standby screen is not displayed, press the **[Facsimile]** key.
- **1** Make sure that the machine is in facsimile mode, and the standby screen is displayed.

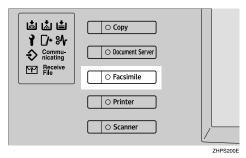

2 Press [Exit], and then perform trasmission operation.

The error message disappears.

See p.18 "Memory Transmission" and p.24 "Immediate Transmission".

Error Messages and Their Meanings

If there is an error, one of the following messages may appear on the display. It might just flash briefly, so if you are watching for errors, stay by the machine and check the display.

Message	Causes and solutions
Put original back, check it and press the [Start] key.	Original jammed during Memory Transmis- sion. Place originals that have not been scanned again.
Error occurred, and transmission was can- celed.	A document jam occurred during Immediate Transmission. Press [OK] , and then resend the pages that have not been sent.
	An error occurred during Immediate Trans- mission. Press [OK] , and then resend the origi- nal.
	🖉 Note
	□ There may be a problem with the machine or the telephone line (for example noise or cross talk). If the error reoccurs frequently, contact your service representative.
Cannot detect original size. Place original again, then press [Start].	The machine failed to detect the size of the original. Place originals again, and then press the [Start] key.
Call Service Functional problems with facsimile. Please call service.	There is a problem with the fax. Record the code number shown in the display and contact your service representative. The copy function will still work normally.
Memory is full. Cannot scan more. Transmit- ting only scanned pages.	If you press [OK] , the machine returns to stand- by mode and starts transmitting the pages that have been scanned.
Following output tray is full. Remove paper.	The paper output tray is full. Remove paper from the tray indicated in the display.
Cannot scan to send fax message as scanner is in use for other function.	The Copy or Document Server function is in use. To cancel the job in process, do the follow-ing, and then try faxing again.
	Press [Exit], and then press the [Copy] or [Doc- ument Server] key. Next press the [Clear/Stop] key. When the message "[Stop] key was pressed. Stop copying?" or "[Stop] key was pressed. Stop storing?" appears, press [Stop].
Updating the destination list.	Wait with the main power switch on. The ma-
Please wait. Selected destinations or function settings have been cleared. Please reselect after the update finishes.	chine will enter standby mode after it exits from RDS mode.

Out of paper display message

If the paper tray runs out of paper, "No paper. Load it, then press **[Exit]**." appears on the display, asking you to add more paper.

🖉 Note

- □ If there is paper left in the other paper trays, you can receive messages as usual, even if a message appears on the display.
- □ You can turn this function on or off with the User Parameters. See p.147 "Changing the User Parameters", *Facsimile Reference <Advanced Features>* (switch 05, bit 7).

Solving Problems

This table lists some common problems and their solutions.

Problem	Causes and solutions	Reference
Image background appears dirty when received at the other end.	Adjust scan density.	p.29 "Image Density (Con- trast)"
Printed or sent image contains spots.	The ADF or exposure glass is dirty. Clean them. Make sure that ink or correc- tion fluid is dry before placing originals.	"Maintaining Your Machine", General Settings Guide
Received image is too light.	Request the sender to increase image density.	
	When using moist, rough, or processed paper, the printed image may be partly invisible. Only use recommended pa- per.	"Copy Paper", General Set- tings Guide
	When 🛓 appears on the dis- play, toner is beginning to run out. Replace the toner car- tridge soon.	"LAdding Toner", General Settings Guide
The machine failed to print re- ceived fax messages.	If this happened when the re- ceive file indicator was lit, a problem such as run out of pa- per or toner might disable printing.	p.79 "Substitute Reception", Facsimile Reference <advanced Features></advanced
	[Store] has been selected for [Reception File Setting] . Print the fax messages using a Web browser or the Printing Stored RX File function.	p.110 "Printing fax informa- tion using a Web browser", <i>Facsimile Reference <advanced< i=""> <i>Features></i> and p.30 "Printing Received and Stored Docu- ments", <i>Facsimile Reference</i> <i><advanced features=""></advanced></i>.</advanced<></i>
	When 🛓 is lit, load paper into the cassette.	"Loading Paper", General Set- tings Guide
Message appears blank at the other end.	The original was placed up- side down. Place it properly.	p.11 "Placing Originals"
Both transmission and receiv- ing are impossible.	Make sure that the modular cord is correctly connected.	
	The terminal adaptor setting is incorrect. Check the setting.	

Problem	Causes and solutions	Reference
Transmission is possible, though receiving is impossi- ble.	The optional terminal adaptor setting is incorrect. Check the setting.	
Receiving is possible, though transmission is impossible.	The optional terminal adaptor setting is incorrect. Check the setting.	
When using On Hook Dial or Manual Dial, "Receiving" ap- pears and transmission is not allowed.	If the machine fails to detect the size of the original when the [Start] key is pressed, it performs a receiving opera- tion. Press [Scan Area] , select the scan area, and then resend the document.	p.14 "Setting a Scan Area"
All fax messages stored in memory have been lost. Those messages include ones stored through Memory Transmis- sion/Reception, Confidential Reception, Substitute Recep- tion, or Auto Document.	When about one hour passes after power to the machine is turned off, all fax messages stored in memory are lost. If any messages have been lost for this reason, a Power Fail- ure Report is automatically printed when the machine is turned on. If fax messages stored for Memory Transmis- sion have been lost, check the destinations and resend the messages. If fax messages re- ceived through Memory, Con- fidential or Substitute Reception have been lost, ask the senders to resend the mes- sages. If Auto Documents have been lost, reprogram them.	p.175 "Power Failure Report", Facsimile Reference <advanced Features></advanced

Finding Operational Solutions

This table introduces you to solutions for some operational problems that you may frequently encounter.

Problem	Solution	Refer to
You want to cancel a Memory Transmission.	If the original is being scanned, press [Cancel] or the [Clear/Stop] key.	p.21 "Canceling a Memory Transmission"
	If the original is being sent or if it is in standby, press [Change/Stop TX File] or the [Clear/Stop] key.	p.15 "Checking and Canceling Transmission Files", Facsimile Reference <advanced features=""></advanced>
You want to cancel an Imme- diate Transmission.	Press the [Clear/Stop] key.	p.26 "Canceling an Immediate Transmission"

INDEX

A

Adjusting The Volume, 49 At Dialing, 49 At Printing, 49 At Reception, 49 At Transmission, 49 On Hook Mode, 49 Auto Reception, 39

В

Broadcasting, 18

С

[Check Modes] key, 3 [Clear Modes] key, 3 [Clear/Stop] key, 4 Communicating indicator, 4 Confidential file indicator, 4 Control Panel, 3 CSI->Own Fax Number, 41

D

Destination list, 33 Detail, 27 Display, 5 Display Panel, 3

Ε

Error Messages, 52

F

[Facsimile] key, 4 Facsimile key, 50 Fax Header, 41 *Deleting*, 45 *Editing*, 44 *Programming*, 42 Faxing, 9

G

Getting Started, 3 Groups *Dialing*, 32

I

Image Density (Contrast), 27, 29 Immediate Transmission, 9, 24 *Canceling*, 26

Κ

(#) key (Enter key), 4

Μ

Main power indicator, 3 Manual Reception, 39 Memory Transmission, 9, 18 *Canceling*, 21

Ν

Number keys, 4, 32

0

[On Hook Dial] key, 4 On indicator, 3 Operation switch, 4 Original Type, 27, 28 Own Fax Number, 41 *Deleting*, 45 *Editing*, 44 *Programming*, 42 Own Name, 41 *Deleting*, 45 *Editing*, 44 *Programming*, 42

Ρ

Pause, 32 [Pause/Redial] key, 4 Photo, 28 Placing Originals, 11 [Program] key, 3

Q

Quick Dial, 32 Dialing, 32 R

Receive file indicator, 4 Reception, 39 *Auto Reception*, 39 *Manual Reception*, 39 Registering, 41 Resolution, 27 RTI->Own Name, 41

S

Scan Settings, 27 Solving Problems, 54 Standard, 27 [Start] key, 4 [Start Manual RX] key, 4 Super Fine, 27 Switching between Memory Transmission and Immediate Transmission, 10 Switching Reception (RX) modes, 39

Т

Text, 28 Text / Photo, 28 Tone, 33 **[Tone]** key, 4 Toner, 51 Troubleshooting, 49 TTI->Fax Header, 41

U

[User tools/Counter] key, 3

FAX Option Type 2045 Operating Instructions Facsimile Reference <Basic Features>

