

1 Bin Tray BN3070
Machine Code: D414
Field Service Manual

July, 2008
Subject to change

Safety and Symbols


Replacement Procedure Safety

CAUTION

- Turn off the main power switch and unplug the machine before beginning any of the replacement procedures in this manual.

Symbols Used in this Manual

This manual uses the following symbols.

: See or Refer to

: Screws

: Connector

: Clip ring


: E-ring

TABLE OF CONTENTS

Safety and Symbols.....	1
Replacement Procedure Safety.....	1
Symbols Used in this Manual.....	1
1. Replacement and Adjustment	
Electrical Components.....	3
Paper Sensor.....	3
1-Bin Control Board.....	4


1. Replacement and Adjustment

Electrical Components


1

Paper Sensor

1. Open the right door of the machine.

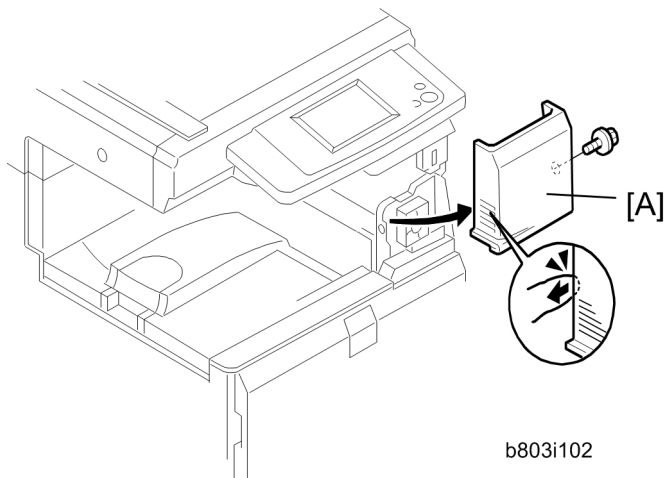


2. Remove the front right cover [A] (⌀ x 1).

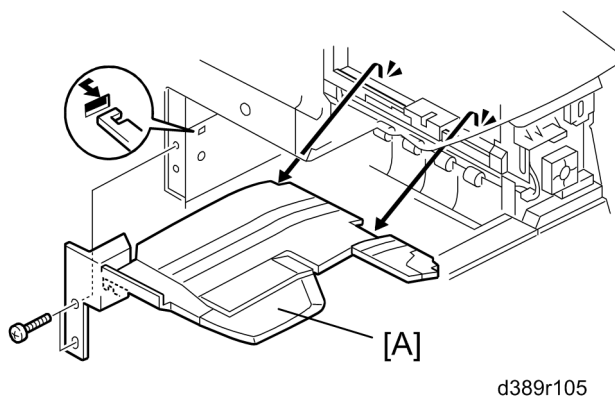


3. 1-bin-tray [B] (⌀ x 2; M3 x 16)

1

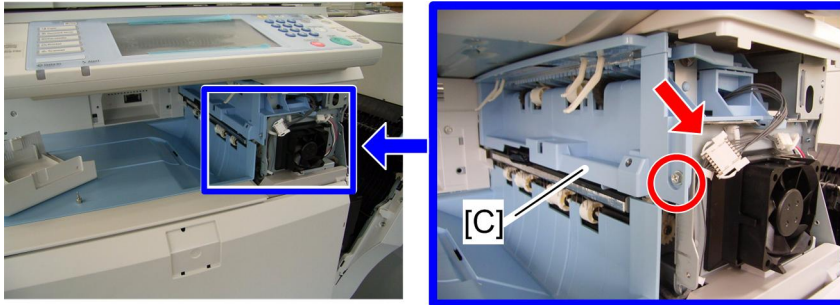


b803r501

4. 1-bin sorter unit [C]

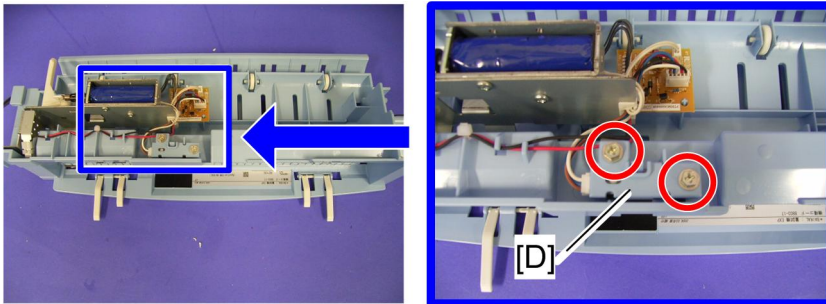

b803r502

5. Paper sensor cover [D] (🔧 x 2)


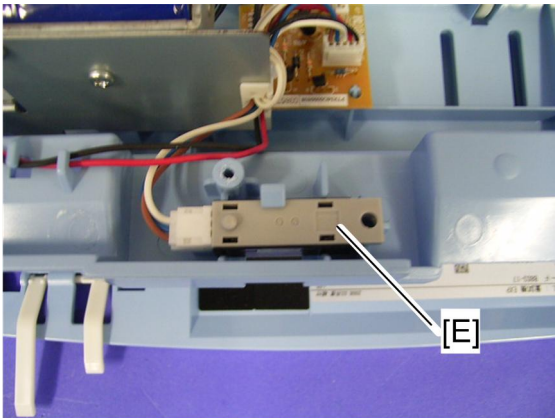


b803r503

6. Paper sensor [E] (🔧 x 1, hook)

1-Bin Control Board

1. 1-bin tray
2. 1-bin sorter unit (🔧 "Paper Sensor")

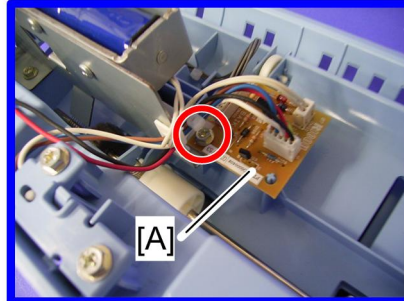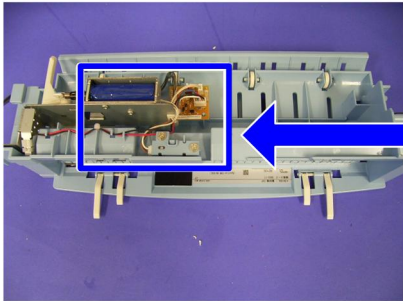

b803r504

3. 1-bin control board [A] (🔌 x 1, 🔌 x 3)

MEMO

MEMO

MEMO