

Bridege Unit BU3060
(D634)

Bridge Unit BU3060 (D634)

PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.


CONTENTS

CONTENTS (Continued)

1.BRIDGE UNIT 1 (D634)	2
2.BRIDGE UNIT 2 (D634)	4
PARTS INDEX	7

December 19, 2011

1.BRIDGE UNIT 1 (D634)

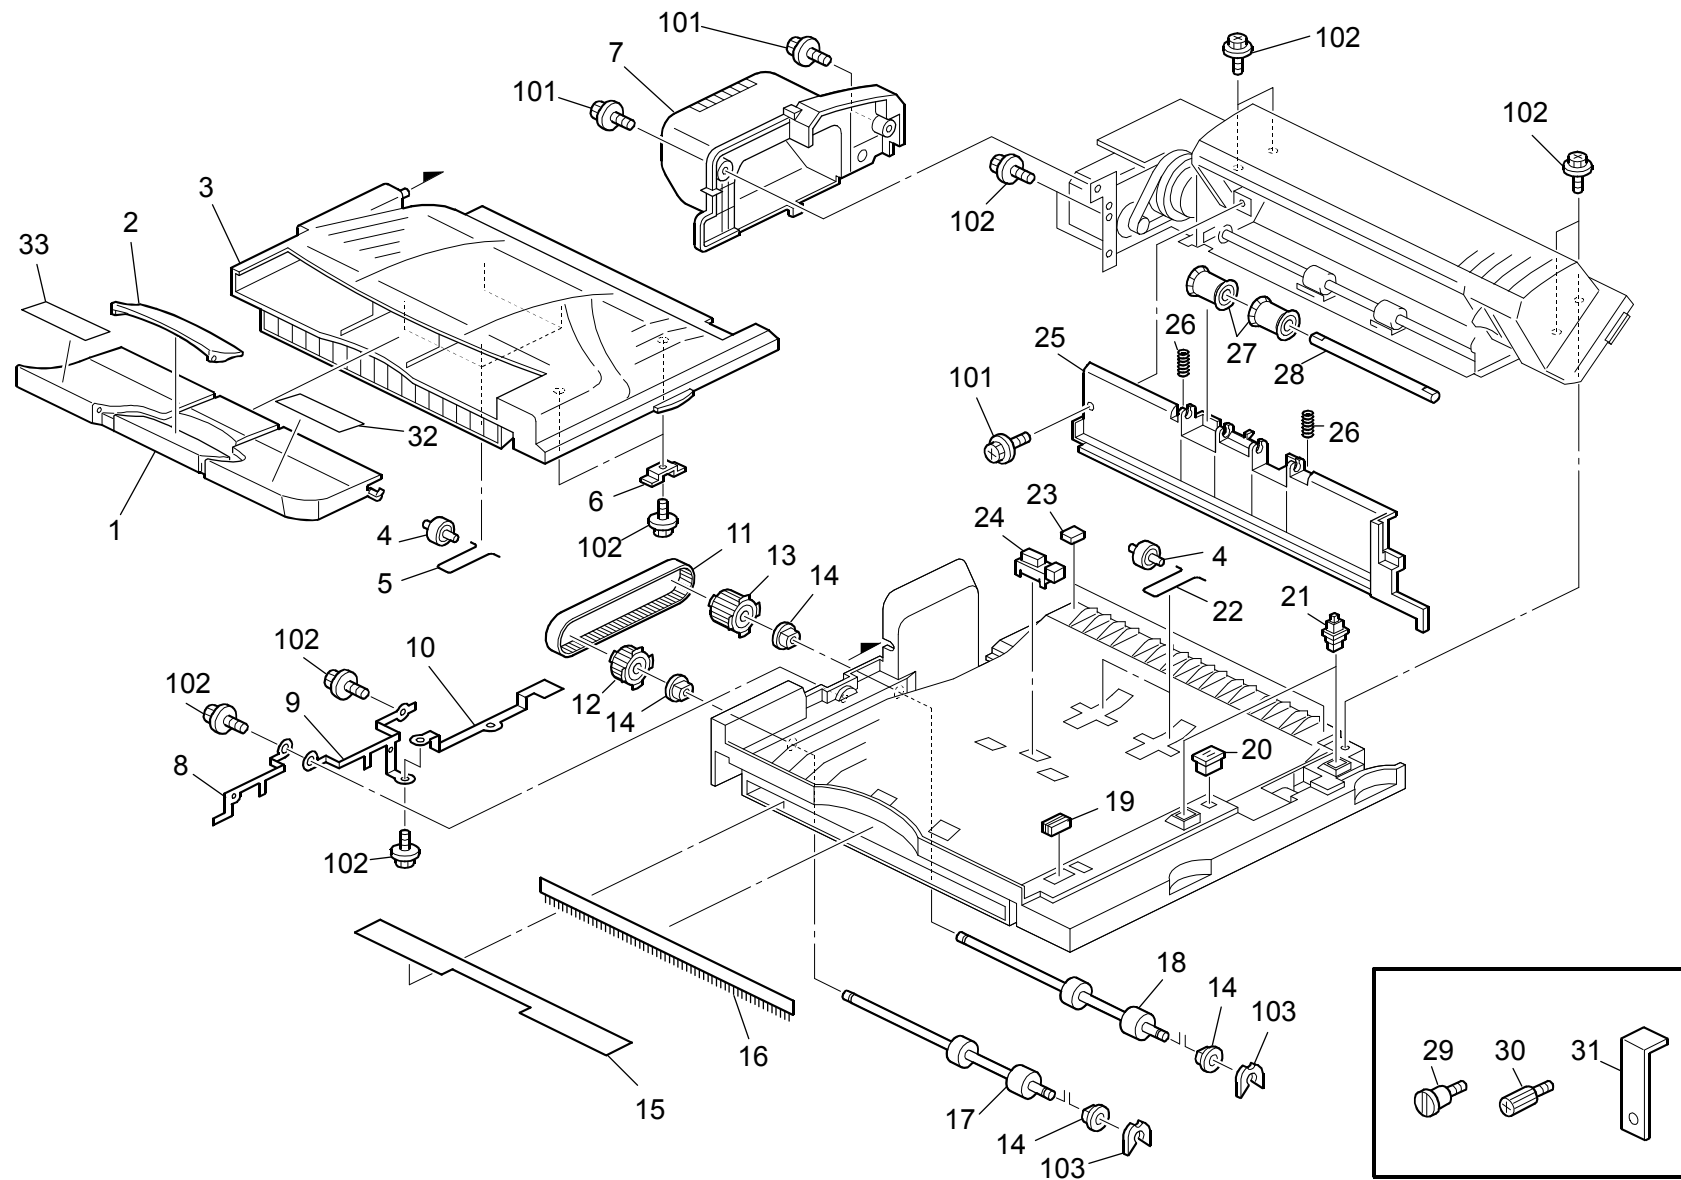

1.BRIDGE UNIT 1 (D634)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D584 4652	Extension Tray:Bridge Unit	1
2	D584 4655	Extension Tray:Turn	1
3	D634 4651	Tray:Exit	1
4	AF04 0621	Driven Roller - Dia14	5
5	B227 4654	Spring - 1.6n	2
6	B024 1264	Magnet Catch	2
7	D634 4672	Cover:Rear	1
8	B227 4646	Ground Plate - Right	1
9	B227 4647	Ground Plate - Left	1
10	B227 4648	Ground Plate - Pap Feed Sensor	1
11	AA04 3598	Timing Belt - 30S2M308	1
12	AB03 0827	Pulley:Mechanical Roller Clutch:Joint Unit	1
13	AB03 0632	Transport Roller Pulley	1
14	AA08 2101	Bushing - 6x10x6	6
15	D386 4656	Decal:Caution:Paper Exit Sub-unit:Joint Unit	1
16	AA12 0137	Discharge Brush:Joint Unit:Fin	1
17	AF02 0633	Transport Roller - 3rd	1
18	AF02 0632	Transport Roller - 2nd	1
19	AG07 0514	Magnet Catch	1
20	AA02 1031	Magnetic Catch	1
21	AW50 0023	Push Switch	2
22	B227 4644	Spring - 0.8n	2
23	AA16 1166	Damping Insulation:Gate Pawl:Frame	4
24	GW01 0007	Photo Reflection Sensor:Exit	1
25	D584 4671	Cover:Exit:Lower:Bridge Unit	1
26	AA06 3596	Compression Spring - Exit Roller	2
27	B227 4673	Exit Roller	2
28	AA14 0875	Driven Shaft	1
29	B227 4633	Knob Screw - M3	1
30	B227 4632	Knob Screw - M3	1
31	B227 4645	Coupling Bracket	1
32	B227 4642	Guide Sheet	1
33	C408 6691	Shield	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0450 3008N	Tapping Screw - M3x8	
103	0805 0089	Retaining Ring - M4	



2.BRIDGE UNIT 2 (D634)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D542 5300	Harness:Interface	1
2	B227 4691	PCB Bracket	1
3	D584 5100	PCB:Bridge Unit:Ass'y	1
4	D542 5310	Harness:Joint Unit	1
5	D542 5320	Harness:Motor	1
6	D372 5892	Cushion - Stepper Motor	1
7	D542 4681	Stepper Motor:Joint Unit:DC 2.4W	1
8	D386 4628	Decal:H-temp Warning:Small	1
9	AA04 3597	Timing Belt - 30S2M336	1
10	AB03 3096	Timing Pulley	1
11	AA04 3596	Timing Belt - 50S2M210	1
12	AB01 1265	Gear - 33Z	1
13	AA08 2101	Bushing - 6x10x6	6
14	GW01 0007	Photo Reflection Sensor:Exit	1
15	B227 4682	Stepper Motor Bracket	1
16	B227 4626	Guide Plate - Middle	1
17	AF02 0631	Transport Roller - 1nd	1
18	B227 4627	Guide Plate - Lower	1
19	AB03 0790	Pulley - 24T	1
20	AA08 2063	Bushing - 8x10x5	2
21	AB03 0789	Timing Pulley - 24T	1
22	AA04 3594	Timing Belt - 30S2M100	1
23	D584 4668	Inner Cover:Drive	1
24	D634 4661	Cover:Right:Open And Close	1
25	AA02 1030	Magnet Catch	2
26	D542 4669	Discharge Brush:Exit	1
27	AF02 5043	Gate Pawl	1
28	AA16 1166	Damping Insulation:Gate Pawl:Frame	4
29	AA06 0994	Tension Spring - 1.6n	1
30	5447 2681	Snap Ring	1
31	AF02 0634	Exit Roller	1
32	AB03 0791	Timing Pulley - 24T	1
33	AA04 3595	Timing Belt - 30S2M140	1
34	B227 4665	Solenoid Bracket	1
35	D542 4663	DC Solenoid:24V:2.1N:Ass'y	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	D634 4662	Inner Cover:Right:DC Solenoid	1
37	D584 4666	Cover:Harness	1
101	0451 3006N	Tapping Screw - 3x6	
102	0450 3008N	Tapping Screw - M3x8	
103	0313 0040N	Screw:M3x4	
104	0360 3008N	Screw:M3x8	
105	1105 0522	Edge Saddle - Les0510	
106	1105 0516	Clamp	
107	1105 0568	Clamp:Lwss-0504	
108	0805 0089	Retaining Ring - M4	

Parts Index

Parts Index

Part No.	Description	Page and Index No.
D634 4651	Tray:Exit	3 - 3
D634 4661	Cover:Right:Open And Close	5 - 24
D634 4662	Inner Cover:Right:DC Solenoid	5 - 36
D634 4672	Cover:Rear	3 - 7

Part No.	Description	Page and Index No.
B024 1264	Magnet Catch	3 - 6
B227 4626	Guide Plate - Middle	5 - 16
B227 4627	Guide Plate - Lower	5 - 18
B227 4632	Knob Screw - M3	3 - 30
B227 4633	Knob Screw - M3	3 - 29
B227 4642	Guide Sheet	3 - 32
B227 4644	Spring - 0.8n	3 - 22
B227 4645	Coupling Bracket	3 - 31
B227 4646	Ground Plate - Right	3 - 8
B227 4647	Ground Plate - Left	3 - 9
B227 4648	Ground Plate - Pap Feed Sensor	3 - 10
B227 4654	Spring - 1.6n	3 - 5
B227 4665	Solenoid Bracket	5 - 34
B227 4673	Exit Roller	3 - 27
B227 4682	Stepper Motor Bracket	5 - 15
B227 4691	PCB Bracket	5 - 2
C408 6691	Shield	3 - 33
D372 5892	Cushion - Stepper Motor	5 - 6
D386 4628	Decal:H-temp Warning:Small	5 - 8
D386 4656	Decal:Caution:Paper Exit Sub-unit:Joint Unit	3 - 15
D542 4663	DC Solenoid:24V:2.1N:Ass'y	5 - 35
D542 4669	Discharge Brush:Exit	5 - 26
D542 4681	Stepper Motor:Joint Unit:DC 2.4W	5 - 7
D542 5300	Harness:Interface	5 - 1
D542 5310	Harness:Joint Unit	5 - 4
D542 5320	Harness:Motor	5 - 5
D584 4652	Extension Tray:Bridge Unit	3 - 1
D584 4655	Extension Tray:Turn	3 - 2
D584 4666	Cover:Harness	5 - 37
D584 4668	Inner Cover:Drive	5 - 23
D584 4671	Cover:Exit:Lower:Bridge Unit	3 - 25
D584 5100	PCB:Bridge Unit:Ass'y	5 - 3

Part No.	Description	Page and Index No.
AA02 1030	Magnet Catch	5 - 25
AA02 1031	Magnetic Catch	3 - 20
AA04 3594	Timing Belt - 30S2M100	5 - 22
AA04 3595	Timing Belt - 30S2M140	5 - 33
AA04 3596	Timing Belt - 50S2M210	5 - 11
AA04 3597	Timing Belt - 30S2M336	5 - 9
AA04 3598	Timing Belt - 30S2M308	3 - 11
AA06 0994	Tension Spring - 1.6n	5 - 29
AA06 3596	Compression Spring - Exit Roller	3 - 26
AA08 2063	Bushing - 8x10x5	5 - 20
AA08 2101	Bushing - 6x10x6	3 - 14
AA08 2101	Bushing - 6x10x6	5 - 13
AA12 0137	Discharge Brush:Joint Unit:Fin	3 - 16
AA14 0875	Driven Shaft	3 - 28
AA16 1166	Damping Insulation:Gate Pawl:Frame	5 - 28
AA16 1166	Damping Insulation:Gate Pawl:Frame	3 - 23
AB01 1265	Gear - 33Z	5 - 12
AB03 0632	Transport Roller Pulley	3 - 13
AB03 0789	Timing Pulley - 24T	5 - 21
AB03 0790	Pulley - 24T	5 - 19
AB03 0791	Timing Pulley - 24T	5 - 32
AB03 0827	Pulley:Mechanical Roller Clutch:Joint Unit	3 - 12
AB03 3096	Timing Pulley	5 - 10
AF02 0631	Transport Roller - 1nd	5 - 17
AF02 0632	Transport Roller - 2nd	3 - 18
AF02 0633	Transport Roller - 3rd	3 - 17
AF02 0634	Exit Roller	5 - 31
AF02 5043	Gate Pawl	5 - 27
AF04 0621	Driven Roller - Dia14	3 - 4
AG07 0514	Magnet Catch	3 - 19
AW50 0023	Push Switch	3 - 21
GW01 0007	Photo Reflection Sensor:Exit	5 - 14
GW01 0007	Photo Reflection Sensor:Exit	3 - 24

Part No.	Description	Page and Index No.
0313 0040N	Screw:M3x4	5 - 103
0360 3008N	Screw:M3x8	5 - 104
0450 3008N	Tapping Screw - M3x8	5 - 102
0450 3008N	Tapping Screw - M3x8	3 - 102
0451 3006N	Tapping Screw - 3x6	3 - 101
0451 3006N	Tapping Screw - 3x6	5 - 101
0805 0089	Retaining Ring - M4	3 - 103
0805 0089	Retaining Ring - M4	5 - 108
1105 0516	Clamp	5 - 106
1105 0522	Edge Saddle - Les0510	5 - 105
1105 0568	Clamp:Lwss-0504	5 - 107

Part No.	Description	Page and Index No.
5447 2681	Snap Ring	5 - 30