

Bypass Tray BY3000
(D370)

Bypass Tray BY3000 (D370)


PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

1.By-Pass Tray 1 (D370)	2
2.By-Pass Tray 2 (D370)	4
Parts Index	8

October ,19 ' 2007

1.By-Pass Tray 1 (D370)

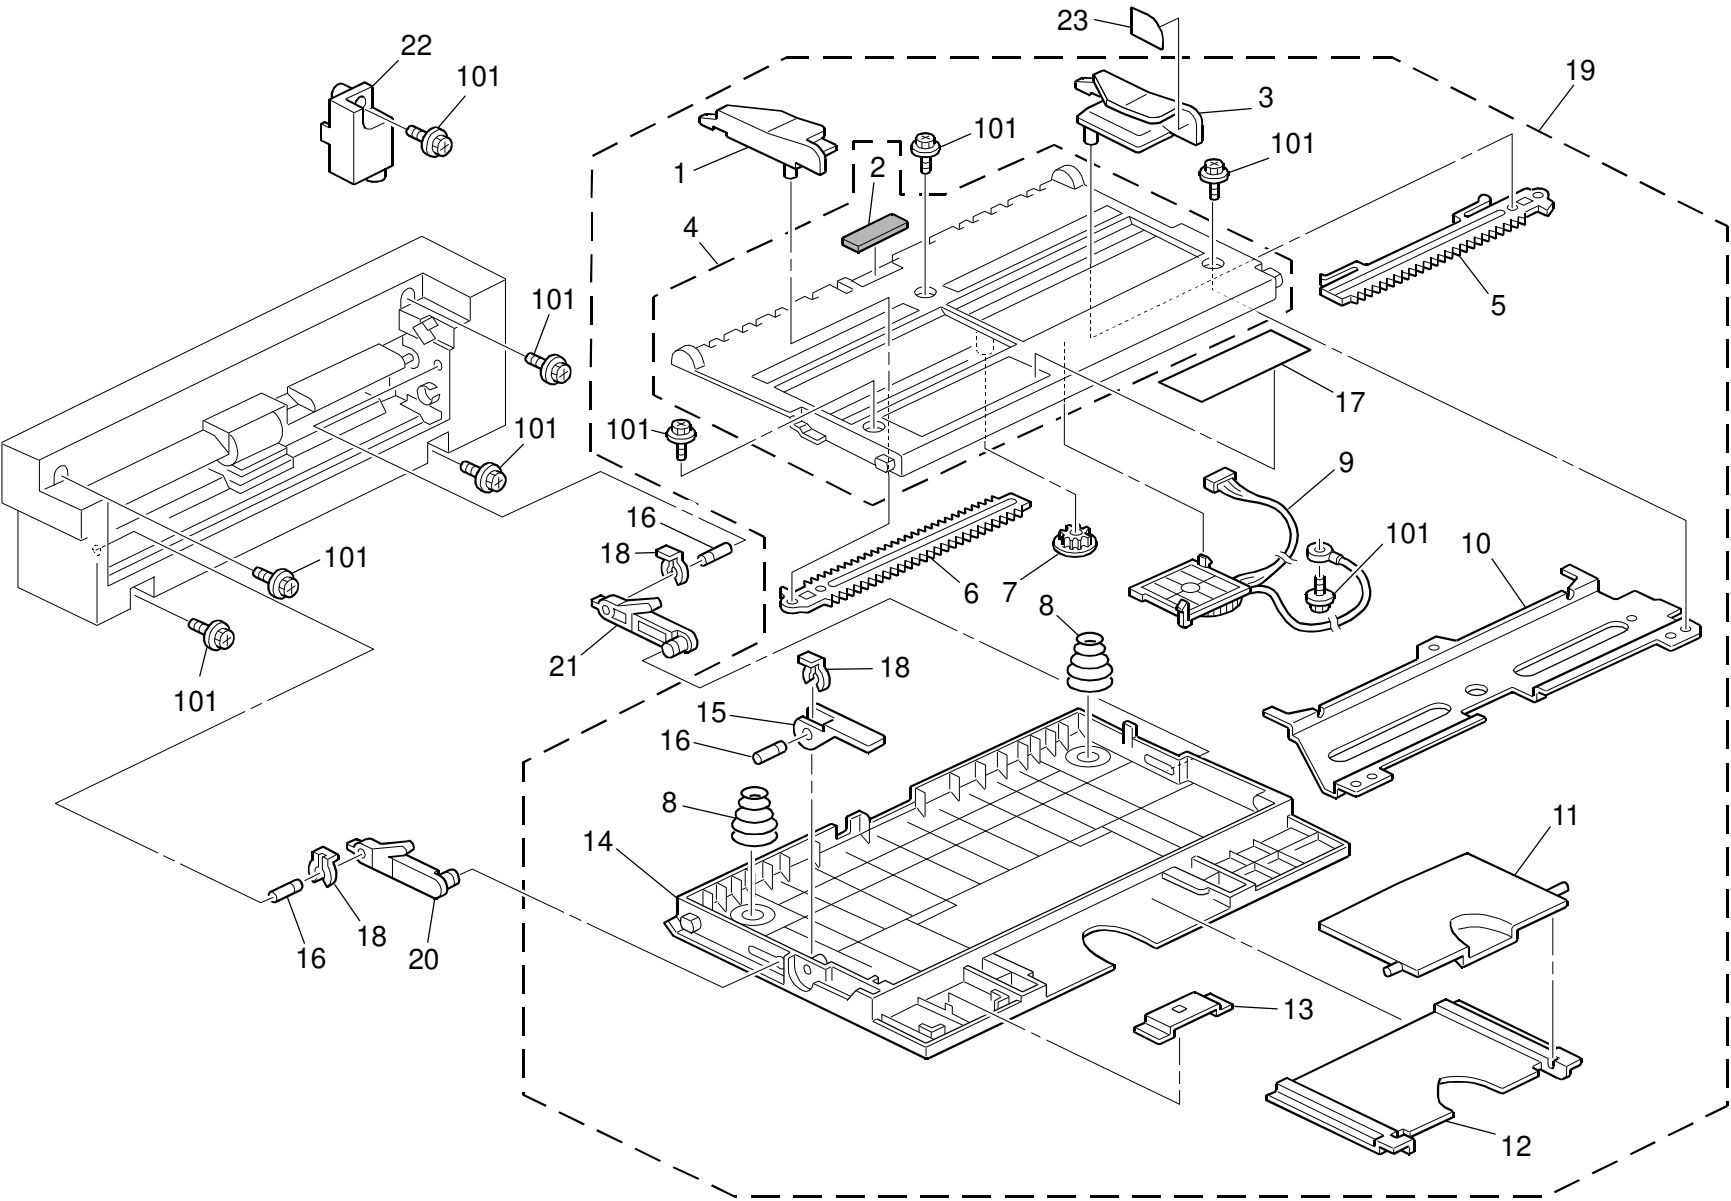


1.By-Pass Tray 1 (D370)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B039 2631	Front Side Fence	1
2	B039 2628	Bottom Plate Pad	1
3	B039 2632	Rear Side Fence	1
4	B039 2630	Tray Bottom Plate	1
5	B039 2638	Rack - Rear Side Fence	1
6	B039 2637	Rack - Front Side Fence	1
7	D010 2639	Gear - 16Z	1
8	AA06 3643	Spring - By-pass Feed Table	2
9	AW50 0034	Paper Size Sensor	1
10	B039 2629	Stay - Tray Bottom Plate	1
11	B039 2620	Paper Guide - Extension	1
12	B039 2621	Paper Guide	1
13	B121 2617	Magnet Catch - By-Pass Feed	1
14	D370 2619	Cover - Manual Feed Table	1
15	D370 2784	Lever:Rising Tray	1
16	B259 2786	Lever Shaft	3
17	D370 2633	Decal:Manual Feed:Paper Set	1
18	5447 2681	Snap Ring	3
19	D370 2601	Manual Feed Table Ass'y	1
20	D370 4504	Front Link - Manual Feed	1
21	D370 4505	Rear Link - Manual Feed	1
22	D019 1370	Cap - Duplex Connector	1
23	D370 2701	Decal:Side Fence	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3008N	Tapping Screw - M3x8	

2.By-Pass Tray 2 (D370)

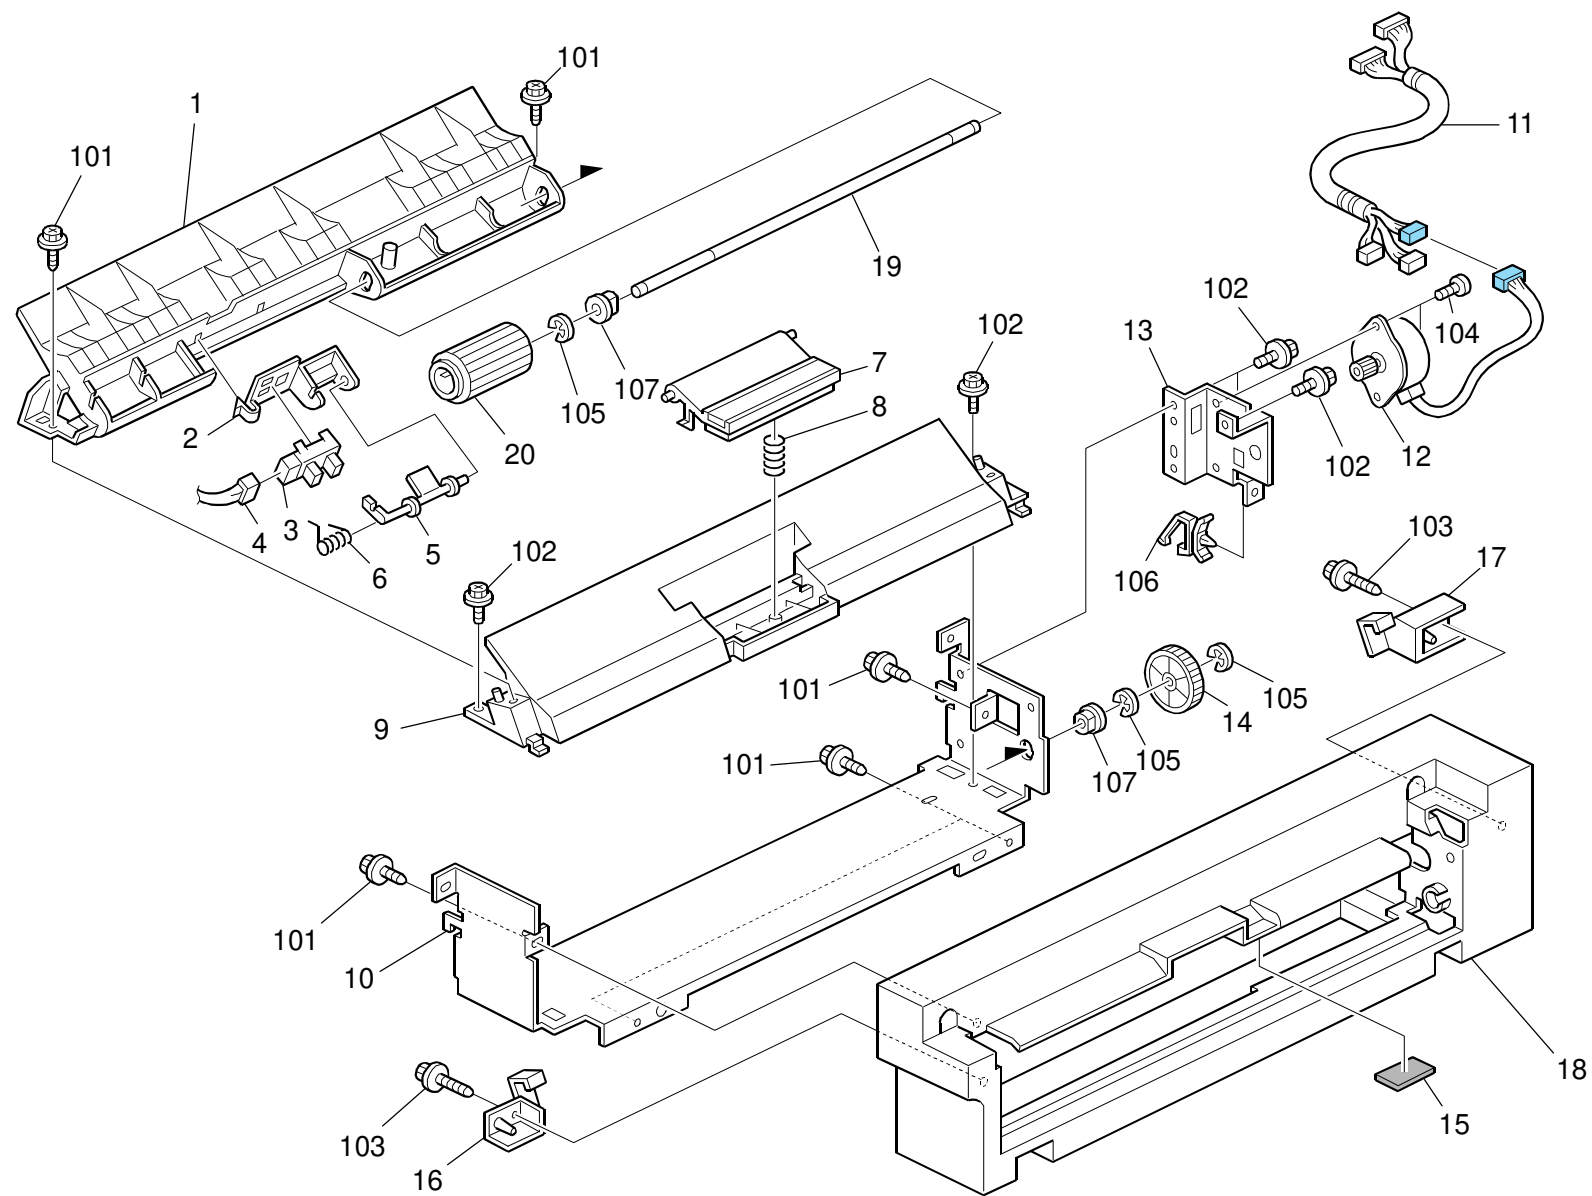

2.By-Pass Tray 2 (D370)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D370 4501	Upper Guide Plate - Manual Feed	1
2	B039 2610	Bracket - Paper End Sensor	1
3	GW02 0020	Photointerruptor:LG248NL1	1
4	D370 5268	Interface Harness - Sensor	1
5	D370 2611	Feeler - Manual Feed	1
6	AA06 6343	Spring - Paper End Sensor	1
7	D010 4650	Separation Pad:Ass'y	1
8	B043 4685	Spring - 2.8N	1
9	D370 2645	Lower Guide Plate - Manual Feed	1
10	D370 4506	Bracket - Manual Feed	1
11	D370 5267	Harness - Manual Feed	1
12	D370 4720	Stepping Motor - Manual Feed	1
13	D370 4705	Bracket - Stepping Motor	1
14	D370 4715	Gear - Manual Feed	1
15	B043 4688	Pad:13x26	1
16	D370 4502	Front Holder - Manual Feed	1
17	D370 4503	Rear Holder - Manual Feed	1
18	D370 4590	Cover - Manual Feed	1
19	D370 2646	Drive Shaft - Manual Feed	1
20	AF03 1058	Roller:Manual Feed	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0450 3008N	Tapping Screw - M3x8	
102	0451 3008N	Tapping Screw - M3x8	
103	0451 3010N	Tapping Screw:3x10	
104	0353 0050N	Screw-M3x5	
105	0720 0040E	Retaining Ring - M4	
106	1105 0488	Harness Clamp	
107	0805 3480	Bushing - 6MM	

Parts Index

Parts Index

Part No.	Description	Page and Index No.
D370 2601	Manual Feed Table Ass'y	3 - 19
D370 2611	Feeler - Manual Feed	5 - 5
D370 2619	Cover - Manual Feed Table	3 - 14
D370 2633	Decal:Manual Feed:Paper Set	3 - 17
D370 2645	Lower Guide Plate - Manual Feed	5 - 9
D370 2646	Drive Shaft - Manual Feed	5 - 19
D370 2701	Decal:Side Fence	3 - 23
D370 2784	Lever:Rising Tray	3 - 15
D370 4501	Upper Guide Plate - Manual Feed	5 - 1
D370 4502	Front Holder - Manual Feed	5 - 16
D370 4503	Rear Holder - Manual Feed	5 - 17
D370 4504	Front Link - Manual Feed	3 - 20
D370 4505	Raer Link - Manual Feed	3 - 21
D370 4506	Bracket - Manual Feed	5 - 10
D370 4590	Cover - Manual Feed	5 - 18
D370 4705	Bracket - Stepping Motor	5 - 13
D370 4715	Gear - Manual Feed	5 - 14
D370 4720	Stepping Motor - Manual Feed	5 - 12
D370 5267	Harness - Manual Feed	5 - 11
D370 5268	Interface Harness - Sensor	5 - 4

Part No.	Description	Page and Index No.
B039 2610	Bracket - Paper End Sensor	5 - 2
B039 2620	Paper Guide - Extension	3 - 11
B039 2621	Paper Guide	3 - 12
B039 2628	Bottom Plate Pad	3 - 2
B039 2629	Stay - Tray Bottom Plate	3 - 10
B039 2630	Tray Bottom Plate	3 - 4
B039 2631	Front Side Fence	3 - 1
B039 2632	Rear Side Fence	3 - 3
B039 2637	Rack - Front Side Fence	3 - 6
B039 2638	Rack - Rear Side Fence	3 - 5
B043 4685	Spring - 2.8N	5 - 8
B043 4688	Pad:13x26	5 - 15
B121 2617	Magnet Catch - By-Pass Feed	3 - 13
B259 2786	Lever Shaft	3 - 16
D010 2639	Gear - 16Z	3 - 7
D010 4650	Separation Pad:Ass'y	5 - 7
D019 1370	Cap - Duplex Connector	3 - 22

Part No.	Description	Page and Index No.
AA06 3643	Spring - By-pass Feed Table	3 - 8
AA06 6343	Spring - Paper End Sensor	5 - 6
AF03 1058	Roller:Manual Feed	5 - 20
AW50 0034	Paper Size Sensor	3 - 9
GW02 0020	Photointerruptor:LG248NL1	5 - 3

Part No.	Description	Page and Index No.
0353 0050N	Screw-M3x5	5 - 104
0450 3008N	Tapping Screw - M3x8	5 - 101
0451 3008N	Tapping Screw - M3x8	3 - 101
0451 3008N	Tapping Screw - M3x8	5 - 102
0451 3010N	Tapping Screw:3x10	5 - 103
0720 0040E	Retaining Ring - M4	5 - 105
0805 3480	Bushing - 6MM	5 - 107
1105 0488	Harness Clamp	5 - 106

