

ARDF DF2010 (B814)

This parts catalog includes the changes announced in RB814001

ARDF DF2010 (B814)


PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

1.ARDF 1 (B814).....	2
2.ARDF 2 (B814).....	4
3.ARDF 3 (B814).....	6
4.ARDF 4 (B814).....	8
5.ARDF 5 (B814).....	10
6.ARDF 6 (B814).....	12
7.ARDF 7 (B814).....	14
8.Decals And Documents (B814).....	16
PARTS INDEX	19

November 22, 2010

1.ARDF 1 (B814)

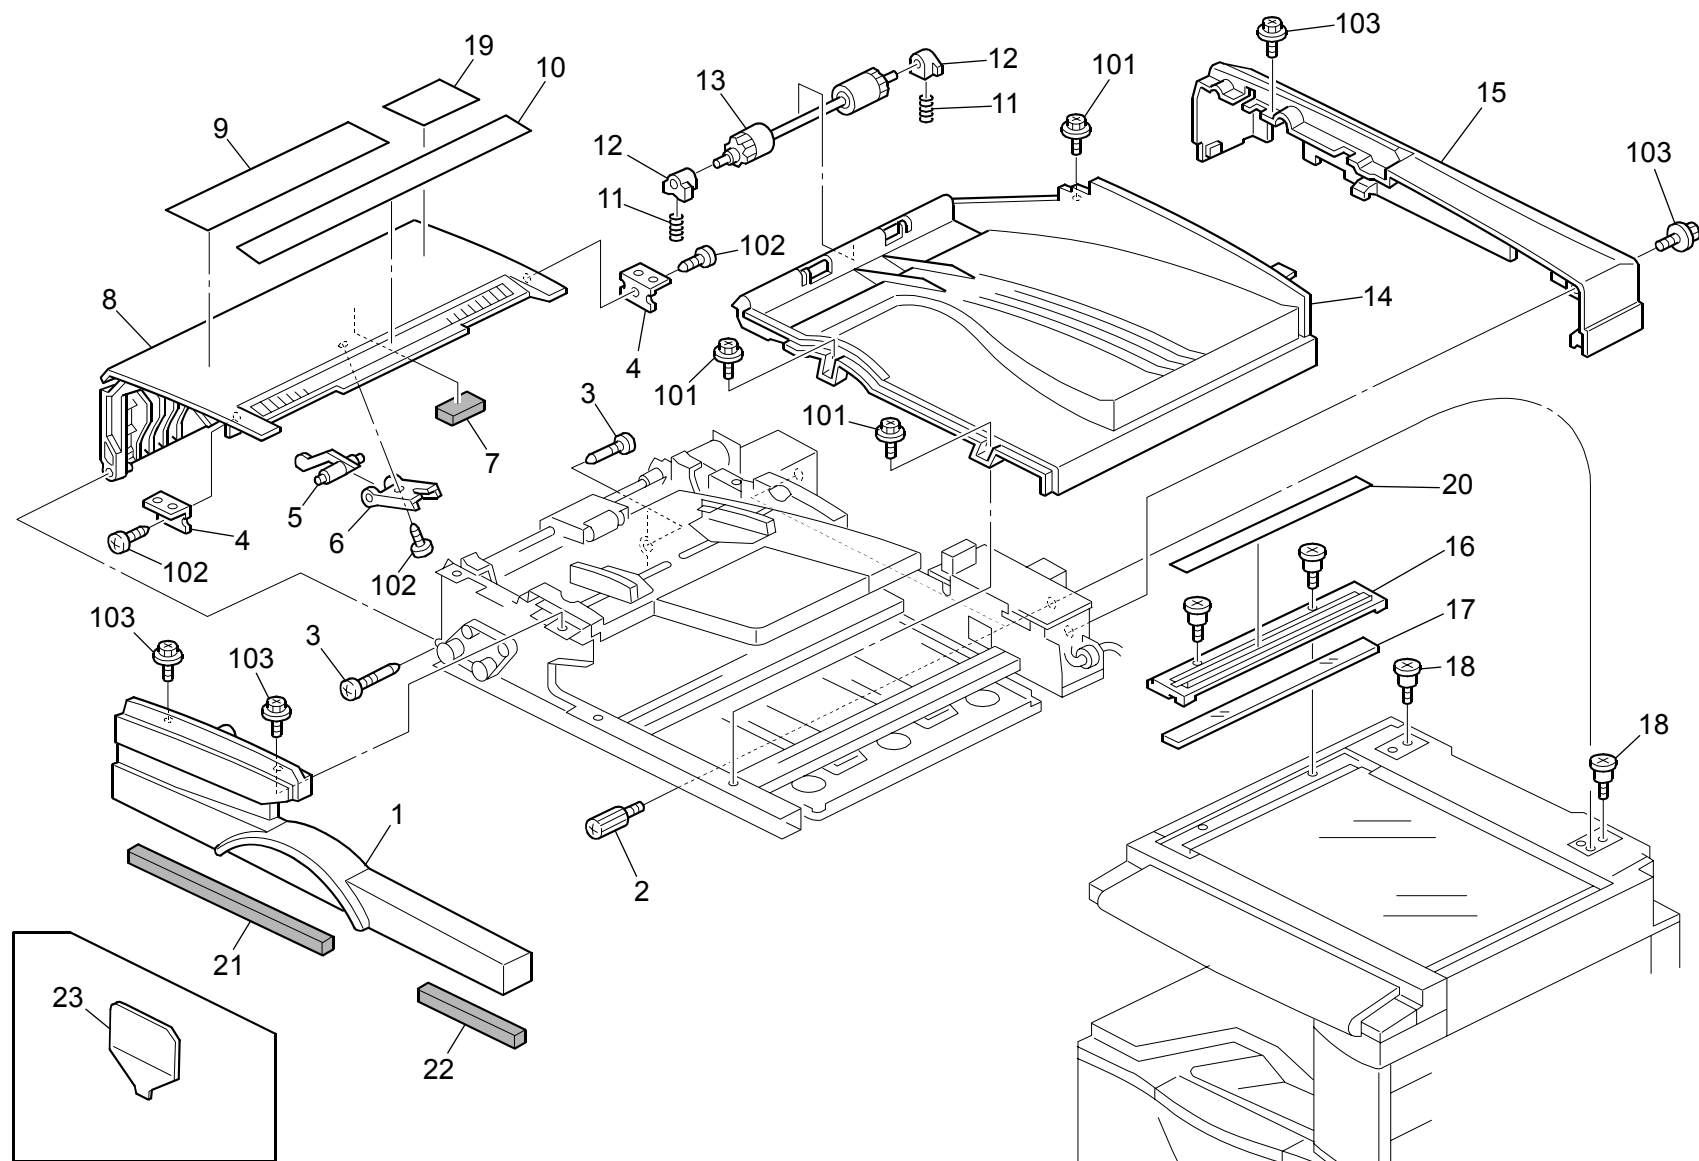


1.ARDF 1 (B814)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B386 4811	Front Cover	1
2	A628 3115	Knob Screw - M4	2
3	AA14 3788	Pin:Guide Plate:Paper Feed	2
4	B386 4873	Positioning Plate	2
5	A859 4871	Actuator - Original Sensor	1
6	A859 4872	Actuator Bracket	1
7	A859 4881	Cushion Paper Feed	1
8	B386 4842	Left Cover	1
9	B814 6014	Decal - Misfeed Removal	1
10	B813 6021	Decal - Size Indication Cover	1
11	AA06 3311	Transport Roller Spring	2
12	A859 4836	Bushing Exit Driven Roller	2
13	A859 4837	Exit Driven Roller	1
14	B386 4871	Upper Cover	1
15	B386 4821	Rear Cover	1
16	B386 7102	Scale:Machine Or Copier:Adhesion	1
17	AC01 3004	Exposure Glass	1
18	A859 7211	Stepped Screw	2
19	B652 2379	Decal:Caution:Original:5-lang	1
20	B814 6053	Decal - Scale	1
20	B814 6054	Decal - Scale Inch	1
21	B386 4874	Sponge:Cover:Front	1
22	B386 4872	Sponge:Cover:Front Right	1
23	B386 3118	Standard Screw Driver:Document Feeder	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0452 3008N	Tapping Screw - M3x8	
103	0451 3008N	Tapping Screw - M3x8	

2.ARDF 2 (B814)

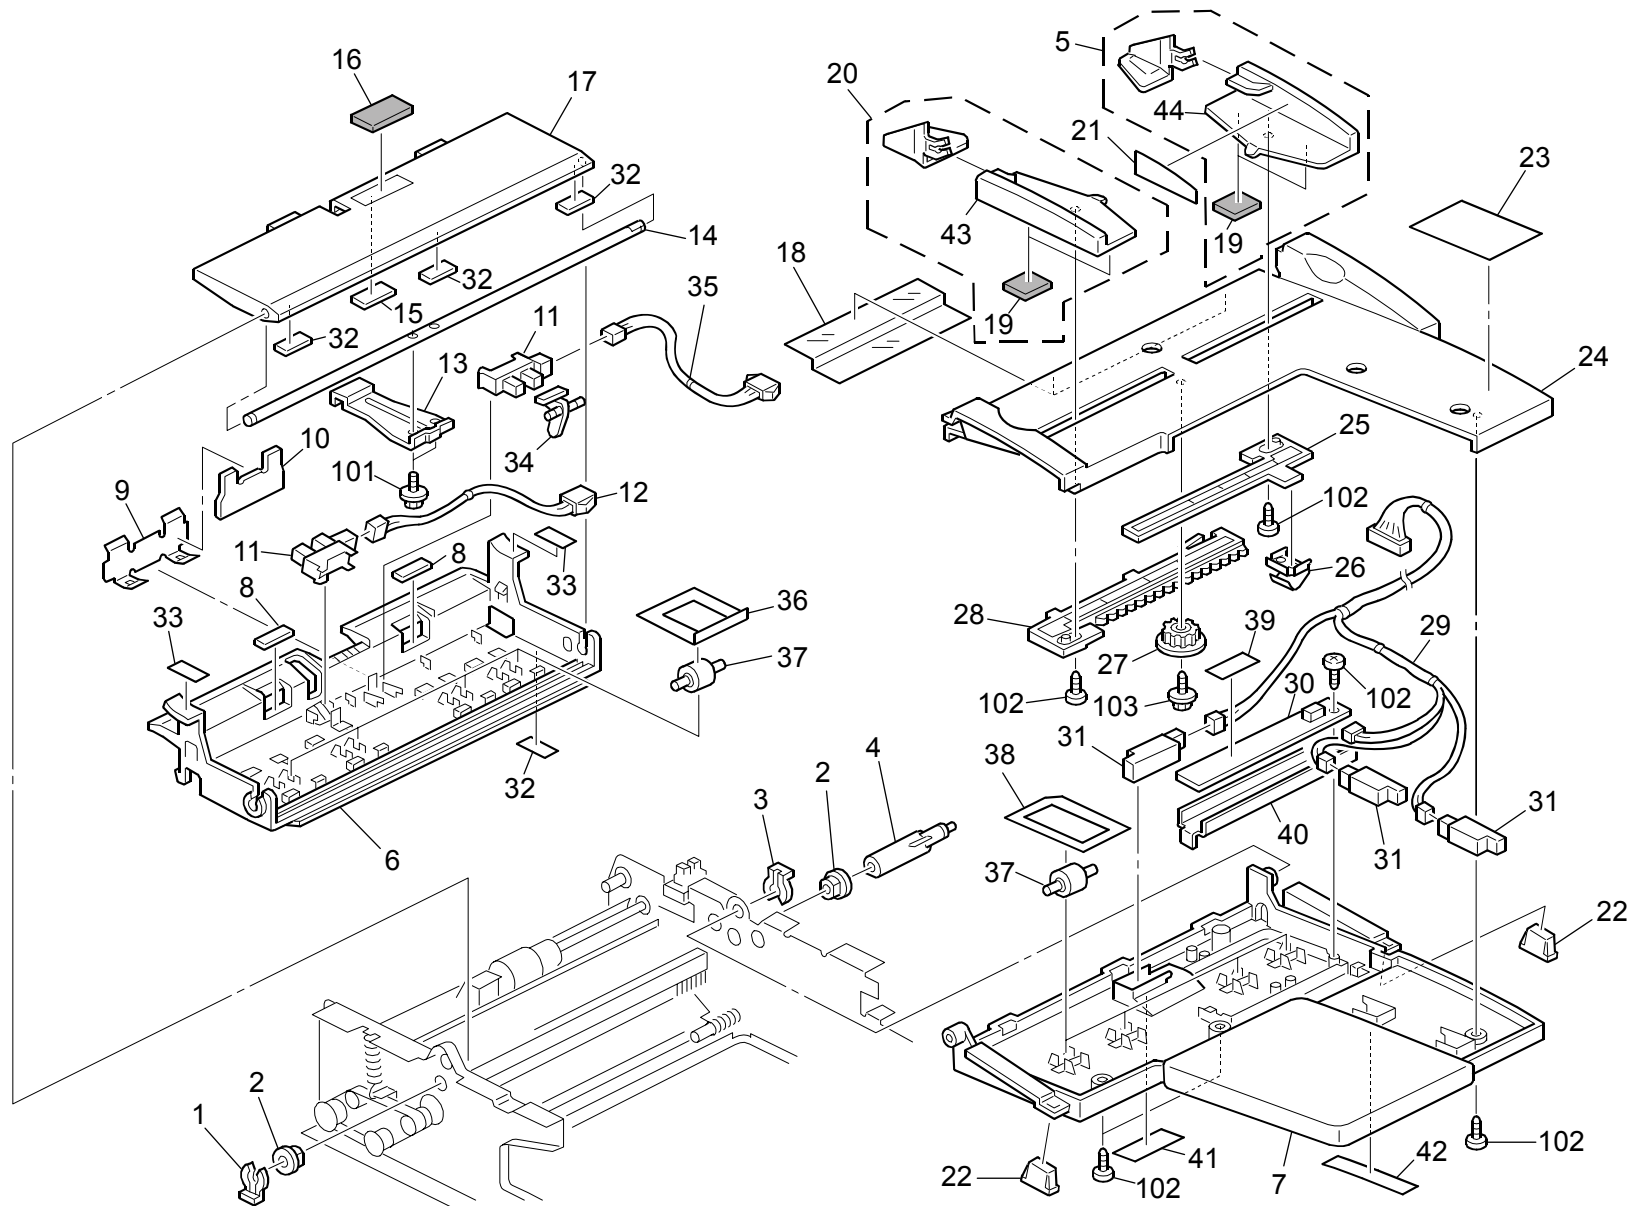


2.ARDF 2 (B814)

Index No.	Part No.	Description	Q'ty Per Assembly
1	5447 2681	Snap Ring	1
2	H060 2126	Bushing - M6x7	2
3	5215 2621	Snap Ring - M6	1
4	A859 2355	Lever Pressure Plate	1
5	B386 4651	Inner Back Side Fence Ass'y	1
6	A859 2311	Guide Plate Paper Feed	1
7	B810 4630	Paper Tray:Behind:Alps-f	1
8	A859 2319	Cushion Base	2
9	A859 2317	Guide Separation Pad	1
10	A859 2315	Separation Pad	1
11	AW02 0141	Photointerruptor	2
12	B617 5720	Harness - Registration Sensor	1
13	B386 2353	Pressure Plate - Base	1
14	A859 2354	Shaft Base	1
15	A859 4876	Cushion Left	1
16	A859 2352	Pad Pressure Plate	1
17	B386 2351	Original Feed Plate	1
18	A858 4681	Sheet - Paper Tray	2
19	A351 4951	Left Side Guide Pad	4
20	B386 4641	Front Side Fence Ass'y	1
21	B814 6043	Decal - Side Fence	1
22	G012 1531	Magnet	2
23	B813 6033	Decal - Original Table	1
24	B386 4621	Upper Original Table	1
25	A859 4662	Rack - Rear Side Fence	1
26	A859 4663	Electrode Plate - Side Fence	1
27	A859 4665	Gear - 16Z	1
28	A859 4661	Rack - Front Side Fence	1
29	B617 5715	Harness - Original Tray	1
30	B386 5550	Paper Size Sensor Board	1
31	AW01 0112	Photo Refiection Sensor:Original Table	3
32	B386 2356	Base Cushion - Behind	4
33	A858 6022	Decal - Blue	2
34	A858 2319	Feeler - Reverse	1
35	B617 5706	Harness - Reverse Sensor	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	A858 2313	Spring Plate Pressure Roller Feed	4
37	A858 4671	Roller Driven	8
38	A858 4676	Spring Plate Pressure Roller	4
39	A859 4664	Sheet - Paper Size Sensor Board	1
40	B386 4693	Mylar Seal	1
41	B386 4692	Mylar Seal - 16x45	1
42	B386 4691	Mylar Seal - 28x107	1
43	B386 4710	Front Side Fence	1
44	B386 4720	Rear Side Fence	1
101	0451 3006N	Tapping Screw - 3x6	
102	0452 3008N	Tapping Screw - M3x8	
103	0450 3008N	Tapping Screw - M3x8	

3.ARDF 3 (B814)

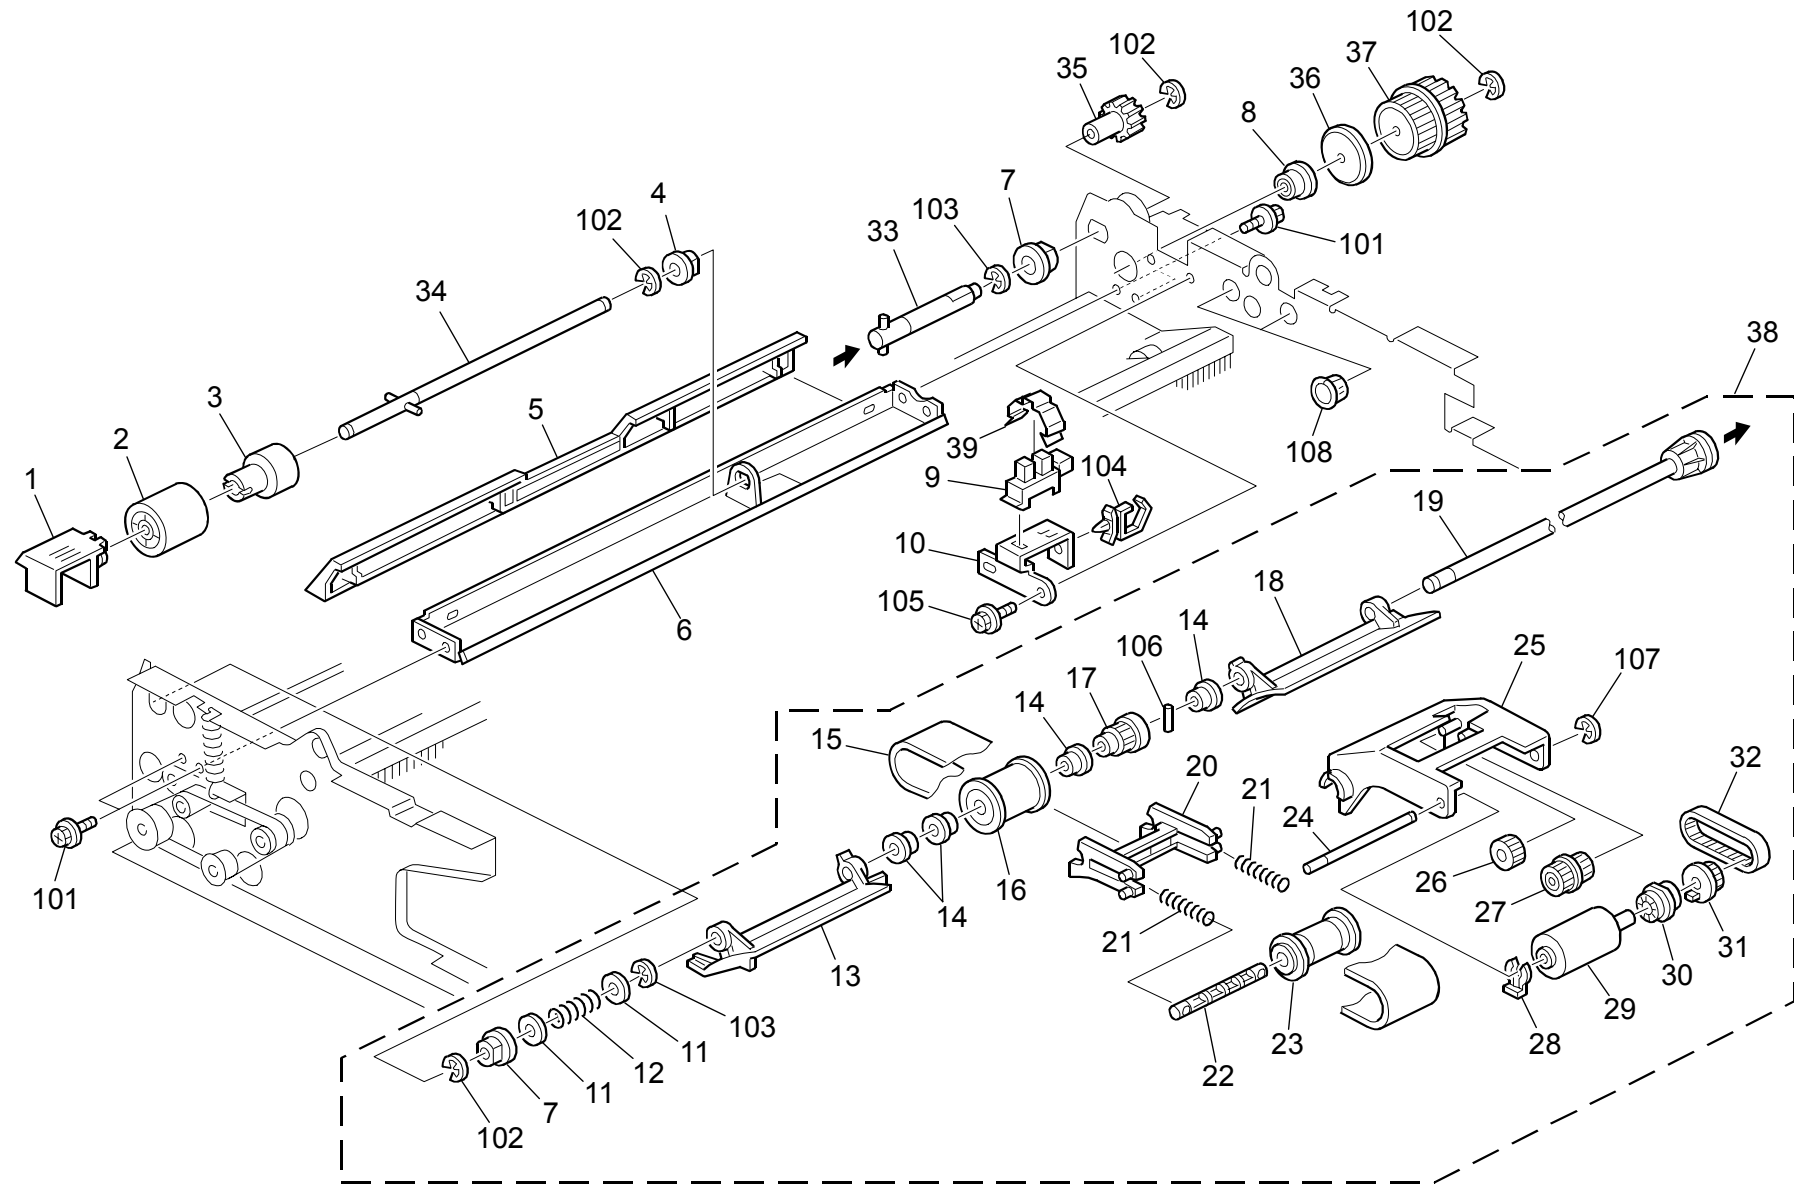


3.ARDF 3 (B814)



Index No.	Part No.	Description	Q'ty Per Assembly
1	A859 2220	Cover Reverse Roller	1
2	A859 2241	Reverse Roller	1
3	A294 6700	Torque Limiter - 53mnxm	1
4	5053 0447	Bushing - 6mm	1
5	A859 1621	Separation Guide	1
6	B386 1610	Separation Stay	1
7	5304 1639	Bushing - 8mm	2
8	A859 2230	Ball Bearing - 6x13x5	1
9	AW02 0141	Photointerruptor	1
10	B386 1123	Sensor Bracket	1
11	AA13 2013	Spacer	2
12	AA06 3435	Compression Spring:Paper Feed:Joint	1
13	A859 2132	Front Guide - Paper Feed	1
14	A628 1225	Bushing - 8mm	4
15	A859 2141	Belt Paper Feed	1
16	A859 2114	Drive Roller - Paper Feed Belt	1
17	A859 2121	Gear - 22Z	1
18	A859 2131	Rear Guide - Paper Feed	1
19	A859 2120	Drive Shaft - Paper Feed Belt	1
20	A859 2110	Belt Holder	1
21	B386 3320	Spring:Belt:Paper Feed:8n	2
22	A859 2112	Drive Shaft - Paper Feed Belt	1
23	B387 2113	Roller - Paper Feed Belt	1
24	A859 2162	Shaft - Pick Up Roller	1
25	G412 3821	Holder - Pick Up	1
26	A859 2167	Gear - 22Z	1
27	G412 3831	Pulley - 22Z	1
28	5206 2686	Snap Ring	1
29	B386 2171	Pickup Roller	1
30	A859 2163	Collar Pick Up	1
31	A859 2164	Pulley - 2Z	1
32	A859 2166	Timing Belt - 2XL	1
33	A859 4216	Shaft - Electromagnetic Clutch	1
34	A859 2210	Shaft - Reverse Roller	1
35	A858 4231	Gear - 20Z	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	A859 4222	Flange - Pulley	1
37	A858 4221	Gear - 31Z	1
38	B386 2100	Belt Unit:Paper Feed:Ass'y	1
39	B386 1128	Spring Plate Sensor On Off Detector	1
101	0454 3006Q	Tapping Screw - M3x6	
102	0720 0040E	Retaining Ring - M4	
103	0720 0060E	Retaining Ring - M6	
104	1105 0109	Cord Keep	
105	0451 3006N	Tapping Screw - 3x6	
106	0632 0100G	Pin - 2x10mm	
107	0720 0030E	Retaining Ring - M3	
108	1106 0193	Bushing - 7.9mm	

4.ARDF 4 (B814)

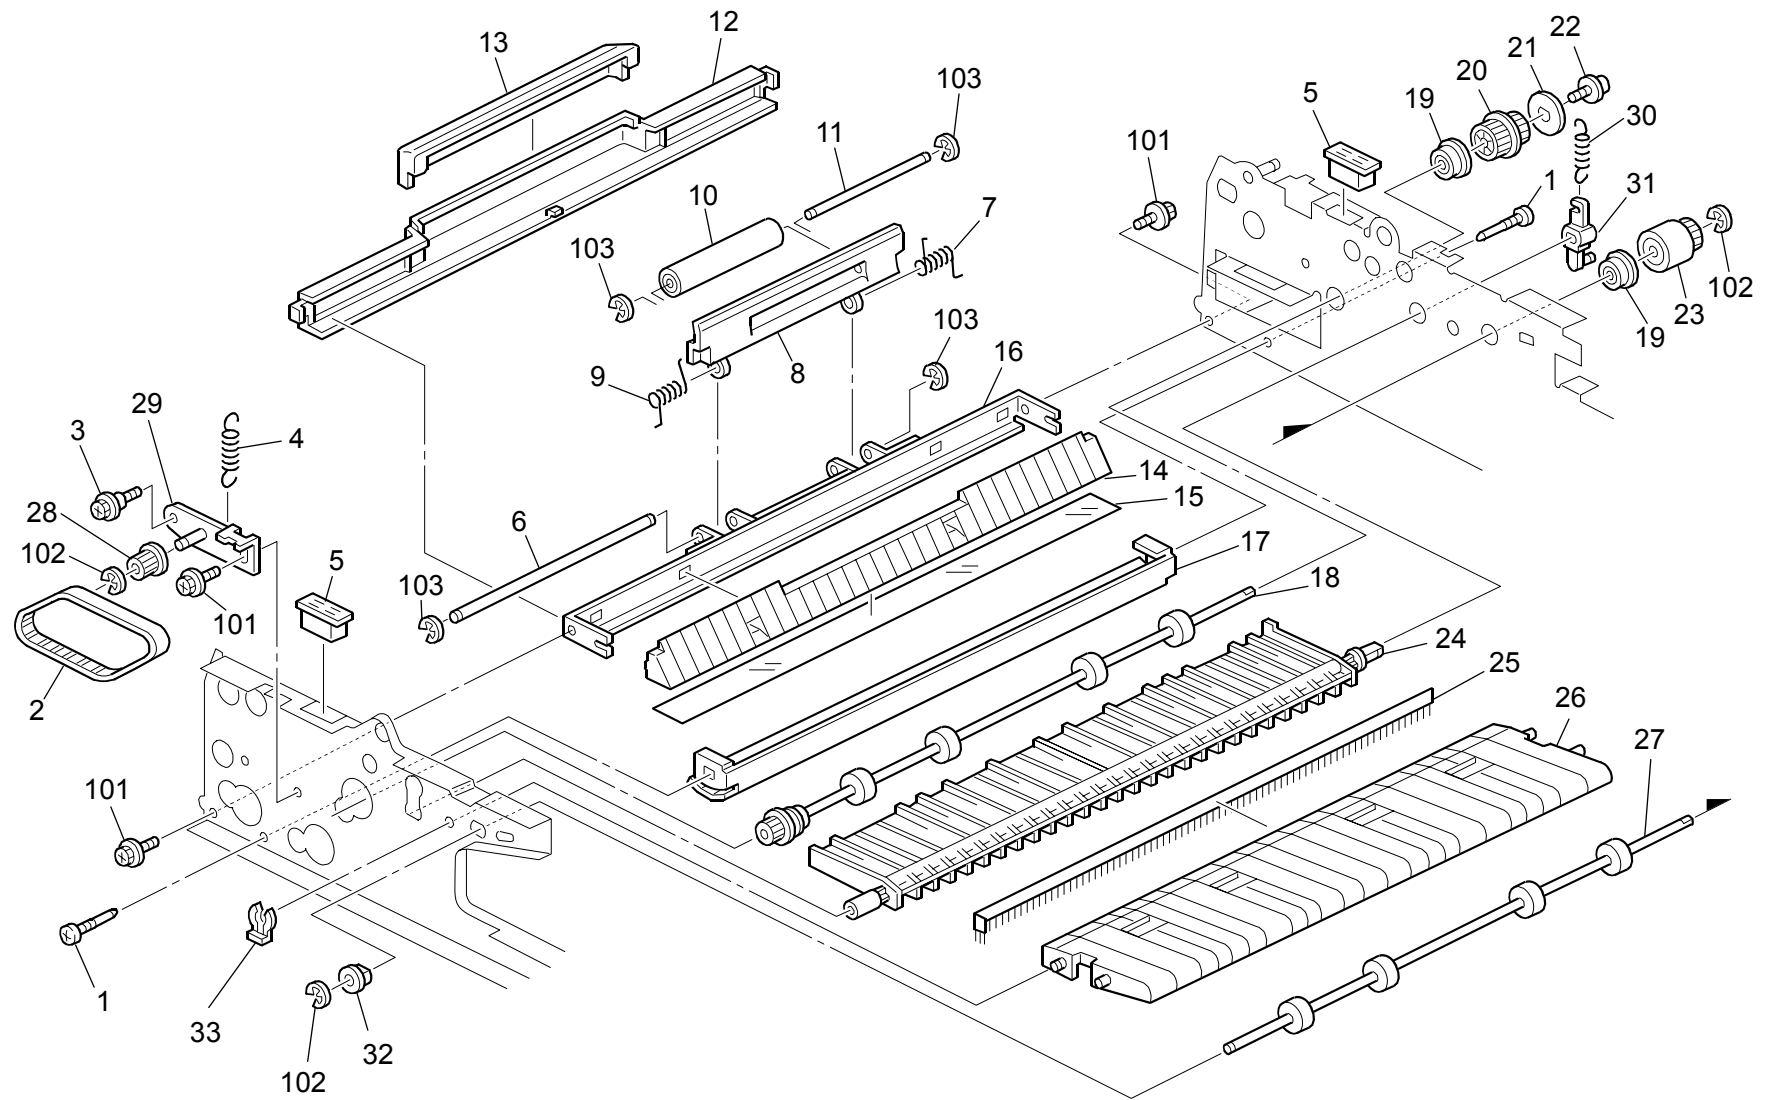


4.ARDF 4 (B814)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA14 3788	Pin:Guide Plate:Paper Feed	2
2	A859 4331	Timing Belt - 2XL	1
3	AA14 3790	Screw:Contact Point	1
4	A859 4341	Tension Spring	1
5	AG07 0513	Magnet Catch	2
6	A859 3317	Shaft - Contact Point	1
7	B386 3322	Torsion Spring:Pressure:Front:20n	1
8	A859 3316	Lever - Pullout	1
9	B386 3321	Torsion Spring:Pressure:Rear:20n	1
10	B386 3387	Roller:Driven:Transport	1
11	A859 3313	Driven Shaft - Pressure	1
12	B386 4881	Left Lower Cover	1
13	B386 4856	Cover - Transport Driven Roller	1
14	A859 1723	Left Lower Guide	1
15	G412 3611	Guide Mylar	1
16	B386 1710	Left Lower Stay	1
17	B386 3513	Guide:Exposure Glass	1
18	B386 3130	Exit Roller - Drive	1
19	A859 2230	Ball Bearing - 6x13x5	2
20	A859 4271	Pulley - 31/32Z	1
21	A859 4272	Flange	1
22	B386 2214	Screw:M3x5	1
23	A858 4392	Torque Limiter	1
24	A858 3710	Exchange Powl - Reverse	1
25	A859 3225	Discharge Brush	1
26	B386 4861	Reverse Tray	1
27	B386 3140	Reverse Roller - Drive	1
28	A859 4321	Pulley-20Z	1
29	B386 4311	Adjusting Pin - M6	1
30	A858 3717	Tension Spring - Exchange Powl	1
31	A858 3715	Lever - Exchange Powl	1
32	5053 0447	Bushing - 6mm	1
33	5447 2681	Snap Ring	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0720 0040E	Retaining Ring - M4	
103	0720 0030E	Retaining Ring - M3	

5.ARDF 5 (B814)

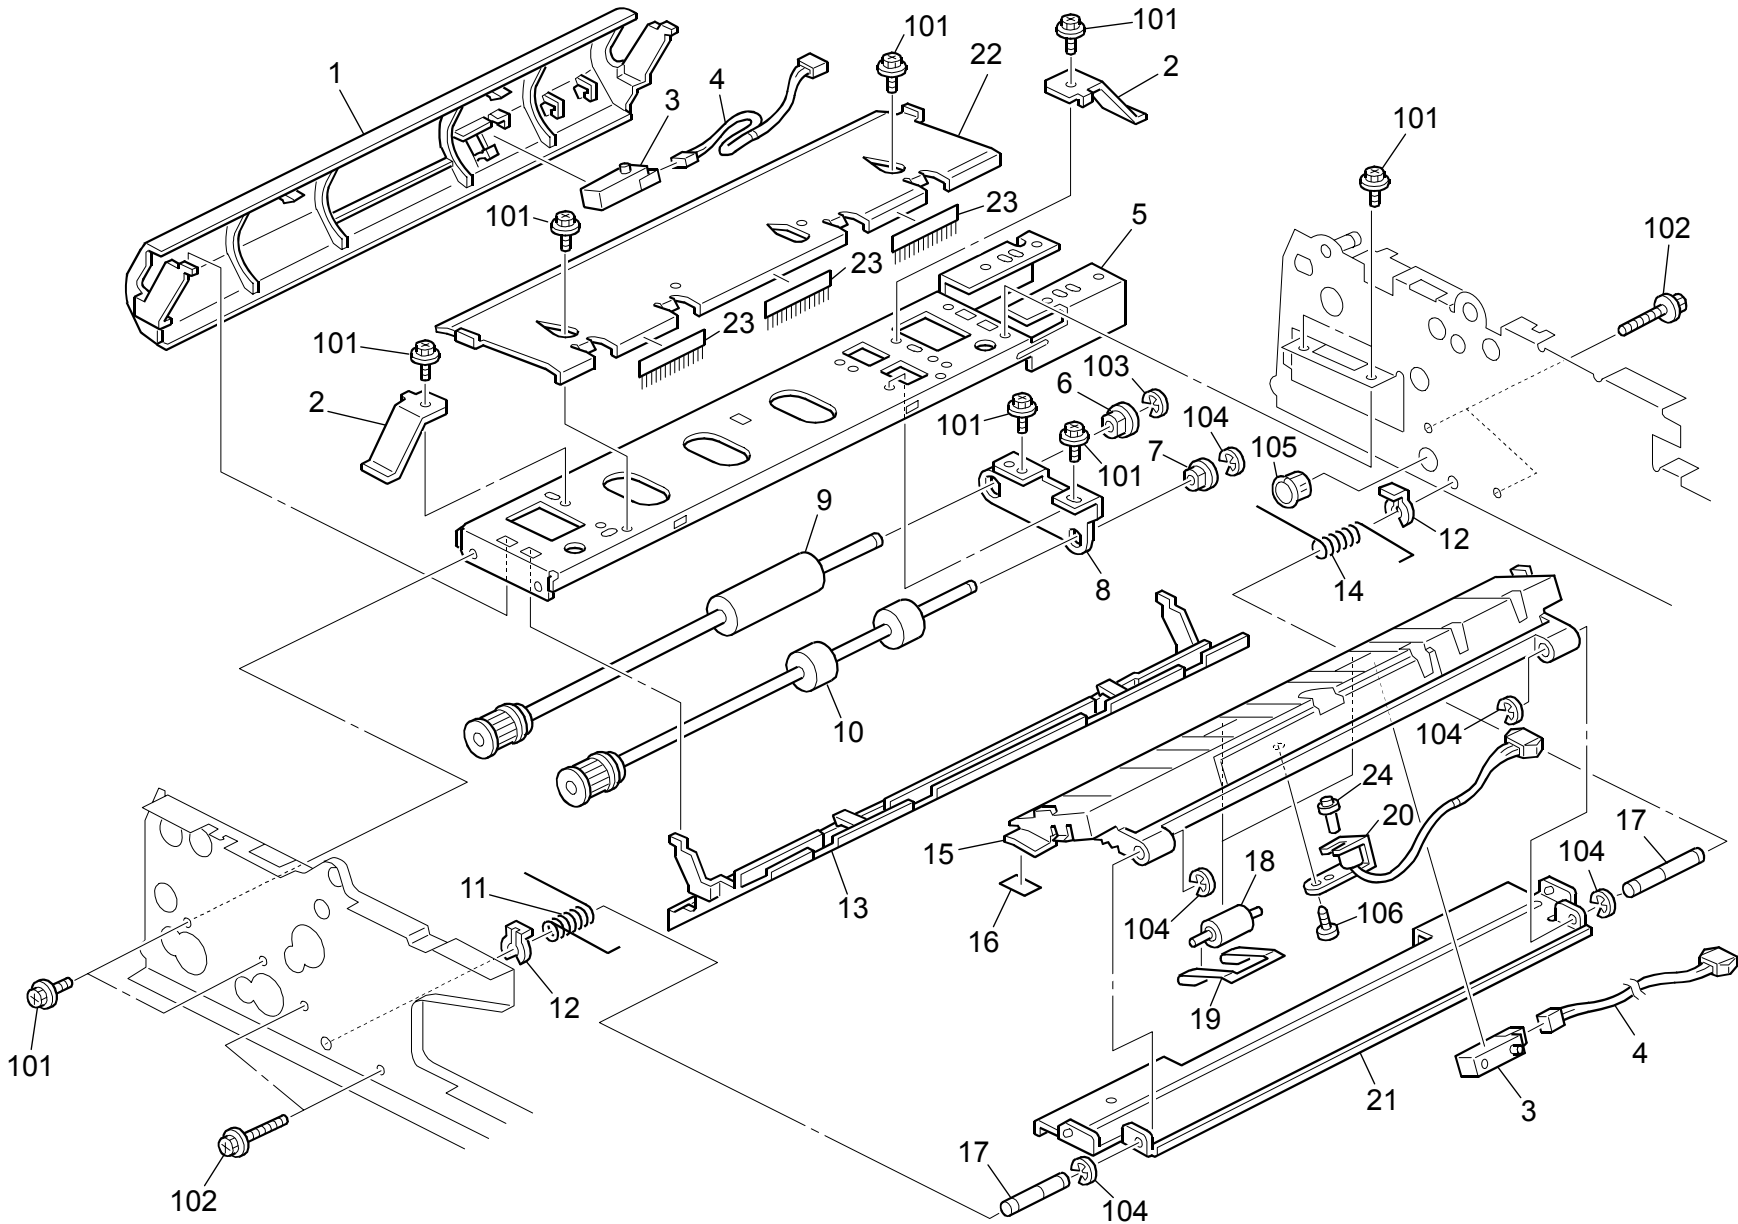


5.ARDF 5 (B814)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A859 3210	Guide Plate - Transport Roller	1
2	B386 1322	Spring Plate Guide	2
3	AW01 0109	Photo Refiection Sensor:Ps117ed1	2
4	B617 5705	Harness - Sensor	2
5	B386 1311	Left Stay	1
6	5304 1639	Bushing - 8mm	1
7	5053 0447	Bushing - 6mm	1
8	B386 1320	Bracket - Transport Roller	1
9	A859 3110	Transport Roller	1
10	B386 3121	Transport Roller - Middle	1
11	A859 3431	Spring Front	1
12	5447 2681	Snap Ring	2
13	A859 3220	Guide Plate - Upper Exit	1
14	A859 3430	Spring Rear	1
15	A859 3411	Exit Guide Plate	1
16	A859 6023	Decal Green	1
17	A859 3412	Shaft - Exit Guide Plate	2
18	B386 3389	Roller:Driven:Middle:Ep35	2
19	A859 3425	Spring Plate	2
20	B714 5006	DC Solenoid:Transmitted Rubber Stamp	1
21	B386 3410	Cover:Guide Plate:Exit:Ass'y	1
22	B386 3234	Guide Plate:Reverse:Ass'y	1
23	B386 3236	Discharge Brush - L50	3
24	H511 5007	Stamp	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0451 4014N	Tapping Screw:M4x14	
103	0720 0060E	Retaining Ring - M6	
104	0720 0040E	Retaining Ring - M4	
105	1106 0193	Bushing - 7.9mm	
106	0452 3008N	Tapping Screw - M3x8	

6.ARDF 6 (B814)

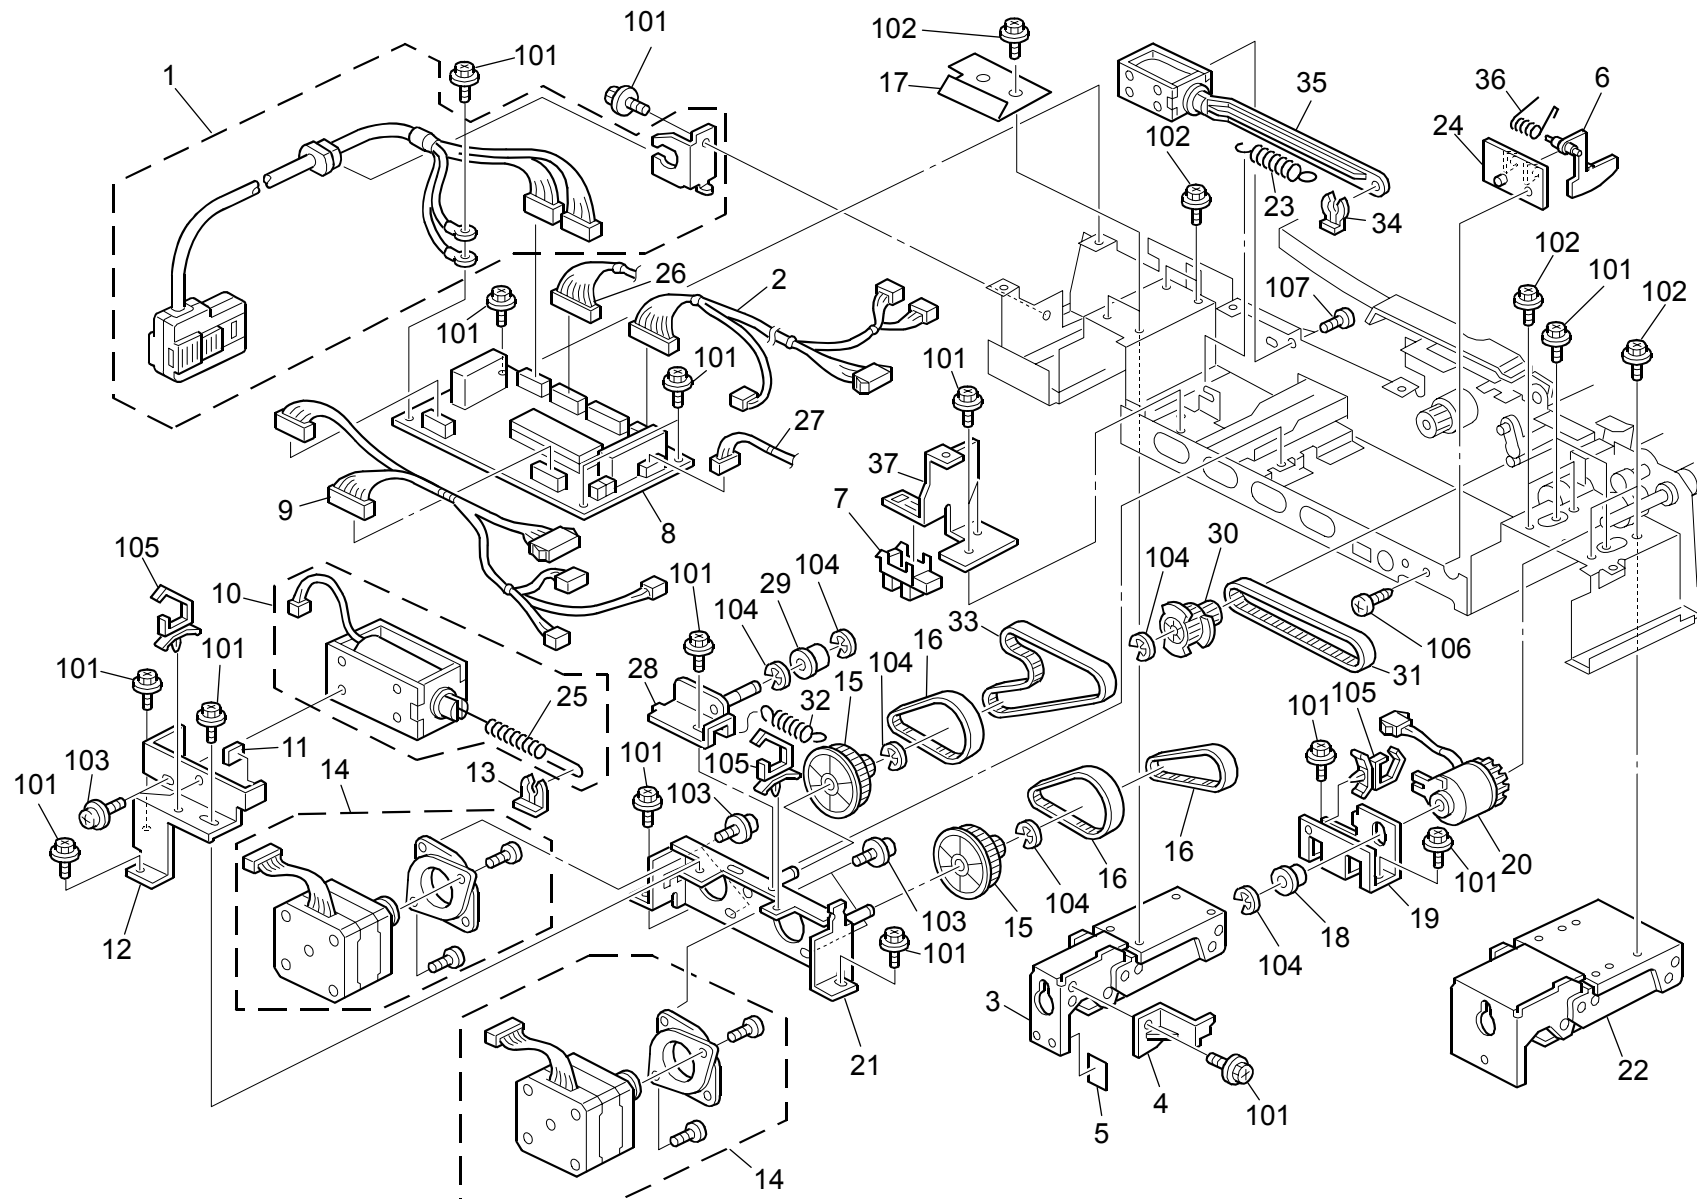


6.ARDF 6 (B814)

Index No.	Part No.	Description	Q'ty Per Assembly
1	C682 5800	Harness - Interface	1
2	B386 5700	Harness:Sensor:Main	1
3	B386 1832	Hinge:Right:Ass'y	1
4	A859 1841	Filler - DF Open Sensor	1
5	A334 4678	Rack Shield Mylar	1
6	B386 1121	APS Feeler	1
7	AW02 0141	Photointerruptor	1
8	B814 5500	PCB:Main Control	1
9	B617 5703	Harness - Paper Feed Motor	1
10	B386 4421	DC Solenoid:Base:Ass'y	1
11	A028 3264	Stopper Cushion	1
12	B386 4411	Solenoid Bracket	1
13	5206 2686	Snap Ring	1
14	B814 4121	Stepper Motor - DC2.4V	2
15	A661 1884	Pulley - 20T/48T	2
16	A859 4171	Timing Belt - 2XL	3
17	A859 1131	Insulating Sheet	1
18	5304 1639	Bushing - 8mm	1
19	B386 1315	Bracket - Electromagnetic Clutch	1
20	AX21 0092	Magnetic Clutch:Z30	1
21	B379 4111	Bracket - Motor	1
22	B386 1812	Hinge:Left:Ass'y	1
23	A859 4197	Tension Spring Motor	1
24	B386 1125	APS Feeller Bracket	1
25	A859 2358	Solenoid Spring	1
26	B386 5713	Harness:Original Tray:Connecting	1
27	B386 5701	Harness:Sensor:Exit:Connecting	1
28	B379 4131	Adjusting Pin - Idler	1
29	A859 4141	Pulley - Idler	1
30	A858 4251	Coupled Pulley - 20/32Z	1
31	A858 4261	Timing Belt - 2XL	1
32	A858 4134	Tension Spring - Idler	1
33	A858 4181	Timing Belt - 2XL	1
34	5447 2681	Snap Ring	1
35	A858 4431	DC Solenoid - 24V	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	B387 1951	Spring - Paper Size Sensor	1
37	B386 1122	Right Sensor Bracket	1
101	0451 3006N	Tapping Screw - 3x6	
102	0451 4006N	Tapping Screw - 4x6	
103	0951 3006N	Screw - M3X6	
104	0720 0040E	Retaining Ring - M4	
105	1105 0487	Harness Clamp	
106	0452 3008N	Tapping Screw - M3x8	
107	0353 0040N	Screw - M3X4	

7.ARDF 7 (B814)

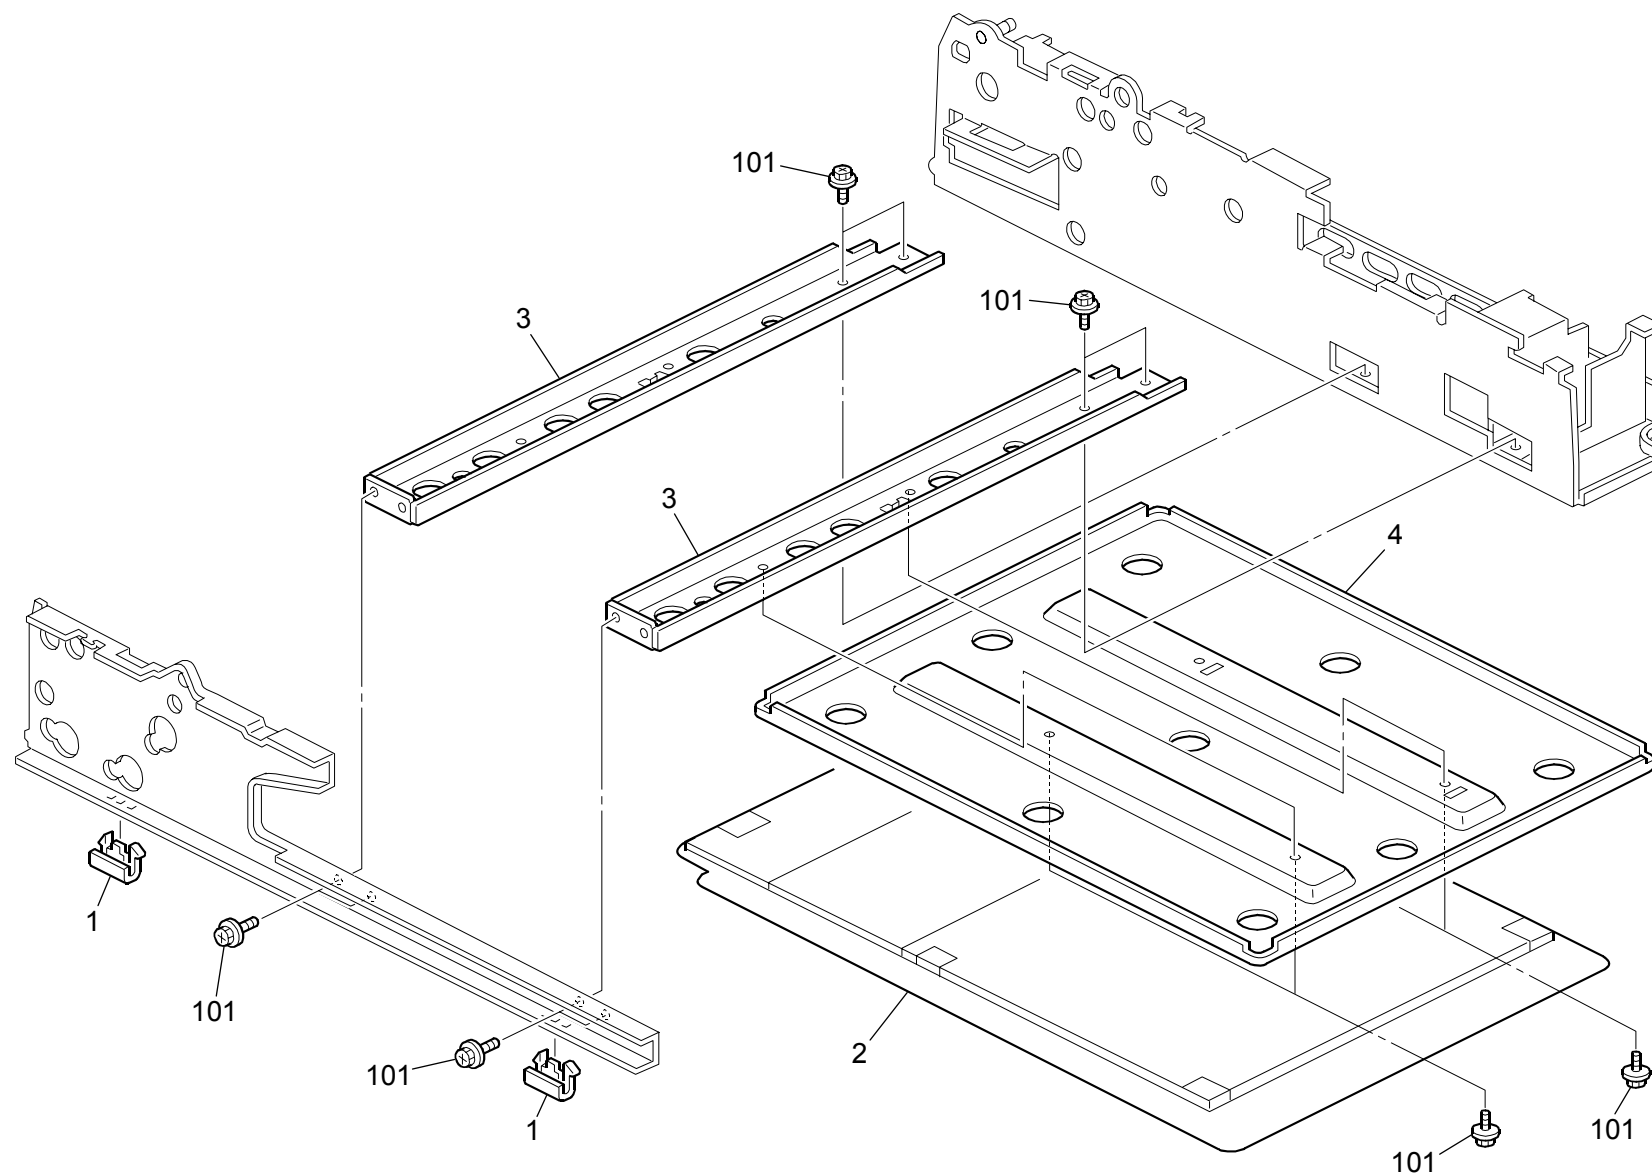


7.ARDF 7 (B814)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A859 1221	Spacer	2
2	B386 3634	Sheet:Ass'y	1
3	B386 1511	Middle Stay	2
4	B386 3615	Base - Platen Cover	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	

8.Decals And Documents (B814)

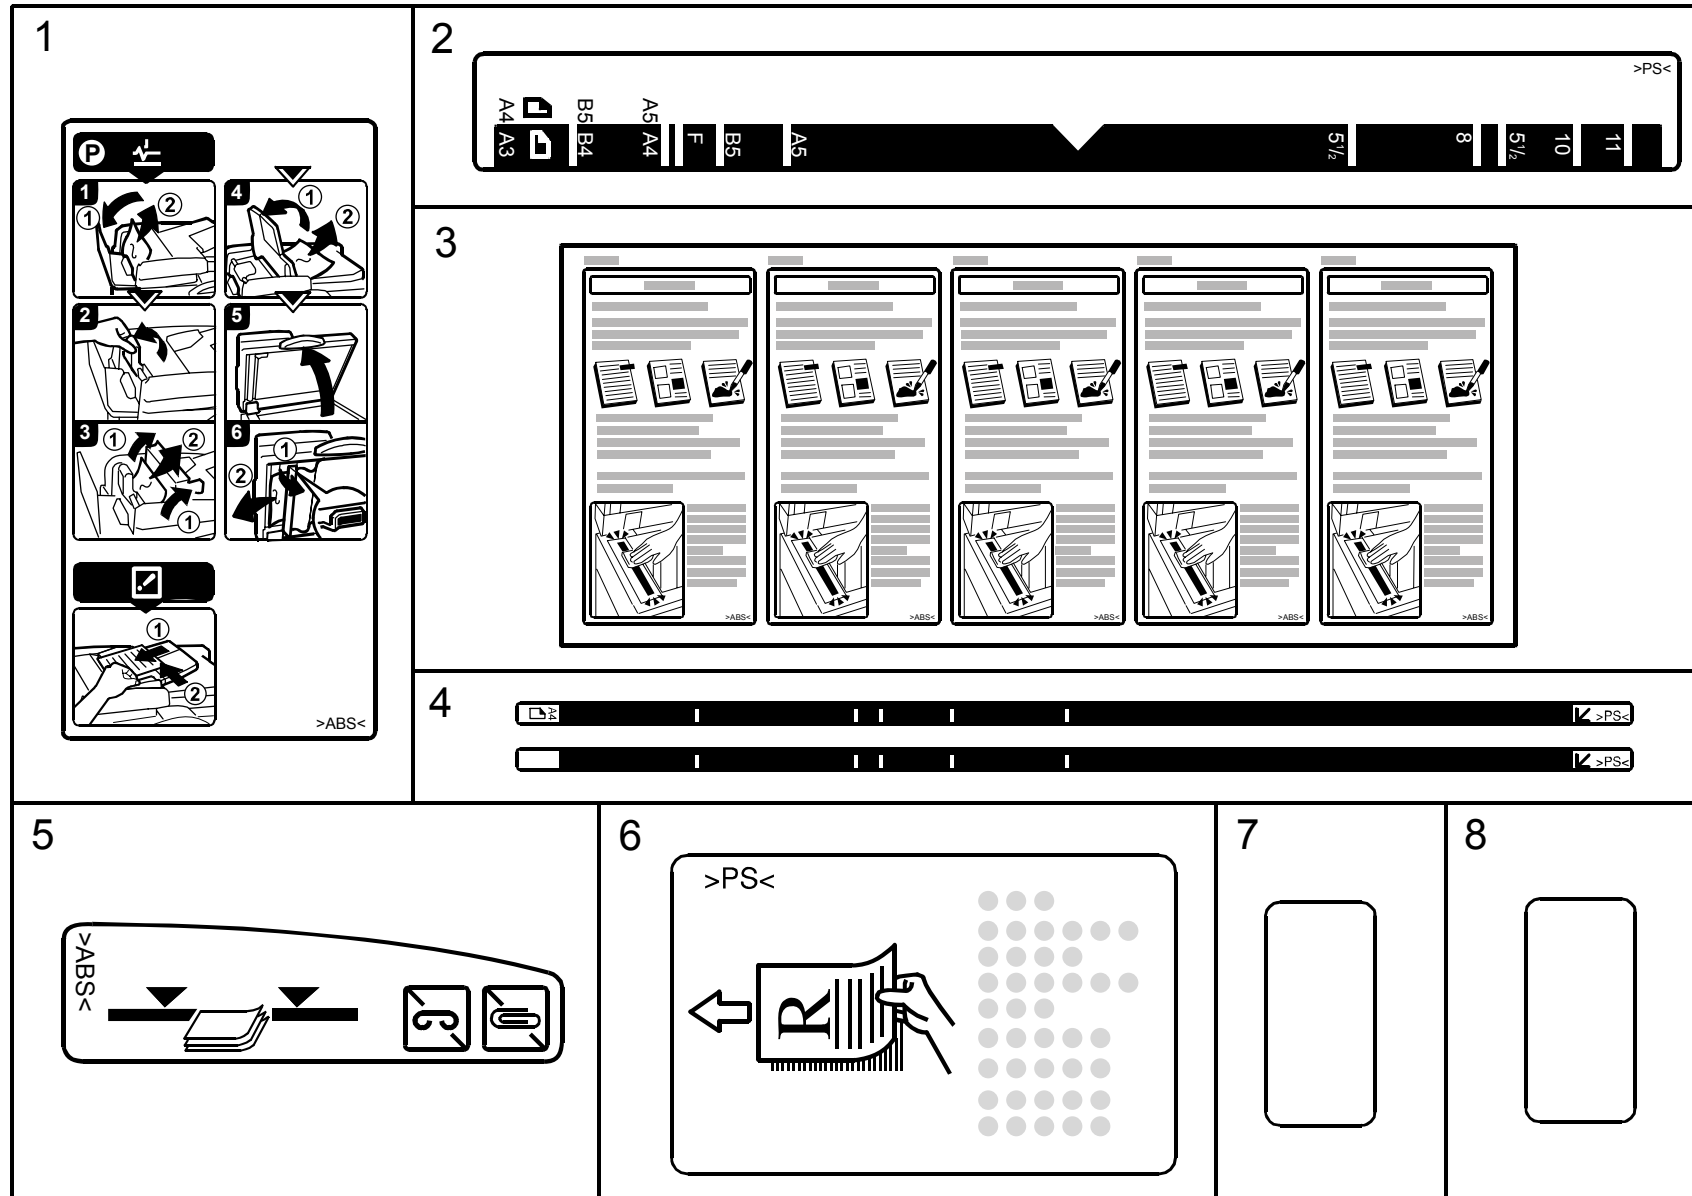

8.Decals And Documents (B814)



Index No.	Part No.	Description	Q'ty Per Assembly
1	B814 6014	Decal - Misfeed Removal	1
2	B813 6021	Decal - Size Indication Cover	1
3	B652 2379	Decal:Caution:Original:5-lang	1
4	B814 6053	Decal - Scale	1
4	B814 6054	Decal - Scale Inch	1
5	B814 6043	Decal - Side Fence	1
6	B813 6033	Decal - Original Table	1
7	A858 6022	Decal Blue	2
8	A859 6023	Decal Green	1

Index No.	Part No.	Description	Q'ty Per Assembly

Parts Index

PM Parts Index

Section Name	Part No.	Description in Service Manual	Description in Parts Catalog	Q'ty Per Assembly	Page and Index No.
ARDF 3 (B814)	A859 2241	Reverse Roller	Reverse Roller	1	7 - 2
	A859 2141	Belt Paper Feed	Belt Paper Feed	1	7 - 15
	B386 2171	Pickup Roller	Pickup Roller	1	7 - 29

Parts Index

Part No.	Description	Page and Index No.
B814 4121	Stepper Motor - DC2.4V	13 - 14
B814 5500	PCB:Main Control	13 - 8
B814 6014	Decal - Misfeed Removal	3 - 9
B814 6014	Decal - Misfeed Removal	17 - 1
B814 6043	Decal - Side Fence	5 - 21
B814 6043	Decal - Side Fence	17 - 5
B814 6053	Decal - Scale	3 - 20
B814 6053	Decal - Scale	17 - 4
B814 6054	Decal - Scale Inch	3 - 20
B814 6054	Decal - Scale Inch	17 - 4

Part No.	Description	Page and Index No.
A028 3264	Stopper Cushion	13 - 11
A294 6700	Torque Limiter - 53mnm	7 - 3
A334 4678	Rack Shield Mylar	13 - 5
A351 4951	Left Side Guide Pad	5 - 19
A628 1225	Bushing - 8mm	7 - 14
A628 3115	Knob Screw - M4	3 - 2
A661 1884	Pulley - 20T/48T	13 - 15
A858 2313	Spring Plate Pressure Roller Feed	5 - 36
A858 2319	Feeler - Reverse	5 - 34
A858 3710	Exchange Powl - Reverse	9 - 24
A858 3715	Lever - Exchange Powl	9 - 31
A858 3717	Tension Spring - Exchange Powl	9 - 30
A858 4134	Tension Spring - Idler	13 - 32
A858 4181	Timing Belt - 2XL	13 - 33
A858 4221	Gear - 31Z	7 - 37
A858 4231	Gear - 20Z	7 - 35
A858 4251	Coupled Pulley - 20/32Z	13 - 30
A858 4261	Timing Belt - 2XL	13 - 31
A858 4392	Torque Limiter	9 - 23
A858 4431	DC Solenoid - 24V	13 - 35
A858 4671	Roller Driven	5 - 37
A858 4676	Spring Plate Pressure Roller	5 - 38
A858 4681	Sheet - Paper Tray	5 - 18
A858 6022	Decal Blue	17 - 7
A858 6022	Decal - Blue	5 - 33
A859 1131	Insulating Sheet	13 - 17
A859 1221	Spacer	15 - 1
A859 1621	Separation Guide	7 - 5
A859 1723	Left Lower Guide	9 - 14
A859 1841	Filler - DF Open Sensor	13 - 4
A859 2110	Belt Holder	7 - 20
A859 2112	Drive Shaft - Paper Feed Belt	7 - 22
A859 2114	Drive Roller - Paper Feed Belt	7 - 16
A859 2120	Drive Shaft - Paper Feed Belt	7 - 19
A859 2121	Gear - 22Z	7 - 17

Part No.	Description	Page and Index No.
A859 2131	Rear Guide - Paper Feed	7 - 18
A859 2132	Front Guide - Paper Feed	7 - 13
A859 2141	Belt Paper Feed	7 - 15
A859 2162	Shaft - Pick Up Roller	7 - 24
A859 2163	Collar Pick Up	7 - 30
A859 2164	Pulley - 2Z	7 - 31
A859 2166	Timing Belt - 2XL	7 - 32
A859 2167	Gear - 22Z	7 - 26
A859 2210	Shaft - Reverse Roller	7 - 34
A859 2220	Cover Reverse Roller	7 - 1
A859 2230	Ball Bearing - 6x13x5	9 - 19
A859 2230	Ball Bearing - 6x13x5	7 - 8
A859 2241	Reverse Roller	7 - 2
A859 2311	Guide Plate Paper Feed	5 - 6
A859 2315	Separation Pad	5 - 10
A859 2317	Guide Separation Pad	5 - 9
A859 2319	Cushion Base	5 - 8
A859 2352	Pad Pressure Plate	5 - 16
A859 2354	Shaft Base	5 - 14
A859 2355	Lever Pressure Plate	5 - 4
A859 2358	Solenoid Spring	13 - 25
A859 3110	Transport Roller	11 - 9
A859 3210	Guide Plate - Transport Roller	11 - 1
A859 3220	Guide Plate - Upper Exit	11 - 13
A859 3225	Discharge Brush	9 - 25
A859 3313	Driven Shaft - Pressure	9 - 11
A859 3316	Lever - Pullout	9 - 8
A859 3317	Shaft - Contact Point	9 - 6
A859 3411	Exit Guide Plate	11 - 15
A859 3412	Shaft - Exit Guide Plate	11 - 17
A859 3425	Spring Plate	11 - 19
A859 3430	Spring Rear	11 - 14
A859 3431	Spring Front	11 - 11
A859 4141	Pulley - Idler	13 - 29
A859 4171	Timing Belt - 2XL	13 - 16

Part No.	Description	Page and Index No.
A859 4197	Tension Spring Motor	13 - 23
A859 4216	Shaft - Electromagnetic Clutch	7 - 33
A859 4222	Flange - Pulley	7 - 36
A859 4271	Pulley - 31/32Z	9 - 20
A859 4272	Flange	9 - 21
A859 4321	Pulley-20Z	9 - 28
A859 4331	Timing Belt - 2XL	9 - 2
A859 4341	Tension Spring	9 - 4
A859 4661	Rack - Front Side Fence	5 - 28
A859 4662	Rack - Rear Side Fence	5 - 25
A859 4663	Electrode Plate - Side Fence	5 - 26
A859 4664	Sheet - Paper Size Sensor Board	5 - 39
A859 4665	Gear - 16Z	5 - 27
A859 4836	Bushing Exit Driven Roller	3 - 12
A859 4837	Exit Driven Roller	3 - 13
A859 4871	Actuator - Original Sensor	3 - 5
A859 4872	Actuator Bracket	3 - 6
A859 4876	Cushion Left	5 - 15
A859 4881	Cushion Paper Feed	3 - 7
A859 6023	Decal Green	11 - 16
A859 6023	Decal Green	17 - 8
A859 7211	Stepped Screw	3 - 18
B379 4111	Bracket - Motor	13 - 21
B379 4131	Adjusting Pin - Idler	13 - 28
B386 1121	APS Feeler	13 - 6
B386 1122	Right Sensor Bracket	13 - 37
B386 1123	Sensor Bracket	7 - 10
B386 1125	APS Feeller Bracket	13 - 24
B386 1128	Spring Plate Sensor On Off Detector	7 - 39
B386 1311	Left Stay	11 - 5
B386 1315	Bracket - Electromagnetic Clutch	13 - 19
B386 1320	Bracket - Transport Roller	11 - 8
B386 1322	Spring Plate Guide	11 - 2
B386 1511	Middle Stay	15 - 3
B386 1610	Separation Stay	7 - 6

Part No.	Description	Page and Index No.
B386 1710	Left Lower Stay	9 - 16
B386 1812	Hinge:Left:Ass'y	13 - 22
B386 1832	Hinge:Right:Ass'y	13 - 3
B386 2100	Belt Unit:Paper Feed:Ass'y	7 - 38
B386 2171	Pickup Roller	7 - 29
B386 2214	Screw:M3x5	9 - 22
B386 2351	Original Feed Plate	5 - 17
B386 2353	Pressure Plate - Base	5 - 13
B386 2356	Base Cushion - Behind	5 - 32
B386 3118	Standard Screw Driver:Document Feeder	3 - 23
B386 3121	Transport Roller - Middle	11 - 10
B386 3130	Exit Roller - Drive	9 - 18
B386 3140	Reverse Roller - Drive	9 - 27
B386 3234	Guide Plate:Reverse:Ass'y	11 - 22
B386 3236	Discharge Brush - L50	11 - 23
B386 3320	Spring:Belt:Paper Feed:8n	7 - 21
B386 3321	Torsion Spring:Pressure:Rear:20n	9 - 9
B386 3322	Torsion Spring:Pressure:Front:20n	9 - 7
B386 3387	Roller:Driven:Transport	9 - 10
B386 3389	Roller:Driven:Middle:Ep35	11 - 18
B386 3410	Cover:Guide Plate:Exit:Ass'y	11 - 21
B386 3513	Guide:Exposure Glass	9 - 17
B386 3615	Base - Platen Cover	15 - 4
B386 3634	Sheet:Ass'y	15 - 2
B386 4311	Adjusting Pin - M6	9 - 29
B386 4411	Solenoid Bracket	13 - 12
B386 4421	DC Solenoid:Base:Ass'y	13 - 10
B386 4621	Upper Original Table	5 - 24
B386 4641	Front Side Fence Ass'y	5 - 20
B386 4651	Inner Back Side Fence Ass'y	5 - 5
B386 4691	Mylar Seal - 28x107	5 - 42
B386 4692	Mylar Seal - 16x45	5 - 41
B386 4693	Mylar Seal	5 - 40
B386 4710	Front Side Fence	5 - 43
B386 4720	Rear Side Fence	5 - 44

Part No.	Description	Page and Index No.
B386 4811	Front Cover	3 - 1
B386 4821	Rear Cover	3 - 15
B386 4842	Left Cover	3 - 8
B386 4856	Cover - Transport Driven Roller	9 - 13
B386 4861	Reverse Tray	9 - 26
B386 4871	Upper Cover	3 - 14
B386 4872	Sponge:Cover:Front Right	3 - 22
B386 4873	Positioning Plate	3 - 4
B386 4874	Sponge:Cover:Front	3 - 21
B386 4881	Left Lower Cover	9 - 12
B386 5550	Paper Size Sensor Board	5 - 30
B386 5700	Harness:Sensor:Main	13 - 2
B386 5701	Harness:Sensor:Exit:Connecting	13 - 27
B386 5713	Harness:Original Tray:Connecting	13 - 26
B386 7102	Scale:Machine Or Copier:Adhesion	3 - 16
B387 1951	Spring - Paper Size Sensor	13 - 36
B387 2113	Roller - Paper Feed Belt	7 - 23
B617 5703	Harness - Paper Feed Motor	13 - 9
B617 5705	Harness - Sensor	11 - 4
B617 5706	Harness - Reverse Sensor	5 - 35
B617 5715	Harness - Original Tray	5 - 29
B617 5720	Harness - Registration Sensor	5 - 12
B652 2379	Decal:Caution:Original:5-lang	3 - 19
B652 2379	Decal:Caution:Original:5-lang	17 - 3
B714 5006	DC Solenoid:Transmitted Rubber Stamp	11 - 20
B810 4630	Paper Tray:Behind:Alps-f	5 - 7
B813 6021	Decal - Size Indication Cover	17 - 2
B813 6021	Decal - Size Indication Cover	3 - 10
B813 6033	Decal - Original Table	17 - 6
B813 6033	Decal - Original Table	5 - 23
C682 5800	Harness - Interface	13 - 1
G012 1531	Magnet	5 - 22
G412 3611	Guide Mylar	9 - 15
G412 3821	Holder - Pick Up	7 - 25
G412 3831	Pulley - 22Z	7 - 27

Part No.	Description	Page and Index No.
H060 2126	Bushing - M6x7	5 - 2
H511 5007	Stamp	11 - 24

Part No.	Description	Page and Index No.
AA06 3311	Transport Roller Spring	3 - 11
AA06 3435	Compression Spring:Paper Feed:Joint	7 - 12
AA13 2013	Spacer	7 - 11
AA14 3788	Pin:Guide Plate:Paper Feed	9 - 1
AA14 3788	Pin:Guide Plate:Paper Feed	3 - 3
AA14 3790	Screw:Contact Point	9 - 3
AC01 3004	Exposure Glass	3 - 17
AG07 0513	Magnet Catch	9 - 5
AW01 0109	Photo Refiection Sensor:Ps117ed1	11 - 3
AW01 0112	Photo Refiection Sensor:Original Table	5 - 31
AW02 0141	Photointerruptor	7 - 9
AW02 0141	Photointerruptor	5 - 11
AW02 0141	Photointerruptor	13 - 7
AX21 0092	Magnetic Clutch:Z30	13 - 20

Part No.	Description	Page and Index No.
0353 0040N	Screw - M3X4	13 - 107
0450 3008N	Tapping Screw - M3x8	5 - 103
0451 3006N	Tapping Screw - 3x6	7 - 105
0451 3006N	Tapping Screw - 3x6	13 - 101
0451 3006N	Tapping Screw - 3x6	11 - 101
0451 3006N	Tapping Screw - 3x6	3 - 101
0451 3006N	Tapping Screw - 3x6	9 - 101
0451 3006N	Tapping Screw - 3x6	15 - 101
0451 3006N	Tapping Screw - 3x6	5 - 101
0451 3008N	Tapping Screw - M3x8	3 - 103
0451 4006N	Tapping Screw - 4x6	13 - 102
0451 4014N	Tapping Screw:M4x14	11 - 102
0452 3008N	Tapping Screw - M3x8	11 - 106
0452 3008N	Tapping Screw - M3x8	13 - 106
0452 3008N	Tapping Screw - M3x8	3 - 102
0452 3008N	Tapping Screw - M3x8	5 - 102
0454 3006Q	Tapping Screw - M3x6	7 - 101
0632 0100G	Pin - 2x10mm	7 - 106
0720 0030E	Retaining Ring - M3	9 - 103
0720 0030E	Retaining Ring - M3	7 - 107
0720 0040E	Retaining Ring - M4	9 - 102
0720 0040E	Retaining Ring - M4	11 - 104
0720 0040E	Retaining Ring - M4	7 - 102
0720 0040E	Retaining Ring - M4	13 - 104
0720 0060E	Retaining Ring - M6	7 - 103
0720 0060E	Retaining Ring - M6	11 - 103
0951 3006N	Screw - M3X6	13 - 103
1105 0109	Cord Keep	7 - 104
1105 0487	Harness Clamp	13 - 105
1106 0193	Bushing - 7.9mm	11 - 105
1106 0193	Bushing - 7.9mm	7 - 108

Part No.	Description	Page and Index No.
5053 0447	Bushing - 6mm	7 - 4
5053 0447	Bushing - 6mm	9 - 32
5053 0447	Bushing - 6mm	11 - 7
5206 2686	Snap Ring	13 - 13
5206 2686	Snap Ring	7 - 28
5215 2621	Snap Ring - M6	5 - 3
5304 1639	Bushing - 8mm	7 - 7
5304 1639	Bushing - 8mm	11 - 6
5304 1639	Bushing - 8mm	13 - 18
5447 2681	Snap Ring	13 - 34
5447 2681	Snap Ring	5 - 1
5447 2681	Snap Ring	11 - 12
5447 2681	Snap Ring	9 - 33

