

DF64 (A663)

This parts catalog is includes MB No.1 to 6

DF64 (A663)

PARTS CATALOG


This catalog gives the numbers and names of parts on this machine.

CONTENTS

1.EXTERIOR (A663)	2
2.PAPER FEED SECTION 1 (A663).....	4
3.PAPER FEED SECTION 2 (A663).....	6
4.TRANSFER BELT UNIT (A663).....	8
5.PAPER EXIT SECTION (A663)	10
6.DRIVE SECTION (A663).....	12
7.DECAL AND DOCUMENT (A663)	14
PARTS INDEX	17

January ,30 ' 2001

1.EXTERIOR (A663)

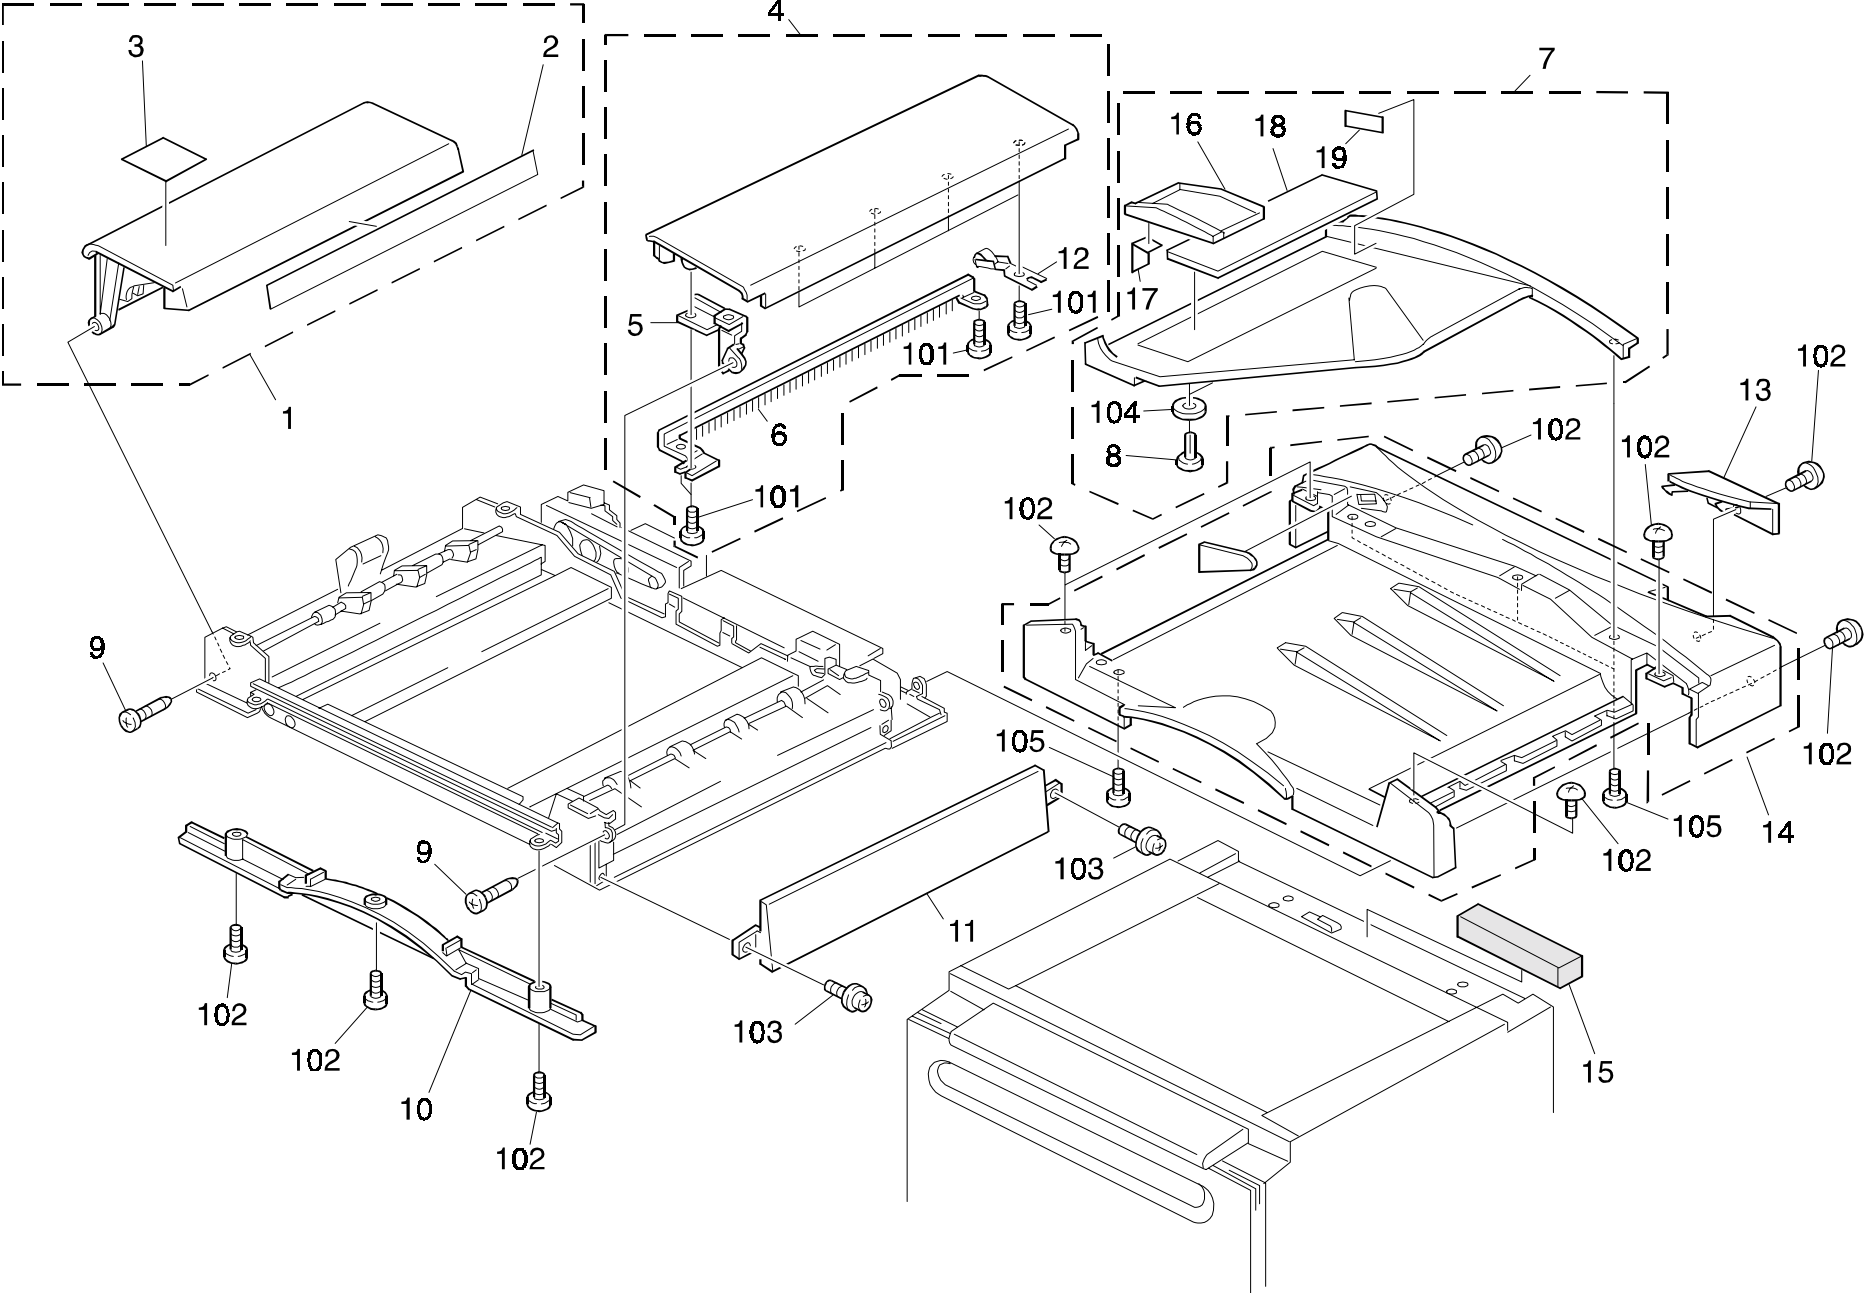


1.EXTERIOR (A663)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A548 1812	Left Cover Ass'y	1
2	A548 1912	Decal - Size - Original - NA	1
3	A548 1921	Decal - Misfeed Removal	1
4	A548 1831	Exit Cover Ass'y	1
5	A548 1382	Front Bracket - Exit Roller	1
6	A548 1385	Antistatic Brush Bracket	1
7	A548 1731	Original Table	1
8	5875 2088	Shoulder Screw - M4	3
9	5446 2824	Screw - Duplex Guide Plate	2
10	A548 1861	Front Cover	1
11	A548 1851	Right Cover	1
12	A663 1241	Exit Roller:driven (rarely Used):as	1
13	A548 1781	Main Board Cover	1
14	A663 1711	Upper Cover	1
15	A548 6131	Cushion - 20x190x30	1
16	A565 2161	Side Fence	1
17	A376 4599	Side Fence Pad	1
18	A548 1761	Side Fence Rail	1
19	A548 1931	Decal - Original Table	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0414 0082B	Binding Self Tapping Screw - M4x8	
102	0344 0060F	Philips Truss Head Screw - M4x6	
103	0951 4008B	Philips Screw With Washer - M4x8	
104	0701 0040B	Hexagon Nut - M4	
105	0414 0122B	Philips Tapping Screw - M4x12	

2.PAPER FEED SECTION 1 (A663)

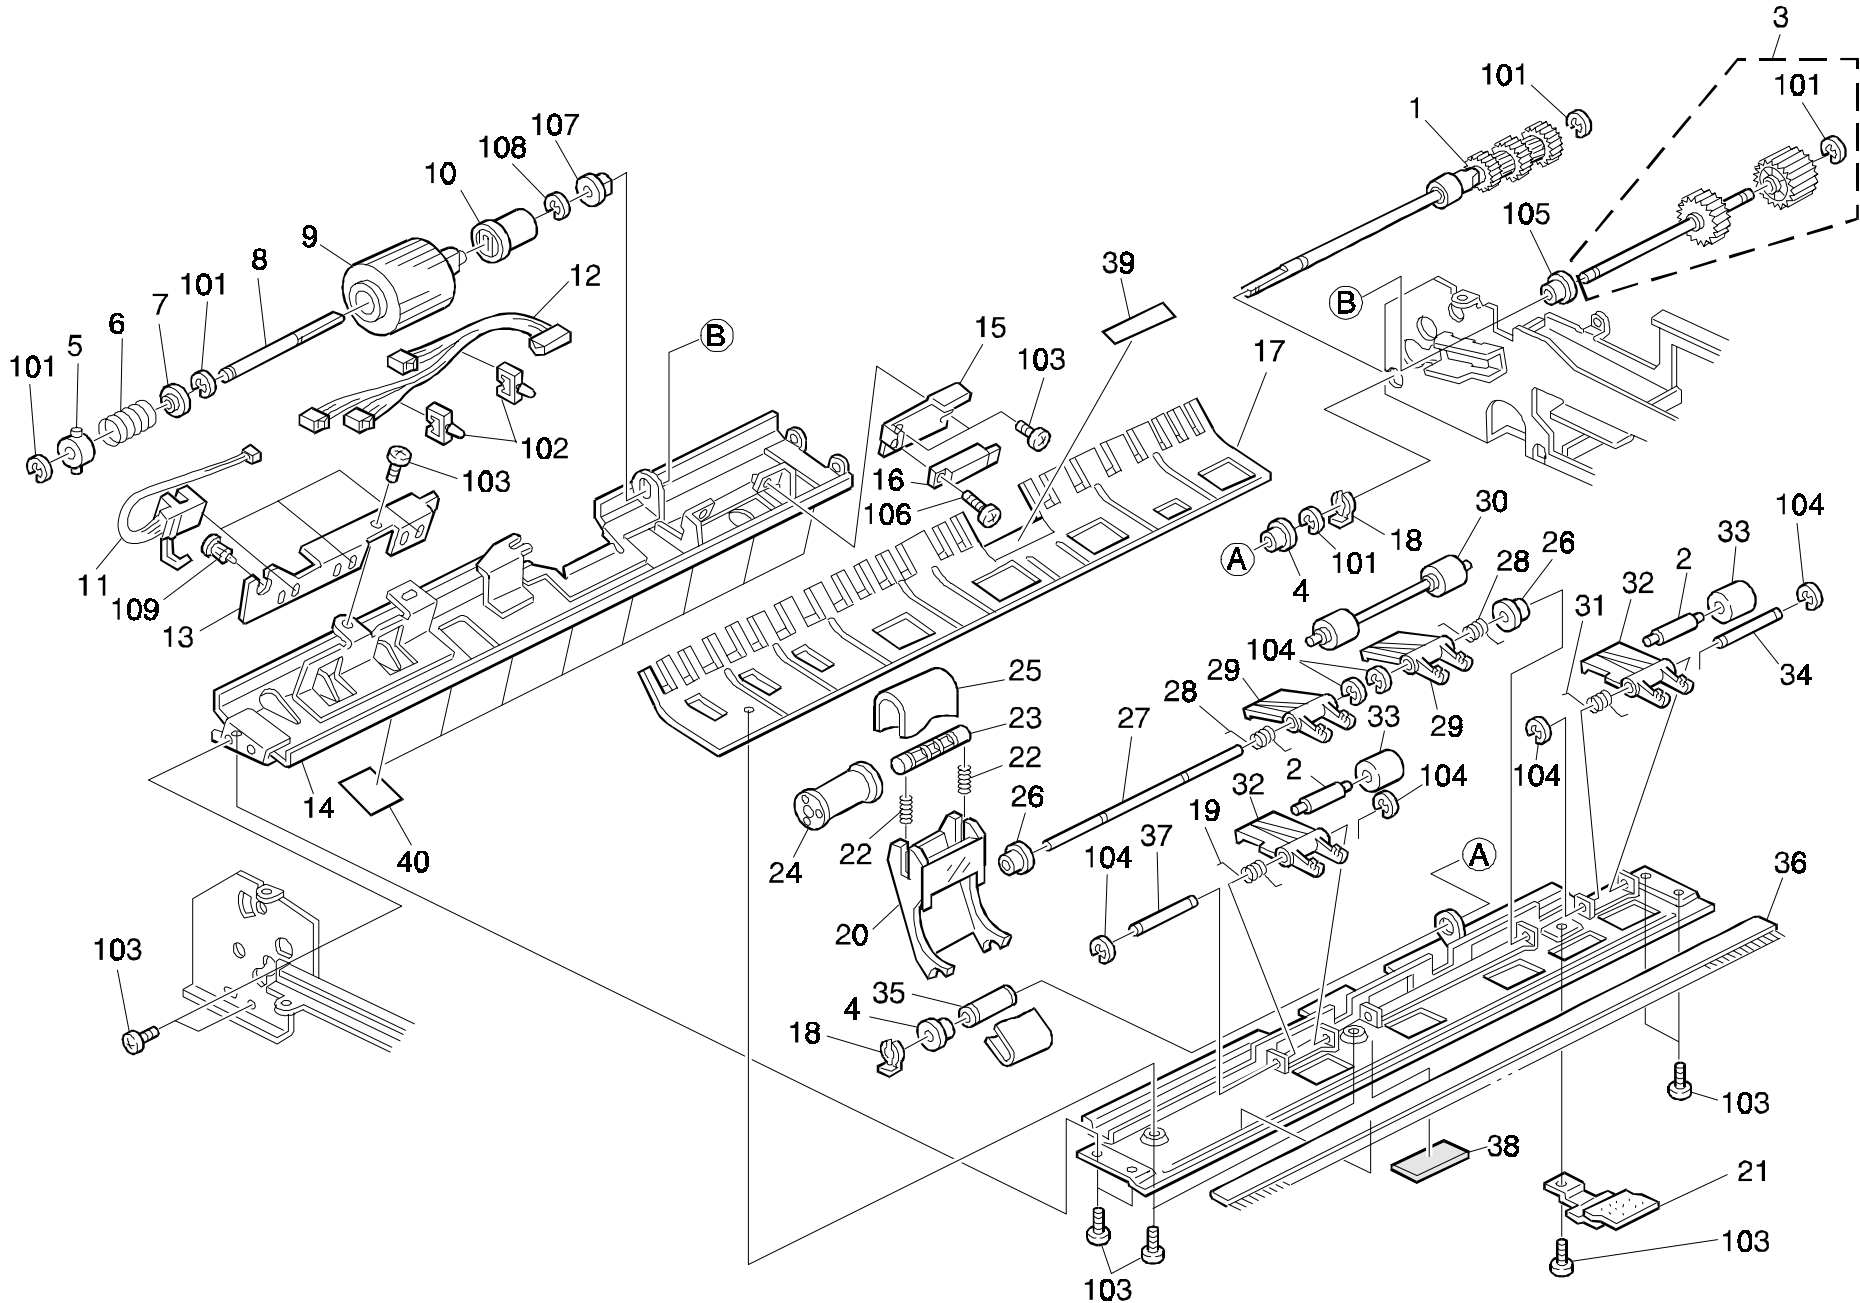


2.PAPER FEED SECTION 1 (A663)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A548 2331	Gear - 23Z	1
2	A548 1208	Side Driven Roller	2
3	A548 2321	Gear - 32Z	1
4	A548 1283	Bushing - 6x10x6.5mm	3
5	A376 1461	Feed Roller Bushing	1
6	A376 1467	Feed Roller Pressure Spring	1
7	A376 1465	Feed Roller Bushing	2
8	A548 2174	Driven Roller Shaft	1
9	A548 1271	Separation Roller	1
10	A548 2341	Joint Roller	1
11	AW02 0054	Sensor - Duplex	3
12	A548 5250	Relay Harness	1
13	A548 1158	Paper Size Sensor Bracket	1
14	A663 1161	Middle Guide Plate	1
15	A548 1156	Regist Sensor Bracket	1
16	AW01 0027	Photosensor - ON2530 CT	2
17	A548 1171	Lower Paper Feed Guide	1
18	5447 2681	Snap Ring	3
19	A548 1195	Pressure Spring - Side Arm	1
20	A548 1291	Separation Belt Bracket	1
21	A548 1175	Base Cover	1
22	AA06 3503	Pressurespring	2
23	A548 1288	Belt Driven Shaft	1
24	A548 1286	Belt Driven Roller	1
25	A548 1276	Separation Belt	1
26	5324 1658	Bushing- 4x8x4.5mm	2
27	A548 1192	Middle Arm Shaft	1
28	A548 1196	Pressure Spring - Middle Arm	2
29	A548 1194	Middle Arm - Driven Shaft	2
30	A548 1202	Middle Driven Roller	1
31	A548 1197	Pressure Spring	1
32	A548 1193	Side Arm - Driven Shaft	2
33	A548 1207	Side Driven Roller	2
34	A548 1206	Rear Arm Shaft	1
35	A548 1281	Belt Drive Roller	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	A376 3242	Antistatic Brush	1
37	A548 1191	Sidarm Shaft	1
38	A548 1179	Cushion - 5x15x50	1
39	A548 1172	Lower Separation Guide	1
40	A663 1173	Transfer Belt Guide	1
41	A663 1182	Base Bracket - Original Feed	1
101	0720 0040E	Retaining Ring - M4	
102	1105 0229	Clamp	
103	0314 0060B	Philips Pan Head Screw - M4x6	
104	0720 0030E	Retaining Ring - M3	
105	0805 3263	Bearing - 6 X 10 X 6mm	
106	0313 0100B	Philips Pan Head Screw - M3x10	
107	0805 3480	Bushing - 6mm	
108	0805 0089	Retaining Ring - M4	
109	1106 0241	Bushing - 6.7mm	

3.PAPER FEED SECTION 2 (A663)

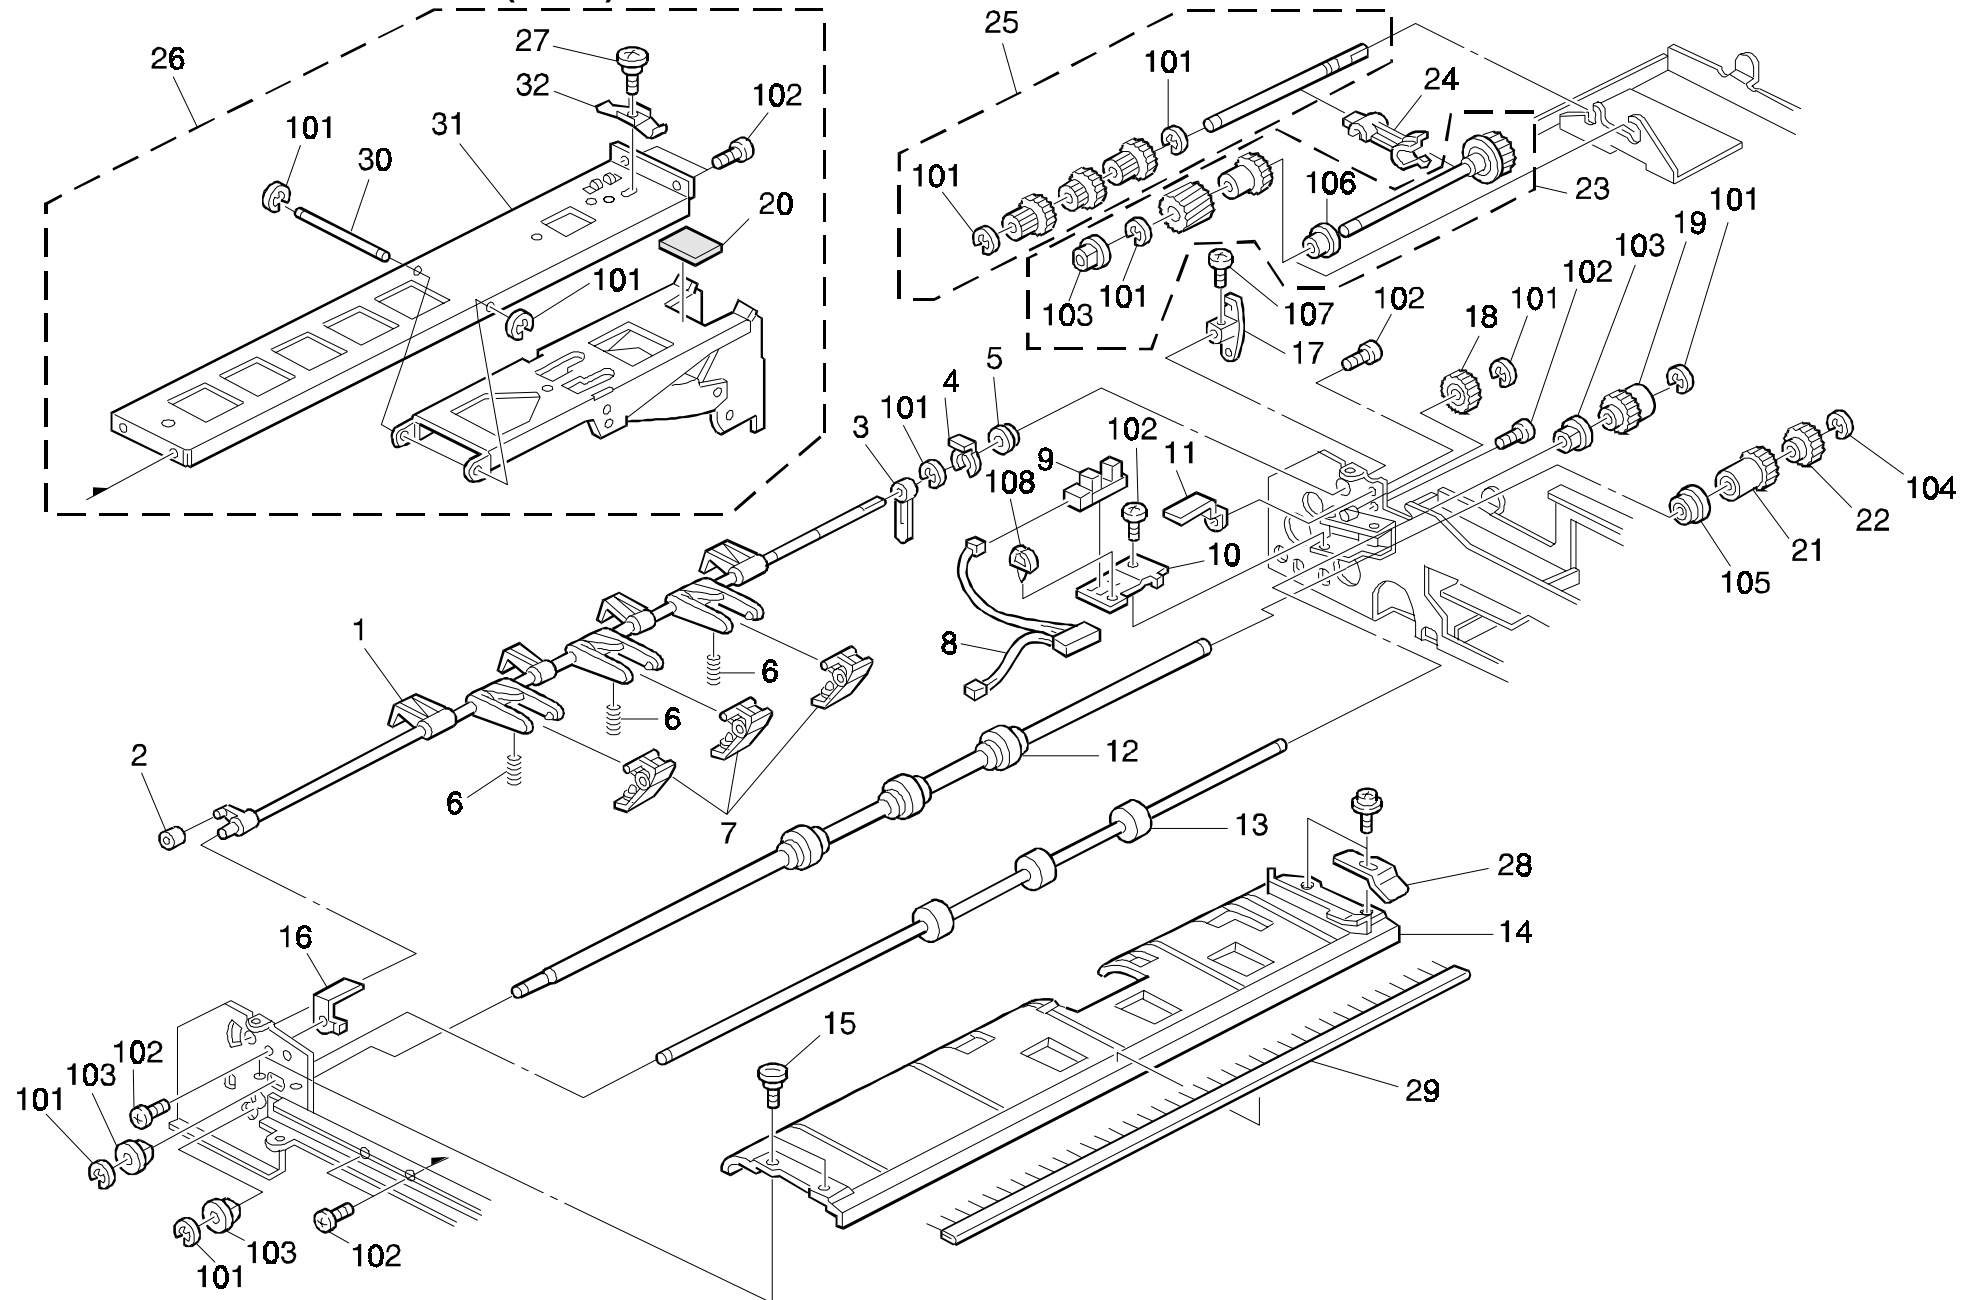


3.PAPER FEED SECTION 2 (A663)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A548 1312	Entrance Gate Stopper	1
2	A548 1317	Lever Cushion	1
3	A548 1315	Original Sensor Feeler	1
4	5447 2681	Snap Ring	1
5	A548 1283	Bushing - 6x10x6.5mm	1
6	A458 2165	Spring - Driven Roller	3
7	A548 1313	Holder Plate	3
8	A548 5260	Sensor Harness	1
9	AW02 0075	Photointerruptor	1
10	A548 1372	Original Sensor Bracket	1
11	A548 1363	Rear Bracket - Left Cover	1
12	A548 1256	Pull-Out Roller	1
13	A548 1251	Paper Feed Roller	1
14	A548 1151	Upper Guide Plate	1
15	5419 5714	Stepped Screw - M4	2
16	A548 1361	Front Bracket - Left Cover	1
17	A548 1314	Stopper Lever	1
18	A548 2325	Gear - 18Z	1
19	A548 2319	Gear - 20Z	1
20	A351 4281	Anti-Vibration Cushion	1
21	A548 2315	Gear - 24Z	1
22	A548 2317	Gear - 24Z	1
23	A548 2171	Paper Feed Shaft	1
24	A548 2191	Stopper Gear - 22Z	1
25	A548 2351	Idle Roller Shaft	1
26	A548 1580	Left Hinge	1
27	AA14 3039	Spring Holder	1
28	A548 1153	Grounding Plate	1
29	A548 1154	Antistatic Brush	1
30	A548 1137	Left Arm Shaft	1
31	A548 1131	Left Stay	1
32	A548 1135	Spring Plate	1
33	A548 1127	Original Sensor Bracket	1
34	A548 1141	Stay	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0720 0040E	Retaining Ring - M4	
102	0314 0060B	Philips Pan Head Screw - M4x6	
103	0805 3480	Bushing - 6mm	
104	0720 0060E	Retaining Ring - M6	
105	0741 3808	Ball Bearing - 8x16x5mm	
106	0740 3906	Ball Bearing - 6x15x5	
107	0353 0050B	Philips Truss Head Screw - M3x5	
108	1105 0199	Clamp	

4.TRANSFER BELT UNIT (A663)

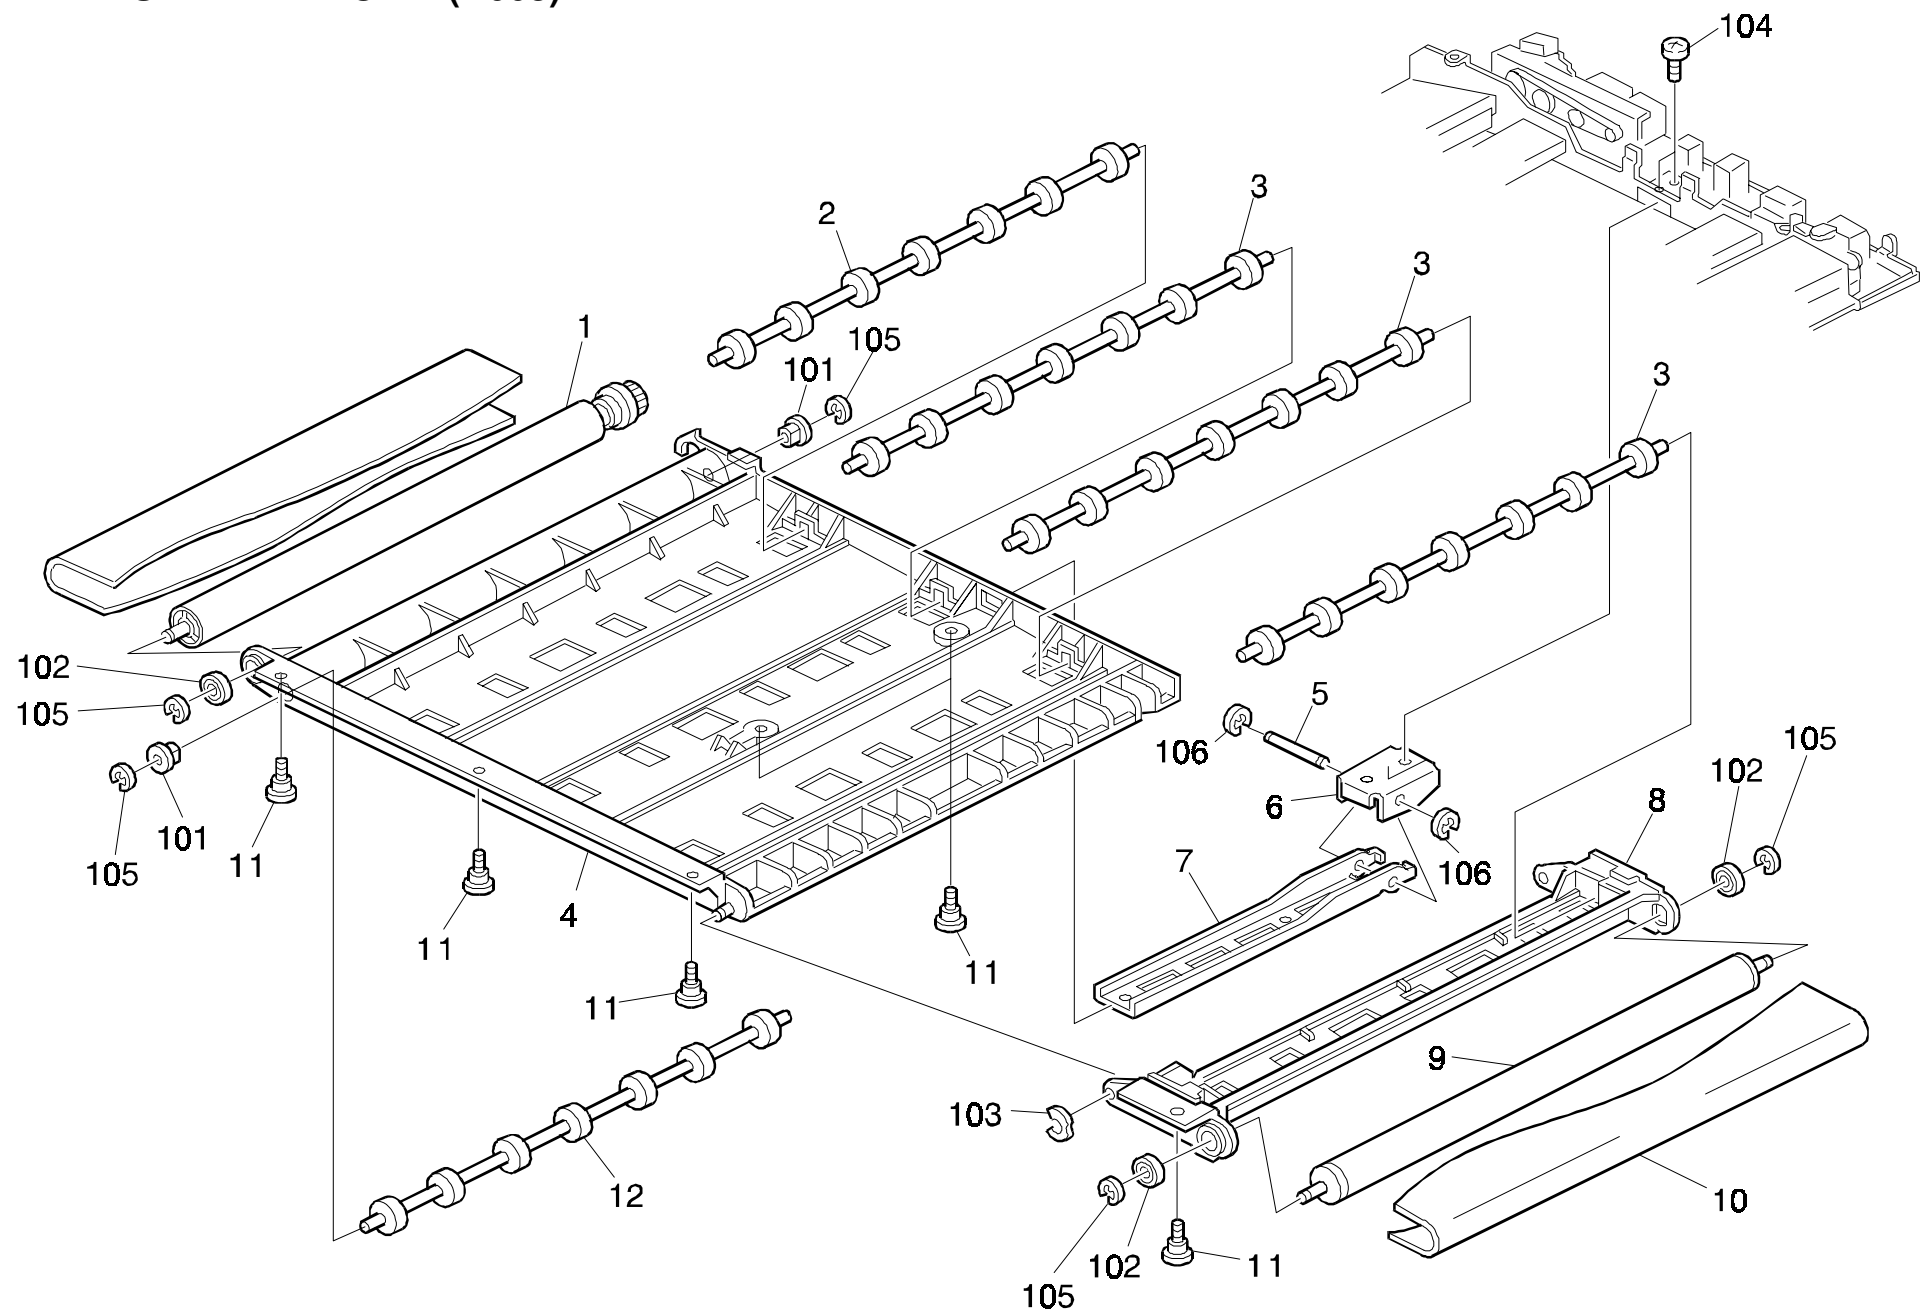


4.TRANSFER BELT UNIT (A663)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A680 1431	Belt Drive Roller Ass'y X/O MB1	1
1	A548 1432	Belt Drive Roller	
2	A548 1463	Belt Pressure Roller	1
3	A548 1461	Belt Pressure Roller	3
4	A663 1412	Transport Base Plate	1
4	A548 1412	X/O MB5	
5	A548 1443	Arm Shaft	1
6	A548 1446	Arm Bracket	1
7	A548 1442	Transport Arm	1
8	A548 1422	Transport Stay	1
9	A376 2132	Belt Driven Roller	1
10	A548 1482	Transport Belt	1
10	A548 1481	O/O MB4	1
11	5419 5714	Stepped Screw - M4	5
12	A548 1451	Belt Driven Roller	1
13	A548 2141	Timing Pulley - 20Z (OBS) MB1	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0805 3480	Bushing - 6mm	
102	0740 3506	Ball Bearing - 6x12x4 mm	
103	0805 0089	Retaining Ring - M4	
104	0314 0060B	Philips Pan Head Screw - M4x6	
105	0720 0040E	Retaining Ring - M4	
106	0720 0030E	Retaining Ring - M3	

5.PAPER EXIT SECTION (A663)

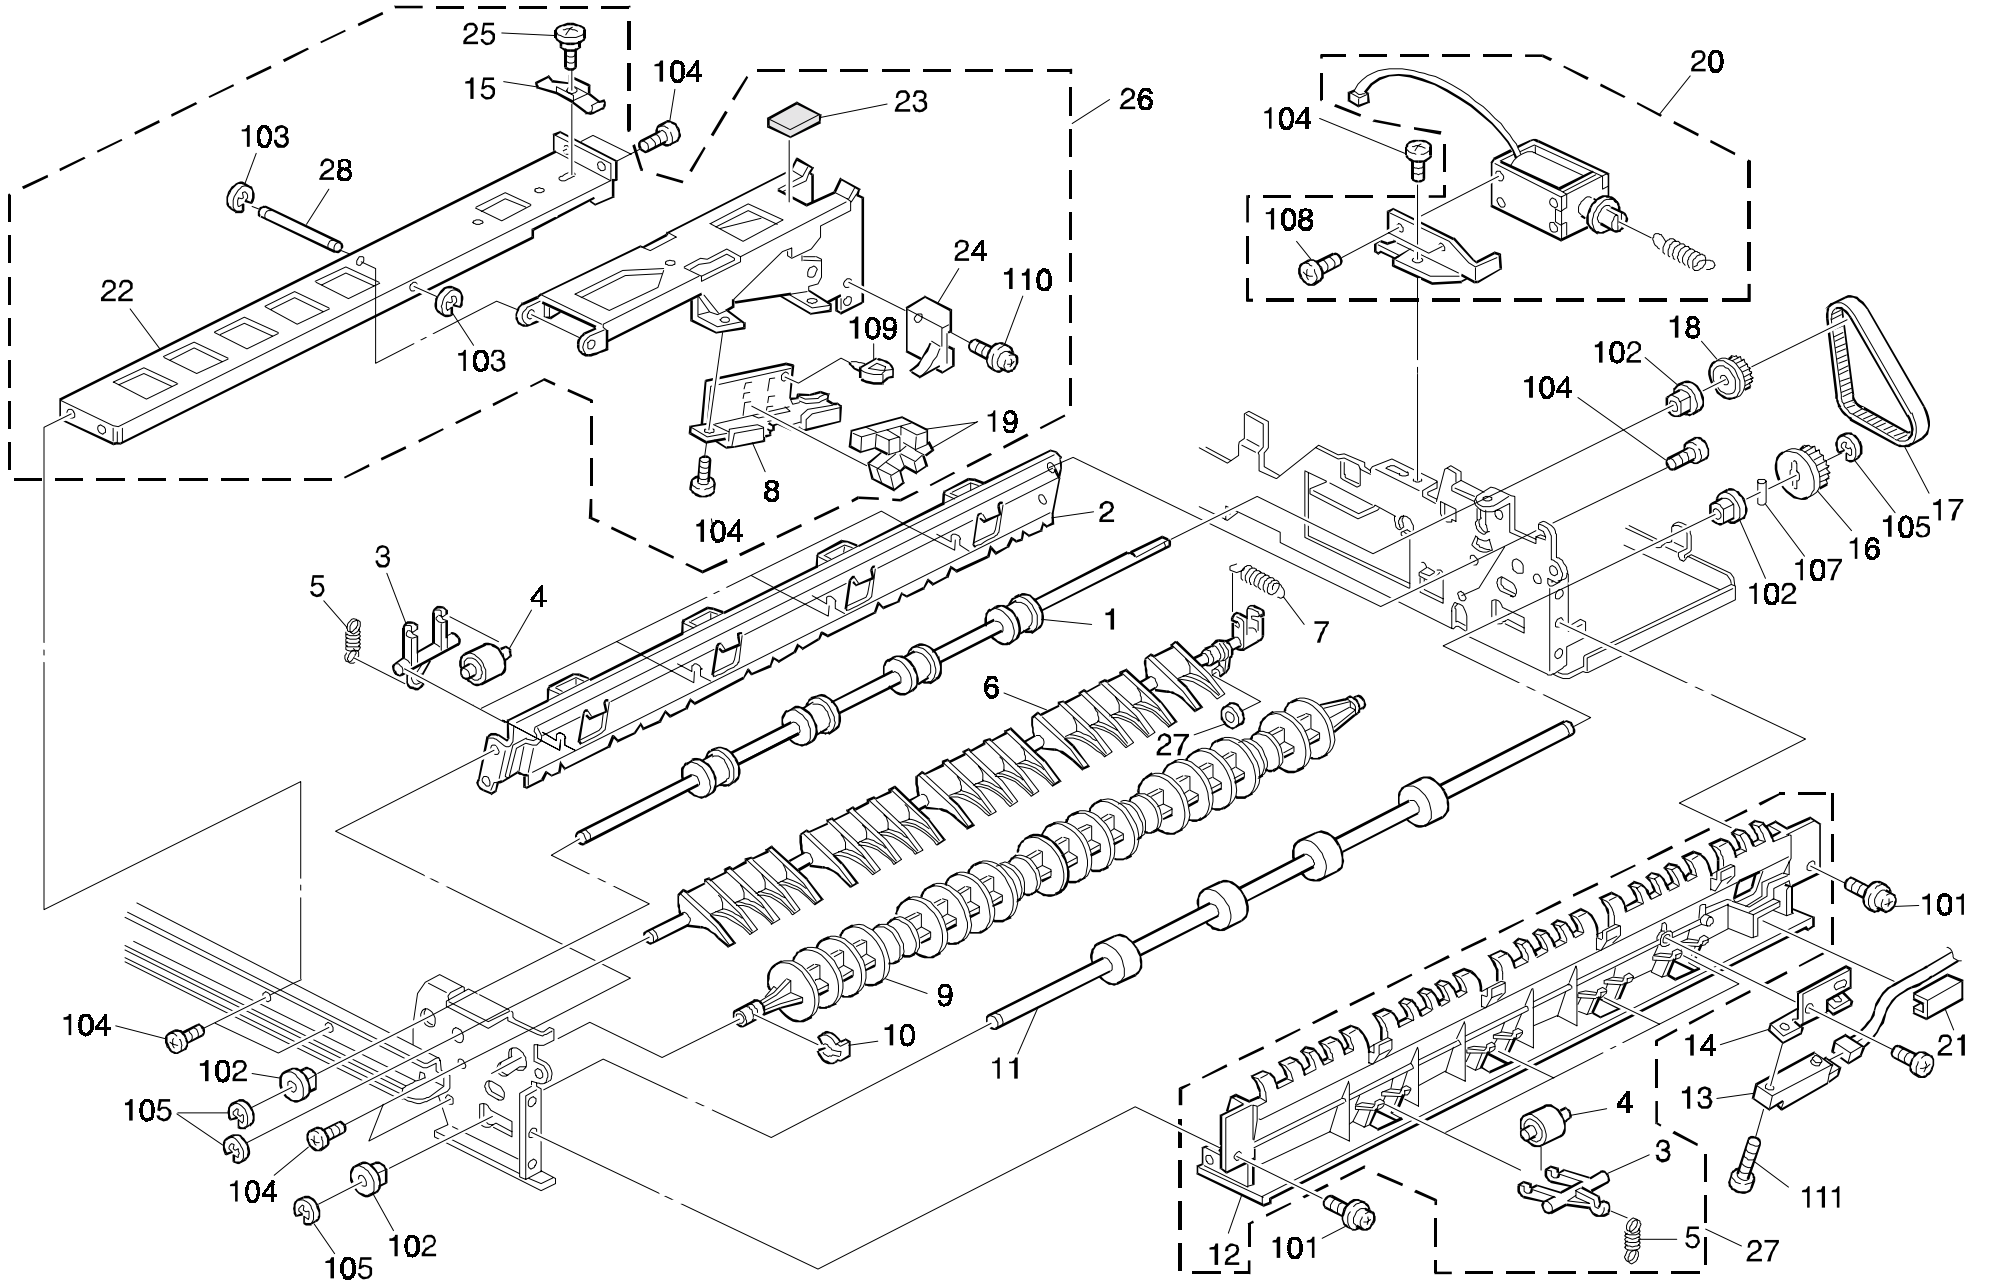


5.PAPER EXIT SECTION (A663)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A548 1261	Exit Roller	1
2	A548 1210	Paper Inverter Guide Plate	1
3	A548 1234	Driven Roller Arm	1
4	A548 1233	Driven Roller	8
5	AA06 0588	Pressure Spring	8
6	A548 1320	Inverter Gate Plate	1
7	AA06 0612	Pressure Spring	1
8	A548 1541	Safety Switch Bracket	1
9	A548 1231	Guide Roller	1
10	5215 2621	Snap Ring - M6	1
11	A548 1266	Inverter Roller	1
12	A548 1221	Paper Exit Guide	1
13	AW01 0027	Photosensor - ON2530 CT	2
14	A548 1357	Exit Sensor Bracket	1
15	A548 1135	Spring Plate	1
16	A548 2133	Timing Pulley - 24Z	1
17	AA04 3381	Timing Belt - B40s3m192	1
18	A548 2137	Timing Pulley - 18Z	1
19	AW02 0021	Photointerruptor - 175487-3	5
20	A548 1341	Paper Exit Solenoid	1
21	A548 1359	Harness Holder	1
22	A548 1133	Right Stay	1
23	A351 4281	Anti-Vibration Cushion	2
24	A548 1531	Safety Switch Feeler	1
25	AA14 3039	Spring Holder	2
26	A548 1590	Right Hinge	1
27	A548 1220	Paper Exit Guide	1
28	A548 1139	Right Arm Shaft	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0951 4008B	Philips Screw With Washer - M4x8	
102	0805 3480	Bushing - 6mm	
103	0720 0030E	Retaining Ring - M3	
104	0314 0060B	Philips Pan Head Screw - M4x6	
105	0720 0040E	Retaining Ring - M4	
106	0413 0082B	Tapping Screw - M3x8	
107	0632 0120G	Parallel Pin - 2x12	
108	0353 0040B	Screw - M3x4	
109	1105 0229	Clamp	
110	0951 4006B	Philips Screw With Washer - M4x6	
111	0313 0100B	Philips Pan Head Screw - M3x10	

6.DRIVE SECTION (A663)

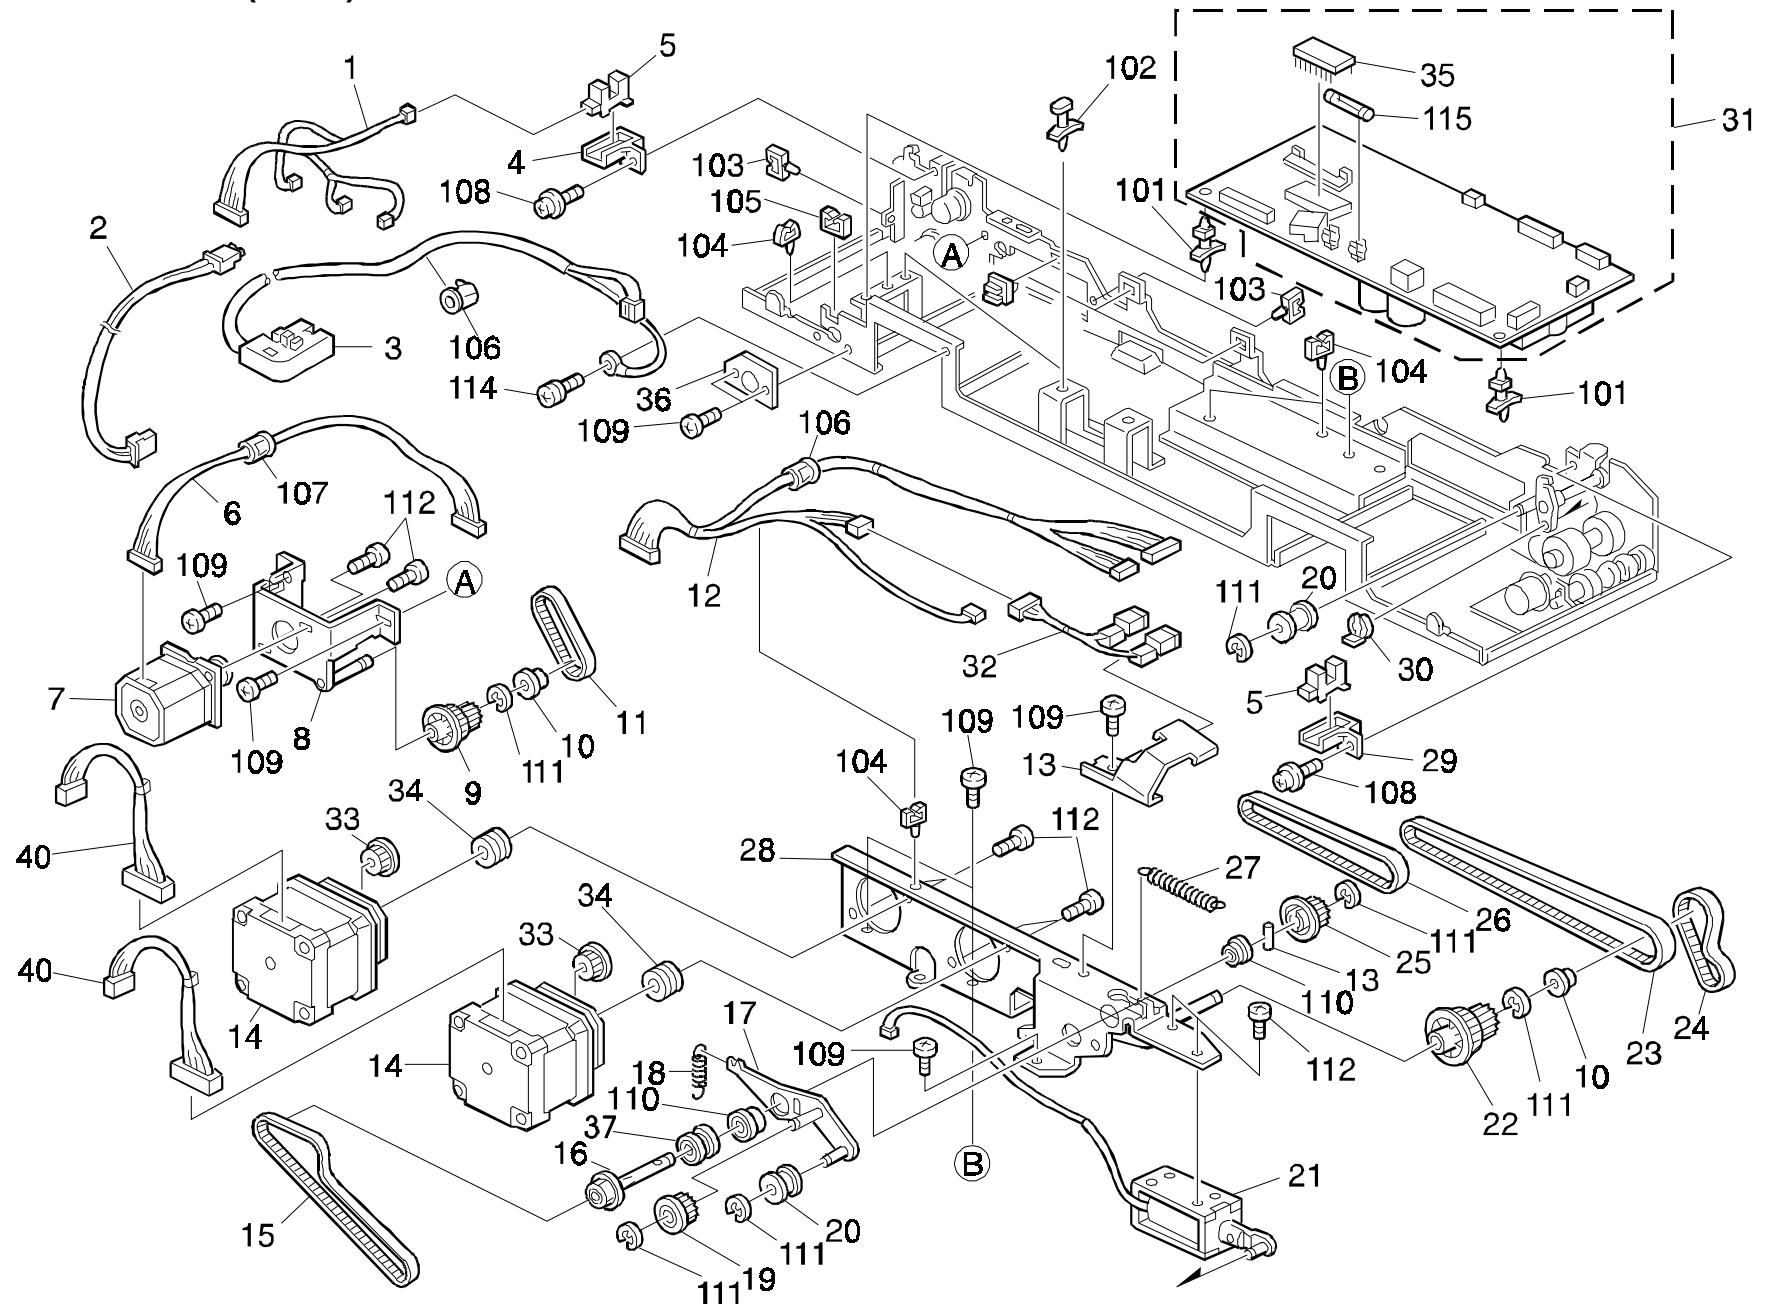


6.DRIVE SECTION (A663)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A548 5220	Paper Exit Harness	1
2	AW03 0037	Optical Fiber	1
3	A548 5280	Interface Harness	1
4	A548 1351	Photosensor Bracket	1
5	AW02 0021	Photointerruptor - 175487-3	2
6	A663 5240	Inverter Harness	1
7	A663 2621	Exit Motor - 3.7V 14.8W	1
8	A663 1336	Exit Motor Bracket	1
9	A548 2135	Timing Pulley- 16/34Z	1
10	5936 2321	Rubber Bushing - Vibration Damper	2
11	AA04 3380	Timing Belt - B40S2S116	1
12	A663 5210	Paper Feed Harness	1
13	A548 1366	Indicator Bracket	1
14	AX05 0108	Stepping Motor	1
15	AA04 3379	Timing Belt - B40S3M288	1
16	A548 2125	Timing Pulley - 16Z	1
17	A548 2182	Fixing Plate	1
18	AA06 0590	Pressure Spring	1
19	AB03 0354	Pulley - 20t	1
20	A548 2139	Idle Pulley	2
21	A548 2571	Paper Feed Solenoid	1
22	A548 2131	Timing Pulley - 16/42Z	1
23	AA04 3377	Timing Belt - B40S2M380	1
24	AA04 3378	Timing Belt - B40S3M159	1
25	A548 2121	Timing Pulley - 31Z	1
26	AA04 3376	Timing Belt - B40S2M194	1
27	AA06 0589	Pressure Spring	1
28	A548 1331	Paper Feed Motor Bracket	1
29	A548 1352	Photosensor Bracket - Paper Feed	1
30	5206 2686	Snap Ring	1
31	A663 5530	Main Control Board	1
32	A548 5230	Indicator Harness	1
33	A548 2111	Timing Pulley - 20Z	1
34	A548 2113	Motor Cushion	1
35	A663 5815	IC - 256K X 8 150NS	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	A548 1129	Harness Bracket	1
37	5937 4158	Spring Washer - BD10	2
38	A663 2113	Cushion - Stepping Motor	1
39	A663 2611	Paper Feed Motor - 4.29V 22.3W	2
40	A663 5270	Motor Harness	2
101	1105 0194	PCB Stud	
102	1105 0410	Card Spacer - 9.4mm	
103	1105 0199	Clamp	
104	1105 0229	Clamp	
105	1105 0328	Harness Clamp - ES-0505	
106	1106 0289	Bushing - SR-5N-1	
107	1106 0241	Bushing - 6.7mm	
108	0951 4006B	Philips Screw With Washer - M4x6	
109	0314 0060B	Philips Pan Head Screw - M4x6	
110	0741 3506	Ball Bearing - 6x12x4 Mm	
111	0720 0040E	Retaining Ring - M4	
112	0353 0050B	Philips Truss Head Screw - M3x5	
113	0632 0120G	Parallel Pin - 2x12	
114	0951 4008B	Philips Screw With Washer - M4x8	
115	1107 0750	Fuse - 3.15A 250V	

7.DECAL AND DOCUMENT (A663)

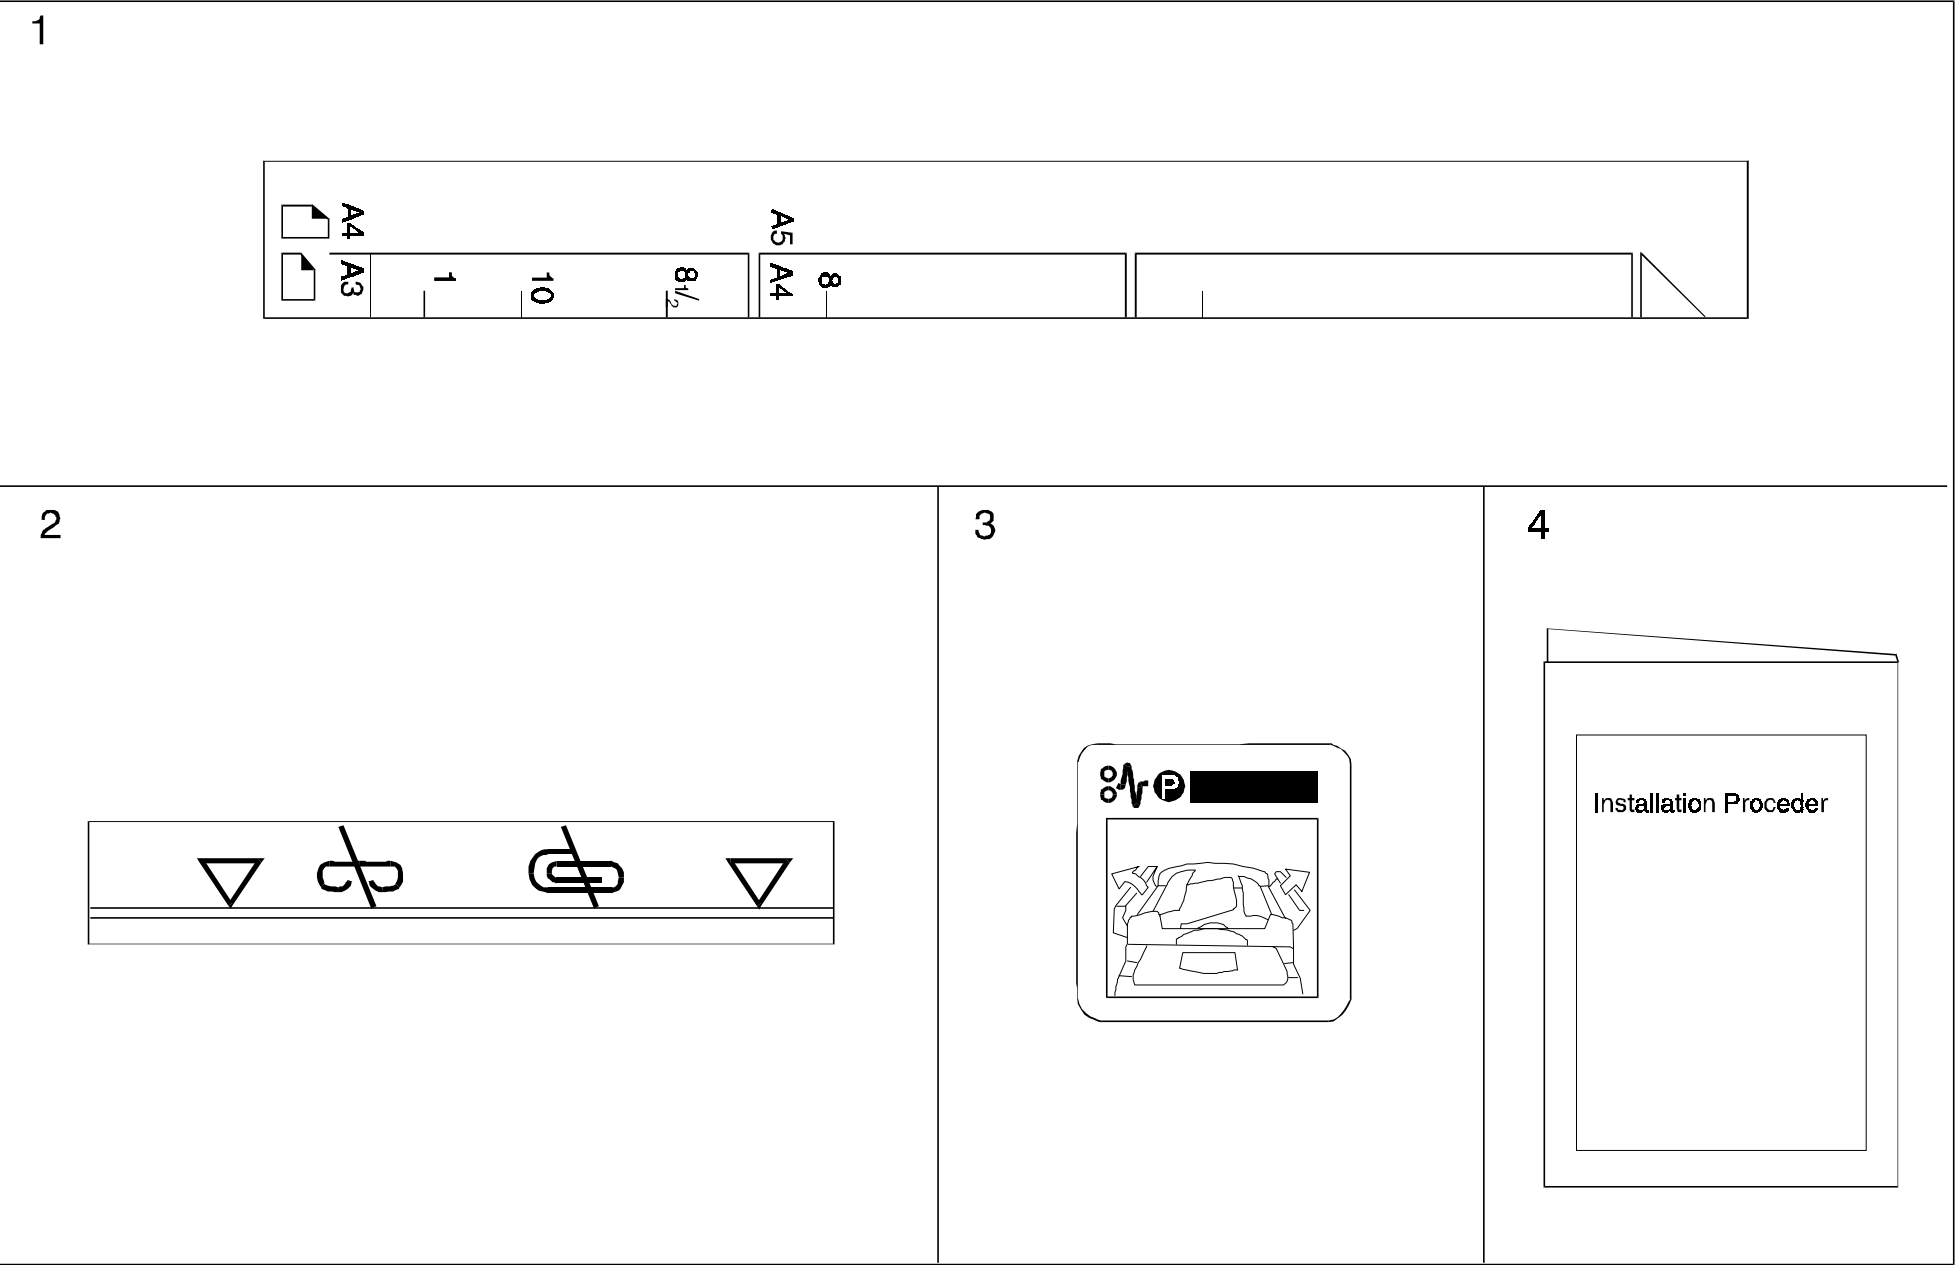

7.DECAL AND DOCUMENT (A663)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A548 1912	Decal - Size - Original - NA	1
2	A548 1931	Decal - Original Table	1
3	A548 1921	Decal - Misfeed Removal	1

Index No.	Part No.	Description	Q'ty Per Assembly

Parts Index

PM Parts Index

Section Name	Part No.	Description in Service Manual	Description in Parts Catalog	Q'ty Per Assembly	Page and Index No.
PAPER FEED SECTION 1 (A663)	A548 1271	Separation Roller	Separation Roller	1	5- 9
PAPER FEED SECTION 1 (A663)	A548 1276	Friction Belt	Separation Belt	1	5- 25
TRANSFER BELT UNIT (A663)	A548 1482	Transport Belt	Transport Belt	1	9- 10

Parts Index

Part No.	Description	Page and Index No.
A663 1161	Middle Guide Plate	5- 14
A663 1173	Transfer Belt Guide	5- 40
A663 1182	Base Bracket - Original Feed	5- 41
A663 1241	Exit Roller:driven (rarely Used):as	3- 12
A663 1336	Exit Motor Bracket	13- 8
A663 1412	Transport Base Plate	9- 4
A663 1711	Upper Cover	3- 14
A663 2113	Cushion - Stepping Motor	13- 38
A663 2611	Paper Feed Motor - 4.29V 22.3W	13- 39
A663 2621	Exit Motor - 3.7V 14.8W	13- 7
A663 5210	Paper Feed Harness	13- 12
A663 5240	Inverter Harness	13- 6
A663 5270	Motor Harness	13- 40
A663 5530	Main Control Board	13- 31
A663 5815	IC - 256K X 8 150NS	13- 35

Part No.	Description	Page and Index No.
AA04 3376	Timing Belt - B40S2M194	13- 26
AA04 3377	Timing Belt - B40S2M380	13- 23
AA04 3378	Timing Belt - B40S3M159	13- 24
AA04 3379	Timing Belt - B40S3M288	13- 15
AA04 3380	Timing Belt - B40S2S116	13- 11
AA04 3381	Timing Belt - B40s3m192	11- 17
AA06 0588	Pressure Spring	11- 5
AA06 0589	Pressure Spring	13- 27
AA06 0590	Pressure Spring	13- 18
AA06 0612	Pressure Spring	11- 7
AA06 3503	Pressurespring	5- 22
AA14 3039	Spring Holder	11- 25
AA14 3039	Spring Holder	7- 27
AB03 0354	Pulley - 20t	13- 19
AW01 0027	Photosensor - ON2530 CT	11- 13
AW01 0027	Photosensor - ON2530 CT	5- 16
AW02 0021	Photointerruptor - 175487-3	13- 5
AW02 0021	Photointerruptor - 175487-3	11- 19
AW02 0054	Sensor - Duplex	5- 11
AW02 0075	Photointerruptor	7- 9
AW03 0037	Optical Fiber	13- 2
AX05 0108	Stepping Motor	13- 14

Part No.	Description	Page and Index No.
A351 4281	Anti-Vibration Cushion	7- 20
A351 4281	Anti-Vibration Cushion	11- 23
A376 1461	Feed Roller Bushing	5- 5
A376 1465	Feed Roller Bushing	5- 7
A376 1467	Feed Roller Pressure Spring	5- 6
A376 2132	Belt Driven Roller	9- 9
A376 3242	Antistatic Brush	5- 36
A376 4599	Side Fence Pad	3- 17
A458 2165	Spring - Driven Roller	7- 6
A548 1127	Original Sensor Bracket	7- 33
A548 1129	Harness Bracket	13- 36
A548 1131	Left Stay	7- 31
A548 1133	Right Stay	11- 22
A548 1135	Spring Plate	7- 32
A548 1135	Spring Plate	11- 15
A548 1137	Left Arm Shaft	7- 30
A548 1139	Right Arm Shaft	11- 28
A548 1141	Stay	7- 34
A548 1151	Upper Guide Plate	7- 14
A548 1153	Grounding Plate	7- 28
A548 1154	Antistatic Brush	7- 29
A548 1156	Regist Sensor Bracket	5- 15
A548 1158	Paper Size Sensor Bracket	5- 13
A548 1171	Lower Paper Feed Guide	5- 17
A548 1172	Lower Separation Guide	5- 39
A548 1175	Base Cover	5- 21
A548 1179	Cushion - 5x15x50	5- 38
A548 1191	Sidearm Shaft	5- 37
A548 1192	Middle Arm Shaft	5- 27
A548 1193	Side Arm - Driven Shaft	5- 32
A548 1194	Middle Arm - Driven Shaft	5- 29
A548 1195	Pressure Spring - Side Arm	5- 19
A548 1196	Pressure Spring - Middle Arm	5- 28
A548 1197	Pressure Spring	5- 31
A548 1202	Middle Driven Roller	5- 30

Part No.	Description	Page and Index No.
A548 1206	Rear Arm Shaft	5- 34
A548 1207	Side Driven Roller	5- 33
A548 1208	Side Driven Roller	5- 2
A548 1210	Paper Inverter Guide Plate	11- 2
A548 1220	Paper Exit Guide	11- 27
A548 1221	Paper Exit Guide	11- 12
A548 1231	Guide Roller	11- 9
A548 1233	Driven Roller	11- 4
A548 1234	Driven Roller Arm	11- 3
A548 1251	Paper Feed Roller	7- 13
A548 1256	Pull-Out Roller	7- 12
A548 1261	Exit Roller	11- 1
A548 1266	Inverter Roller	11- 11
A548 1271	Separation Roller	5- 9
A548 1276	Separation Belt	5- 25
A548 1281	Belt Drive Roller	5- 35
A548 1283	Bushing - 6x10x6.5mm	7- 5
A548 1283	Bushing - 6x10x6.5mm	5- 4
A548 1286	Belt Driven Roller	5- 24
A548 1288	Belt Driven Shaft	5- 23
A548 1291	Separation Belt Bracket	5- 20
A548 1312	Entrance Gate Stopper	7- 1
A548 1313	Holder Plate	7- 7
A548 1314	Stopper Lever	7- 17
A548 1315	Original Sensor Feeler	7- 3
A548 1317	Lever Cushion	7- 2
A548 1320	Inverter Gate Plate	11- 6
A548 1331	Paper Feed Motor Bracket	13- 28
A548 1341	Paper Exit Solenoid	11- 20
A548 1351	Photosensor Bracket	13- 4
A548 1352	Photosensor Bracket - Paper Feed	13- 29
A548 1357	Exit Sensor Bracket	11- 14
A548 1359	Harness Holder	11- 21
A548 1361	Front Bracket - Left Cover	7- 16
A548 1363	Rear Bracket - Left Cover	7- 11

Part No.	Description	Page and Index No.
A548 1366	Indicator Bracket	13- 13
A548 1372	Original Sensor Bracket	7- 10
A548 1382	Front Bracket - Exit Roller	3- 5
A548 1385	Antistatic Brush Bracket	3- 6
A548 1412	X/O MB5	9- 4
A548 1422	Transport Stay	9- 8
A548 1432	Belt Drive Roller	9- 1
A548 1442	Transport Arm	9- 7
A548 1443	Arm Shaft	9- 5
A548 1446	Arm Bracket	9- 6
A548 1451	Belt Driven Roller	9- 12
A548 1461	Belt Pressure Roller	9- 3
A548 1463	Belt Pressure Roller	9- 2
A548 1481	O/O MB4	9- 10
A548 1482	Transport Belt	9- 10
A548 1531	Safety Switch Feeler	11- 24
A548 1541	Safety Switch Bracket	11- 8
A548 1580	Left Hinge	7- 26
A548 1590	Right Hinge	11- 26
A548 1731	Original Table	3- 7
A548 1761	Side Fence Rail	3- 18
A548 1781	Main Board Cover	3- 13
A548 1812	Left Cover Ass'y	3- 1
A548 1831	Exit Cover Ass'y	3- 4
A548 1851	Right Cover	3- 11
A548 1861	Front Cover	3- 10
A548 1912	Decal - Size - Original - NA	15- 1
A548 1912	Decal - Size - Original - NA	3- 2
A548 1921	Decal - Misfeed Removal	15- 3
A548 1921	Decal - Misfeed Removal	3- 3
A548 1931	Decal - Original Table	15- 2
A548 1931	Decal - Original Table	3- 19
A548 2111	Timing Pulley - 20Z	13- 33
A548 2113	Motor Cushion	13- 34
A548 2121	Timing Pulley - 31Z	13- 25

Part No.	Description	Page and Index No.
A548 2125	Timing Pulley - 16Z	13- 16
A548 2131	Timing Pulley - 16/42Z	13- 22
A548 2133	Timing Pulley - 24Z	11- 16
A548 2135	Timing Pulley- 16/34Z	13- 9
A548 2137	Timing Pulley - 18Z	11- 18
A548 2139	Idle Pulley	13- 20
A548 2141	Timing Pulley - 20Z (OBS) MB1	9- 13
A548 2171	Paper Feed Shaft	7- 23
A548 2174	Driven Roller Shaft	5- 8
A548 2182	Fixing Plate	13- 17
A548 2191	Stopper Gear - 22Z	7- 24
A548 2315	Gear - 24Z	7- 21
A548 2317	Gear - 24Z	7- 22
A548 2319	Gear - 20Z	7- 19
A548 2321	Gear - 32Z	5- 3
A548 2325	Gear - 18Z	7- 18
A548 2331	Gear - 23Z	5- 1
A548 2341	Joint Roller	5- 10
A548 2351	Idle Roller Shaft	7- 25
A548 2571	Paper Feed Solenoid	13- 21
A548 5220	Paper Exit Harness	13- 1
A548 5230	Indicator Harness	13- 32
A548 5250	Relay Harness	5- 12
A548 5260	Sensor Harness	7- 8
A548 5280	Interface Harness	13- 3
A548 6131	Cushion - 20x190x30	3- 15
A565 2161	Side Fence	3- 16
A680 1431	Belt Drive Roller Ass'y X/O MB1	9- 1

Part No.	Description	Page and Index No.
5206 2686	Snap Ring	13- 30
5215 2621	Snap Ring - M6	11- 10
5324 1658	Bushing- 4x8x4.5mm	5- 26
5419 5714	Stepped Screw - M4	7- 15
5419 5714	Stepped Screw - M4	9- 11
5446 2824	Screw - Duplex Guide Plate	3- 9
5447 2681	Snap Ring	5- 18
5447 2681	Snap Ring	7- 4
5875 2088	Shoulder Screw - M4	3- 8
5936 2321	Rubber Bushing - Vibration Damper	13- 10
5937 4158	Spring Washer - BD10	13- 37

Part No.	Description	Page and Index No.
0313 0100B	Philips Pan Head Screw - M3x10	11-111
0313 0100B	Philips Pan Head Screw - M3x10	5-106
0314 0060B	Philips Pan Head Screw - M4x6	5-103
0314 0060B	Philips Pan Head Screw - M4x6	11-104
0314 0060B	Philips Pan Head Screw - M4x6	7-102
0314 0060B	Philips Pan Head Screw - M4x6	13-109
0314 0060B	Philips Pan Head Screw - M4x6	9-104
0344 0060F	Philips Truss Head Screw - M4x6	3-102
0353 0040B	Screw - M3x4	11-108
0353 0050B	Philips Truss Head Screw - M3x5	13-112
0353 0050B	Philips Truss Head Screw - M3x5	7-107
0413 0082B	Tapping Screw - M3x8	11-106
0414 0082B	Binding Self Tapping Screw - M4x8	3-101
0414 0122B	Philips Tapping Screw - M4x12	3-105
0632 0120G	Parallel Pin - 2x12	11-107
0632 0120G	Parallel Pin - 2x12	13-113
0701 0040B	Hexagon Nut - M4	3-104
0720 0030E	Retaining Ring - M3	5-104
0720 0030E	Retaining Ring - M3	11-103
0720 0030E	Retaining Ring - M3	9-106
0720 0040E	Retaining Ring - M4	13-111
0720 0040E	Retaining Ring - M4	11-105
0720 0040E	Retaining Ring - M4	9-105
0720 0040E	Retaining Ring - M4	7-101
0720 0040E	Retaining Ring - M4	5-101
0720 0060E	Retaining Ring - M6	7-104
0740 3506	Ball Bearing - 6x12x4 mm	9-102
0740 3906	Ball Bearing - 6x15x5	7-106
0741 3506	Ball Bearing - 6x12x4 Mm	13-110
0741 3808	Ball Bearing - 8x16x5mm	7-105
0805 0089	Retaining Ring - M4	9-103
0805 0089	Retaining Ring - M4	5-108
0805 3263	Bearing - 6 X 10 X 6mm	5-105
0805 3480	Bushing - 6mm	5-107
0805 3480	Bushing - 6mm	9-101

Part No.	Description	Page and Index No.
0805 3480	Bushing - 6mm	7-103
0805 3480	Bushing - 6mm	11-102
0951 4006B	Philips Screw With Washer - M4x6	11-110
0951 4006B	Philips Screw With Washer - M4x6	13-108
0951 4008B	Philips Screw With Washer - M4x8	13-114
0951 4008B	Philips Screw With Washer - M4x8	3-103
0951 4008B	Philips Screw With Washer - M4x8	11-101
1105 0194	PCB Stud	13-101
1105 0199	Clamp	13-103
1105 0199	Clamp	7-108
1105 0229	Clamp	11-109
1105 0229	Clamp	13-104
1105 0229	Clamp	5-102
1105 0328	Harness Clamp - ES-0505	13-105
1105 0410	Card Spacer - 9.4mm	13-102
1106 0241	Bushing - 6.7mm	5-109
1106 0241	Bushing - 6.7mm	13-107
1106 0289	Bushing - SR-5N-1	13-106

Part No.	Description	Page and Index No.
1107 0750	Fuse - 3.15A 250V	13-115