

DF72 (B387)

DF72 (B387)

PARTS CATALOG


This catalog gives the numbers and names of parts on this machine.

CONTENTS

1.Exterior (B387)	2
2.Original Feed Section 1 (B387)	4
3.Original Feed Section 2 (B387)	6
4.Original Transfer And Frame (B387)	8
5.Electrical Section (B387)	10
6.Decals And Documents (B387)	12
Parts Index	15

February ,28 ' 2001

1.Exterior (B36)

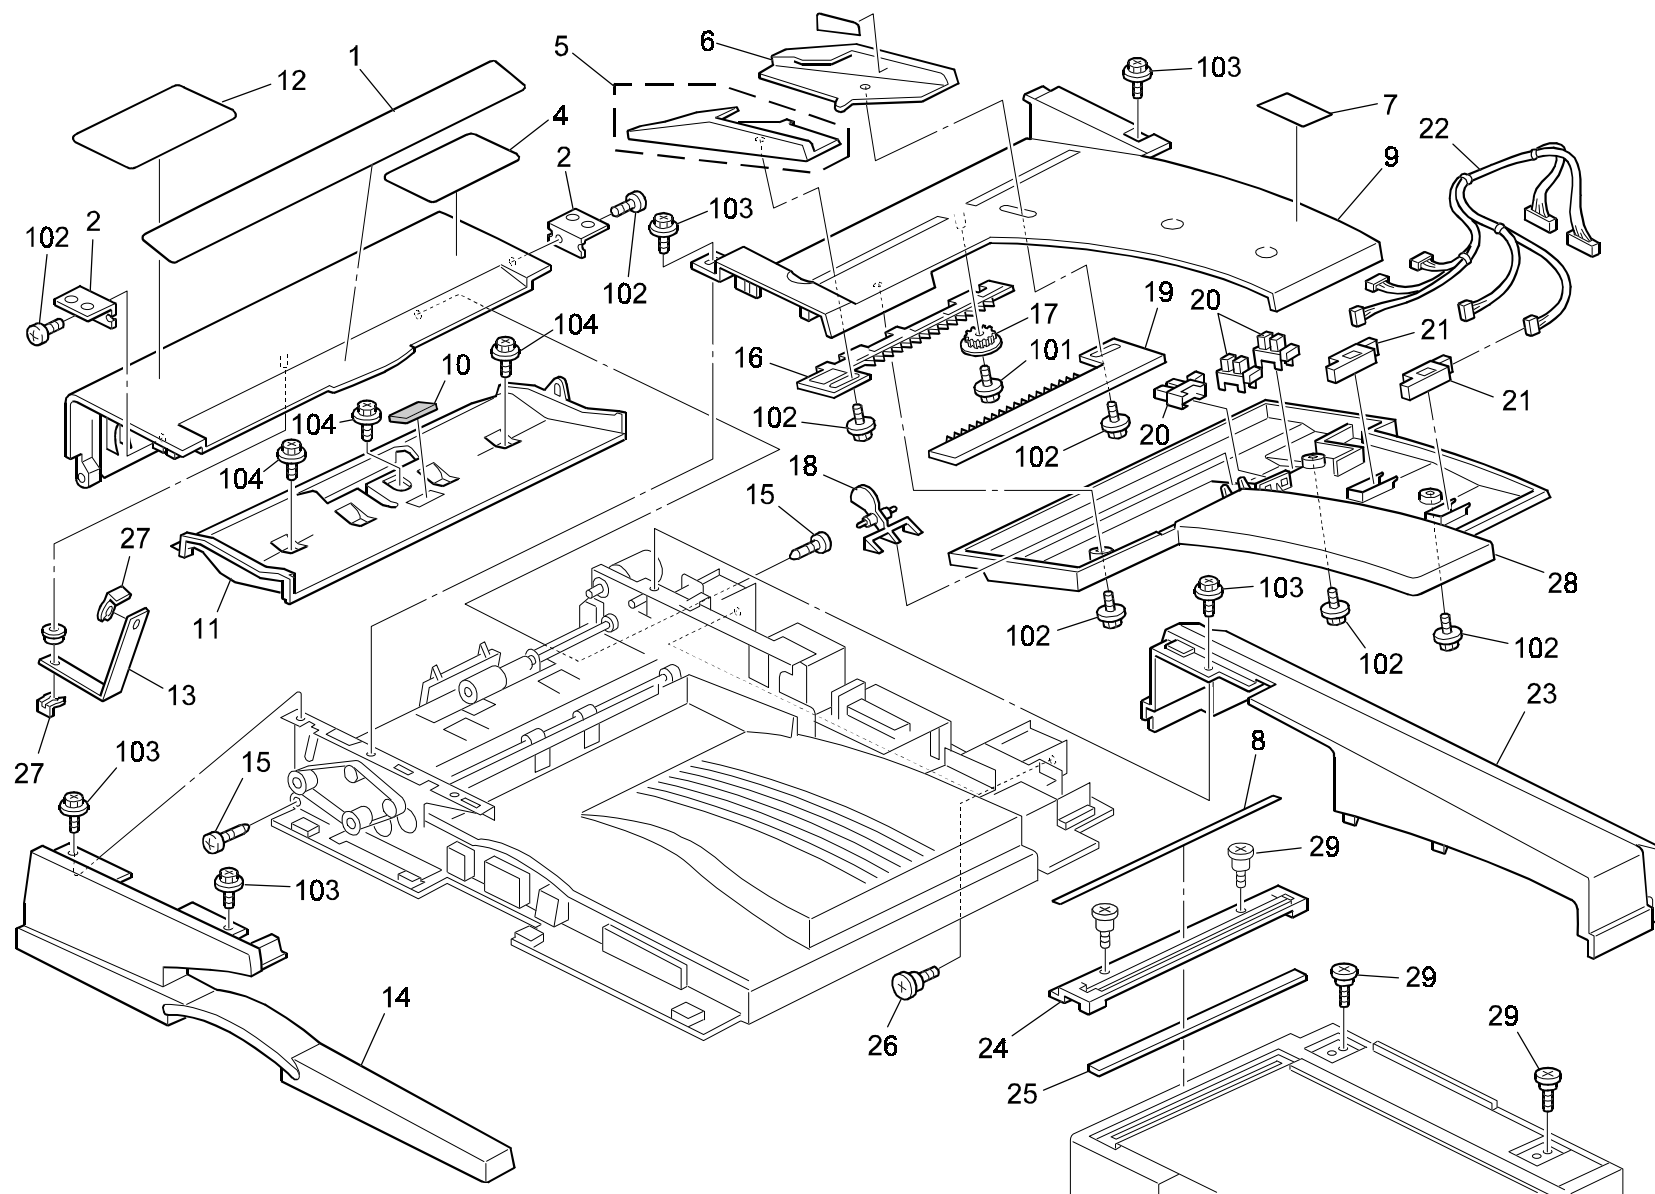


1.Exterior (B387)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B387 6021	Size Indication Decal	1
2	B387 4873	Positioning Plate	2
3	B387 4841	Left Cover	1
4	B379 6063	Exposure Glass Decal	1
5	B387 4640	Front Side Fence	1
6	B387 4655	Rear Side Fence	1
7	B387 6032	Original Orientation Decal	1
8	B387 6012	Misfeed Removal Decal	1
9	B387 4605	Upper Original Table	1
10	A859 2352	Pad Pressure Plate	1
11	B387 2310	Guide Plate - Paper Feed	1
12	B387 6053	Original Scale Decal - A4	1
12	B387 6054	Original Scale Decal - LT	1
13	B387 4875	Left Cover Band	1
14	B387 4812	Front Cover	1
15	5446 2824	Screw - Duplex Guide Plate	1
16	B387 4661	Front Rack - Side Fence	1
17	A859 4665	Gear - 16Z	1
18	B387 4681	Feeler - Original Trailing Edge	1
19	B387 4671	Rear Rack - Side Fence	1
20	AW02 0075	Photointerruptor	1
21	AW01 0087	Photo Sensor - Ass'y	1
22	B387 5705	Original Tray Harness	1
23	B387 4822	Rear Cover	1
24	B386 7101	Original Scale	1
25	AC01 3004	Exposure Glass	1
26	A548 6121	Screw - M4	2
27	5206 2686	Snap Ring	1
28	B387 4621	Lower Original Table	1
29	A859 7211	Stepped Screw	2


Index No.	Part No.	Description	Q'ty Per Assembly
101	0450 3008B	Tapping Screw - M3x8	
102	0452 3008B	Tapping Screw - M3x8	
103	0451 3008H	Tapping Screw - M3x8	

2.Original Feed Section 1 (B387)

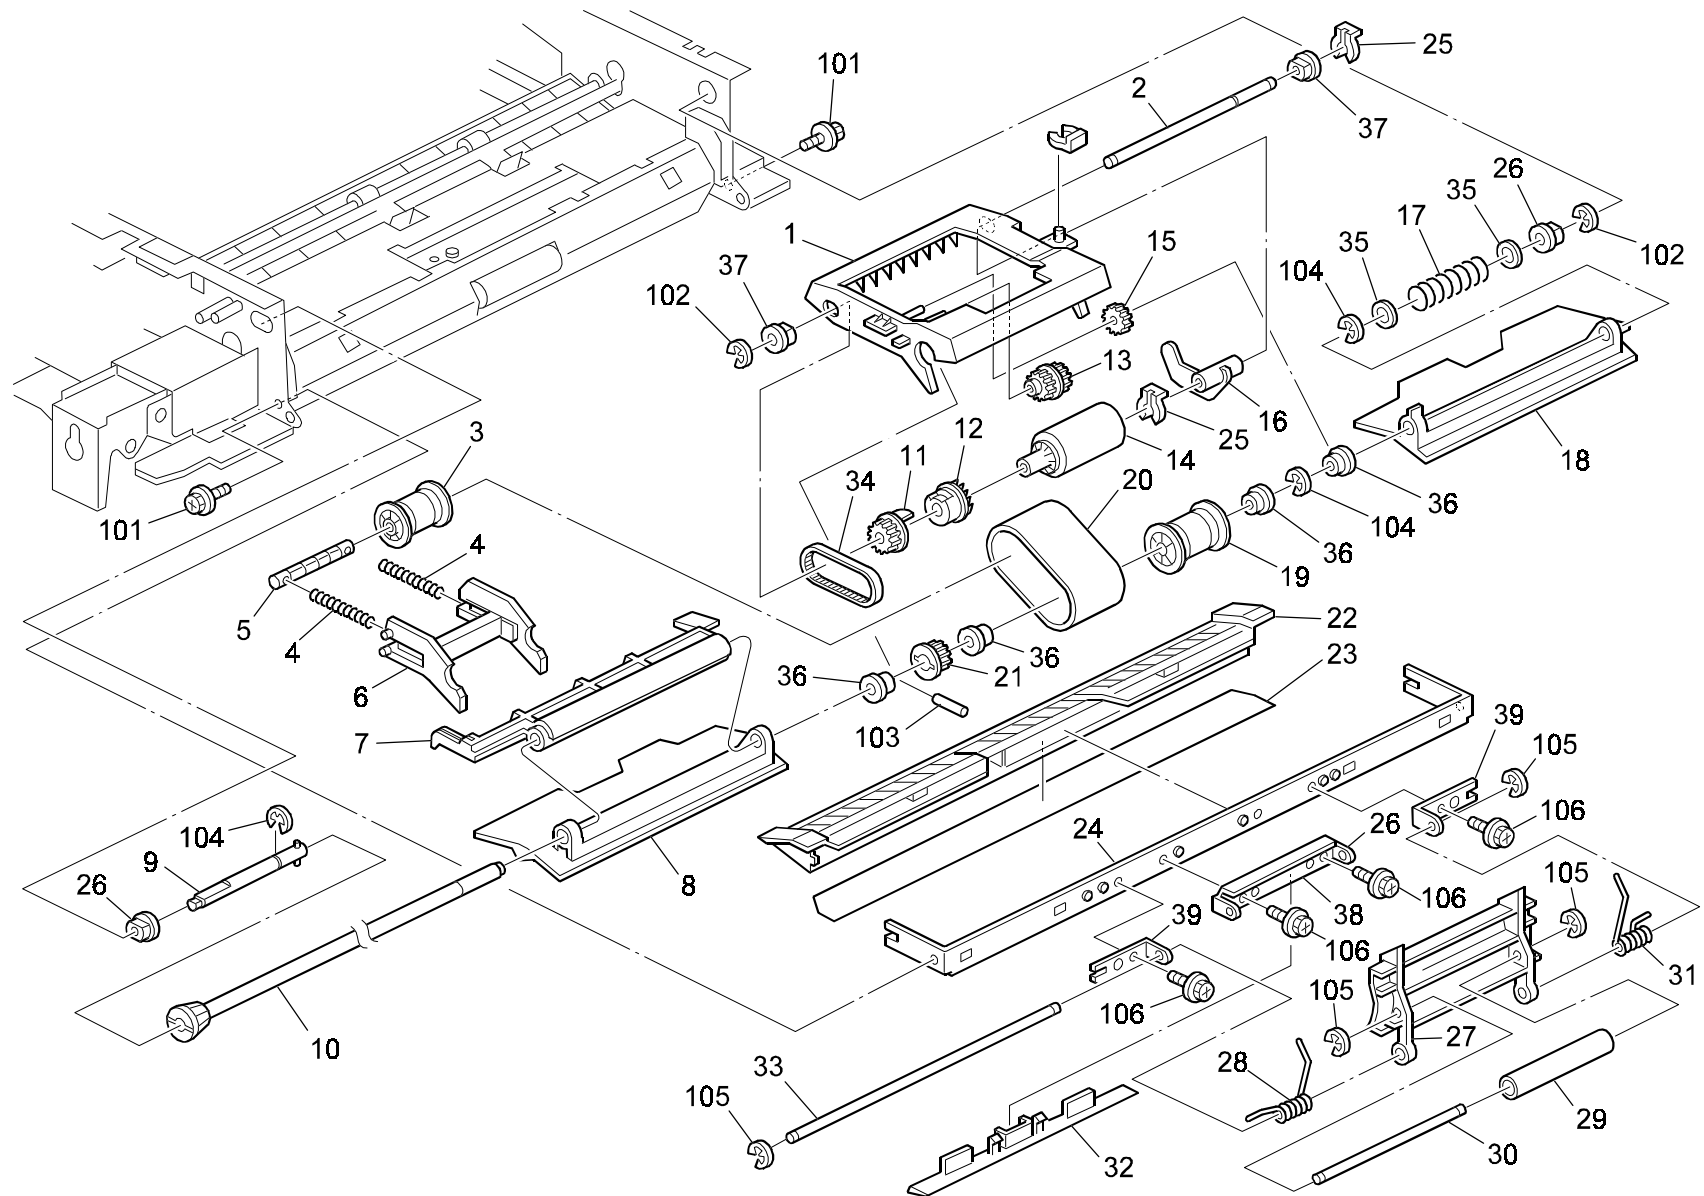



3.Original Feed Section 2 (B387)

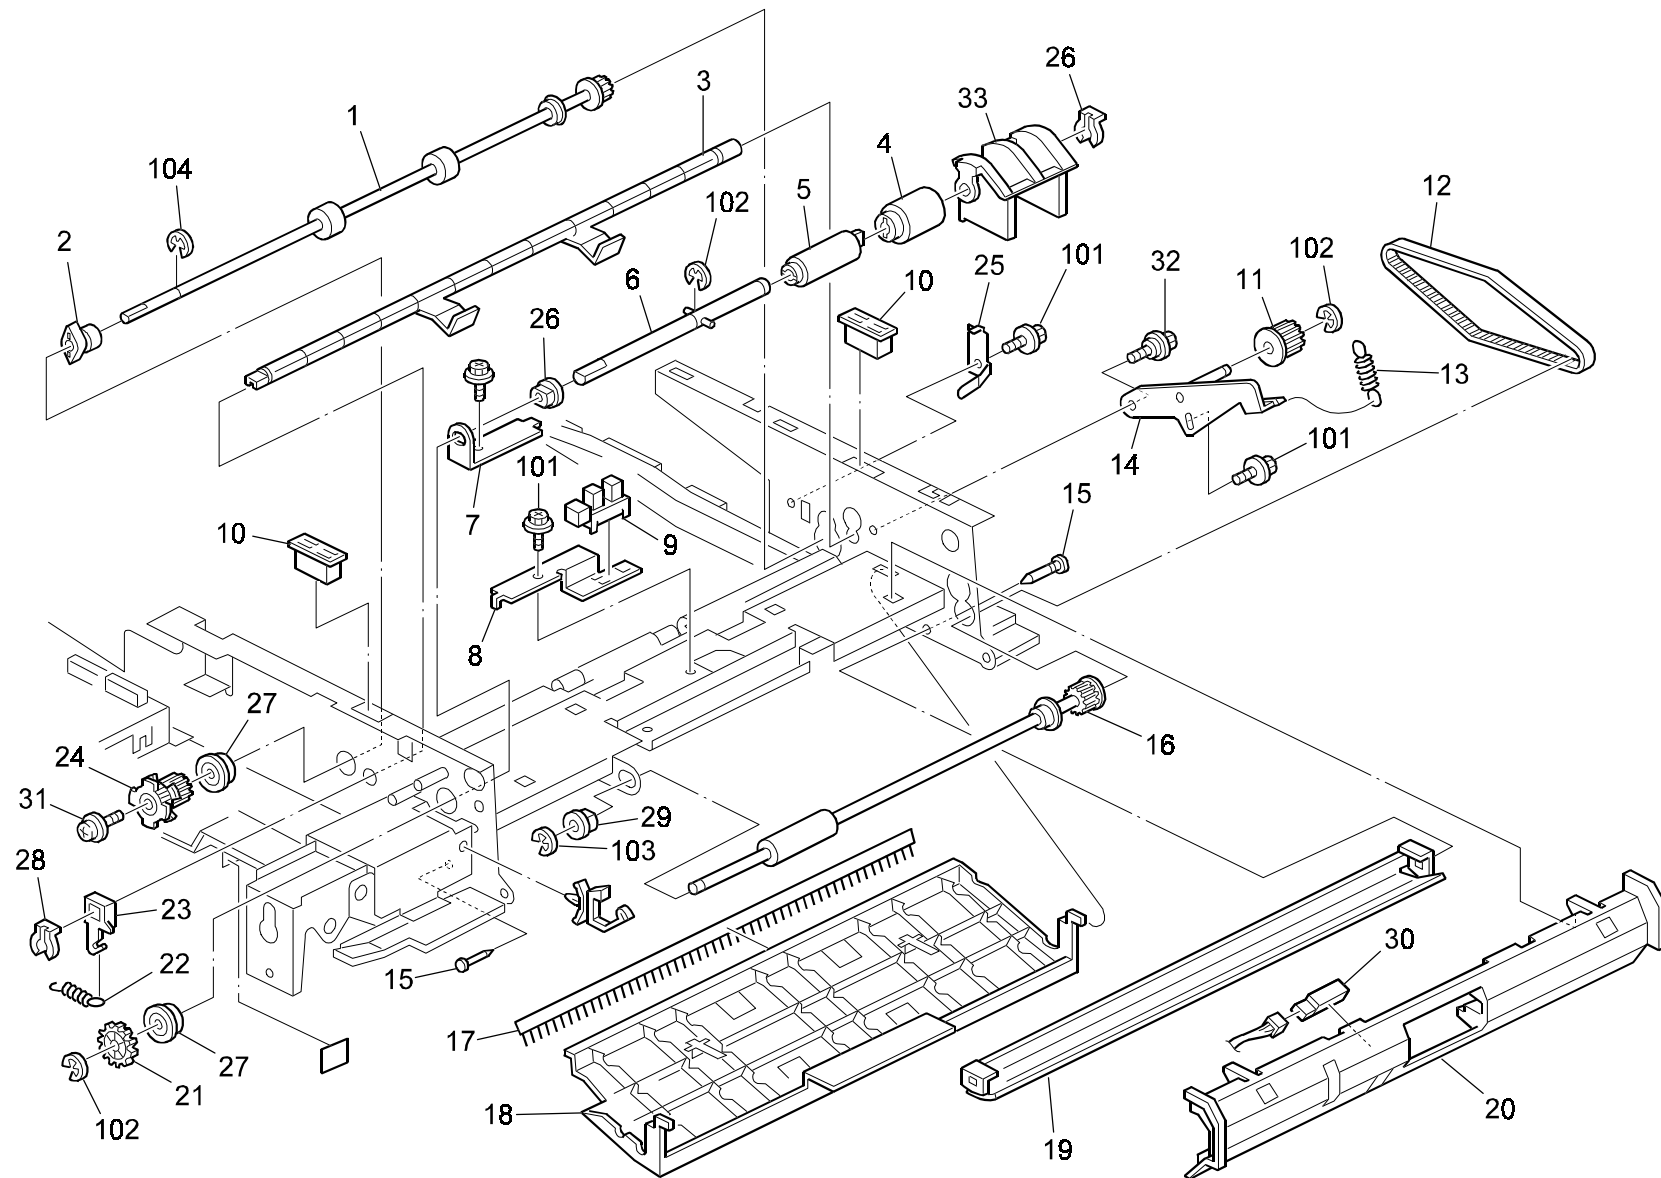


3.Original Feed Section 2 (B387)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B387 3130	Exit Roller	1
2	B387 2421	Original Stopper Cam	1
3	B387 2411	Original Stopper	1
4	B387 1671	Reverse Roller	1
5	B387 2250	Torque Limiter - 40MNXM	1
6	B387 2210	Reverse Roller Shaft	1
7	B387 1612	Bracket - Reverse Roller Shaft	1
8	B387 1331	Original Sensor Bracket	1
9	AW02 0075	Photointerruptor	1
10	B387 1181	Magnet Catch	2
11	A859 4321	Pulley - 20Z	1
12	B387 4331	Timing Belt - 2XL	1
13	B387 4342	Adjusting Bracket Spring	1
14	B387 4311	Adjusting Bracket	1
15	5446 2824	Screw - Duplex Guide Plate	2
16	B387 3110	Left Transport Roller	1
17	B387 3225	Discharge Brush	1
18	B387 3220	Guide Plate - Upper Exit	1
19	A859 3511	Guide Exposure Glass	1
20	B387 3210	Guide Plate - Transport Roller	1
21	B387 4221	Gear - 28Z	1
22	B387 2435	Original Stopper Spring	1
23	B387 2431	Original Stopper Lever	1
24	B387 4271	Coupled Pulley - 20/30Z	1
25	B387 1221	Exit Grounding Plate	1
26	5053 0447	Bushing - 6mm	1
27	A859 2230	Ball Bearing - 6x13x5	2
28	5215 2621	Snap Ring - M6	1
29	5304 1639	Bushing - 8mm	1
30	AW01 0093	Photo Sensor - PS-117ND1	1
31	A590 2214	Screw - M3X5	1
32	A697 1125	Stepped Screw - Lever	1
33	B387 2220	Reverse Roller Cover	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006B	Tapping Screw - M3x6	
102	0720 0040B	Retaining Ring - M4	
103	0720 0060B	Retaining Ring - M6	
104	0720 0050E	Retaining Ring - M5	

4.Original Transfer And Frame (B387)

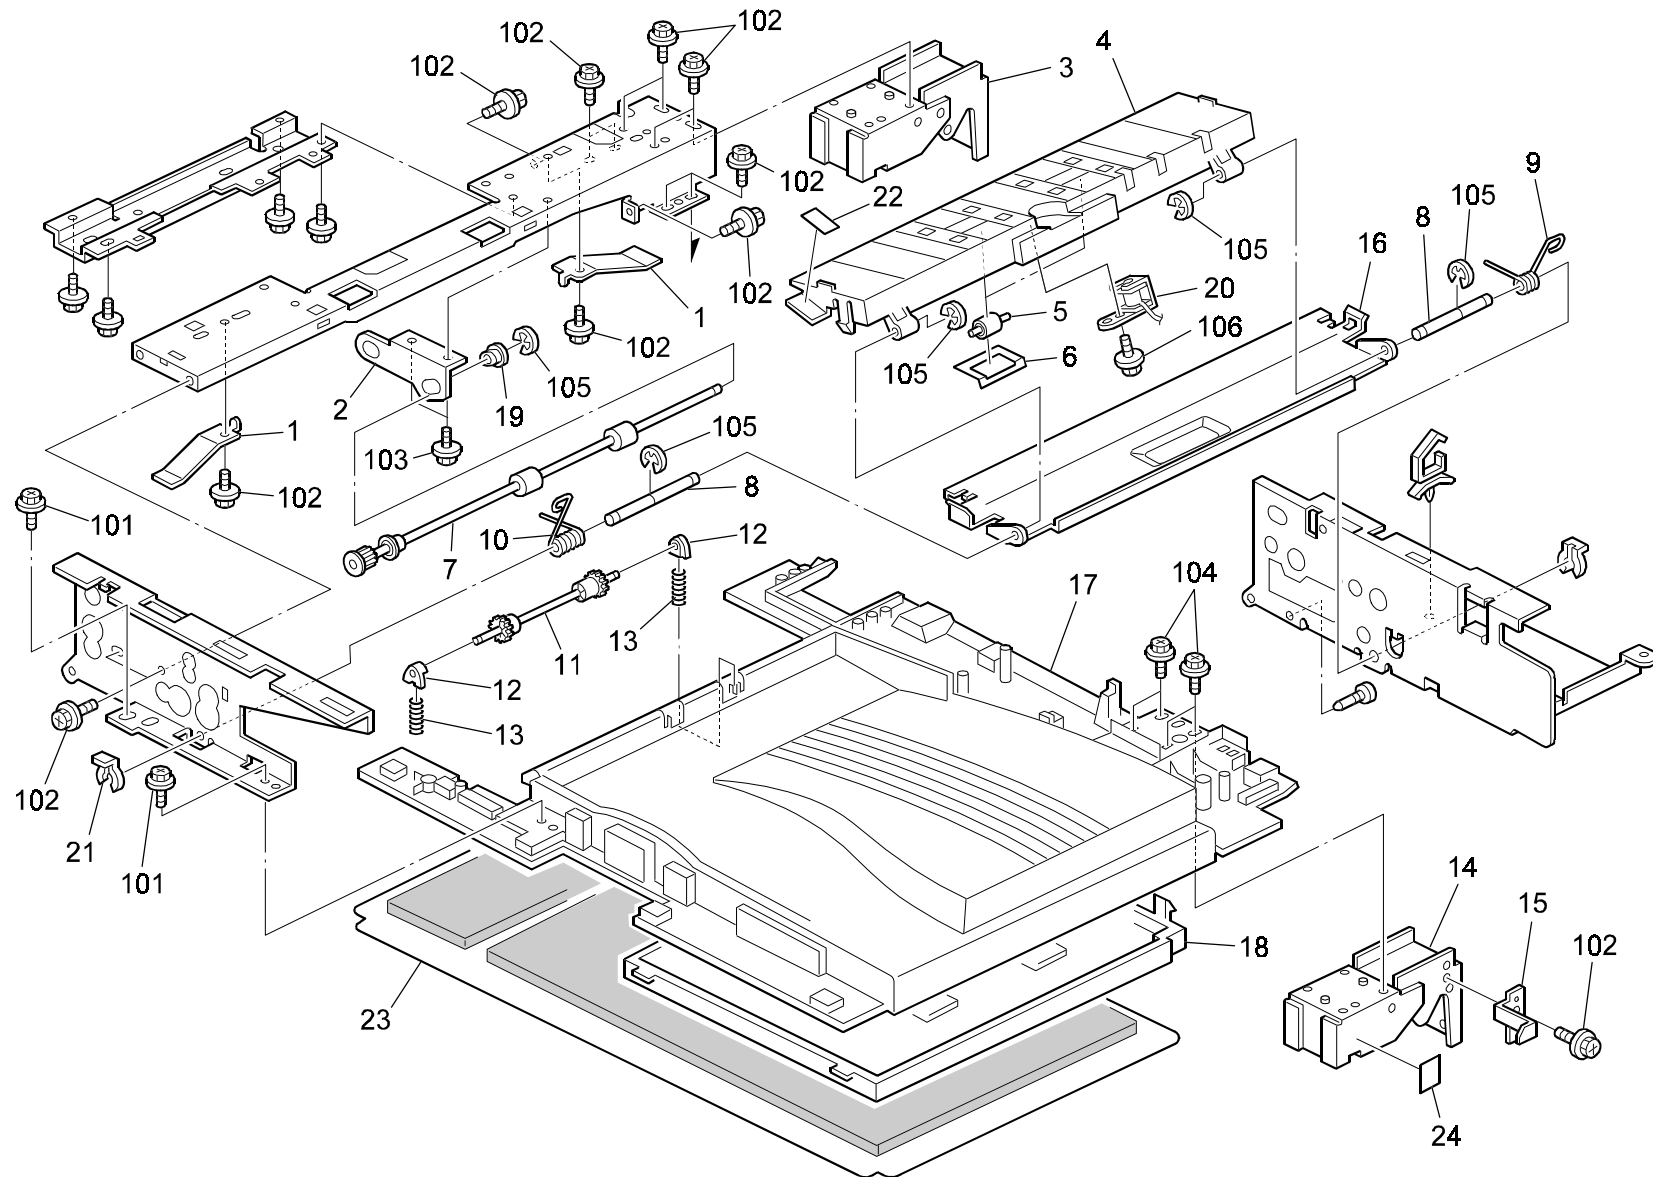


4.Original Transfer And Frame (B387)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B387 1322	Spring Plate	2
2	B387 1320	Transport Roller Bracket	1
3	B387 1811	Left Hinge	1
4	B387 3411	Exit Guide Plate	1
5	A859 3420	Middle Driven Roller	2
6	B387 3425	Spring Plate	2
7	B387 3120	Right Transport Roller	1
8	B387 3412	Shaft - Exit Guide Plate	1
9	B387 3430	Rear Spring - Exit Guide Plate	1
10	B387 3431	Front Spring - Exit Guide Plate	1
11	B387 1921	Driven Exit Roller	1
12	A859 4836	Bushing Exit Driven Roller	2
13	AA06 3311	Transport Roller Spring	2
14	B387 1831	Right Hinge	1
15	B387 1841	Feeler - DF Open Sensor	1
16	B387 3413	Cover - Exit Guide Plate	1
17	B387 1912	Base	1
18	B387 1932	Base - Platen Cover	1
19	5053 0447	Bushing - 6mm	1
20	H511 5006	Stamper	1
21	5447 2681	Snap Ring	2
22	A859 6023	Decal Green	1
23	B387 3600	Platen Sheet	1
24	A334 4678	Rack Shield Mylar	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0450 4008B	Tapping Screw - 4x8	
102	0451 3006B	Tapping Screw - M3x6	
103	0802 5276	Tapping Screw With Washer - M3x6	
104	0451 3008H	Tapping Screw - M3x8	
105	0720 0040B	Retaining Ring - M4	
106	0452 3008B	Tapping Screw - M3x8	

5. Electrical Section (B387)

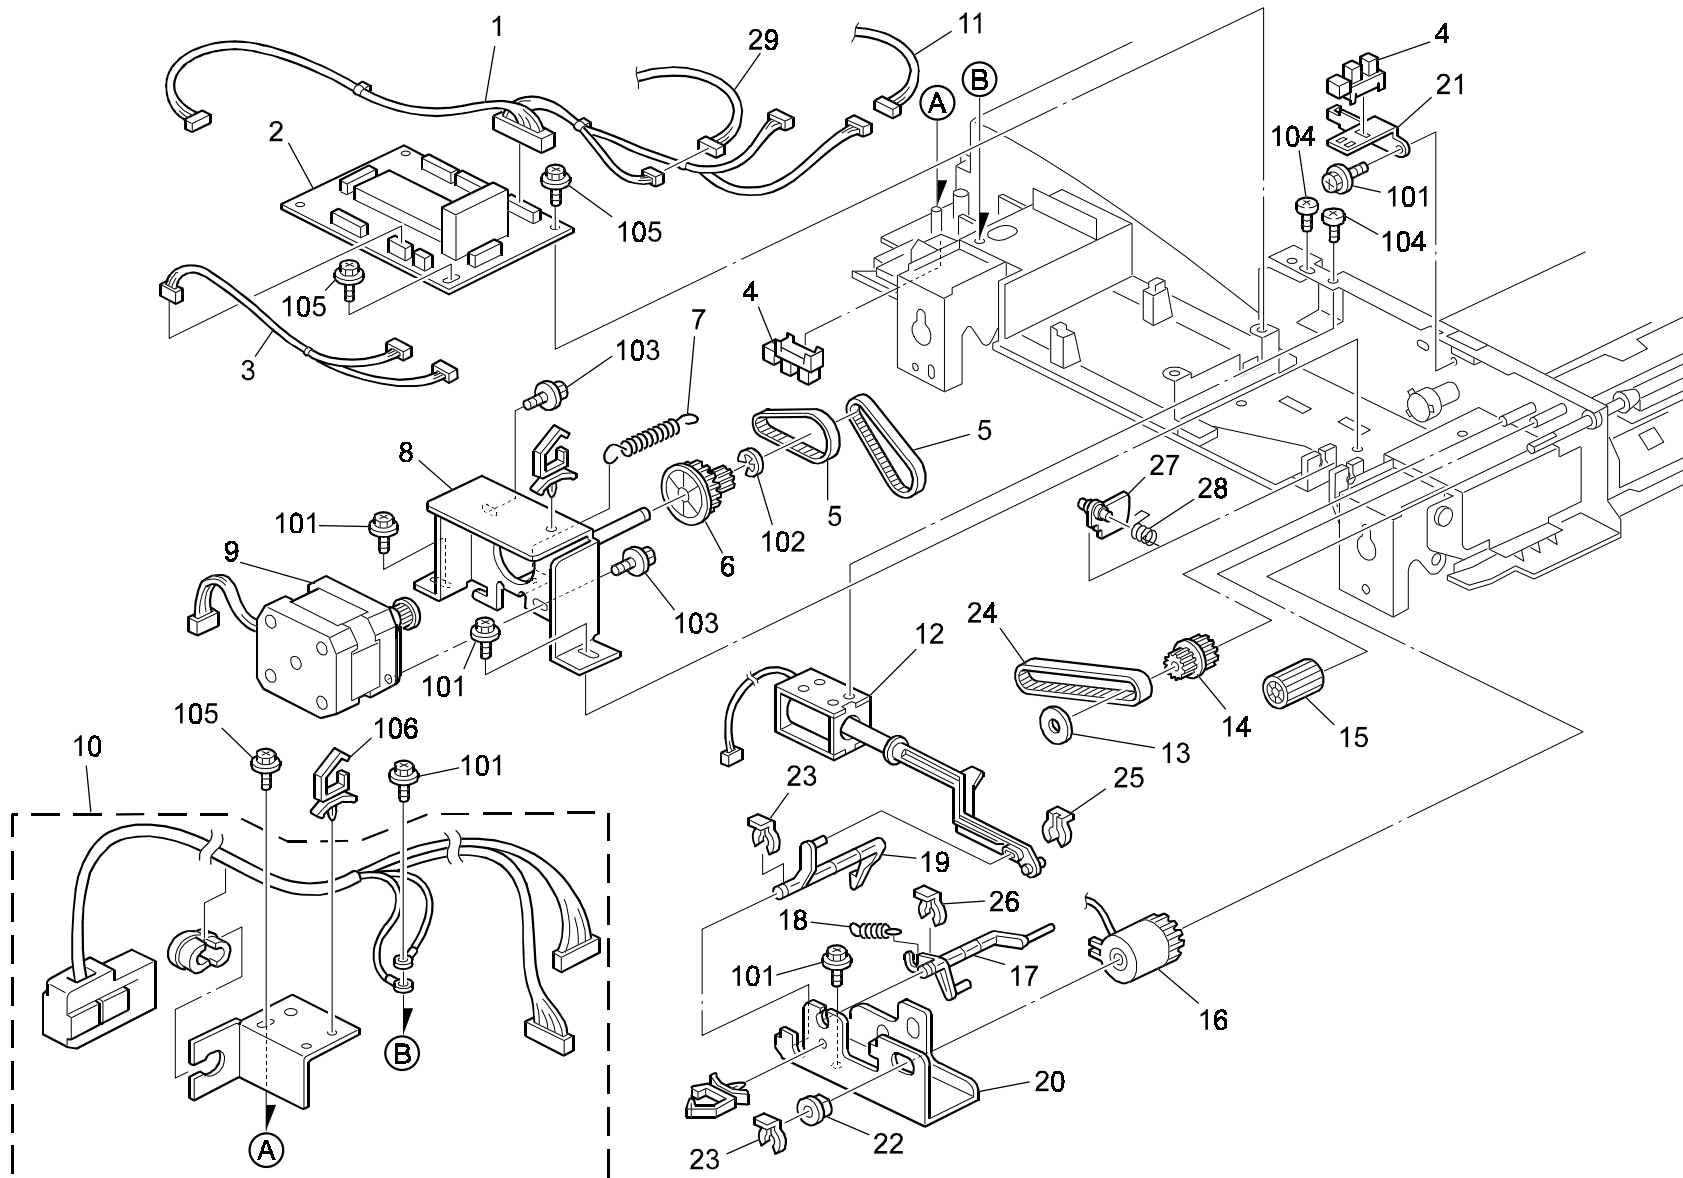


5.Electrical Section (B387)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B387 5700	Main Harness	1
2	B387 5500	Main Control Board	1
3	B387 5710	Feed Clutch Harness	1
4	AW02 0075	Photointerruptor	2
5	A859 4171	Timing Belt - 2XL	2
6	A661 1884	Pulley - 20T/48T	1
7	B387 4198	Transport Motor Spring	1
8	B387 4111	Transport Motor Bracket	1
9	B387 4121	DC Transport Motor	1
10	B387 5800	Interface Harness	1
11	B387 5715	Registration Sensor Harness	1
12	B387 4421	DC Solenoid	1
13	B387 4222	Flange	1
14	B387 4231	Gear/pulley - 20/21Z	1
15	B387 4241	Gear - 20Z	1
16	AX21 0071	Electromagnetic Clutch - 30Z	1
17	B387 2355	Pickup Lever	1
18	B387 2375	Pickup Spring	1
19	B387 2365	Stopper Pawl Lever	1
20	B387 1316	Feed Clutch Bracket	1
21	B387 1123	Bracket - Cover Open Sensor	1
22	5304 1639	Bushing - 8mm	1
23	5447 2681	Snap Ring	2
24	B387 4251	Timing Belt -2XL	1
25	5206 2686	Snap Ring	1
26	C101 2360	Snap Ring	1
27	B387 1941	Feeler - Paper Size Sensor	1
28	B387 1951	Spring - Paper Size Sensor	1
29	B387 5720	Original Sensor Harness	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006B	Tapping Screw - M3x6	
102	0720 0040B	Retaining Ring - M4	
103	0951 3006B	Philips Screw With Flat Washer - M3x6	
104	0353 0040B	Screw - M3X4	
105	0452 3008B	Tapping Screw - M3x8	
106	1105 0460	Clamp	


6.Decals And Documents (B3)

1

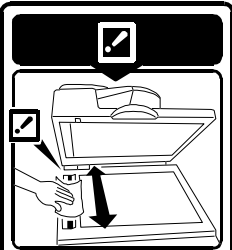


Please clean the part of the contact glass with a soft cloth as shown when you see black lines on a copy image. >PS<

2

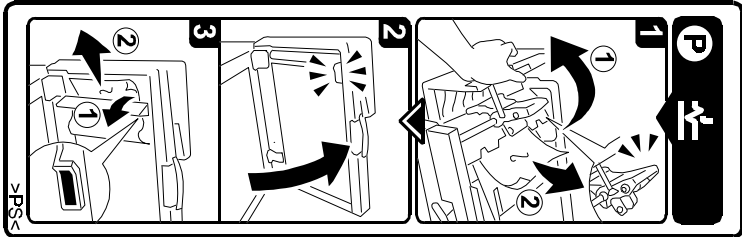


3

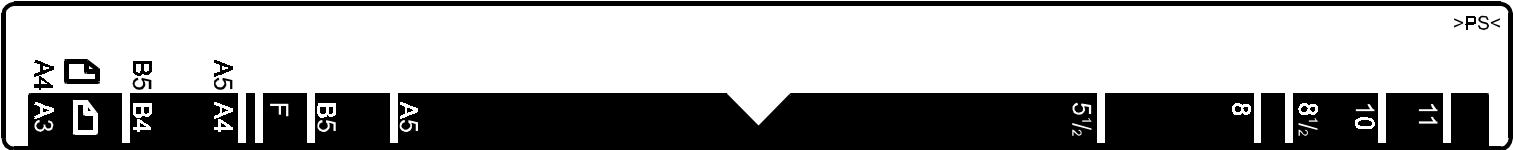

>PS<

4

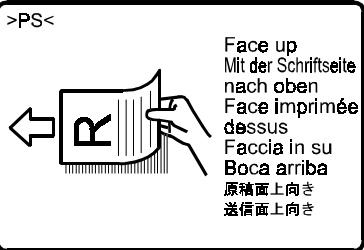

>PS<

Face up
Mit der Schriftseite
nach oben
Face imprimée
dessus
Faccia in su
Boca arriba
原稿面上向き
送信面上向き

5



>PS<

6.Decals And Documents (B387)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B379 6063	Exposure Glass Decal	1
2	B387 6012	Misfeed Removal Decal	1
3	B387 6021	Size Indication Decal	1
4	B387 6032	Original Orientation Decal	1
5	B387 6053	Original Scale Decal - A4	1
5	B387 6054	Original Scale Decal - LT	1
6	A859 6023	Decal Green	1

Index No.	Part No.	Description	Q'ty Per Assembly

Parts Index

PM Parts Index

Section Name	Part No.	Description in Service Manual	Description in Parts Catalog	Q'ty Per Assembly	Page and Index No.
Original Feed Section 1 (B387)	B387 2161	Pick-up Roller	Pickup Roller	1	5- 14
	A859 2141	Feed Belt	Belt Paper Feed	1	5- 20
Original Feed Section 2 (B387)	B387 1671	Separation Roller	Reverse Roller	1	7- 4

Parts Index

Part No.	Description	Page and Index No.
B387 1123	Bracket - Cover Open Sensor	11- 21
B387 1181	Magnet Catch	7- 10
B387 1221	Exit Grounding Plate	7- 25
B387 1316	Feed Clutch Bracket	11- 20
B387 1320	Transport Roller Bracket	9- 2
B387 1322	Spring Plate	9- 1
B387 1331	Original Sensor Bracket	7- 8
B387 1612	Bracket - Reverse Roller Shaft	7- 7
B387 1671	Reverse Roller	7- 4
B387 1711	Left Lower Stay	5- 24
B387 1712	Center Bracket - Left Lower Stay	5- 38
B387 1713	Outer Bracket - Left Lower Stay	5- 39
B387 1721	Left Lower Guide	5- 22
B387 1722	Entrance Guide	5- 23
B387 1811	Left Hinge	9- 3
B387 1831	Right Hinge	9- 14
B387 1841	Feeler - DF Open Sensor	9- 15
B387 1912	Base	9- 17
B387 1921	Driven Exit Roller	9- 11
B387 1932	Base - Platen Cover	9- 18
B387 1941	Feeler - Paper Size Sensor	11- 27
B387 1951	Spring - Paper Size Sensor	11- 28
B387 2111	Belt Holder	5- 6
B387 2113	Roller - Paper Feed Belt	5- 3
B387 2120	Shaft - Paper Feed Belt	5- 10
B387 2131	Rear Feed Guide	5- 8
B387 2132	Front Feed Guide	5- 18
B387 2133	Pickup Arm	5- 7
B387 2151	Pickup Holder	5- 1
B387 2161	Pickup Roller	5- 14
B387 2162	Pickup Roller Shaft	5- 2
B387 2163	Pickup Collar	5- 12
B387 2164	Timing Pulley - 20Z	5- 11
B387 2210	Reverse Roller Shaft	7- 6
B387 2220	Reverse Roller Cover	7- 33

Part No.	Description	Page and Index No.
B387 2250	Torque Limiter - 40MNXM	7- 5
B387 2310	Guide Plate - Paper Feed	3- 11
B387 2355	Pickup Lever	11- 17
B387 2365	Stopper Pawl Lever	11- 19
B387 2375	Pickup Spring	11- 18
B387 2411	Original Stopper	7- 3
B387 2421	Original Stopper Cam	7- 2
B387 2431	Original Stopper Lever	7- 23
B387 2435	Original Stopper Spring	7- 22
B387 3110	Left Transport Roller	7- 16
B387 3120	Right Transport Roller	9- 7
B387 3130	Exit Roller	7- 1
B387 3210	Guide Plate - Transport Roller	7- 20
B387 3220	Guide Plate - Upper Exit	7- 18
B387 3225	Discharge Brush	7- 17
B387 3311	Transport Driven Roller	5- 29
B387 3313	Shaft - Transport Driven Roller	5- 30
B387 3316	Cover - Transport Driven Roller	5- 27
B387 3317	Main Shaft - Transport Driven	5- 33
B387 3318	Front Pressure Spring	5- 28
B387 3319	Rear Pressure Spring	5- 31
B387 3321	Spring Cover	5- 32
B387 3411	Exit Guide Plate	9- 4
B387 3412	Shaft - Exit Guide Plate	9- 8
B387 3413	Cover - Exit Guide Plate	9- 16
B387 3425	Spring Plate	9- 6
B387 3430	Rear Spring - Exit Guide Plate	9- 9
B387 3431	Front Spring - Exit Guide Plate	9- 10
B387 3600	Platen Sheet	9- 23
B387 4111	Transport Motor Bracket	11- 8
B387 4121	DC Transport Motor	11- 9
B387 4198	Transport Motor Spring	11- 7
B387 4216	Feed Clutch Shaft	5- 9
B387 4221	Gear - 28Z	7- 21
B387 4222	Flange	11- 13

Part No.	Description	Page and Index No.
B387 4231	Gear/pulley - 20/21Z	11- 14
B387 4241	Gear - 20Z	11- 15
B387 4251	Timing Belt - 2XL	11- 24
B387 4271	Coupled Pulley - 20/30Z	7- 24
B387 4311	Adjusting Bracket	7- 14
B387 4331	Timing Belt - 2XL	7- 12
B387 4342	Adjusting Bracket Spring	7- 13
B387 4421	DC Solenoid	11- 12
B387 4605	Upper Original Table	3- 9
B387 4621	Lower Original Table	3- 28
B387 4640	Front Side Fence	3- 5
B387 4655	Rear Side Fence	3- 6
B387 4661	Front Rack - Side Fence	3- 16
B387 4671	Rear Rack - Side Fence	3- 19
B387 4681	Feeler - Original Trailing Edge	3- 18
B387 4812	Front Cover	3- 14
B387 4822	Rear Cover	3- 23
B387 4841	Left Cover	3- 3
B387 4872	Original Sensor Feeler	5- 16
B387 4873	Positioning Plate	3- 2
B387 4875	Left Cover Band	3- 13
B387 5500	Main Control Board	11- 2
B387 5700	Main Harness	11- 1
B387 5705	Original Tray Harness	3- 22
B387 5710	Feed Clutch Harness	11- 3
B387 5715	Registration Sensor Harness	11- 11
B387 5720	Original Sensor Harness	11- 29
B387 5800	Interface Harness	11- 10
B387 6012	Misfeed Removal Decal	3- 8
B387 6012	Misfeed Removal Decal	13- 2
B387 6021	Size Indication Decal	13- 3
B387 6021	Size Indication Decal	3- 1
B387 6032	Original Orientation Decal	3- 7
B387 6032	Original Orientation Decal	13- 4
B387 6053	Original Scale Decal - A4	3- 12

Part No.	Description	Page and Index No.
B387 6053	Original Scale Decal - A4	13- 5
B387 6054	Original Scale Decal - LT	3- 12
B387 6054	Original Scale Decal - LT	13- 5

Part No.	Description	Page and Index No.
AA06 3311	Transport Roller Spring	9- 13
AA06 3315	Spring - Belt Drive Shaft	5- 17
AA06 3318	Spring - Belt Guide Roller	5- 4
AA13 2013	Spacer	5- 35
AC01 3004	Exposure Glass	3- 25
AW01 0087	Photo Sensor - Ass'y	3- 21
AW01 0093	Photo Sensor - PS-117ND1	7- 30
AW02 0075	Photointerruptor	7- 9
AW02 0075	Photointerruptor	3- 20
AW02 0075	Photointerruptor	11- 4
AX21 0071	Electromagnetic Clutch - 30Z	11- 16
B379 6063	Exposure Glass Decal	13- 1
B379 6063	Exposure Glass Decal	3- 4
B386 7101	Original Scale	3- 24
C101 2360	Snap Ring	11- 26
H511 5006	Stamper	9- 20

Part No.	Description	Page and Index No.
A334 4678	Rack Shield Mylar	9- 24
A548 6121	Screw - M4	3- 26
A590 2214	Screw - M3X5	7- 31
A628 1225	Bushing - 8mm	5- 36
A661 1884	Pulley - 20T/48T	11- 6
A697 1125	Stepped Screw - Lever	7- 32
A859 2112	Drive Shaft Paper Feed Belt	5- 5
A859 2114	Drive Roller Paper Feed Belt	5- 19
A859 2121	Gear - 22Z	5- 21
A859 2141	Belt Paper Feed	5- 20
A859 2166	Timing Belt - 2XL	5- 34
A859 2167	Gear - 22Z	5- 15
A859 2168	Pulley - 22Z	5- 13
A859 2230	Ball Bearing - 6x13x5	7- 27
A859 2352	Pad Pressure Plate	3- 10
A859 3420	Middle Driven Roller	9- 5
A859 3511	Guide Exposure Glass	7- 19
A859 4171	Timing Belt - 2XL	11- 5
A859 4321	Pulley - 20Z	7- 11
A859 4665	Gear - 16Z	3- 17
A859 4836	Bushing Exit Driven Roller	9- 12
A859 6023	Decal Green	9- 22
A859 6023	Decal Green	13- 6
A859 7211	Stepped Screw	3- 29

Part No.	Description	Page and Index No.
5053 0447	Bushing - 6mm	5- 37
5053 0447	Bushing - 6mm	9- 19
5053 0447	Bushing - 6mm	7- 26
5206 2686	Snap Ring	11- 25
5206 2686	Snap Ring	3- 27
5215 2621	Snap Ring - M6	7- 28
5304 1639	Bushing - 8mm	5- 26
5304 1639	Bushing - 8mm	7- 29
5304 1639	Bushing - 8mm	11- 22
5446 2824	Screw - Duplex Guide Plate	7- 15
5446 2824	Screw - Duplex Guide Plate	3- 15
5447 2681	Snap Ring	5- 25
5447 2681	Snap Ring	9- 21
5447 2681	Snap Ring	11- 23

Part No.	Description	Page and Index No.
0353 0040B	Screw - M3X4	11-104
0353 0060B	Philips Pan Head Screw - M3x6	5-106
0450 3008B	Tapping Screw - M3x8	3-101
0450 4008B	Tapping Screw - 4x8	9-101
0451 3006B	Tapping Screw - M3x6	9-102
0451 3006B	Tapping Screw - M3x6	7-101
0451 3006B	Tapping Screw - M3x6	11-101
0451 3006B	Tapping Screw - M3x6	5-101
0451 3008H	Tapping Screw - M3x8	3-103
0451 3008H	Tapping Screw - M3x8	9-104
0452 3008B	Tapping Screw - M3x8	11-105
0452 3008B	Tapping Screw - M3x8	3-102
0452 3008B	Tapping Screw - M3x8	9-106
0632 0100G	Pin - 2x10mm	5-103
0720 0030B	Retaining Ring - M3	5-105
0720 0040B	Retaining Ring - M4	7-102
0720 0040B	Retaining Ring - M4	5-102
0720 0040B	Retaining Ring - M4	11-102
0720 0040B	Retaining Ring - M4	9-105
0720 0050E	Retaining Ring - M5	7-104
0720 0060B	Retaining Ring - M6	7-103
0720 0060B	Retaining Ring - M6	5-104
0802 5276	Tapping Screw With Washer - M3x6	9-103
0951 3006B	Philips Screw With Flat Washer - M3x6	11-103
1105 0460	Clamp	11-106