

Decurl Unit DU5050
Machine Code:D3DR
Field Service Manual
Ver 1.0

Latest Release: Nov, 2016

Initial Release: Nov, 2016

Copyright (c) 2016 Ricoh Co.,Ltd.

Table of Contents

1. Replacement and Adjustment..... 2

Decurler Unit and Electrical Components 2

Decurl Unit..... 2

DDRB..... 5

Decurl Unit Motor 6

Decurl Unit Fan..... 7

Decurl Feed Motor..... 8

Decurl Unit HP and Limit Sensor..... 10

2. Detailed Descriptions 12

Detailed Descriptions..... 12

Specifications 12

Decurl Unit Operation 12

Decurl Unit Movement..... 13

1. Replacement and Adjustment

Decurl Unit and Electrical Components

Decurl Unit

Removal Procedure

⚠ CAUTION

- Most parts in the decurl unit have been precisely adjusted at the factory. Do not remove the parts for which replacement procedures are not mentioned in this manual. Otherwise, adjustment for the decurl unit requires special tools.

Only the following parts can be replaced without decurl unit adjustment.


- DDRB (Decurl Drive Board)
- Decurl Unit Motor
- Decurl Feed Motor
- Decurl Unit HP and Limit Sensor
- Decurl Unit Fan

1. Remove the left cover of the main machine (🔑 x7)



d7410032

2. Disconnect the DDRB (🔌 x3).

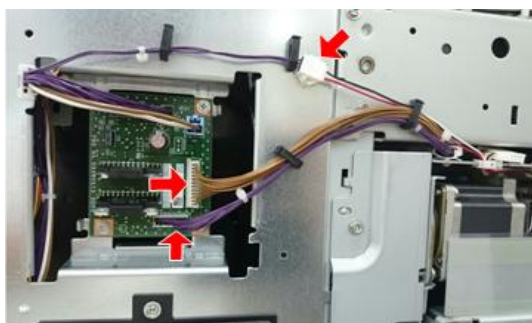

d270d8701

3. Remove the lower bracket (🔧 x2).



d7410034

4. Remove the decurl unit (🔧 x4).



d7410035


Maintenance Position

Lay the Decurl Unit [A] on temporary supports [B].

- The entrance guide of the decurl unit must not touch the floor or any object. Otherwise, the mylars on the entrance gate may be bent or folded.
- Keep this position during maintenance.
- Place an object like a sheet of cardboard on the supports so that the frame projection [C] does not damage the


1.Replacement and Adjustment

supports.

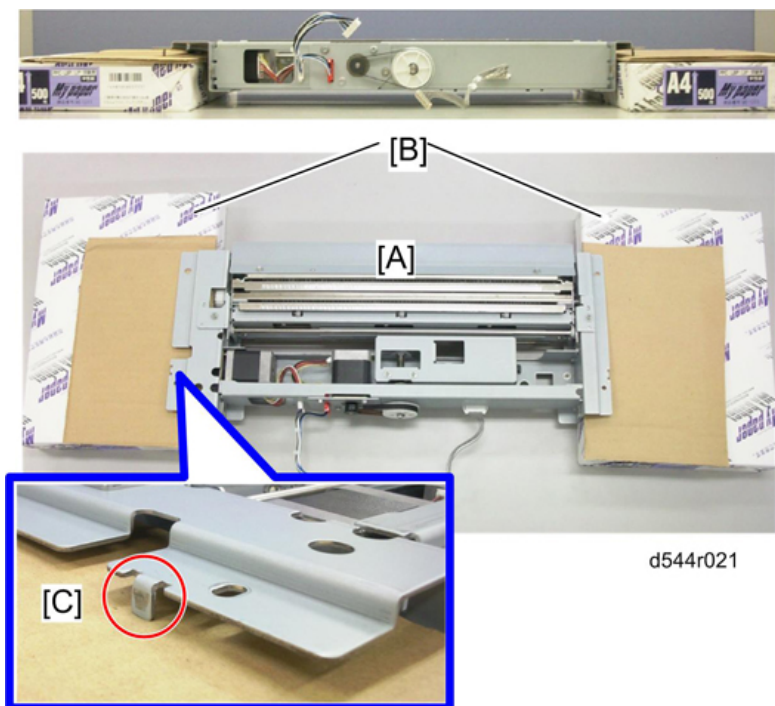

SP Settings After Installing a New Decurl Unit

1. Switch on the machine and enter the SP mode.
2. Refer to the accessory sheet and enter the settings for SP1927 and SP1928.

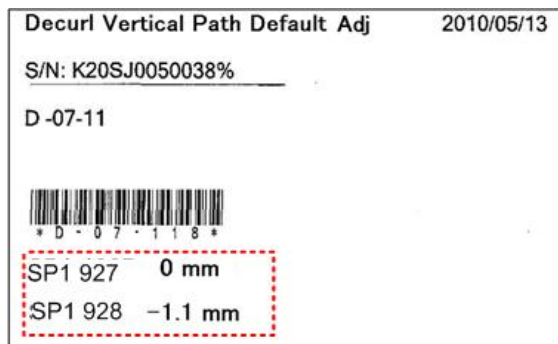

d999i016

3. Exit SP mode and turn off the main machine.


DDRB

1. Remove the left cover of the machine (🔩 x7).




d7410032

2. Disconnect the DDRB (🔌 x4).

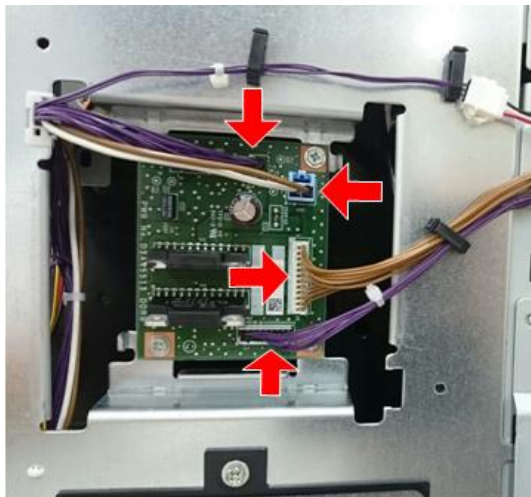

d270d8702

3. Remove the DDRB (🔩 x4).

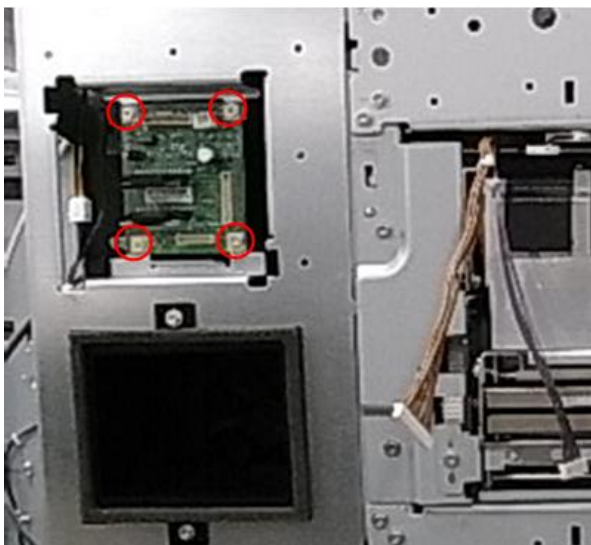

d7410038

1.Replacement and Adjustment


Decurl Unit Motor

1. Remove the decurl unit ([Decurl Unit](#))
2. Remove the decurl unit cover bracket (🔩 x2)




d7410036

3. Disconnect the fan bracket [A] and free the harness so that you can move it to access the motor (🔩 x1, 🌀 x3).

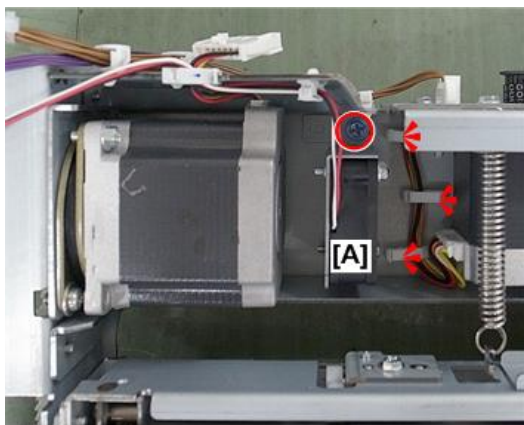


d7410048

4. Disconnect the connector and remove the belt (🔩 x1, 🌀 x1).

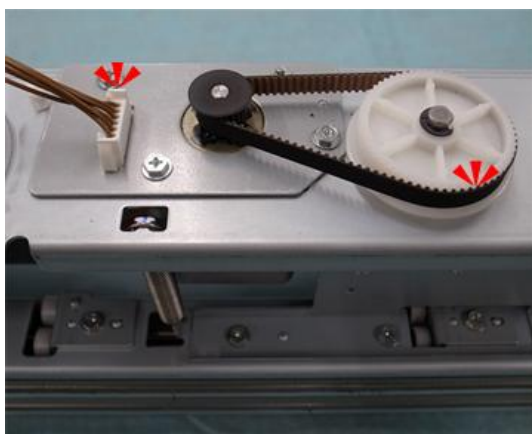

d7410040

5. Remove the motor bracket (with motor attached) (🔩 x2).

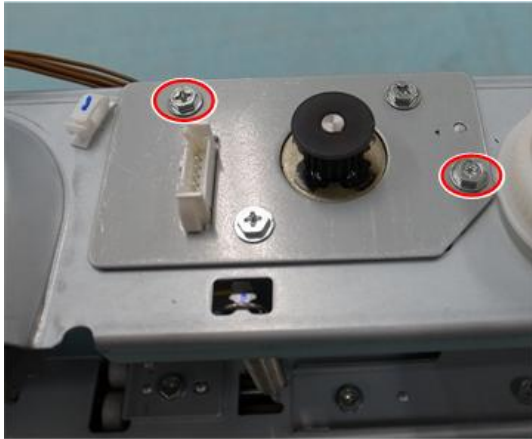

d7410041

6. Separate the motor and bracket (🔧 x1, 🔩 x2).



d7410042

Decurl Unit Fan


1. Remove the decurl unit. ([Decurl Unit](#))
2. Remove the decurl unit cover bracket (🔩 x2)



d7410036



1.Replacement and Adjustment

3. Disconnect the fan harness (🔌x2, 📦 x1).

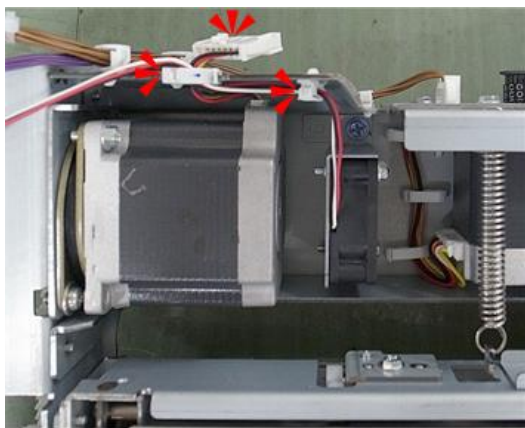

d7410031

4. Remove the fan bracket [A] (with fan attached) (🔩 x1).
5. Separate the fan [B] and bracket (🔩x2).

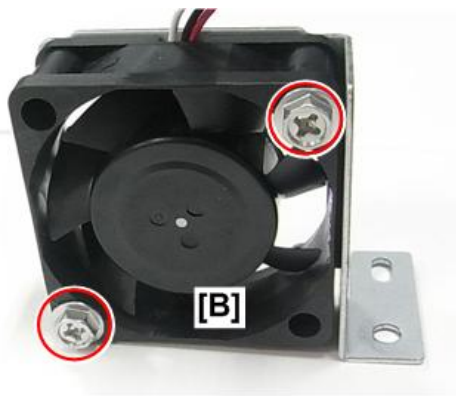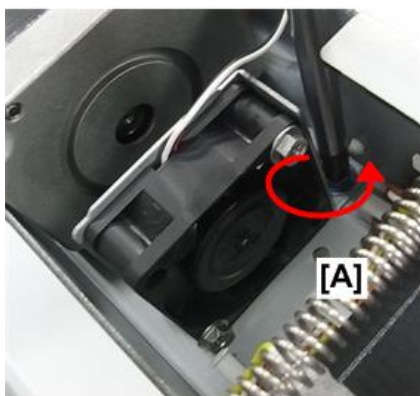

d7410047

Decurl Feed Motor


1. Remove the decurl unit. (Decurl Unit)
2. Remove the decurl unit cover bracket (🔩x2)



d7410036


1.Replacement and Adjustment

3. Disconnect the fan bracket [A] and free the harness so that you can move it to access the motor ( x1,  x2).

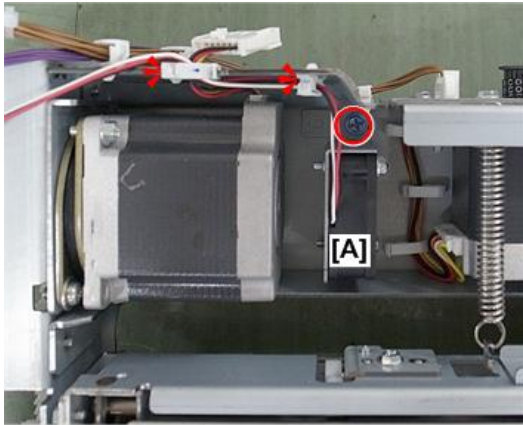


d7410039

4. Disconnect the motor harness ( x1).

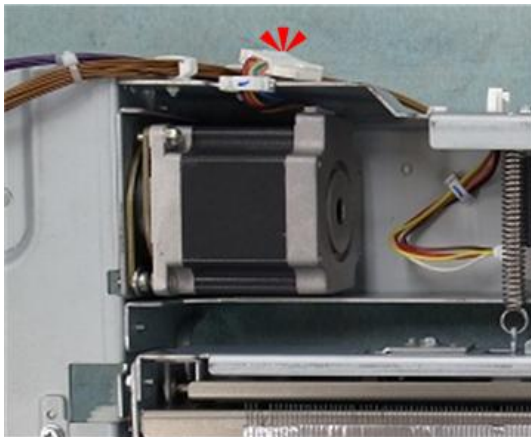

d7410043


5. At the rear side of the unit [A], disconnect the motor ( x2).
6. Pull the motor [B] out from rear to front.

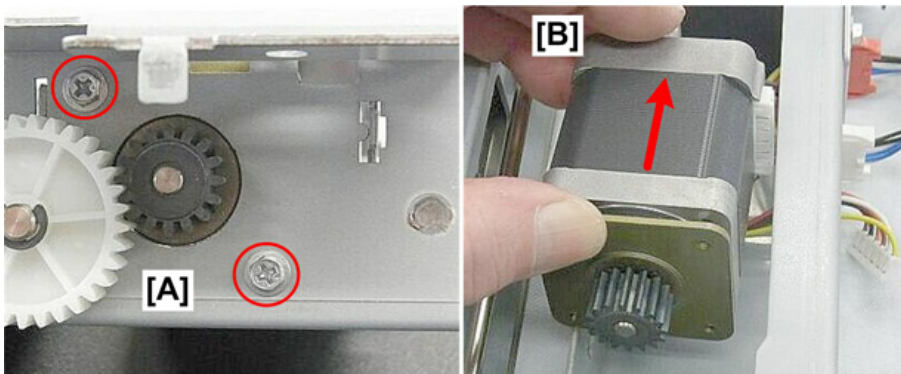

d544r013

1.Replacement and Adjustment

7. Remove the motor.

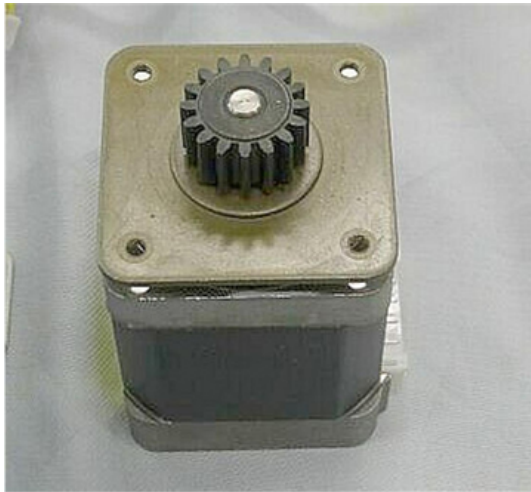

d544r014


Decurl Unit HP and Limit Sensor

1. Remove the decurl unit. ([Decurl Unit](#))
2. Remove the decurl unit cover bracket (⚙️ x2)




d7410036

3. Remove the right spring [A] (🌀 x1).
4. Remove the cover bracket [B] (⚙️ x5).

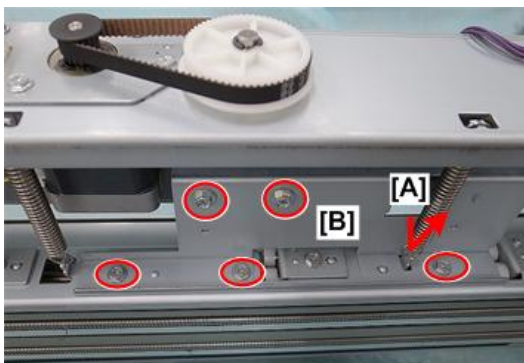


d7410044

5. Remove the sensor bracket (with sensors attached) (🌀 x3, 📦 x2, ⚙️ x2).

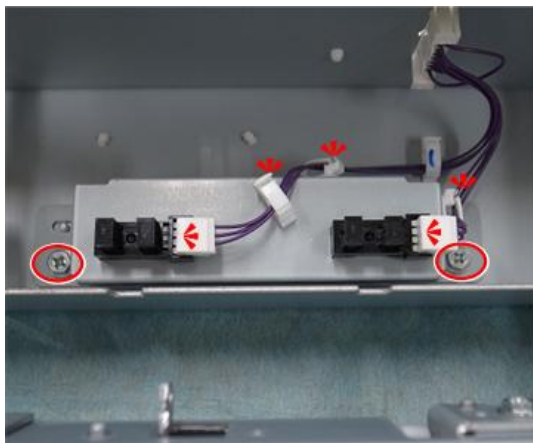

d7410045

[A]	Decurl unit HP sensor
[B]	Decurl unit limit sensor

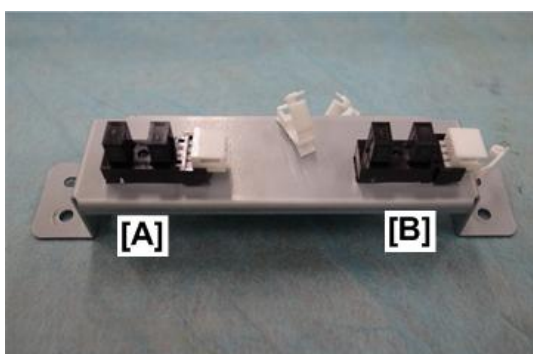

d7410046


2. Detailed Descriptions

Detailed Descriptions

Specifications

Dimensions (w x d x h)	71 mm x 509 mm x 181 mm 2.8 x 20 x 7 in.
Weight	5 kg (11 lb.)
Power source	DC 5V, DC 24V (Supplied from the main machine)
Power consumption	DC 5V, DC 24V
Paper weight	40 to 350.0 g/m ²
Paper size	A3 SEF, A4 LEF SEF, A5 LEF SEF, A6 SEF, B4 SEF, B5 LEF SEF, B6 SEF, 11"x17" SEF, 8 1/2"x14" SEF, 8 1/2"x13" SEF, 8 1/2"x11" LEF SEF, 8 1/4"x14" SEF, 8 1/4"x13" SEF, 8"x13" SEF, 8"x10 1/2" LEF SEF, 8"x10" LEF SEF, 7 1/4"x10 1/2" LEF SEF, 5 1/2"x8 1/2" LEF SEF, 182x210 mm LEF SEF, 170x210 mm LEF SEF, 210x340 SEF, Postcard SEF, 8K SEF, 16K LEF SEF, 12"x18" SEF, 11"x15" SEF, 11"x14" SEF, 10"x15" SEF, 10"x14" SEF, 13"x19 1/5" SEF, 13"x19" SEF, 12 3/5"x19 1/5" SEF, 12 3/5"x18 1/2" SEF, 13"x18" SEF, SRA3 SEF, SRA4 LEF SEF, Custom Size

Decurl Unit Operation

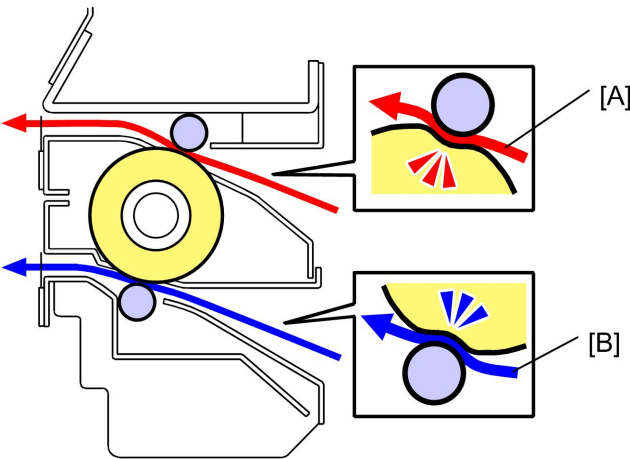

There are two decurl paths in the decurl unit.

- The upper path [A] is used to correct back curl (convex, leading and trailing edges curling under)
- The lower path [B] is used to correct front curl. (concave, leading and trailing edges curling up)


The upper path is used for all printing modes and paper types, adjustable with SP1906-1 to 12. There is one SP setting for each of the 12 paper feed sources: Tray 1, 2, 3 (main machine), Trays 4, 5, 6 (LCIT), Tray 7 (Multi Bypass), and 12

Tray T1, T2, T3, T4 (Vacuum Feed LCIT).

The decurl unit settings are as follows.

User Setting	Decurl Path	Decurl Roller Nip
Front curl correction (weak)	Lower path	1.5 mm
Front curl correction (strong)	Lower path	1.8 mm
Normal (decurl not selected)	Upper path	0.3 mm
Back curl correction (weak)	Upper path	1.5 mm
Back curl correction (strong)	Upper path	1.8 mm

Decurl Unit Movement

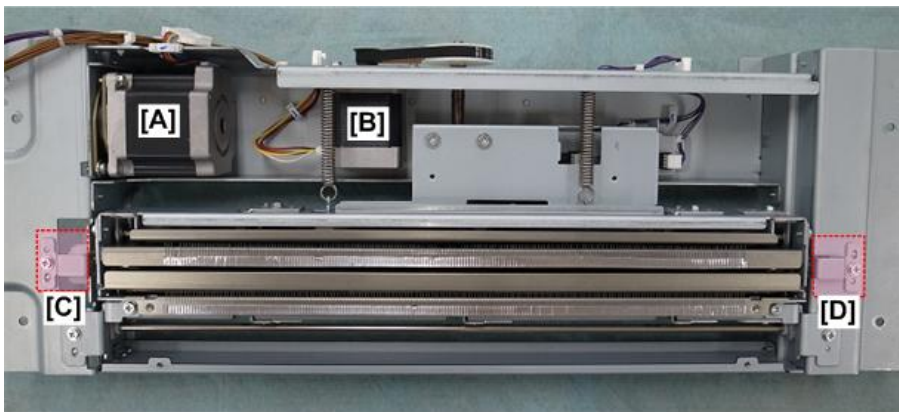


d7410049

The illustration shows the decurl unit removed from the left side of the main machine.

- The decurl feed motor [A] drives the rollers that feed paper through the decurl unit.
- The decurl unit motor [B] drives the timing belt and gear that raise and lower the decurl unit on the paired rack and pinions at the rear [C] and front [D].

2.Detailed Descriptions

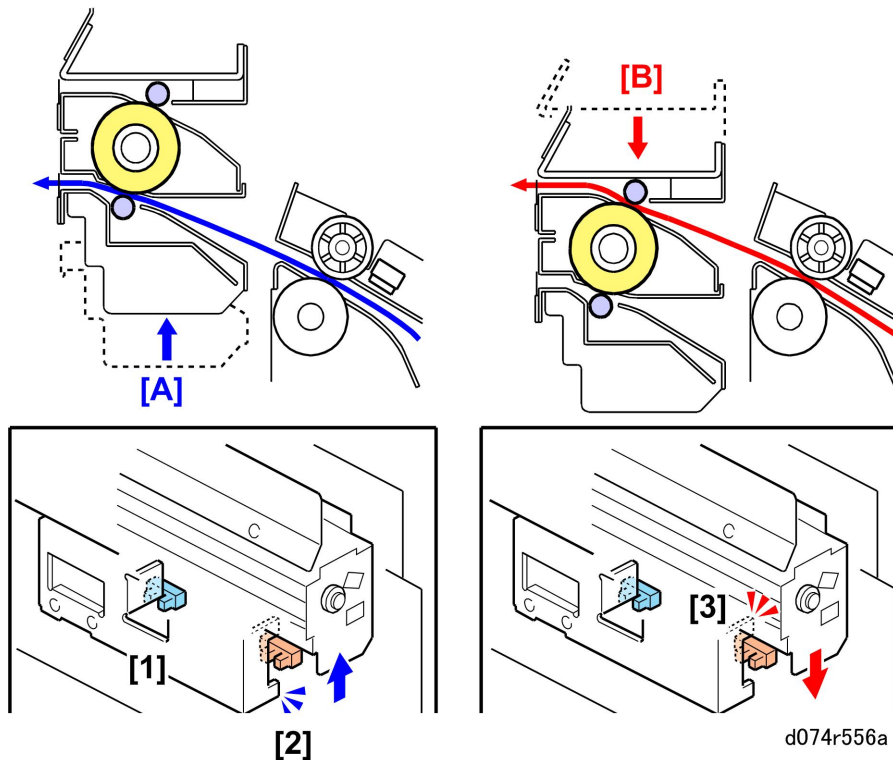

The up and down movement of the decurl unit is controlled by two sensors.

- Before a print job, the decurl unit HP sensor [1] detects the home position of the decurl unit.
- To correct front curl (concave), the unit is raised [A] the distance specified by the user. If the decurl unit limit sensor [2] detects the bottom actuator, this triggers the over limit error (**SC582**).
- To correct back curl (convex), the unit is lowered [B] the distance specified by the user. If the decurl unit limit sensor [3] detects the top actuator, this triggers the over limit error (**SC582**).

Moving the decurl roller up or down changes the amount of pressure applied to the paper to correct paper curl. The maximum range of the decurl unit movement is ± 13.15 mm from the home position of the decurl unit.

The amount of pressure applied to correct paper curl can be adjusted with the "Adjustment Settings for Skilled Operators".

1. Press the [User Tools] button on the operation panel.
2. Touch "Adjustment Settings for Skilled Operators" and log in.
3. Touch "0310 Adjust Paper Curl".
 - The next screen presents options for adjusting the amount of curl applied (Weak or Strong) for all the trays (Tray 1 to 12).
 - To adjust the amount of pressure applied for "Weak" or "Strong", use SP1906-1 to 12.