

Color Controller E-5000/E-3000

Start Guide

- 1 Getting Started
- 2 Using the E-5000/E-3000

TABLE OF CONTENTS

FCC Warning	
Note to users in the United States of America	1
Note to users in Canada	2
Remarque concernant les utilisateurs au Canada	2
Safety Information	
Safety During Operation	
Power Cord Precautions	
Power Supply	4
1. Getting Started	
Checking the Contents	5
For the Site Administrator	
For the Service Technician	5
Guide to Components	6
Where to Put the E-5000/E-3000	7
Caution	7
Space Required for Installation	7
Dimensions and Weight	
Environment	
When Moving the E-5000/E-3000	8
2. Using the E-5000/E-3000	
E-5000/E-3000 Startup, Shutdown and Reboot	
To Start the Main Unit and the E-5000/E-3000	
To Shut Down the Main Unit and the E-5000/E-3000	
To Shut Down the E-5000/E-3000 only	
To Reboot the E-5000/E-3000	
Power Up Sequence	11
INDEX	12

FCC Warning

Note to users in the United States of America

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designated to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio /TV technician for help.

Caution:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Declaration of Conformity

- Product Name: Color Controller
 Model Number: E-5000/E-3000
- Responsible party: Ricoh Corporation
- Address:
 5 Dedrick Place, West Caldwell, NJ 07006
- Telephone number: 973-882-2000

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This Class B digital apparatus complies with Canadian ICES-003. Remarque concernant les utilisateurs au Canada Avertissement:

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.



Caution:

Properly shielded and grounded cables and connectors must be used for connections to host computer (and/or peripheral) in order to meet FCC emission limits.

Caution:

A LAN cable with ferite core must be used for RF interference suppression.

Safety Information

Read this Safety Information carefully before you use this product and keep it handy for future reference.

When using this machine, the following safety precautions should always be followed.

Safety During Operation

In this manual, the following important symbols are used:

⚠ WARNING:

Indicates a potentially hazardous situation which, if instructions are not followed, could result in death or serious injury.

A CAUTION:

Indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.

MARNING:

- Connect the power cord directly into a wall outlet and never use an extension cord.
- Disconnect the power plug (by pulling the plug, not the cable) if the power cable or plug becomes frayed or otherwise damaged.
- To avoid hazardous electric shock, do not remove any covers or screws other than those specified in this manual.
- Turn off the power and disconnect the power plug (by pulling the plug, not the cable) if any of the following occurs:
 - You spill something into the machine.
 - You suspect that your machine needs service or repair.
 - The external housing of your machine has been damaged.

A CAUTION:

- Protect the machine from dampness or wet weather, such as rain and snow.
- Unplug the power cord from the wall outlet before you move the machine.
- While moving the machine, you should take care that the power cord will not be damaged under the machine.
- When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.

Power Cord Precautions

To reduce the risk of electric shock or damage to the equipment:

- Use the appropriate power cord which was set up by your manufacturer's authorized service provider.
- Do not place objects on AC power cords or cables. Arrange them so that no one may accidentally step on or trip over them.
- Do not pull on a cord or cable. When unplugging from the electrical outlet, grasp the cord by the plug.
- Do not disable the power cord grounding plug. The grounding plug is an important safety feature.
- Plug the power cord into a grounded (earthed) electrical outlet that is easily accessible at all times.

Power Supply

The socket-outlet shall be installed near the product and shall be easily accessible.

MARNING:

• This product relies on the buildings installation for short circuit (overcurrent) protection. Ensure that a fuse or circuit breaker no larger than 120VAC, 15A U.S. (240VAC, 10A international) is used on the phase conductors (all current-carrying conductors).

1. Getting Started

Please read this document before installing or using the Color Controller E-5000/ E-3000.

Note

☐ Ricoh supplied and is responsible for all the material provided in this document. If you have questions regarding the material contained in this document, please contact Ricoh Corporation.

Checking the Contents

For the Site Administrator

- Media Package
 - 4 CDs(Utilities CD, PS Printer Driver CD,PCL Printer Drivers and Utilities CD, Document CD)
 - Welcome
 - Release Note
 - This document (Start Guide)
 - PCL Printer Driver User Software License Agreement
 - Gray Scale Kit
 - Ferrite Core
 - Ferrite Core Installation Guide


For the Service Technician

- Color Controller E-5000/E-3000
- AC power cable
- Installation Procedure


1

Guide to Components

Front Panel

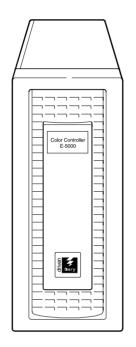

Back Panel

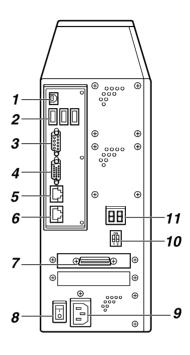

ASR004S

- 1. Not used (USB-Type B port)
- 2. USB ports Type A

(for installing system software, activating Fiery features, or printing from a prepared USB flash drive)

- 3. Not used (Serial port)
- 4. Not used (Monitor port)
- 5. Network connector 10/100/1000M bps

6. Not used (network connector 10/100Mbps)

- 7. Copier interface connector
- 8. Power switch
- 9. Power connector
- **10.** Service switches (for service use only)
- 11. LEDs (2-digit diagnostic display)


Where to Put the E-5000/E-3000

Caution

- Insert firmly the plug in the outlet.
- Avoid using an outlet extension plug or cord.
- Ground the E-5000/E-3000. Avoid using a 3-prong adapter in a 2-hole ungrounded outlet.
- Do not put anything on the power cord.

Space Required for Installation

Place the E-5000/E-3000 near the power source, providing clearance as shown.

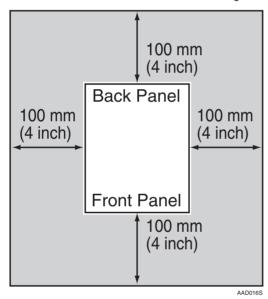

Dimensions and Weight

• E-5000/E-3000 weight: 5.8 Kg (12.5 lb.)

E-5000/E-3000 dimensions:
 Length: 344.5 mm (13.6 in)
 Height: 294.6 mm (11.6 in)
 Width: 124.3 mm (4.9 in)

Environment

Environmental specifications	Operating
Ambient temperature	5 °C to 40°C (41 °F to 104 °F)
Relative Humidity	10% to 90% (non condensing)
Altitude	3048 m (10,000 FT)

When Moving the E-5000/E-3000

A CAUTION:

Unplug the power cord from the wall outlet before you move the machine.
 While moving the machine, you should take care that the power cord will not be damaged under the machine.

∰Important

- ☐ When moving the machine, the following precautions should always be followed:
 - Turn off the main power. See p.9 "To Shut Down the Main Unit and the E-5000/E-3000" or p.10 "To Shut Down the E-5000/E-3000 only".
 - Unplug the power cord from the wall outlet. When doing this, grip the plug so as not to stress the cord, reducing the risk of fire or electric shock.
- ☐ Move the machine carefully. If you do not, the machine might be damaged or data lost.
- ☐ Protect the machine from impact. Shock could damage the hard disk and result in data loss.

2. Using the E-5000/E-3000

E-5000/E-3000 Startup, Shutdown and Reboot

The main unit and the E-5000/E-3000 have separate power switches. During normal operation, turning on the E-5000/E-3000 is recommended. Powering off the main unit shuts down the E-5000/E-3000 properly. Powering on the main unit will start the E-5000/E-3000 properly.

To Start the Main Unit and the E-5000/E-3000

- 1 Power the main unit on.
- **2** Power the E-5000/E-3000 on.

Note

□ Always turn the main unit on first. If the main unit is off (or disconnected from the E-5000/E-3000), the E-5000/E-3000 will start but will shut down automatically before it reaches Idle. This feature protects the E-5000/E-3000 from improper shut down.

To Shut Down the Main Unit and the E-5000/E-3000

- 1 Make sure the main unit On indicator is off. If not, press the operation switch and wait until the On indicator is off.
- **2** Power the main unit off.
 - Note
 - ☐ Do not turn the main unit off when the On indicator is on or blinking. Doing so could cause system problems such as hard disk drive or memory problems.
- Wait for the E-5000/E-3000 diagnostic LEDs to power off.
- 4 Power off using the E-5000/E-3000 power switch.

To Shut Down the E-5000/E-3000 only

- Press the [fierydriven] key on the main unit control panel to access to the Fiery menu screen.
- **2** Press [Main Menu/Cancel] to access to the menu list.
- **3** Scroll through the list, and press [Shut Down].
- Press [Shut Down System].
- **5** Wait for the diagnostic LEDs on the E-5000/E-3000 to power off.
- Power off using the E-5000/E-3000 power switch.


 The Fiery will remain OFF even when the main unit is powered on or power cycled.

To Reboot the E-5000/E-3000

- 1 Press the [fierydriven] key on the main unit control panel to access to the Fiery menu screen.
- **2** Press [Main Menu/Cancel] to access to the menu list.
- **3** Scroll through the list, and press [Shut Down].
- Press [Reboot System].
- **5** Wait for the E-5000/E-3000 to reach Idle.
 - **𝚱** Note
 - ☐ Do not reboot the E-5000/E-3000 by powering the main unit off and on. Recycling power to the main unit does not reboot the E-5000/E-3000 properly.

Power Up Sequence

The following sequence describes the E-5000/E-3000 initial configuration. If system software is reinstalled, language, password, and Setup will need to be reconfigurated.

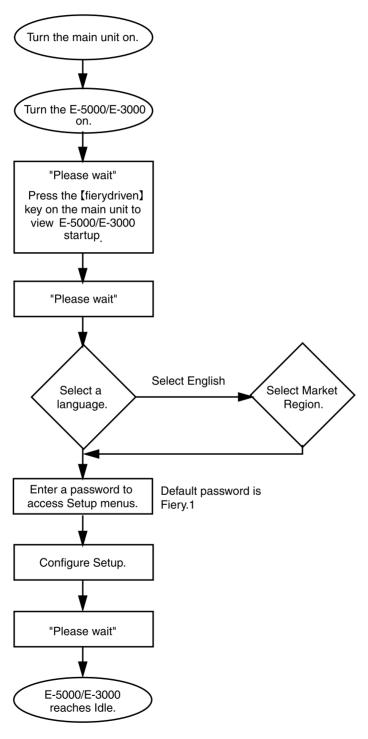

ASR005S

