

Envelope Feeder EF3020 (D638-01)

Envelope Feeder EF3020 (D638-01)

PARTS CATALOG


This catalog gives the numbers and names of parts on this machine.

CONTENTS

1.Envelope Feeder (D638-01)	2
Parts Index	5

January 10, 2012

1.Envelope Feeder (D638-01)

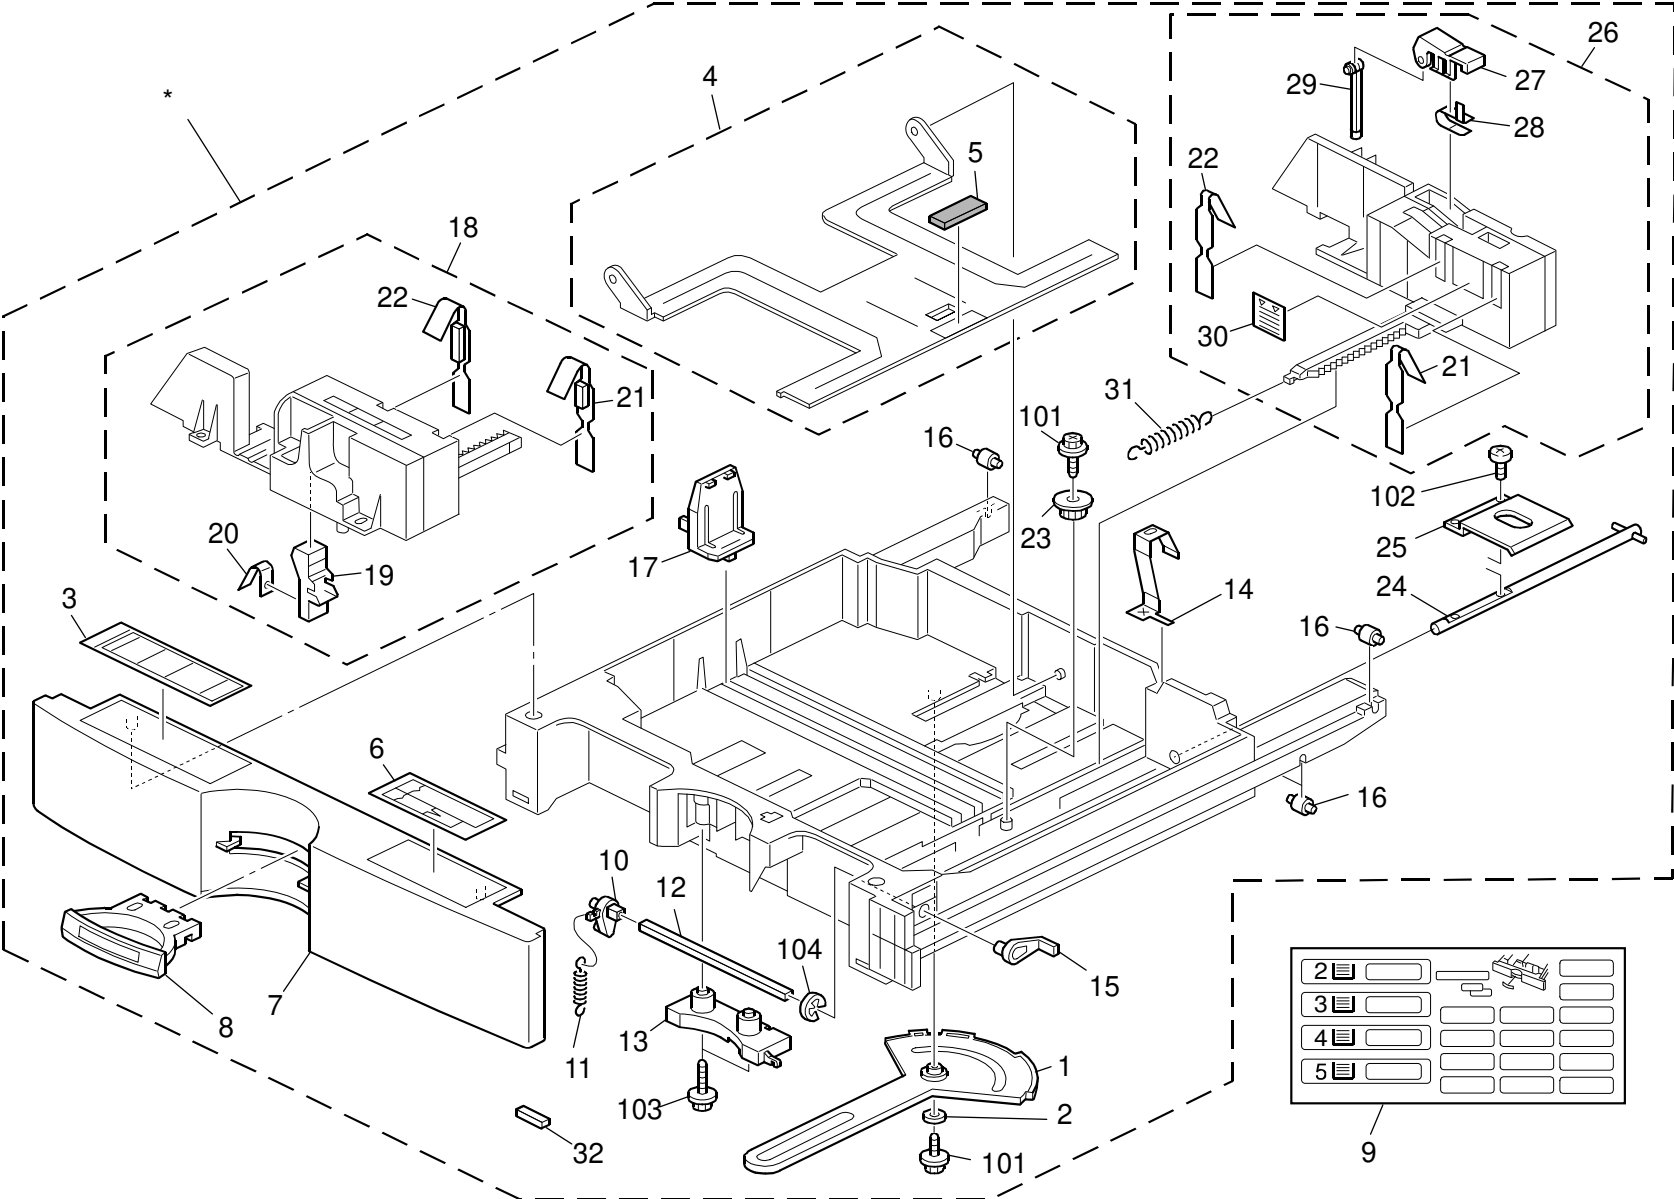

1.Envelope Feeder (D638-01)

Index No.	Part No.	Description	Q'ty Per Assembly
*	D638 2951	Option Tray:EXP:Ass'y	1
1	B223 2910	Link - Paper Size Sensor	1
2	B223 2911	Spacer	1
3	D580 2523	Decal:Paper Set Direction:Tray:No.2	1
4	D547 2970	Tray Bottom Plate:Ass'y	1
5	AF03 3010	Pad	1
6	D144 2747	Decal:Paper Set Direction:Tray:Right:EXP	1
7	D580 2946	Cover:Paper Tray:No.2	1
8	D580 2870	Grip:Paper Tray	1
9	D638 2981	Decal:Size Indication	1
10	B223 2862	Lever - Release Inner	1
11	AA06 1014	Tension Spring:Grip	1
12	D029 2863	Shaft:Release:Paper Tray	1
13	B223 2861	Grip Holder	1
14	B223 2919	Ground Plate - Paper Tray No.2	1
15	B223 2868	Lever:Release:Paper Tray:Outer	1
16	A232 2987	Roller - Paper Tray	1
17	D120 2832	End Fence:Ass'y	1
18	D638 2957	Side Fence:Front:Ass'y	1
19	D120 2924	Stopper Lever - Front	1
20	B004 2923	Spring Plate - Release Lever	1
21	B223 2935	Plate - Side Fence Right	1
22	B223 2934	Plate - Side Fence	1
23	B223 2936	Gear - 16Z	1
24	B223 2865	Rise No.1 Shaft	1
25	B223 2918	Rise Lever	1
26	D638 2958	Side Fence:Rear:Ass'y	1
26	B223 2932	Side Fence:Rear:Universal:No.2	1
27	D120 2864	Lever:Stopper:Positioning	1
28	A267 2857	Spring Plate - Side Fence	1
29	A267 2859	Side Fence Stopper	1
30	D120 2875	Decal:Side Fence:Rear	1
31	AA06 1003	Tension Spring:Side Fence:Rear	1
32	B180 2782	Seal:Tray	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0450 4008N	Tapping Screw - M4x8	
102	0453 3008N	Binding Self Tapping Screw:3x8	
103	0450 3012N	Tapping Screw:3x12	
104	0720 0080E	Retaining Ring - M8	

Parts Index

Parts Index

Part No.	Description	Page and Index No.
D638 2957	Side Fence:Front:Ass'y	3 - 18
D638 2958	Side Fence:Rear:Ass'y	3 - 26

Part No.	Description	Page and Index No.
A232 2987	Roller - Paper Tray	3 - 16
A267 2857	Spring Plate - Side Fence	3 - 28
A267 2859	Side Fence Stopper	3 - 29
B004 2923	Spring Plate - Release Lever	3 - 20
B180 2782	Seal:Tray	3 - 32
B223 2861	Grip Holder	3 - 13
B223 2862	Lever - Release Inner	3 - 10
B223 2865	Rise No.1 Shaft	3 - 24
B223 2868	Lever:Release:Paper Tray:Outer	3 - 15
B223 2910	Link - Paper Size Sensor	3 - 1
B223 2911	Spacer	3 - 2
B223 2918	Rise Lever	3 - 25
B223 2919	Ground Plate - Paper Tray No.2	3 - 14
B223 2932	Side Fence:Rear:Universal:No.2	3 - 26
B223 2934	Plate - Side Fence	3 - 22
B223 2935	Plate - Side Fence Right	3 - 21
B223 2936	Gear - 16Z	3 - 23
D029 2863	Shaft:Release:Paper Tray	3 - 12
D120 2832	End Fence:Ass'y	3 - 17
D120 2864	Lever:Stopper:Positioning	3 - 27
D120 2875	Decal:Side Fence:Rear	3 - 30
D144 2747	Decal:Paper Set Direction:Tray:Right:EXP	3 - 6
D547 2970	Tray Bottom Plate:Ass'y	3 - 4
D580 2523	Decal:Paper Set Direction:Tray:No.2	3 - 3
D580 2870	Grip:Paper Tray	3 - 8
D580 2946	Cover:Paper Tray:No.2	3 - 7

Part No.	Description	Page and Index No.
AA06 1003	Tension Spring:Side Fence:Rear	3 - 31
AA06 1014	Tension Spring:Grip	3 - 11
AF03 3010	Pad	3 - 5

Part No.	Description	Page and Index No.
0450 3012N	Tapping Screw:3x12	3 - 103
0450 4008N	Tapping Screw - M4x8	3 - 101
0453 3008N	Binding Self Tapping Screw:3x8	3 - 102
0720 0080E	Retaining Ring - M8	3 - 104

