

Model: GR-C1 Fax connection unit Type D		Date: 01-Nov-12	No.: RD657001
Subject: How to install the Fax Option Type D		Prepared by: T.Kiyohara	
From: 1st Tech Service Sect., MFP/P Tech Service Dept.			
Classification :	<input type="checkbox"/> Troubleshooting	<input type="checkbox"/> Part information	<input type="checkbox"/> Action required
	<input type="checkbox"/> Mechanical	<input type="checkbox"/> Electrical	<input checked="" type="checkbox"/> Service manual revision
	<input type="checkbox"/> Paper path	<input type="checkbox"/> Transmit/receive	<input type="checkbox"/> Retrofit information
	<input type="checkbox"/> Product Safety	<input type="checkbox"/> Other (     )	<input type="checkbox"/> Tier 2

**Service Manual Revision**

**D657**

**Fax Connection Unit Type D (Remote Fax)**

**Installation Procedure**

This unit allows a machine without the fax unit installed (“Client-side Machine”) to send and receive faxes via a machine with the fax unit installed (“Remote Machine”).

**Requirements:**

- Both the Client-side Machine and Remote Machine must have this unit, the Printer unit, and Scanner unit installed.
- Up to six machines can be registered as the Client-side Machines.
- Machines that have the fax unit installed **cannot** be used as the Client-side Machine.
- Only one machine can be registered as the Remote Machine.
- Firmware for this unit: “**aics**” (software number: **D6575410**)
- Remote Fax transmissions are possible on a G3 line.
- The remote fax function does not support User Code Authentication. Disable the User Code Authentication on the Remote machine.
- Use this function to check the contents of a file that is stored in memory and not yet sent. Also, use this function to cancel a transmission from the Client-side Machine.
- To use this remote fax function, both the main-machine and the sub-machines must have the **HDD option**.

Model: GR-C1 Fax connection unit Type D	Date: 01-Nov-12	No.: RD657001
---	-----------------	---------------

**CAUTION:**


Before installing this option:

- Upgrade the machine firmware to the following versions or newer.

Firmware	S/N	Suffix	Version
System/Copy	D1175412	L	3.12
Fax	D1175424	G	05.00.00
RemoteFax	D1175425	D	02.00.00
Scanner	D1175426	E	01.06
Websupport	D1175427	F	1.05
WebUapl	D1175428	C	1.02
Network Support	D1175430	G	12.27
Network DocBox	D1175431	E	2.01
Printer	D1175432	F	1.06
PCL	D1175434	D	1.08
Sub System	D1175423	C	F.12
FCU	D6495570	G	05.00.00

**1. Installing the application**

**On both the Remote Machine and the Client-side Machines:**

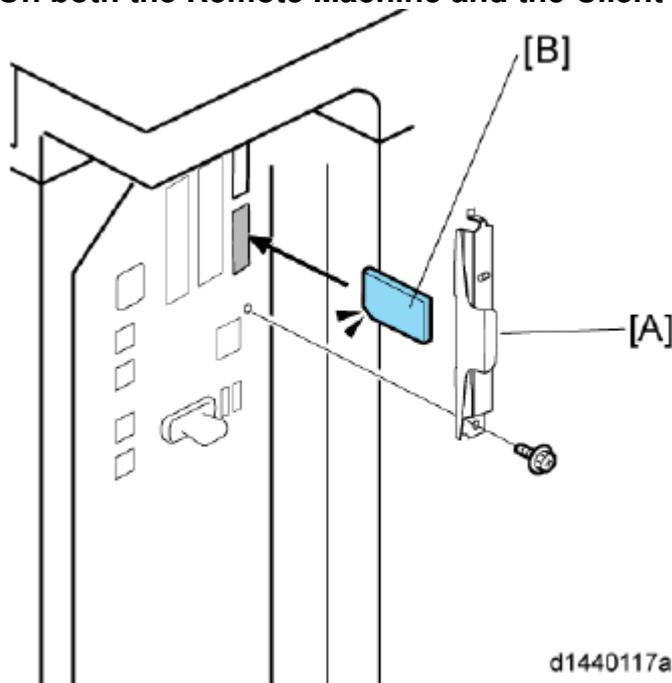

1. Remove the SD-card slot cover [A] from the SD card slots (x 1)
2. Insert the SD card (**Fax Connection Unit Type D**) in SD slot 2 (lower) with its label face [B] towards the front of the machine. Then push it slowly into SD slot 2 (lower) until you hear a click.
3. Plug in, and then turn on the machine.

Model: GR-C1 Fax connection unit Type D	Date: 01-Nov-12	No.: RD657001
---	-----------------	---------------

4. Move the Fax Connection Unit Type D application from the SD card in SD slot 2 (lower) to the SD card in SD slot 1 (upper) with SP5-873-001.
5. Turn off the machine.
6. Remove the SD card from SD slot 2 (lower), and then keep it in a safe place (see "SD Card Appli Move" in the manual for the main frame).
7. Attach the SD-card slot cover, and then turn on the machine (□x 1)
8. Make sure that the machine can recognize the option (see 'Check All Connections' in the controller option section of the manual for the main frame)

**2. Registering the Remote Machine**

---

**Note:**

- Only one machine can be registered as the Remote Machine.

**On the Client-side Machine(s):**

1. Press the [User Tools/Counter] key on the operation panel
2. Press [Administrator Tools] to select.
3. Press [Program/Delete Device Certificate] to select.
4. Enter the IP address or host name of the Remote Machine and press [Set] to set.
5. Press [Exit] to exit from the set-up procedure.

**3. Registering the Client-side Machine(s)**

---

**Note:**

- Up to six machines can be registered as the Client-side Machines.

**On the Remote Machine:**

1. Press the [User Tools/Counter] key on the operation panel
2. Press [Administrator Tools] to select.
3. Press [Program/Delete Device Certificate] to select.
4. Enter the IP address or host name of the Client-side Machines and press [Set] to set.

**4. Configuring the Remote Reception Settings**

---

Do the following procedure to enable the Client-side Machine(s) to receive faxes via the Remote Machine. You can forward or route received documents per line or special sender or box.

**Note:**

- By performing procedures #1-3 above, the Client-side Machines can **send** faxes via the Remote Machine. The procedures shown below are necessary to enable the Client-side Machines to **receive** faxes.

**On the Remote Machine:**

**1) If you use "Remote Reception Setting per Line"**

1. Press [Facsimile Features] to select.

Model: GR-C1 Fax connection unit Type D	Date: 01-Nov-12	No.: RD657001
---	-----------------	---------------

2. Press [Remote Reception Setting per Line] in [Reception Settings] to select.
3. Enter an IP address or a host name of the client-side machine to connect.
4. Press [Set], and [Exit] to exit from the setting.

**2) If you use "Remote Reception per Sender"**

1. Press [Facsimile Features] to select.
2. Press [Program Special Sender] in [Reception Settings] to select.
3. Select the Special Sender.
4. Press [Remote Reception Setting per Sender] to select.
5. Press [On] and [Remote Machine] to select.
6. Enter an IP address or a host name of the client-side machine to connect.
7. Press [OK] to exit from the setting.

**3) If you use "Remote Reception per Box"**

1. Press [Facsimile Features] to select.
2. Press [Box Setting] in [General Settings] to select.
3. Select the box.
4. Press [Personal Box] to select.
5. Enter a dial-in number.
6. Press [Remote Machine] to select.
7. Enter an IP address or a host name of the client-side machine to connect.
8. Press [OK] to exit from the set-up procedure.

**5. Remote Fax Icon Addition**

---

This procedure allows the remote fax icon to appear on the home screen of the operation panel.

**On both the Remote Machine and the Client-side Machines:**

1. Press [User Tools].
2. Press [Edit Home].
3. Press [Add Icon].
4. Press [Remote Fax].
5. Press a [Blank] to set a location for the remote fax icon.
6. Press [Exit] to exit from the set-up procedure.