

Notes for Users

Take note of the following information, which is provided to supplement the operating manual.

Section: "General Features" in System Settings in **Network and System Settings Guide** or **Network and System Settings Reference**

Addendum: Add the following.

When making fold position settings for a newly installed paper folding unit, use the following in place of the information under "Setting ranges" and "Factory-set values".

◆ Z-fold Position

Paper size	Setting ranges	Factory-set values
A3	<u>2 – 25 mm</u> (0.1 in. – 1.0 in.)	<u>2 mm (0.1 in.)</u>
11×17	<u>2 – 20 mm</u> (0.1 in. – 0.8 in.)	
B4JIS, A4, 8 ¹ / ₂ ×14, 8 ¹ / ₂ ×11, Others	<u>2 – 17 mm</u> (0.1 in. – 0.7 in.)	

◆ Half Fold Position

Paper size	Setting ranges	Factory-set values
A3, B4JIS, A4, 11×17, 8 ¹ / ₂ ×14, 8 ¹ / ₂ ×11, Others	<u>-10 - 10 mm</u> (-0.4 – 0.4 in.)	<u>0 mm (0 in.)</u>

◆ Letter Fold-out Position

Paper size	Setting ranges	Factory-set values
A3, B4JIS, A4, 11×17, 8 ¹ / ₂ ×14, 8 ¹ / ₂ ×11, Others	<u>-10 - 10 mm</u> (-0.4 – 0.4 in.)	<u>4 mm (0.2 in.)</u>

◆ Letter Fold-in Position

Paper size	Setting ranges	Factory-set values
A3, B4JIS, A4, 11×17, 8 ¹ / ₂ ×14, 8 ¹ / ₂ ×11, Others	<u>2 - 7 mm</u> (0.1 – 0.3 in.)	<u>4 mm (0.2 in.)</u>

◆ Double Parallel Fold

Paper size	Setting ranges	Factory-set values
A3, B4JIS, A4, 11×17, 8 ¹ / ₂ ×14, 8 ¹ / ₂ ×11, Others	<u>-10 - 10 mm</u> (-0.4 – 0.4 in.)	<u>0 mm (0 in.)</u>

◆ Gate Fold

Paper size	Setting ranges	Factory-set values
A3, B4JIS, A4, 11×17 , $8\frac{1}{2} \times 14$, $8\frac{1}{2} \times 11$, Others	<u>2 - 12 mm</u> <u>(0.1 - 0.5in.)</u>	<u>4 mm (0.2 in.)</u>

Copyright © 2009

Printed in Japan

EN (GB) EN (US) EN (AU) D454-8678



D4548678