

Folder FD6500A (B889)

This parts catalog includes the changes announced in MB 10

Folder FD6500A (B889)


PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

1.Exterior 1 (B889).....	2
2.Exterior 2 (B889).....	4
3.Paper Transfer Entrans 1 (B889)	6
4.Paper Transfer Entrans 2 (B889)	8
5.Paper Exit (B889)	10
6.Paper Folder Transfer 1 (B889).....	12
7.Paper Folder Transfer 2 (B889).....	14
8.Paper Folder 1 (B889)	16
9.Paper Folder 2 (B889)	18
10.Paper Folder 3 (B889)	20
11.Paper Folder 4 (B889)	22
12.Paper Folder 5 (B889)	24
13.Paper Folder Exit (B889)	26
14.Drive Section (B889).....	28
15.Electrical Section (B889)	30
16.Decal and Documents (B889)	32
Parts Index	36

October 15, 2008

1.Exterior 1 (B889)

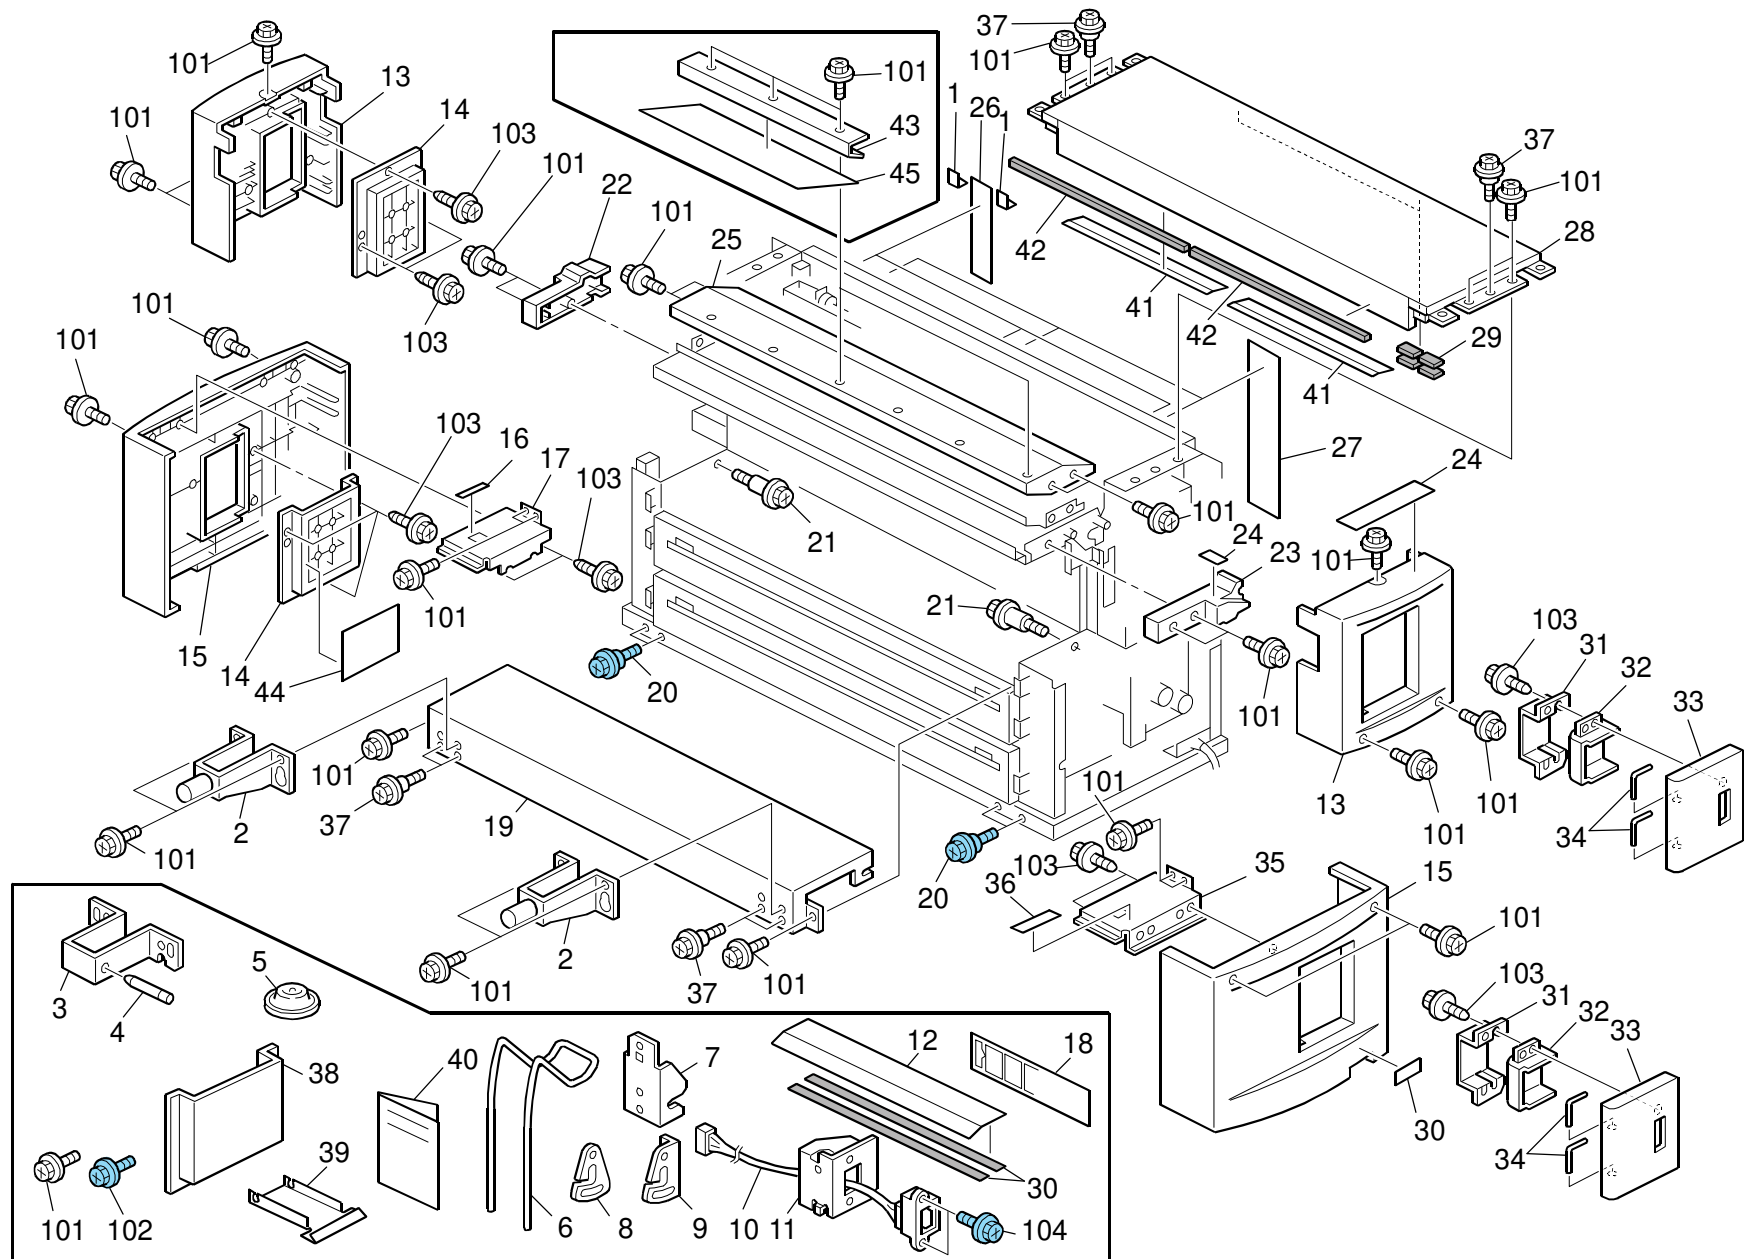


1.Exterior 1 (B889)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B889 1978	Guide:Exit:Upper	6
2	B889 1652	Bracket:Coupling:Upper	1
3	B889 1657	Bracket:Coupling	2
4	B889 1658	Shaft:Coupling	2
5	B132 1226	Holder:Stand	4
6	B889 1977	Copy Tray:Rear	3
7	B889 1656	Bracket:Coupling:Main	2
8	B889 1659	Bracket:Coupling:Fix	1
9	B889 1661	Bracket:2:Coupling:Fix	1
10	B889 5591	Harness:DC:Interface	1
11	B889 1670	Bracket:Interface	1
12	B889 1452	Guide:Entrance:Lower	2
13	B889 1957	Cover:Left and Right:Upper	2
14	B889 1955	Cover:Left:Upper Lower	2
15	B889 1954	Cover:Left and Right:Lower	2
16	B889 1685	Decal:Switch	1
17	B889 1956	Cover:Left Middle	1
18	B889 1680	Decal:Operate	1
19	B890 1918	Cover:Front Lower:BEL:Ass'y	1
	B889 1918	X/O MB9	
	B889 1921	X/O MB8	
20	B830 1135	Screw	4
21	AA14 3555	Screw - M3x5	2
22	B889 1934	Cover:Connecting:Left Sideways	1
23	B889 1932	Cover:Connecting:Right Sideways	1
24	B889 1678	Decal:Paper Jam:1	1
	B889 1681	X/O MB9	
25	B889 1550	Cover:Connecting:Upper	1
	B889 1537	O/O MB7	
26	B889 1975	Film:Small	3
27	B889 1976	Film:Large	3
28	B889 1941	Cover:Upper	1
29	B889 1343	Cushion:Guide	8
30	B889 1453	Seal:Entrance:Lower	4
31	B889 1965	Receive Plate:Magnet Catch	2

Index No.	Part No.	Description	Q'ty Per Assembly
32	B889 1906	Grip:Cover:Open and Close	2
33	B889 1964	Cover:Misfeed Removal	2
34	B104 1303	Hinge Shaft	4
35	B889 1963	Cover:Right Middle	1
36	B889 1687	Decal:Dehumidifier:Heater:Switch	1
37	AA14 3790	Screw:Contact Point	6
38	B010 1359	Operating Instructions Holder	1
39	B010 4469	Rear Guide	1
40	B889 8504	Operating Instructions (NA)	1
	B889 7504	X/O MB10	
41	B889 1183	Guide:Entrance:Upper:2	2
42	B889 1451	Guard:Cover:Connecting	2
43	B889 1584	Bracket:Guide:Entrance	2
44	B889 1981	Holder:Film	1
45	B889 1182	Guide:Entrance:Upper	2
101	0451 3006N	Tapping Screw - 3x6	
102	0454 4008Q	Tapping Screw - M4x8	
103	0450 4010N	Tapping Screw:M4x10	
104	0454 3008Q	Tapping Screw:3x8	

2.Exterior 2 (B889)

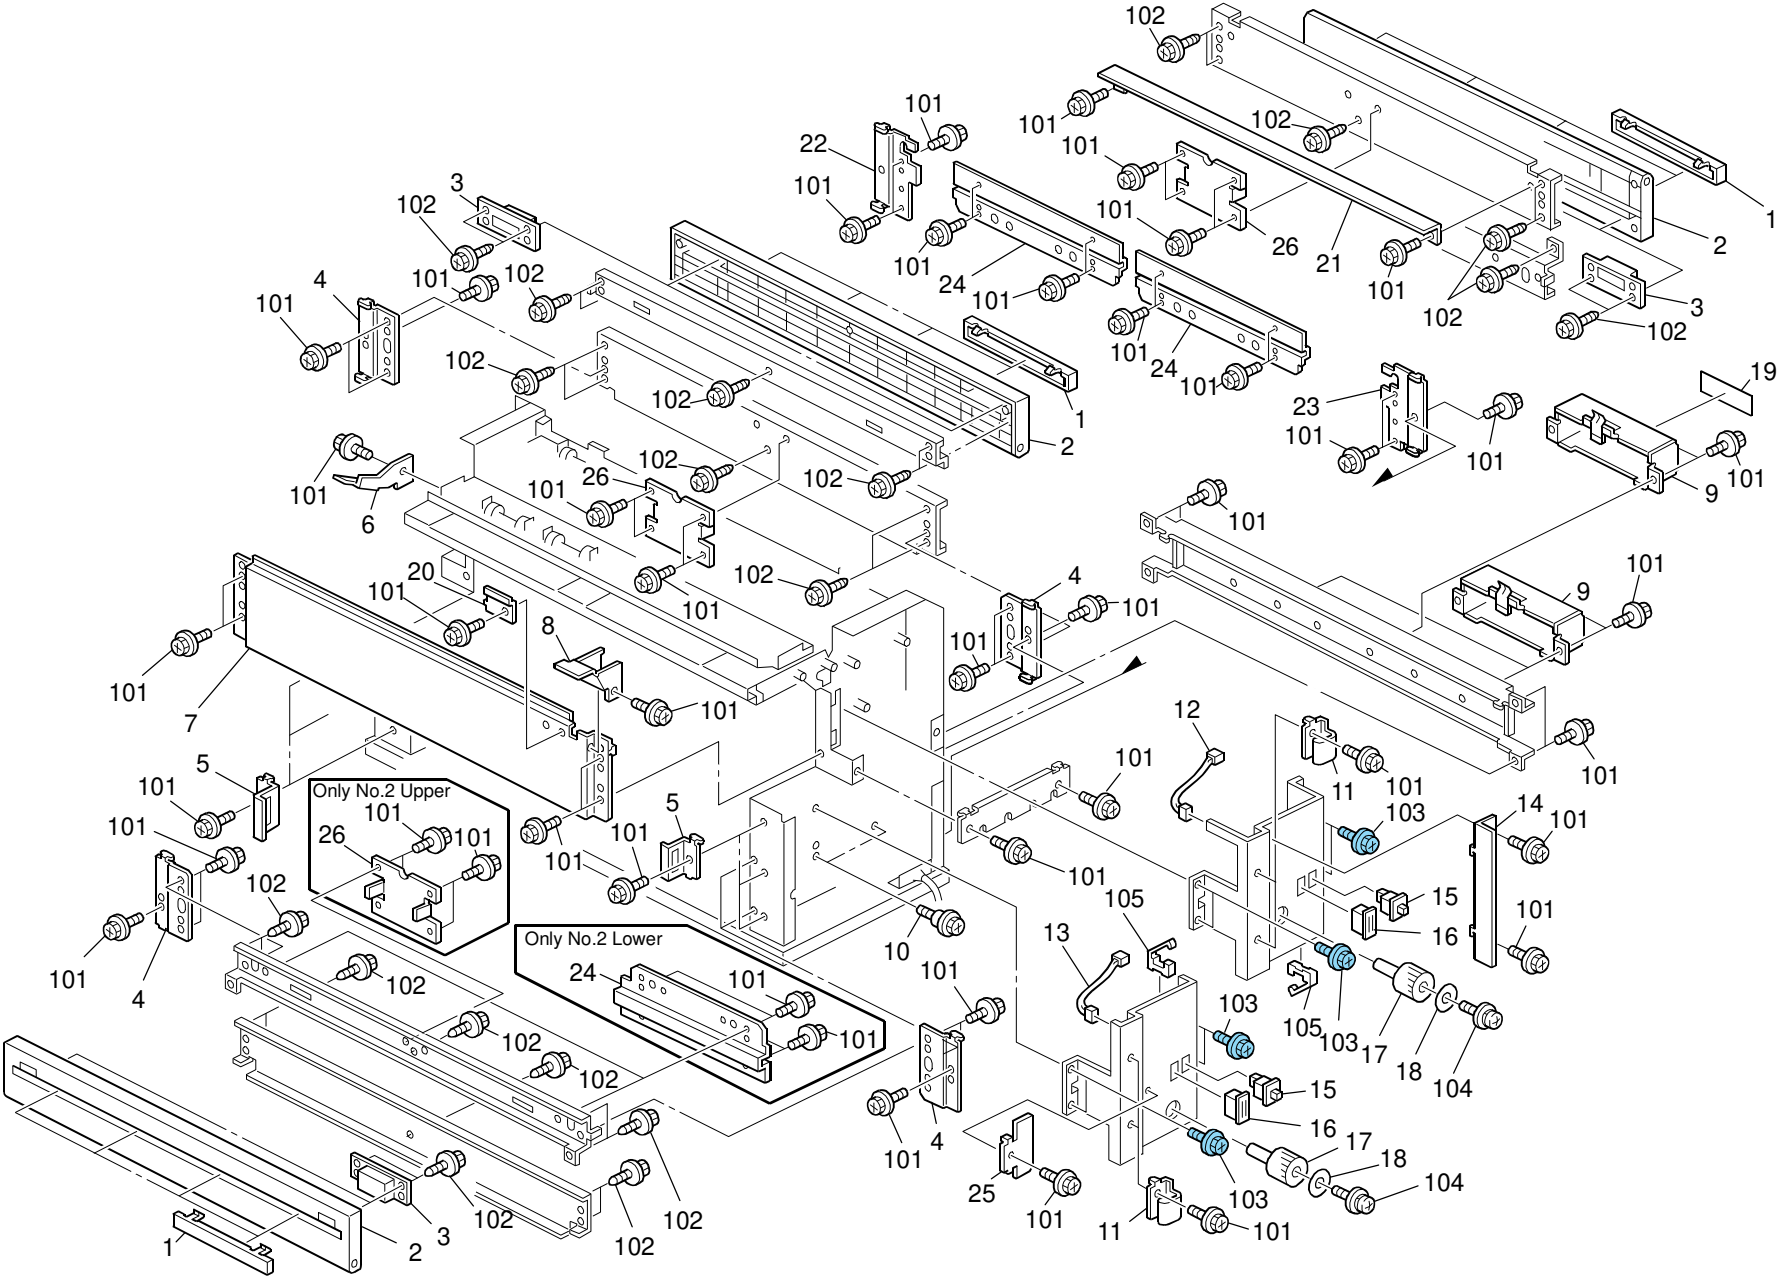


2.Exterior 2 (B889)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B889 1903	Cap:Cover	16
2	B889 1905	Cover:Open and Close	4
3	B889 1909	Cover:Grip	8
4	B889 1910	Bracket:Fix:Cover	6
5	B889 1175	Bracket:Plate:Cover	6
6	B889 1559	Cover:Connecting:Left Lower	1
7	B890 1923	Cover:Front Upper:BEL:Ass'y	1
	B889 1923	X/O MB9	
	B889 1922	X/O MB8	
8	B889 1554	Cover:Connecting:Right Lower	1
9	B188 4471	Holder:Copy Tray:Rear	3
10	AA14 3790	Screw:Contact Point	2
11	B104 1302	Left Hinge	4
12	B889 5553	Harness:DC:Push Switch:2	1
13	B889 5547	Harness:DC:Push Switch	1
14	B889 1979	Guard:Inner Cover	1
15	G020 5626	Push Switch	2
16	AG07 0513	Magnet Catch	2
17	AG05 0098	Knob:Fusing	2
18	B889 1678	Decal:Paper Jam:1	1
	B889 1681	X/O MB9	
19	B889 1686	Decal:Caution:Exit Roller	1
20	B889 1980	Cover:Front Upper:2	1
21	B125 3872	Cover:Transfer Corona:Lower	1
22	B889 1690	Bracket:Fix:Cover:Left	1
23	B889 1691	Bracket:Fix:Cover:Right	1
24	B889 1914	Inner Cover:Cover:Open and Close	4
25	D046 2787	Cover:Side Plate Added MB9	1
26	B889 1399	Bracket:Cover:Coupling Added MB6	3

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0450 4010N	Tapping Screw:M4x10	
103	0454 3006Q	Tapping Screw - M3x6	
104	0954 4008N	Screw - M4x8	
105	1105 0522	Clamp:LES-1010	

3.Paper Transfer Entrans 1 (B889)

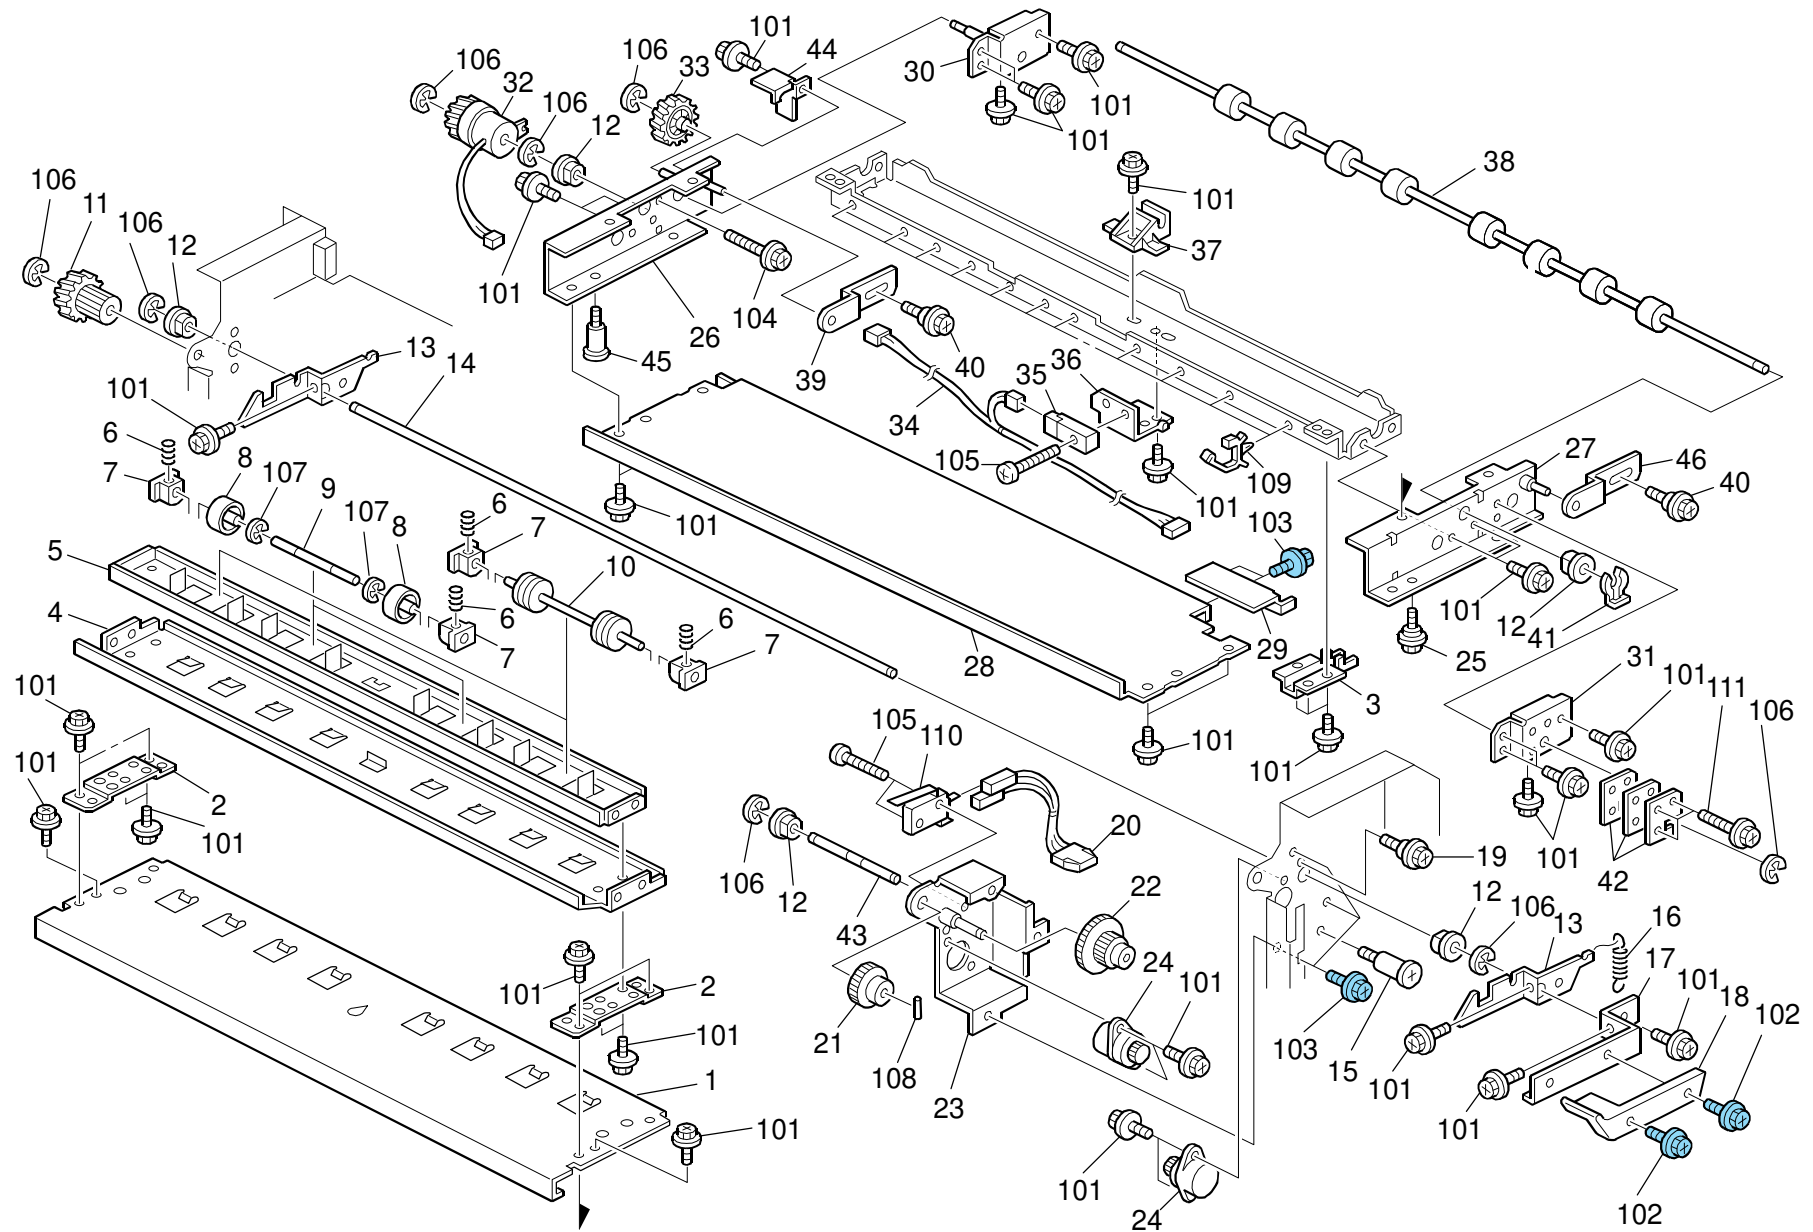


3.Paper Transfer Entrans 1 (B889)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B889 1519	Guide Plate:Connecting:Lower	1
	B889 1520	O/O MB7	
2	B889 1521	Bracket:Guide Plate	2
3	B889 1582	Bracket:Cover:Connecting:Lower	1
4	B889 1522	Guide Plate:Connecting:Upper	1
5	B889 1161	Bracket:Pressure:Transport	1
6	AA06 3416	Spring - 3.4N	8
7	AA08 2135	Bushing - DIA4	8
8	B125 4752	Roller:Driven	4
9	B125 4751	Shaft:Driven	2
10	AF02 2156	Front Driven Transport Roller	2
11	B889 1431	Gear:Timing Pulley:34Z/29T	1
12	AA08 2104	Bushing - 8x12x7	5
13	B889 1540	Lever:Lock	2
14	B889 1541	Shaft:Lever	1
15	AA14 3569	Screw	1
16	AA06 0842	Tension Spring	1
	A184 1748	X/O MB3	
17	B889 1542	Lever:Release:Connecting	1
18	B889 1933	Lever:Connecting	1
19	AA14 3542	Screw:M3:DIA4x5.6	1
20	B889 5577	Harness:DC:Safety Switch: Short Circuit:Connecting	1
	B889 5558	X/O MB9	
21	B834 3214	Gear - 30Z	1
22	H085 2140	Gear - Oil Damper : 2.0	1
23	B889 1551	Drum Stay:Soft Landing	1
24	B889 1563	Oil Damper	2
25	AA14 3790	Screw:Contact Point	1
26	B889 1565	Bracket:Connecting:Left:Ass'y	1
	B889 1525	O/O MB7	
27	B889 1568	Bracket:Connecting:Right:Ass'y	1
	B889 1530	O/O MB7	
28	B889 1549	Cover:Connecting:Lower	1
	B889 1538	O/O MB7	

Index No.	Part No.	Description	Q'ty Per Assembly
29	B889 1558	Bracket:Safety Switch	1
30	B889 1533	Bracket:Contact Point:Left	1
31	B889 1532	Bracket:Contact Point:Right	1
32	AX21 0099	Magnetic Clutch	1
33	B023 4570	Gear - 31Z	1
34	B889 5549	Harness:DC:Entrance Sensor	1
35	AW01 0109	Photo Reflection Sensor:PS117ED1	1
36	B889 1398	Bracket:Sensor:Connecting Corrected MB5	1
37	A174 3946	Arm Bushing	1
38	B889 1440	Transport Roller:Drive	1
39	B889 1536	Stopper:Joint Unit	1
40	B830 1135	Screw	2
41	5215 2621	Snap Ring - M6	1
42	B889 1564	Stopper:Shaft	3
43	B889 1562	Shaft:Right	1
44	B889 1581	Guard:Magnetic Clutch	1
45	AA14 3828	Screw:Fly Wheel Added MB9	1
46	B889 1524	Stopper:Joint Unit:Right Added MB9	1
101	0451 3006N	Tapping Screw - 3x6	
102	0454 4008Q	Tapping Screw - M4x8	
103	0454 3006Q	Tapping Screw - M3x6	
104	0451 3014N	Tapping Screw:3x14	
105	0353 0140N	Screw:M3x14	
106	0720 0060E	Retaining Ring - M6	
107	0720 0030E	Retaining Ring - M3	
108	0633 0140G	Parallel Pin - 3x14	
109	1105 0511	Clamp:LWSM-0306	
110	1204 2529	Switch - V-5F912DN	
111	0451 4010N	Tapping Screw:4x10	

4. Paper Transfer Entrans 2 (B889)

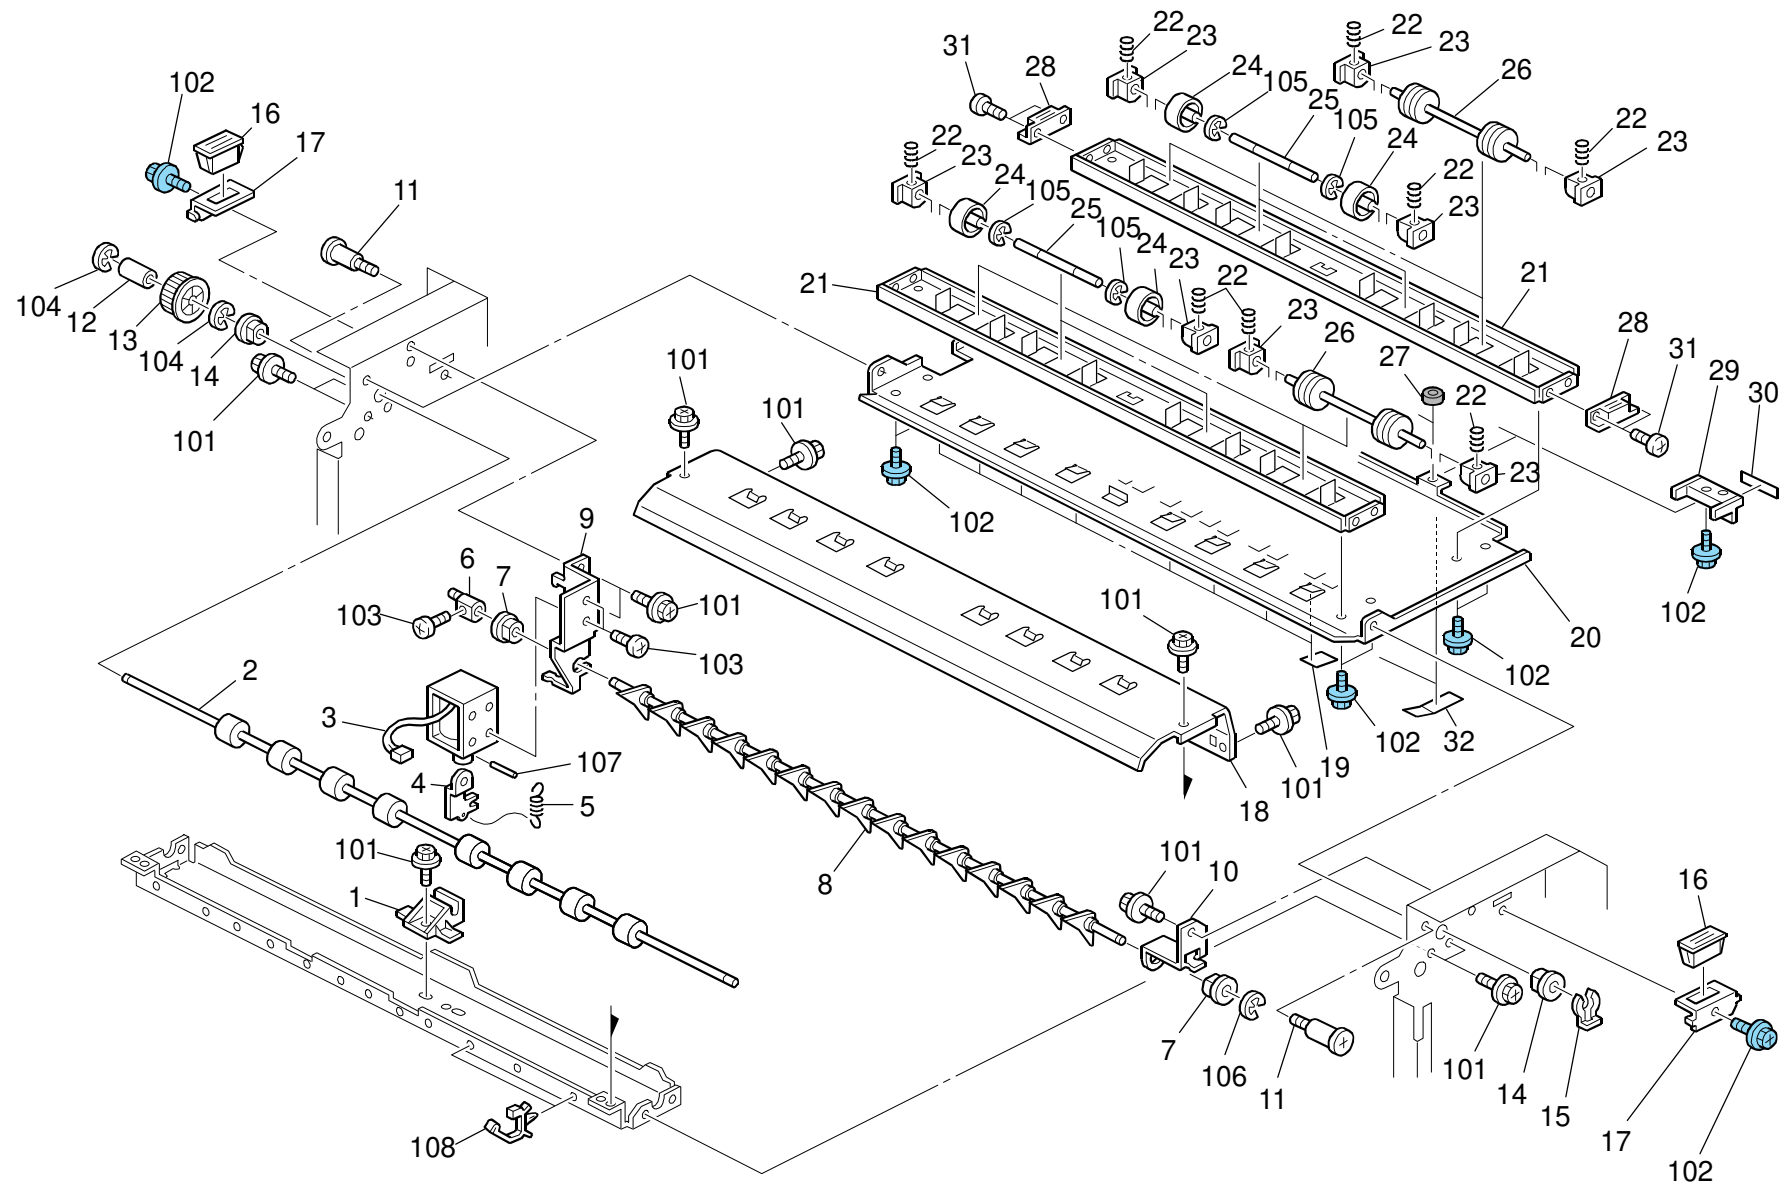


4.Paper Transfer Entrans 2 (B889)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A174 3946	Arm Bushing	1
2	B889 1440	Transport Roller:Drive	1
3	AX10 0038	DC Solenoid	1
4	A174 4387	Gate Pawl Arm	1
5	AA06 6366	Spring:Pressure Release	1
6	B889 1199	Pawl:Drive	1
	A174 4387	X/O MB9	
7	AA08 2101	Bushing - 6x10x6	2
8	AF02 5029	Exit Separation Pawl	1
9	B889 1181	Bracket:Exchange Powl:Left	1
10	B889 1180	Bracket:Exchange Powl:Right	1
11	AA14 3832	Release Spring Holder	2
12	B889 1435	Spacer:21.2	1
13	A257 4632	Timing Pulley	1
14	AA08 2104	Bushing - 8x12x7	2
15	5215 2621	Snap Ring - M6	1
16	AG07 0513	Magnet Catch	2
17	B889 1170	Bracket:Magnet Catch	2
18	B889 1164	Guide Plate:Entrance:Lower	1
19	B889 1177	Guide:Exchange Powl	8
20	B889 1160	Guide Plate:Entrance:Upper	1
21	B889 1161	Bracket:Pressure:Transport	2
22	AA06 3416	Spring - 3.4N	16
23	AA08 2135	Bushing - DIA4	16
24	B125 4752	Roller:Driven	8
25	B125 4751	Shaft:Driven	4
26	AF02 2156	Front Driven Transport Roller	4
27	H072 2207	Guard	2
28	AG07 0504	Magnet Catch:44.1N	2
29	B889 1188	Grip:Guide Plate:Upper	2
30	B889 1678	Decal:Paper Jam:1	1
	B889 1681	X/O MB9	
31	B851 1122	Screw:Round Point:M4x7	4
32	B889 1446	Guide:Exit:Upper Added MB9	8

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0353 0040N	Screw - M3X4	
104	0720 0060E	Retaining Ring - M6	
105	0720 0030E	Retaining Ring - M3	
106	0720 0040E	Retaining Ring - M4	
107	0623 0120E	Spring Pin - M3x12	
108	1105 0511	Clamp:LWSM-0306	



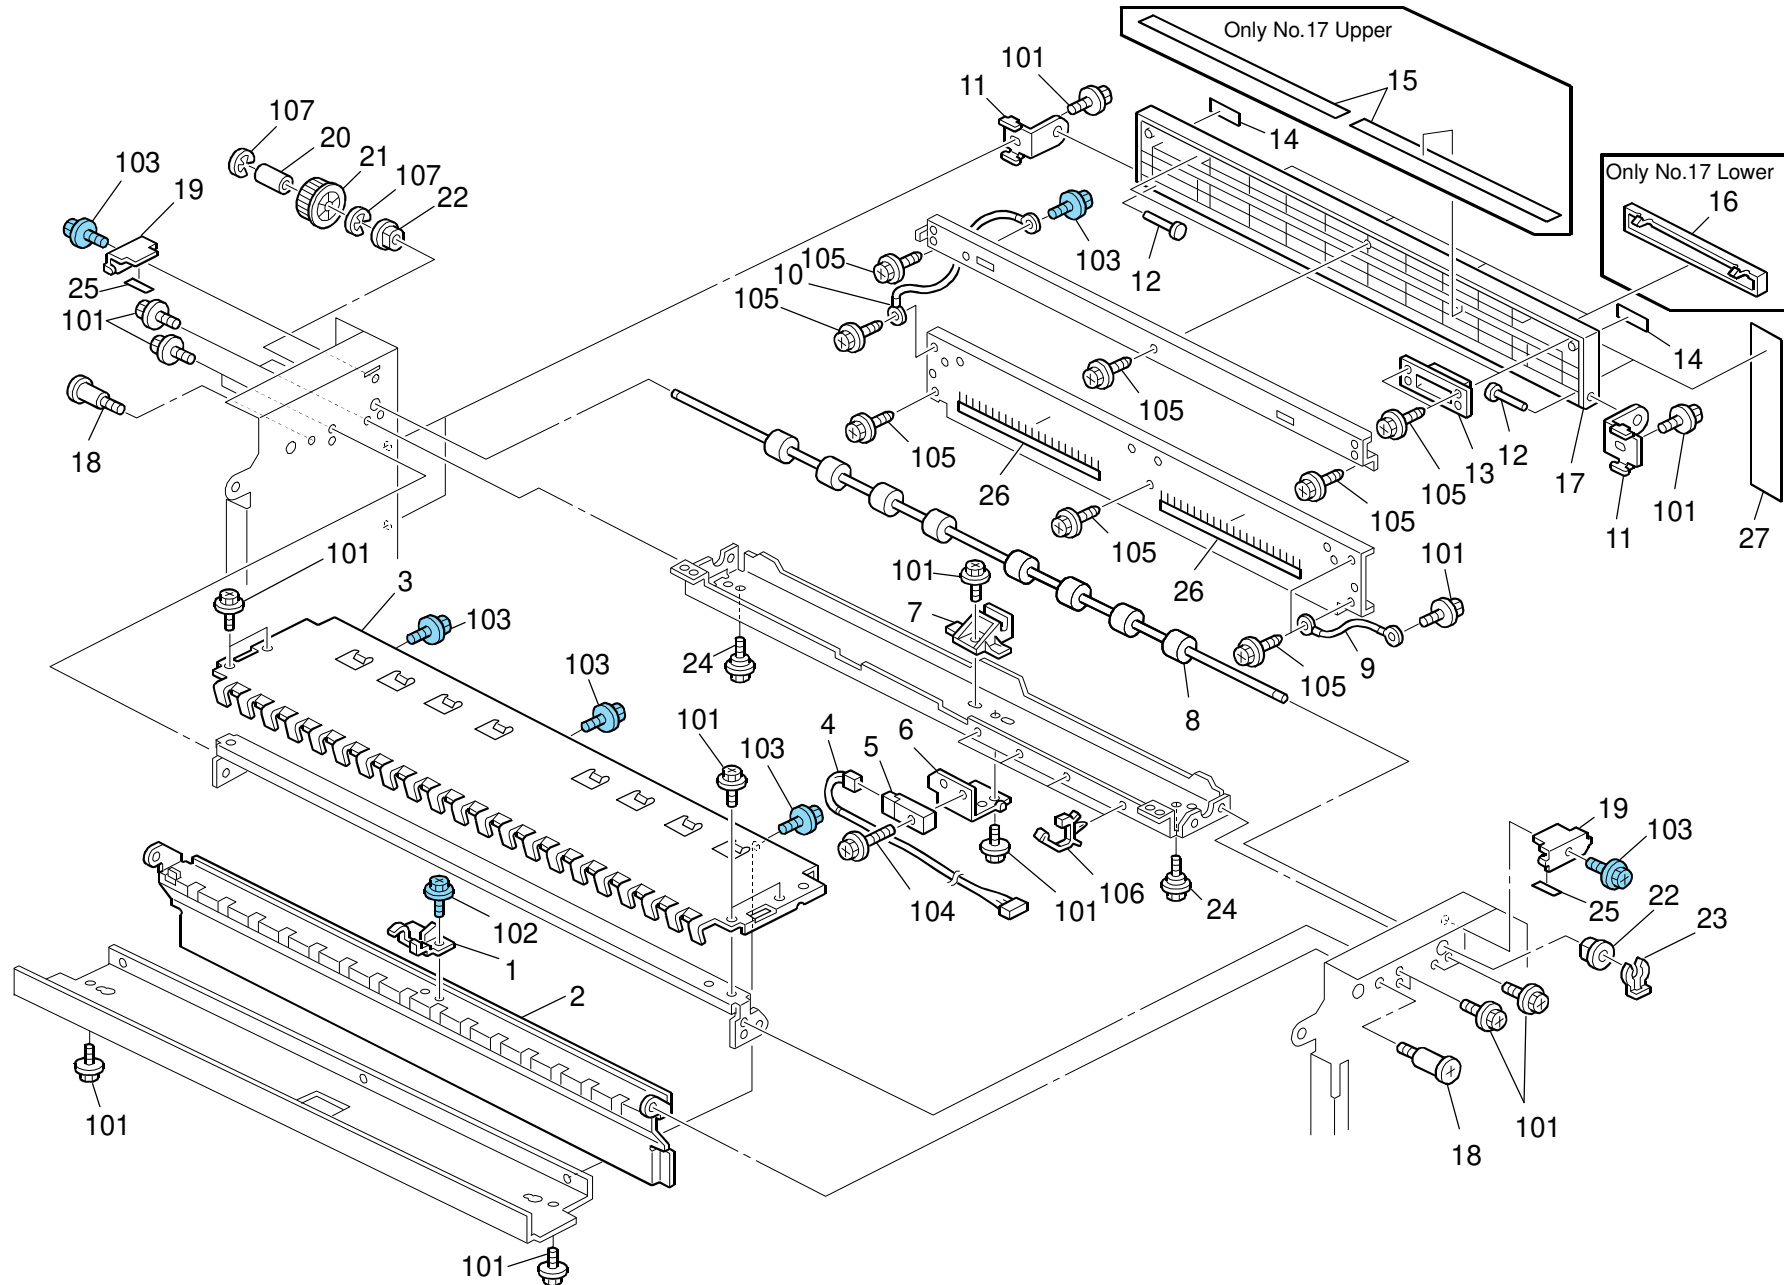


5.Paper Exit (B889)


Index No.	Part No.	Description	Q'ty Per Assembly
1	B010 4458	Gate Pawl Plate	1
2	B889 1168	Guide Plate:Transport:Rear:1	1
3	B889 1165	Guide Plate:Exit:Lower	1
4	B889 5515	Harness:DC:Exhaust:Change	1
5	AW01 0109	Photo Reflection Sensor:PS117ED1	1
6	B889 1178	Bracket:Sensor:1	1
7	A174 3946	Arm Bushing	1
8	B889 1440	Transport Roller:Drive	1
9	B125 5683	Ground Wire:Pressure Plate	2
10	B125 5643	Ground Wire:Scanner Unit:3	2
11	B889 1904	Bracket:Contact Point	4
12	B889 1912	Shaft:Contact Point	4
13	B889 1906	Grip:Cover:Open and Close	4
14	B889 1678	Decal:Paper Jam:1	1
	B889 1681	X/O MB9	
15	B889 1184	Guide:Exit:Upper	2
16	B889 1903	Cap:Cover	4
17	B889 1905	Cover:Open and Close	2
18	AA14 3832	Release Spring Holder	2
19	B889 1214	Bracket:Guide Plate	2
20	B889 1435	Spacer:21.2	1
21	A257 4632	Timing Pulley	1
22	AA08 2104	Bushing - 8x12x7	2
23	5215 2621	Snap Ring - M6	1
24	AA14 3790	Screw:Contact Point	2
25	B125 4817	Sheet:Magnet Catch	2
26	AA12 0118	Paper Feed Discharge Brush	2
27	B889 1966	Film:Cover:Open and Close:Left and Right	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 4008Q	Tapping Screw - M4x8	
103	0454 3006Q	Tapping Screw - M3x6	
104	0451 3014N	Tapping Screw:3x14	
105	0450 4010N	Tapping Screw:M4x10	
106	1105 0511	Clamp:LWSM-0306	
107	0720 0060E	Retaining Ring - M6	

6. Paper Folder Transfer 1 (B889)

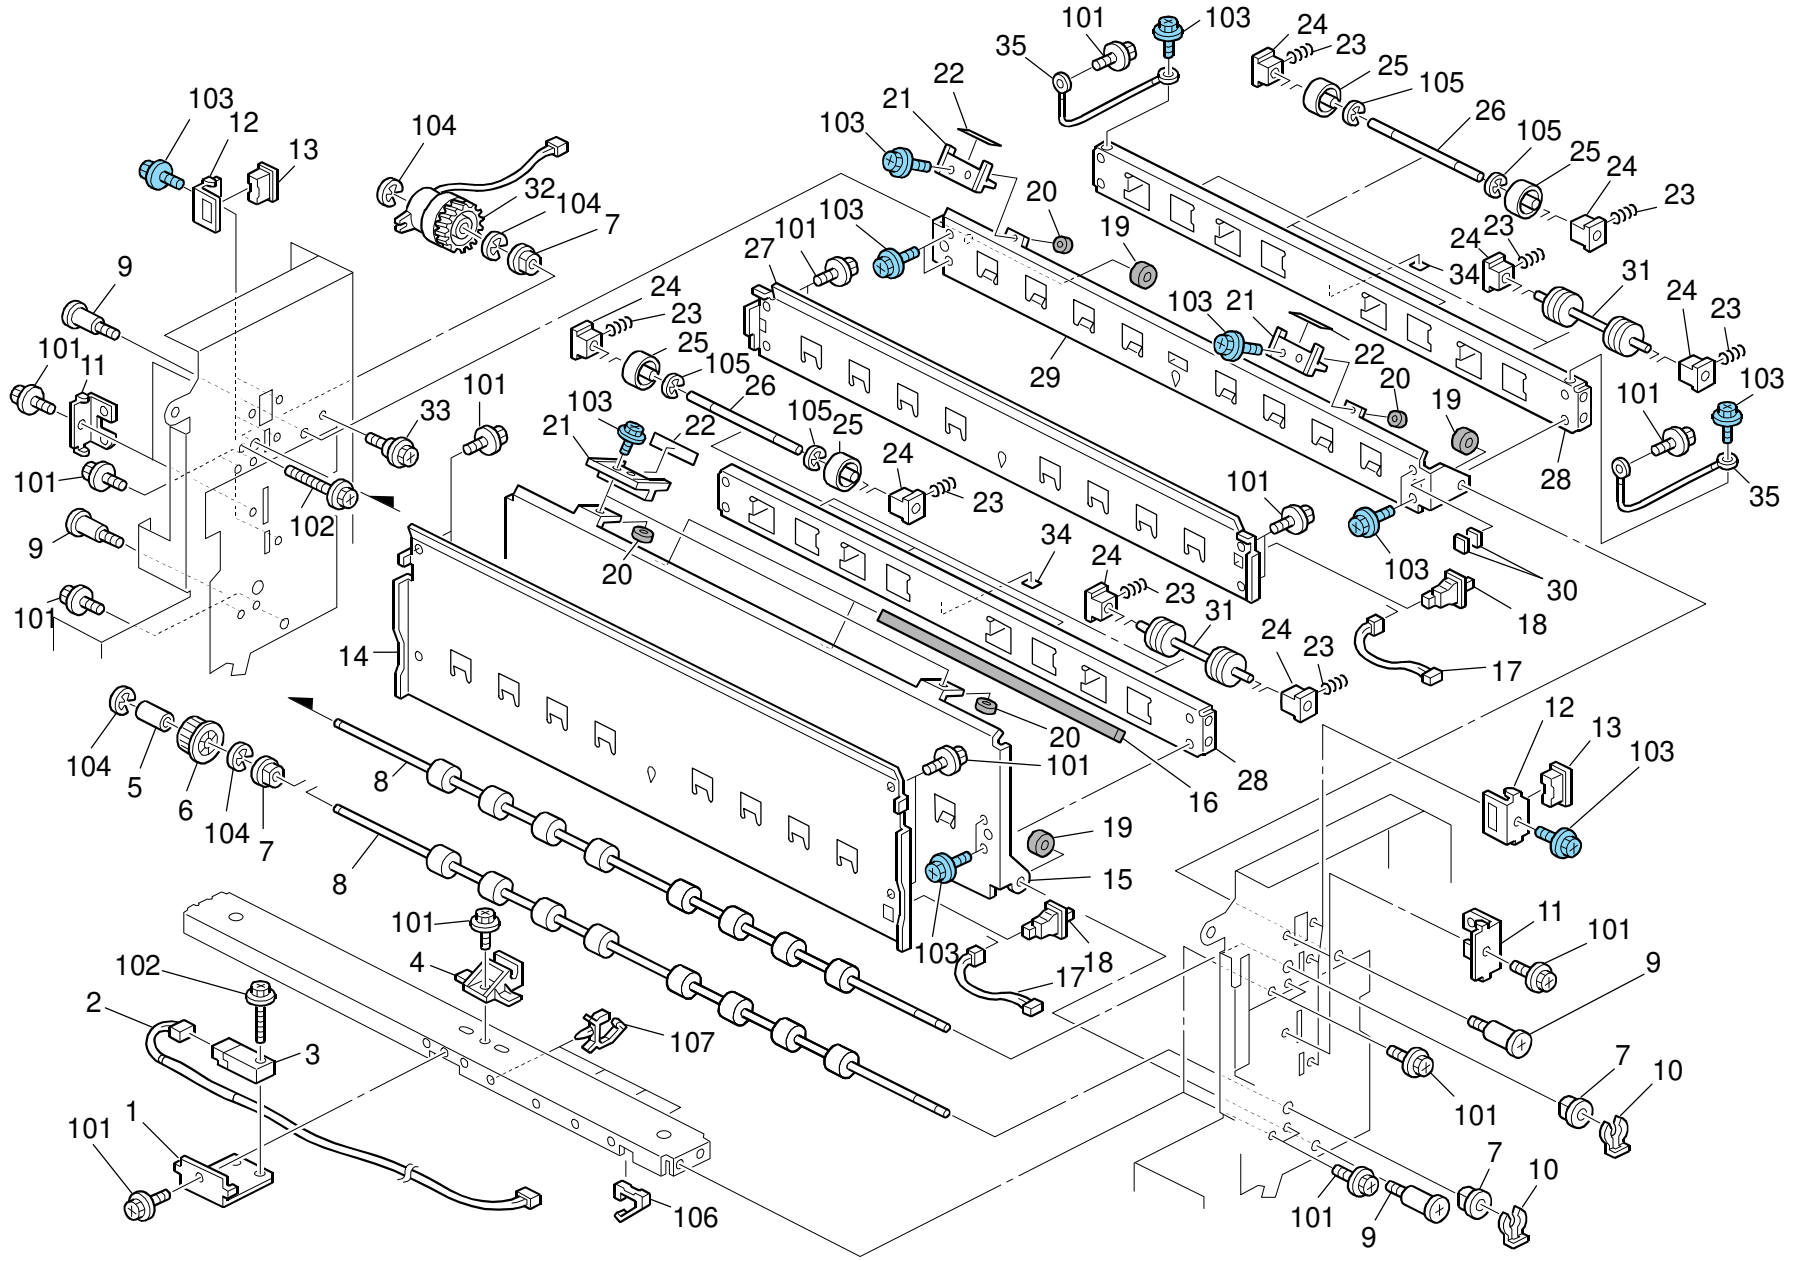

7.Paper Folder Transfer 2 (B889)

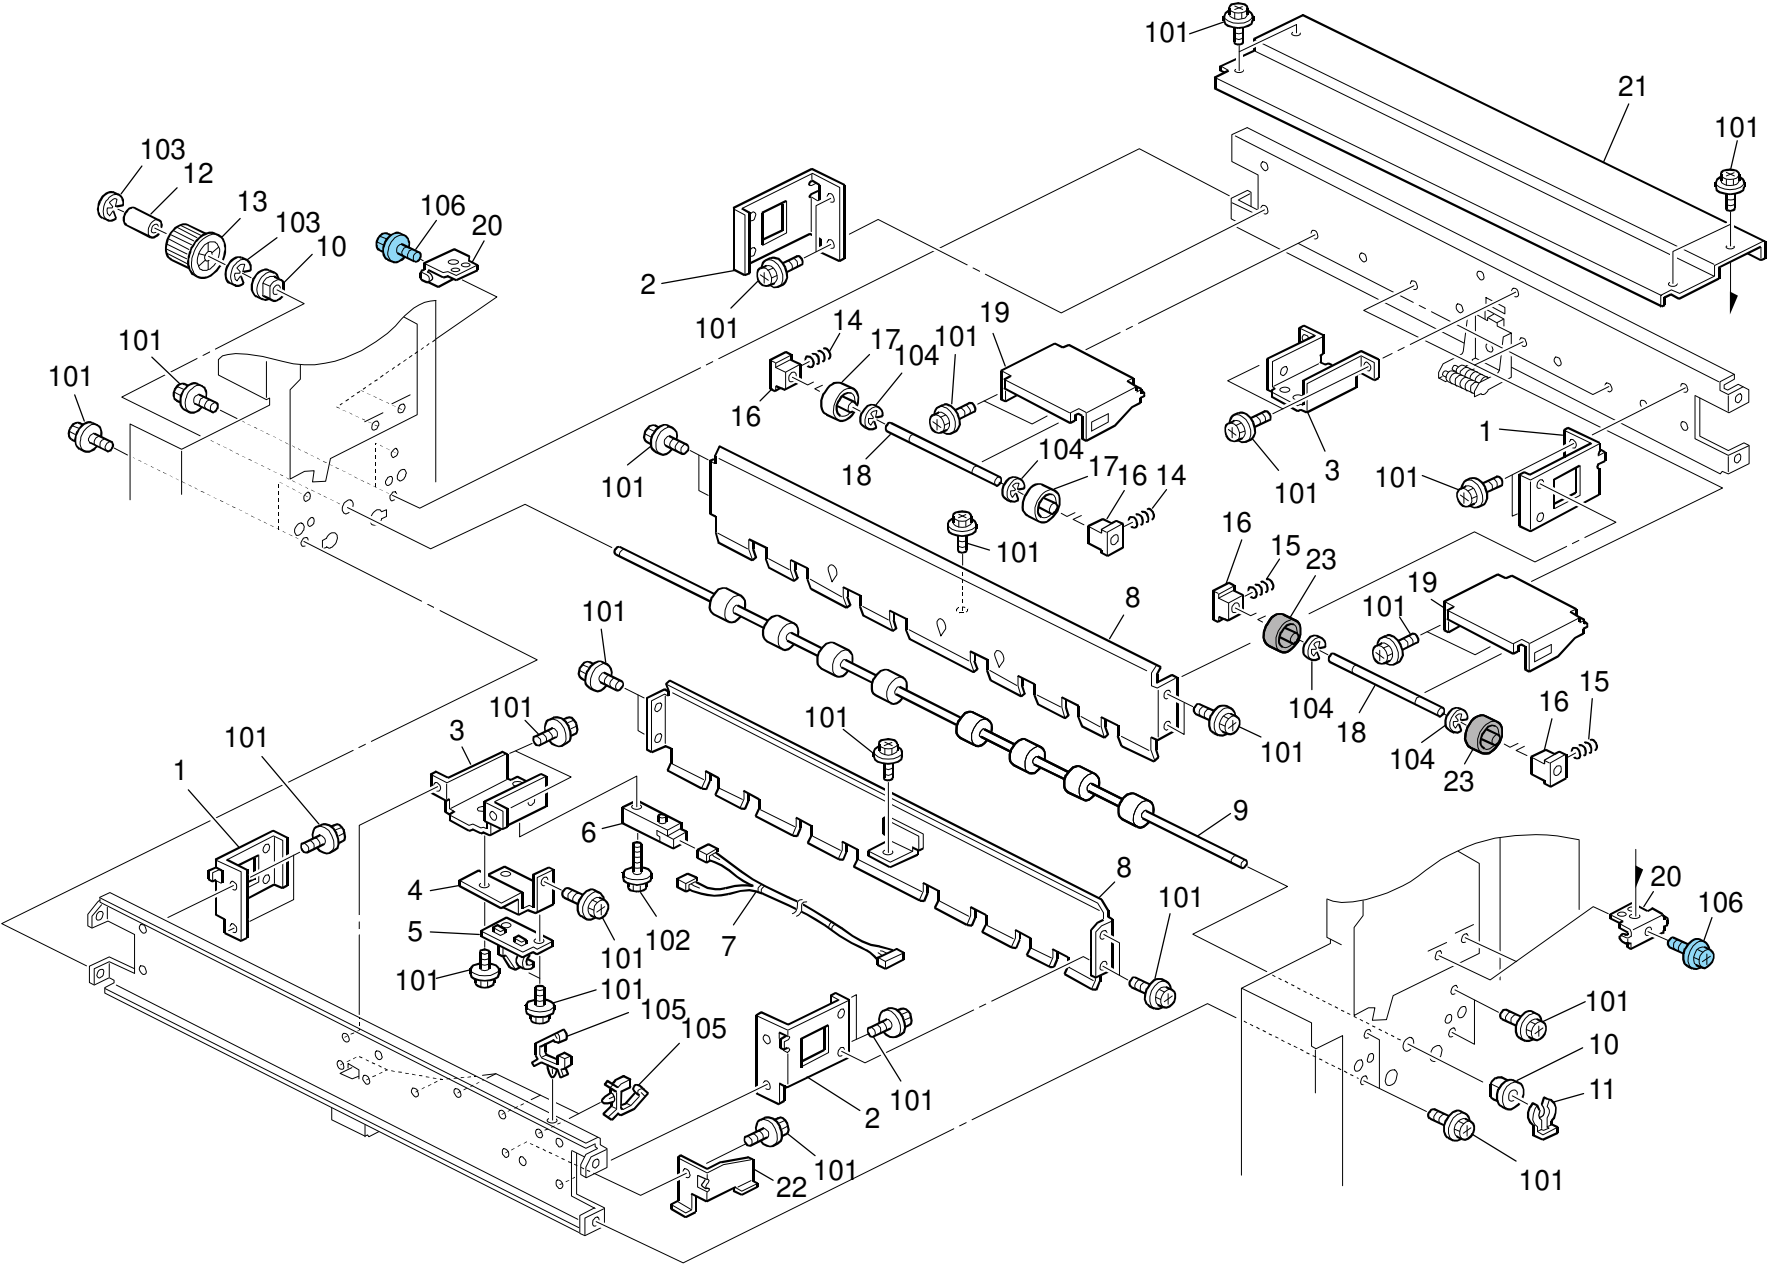


7.Paper Folder Transfer 2 (B889)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B889 1242	Bracket:Guide Plate:2	2
2	B889 1241	Bracket:Guide Plate:1	2
3	B889 1238	Bracket:Sensor	2
4	B889 1239	Bracket:Bushing	1
5	B104 2875	Middle Transport Roller Bushing	1
6	AW01 0109	Photo Reflection Sensor:PS117ED1	1
7	B889 5543	Harness:DC:Paper Crimp:Entrance	1
8	B889 1243	Guide Plate:Transport:Lower	2
9	B889 1440	Transport Roller:Drive	1
10	AA08 2104	Bushing - 8x12x7	2
11	5215 2621	Snap Ring - M6	1
12	B889 1435	Spacer:21.2	1
13	A257 4632	Timing Pulley	1
14	AA06 3956	Compression Spring:Driven:6.6N	4
15	B889 1436	Compression Spring:Middle	4
16	AA08 2135	Bushing - DIA4	8
17	B125 4752	Roller:Driven	4
18	B125 4751	Shaft:Driven	4
19	B889 1240	Bracket:Pressure:Transport:2	4
20	B889 1214	Bracket:Guide Plate	2
21	B889 1158	Inner Cover:Rear	1
22	B889 1391	Stopper:Guide:Upper	1
23	B889 1356	Roller:Driven Added MB4	4

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0451 3014N	Tapping Screw:3x14	
103	0720 0060E	Retaining Ring - M6	
104	0720 0030E	Retaining Ring - M3	
105	1105 0511	Clamp:LWSM-0306	
106	0454 3006Q	Tapping Screw - M3x6	

8.Paper Folder 1 (B889)

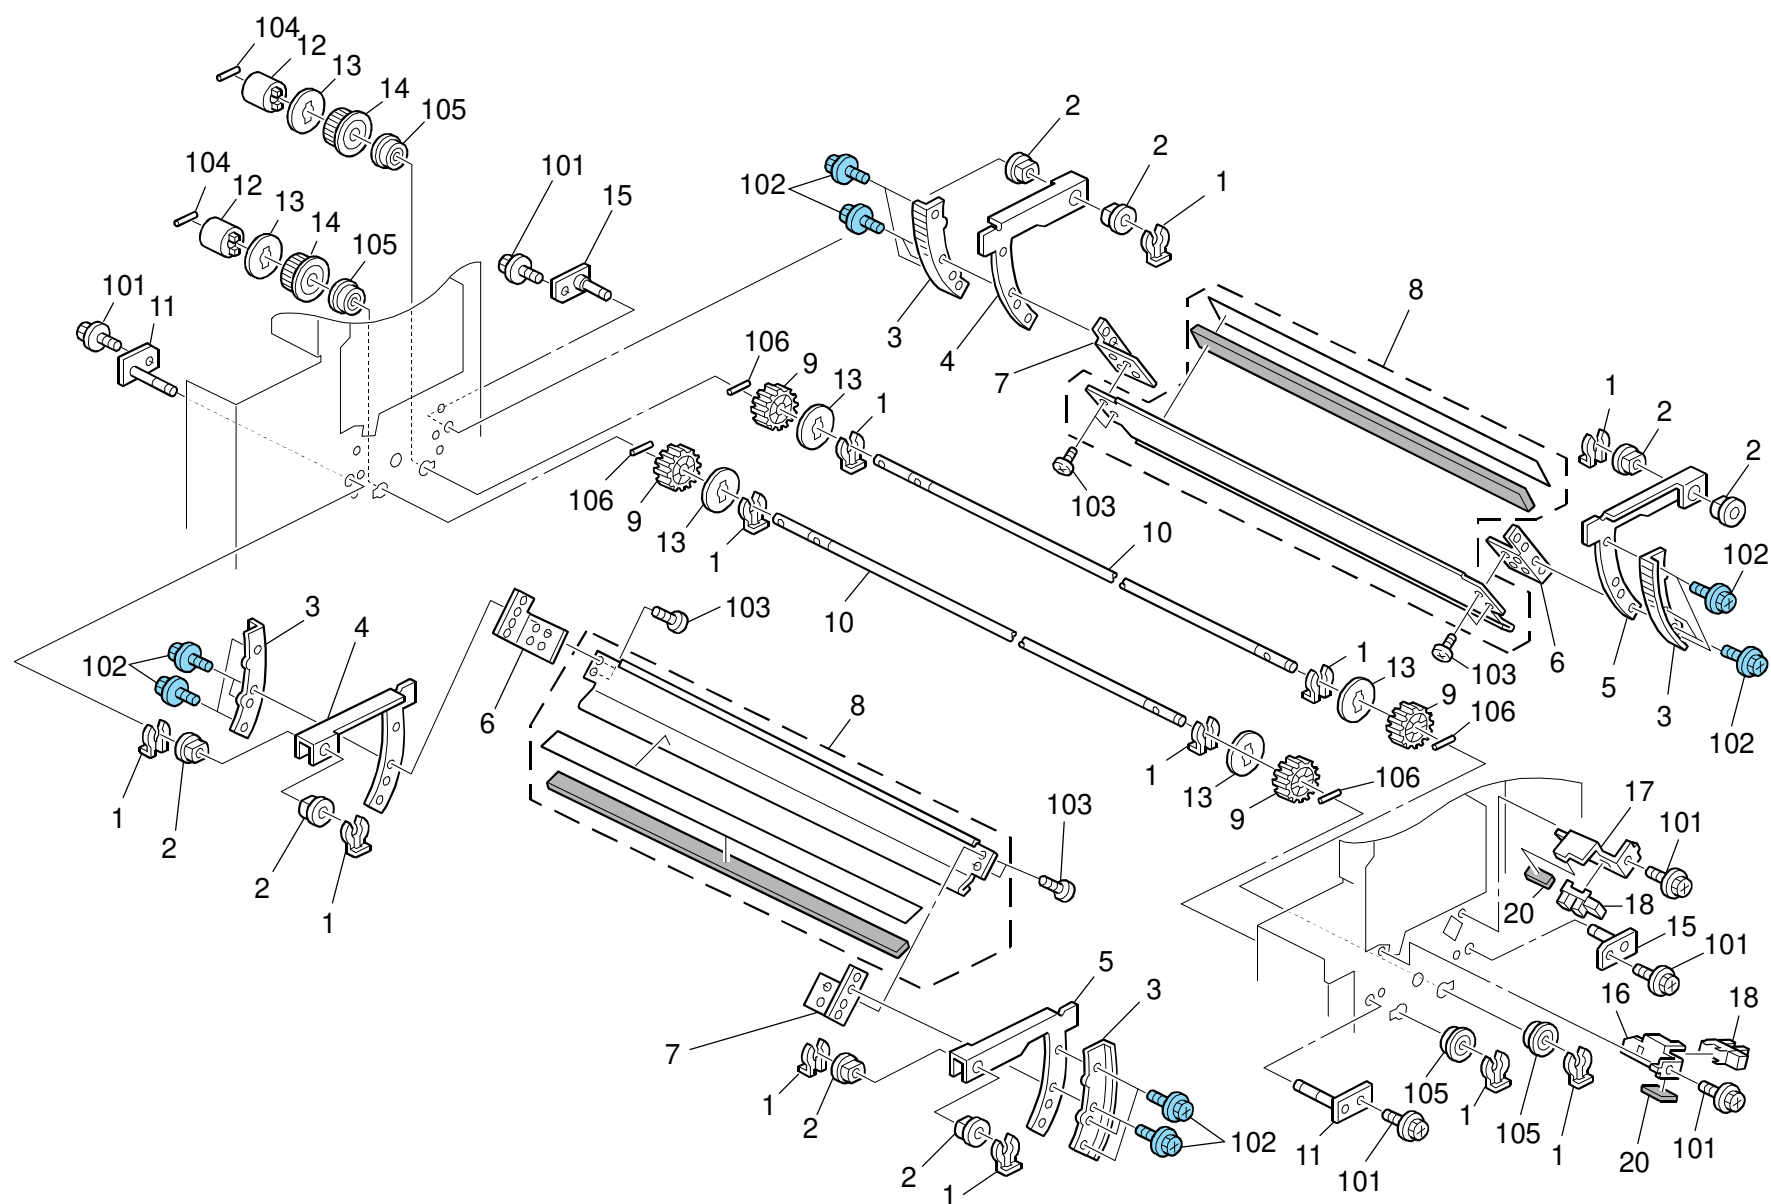


8.Paper Folder 1 (B889)

Index No.	Part No.	Description	Q'ty Per Assembly
1	5215 2621	Snap Ring - M6	12
2	AA08 2104	Bushing - 8x12x7	8
3	B889 1339	Gear:Z251	4
4	B889 1337	Arm:Guide:Left	2
5	B889 1338	Arm:Guide:Right	2
6	B889 1342	Spacer:Guide:Right	2
7	B889 1341	Spacer:Guide:Left	2
8	B889 1309	Guide:Paper Crimp	2
	B889 1340	X/O MB9	
9	B889 1323	Gear:Z26	4
10	B889 1320	Shaft:Drive:Guide	2
11	B889 1332	Bracket:Guide:1	2
12	B889 1321	Torque Limiter:Guide	2
13	B889 1325	Flange	2
14	B889 1322	Timing Pulley:28T	2
15	B889 1335	Bracket:Guide:2	2
16	B889 1328	Bracket:Sensor:1	1
	B889 1330	X/O MB9	
17	B889 1329	Bracket:Sensor:2	1
	B889 1331	X/O MB9	
18	AW02 0141	Photointerruptor	2
	B889 1343	Cushion:Guide Deleted MB9	
20	B624 3046	DC Solenoid Cushion	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3008Q	Tapping Screw:3x8	
103	0313 0060N	Screw - M3x6	
104	0632 0100G	Pin - 2x10mm	
105	0742 3808	Ball Bearing - 8x16x5	
106	0633 0200G	Pin - M3x20	

9.Paper Folder 2 (B889)

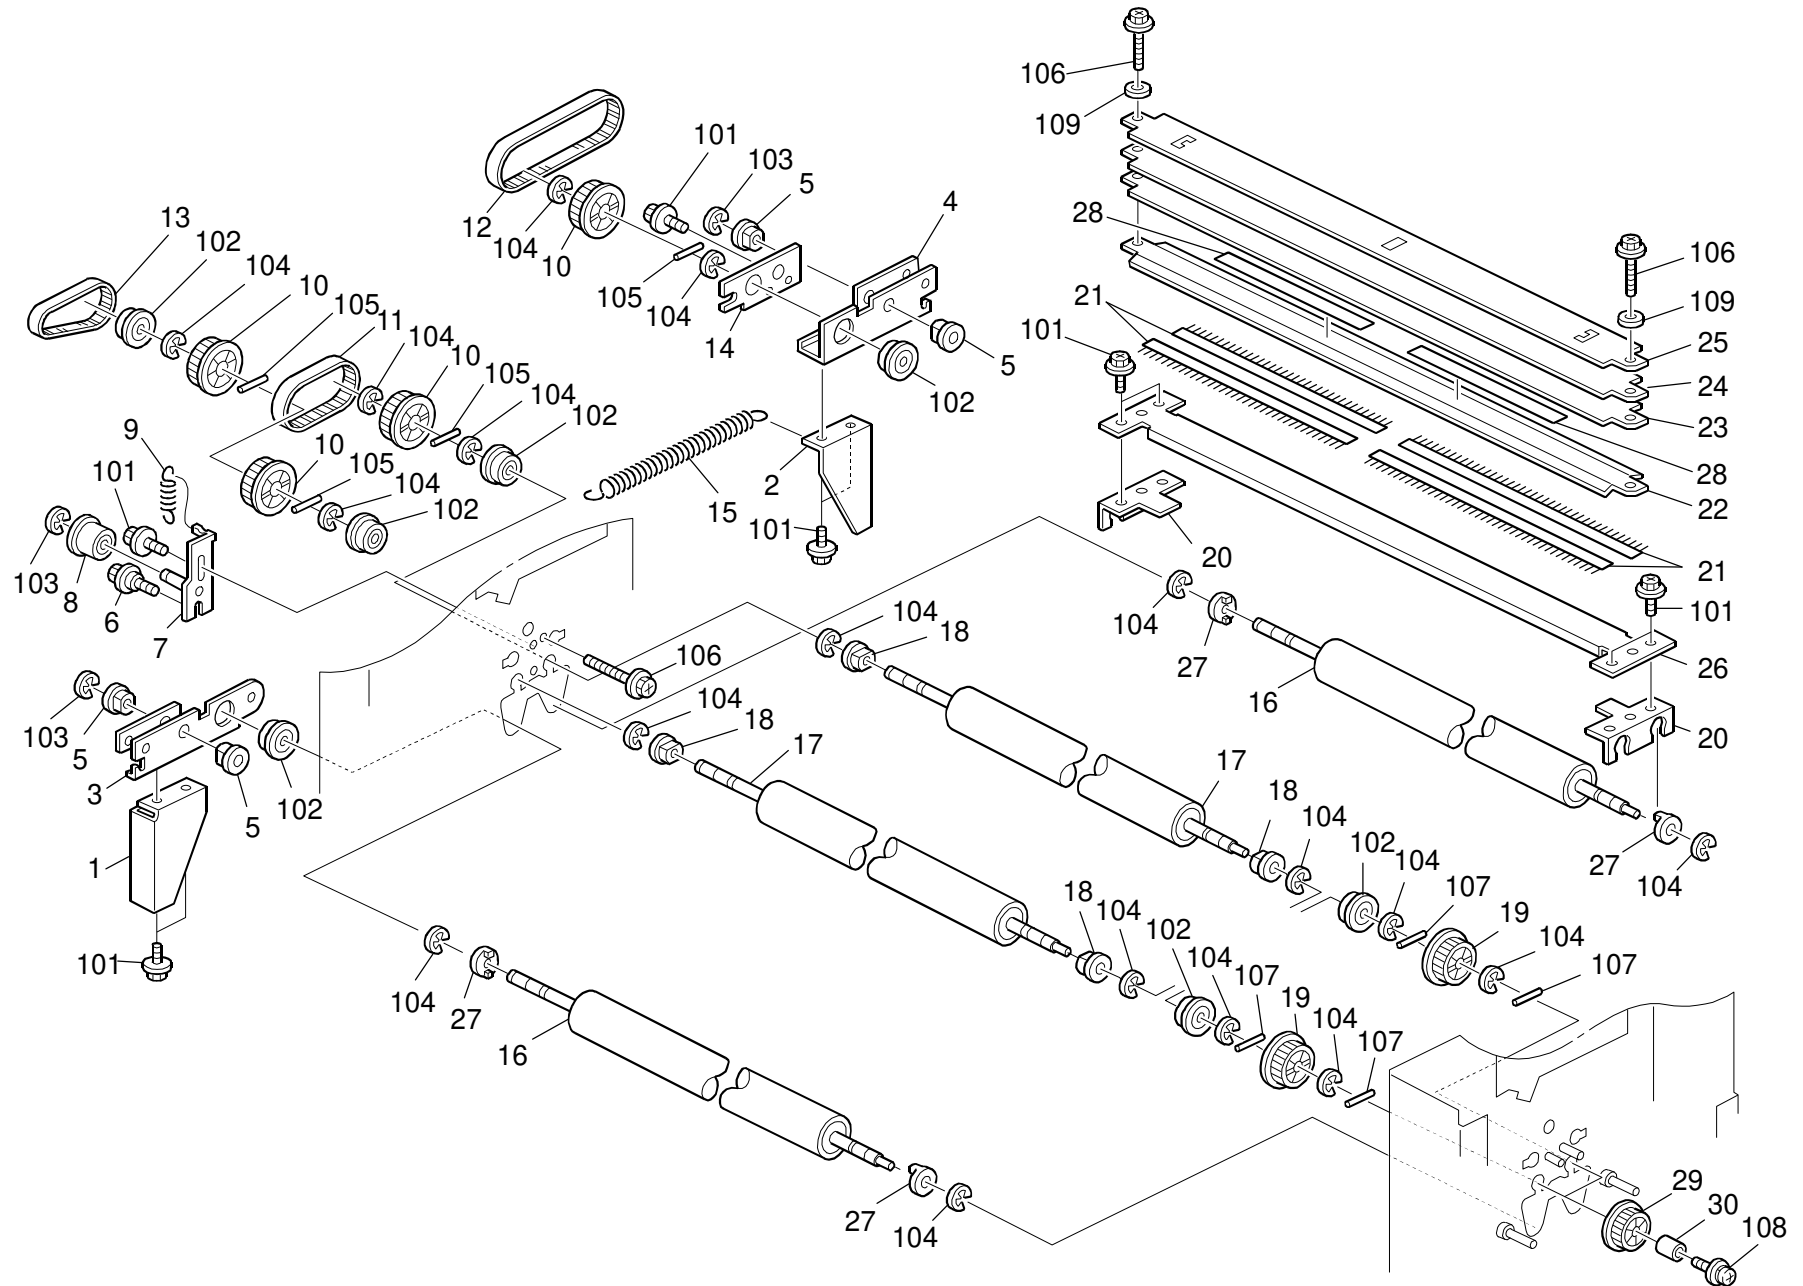


9.Paper Folder 2 (B889)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B889 1370	Arm:Pressure:Roller:1	1
2	B889 1371	Arm:Pressure:Roller:2	1
3	B889 1296	Arm:Roller:Lower:Left Front	1
4	B889 1250	Arm:Roller:Lower:Right Front	1
5	5446 6214	Shaft Holder - Pick-up Roller	4
6	AA14 3790	Screw:Contact Point	1
7	B889 1262	Bracket:Tightener:Left and Right	1
8	A257 4650	Tightener Pulley	1
9	A257 6429	Pressure Spring	1
10	B889 1260	Timing Pulley:44T	4
11	B889 1261	Timing Belt:B120S3M273	1
12	B889 1277	Timing Belt:B60S3M360	1
13	B889 1268	Timing Belt:B120S3M318	1
14	B889 1295	Bracket:Arm:1	1
15	B889 1387	Tension Spring:Pressure:Roller	1
16	B889 1280	Roller:Paper Crimp	2
17	B889 1289	Roller:Paper Crimp:80	2
18	5053 0419	Bushing - 10mm	4
19	B889 1374	Timing Pulley:Roller:Upper	2
20	B889 1347	Guide Plate:Guide Plate:Middle	2
21	AA12 0118	Paper Feed Discharge Brush	4
22	B889 1224	Guide Plate:Lower Middle	1
23	B889 1345	Guide Plate:Paper Crimp:Lower Middle:4	1
24	B889 1344	Guide Plate:Paper Crimp:Lower Middle:3	1
25	B889 1213	Guide Plate:Lower Middle:2	1
26	B889 1346	Stay:Paper Crimp:Lower Middle:2	1
27	B889 1348	Collar:Roller	4
28	B889 1352	Spacer:Guide Plate:Paper Crimp	2
29	B889 1252	Timing Pulley:34T Added MB9	2
30	B352 3170	Spacer Added MB9	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0742 3910	Ball Bearing:10x22x6	
103	0720 0060E	Retaining Ring - M6	
104	0720 0080E	Retaining Ring - M8	
105	0633 0280G	Pin - 3x28	
106	0451 3014N	Tapping Screw:3x14	
107	0633 0200G	Pin - M3x20	
108	0954 4008N	Screw - M4x8	
109	0701 0050N	Washer:DIA5	

10.Paper Folder 3 (B889)

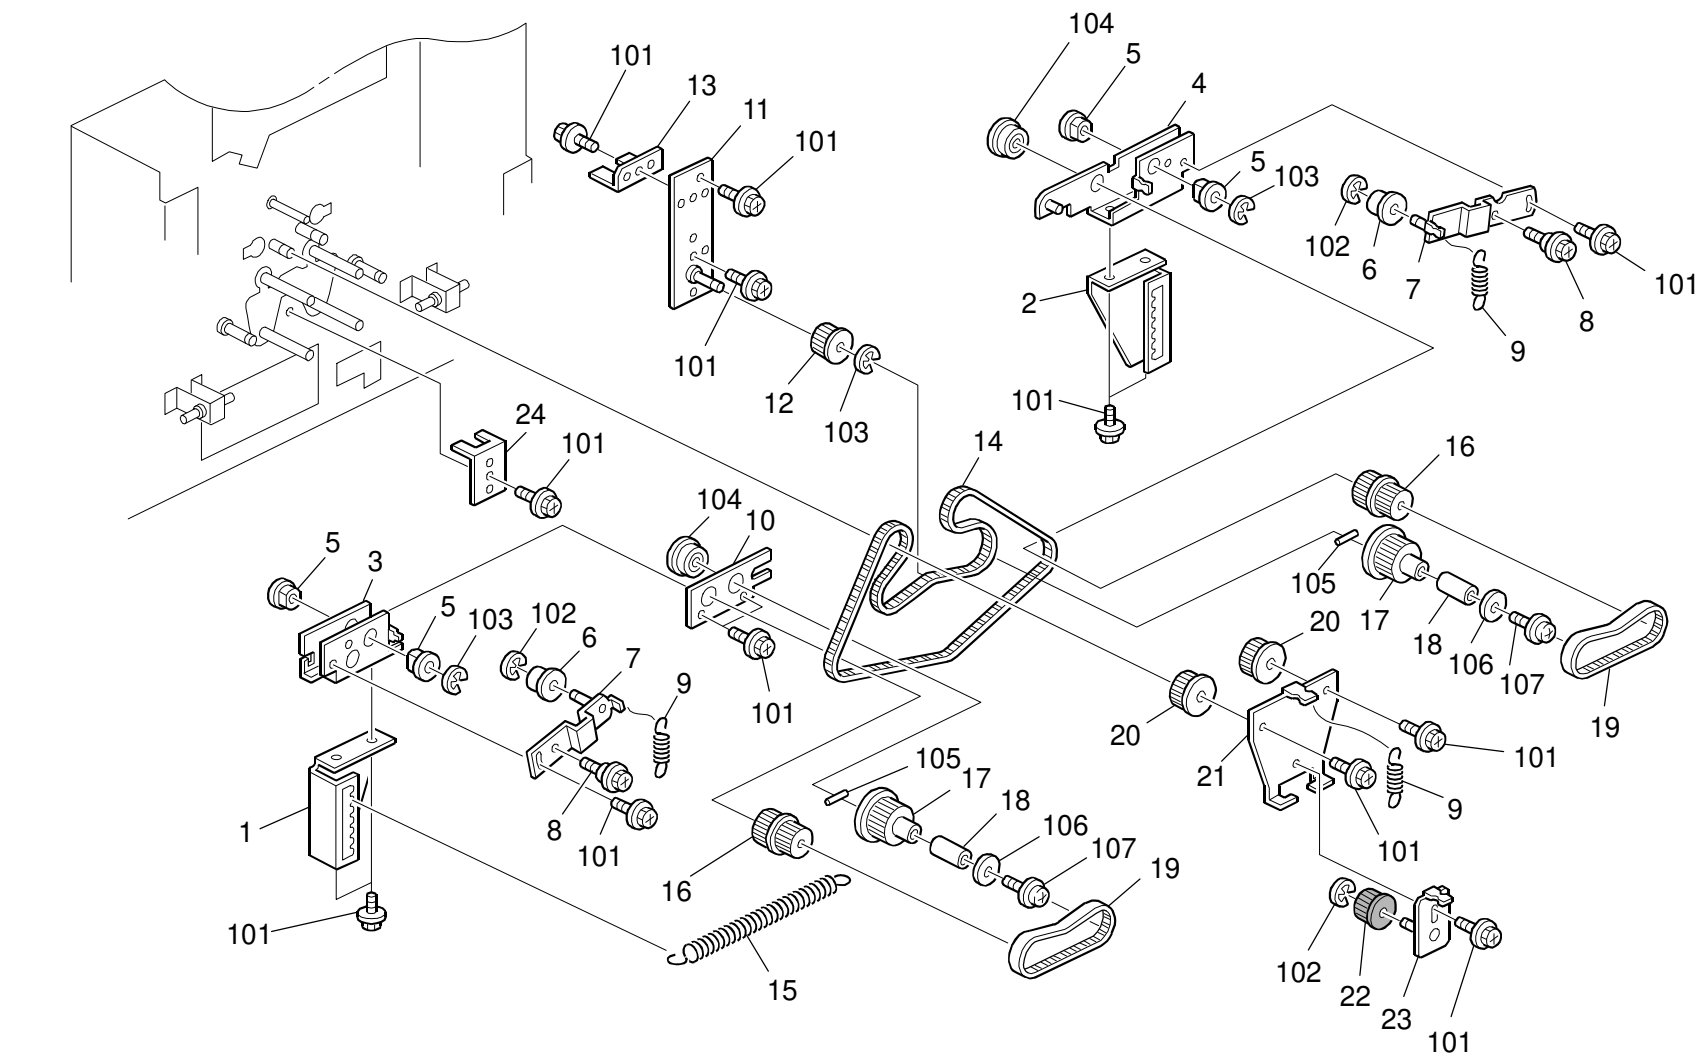


10.Paper Folder 3 (B889)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B889 1371	Arm:Pressure:Roller:2	1
2	B889 1370	Arm:Pressure:Roller:1	1
3	B889 1250	Arm:Roller:Lower:Right Front	1
4	B889 1296	Arm:Roller:Lower:Left Front	1
5	5446 6214	Shaft Holder - Pick-up Roller	4
6	AB03 0098	Belt Tightener	2
7	B889 1381	Bracket:Tightener:Roller:Lower:Ass'y	2
8	AA14 3790	Screw:Contact Point	2
9	AA06 6152	Tension Spring	3
10	B889 1295	Bracket:Arm:1	1
11	B889 1384	Bracket:Tightener:Roller:Middle Lower:Peen	1
12	A228 1100	Idler Pulley Z20	1
13	B889 1376	Stopper:Guide:Right	1
14	B889 1253	Timing Belt:B80DS3M444	1
15	B889 1387	Tension Spring:Pressure:Roller	1
16	B889 1372	Timing Pulley:Idler:Lower	2
17	B889 1375	Timing Pulley:Roller:Lower	2
18	B352 3170	Spacer	2
19	B889 1373	Timing Belt:60S3M198	2
20	B889 1377	Timing Pulley:Idler:Upper	2
21	B889 1255	Guide Plate:Idler	1
22	AB03 0806	Pulley - 19T	1
23	B889 1378	Bracket:Tightener:Roller:Upper:Ass'y	1
24	B889 1355	Stopper:Guide	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0720 0040E	Retaining Ring - M4	
103	0720 0060E	Retaining Ring - M6	
104	0742 3910	Ball Bearing:10x22x6	
105	0633 0200G	Pin - M3x20	
106	0701 0040N	Washer:DIA4	
107	0954 4008N	Screw - M4x8	

11.Paper Folder 4 (B889)

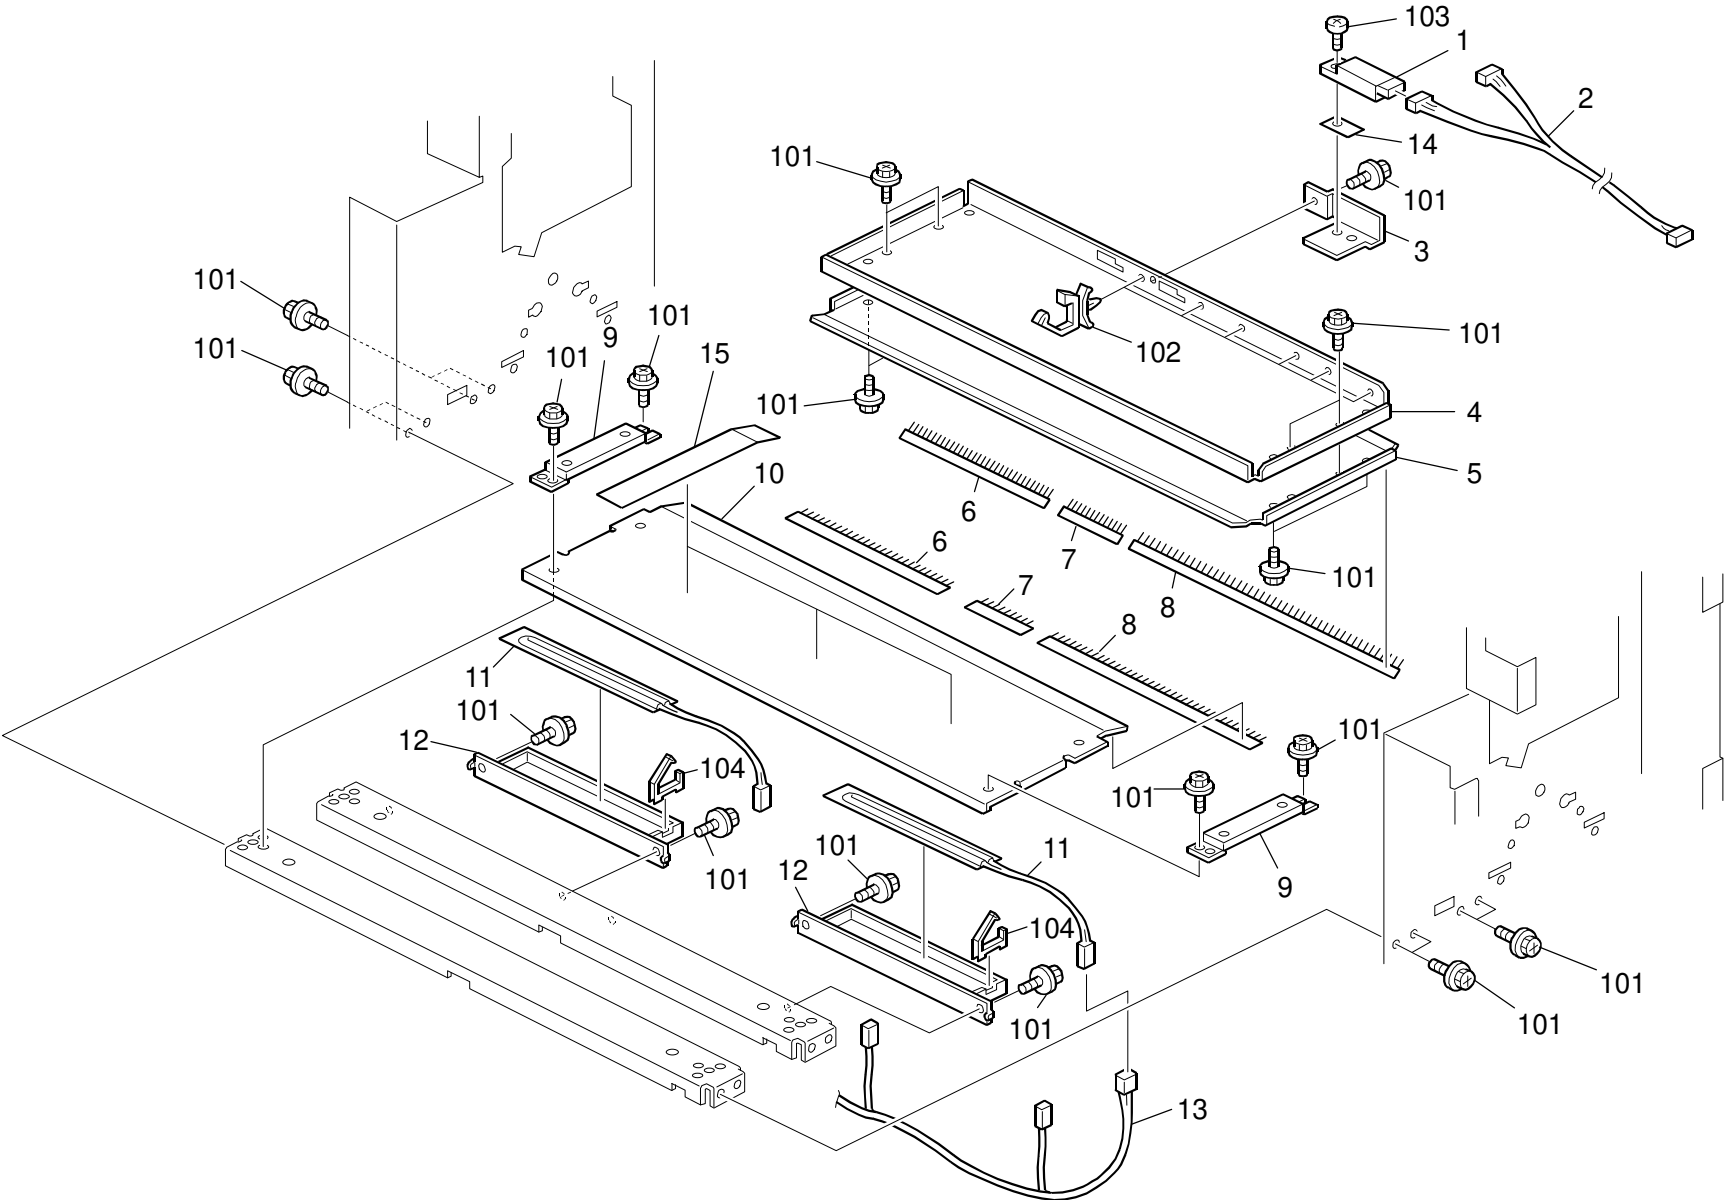


11.Paper Folder 4 (B889)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B889 1354	Photointerruptor:Paper Crimp	1
2	B889 5526	Harness:DC:Roller:Front:Radiate	1
3	B889 1193	Bracket:Photointerruptor:Radiate	1
4	B889 1197	Stay:Paper Crimp:Open and Close:Upper Front:2	1
5	B889 1196	Guide Plae:Paper Crimp:Upper Front:2	1
6	B889 1231	Discharge Brush:1	2
7	B889 1232	Discharge Brush:2	2
8	AA12 0118	Paper Feed Discharge Brush	2
9	B889 1198	Bracke:Guide Plate:Paper Crimp:Upper Front	2
10	B889 1223	Guide Plate:Lower Front	1
11	AX40 0190	Heater:120V:9W	2
11	AX40 0191	Heater:230V:9W	2
12	B889 1156	Cover:Heater:Front	2
13	B889 5503	Harness:AC:Dehumidifier:Heater	1
14	B889 1359	Shielding Plate:Sensor	1
15	B889 1299	Guide:Paper Crimp:Lower Added MB9	3

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0353 0060N	Bind Screw - M3x6	
104	1105 0522	Clamp:LES-1010	
105	1105 0511	Clamp:LWSM-0306	

12.Paper Folder 5 (B889)

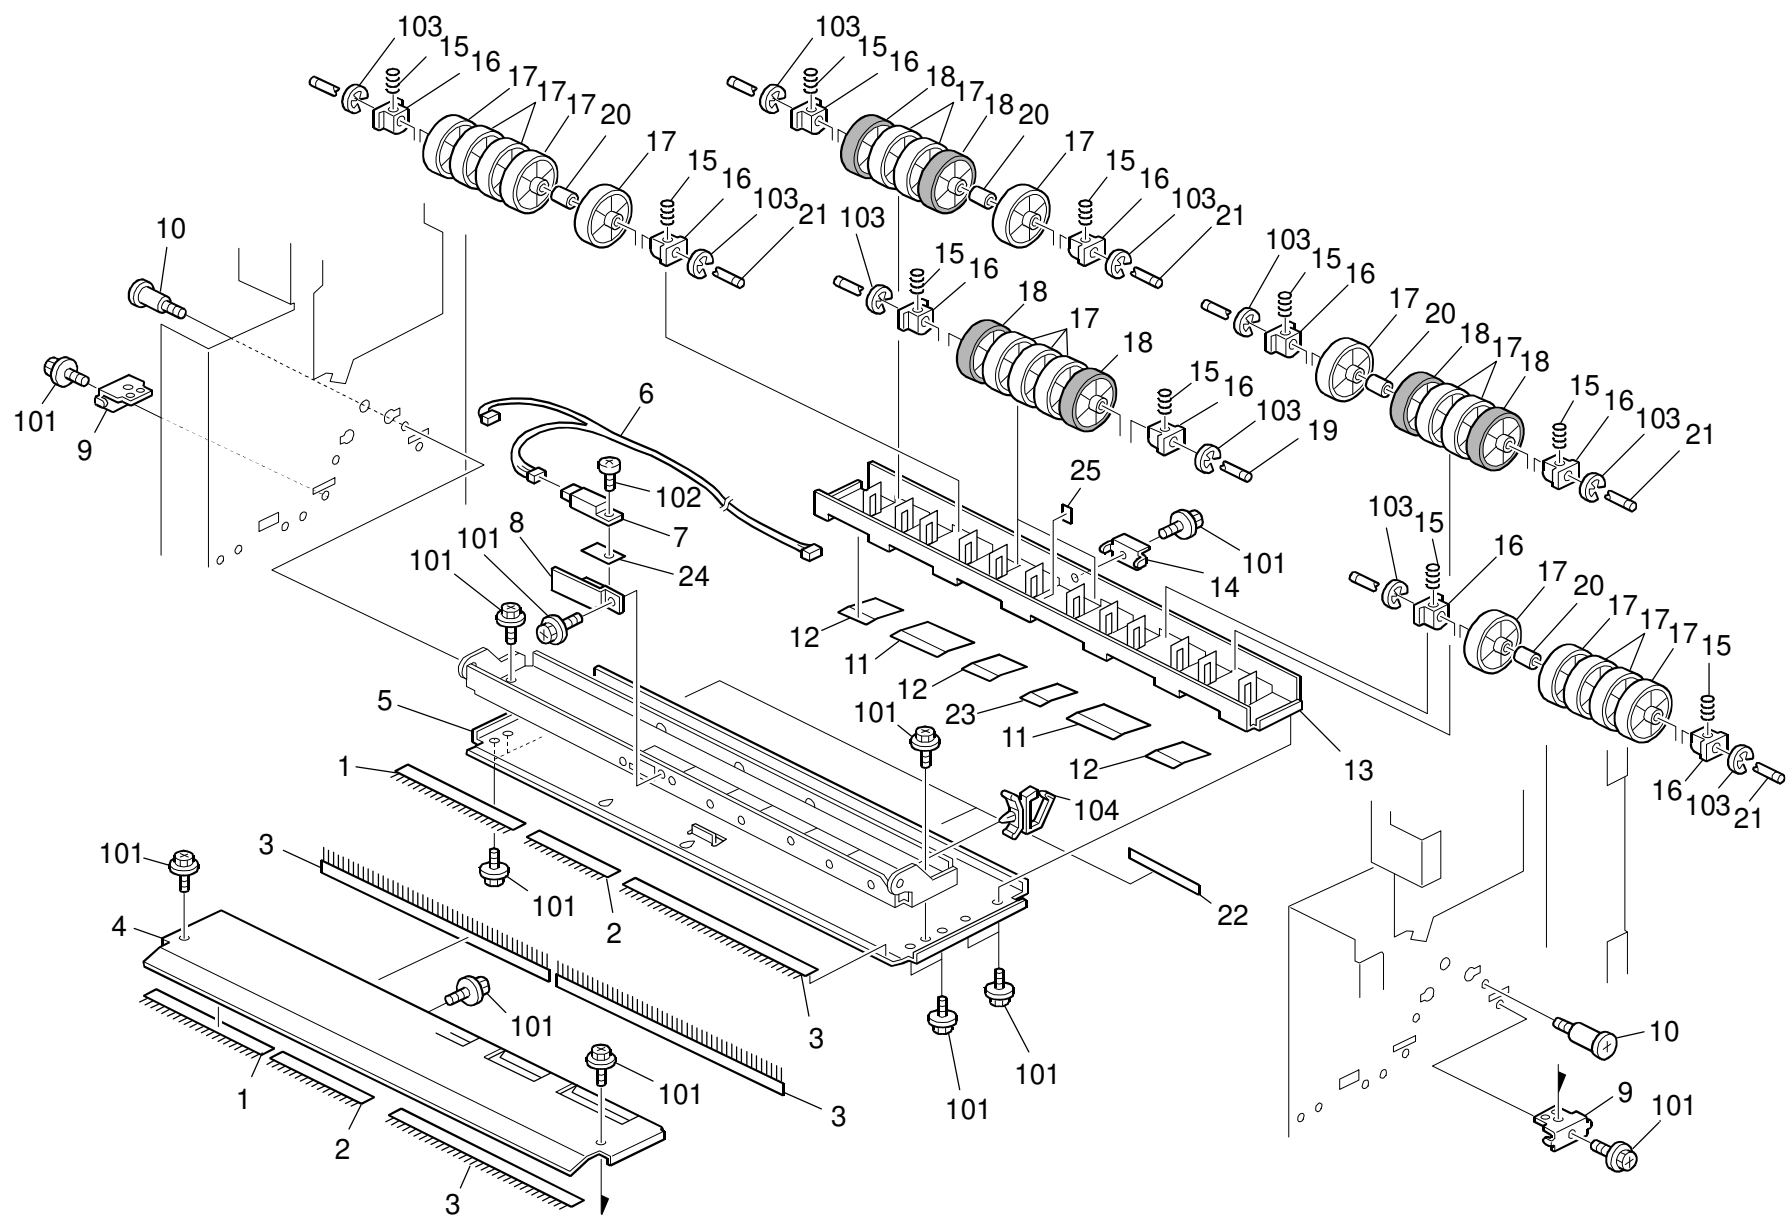


12.Paper Folder 5 (B889)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B889 1231	Discharge Brush:1	2
2	B889 1232	Discharge Brush:2	2
3	AA12 0118	Paper Feed Discharge Brush	4
4	B889 1225	Guide Plate:Lower Rear	1
5	B889 1229	Guide Plate:Upper Rear	1
6	B889 5527	Harness:DC:Roller:Rear:Radiate	1
7	B889 1354	Photointerruptor:Paper Crimp	1
8	B889 1193	Bracket:Photointerruptor:Radiate	1
9	B889 1214	Bracket:Guide Plate	2
10	AA14 3832	Release Spring Holder	2
11	B889 1294	Guide:Exit:2	2
12	B889 1293	Guide:Exit:1	3
13	B889 1230	Bracket:Pressure:Transport:3	1
14	B889 1291	Bracket	1
15	B889 1292	Spring	12
16	AA08 0203	Bushing - 6mm	12
17	B889 1236	Roller:Driven:Exit	22
18	B889 1212	Roller:Driven:Exit:Middle	8
19	B889 1290	Shaft	2
20	5446 2901	Collar - 8mm	4
21	B889 1298	Shaft:Exit:L	4
22	B889 1390	Guide:Exit:Lower	2
23	B889 1367	Guide:Exit:3	1
24	B889 1359	Shielding Plate:Sensor	1
25	B125 4722	Sheet:Side Fence:Small Added MB10	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0353 0060N	Bind Screw - M3x6	
103	0720 0040E	Retaining Ring - M4	
104	1105 0511	Clamp:LWSM-0306	

13.Paper Folder Exit (B889)

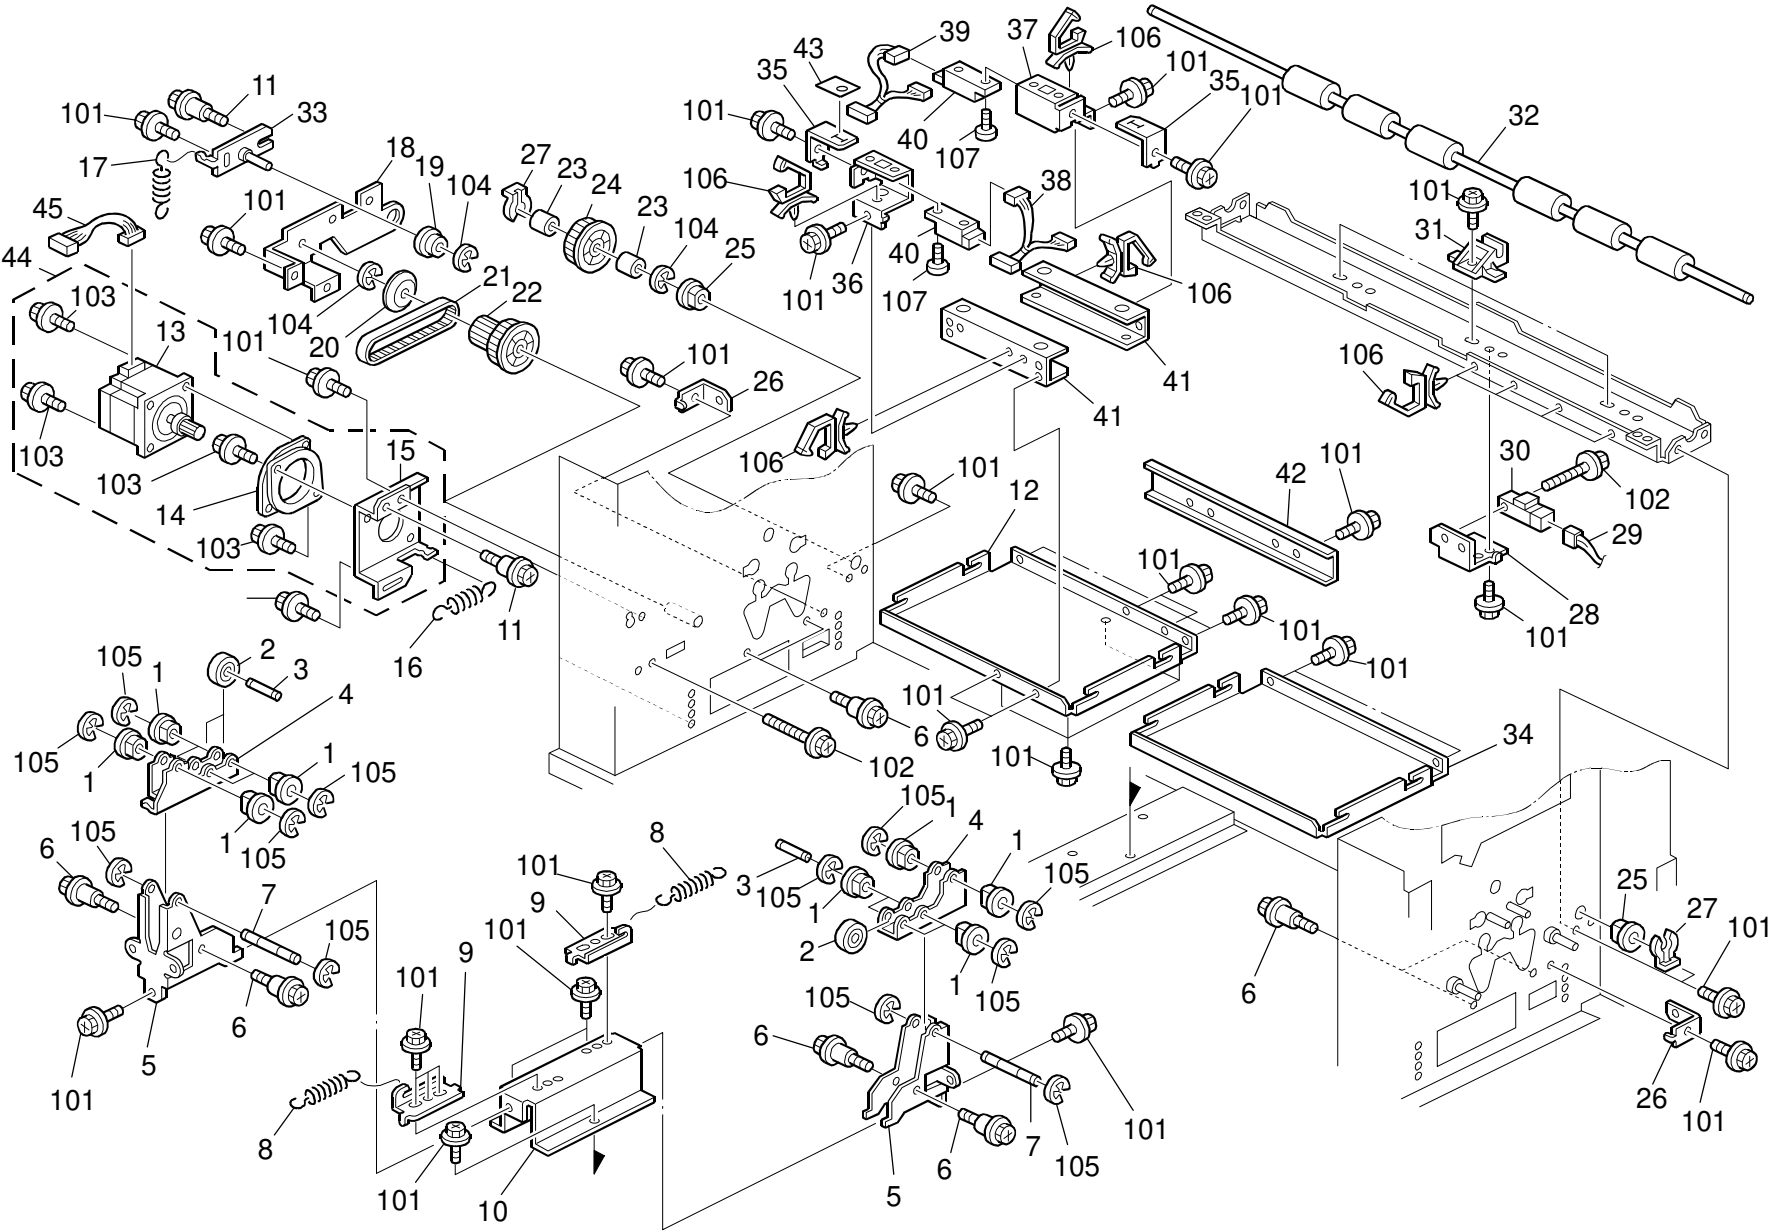


13.Paper Folder Exit (B889)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA08 2101	Bushing - 6x10x6	12
2	B889 1216	Roller:Pressure	4
3	B889 1221	Shaft:Pressure	4
4	B889 1218	Arm:Roller:Middle	2
5	B889 1219	Guide Plate:Arm	2
6	AA14 3542	Screw:M3:DIA4x5.6	6
7	B889 1220	Shaft:Contact Point	2
8	B889 1249	Tension Spring:Roller	2
9	B889 1222	Bracket:Pressure:Middle	2
10	B889 1215	Guide Plate:Arm:2	1
11	AA14 3790	Screw:Contact Point	2
12	B889 1706	Guard:IC	1
13	B890 1286	DC Stepper Motor:Paper Crimp:17.5W	1
	B889 1265	X/O MB9	
14	AA16 1164	Cushion:Stepper Motor	1
15	B889 1275	Bracket:Stepper Motor	1
16	AA06 1006	Spring:Blade:Cleaning	1
17	A257 6429	Pressure Spring	1
18	B889 1281	Guide Plate:Drive	1
	B889 1269	X/O MB2	
19	A257 4650	Tightener Pulley	1
20	A259 1158	Pulley Flange	1
21	B889 1267	Timing Belt:B80S3M294	1
22	B889 1266	Timing Pulley:24T/44T	1
23	5446 2901	Collar - 8mm	2
24	B889 1276	Timing Pulley:33T	1
25	AA08 2104	Bushing - 8x12x7	2
26	B889 1714	Bracket:Cover:PSU	2
27	5215 2621	Snap Ring - M6	1
28	B889 1178	Bracket:Sensor:1	1
29	B889 5529	Harness:DC:Paper Crimp:Exit	1
30	AW01 0091	Photo Reflection Sensor	1
31	A174 3946	Arm Bushing	3
32	B889 1445	Transport Roller:Drive:Exit	1
33	B889 1271	Bracket:Tightener	1

Index No.	Part No.	Description	Q'ty Per Assembly
34	B889 1715	Guard:Power Supply Unit	1
35	B889 1191	Shielding Plate:Lower	2
36	B889 1192	Bracket:Sensor:Lower Front	1
37	B889 1189	Bracket:Sensor:Lower Rear	1
38	B889 5524	Harness:DC:Roller:Front:Photo	1
39	B889 5525	Harness:DC:Roller:Rear:Photo	1
40	B889 1354	Photointerruptor:Paper Crimp	2
41	B889 1190	Bracket:Sensor:Lower:2	2
42	B889 1707	Cover:Power Supply Unit	1
43	B889 1359	Shielding Plate:Sensor	1
44	B890 1274	DC Stepper Motor:Paper Crimp:Ass'y	1
45	B890 5576	Harness:DC:JABARA:Motor:Connecting	1
101	0451 3006N	Tapping Screw - 3x6	
102	0451 3014N	Tapping Screw:3x14	
103	0451 4008N	Tapping Screw:4x8	
104	0720 0060E	Retaining Ring - M6	
105	0720 0040E	Retaining Ring - M4	
106	1105 0511	Clamp:LWSM-0306	
107	0353 0060N	Bind Screw - M3x6	

14. Drive Section (B889)

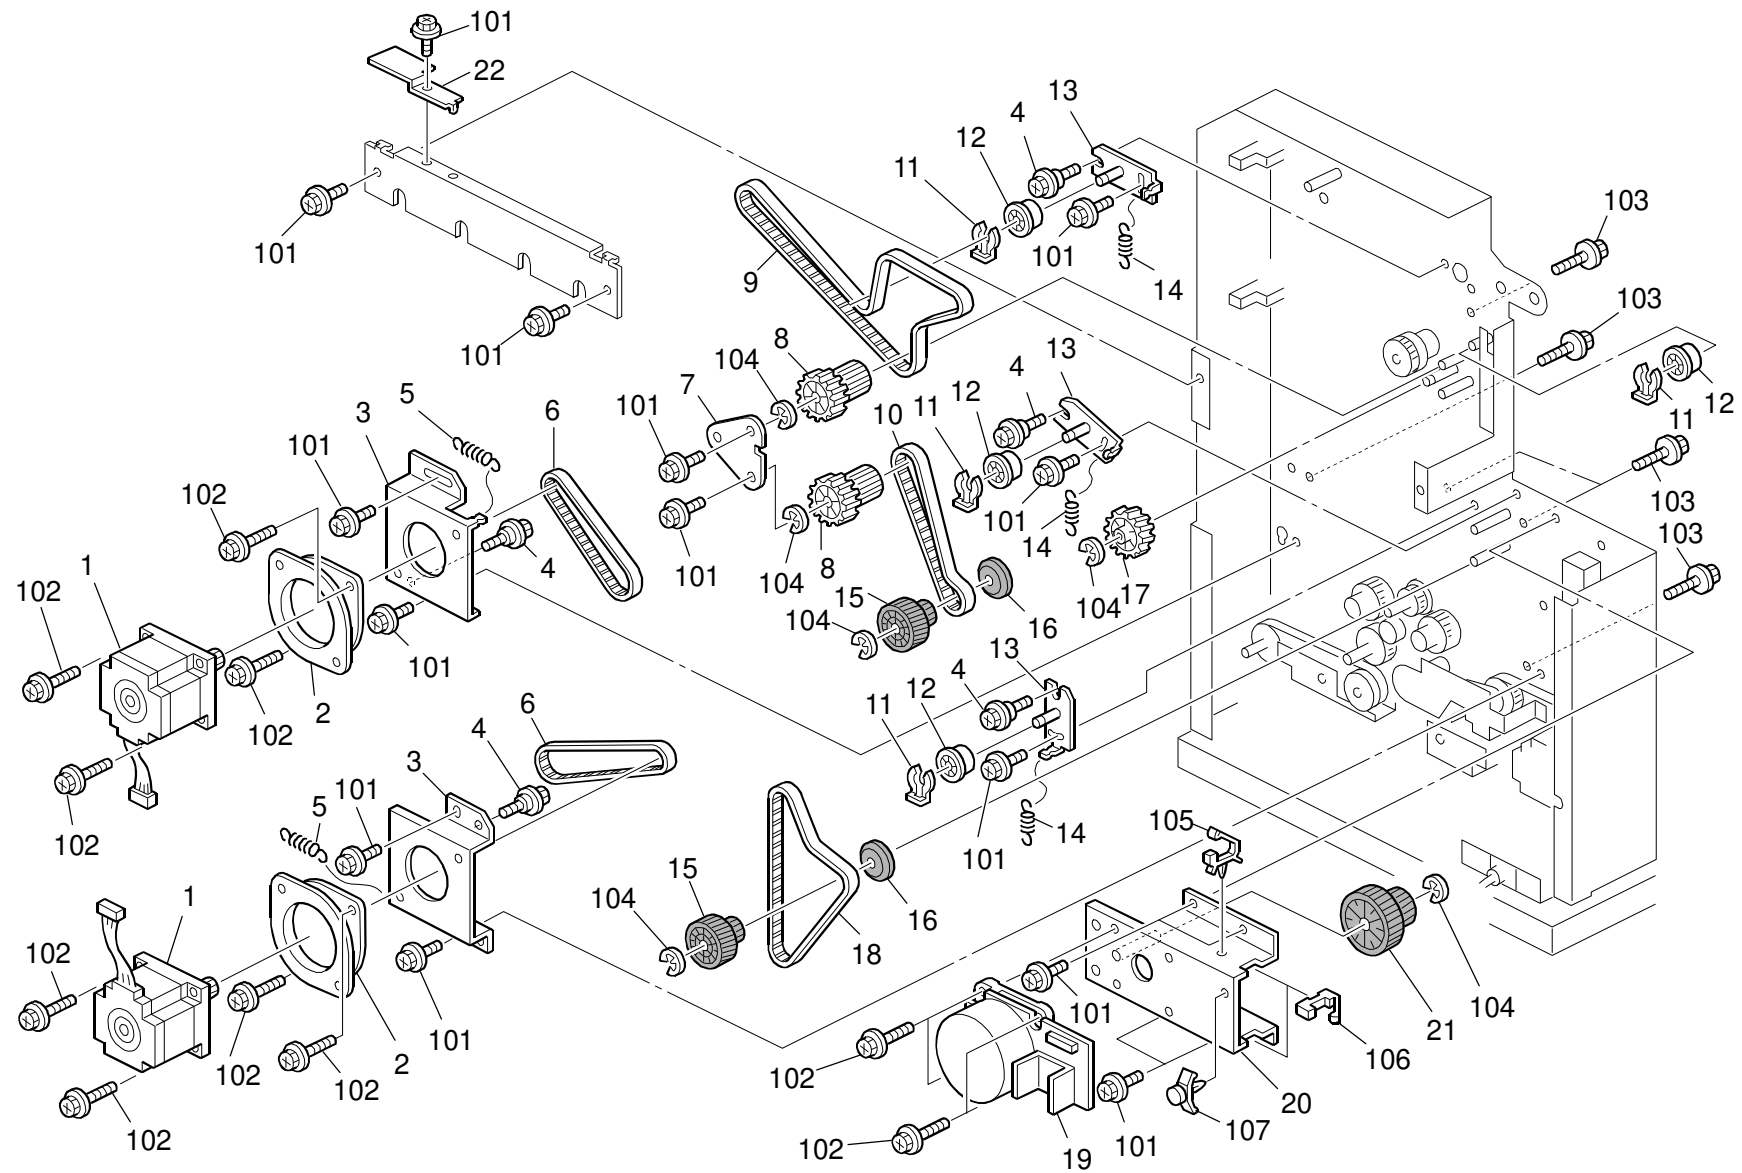


14. Drive Section (B889)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B889 1265	Stepper Motor DC2.3V 6.9W	2
2	AA16 1164	Cushion:Stepper Motor	2
3	B889 1275	Bracket:Stepper Motor	2
4	AA14 3790	Screw:Contact Point	5
5	AA06 1006	Spring:Blade:Cleaning	2
6	B889 1324	Timing Belt:B60S3M285	2
7	B889 1430	Guide Plate:Drive:Upper	1
8	B889 1431	Gear:Timing Pulley:34Z/29T	2
9	B889 1432	Timing Belt:B60S3M771	1
10	B889 1433	Timing Belt:B60S3M492	1
11	5215 2621	Snap Ring - M6	4
12	AB03 0455	Tightener Pulley - 8x20x13	4
13	B889 1427	Bracket:Tightener	3
14	A257 6429	Pressure Spring	3
15	AB01 7674	Gear/pulley - 66Z/20T	2
16	A259 1158	Pulley Flange	2
17	B023 4570	Gear - 31Z	1
18	B889 1424	Timing Belt:B60S3M573	1
19	AX06 0296	Brushless Motor:DC24V24W:Z9	1
20	B889 1421	Bracket:Motor	1
21	AB01 7673	Gear - 40/82Z	1
22	B889 1185	Guard:Cover:Upper	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0451 4008N	Tapping Screw:4x8	
103	0451 3014N	Tapping Screw:3x14	
104	0720 0060E	Retaining Ring - M6	
105	1105 0511	Clamp:LWSM-0306	
106	1105 0522	Clamp:LES-1010	
107	1105 0409	Card Spacer- 6.4mm	

15.Electrical Section (B889)

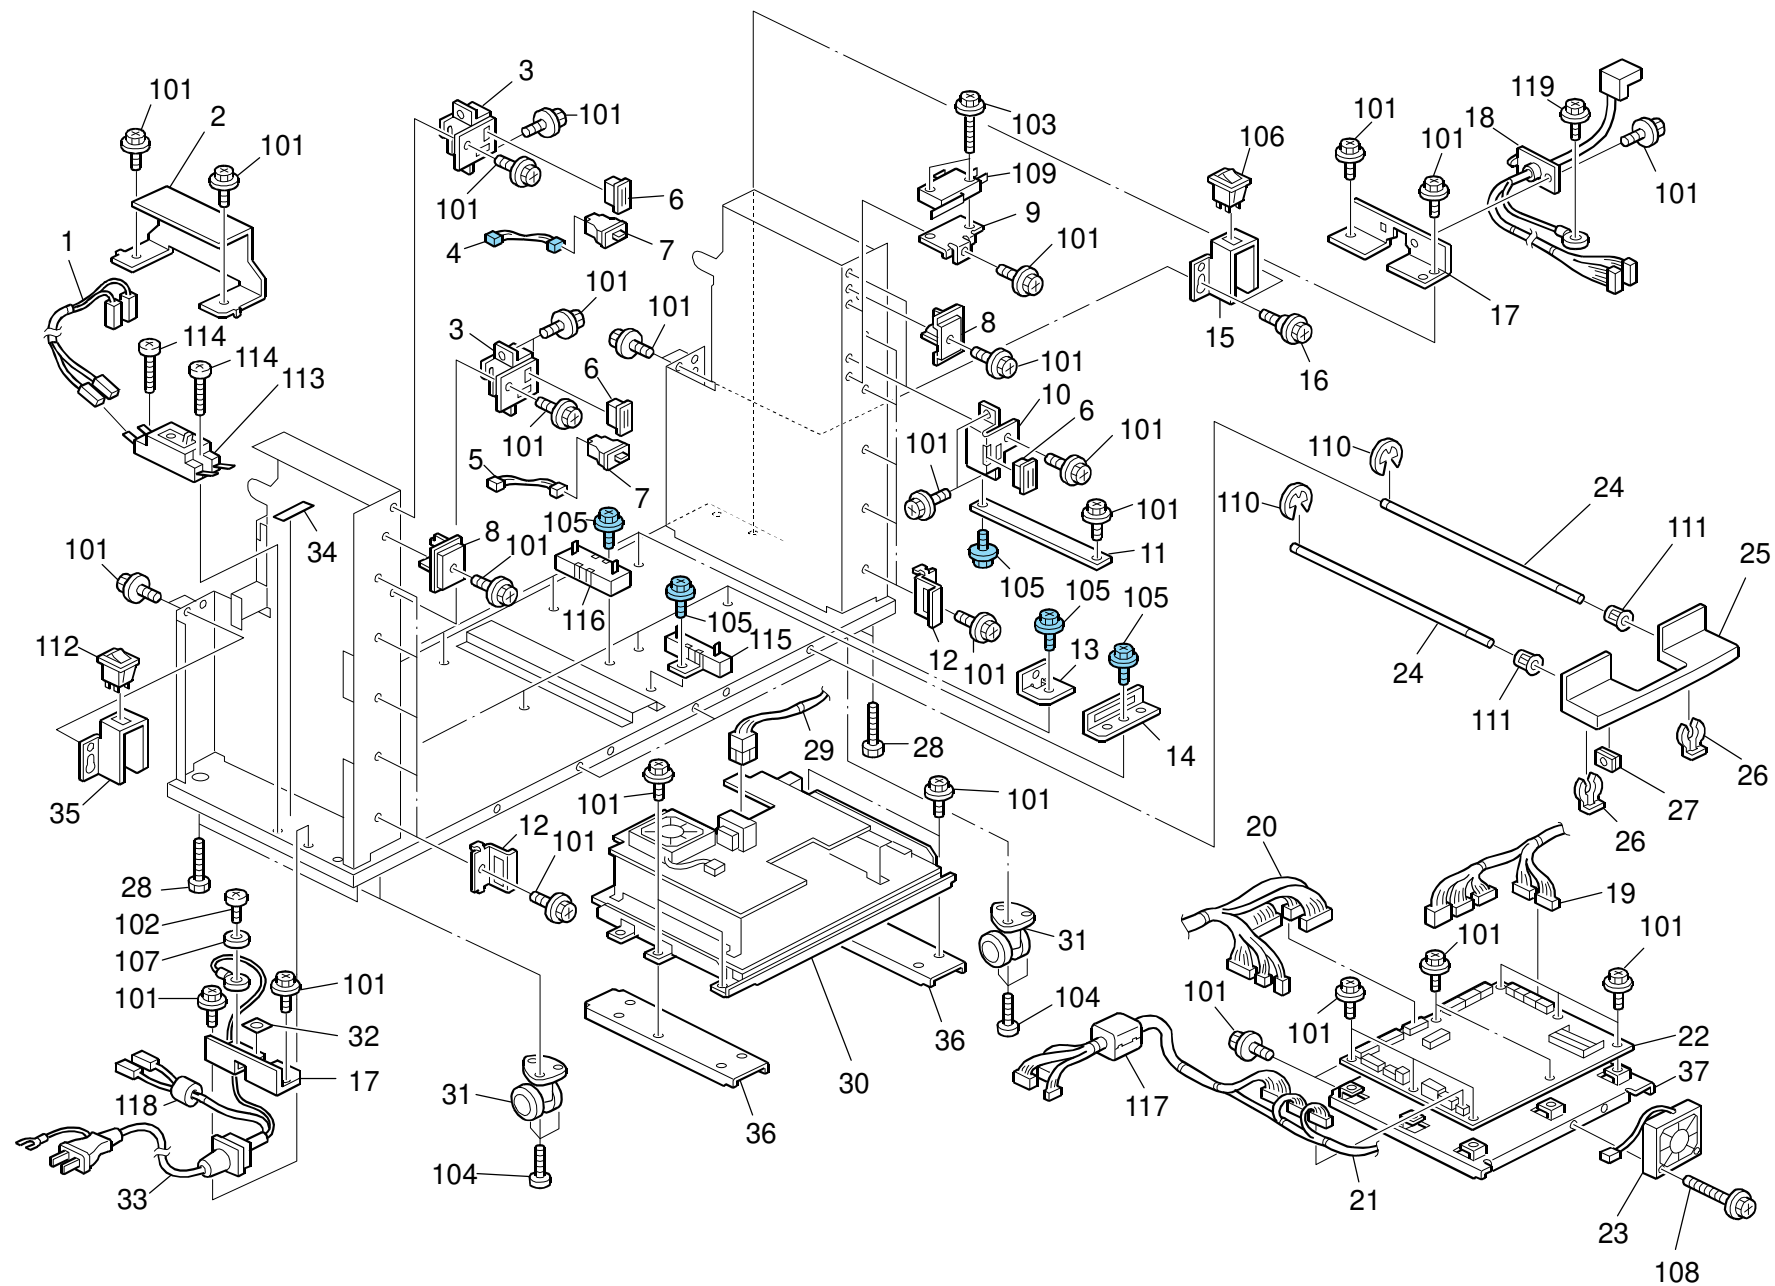


15.Electrical Section (B889)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B889 5502	Harness:AC:1	1
2	B889 1708	Cover:Leak Breaker	1
3	B889 1174	Bracket:Cover:Push Switch	2
4	B889 5552	Harness:DC:Push Switch:1	1
5	B889 5547	Harness:DC:Push Switch	1
6	AG07 0513	Magnet Catch	4
7	G020 5626	Push Switch	2
8	B889 1953	Cover:Upper Rear	2
9	B889 1173	Guide Plate:Micro Switch	2
10	B889 1171	Bracket:Cover:Micro Switch	2
11	A297 1261	Stopper:Cover	2
12	B889 1175	Bracket:Plate:Cover	10
13	B889 1713	Bracket:PSU:Rear	4
14	B889 1712	Bracket:PSU:Front	4
15	B889 1176	Bracket:Main Switch	1
16	AA14 3790	Screw:Contact Point	2
17	B889 1710	Bracket:Power Supply Cord	2
18	B889 5595	Harness:DC:Interface	1
19	B890 5571	Harness:DC:Mechanical Drive Section	1
	B890 5541	X/O MB9	
20	B890 5569	Harness:DC:Sensor	1
	B889 5540	X/O MB9	
21	B890 5568	Harness:DC:Power Source	1
	B889 5544	X/O MB9	
22	B890 5216	PCB:MCU-J:EXP:Ass'y	1
	B889 5210	X/O MB9	
23	GX64 0021	Fan Motor DC24V 1.92W	1
24	B889 1610	Rod:Exit:Lower	6
25	B641 4451	Stopper:End Fence	3
26	5447 2681	Snap Ring	6
27	AG07 0514	Magnet Catch	3
28	AA14 3547	Hexagonal Bolt:M12x80	4
29	B889 5504	Harness:AC	1
	B889 5501	X/O MB9	
30	AZ23 0217	Power Supply Unit - 120V 285W	1

Index No.	Part No.	Description	Q'ty Per Assembly
30	AZ23 0218	Power Supply Unit - 230V 285W	1
31	AH01 2035	Caster - 980N	4
32	AA00 1190	Decal - Ground	1
33	B286 5767	Power Supply Cord:Stopper:120V	1
	B286 5734	X/O MB1	
33	B257 5496	Power Supply Cord:230V	1
	B286 5765	X/O MB10	
	B286 5496	X/O MB1	
34	AA00 1283	Decal - Noise Filter	1
35	B889 1157	Bracket:Switch:Right	1
36	B889 1717	Bracket:PSU	2
37	B889 1711	Bracket:IC:J	1
101	0451 3006N	Tapping Screw - 3x6	
102	0314 0080N	Philips Pan Head Screw - M4x8	
103	0451 3014N	Tapping Screw:3x14	
104	0954 5014N	Screw - M5x14	
105	0454 3006Q	Tapping Screw - M3x6	
106	1204 2533	Switch - AJ76200PZ02	
107	0703 0040N	Spring Washer:DIA4	
108	0451 3030N	Tapping Screw:3x30	
109	1204 2529	Switch - V-5F912DN	
110	0720 0040E	Retaining Ring - M4	
111	1106 0063	Snap Bushing	
112	1204 2634	Rocker Switch - AJ76200B	
113	1107 1192	Fuse:BJS202100F1R	
114	0314 0200N	Pan Head Screw:M4x20	
115	1600 2048	Resistor:5.1 Ω : $\pm$ 5%:20W	
116	1600 2049	Resistor:91 Ω : $\pm$ 5%:30W	
117	1607 1574	Ferrite Core:RFC-H13	
118	1607 0534	Ferrite Core:ZCAT3035-1330	
119	0451 4008N	Tapping Screw:4x8	

16.Decal and Documents (B889)

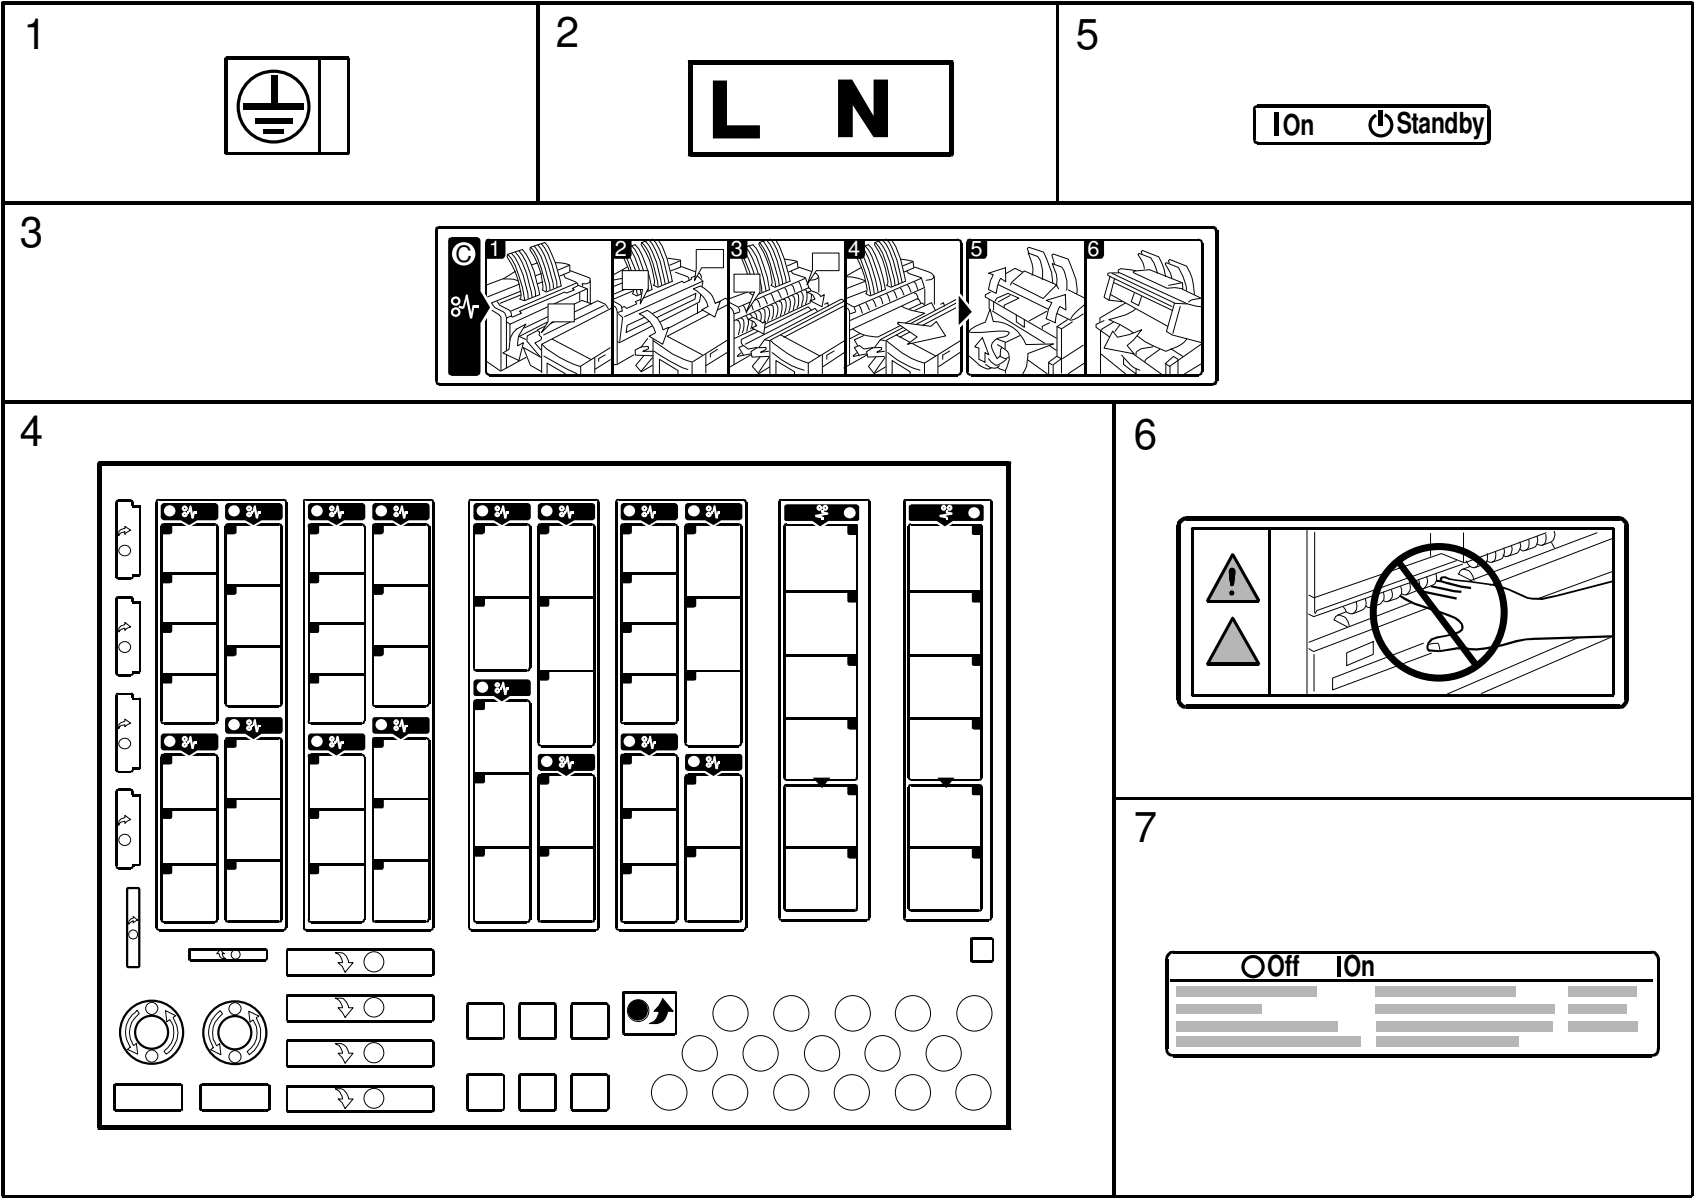

16.Decal and Documents (B889)



Index No.	Part No.	Description	Q'ty Per Assembly
1	AA00 1190	Decal - Ground	1
2	AA00 1283	Decal - Noise Filter	1
3	B889 1680	Decal:Operate	1
4	B889 1678	Decal:Paper Jam:1	1
	B889 1681	X/O MB9	
5	B889 1685	Decal:Switch	1
6	B889 1686	Decal:Caution:Exit Roller	1
7	B889 1687	Decal:Dehumidifier:Heater:Switch	1

Index No.	Part No.	Description	Q'ty Per Assembly

Parts Index

Parts Index

Part No.	Description	Page and Index No.
B889 1143	Bracket:Pressure:Transport:Lower	13 - 28
B889 1149	O/O MB7	13 - 28
B889 1156	Cover:Heater:Front	23 - 12
B889 1157	Bracket:Switch:Right	31 - 35
B889 1158	Inner Cover:Rear	15 - 21
B889 1160	Guide Plate:Entrance:Upper	9 - 20
B889 1161	Bracket:Pressure:Transport	9 - 21
B889 1161	Bracket:Pressure:Transport	7 - 5
B889 1162	Guide Plate:Transport:Rear:2	13 - 29
B889 1163	Guide Plate:Transport:Rear:3	13 - 15
B889 1164	Guide Plate:Entrance:Lower	9 - 18
B889 1165	Guide Plate:Exit:Lower	11 - 3
B889 1166	Guide Plate:Transport:Front Upper	13 - 27
B889 1167	Guide Plate:Transport:Front Upper:2	13 - 14
B889 1168	Guide Plate:Transport:Rear:1	11 - 2
B889 1169	Bracket:Guide Plate	13 - 11
B889 1170	Bracket:Magnet Catch	9 - 17
B889 1170	Bracket:Magnet Catch	13 - 12
B889 1171	Bracket:Cover:Micro Switch	31 - 10
B889 1173	Guide Plate:Micro Switch	31 - 9
B889 1174	Bracket:Cover:Push Switch	31 - 3
B889 1175	Bracket:Plate:Cover	31 - 12
B889 1175	Bracket:Plate:Cover	5 - 5
B889 1176	Bracket:Main Switch	31 - 15
B889 1177	Guide:Exchange Powl	9 - 19
B889 1178	Bracket:Sensor:1	11 - 6
B889 1178	Bracket:Sensor:1	27 - 28
B889 1179	Bracket:Sensor:2	13 - 1
B889 1180	Bracket:Exchange Powl:Right	9 - 10
B889 1181	Bracket:Exchange Powl:Left	9 - 9
B889 1182	Guide:Entrance:Upper	3 - 45
B889 1183	Guide:Entrance:Upper:2	3 - 41
B889 1184	Guide:Exit:Upper	11 - 15
B889 1185	Guard:Cover:Upper	29 - 22
B889 1186	Grip:Guide Plate	13 - 21

Part No.	Description	Page and Index No.
B889 1188	Grip:Guide Plate:Upper	9 - 29
B889 1189	Bracket:Sensor:Lower Rear	27 - 37
B889 1190	Bracket:Sensor:Lower:2	27 - 41
B889 1191	Shielding Plate:Lower	27 - 35
B889 1192	Bracket:Sensor:Lower Front	27 - 36
B889 1193	Bracket:Photointerruptor:Radiate	23 - 3
B889 1193	Bracket:Photointerruptor:Radiate	25 - 8
B889 1195	Guard:Guide Plate	13 - 16
B889 1196	Guide Plae:Paper Crimp:Upper Front:2	23 - 5
B889 1197	Stay:Paper Crimp:Open and Close:Upper Front:2	23 - 4
B889 1198	Bracke:Guide Plate:Paper Crimp:Upper Front	23 - 9
B889 1199	Pawl:Drive	9 - 6
B889 1212	Roller:Driven:Exit:Middle	25 - 18
B889 1213	Guide Plate:Lower Middle:2	19 - 25
B889 1214	Bracket:Guide Plate	15 - 20
B889 1214	Bracket:Guide Plate	25 - 9
B889 1214	Bracket:Guide Plate	11 - 19
B889 1215	Guide Plate:Arm:2	27 - 10
B889 1216	Roller:Pressure	27 - 2
B889 1218	Arm:Roller:Middle	27 - 4
B889 1219	Guide Plate:Arm	27 - 5
B889 1220	Shaft:Contact Point	27 - 7
B889 1221	Shaft:Pressure	27 - 3
B889 1222	Bracket:Pressure:Middle	27 - 9
B889 1223	Guide Plate:Lower Front	23 - 10
B889 1224	Guide Plate:Lower Middle	19 - 22
B889 1225	Guide Plate:Lower Rear	25 - 4
B889 1229	Guide Plate:Upper Rear	25 - 5
B889 1230	Bracket:Pressure:Transport:3	25 - 13
B889 1231	Discharge Brush:1	25 - 1
B889 1231	Discharge Brush:1	23 - 6
B889 1232	Discharge Brush:2	25 - 2
B889 1232	Discharge Brush:2	23 - 7
B889 1236	Roller:Driven:Exit	25 - 17
B889 1238	Bracket:Sensor	15 - 3

Part No.	Description	Page and Index No.
B889 1239	Bracket:Bushing	15 - 4
B889 1240	Bracket:Pressure:Transport:2	15 - 19
B889 1241	Bracket:Guide Plate:1	15 - 2
B889 1242	Bracket:Guide Plate:2	15 - 1
B889 1243	Guide Plate:Transport:Lower	15 - 8
B889 1249	Tension Spring:Roller	27 - 8
B889 1250	Arm:Roller:Lower:Right Front	19 - 4
B889 1250	Arm:Roller:Lower:Right Front	21 - 3
B889 1252	Timing Pulley:34T Added MB9	19 - 29
B889 1253	Timing Belt:B80DS3M444	21 - 14
B889 1255	Guide Plate:Idler	21 - 21
B889 1260	Timing Pulley:44T	19 - 10
B889 1261	Timing Belt:B120S3M273	19 - 11
B889 1262	Bracket:Tightener:Left and Right	19 - 7
B889 1265	X/O MB9	27 - 13
B889 1265	Stepper Motor DC2.3V 6.9W	29 - 1
B889 1266	Timing Pulley:24T/44T	27 - 22
B889 1267	Timing Belt:B80S3M294	27 - 21
B889 1268	Timing Belt:B120S3M318	19 - 13
B889 1269	X/O MB2	27 - 18
B889 1271	Bracket:Tightener	27 - 33
B889 1275	Bracket:Stepper Motor	27 - 15
B889 1275	Bracket:Stepper Motor	29 - 3
B889 1276	Timing Pulley:33T	27 - 24
B889 1277	Timing Belt:B60S3M360	19 - 12
B889 1280	Roller:Paper Crimp	19 - 16
B889 1281	Guide Plate:Drive	27 - 18
B889 1289	Roller:Paper Crimp:80	19 - 17
B889 1290	Shaft	25 - 19
B889 1291	Bracket	25 - 14
B889 1292	Spring	25 - 15
B889 1293	Guide:Exit:1	25 - 12
B889 1294	Guide:Exit:2	25 - 11
B889 1295	Bracket:Arm:1	19 - 14
B889 1295	Bracket:Arm:1	21 - 10

Part No.	Description	Page and Index No.
B889 1296	Arm:Roller:Lower:Left Front	19 - 3
B889 1296	Arm:Roller:Lower:Left Front	21 - 4
B889 1298	Shaft:Exit:L	25 - 21
B889 1299	Guide:Paper Crimp:Lower Added MB9	23 - 15
B889 1309	Guide:Paper Crimp	17 - 8
B889 1320	Shaft:Drive:Guide	17 - 10
B889 1321	Torque Limiter:Guide	17 - 12
B889 1322	Timing Pulley:28T	17 - 14
B889 1323	Gear:Z26	17 - 9
B889 1324	Timing Belt:B60S3M285	29 - 6
B889 1325	Flange	17 - 13
B889 1328	Bracket:Sensor:1	17 - 16
B889 1329	Bracket:Sensor:2	17 - 17
B889 1330	X/O MB9	17 - 16
B889 1331	X/O MB9	17 - 17
B889 1332	Bracket:Guide:1	17 - 11
B889 1335	Bracket:Guide:2	17 - 15
B889 1337	Arm:Guide:Left	17 - 4
B889 1338	Arm:Guide:Right	17 - 5
B889 1339	Gear:Z251	17 - 3
B889 1340	X/O MB9	17 - 8
B889 1341	Spacer:Guide:Left	17 - 7
B889 1342	Spacer:Guide:Right	17 - 6
B889 1343	Cushion:Guide	3 - 29
B889 1343	Cushion:Guide Deleted MB9	17 - 19
B889 1344	Guide Plate:Paper Crimp:Lower Middle:3	19 - 24
B889 1345	Guide Plate:Paper Crimp:Lower Middle:4	19 - 23
B889 1346	Stay:Paper Crimp:Lower Middle:2	19 - 26
B889 1347	Guide Plate:Guide Plate:Middle	19 - 20
B889 1348	Collar:Roller	19 - 27
B889 1352	Spacer:Guide Plate:Paper Crimp	19 - 28
B889 1354	Photointerruptor:Paper Crimp	23 - 1
B889 1354	Photointerruptor:Paper Crimp	25 - 7
B889 1354	Photointerruptor:Paper Crimp	27 - 40
B889 1355	Stopper:Guide	21 - 24

Part No.	Description	Page and Index No.
B889 1356	Roller:Driven Added MB4	15 - 23
B889 1359	Shielding Plate:Sensor	27 - 43
B889 1359	Shielding Plate:Sensor	25 - 24
B889 1359	Shielding Plate:Sensor	23 - 14
B889 1367	Guide:Exit:3	25 - 23
B889 1370	Arm:Pressure:Roller:1	21 - 2
B889 1370	Arm:Pressure:Roller:1	19 - 1
B889 1371	Arm:Pressure:Roller:2	19 - 2
B889 1371	Arm:Pressure:Roller:2	21 - 1
B889 1372	Timing Pulley:Idler:Lower	21 - 16
B889 1373	Timing Belt:60S3M198	21 - 19
B889 1374	Timing Pulley:Roller:Upper	19 - 19
B889 1375	Timing Pulley:Roller:Lower	21 - 17
B889 1376	Stopper:Guide:Right	21 - 13
B889 1377	Timing Pulley:Idler:Upper	21 - 20
B889 1378	Bracket:Tightener:Roller:Upper:Ass'y	21 - 23
B889 1381	Bracket:Tightener:Roller:Lower:Ass'y	21 - 7
B889 1384	Bracket:Tightener:Roller:Middle Lower:Peen	21 - 11
B889 1387	Tension Spring:Pressure:Roller	19 - 15
B889 1387	Tension Spring:Pressure:Roller	21 - 15
B889 1390	Guide:Exit:Lower	25 - 22
B889 1391	Stopper:Guide:Upper	15 - 22
B889 1398	Bracket:Sensor:Connecting Corrected MB5	7 - 36
B889 1399	Bracket:Cover:Coupling Added MB6	5 - 26
B889 1421	Bracket:Motor	29 - 20
B889 1424	Timing Belt:B60S3M573	29 - 18
B889 1427	Bracket:Tightener	29 - 13
B889 1430	Guide Plate:Drive:Upper	29 - 7
B889 1431	Gear:Timing Pulley:34Z/29T	29 - 8
B889 1431	Gear:Timing Pulley:34Z/29T	7 - 11
B889 1432	Timing Belt:B60S3M771	29 - 9
B889 1433	Timing Belt:B60S3M492	29 - 10
B889 1435	Spacer:21.2	15 - 12
B889 1435	Spacer:21.2	9 - 12
B889 1435	Spacer:21.2	11 - 20

Part No.	Description	Page and Index No.
B889 1435	Spacer:21.2	13 - 5
B889 1436	Compression Spring:Middle	15 - 15
B889 1440	Transport Roller:Drive	11 - 8
B889 1440	Transport Roller:Drive	9 - 2
B889 1440	Transport Roller:Drive	7 - 38
B889 1440	Transport Roller:Drive	15 - 9
B889 1440	Transport Roller:Drive	13 - 8
B889 1445	Transport Roller:Drive:Exit	27 - 32
B889 1446	Guide:Exit:Upper Added MB9	9 - 32
B889 1450	Sheet:Block Light	13 - 34
B889 1451	Guard:Cover:Connecting	3 - 42
B889 1452	Guide:Entrance:Lower	3 - 12
B889 1453	Seal:Entrance:Lower	3 - 30
B889 1519	Guide Plate:Connecting:Lower	7 - 1
B889 1520	O/O MB7	7 - 1
B889 1521	Bracket:Guide Plate	7 - 2
B889 1522	Guide Plate:Connecting:Upper	7 - 4
B889 1524	Stopper:Joint Unit:Right Added MB9	7 - 46
B889 1525	O/O MB7	7 - 26
B889 1530	O/O MB7	7 - 27
B889 1532	Bracket:Contact Point:Right	7 - 31
B889 1533	Bracket:Contact Point:Left	7 - 30
B889 1536	Stopper:Joint Unit	7 - 39
B889 1537	O/O MB7	3 - 25
B889 1538	O/O MB7	7 - 28
B889 1540	Lever:Lock	7 - 13
B889 1541	Shaft:Lever	7 - 14
B889 1542	Lever:Release:Connecting	7 - 17
B889 1549	Cover:Connecting:Lower	7 - 28
B889 1550	Cover:Connecting:Upper	3 - 25
B889 1551	Drum Stay:Soft Landing	7 - 23
B889 1554	Cover:Connecting:Right Lower	5 - 8
B889 1558	Bracket:Safety Switch	7 - 29
B889 1559	Cover:Connecting:Left Lower	5 - 6
B889 1562	Shaft:Right	7 - 43

Part No.	Description	Page and Index No.
B889 1563	Oil Damper	7 - 24
B889 1564	Stopper:Shaft	7 - 42
B889 1565	Bracket:Connecting:Left:Ass'y	7 - 26
B889 1568	Bracket:Connecting:Right:Ass'y	7 - 27
B889 1581	Guard:Magnetic Clutch	7 - 44
B889 1582	Bracket:Cover:Connecting:Lower	7 - 3
B889 1584	Bracket:Guide:Entrance	3 - 43
B889 1610	Rod:Exit:Lower	31 - 24
B889 1652	Bracket:Coupling:Upper	3 - 2
B889 1656	Bracket:Coupling:Main	3 - 7
B889 1657	Bracket:Coupling	3 - 3
B889 1658	Shaft:Coupling	3 - 4
B889 1659	Bracket:Coupling:Fix	3 - 8
B889 1661	Bracket:2:Coupling:Fix	3 - 9
B889 1670	Bracket:Interface	3 - 11
B889 1678	Decal:Paper Jam:1	5 - 18
B889 1678	Decal:Paper Jam:1	3 - 24
B889 1678	Decal:Paper Jam:1	13 - 22
B889 1678	Decal:Paper Jam:1	11 - 14
B889 1678	Decal:Paper Jam:1	33 - 4
B889 1678	Decal:Paper Jam:1	9 - 30
B889 1680	Decal:Operate	3 - 18
B889 1680	Decal:Operate	33 - 3
B889 1681	X/O MB9	5 - 18
B889 1681	X/O MB9	33 - 4
B889 1681	X/O MB9	9 - 30
B889 1681	X/O MB9	13 - 22
B889 1681	X/O MB9	11 - 14
B889 1681	X/O MB9	3 - 24
B889 1685	Decal:Switch	3 - 16
B889 1685	Decal:Switch	33 - 5
B889 1686	Decal:Caution:Exit Roller	5 - 19
B889 1686	Decal:Caution:Exit Roller	33 - 6
B889 1687	Decal:Dehumidifier:Heater:Switch	33 - 7
B889 1687	Decal:Dehumidifier:Heater:Switch	3 - 36

Part No.	Description	Page and Index No.
B889 1690	Bracket:Fix:Cover:Left	5 - 22
B889 1691	Bracket:Fix:Cover:Right	5 - 23
B889 1706	Guard:IC	27 - 12
B889 1707	Cover:Power Supply Unit	27 - 42
B889 1708	Cover:Leak Breaker	31 - 2
B889 1710	Bracket:Power Supply Cord	31 - 17
B889 1711	Bracket:IC:J	31 - 37
B889 1712	Bracket:PSU:Front	31 - 14
B889 1713	Bracket:PSU:Rear	31 - 13
B889 1714	Bracket:Cover:PSU	27 - 26
B889 1715	Guard:Power Supply Unit	27 - 34
B889 1717	Bracket:PSU	31 - 36
B889 1903	Cap:Cover	11 - 16
B889 1903	Cap:Cover	5 - 1
B889 1904	Bracket:Contact Point	11 - 11
B889 1905	Cover:Open and Close	5 - 2
B889 1905	Cover:Open and Close	11 - 17
B889 1906	Grip:Cover:Open and Close	3 - 32
B889 1906	Grip:Cover:Open and Close	11 - 13
B889 1909	Cover:Grip	5 - 3
B889 1910	Bracket:Fix:Cover	5 - 4
B889 1912	Shaft:Contact Point	11 - 12
B889 1914	Inner Cover:Cover:Open and Close	5 - 24
B889 1918	X/O MB9	3 - 19
B889 1921	X/O MB8	3 - 19
B889 1922	X/O MB8	5 - 7
B889 1923	X/O MB9	5 - 7
B889 1932	Cover:Connecting:Right Sideways	3 - 23
B889 1933	Lever:Connecting	7 - 18
B889 1934	Cover:Connecting:Left Sideways	3 - 22
B889 1941	Cover:Upper	3 - 28
B889 1953	Cover:Upper Rear	31 - 8
B889 1954	Cover:Left and Right:Lower	3 - 15
B889 1955	Cover:Left:Upper Lower	3 - 14
B889 1956	Cover:Left Middle	3 - 17

Part No.	Description	Page and Index No.
B889 1957	Cover:Left and Right:Upper	3 - 13
B889 1963	Cover:Right Middle	3 - 35
B889 1964	Cover:Misfeed Removal	3 - 33
B889 1965	Receive Plate:Magnet Catch	3 - 31
B889 1966	Film:Cover:Open and Close:Left and Right	11 - 27
B889 1975	Film:Small	3 - 26
B889 1976	Film:Large	3 - 27
B889 1977	Copy Tray:Rear	3 - 6
B889 1978	Guide:Exit:Upper	3 - 1
B889 1979	Guard:Inner Cover	5 - 14
B889 1980	Cover:Front Upper:2	5 - 20
B889 1981	Holder:Film	3 - 44
B889 1982	Wire:Stopper:Guide Plate Added MB9	13 - 35
B889 5210	X/O MB9	31 - 22
B889 5501	X/O MB9	31 - 29
B889 5502	Harness:AC:1	31 - 1
B889 5503	Harness:AC:Dehumidifier:Heater	23 - 13
B889 5504	Harness:AC	31 - 29
B889 5515	Harness:DC:Exhaust:Change	11 - 4
B889 5524	Harness:DC:Roller:Front:Photo	27 - 38
B889 5525	Harness:DC:Roller:Rear:Photo	27 - 39
B889 5526	Harness:DC:Roller:Front:Radiate	23 - 2
B889 5527	Harness:DC:Roller:Rear:Radiate	25 - 6
B889 5529	Harness:DC:Paper Crimp:Exit	27 - 29
B889 5540	X/O MB9	31 - 20
B889 5542	Harness:DC:Paper Crimp	13 - 2
B889 5543	Harness:DC:Paper Crimp:Entrance	15 - 7
B889 5544	X/O MB9	31 - 21
B889 5547	Harness:DC:Push Switch	5 - 13
B889 5547	Harness:DC:Push Switch	31 - 5
B889 5547	Harness:DC:Push Switch	13 - 17
B889 5549	Harness:DC:Entrance Sensor	7 - 34
B889 5552	Harness:DC:Push Switch:1	31 - 4
B889 5553	Harness:DC:Push Switch:2	5 - 12
B889 5558	X/O MB9	7 - 20

Part No.	Description	Page and Index No.
B889 5577	Harness:DC:Safety Switch:Short Circuit: Connecting	7 - 20
B889 5591	Harness:DC:Interface	3 - 10
B889 5595	Harness:DC:Interface	31 - 18
B889 7504	X/O MB10	3 - 40
B889 8504	Operating Instructions (NA)	3 - 40

Part No.	Description	Page and Index No.
A174 3946	Arm Bushing	13 - 4
A174 3946	Arm Bushing	11 - 7
A174 3946	Arm Bushing	9 - 1
A174 3946	Arm Bushing	7 - 37
A174 3946	Arm Bushing	27 - 31
A174 4387	X/O MB9	9 - 6
A174 4387	Gate Pawl Arm	9 - 4
A184 1748	X/O MB3	7 - 16
A228 1100	Idler Pulley Z20	21 - 12
A257 4632	Timing Pulley	15 - 13
A257 4632	Timing Pulley	13 - 6
A257 4632	Timing Pulley	11 - 21
A257 4632	Timing Pulley	9 - 13
A257 4650	Tightener Pulley	27 - 19
A257 4650	Tightener Pulley	19 - 8
A257 6429	Pressure Spring	27 - 17
A257 6429	Pressure Spring	29 - 14
A257 6429	Pressure Spring	19 - 9
A259 1158	Pulley Flange	27 - 20
A259 1158	Pulley Flange	29 - 16
A297 1261	Stopper:Cover	31 - 11
B010 1359	Operating Instructions Holder	3 - 38
B010 4458	Gate Pawl Plate	11 - 1
B010 4469	Rear Guide	3 - 39
B023 4570	Gear - 31Z	7 - 33
B023 4570	Gear - 31Z	29 - 17
B104 1302	Left Hinge	5 - 11
B104 1303	Hinge Shaft	3 - 34
B104 2875	Middle Transport Roller Bushing	15 - 5
B125 3872	Cover:Transfer Corona:Lower	5 - 21
B125 4722	Sheet:Side Fence:Small Added MB10	25 - 25
B125 4751	Shaft:Driven	13 - 26
B125 4751	Shaft:Driven	15 - 18
B125 4751	Shaft:Driven	7 - 9
B125 4751	Shaft:Driven	9 - 25

Part No.	Description	Page and Index No.
B125 4752	Roller:Driven	9 - 24
B125 4752	Roller:Driven	13 - 25
B125 4752	Roller:Driven	7 - 8
B125 4752	Roller:Driven	15 - 17
B125 4817	Sheet:Magnet Catch	11 - 25
B125 5643	Ground Wire:Scanner Unit:3	11 - 10
B125 5683	Ground Wire:Pressure Plate	11 - 9
B132 1226	Holder:Stand	3 - 5
B188 4471	Holder:Copy Tray:Rear	5 - 9
B257 4354	Spacer:Fusing Entrance Guide Plate	13 - 30
B257 5496	Power Supply Cord:230V	31 - 33
B275 1670	Guard Burring	13 - 19
B286 5496	X/O MB1	31 - 33
B286 5734	X/O MB1	31 - 33
B286 5765	X/O MB10	31 - 33
B286 5767	Power Supply Cord:Stopper:120V	31 - 33
B352 3170	Spacer Added MB9	19 - 30
B352 3170	Spacer	21 - 18
B624 3046	DC Solenoid Cushion	17 - 20
B641 4451	Stopper:End Fence	31 - 25
B830 1135	Screw	7 - 40
B830 1135	Screw	3 - 20
B834 3214	Gear - 30Z	7 - 21
B851 1122	Screw:Round Point:M4x7	9 - 31
B890 1274	DC Stepper Motor:Paper Crimp:Ass'y	27 - 44
B890 1286	DC Stepper Motor:Paper Crimp:17.5W	27 - 13
B890 1918	Cover:Front Lower:BEL:Ass'y	3 - 19
B890 1923	Cover:Front Upper:BEL:Ass'y	5 - 7
B890 5216	PCB:MCU-J:EXP:Ass'y	31 - 22
B890 5541	X/O MB9	31 - 19
B890 5568	Harness:DC:Power Source	31 - 21
B890 5569	Harness:DC:Sensor	31 - 20
B890 5571	Harness:DC:Mechanical Drive Section	31 - 19
B890 5576	Harness:DC:JABARA:Motor:Connecting	27 - 45
D046 2787	Cover:Side Plate Added MB9	5 - 25

Part No.	Description	Page and Index No.
G020 5626	Push Switch	13 - 18
G020 5626	Push Switch	5 - 15
G020 5626	Push Switch	31 - 7
H072 2207	Guard	13 - 20
H072 2207	Guard	9 - 27
H085 2140	Gear - Oil Damper : 2.0	7 - 22

Part No.	Description	Page and Index No.
AA00 1190	Decal - Ground	33 - 1
AA00 1190	Decal - Ground	31 - 32
AA00 1283	Decal - Noise Filter	31 - 34
AA00 1283	Decal - Noise Filter	33 - 2
AA06 0842	Tension Spring	7 - 16
AA06 1006	Spring:Blade:Cleaning	29 - 5
AA06 1006	Spring:Blade:Cleaning	27 - 16
AA06 3416	Spring - 3.4N	13 - 23
AA06 3416	Spring - 3.4N	9 - 22
AA06 3416	Spring - 3.4N	7 - 6
AA06 3956	Compression Spring:Driven:6.6N	15 - 14
AA06 6152	Tension Spring	21 - 9
AA06 6366	Spring:Pressure Release	9 - 5
AA08 0203	Bushing - 6mm	25 - 16
AA08 2101	Bushing - 6x10x6	27 - 1
AA08 2101	Bushing - 6x10x6	9 - 7
AA08 2104	Bushing - 8x12x7	17 - 2
AA08 2104	Bushing - 8x12x7	27 - 25
AA08 2104	Bushing - 8x12x7	13 - 7
AA08 2104	Bushing - 8x12x7	11 - 22
AA08 2104	Bushing - 8x12x7	9 - 14
AA08 2104	Bushing - 8x12x7	15 - 10
AA08 2104	Bushing - 8x12x7	7 - 12
AA08 2135	Bushing - DIA4	13 - 24
AA08 2135	Bushing - DIA4	9 - 23
AA08 2135	Bushing - DIA4	7 - 7
AA08 2135	Bushing - DIA4	15 - 16
AA12 0118	Paper Feed Discharge Brush	25 - 3
AA12 0118	Paper Feed Discharge Brush	23 - 8
AA12 0118	Paper Feed Discharge Brush	11 - 26
AA12 0118	Paper Feed Discharge Brush	19 - 21
AA14 3542	Screw:M3:DIA4x5.6	27 - 6
AA14 3542	Screw:M3:DIA4x5.6	7 - 19
AA14 3542	Screw:M3:DIA4x5.6	13 - 33
AA14 3547	Hexagonal Bolt:M12x80	31 - 28

Part No.	Description	Page and Index No.
AA14 3555	Screw - M3x5	3 - 21
AA14 3569	Screw	7 - 15
AA14 3790	Screw:Contact Point	31 - 16
AA14 3790	Screw:Contact Point	11 - 24
AA14 3790	Screw:Contact Point	21 - 8
AA14 3790	Screw:Contact Point	19 - 6
AA14 3790	Screw:Contact Point	7 - 25
AA14 3790	Screw:Contact Point	29 - 4
AA14 3790	Screw:Contact Point	5 - 10
AA14 3790	Screw:Contact Point	27 - 11
AA14 3790	Screw:Contact Point	3 - 37
AA14 3828	Screw:Fly Wheel Added MB9	7 - 45
AA14 3832	Release Spring Holder	9 - 11
AA14 3832	Release Spring Holder	13 - 9
AA14 3832	Release Spring Holder	25 - 10
AA14 3832	Release Spring Holder	11 - 18
AA16 1164	Cushion:Stepper Motor	27 - 14
AA16 1164	Cushion:Stepper Motor	29 - 2
AB01 7673	Gear - 40/82Z	29 - 21
AB01 7674	Gear/pulley - 66Z/20T	29 - 15
AB03 0098	Belt Tightener	21 - 6
AB03 0455	Tightener Pulley - 8x20x13	29 - 12
AB03 0806	Pulley - 19T	21 - 22
AF02 2156	Front Driven Transport Roller	9 - 26
AF02 2156	Front Driven Transport Roller	13 - 31
AF02 2156	Front Driven Transport Roller	7 - 10
AF02 5029	Exit Separation Pawl	9 - 8
AG05 0098	Knob:Fusing	5 - 17
AG07 0504	Magnet Catch:44.1N	9 - 28
AG07 0513	Magnet Catch	31 - 6
AG07 0513	Magnet Catch	13 - 13
AG07 0513	Magnet Catch	5 - 16
AG07 0513	Magnet Catch	9 - 16
AG07 0514	Magnet Catch	31 - 27
AH01 2035	Caster - 980N	31 - 31

Part No.	Description	Page and Index No.
AW01 0091	Photo Reflection Sensor	27 - 30
AW01 0109	Photo Reflection Sensor:PS117ED1	11 - 5
AW01 0109	Photo Reflection Sensor:PS117ED1	15 - 6
AW01 0109	Photo Reflection Sensor:PS117ED1	7 - 35
AW01 0109	Photo Reflection Sensor:PS117ED1	13 - 3
AW02 0141	Photointerruptor	17 - 18
AX06 0296	Brushless Motor:DC24V24W:Z9	29 - 19
AX10 0038	DC Solenoid	9 - 3
AX21 0099	Magnetic Clutch	7 - 32
AX21 0099	Magnetic Clutch	13 - 32
AX40 0190	Heater:120V:9W	23 - 11
AX40 0191	Heater:230V:9W	23 - 11
AZ23 0217	Power Supply Unit - 120V 285W	31 - 30
AZ23 0218	Power Supply Unit - 230V 285W	31 - 30
GX64 0021	Fan Motor DC24V 1.92W	31 - 23

Part No.	Description	Page and Index No.
0313 0060N	Screw - M3x6	17 - 103
0314 0080N	Philips Pan Head Screw - M4x8	31 - 102
0314 0200N	Pan Head Screw:M4x20	31 - 114
0353 0040N	Screw - M3X4	9 - 103
0353 0060N	Bind Screw - M3x6	25 - 102
0353 0060N	Bind Screw - M3x6	23 - 103
0353 0060N	Bind Screw - M3x6	27 - 107
0353 0140N	Screw:M3x14	7 - 105
0450 4010N	Tapping Screw:M4x10	3 - 103
0450 4010N	Tapping Screw:M4x10	5 - 102
0450 4010N	Tapping Screw:M4x10	11 - 105
0451 3006N	Tapping Screw - 3x6	23 - 101
0451 3006N	Tapping Screw - 3x6	9 - 101
0451 3006N	Tapping Screw - 3x6	25 - 101
0451 3006N	Tapping Screw - 3x6	19 - 101
0451 3006N	Tapping Screw - 3x6	21 - 101
0451 3006N	Tapping Screw - 3x6	3 - 101
0451 3006N	Tapping Screw - 3x6	11 - 101
0451 3006N	Tapping Screw - 3x6	17 - 101
0451 3006N	Tapping Screw - 3x6	13 - 101
0451 3006N	Tapping Screw - 3x6	15 - 101
0451 3006N	Tapping Screw - 3x6	27 - 101
0451 3006N	Tapping Screw - 3x6	29 - 101
0451 3006N	Tapping Screw - 3x6	7 - 101
0451 3006N	Tapping Screw - 3x6	31 - 101
0451 3006N	Tapping Screw - 3x6	5 - 101
0451 3014N	Tapping Screw:3x14	27 - 102
0451 3014N	Tapping Screw:3x14	7 - 104
0451 3014N	Tapping Screw:3x14	19 - 106
0451 3014N	Tapping Screw:3x14	29 - 103
0451 3014N	Tapping Screw:3x14	11 - 104
0451 3014N	Tapping Screw:3x14	31 - 103
0451 3014N	Tapping Screw:3x14	15 - 102
0451 3014N	Tapping Screw:3x14	13 - 102
0451 3030N	Tapping Screw:3x30	31 - 108

Part No.	Description	Page and Index No.
0451 4008N	Tapping Screw:4x8	27 - 103
0451 4008N	Tapping Screw:4x8	29 - 102
0451 4008N	Tapping Screw:4x8	31 - 119
0451 4010N	Tapping Screw:4x10	7 - 111
0454 3006Q	Tapping Screw - M3x6	9 - 102
0454 3006Q	Tapping Screw - M3x6	13 - 103
0454 3006Q	Tapping Screw - M3x6	7 - 103
0454 3006Q	Tapping Screw - M3x6	23 - 102
0454 3006Q	Tapping Screw - M3x6	15 - 106
0454 3006Q	Tapping Screw - M3x6	5 - 103
0454 3006Q	Tapping Screw - M3x6	11 - 103
0454 3006Q	Tapping Screw - M3x6	31 - 105
0454 3008Q	Tapping Screw:3x8	3 - 104
0454 3008Q	Tapping Screw:3x8	17 - 102
0454 4008Q	Tapping Screw - M4x8	11 - 102
0454 4008Q	Tapping Screw - M4x8	3 - 102
0454 4008Q	Tapping Screw - M4x8	7 - 102
0623 0120E	Spring Pin - M3x12	9 - 107
0632 0100G	Pin - 2x10mm	17 - 104
0633 0140G	Parallel Pin - 3x14	7 - 108
0633 0200G	Pin - M3x20	19 - 107
0633 0200G	Pin - M3x20	17 - 106
0633 0200G	Pin - M3x20	21 - 105
0633 0280G	Pin - 3x28	19 - 105
0701 0040N	Washer:DIA4	21 - 106
0701 0050N	Washer:DIA5	19 - 109
0703 0040N	Spring Washer:DIA4	31 - 107
0720 0030E	Retaining Ring - M3	7 - 107
0720 0030E	Retaining Ring - M3	15 - 104
0720 0030E	Retaining Ring - M3	9 - 105
0720 0030E	Retaining Ring - M3	13 - 105
0720 0040E	Retaining Ring - M4	9 - 106
0720 0040E	Retaining Ring - M4	21 - 102
0720 0040E	Retaining Ring - M4	27 - 105
0720 0040E	Retaining Ring - M4	25 - 103

Part No.	Description	Page and Index No.
0720 0040E	Retaining Ring - M4	31 - 110
0720 0060E	Retaining Ring - M6	13 - 104
0720 0060E	Retaining Ring - M6	7 - 106
0720 0060E	Retaining Ring - M6	27 - 104
0720 0060E	Retaining Ring - M6	11 - 107
0720 0060E	Retaining Ring - M6	9 - 104
0720 0060E	Retaining Ring - M6	15 - 103
0720 0060E	Retaining Ring - M6	19 - 103
0720 0060E	Retaining Ring - M6	29 - 104
0720 0060E	Retaining Ring - M6	21 - 103
0720 0080E	Retaining Ring - M8	19 - 104
0742 3808	Ball Bearing - 8x16x5	17 - 105
0742 3910	Ball Bearing:10x22x6	19 - 102
0742 3910	Ball Bearing:10x22x6	21 - 104
0954 4008N	Screw - M4x8	5 - 104
0954 4008N	Screw - M4x8	21 - 107
0954 4008N	Screw - M4x8	19 - 108
0954 5014N	Screw - M5x14	31 - 104
1105 0409	Card Spacer- 6.4mm	29 - 107
1105 0511	Clamp:LWSM-0306	23 - 105
1105 0511	Clamp:LWSM-0306	13 - 107
1105 0511	Clamp:LWSM-0306	15 - 105
1105 0511	Clamp:LWSM-0306	11 - 106
1105 0511	Clamp:LWSM-0306	9 - 108
1105 0511	Clamp:LWSM-0306	7 - 109
1105 0511	Clamp:LWSM-0306	25 - 104
1105 0511	Clamp:LWSM-0306	29 - 105
1105 0511	Clamp:LWSM-0306	27 - 106
1105 0522	Clamp:LES-1010	13 - 106
1105 0522	Clamp:LES-1010	5 - 105
1105 0522	Clamp:LES-1010	23 - 104
1105 0522	Clamp:LES-1010	29 - 106
1106 0063	Snap Bushing	31 - 111
1107 1192	Fuse:BJS202100F1R	31 - 113
1204 2529	Switch - V-5F912DN	31 - 109

Part No.	Description	Page and Index No.
1204 2529	Switch - V-5F912DN	7 - 110
1204 2533	Switch - AJ76200PZ02	31 - 106
1204 2634	Rocker Switch - AJ76200B	31 - 112
1600 2048	Resistor:5.1 Ω : $\pm$ 5%:20W	31 - 115
1600 2049	Resistor:91 Ω : $\pm$ 5%:30W	31 - 116
1607 0534	Ferrite Core:ZCAT3035-1330	31 - 118
1607 1574	Ferrite Core:RFC-H13	31 - 117

Part No.	Description	Page and Index No.
5053 0419	Bushing - 10mm	19 - 18
5215 2621	Snap Ring - M6	27 - 27
5215 2621	Snap Ring - M6	9 - 15
5215 2621	Snap Ring - M6	11 - 23
5215 2621	Snap Ring - M6	13 - 10
5215 2621	Snap Ring - M6	15 - 11
5215 2621	Snap Ring - M6	17 - 1
5215 2621	Snap Ring - M6	7 - 41
5215 2621	Snap Ring - M6	29 - 11
5446 2901	Collar - 8mm	25 - 20
5446 2901	Collar - 8mm	27 - 23
5446 6214	Shaft Holder - Pick-up Roller	19 - 5
5446 6214	Shaft Holder - Pick-up Roller	21 - 5
5447 2681	Snap Ring	31 - 26

Part No.	Description	Page and Index No.