

Folder FD 6500B (B890)

Folder FD 6500B (B890)

PARTS CATALOG

 
This catalog gives the numbers and names of parts on this machine.

1.By-pass Feed Section 1 (B890)	2	22.Drive Section (B890)	44
2.By-pass Feed Section 2 (B890)	4	23.Electrical Section (B890)	46
3.By-pass Feed Section 3 (B890)	6	24.Accessory (B890)	48
4.By-pass Feed Section 4 (B890)	8	25.Paper Transfer Unit 1 (B890)	50
5.Exterior 1 (B890)	10	26.Paper Transfer Unit 2 (B890)	52
6.Exterior 2 (B890)	12	27.Paper Transfer Entrans 1 (B890)	54
7.Exterior 3 (B890)	14	28.Paper Transfer Entrans 2 (B890)	56
8.Exterior 4 (B890)	16	29.Paper Transfer 1 (B890).....	58
9.Bridge Section (B890)	18	30.Paper Transfer 2 (B890).....	60
10.Paper Transfer Entrans 1 (B890)	20	31.Paper Transfer 3 (B890).....	62
11.Paper Transfer Entrans 2 (B890)	22	32.Paper Transfer 4 (B890).....	64
12.Paper Transfer Entrans 3 (B890)	24	33.Paper Transfer 5 (B890).....	66
13.Paper Exit (B890).....	26	34.Paper Transfer 6 (B890).....	68
14.Paper Folder Transfer 1 (B890)	28	35.Paper Transfer 7 (B890).....	70
15.Paper Folder Transfer 2 (B890)	30	36.Paper Transfer 8 (B890).....	72
16.Paper Folder 1 (B890).....	32	37.Paper Exit (B890)	74
17.Paper Folder 2 (B890).....	34	38.Cross Flap Transfer 1 (B890).....	76
18.Paper Folder 3 (B890).....	36	39.Cross Flap Transfer 2 (B890).....	78
19.Paper Folder 4 (B890).....	38	40.Paper Transfer Unit (B890)	80
20.Paper Folder 5 (B890).....	40	41.Cross Unit 1 (B890)	82
21.Paper Folder Exit (B890).....	42	42.Cross Unit 2 (B890)	84

October 15, 2008


43.Cross Flap 1 (B890)	86
44.Cross Flap 2 (B890)	88
45.Cross Flap 3 (B890)	90
46.Cross Flap 4 (B890)	92
47.Paper Transfer 1 (B890)	94
48.Paper Transfer 2 (B890)	96
49.Paper Transfer 3 (B890)	98
50.Paper Transfer 4 (B890)	100
51.Paper Transfer 5 (B890)	102
52.Paper Transfer 6 (B890)	104
53.Paper Transfer 7 (B890)	106
54.Paper Transfer 8 (B890)	108
55.Paper Transfer 9 (B890)	110
56.Paper Transfer 10 (B890)	112
57.Paper Exit 1 (B890)	114
58.Paper Exit 2 (B890)	116
59.Drive Section 1 (B890)	118
60.Drive Section 2 (B890)	120
61.Electrical Section 1 (B890)	122
62.Electrical Section 2 (B890)	124
Parts Index	128

1.By-pass Feed Section 1 (B890)

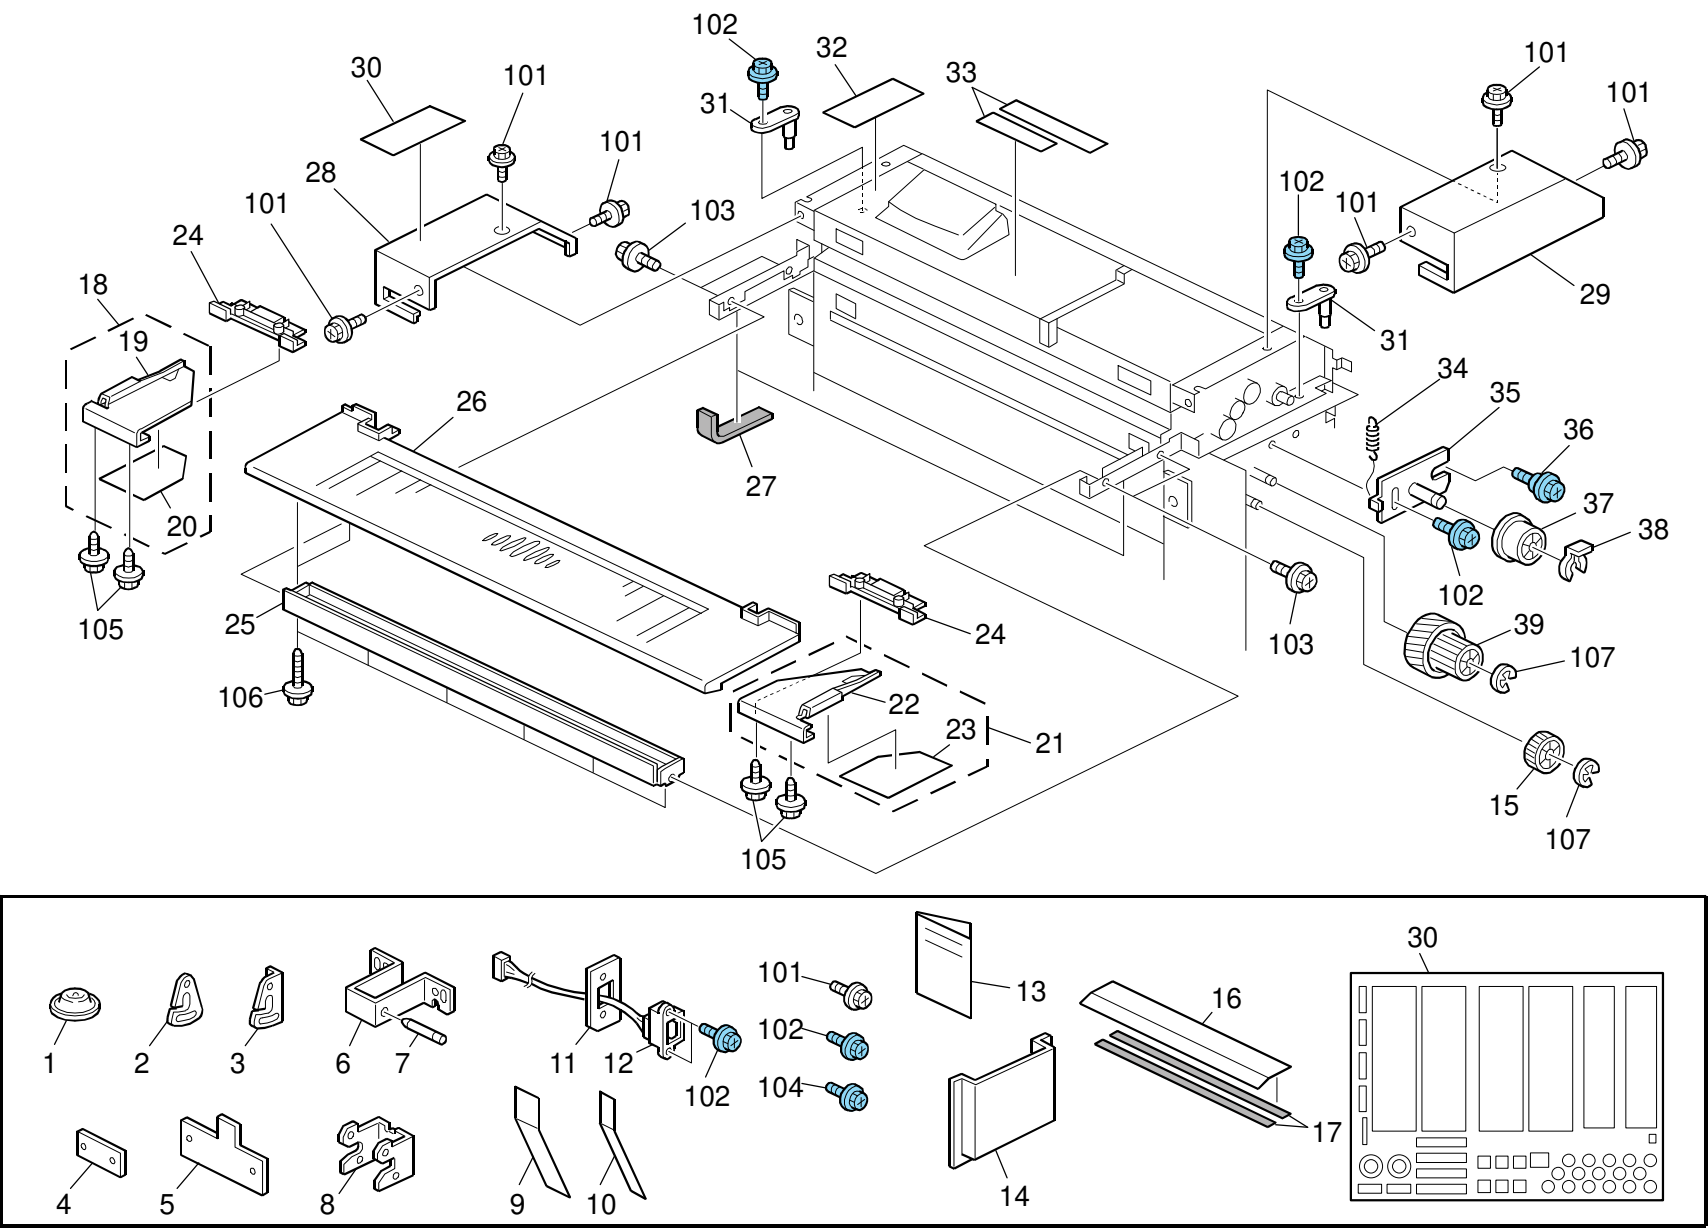

3

 2.By-pass Feed Section 2 (B890)

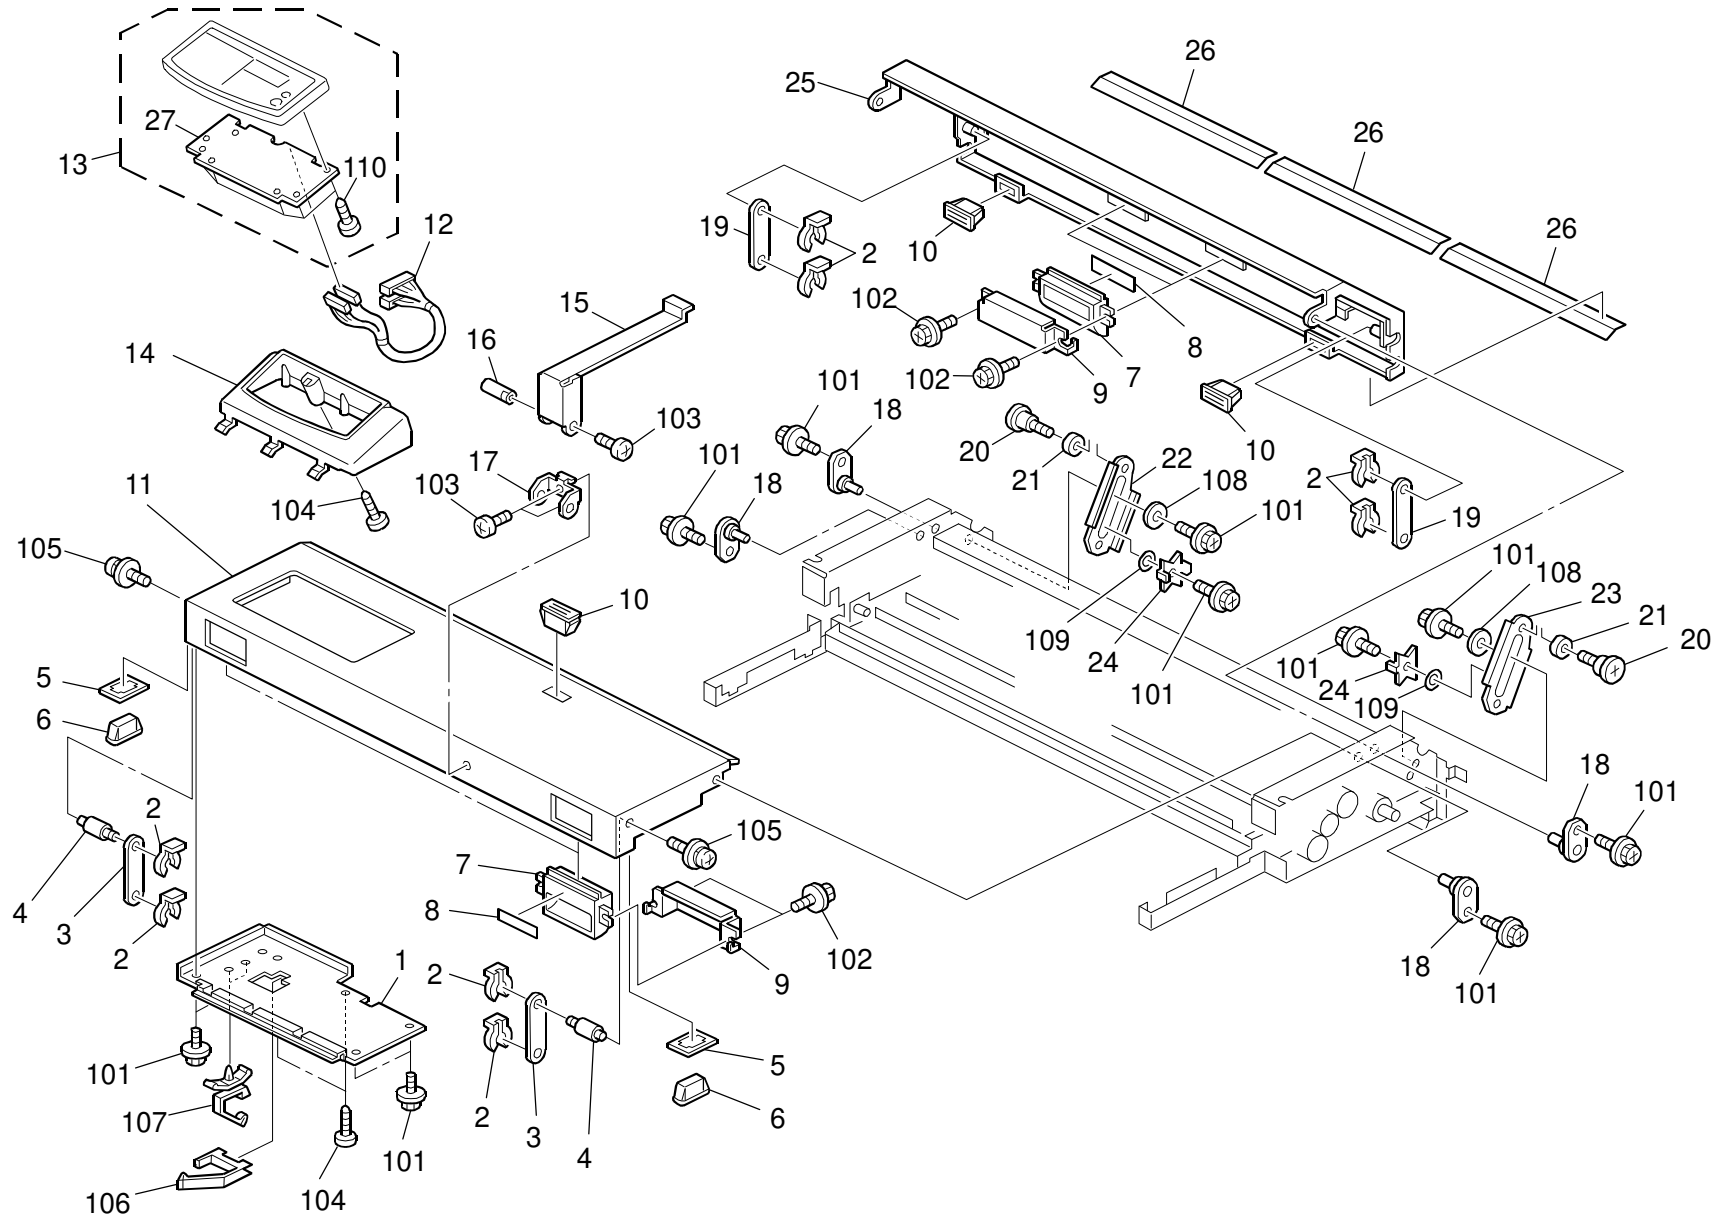


2.By-pass Feed Section 2 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D333 7600	Bracket:Fix:Operation Panel	1
2	5215 2621	Snap Ring - M6	8
3	D333 7641	Guide Plate:Manual Feed:Upper	2
4	D333 7625	Shaft:Support:Guide Plate	2
5	D333 7640	Spacer:Magnet Catch	2
6	AA02 1031	Magnetic Catch	2
7	AG05 1145	Grip:Open and Close:RIC	4
8	D333 7699	Decal:Paper Jam:Manual Feed Unit	1
9	D333 7664	Bracket:2:Cover:Grip	4
10	AG07 0513	Magnet Catch	3
11	D333 7645	Cover:Upper Rear:Ass'y	1
12	D333 5546	Harness:DC:Operation Panel	1
13	D333 7684	Operation Panel:NA-B:Ass'y	1
13	D333 7688	Operation Sub-unit:EU-B:Ass'y	1
14	B048 4552	Operation Cover Panel	1
15	D333 7642	Bracket:Manual Feed Table	1
16	D333 7644	Shaft:Bracket:Manual Feed Table	1
17	D333 7643	Guide Plate:Bracket	1
18	D333 7633	Bracket:Contact Point:Cover	4
19	D333 7650	Guide Plate:Reverse:Outer	2
20	AA14 3791	Screw:Safety	2
21	AA08 2093	Bushing:3xMM6MM8	2
22	D333 7638	Arm:Stopper:Right	1
23	D333 7636	Arm:Stopper:Left	1
24	D333 7692	Bracket:Stopper	2
25	D333 7668	Cover:Upper Front:Ass'y	1
26	D333 7670	Guide:Cover:Upper Front	3
27	B257 5100	PCB:Operation Panel	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0451 4008N	Tapping Screw:4x8	
103	0453 3006N	Tapping Screw - M3x6	
104	0452 3010N	Binding Self-Tapping Screw:3x10	
105	0954 3006N	Screw - M3x6	
106	1105 0518	Edge Saddle - LES-1010	
107	1105 0511	Harness Clamp - LWS-0306ZC	
108	0701 0060N	Washer DIA6	
109	0807 4139	Washer (100pcs/set)	
110	0452 2006N	Binding Self-Tapping Screw - M2x6	

 3.By-pass Feed Section 3 (B890)

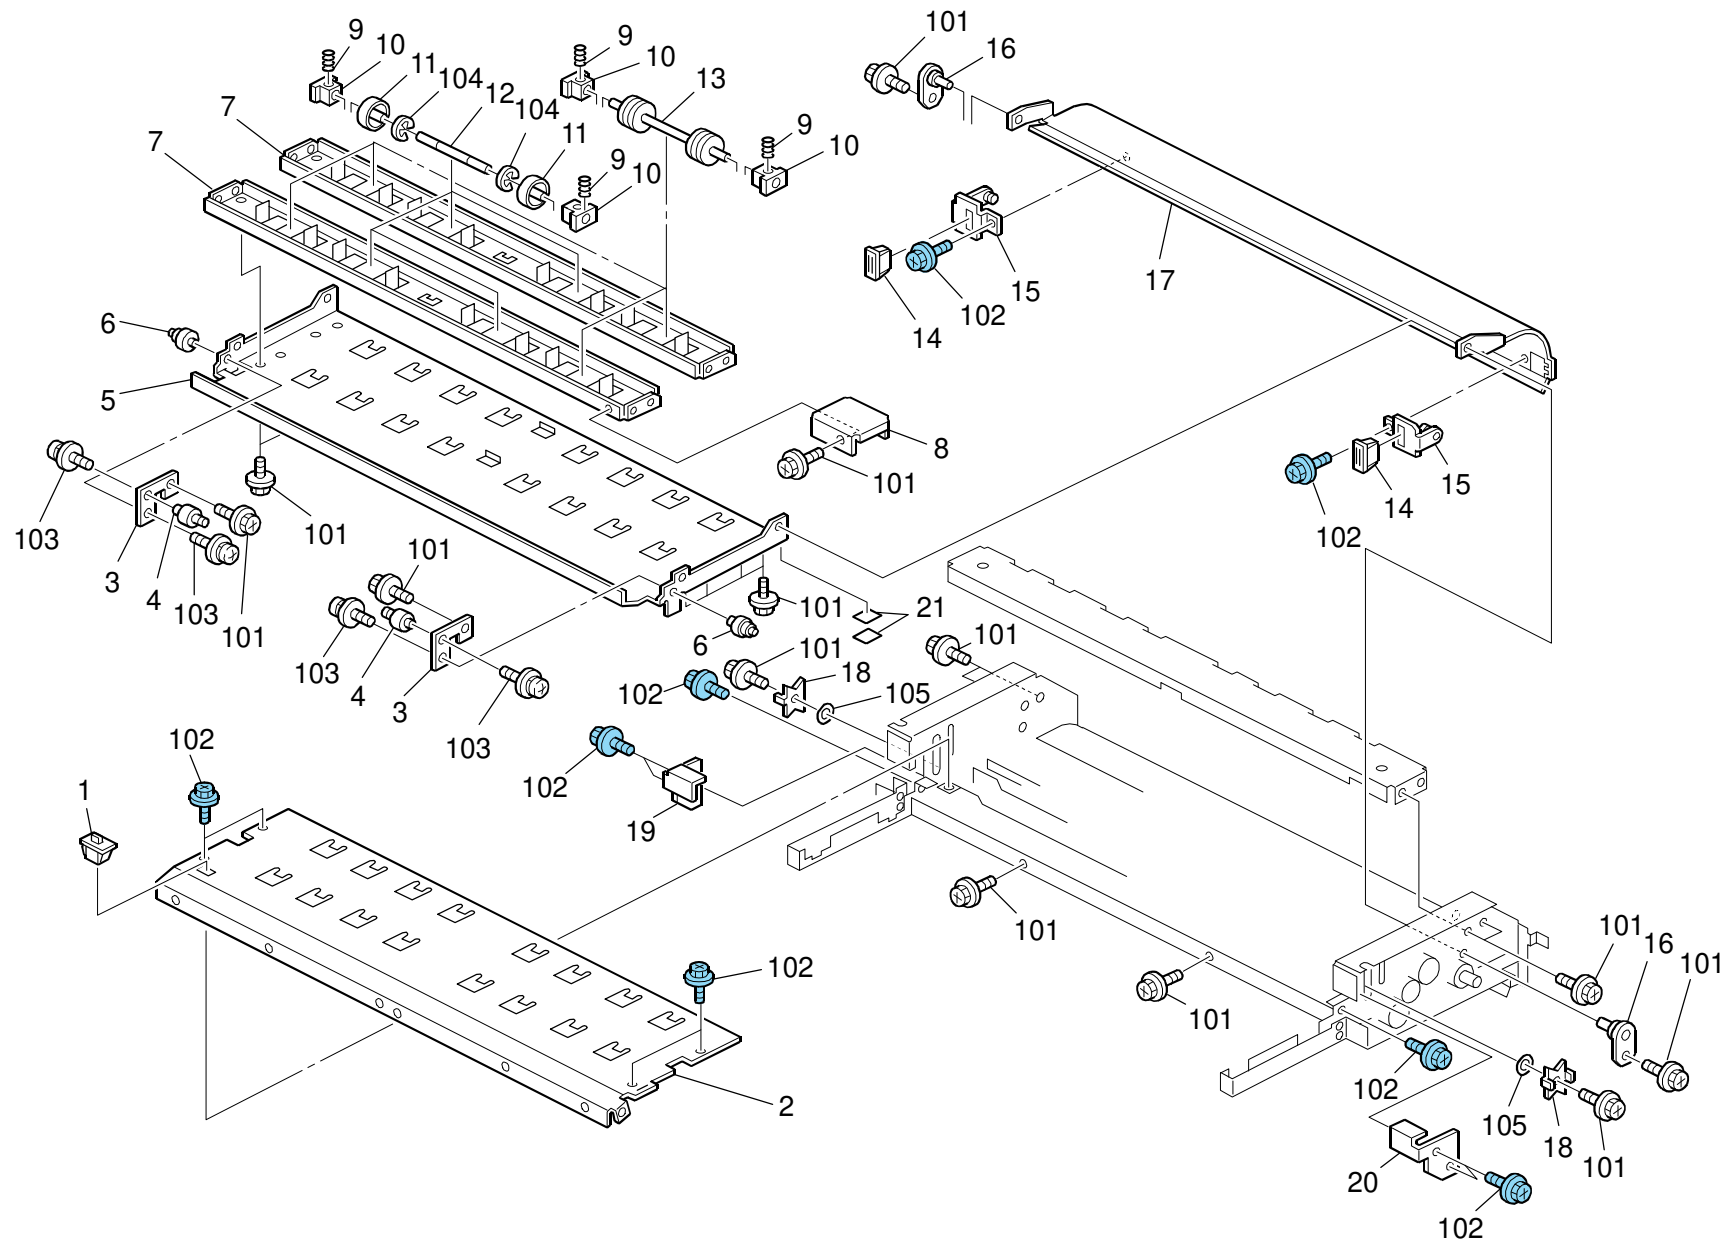


3.By-pass Feed Section 3 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	G020 5626	Push Switch	1
2	D333 7675	Guide Plate:Manual Feed:Lower:NA	1
2	D333 7621	Guide Plate:Lower:DOM/EU	1
3	D333 7624	Bracket:Support:Guide Plate	2
4	D333 7625	Shaft:Support:Guide Plate	2
5	D333 7676	Guide Plate:Manual Feed:Upper:NA	1
5	D333 7623	Guide Plate:Upper:DOM/EU	1
6	D333 7626	Shaft:Stopper	2
7	B889 1161	Bracket:Pressure:Transport	2
8	D333 7620	Cover:Bracket:Pressure	1
9	AA06 3416	Spring - 3.4N	16
10	AA08 2135	Bushing - DIA4	16
11	B125 4752	Roller:Driven	8
12	B125 4751	Shaft:Driven	4
13	AF02 2156	Front Driven Transport Roller	4
14	AG07 0513	Magnet Catch	2
15	D333 7630	Bracket:Support:Guide Plate	2
16	D333 7633	Bracket:Contact Point:Cover	2
17	D333 7629	Guide Plate:Reverse:Outer	1
18	D333 7692	Bracket:Stopper	2
19	D333 7616	Magnet Catch Pleet:Left:Side Plate	1
20	D333 7617	Magnet Catch Pleet:Right:Side Plate	1
21	B257 4354	Spacer - Fusing Entrance Guide Plate	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0954 3006N	Screw - M3x6	
104	0720 0030E	Retaining Ring - M3	
105	0807 4139	Washer (100pcs/set)	

 4.By-pass Feed Section 4 (B890)

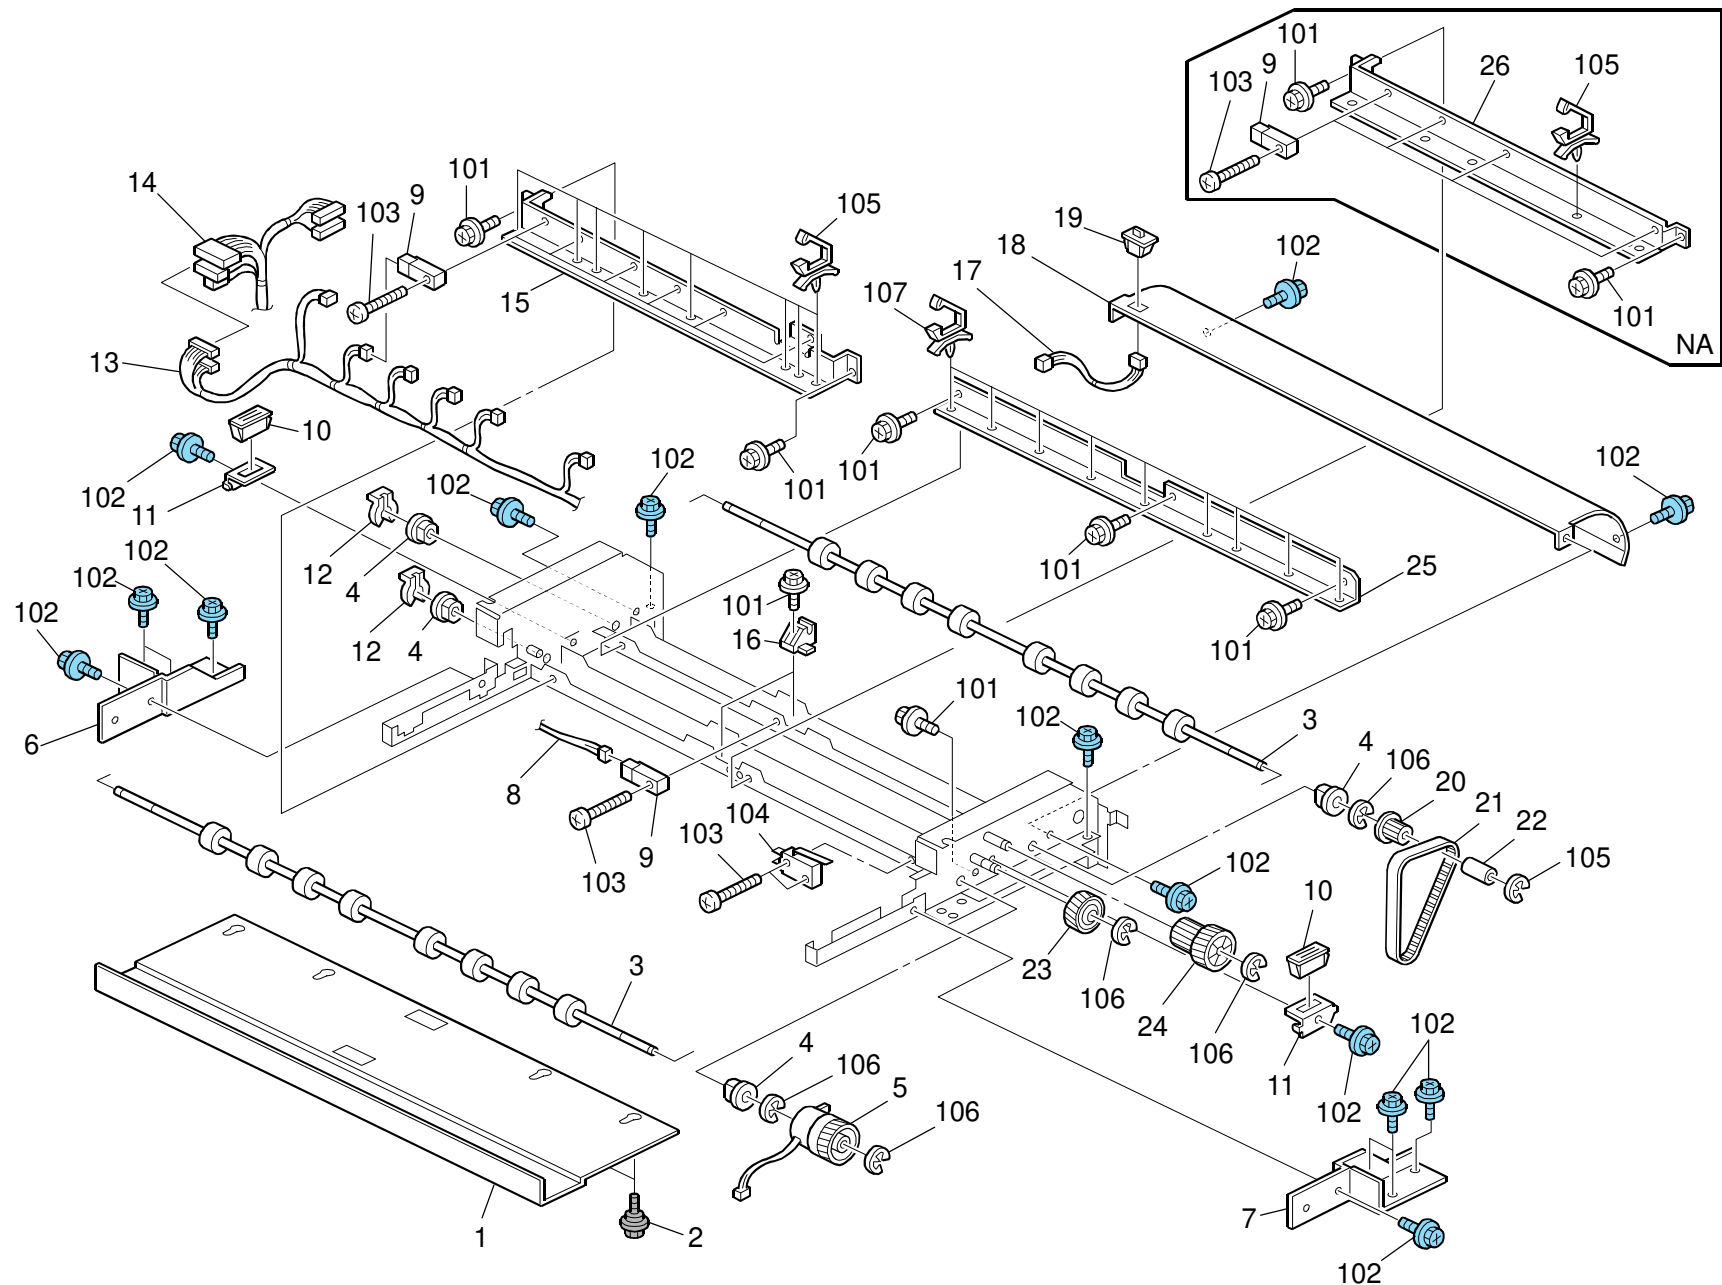


4.By-pass Feed Section 4 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	D333 7661	Cover:Original Table:Lower	1
2	B238 4483	Screw	2
3	B889 1440	Transport Roller:Drive	2
4	AA08 2104	Bushing - 8x12x7	4
5	AX21 0099	Magnetic Clutch	1
6	D333 7614	Bracket:Right:Protect:Side Plate	1
7	D333 7613	Bracket:Left:Protect:Side Plate	1
8	D333 5525	Harness:DC:Sensor	1
9	AW01 0109	Photo Reflection Sensor:PS117ED1	7
10	AG07 0513	Magnet Catch	2
11	B889 1170	Bracket:Magnet Catch	2
12	5215 2621	Snap Ring - M6	2
13	D333 5581	Harness:DC:Original Sensor:NA	1
13	D333 5580	Harness:DC:Original Sensor:DOM/EU	1
14	D333 5555	Harness:DC:Main	1
15	D333 7673	Bracket:1:Sensor:NA	1
15	D333 7612	Bracket:1:Sensor:DOM/EU	1
16	A174 3946	Arm Bushing	2
17	B889 5547	Harness:DC:Push Switch	1
18	D333 7622	Guide Plate:Reverse:Inner	1
19	G020 5626	Push Switch	1
20	A257 4632	Timing Pulley	1
21	D333 7667	Timing Belt:B60S3M414	1
22	B889 1435	Spacer:21.2	1
23	B023 4570	Gear - 31Z	1
24	B889 1431	Gear:Timing Pulley:34Z/29T	1
25	D333 7615	Bracket:Frame	1
26	D333 7674	Bracket:2:Sensor:NA	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0353 0140N	Screw:M3x14	
104	1204 2529	Switch - V-5F912DN	
105	1105 0511	Harness Clamp - LWS-0306ZC	
106	0720 0060E	Retaining Ring - M6	
107	1105 0534	Clamp	

 5.Exterior 1 (B890)

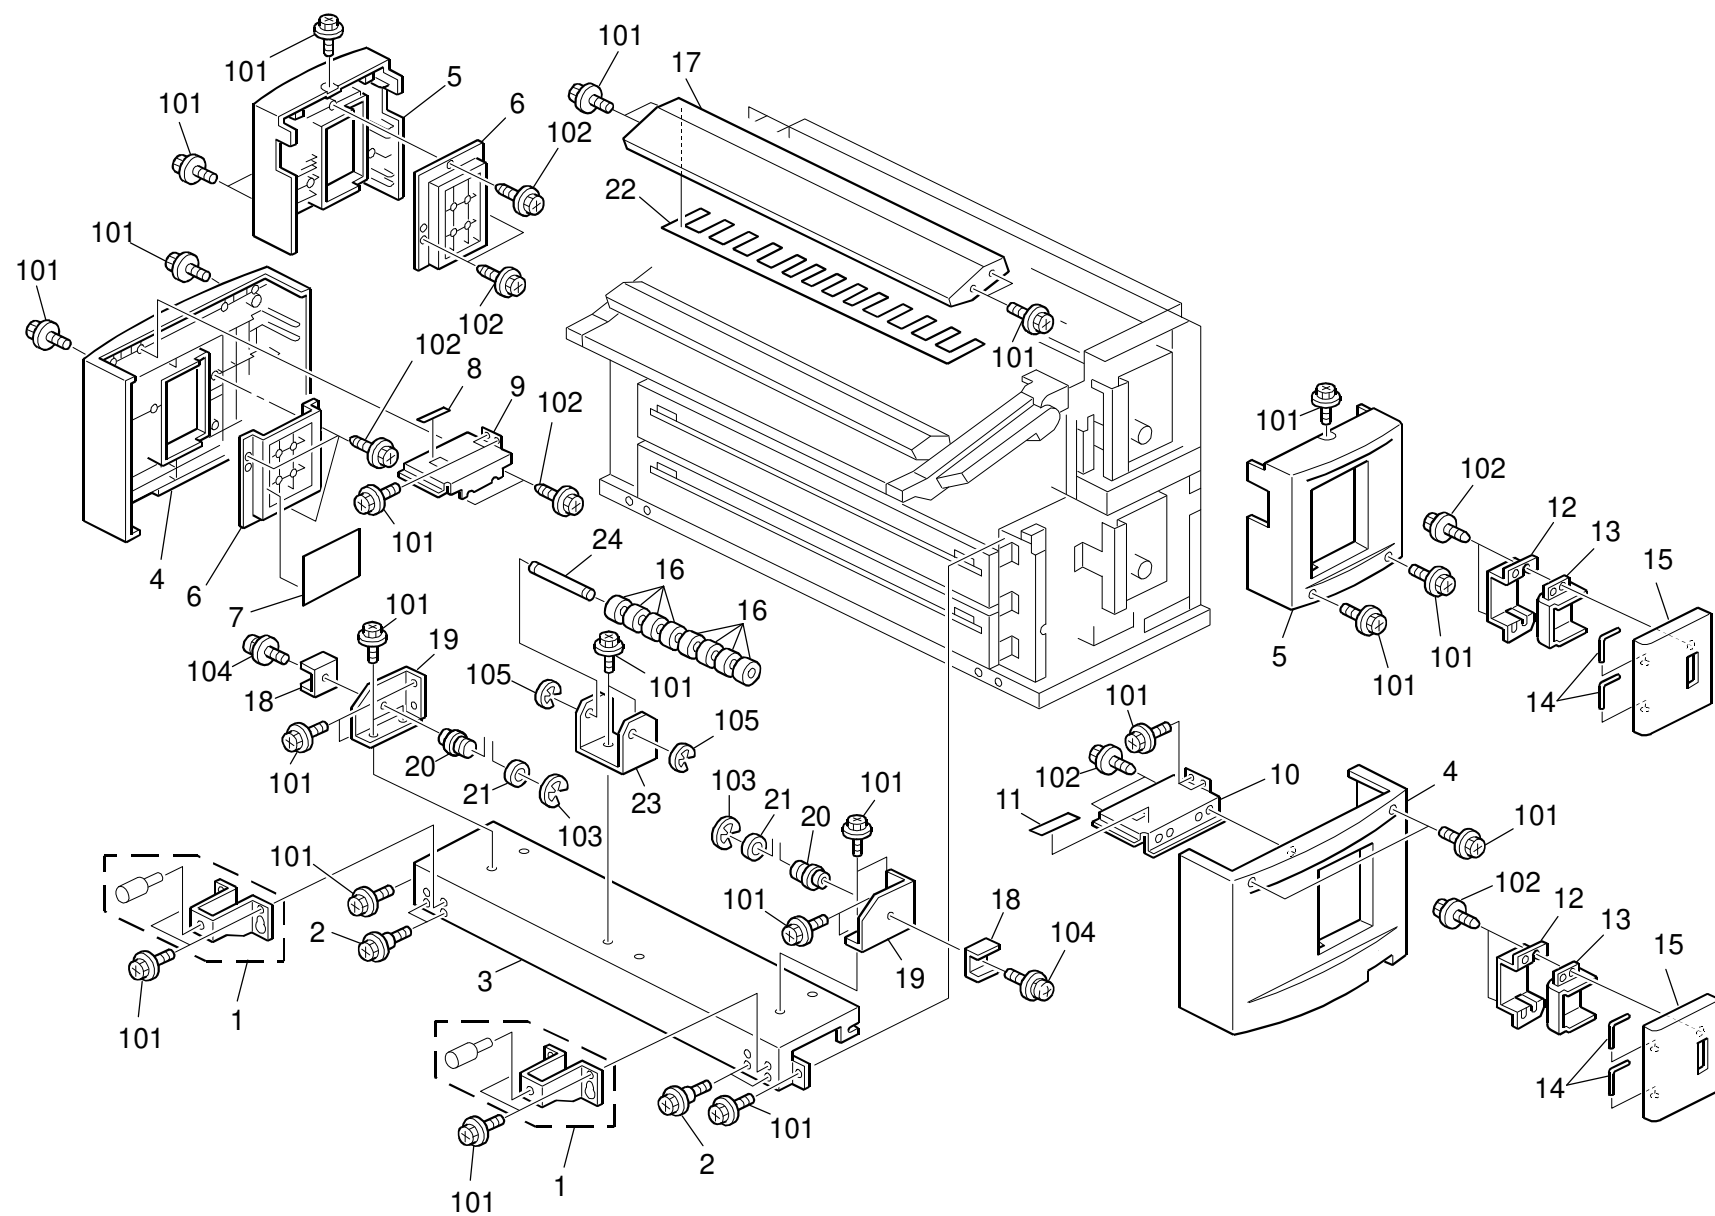


5.Exterior 1 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B890 1652	Bracket:Coupling:Upper	2
2	AA14 3790	Screw:Contact Point	4
3	B890 1918	Cover:Front Lower:BEL:Ass'y	1
4	B889 1954	Cover:Left and Right:Lower	2
5	B889 1957	Cover:Left and Right:Upper	2
6	B889 1955	Cover:Left:Upper Lower	2
7	B889 1981	Holder:Film	1
8	B889 1685	Decal:Switch	1
9	B889 1956	Cover:Left Middle	1
10	B889 1963	Cover:Right Middle	1
11	B889 1687	Decal:Dehumidifier:Heater:Switch	1
12	B889 1965	Receive Plate:Magnet Catch	2
13	B889 1906	Grip:Cover:Open and Close	2
14	B104 1303	Hinge Shaft	4
15	B889 1964	Cover:Misfeed Removal	2
16	D355 4598	Roller:Slider	8
17	B889 1550	Cover:Connecting:Upper	1
18	D407 7741	Adjusting Plate:Arm:Lower:Connecting	2
19	D407 7752	Bracket:Arm:Lower:Connecting	2
20	D407 7740	Shaft:Arm:Connecting	2
21	C257 1065	Spacer	2
22	D407 7721	Guide:Connecting:Exit	1
23	D407 7730	Bracket:Lock:Fix	1
24	D407 7729	Shaft:Lock:Fix	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0450 4010N	Tapping Screw:M4x10	
103	0720 0080E	Retaining Ring - M8	
104	0951 5008N	Screw:Polished Round:M5x8	
105	0720 0040E	Retaining Ring - M4	

 6.Exterior 2 (B890)

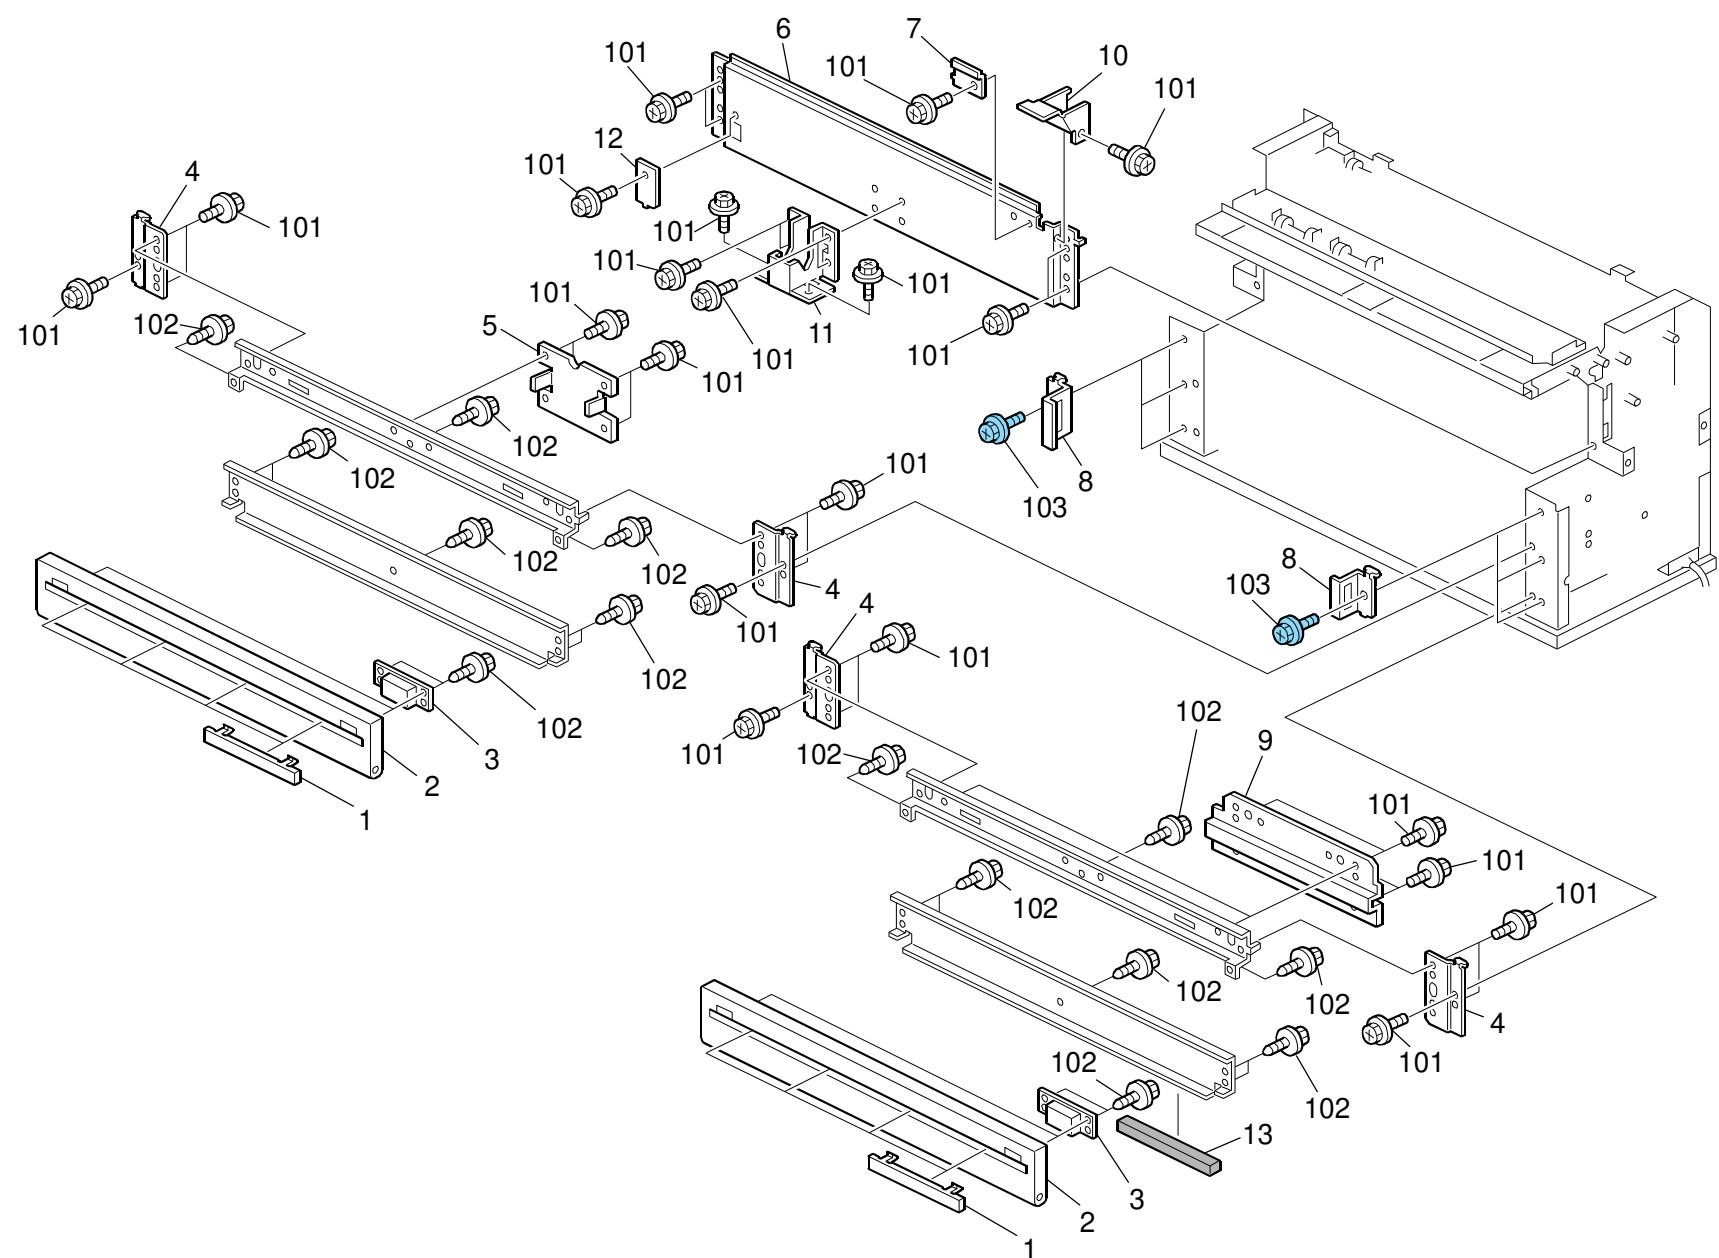


6.Exterior 2 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B889 1903	Cap:Cover	8
2	B889 1905	Cover:Open and Close	2
3	B889 1909	Cover:Grip	4
4	B889 1910	Bracket:Fix:Cover	4
5	B889 1399	Bracket:Cover:Coupling	1
6	B890 1923	Cover:Front Upper:BEL:Ass'y	1
7	B889 1980	Cover:Front Upper:2	1
8	B889 1175	Bracket:Plate:Cover	6
9	B889 1914	Inner Cover:Cover:Open and Close	2
10	B889 1554	Cover:Connecting:Right Lower	1
11	D407 7755	Bracket:Gas Spring:Lower	1
12	B889 1924	Bracket:Cover:Front Upper	1
13	B889 5661	Gasket:STGN18-10R	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0450 4010N	Tapping Screw:M4x10	
103	0454 3006Q	Tapping Screw - M3x6	

 7.Exterior 3 (B890)

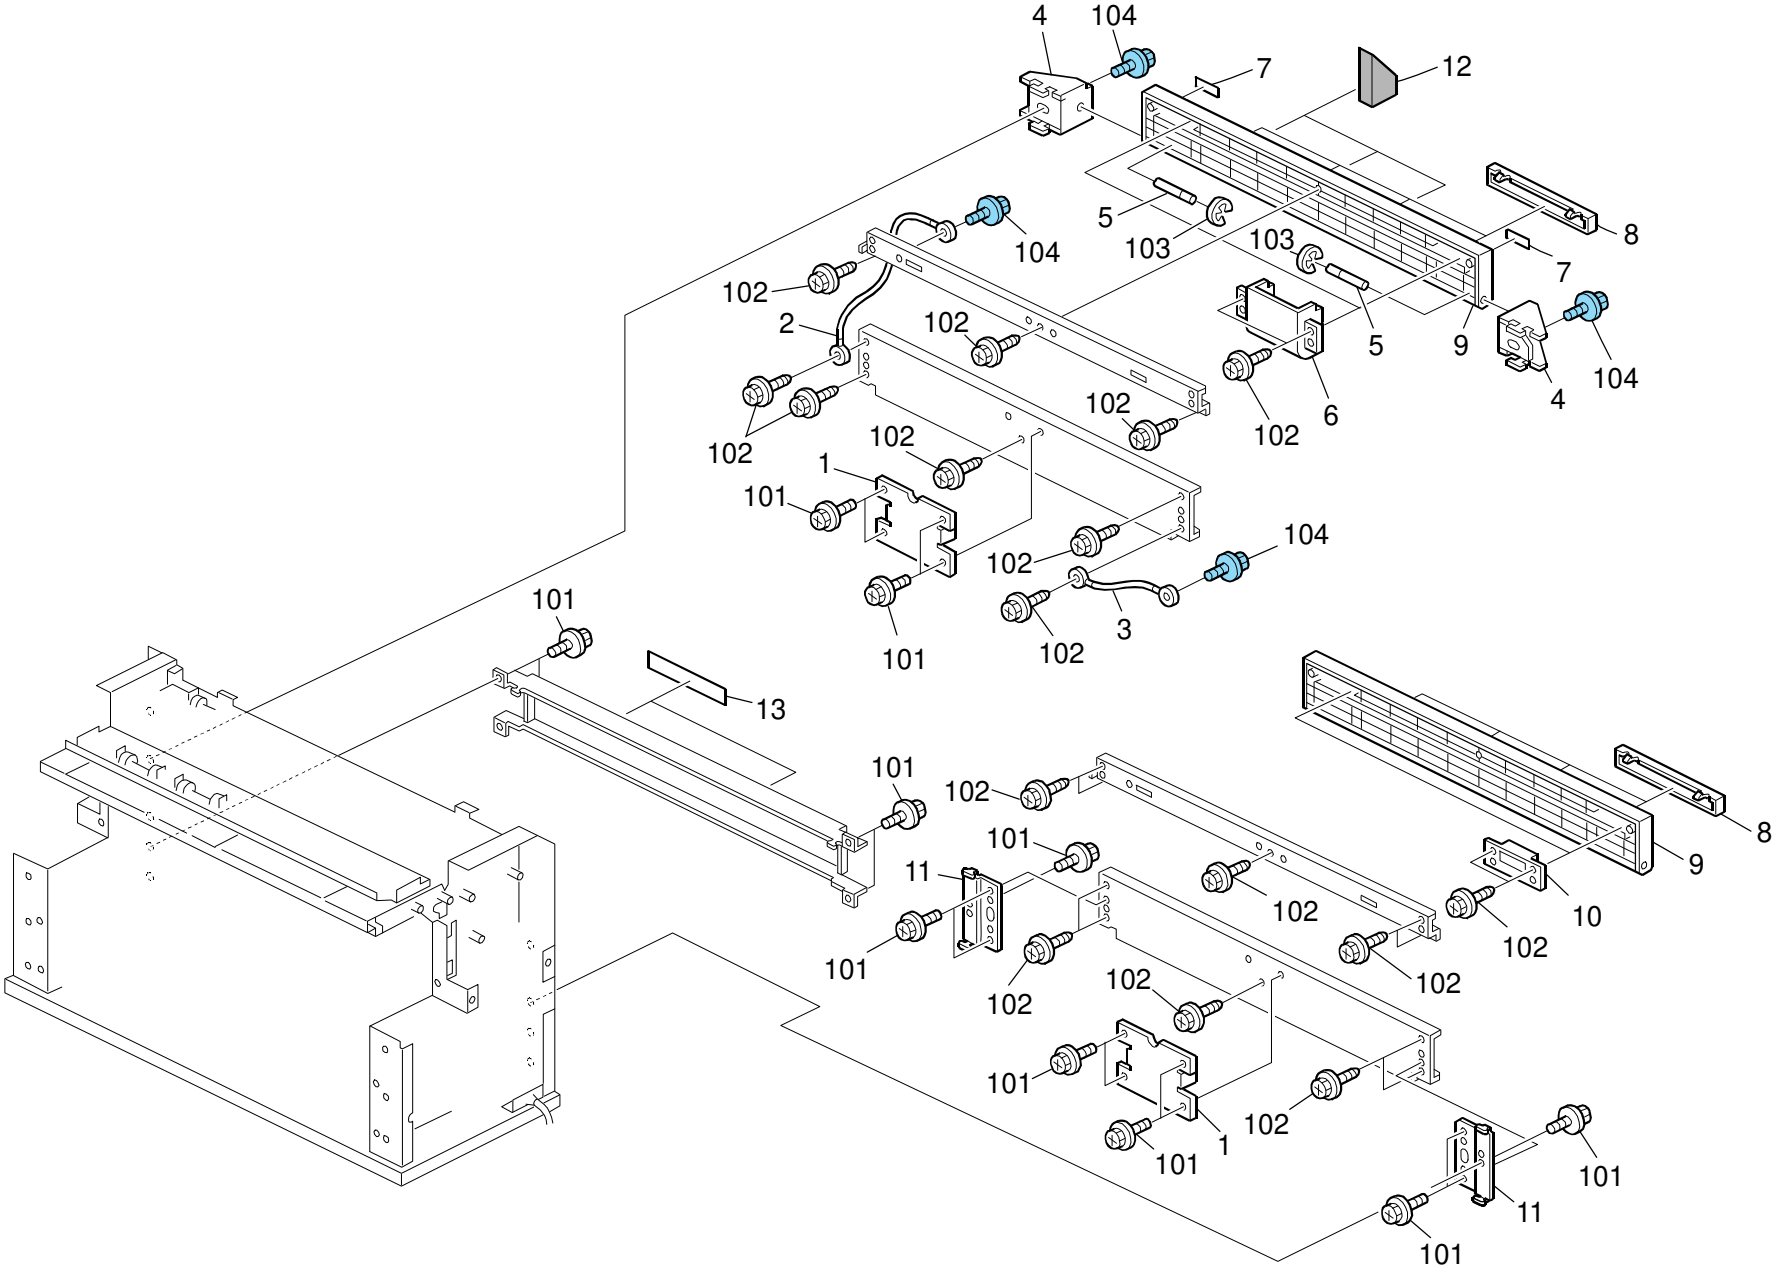


7.Exterior 3 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B889 1399	Bracket:Cover:Coupling	2
2	B125 5643	Ground Wire:Scanner Unit:3	1
3	B125 5683	Ground Wire:Pressure Plate	1
4	B889 1904	Bracket:Contact Point	2
5	B889 1912	Shaft:Contact Point	2
6	B889 1906	Grip:Cover:Open and Close	2
7	B889 1678	Decal:Paper Jam:1	1
8	B889 1903	Cap:Cover	8
9	B889 1905	Cover:Open and Close	2
10	B889 1909	Cover:Grip	2
11	B889 1910	Bracket:Fix:Cover	2
12	B890 2711	Holder:Separation Plate:PE	3
13	B890 2714	Seal:Guide Plate:Entrance:1	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0450 4010N	Tapping Screw:M4x10	
103	0720 0040E	Retaining Ring - M4	
104	0454 3006Q	Tapping Screw - M3x6	

 8.Exterior 4 (B890)

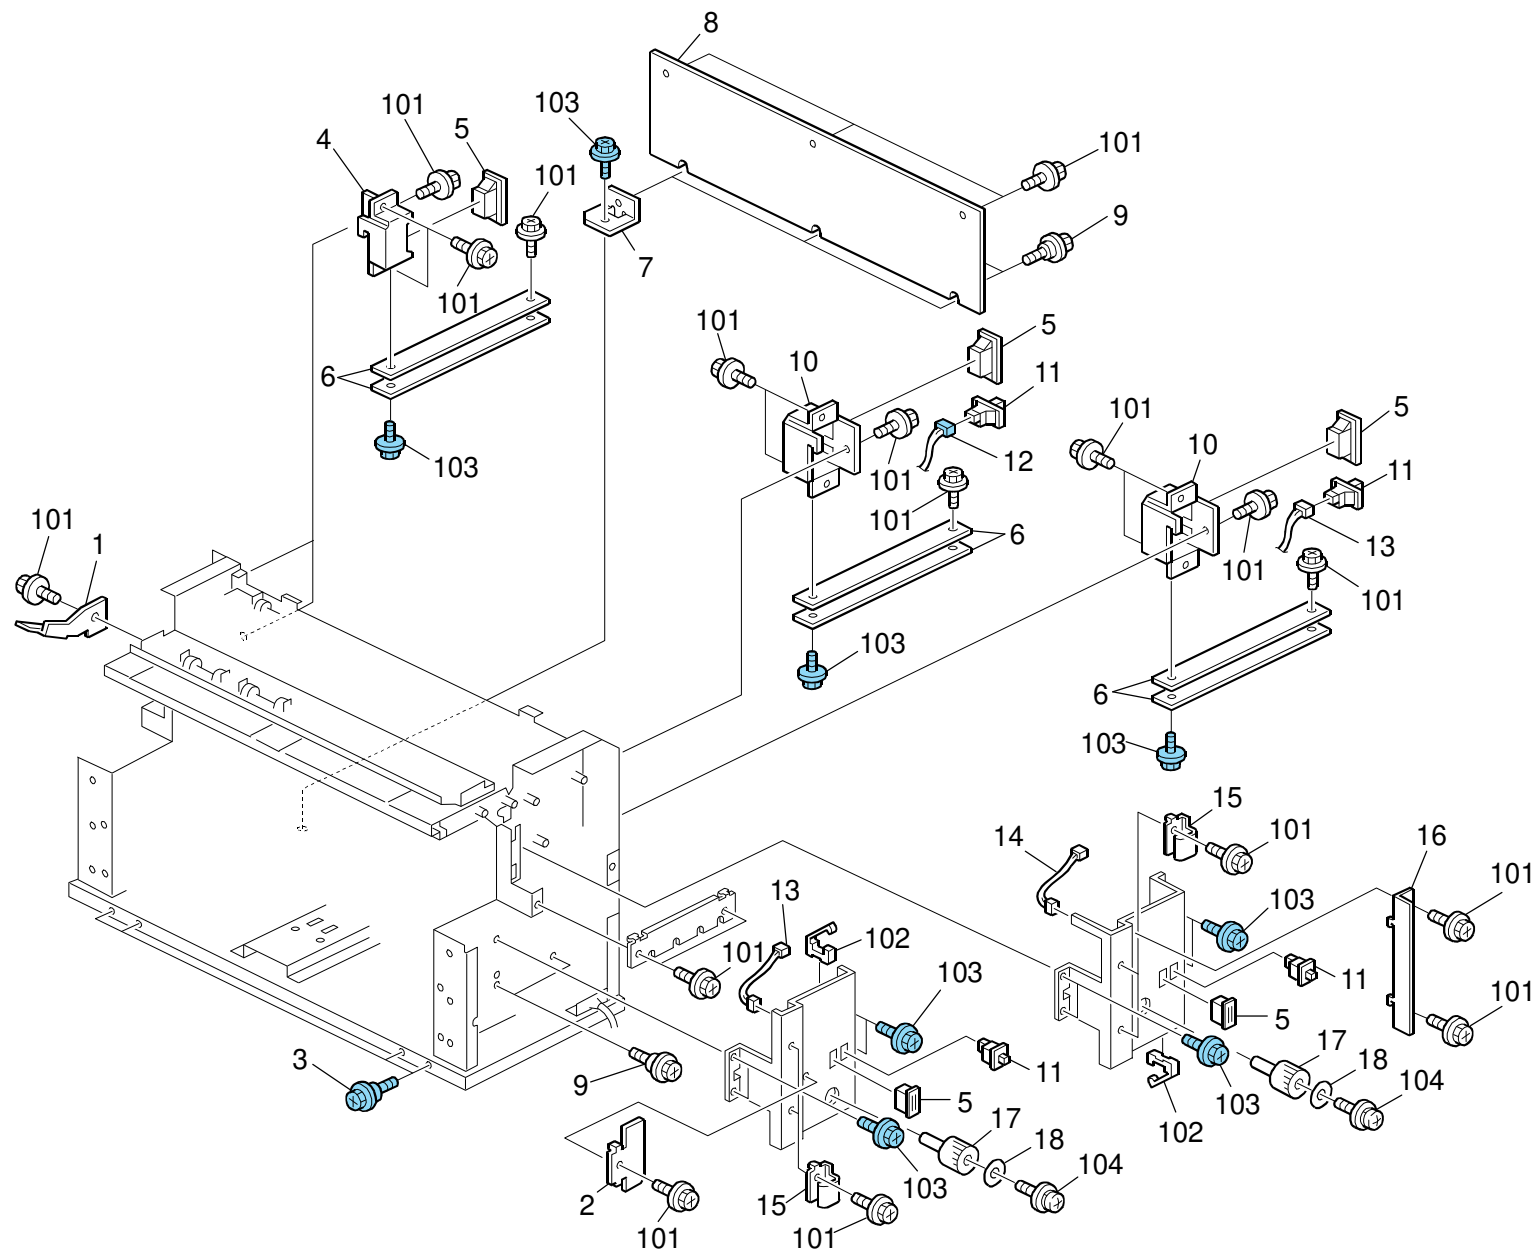


8.Exterior 4 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B889 1559	Cover:Connecting:Left Lower	1
2	D046 2787	Cover:Side Plate	1
3	B830 1135	Screw	4
4	B889 1171	Bracket:Cover:Micro Switch	2
5	AG07 0513	Magnet Catch	6
6	A297 1261	Stopper:Cover	8
7	B889 1713	Bracket:PSU:Rear	3
8	B890 1981	Cover:Power Supply Unit:Rear Lower	1
9	AA14 3790	Screw:Contact Point	5
10	B889 1174	Bracket:Cover:Push Switch	2
11	G020 5626	Push Switch	4
12	B889 5552	Harness:DC:Push Switch:1	1
13	B889 5547	Harness:DC:Push Switch	2
14	B889 5553	Harness:DC:Push Switch:2	1
15	B104 1302	Left Hinge	4
16	B889 1979	Guard:Inner Cover	1
17	AG05 0098	Knob:Fusing	2
18	B889 1678	Decal:Paper Jam:1	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	1105 0522	Edge Saddle - LES0510	
103	0454 3006Q	Tapping Screw - M3x6	
104	0954 4008N	Screw - M4x8	

 
9. Bridge Section (B890)

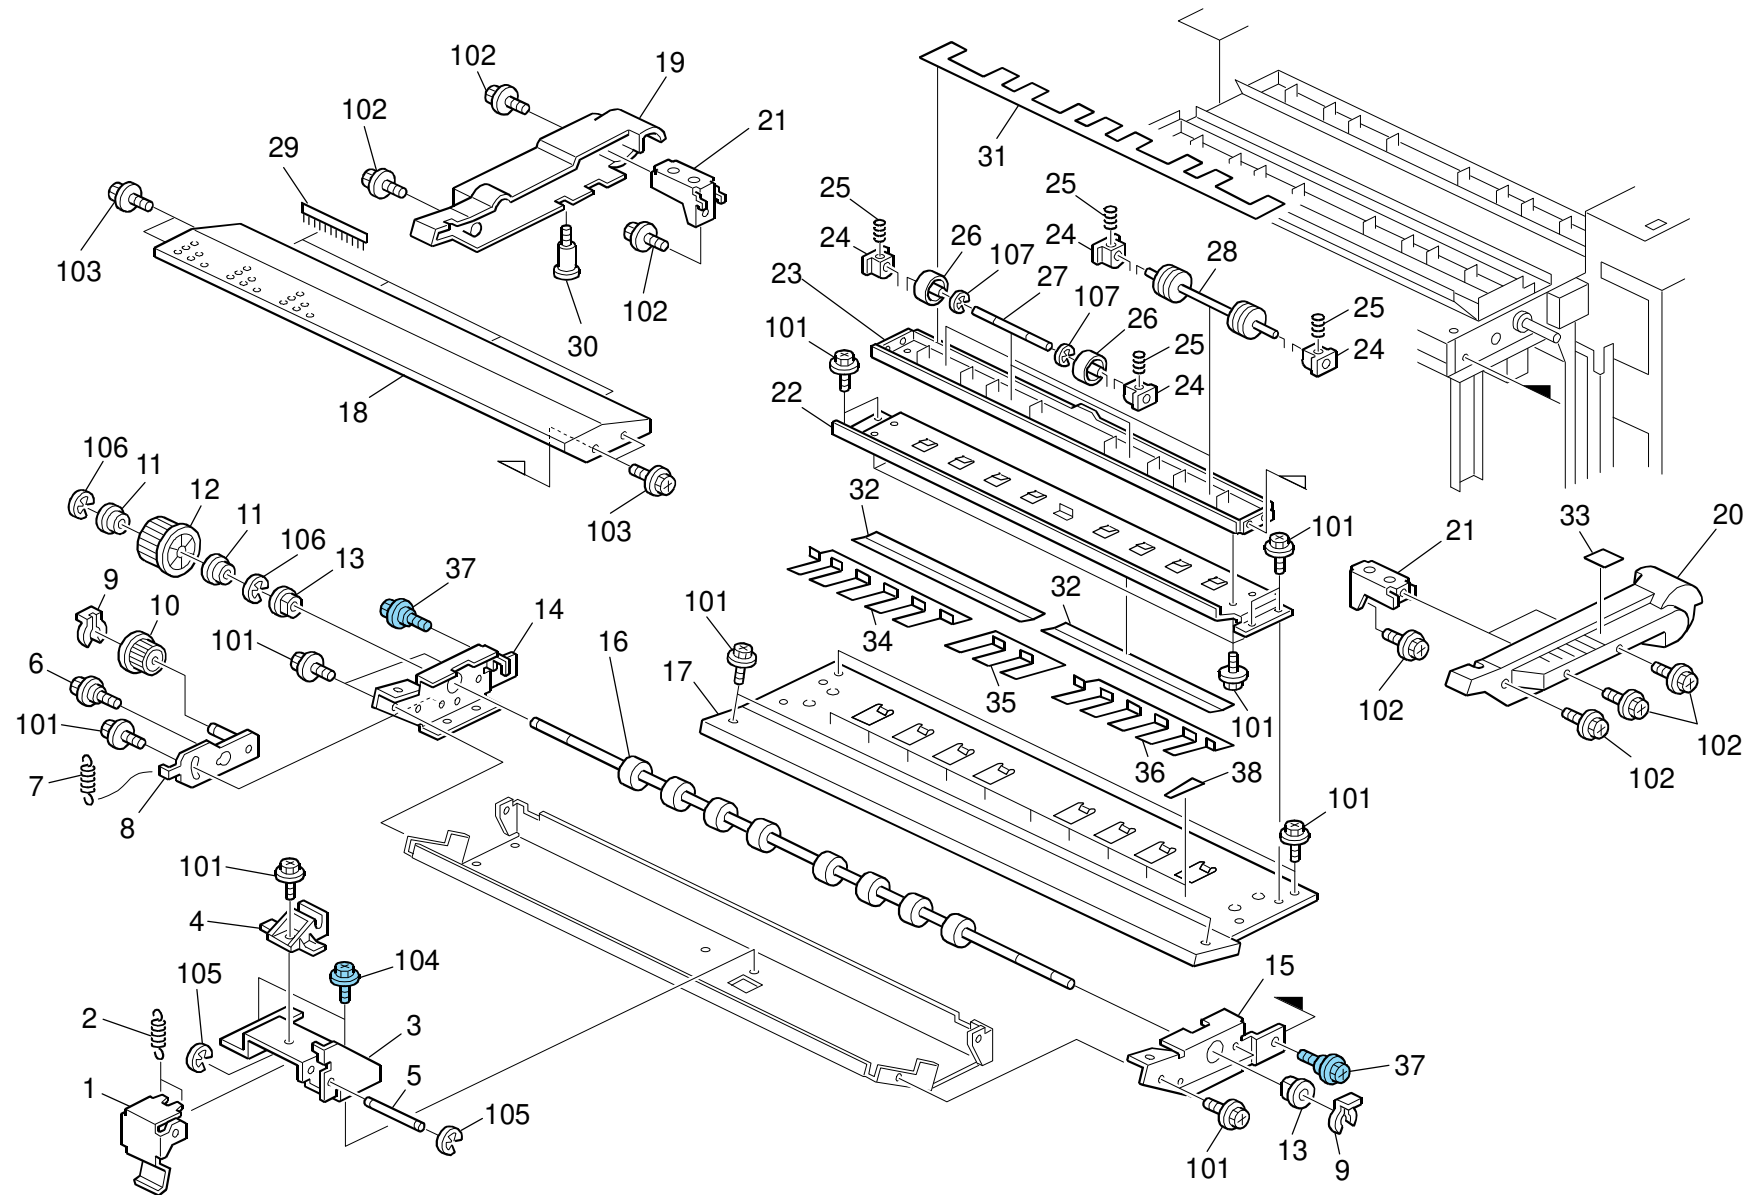

Index No.	Part No.	Description	Q'ty Per Assembly
1	D407 7727	Arm:Lock	1
2	D407 7766	Tension Spring:Connecting:20N	2
3	D407 7716	Bracket:Bearing	1
4	A174 3946	Arm Bushing	1
5	D407 7728	Shaft:Lock:Contact Point	1
6	AA14 3790	Screw:Contact Point	1
7	AA06 1006	Spring:Blade:Cleaning	1
8	D407 7724	Tightener:Ass'y	1
9	5215 2621	Snap Ring - M6	2
10	AB03 0273	Timing Pulley - T20	1
11	AB03 0564	Pulley - M17	2
12	A257 4632	Timing Pulley	1
13	AA08 2104	Bushing - 8x12x7	2
14	D407 7712	Bracket:Connecting:Left:BEL	1
15	D407 7713	Bracket:Connecting:Right:BEL	1
16	B889 1440	Transport Roller:Drive	1
17	D407 7718	Guide Plate:Connecting:Lower:BEL	1
18	D407 7722	Cover:Connecting:Upper:BEL	1
19	D407 7711	Cover:Connecting:Right Sideways:BEL	1
20	D407 7710	Cover:Connecting:Left Sideways:BEL	1
21	D407 7714	Bracket:Install:Cover:Connecting	3
22	D407 7717	Guide Plate:Connecting:Upper:BEL	1
23	B889 1161	Bracket:Pressure:Transport	1
24	AA08 2135	Bushing - DIA4	8
25	AA06 3416	Spring - 3.4N	8
26	B125 4752	Roller:Driven	4
27	B125 4751	Shaft:Driven	2
28	AF02 2156	Front Driven Transport Roller	2
29	B889 1232	Discharge Brush:2	4
30	AA14 3828	Screw:Fly Wheel	1
31	D407 7796	Guide:Middle:Connecting	1
32	D407 7733	Guide:Connecting:Entrance:Upper	2
33	B889 1678	Decal:Paper Jam:1	1
34	D407 7731	Guide:Connecting:Entrance:Upper:Right	1
35	D407 7720	Guide:Connecting:Entrance:Upper	1

Index No.	Part No.	Description	Q'ty Per Assembly
36	D407 7732	Guide:Connecting:Entrance:Upper:Left	1
37	B830 1135	Screw	2
38	D407 7742	Guide:Connecting:Guide Plate:Lower	10
101	0451 3006N	Tapping Screw - 3x6	
102	0451 3008N	Tapping Screw - M3x8	
103	0451 4008N	Tapping Screw:4x8	
104	0454 4008Q	Tapping Screw - M4x8	
105	0720 0040E	Retaining Ring - M4	
106	0720 0060E	Retaining Ring - M6	
107	0720 0030E	Retaining Ring - M3	

 10.Paper Transfer Entrans 1 (B890)

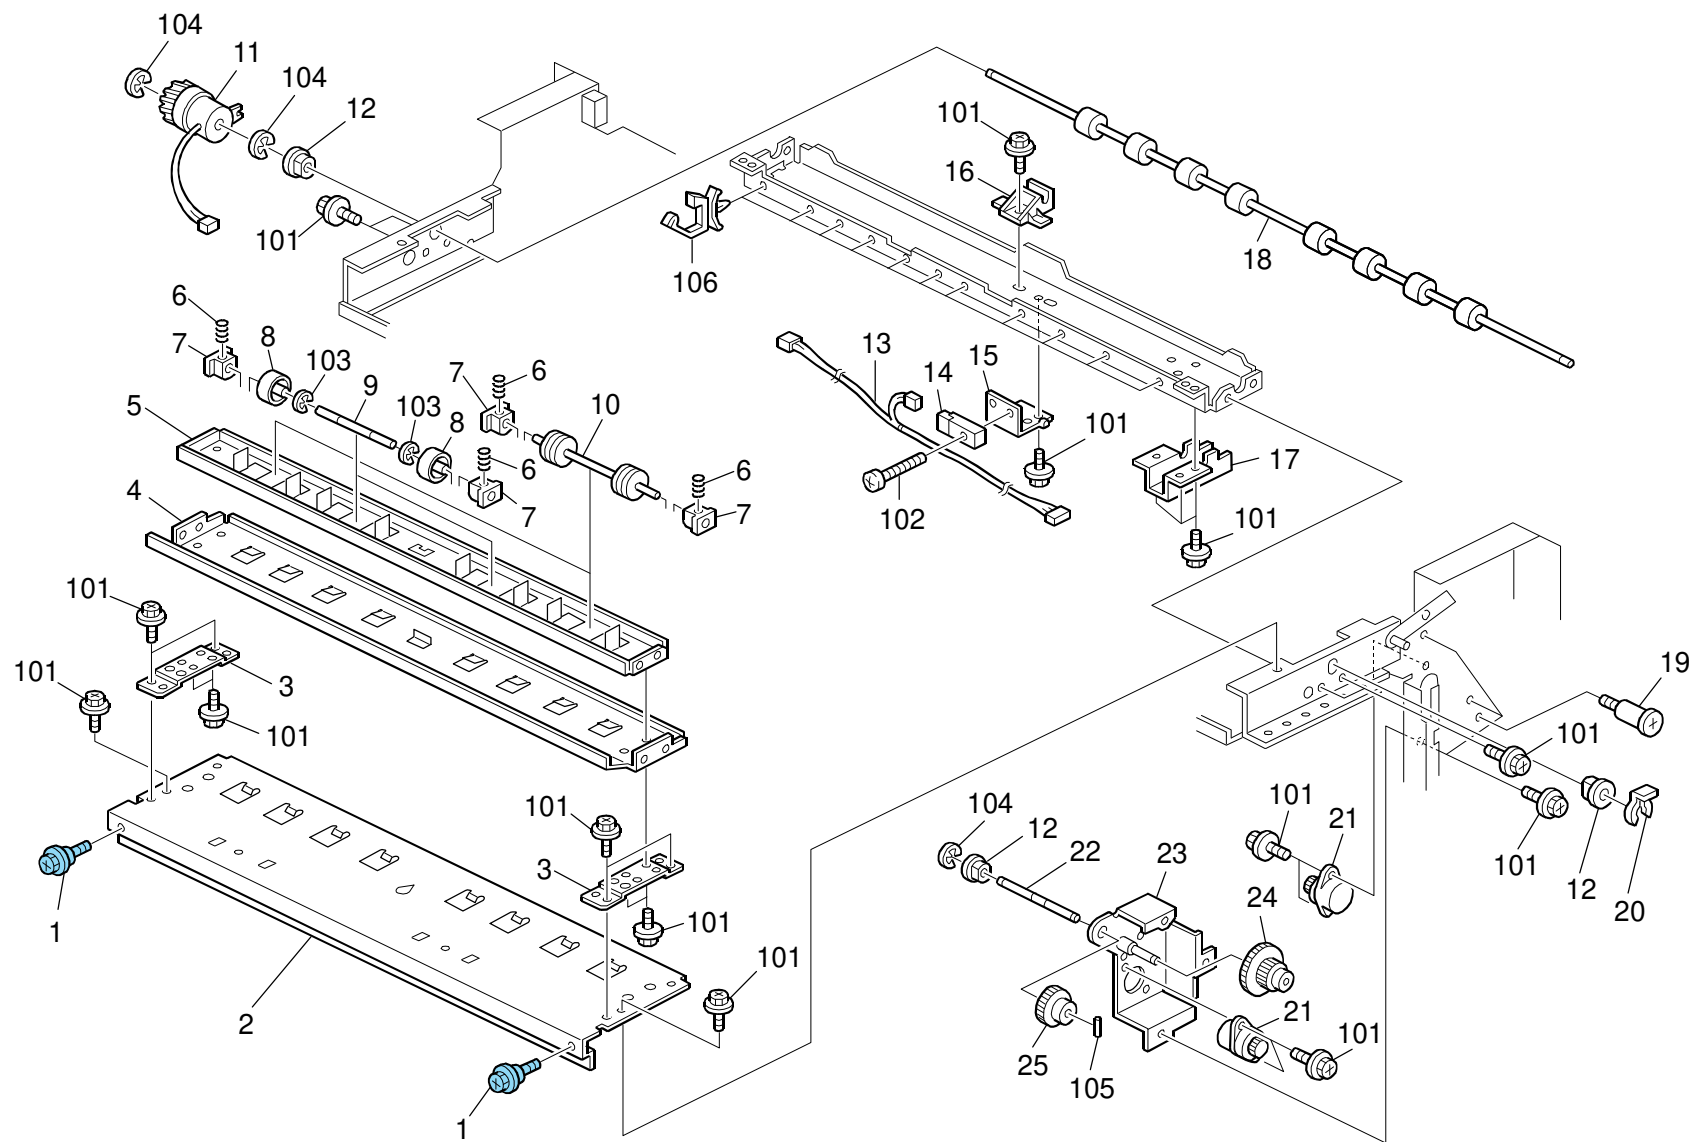


10.Paper Transfer Entrans 1 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B830 1135	Screw	2
2	B889 1519	Guide Plate:Connecting:Lower	1
3	B889 1521	Bracket:Guide Plate	2
4	B889 1522	Guide Plate:Connecting:Upper	1
5	B889 1161	Bracket:Pressure:Transport	1
6	AA06 3416	Spring - 3.4N	8
7	AA08 2135	Bushing - DIA4	8
8	B125 4752	Roller:Driven	4
9	B125 4751	Shaft:Driven	2
10	AF02 2156	Front Driven Transport Roller	2
11	AX21 0099	Magnetic Clutch	1
12	AA08 2104	Bushing - 8x12x7	3
13	B889 5549	Harness:DC:Entrance Sensor	1
14	AW01 0109	Photo Reflection Sensor:PS117ED1	1
15	B889 1398	Bracket:Sensor:Connecting	1
16	A174 3946	Arm Bushing	1
17	B889 1582	Bracket:Cover:Connecting:Lower	1
18	B889 1440	Transport Roller:Drive	1
19	AA14 3569	Screw	1
20	5215 2621	Snap Ring - M6	1
21	B889 1563	Oil Damper	2
22	B889 1562	Shaft:Right	1
23	B889 1551	Drum Stay:Soft Landing	1
24	H085 2140	Gear - Oil Damper : 2.0	1
25	B834 3214	Gear - 30Z	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0353 0140N	Screw:M3x14	
103	0720 0030E	Retaining Ring - M3	
104	0720 0060E	Retaining Ring - M6	
105	0633 0140G	Parallel Pin - 3x14	
106	1105 0511	Harness Clamp - LWS-0306ZC	

 11.Paper Transfer Entrans 2 (B890)

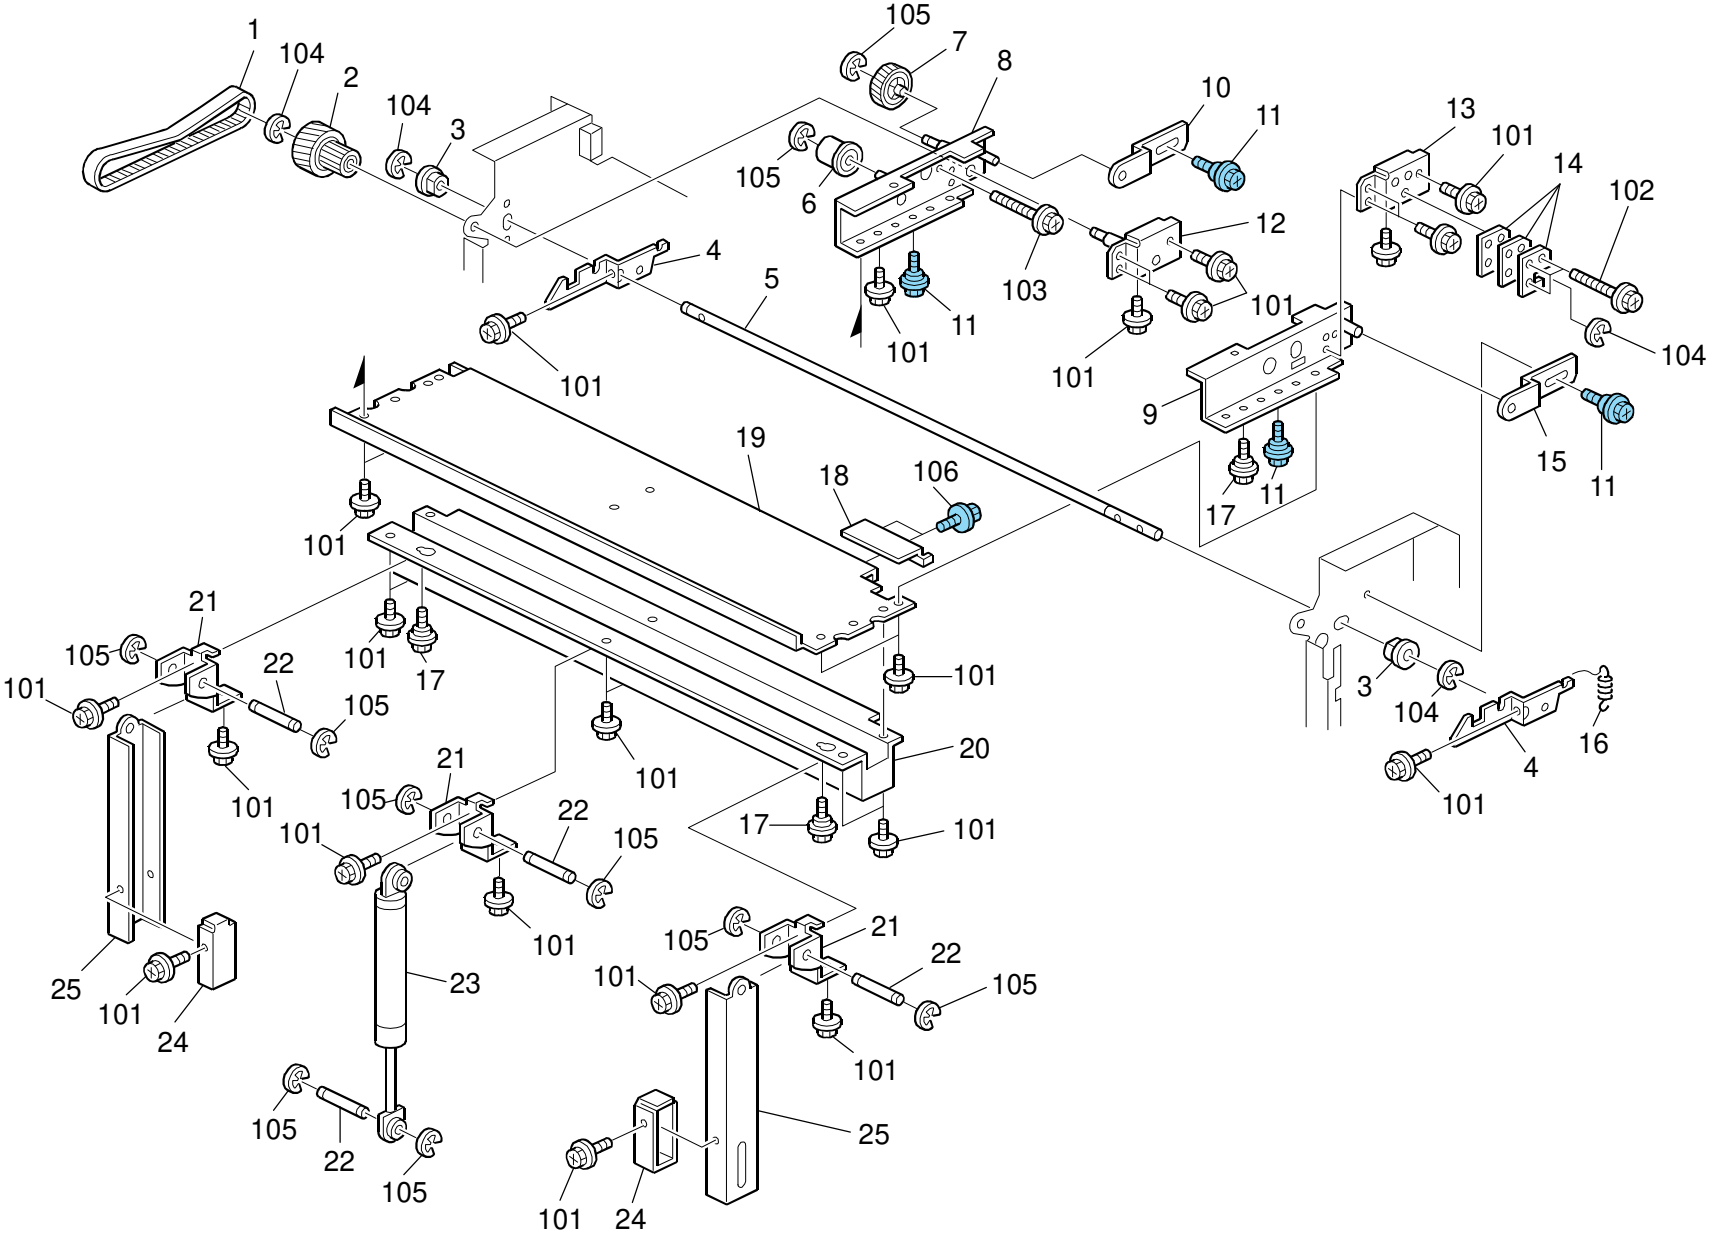


11.Paper Transfer Entrans 2 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA04 3629	Timing Belt - 60S3M564	1
2	B889 1431	Gear:Timing Pulley:34Z/29T	1
3	AA08 2104	Bushing - 8x12x7	2
4	B889 1540	Lever:Lock	2
5	B889 1541	Shaft:Lever	1
6	AB03 0551	Pulley:Idler:Fusing	1
7	B023 4570	Gear - 31Z	1
8	B889 1565	Bracket:Connecting:Left:Ass'y	1
9	B889 1568	Bracket:Connecting:Right:Ass'y	1
10	B889 1536	Stopper:Joint Unit	1
11	B830 1135	Screw	4
12	B889 1533	Bracket:Contact Point:Left	1
13	B889 1532	Bracket:Contact Point:Right	1
14	B889 1564	Stopper:Shaft	3
15	B889 1524	Stopper:Joint Unit:Right	1
16	AA06 0842	Tension Spring	1
17	AA14 3790	Screw:Contact Point	1
18	B889 1558	Bracket:Safety Switch	1
19	B889 1549	Cover:Connecting:Lower	1
20	D407 7754	Bracket:Protect	1
21	D407 7756	Bracket:Gas Spring:Arm:Upper	3
22	D407 7757	Shaft:Gas Spring:Upper	4
23	D407 7763	Gas Spring	1
24	D407 7753	Cover:Arm:Connecting	2
25	D407 7751	Arm:Connecting	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0451 4010N	Tapping Screw:4x10	
103	0451 3014N	Tapping Screw:3x14	
104	0720 0060E	Retaining Ring - M6	
105	0720 0040E	Retaining Ring - M4	
106	0454 3006Q	Tapping Screw - M3x6	

 12.Paper Transfer Entrans 3 (B890)

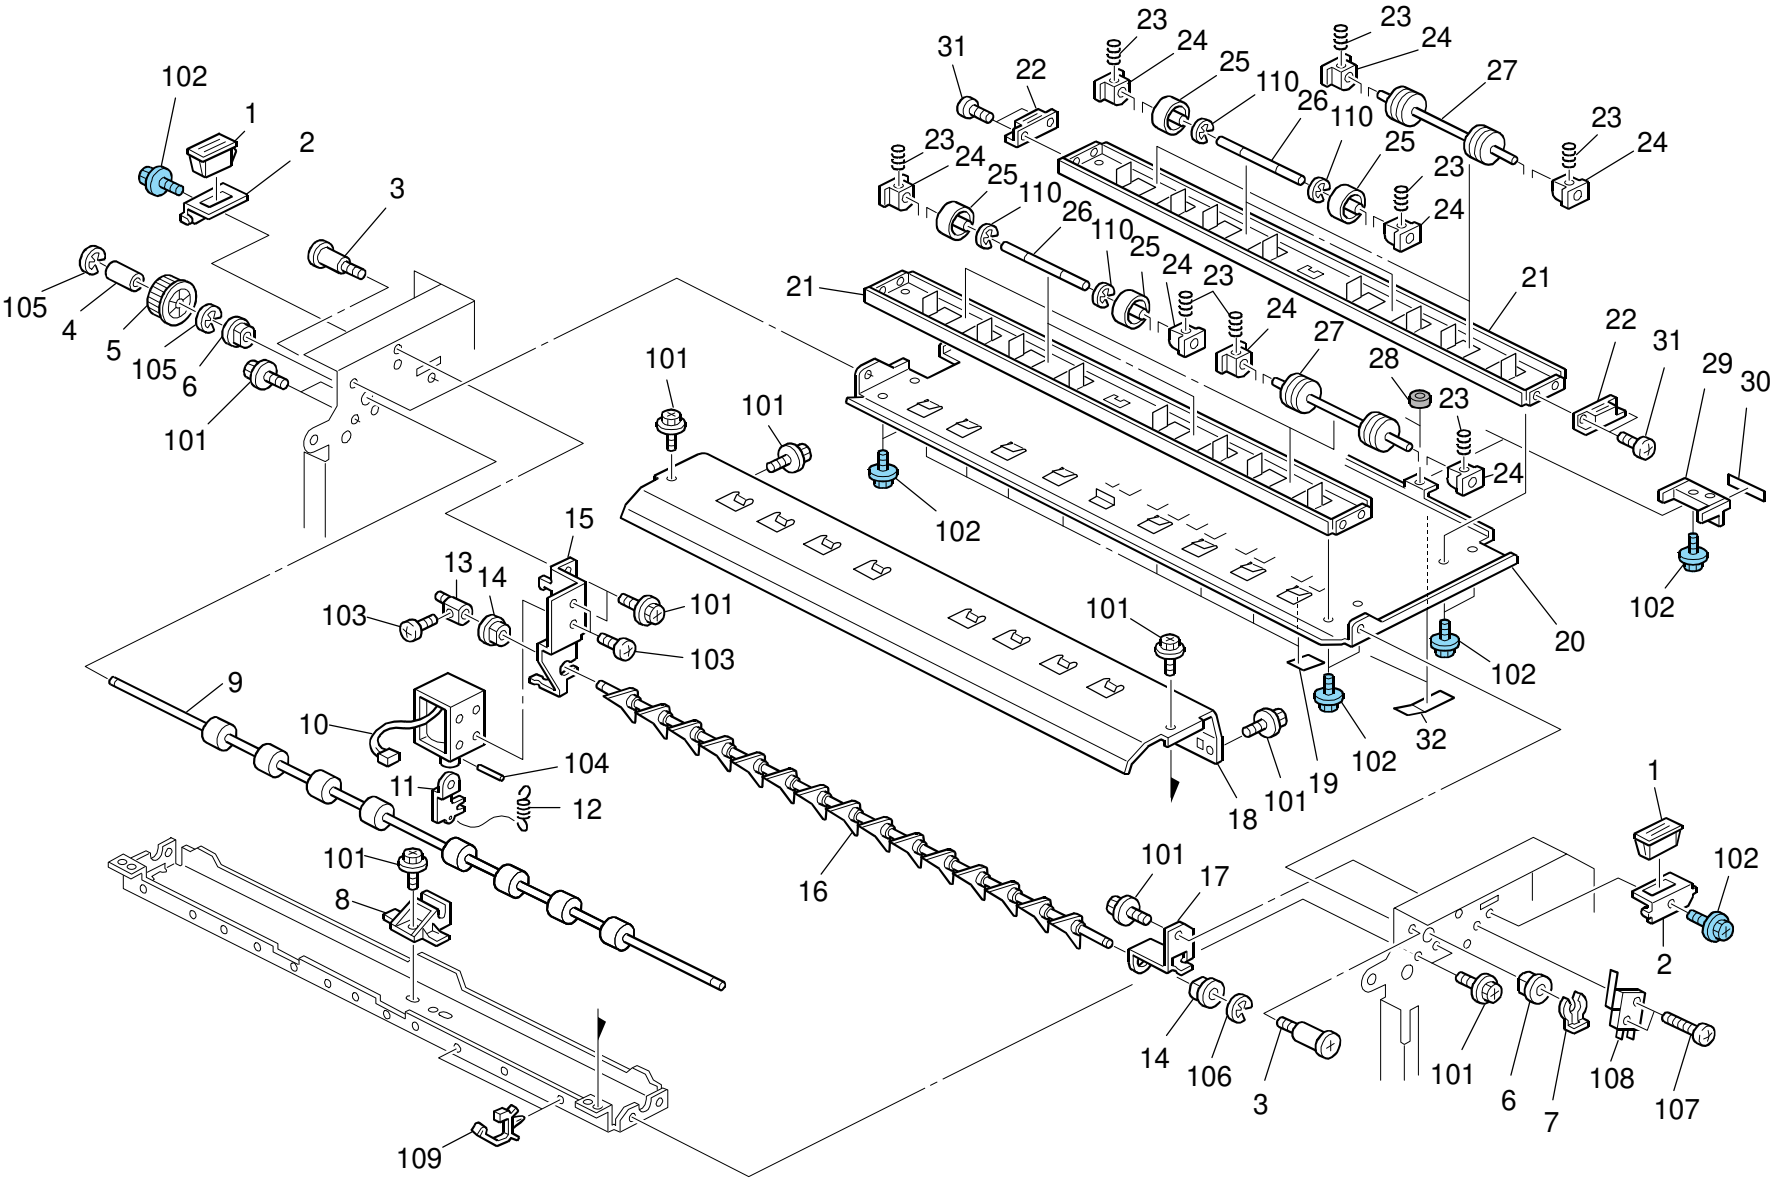


12.Paper Transfer Entrans 3 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AG07 0513	Magnet Catch	2
2	B889 1170	Bracket:Magnet Catch	2
3	AA14 3832	Release Spring Holder	2
4	B889 1435	Spacer:21.2	1
5	A257 4632	Timing Pulley	1
6	AA08 2104	Bushing - 8x12x7	2
7	5215 2621	Snap Ring - M6	1
8	A174 3946	Arm Bushing	1
9	B889 1440	Transport Roller:Drive	1
10	AX10 0038	DC Solenoid	1
11	A174 4387	Gate Pawl Arm	1
12	AA06 6366	Spring:Pressure Release	1
13	B889 1199	Pawl:Drive	1
14	AA08 2101	Bushing - 6x10x6	2
15	B889 1181	Bracket:Exchange Powl:Left	1
16	AF02 5029	Exit Separation Pawl	1
17	B889 1180	Bracket:Exchange Powl:Right	1
18	B889 1164	Guide Plate:Entrance:Lower	1
19	B889 1177	Guide:Exchange Powl	8
20	B889 1160	Guide Plate:Entrance:Upper	1
21	B889 1161	Bracket:Pressure:Transport	2
22	AG07 0504	Magnet Catch:44.1N	2
23	AA06 3416	Spring - 3.4N	16
24	AA08 2135	Bushing - DIA4	16
25	B125 4752	Roller:Driven	8
26	B125 4751	Shaft:Driven	4
27	AF02 2156	Front Driven Transport Roller	4
28	H072 2207	Guard	2
29	B889 1188	Grip:Guide Plate:Upper	2
30	B889 1678	Decal:Paper Jam:1	1
31	B851 1122	Screw:Round Point:M4x7	4
32	B889 1446	Guide:Exit:Upper	8

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0353 0040N	Screw - M3x4	
104	0623 0120E	Spring Pin - M3x12	
105	0720 0060E	Retaining Ring - M6	
106	0720 0040E	Retaining Ring - M4	
107	0353 0140N	Screw:M3x14	
108	1204 2529	Switch - V-5F912DN	
109	1105 0511	Harness Clamp - LWS-0306ZC	
110	0720 0030E	Retaining Ring - M3	

 13.Paper Exit (B890)

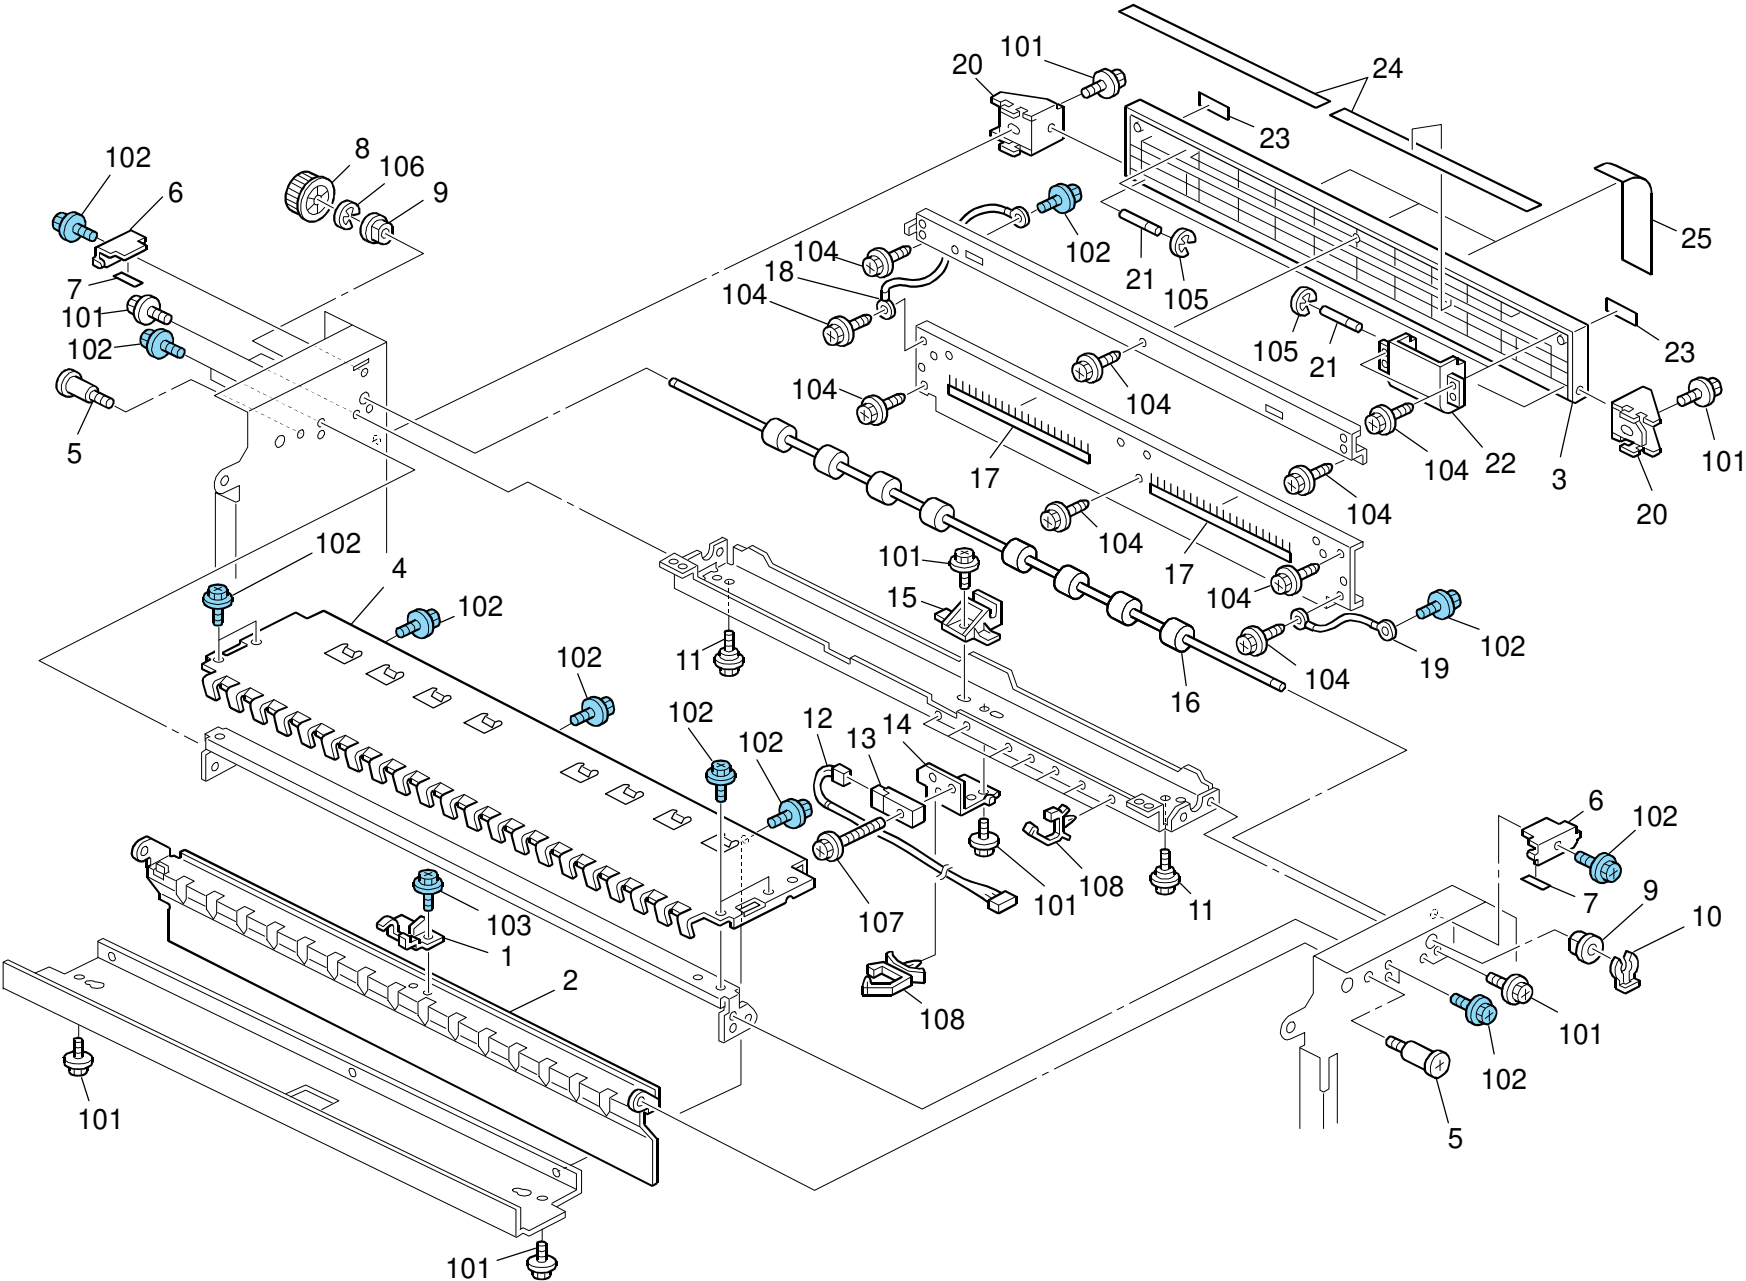


13.Paper Exit (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B010 4458	Gate Pawl Plate	1
2	B889 1168	Guide Plate:Transport:Rear:1	1
3	B889 1905	Cover:Open and Close	1
4	B889 1165	Guide Plate:Exit:Lower	1
5	AA14 3832	Release Spring Holder	2
6	B889 1214	Bracket:Guide Plate	2
7	B125 4817	Sheet:Magnet Catch	2
8	A257 4632	Timing Pulley	1
9	AA08 2104	Bushing - 8x12x7	2
10	5215 2621	Snap Ring - M6	1
11	AA14 3790	Screw:Contact Point	2
12	B889 5515	Harness:DC:Exhaust:Change	1
13	AW01 0109	Photo Reflection Sensor:PS117ED1	1
14	B889 1178	Bracket:Sensor:1	1
15	A174 3946	Arm Bushing	1
16	B889 1440	Transport Roller:Drive	1
17	AA12 0118	Paper Feed Discharge Brush	2
18	B125 5643	Ground Wire:Scanner Unit:3	1
19	B125 5683	Ground Wire:Pressure Plate	1
20	B889 1904	Bracket:Contact Point	2
21	B889 1912	Shaft:Contact Point	2
22	B889 1906	Grip:Cover:Open and Close	2
23	B889 1678	Decal:Paper Jam:1	1
24	B889 1184	Guide:Exit:Upper	1
25	B889 1976	Film:Cover:Open and Close:Large	3

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0454 4008Q	Tapping Screw - M4x8	
104	0450 4010N	Tapping Screw:M4x10	
105	0720 0040E	Retaining Ring - M4	
106	0720 0060E	Retaining Ring - M6	
107	0451 3014N	Tapping Screw:3x14	
108	1105 0511	Harness Clamp - LWS-0306ZC	

 14.Paper Folder Transfer 1 (B890)

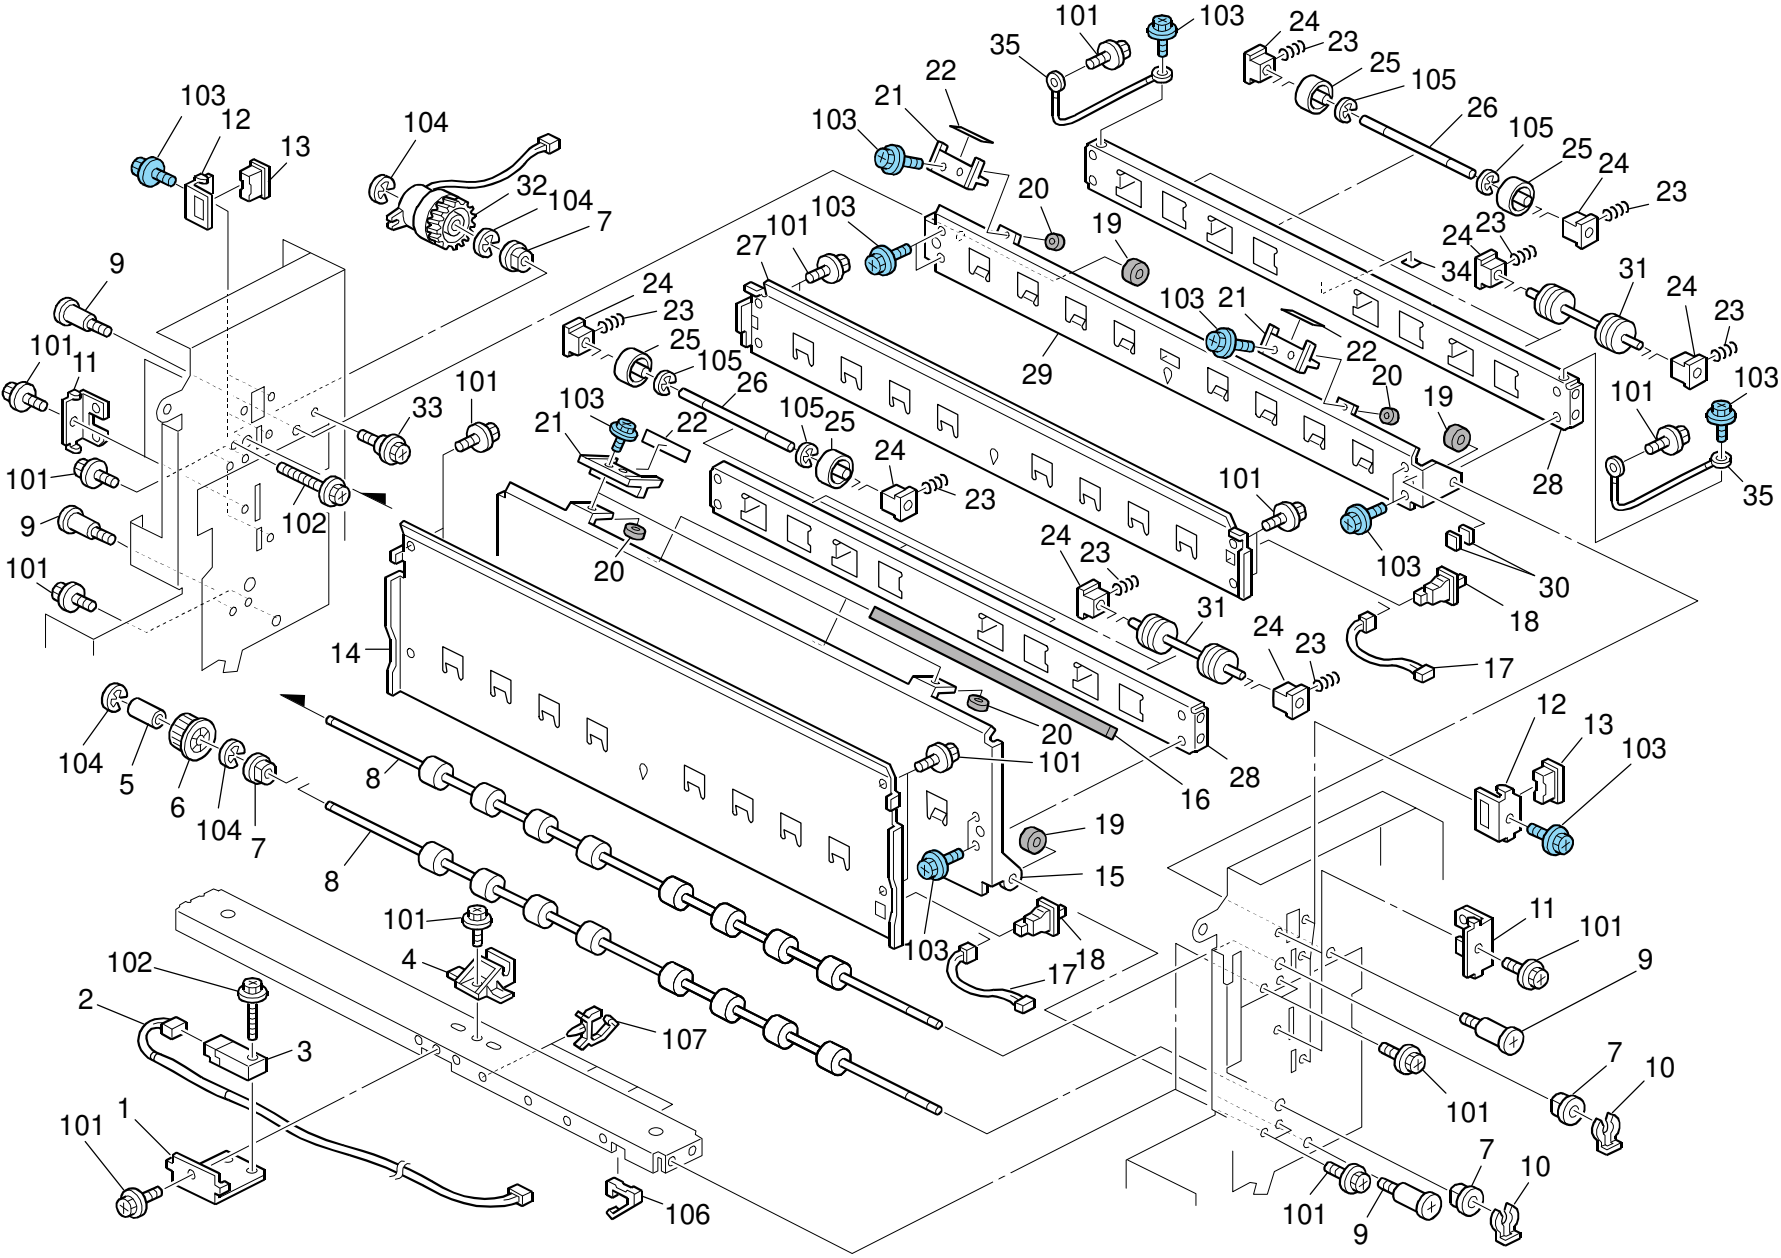


14.Paper Folder Transfer 1 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B889 1179	Bracket:Sensor:2	2
2	B889 5542	Harness:DC:Paper Crimp	2
3	AW01 0109	Photo Reflection Sensor:PS117ED1	2
4	A174 3946	Arm Bushing	2
5	B889 1435	Spacer:21.2	1
6	A257 4632	Timing Pulley	1
7	AA08 2104	Bushing - 8x12x7	4
8	B889 1440	Transport Roller:Drive	2
9	AA14 3832	Release Spring Holder	4
10	5215 2621	Snap Ring - M6	2
11	B889 1169	Bracket:Guide Plate	4
12	B889 1170	Bracket:Magnet Catch	6
13	AG07 0513	Magnet Catch	6
14	B889 1167	Guide Plate:Transport:Front Upper:2	1
15	B889 1163	Guide Plate:Transport:Rear:3	1
16	B889 1195	Guard:Guide Plate	2
17	B889 5547	Harness:DC:Push Switch	2
18	G020 5626	Push Switch	2
19	B275 1670	Guard Burring	4
20	H072 2207	Guard	4
21	B889 1186	Grip:Guide Plate	4
22	B889 1678	Decal:Paper Jam:1	1
23	AA06 3416	Spring - 3.4N	16
24	AA08 2135	Bushing - DIA4	16
25	B125 4752	Roller:Driven	8
26	B125 4751	Shaft:Driven	4
27	B889 1166	Guide Plate:Transport:Front Upper	1
28	B889 1143	Bracket:Pressure:Transport:Lower	2
29	B889 1162	Guide Plate:Transport:Rear:2	1
30	B257 4354	Spacer - Fusing Entrance Guide Plate	2
31	AF02 2156	Front Driven Transport Roller	4
32	AX21 0099	Magnetic Clutch	1
33	AA14 3542	Screw:M3:DIA4x5.6	1
34	B889 1450	Sheet:Block Light	1
35	B889 1982	Wire:Stopper:Guide Plate	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0451 3014N	Tapping Screw:3x14	
103	0454 3006Q	Tapping Screw - M3x6	
104	0720 0060E	Retaining Ring - M6	
105	0720 0030E	Retaining Ring - M3	
106	1105 0522	Edge Saddle - LES0510	
107	1105 0511	Harness Clamp - LWS-0306ZC	

 15.Paper Folder Transfer 2 (B890)

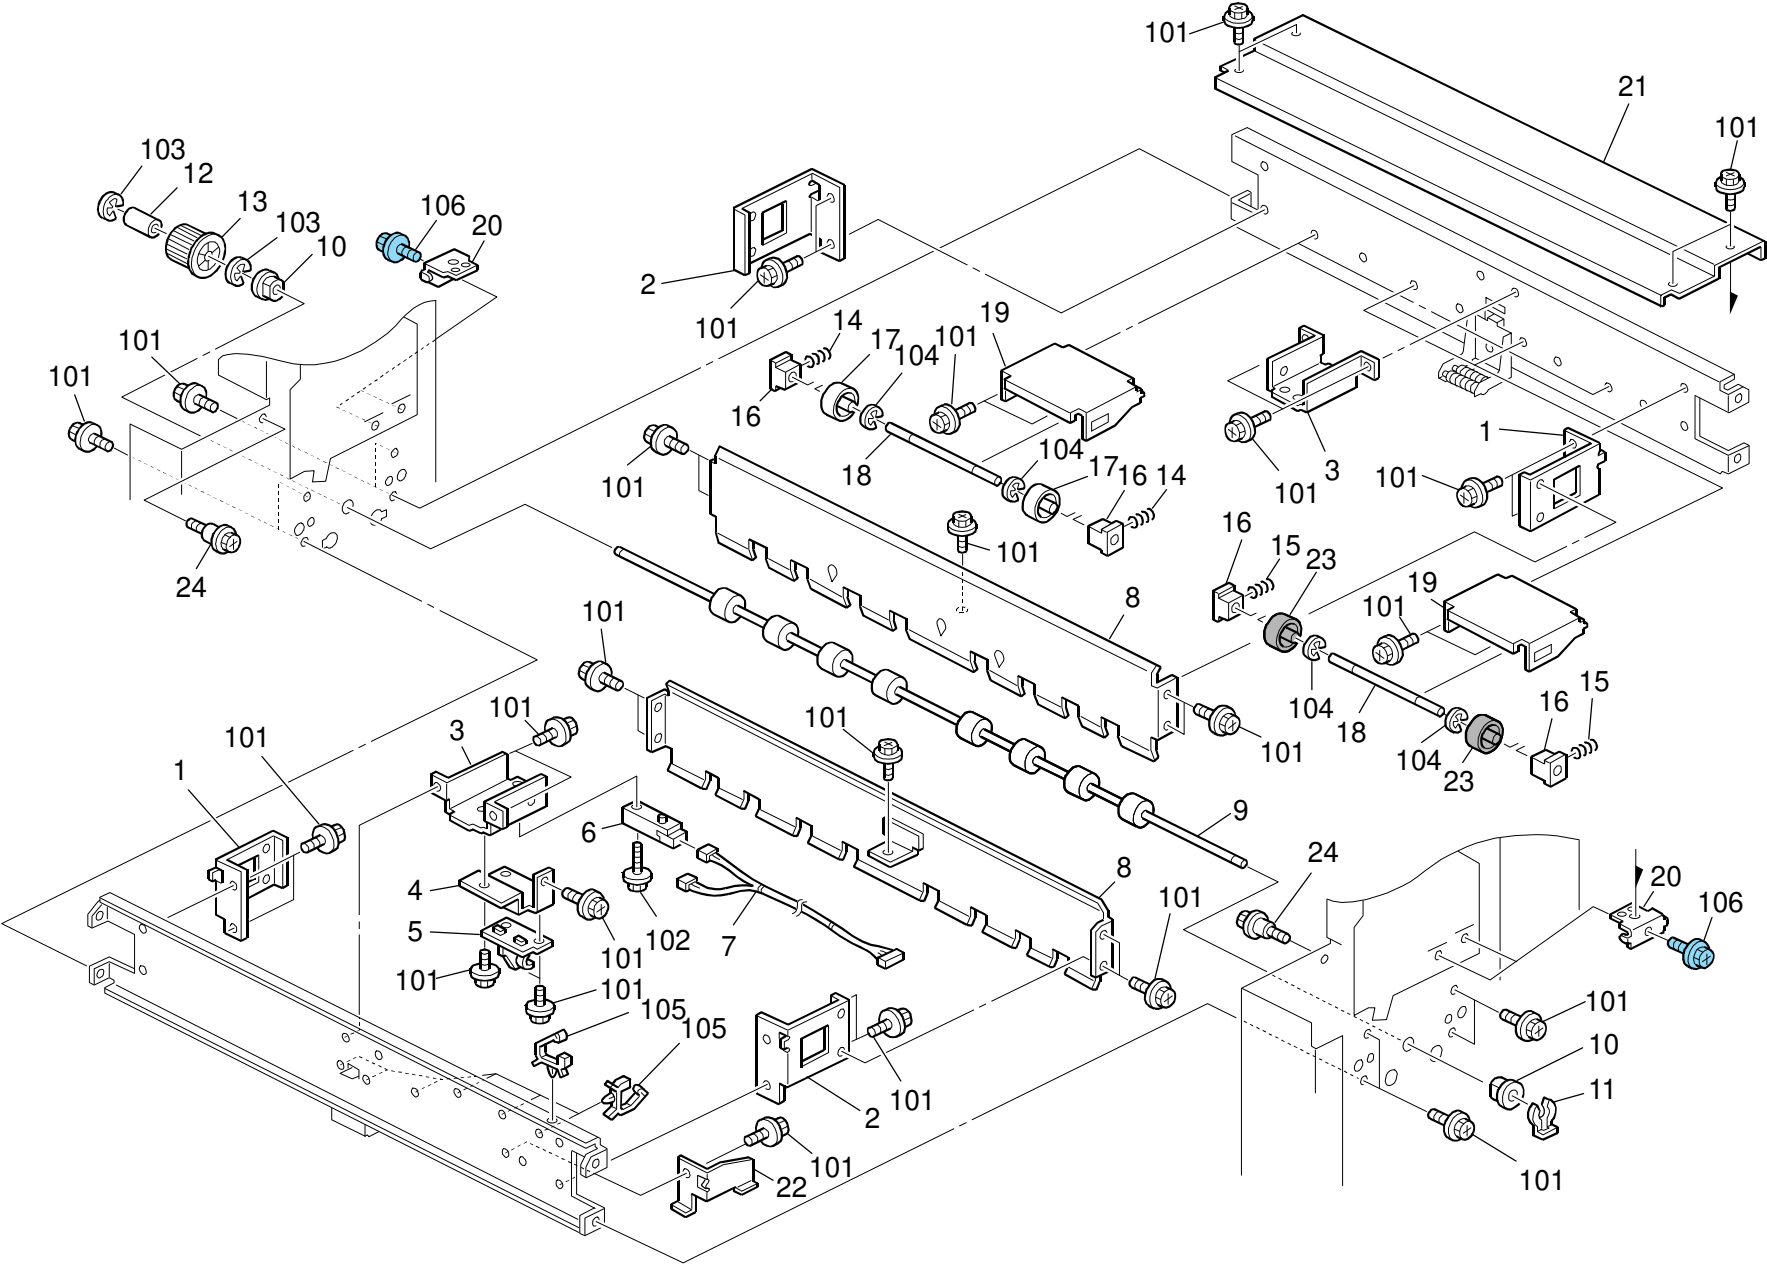


15.Paper Folder Transfer 2 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B889 1242	Bracket:Guide Plate:2	2
2	B889 1241	Bracket:Guide Plate:1	2
3	B889 1238	Bracket:Sensor	2
4	B889 1239	Bracket:Bushing	1
5	B104 2875	Middle Transport Roller Bushing	1
6	AW01 0109	Photo Reflection Sensor:PS117ED1	1
7	B889 5543	Harness:DC:Paper Crimp:Entrance	1
8	B889 1243	Guide Plate:Transport:Lower	2
9	B889 1440	Transport Roller:Drive	1
10	AA08 2104	Bushing - 8x12x7	2
11	5215 2621	Snap Ring - M6	1
12	B889 1435	Spacer:21.2	1
13	A257 4632	Timing Pulley	1
14	AA06 3956	Compression Spring:Driven:6.6N	4
15	B889 1436	Compression Spring:Middle	4
16	AA08 2135	Bushing - DIA4	8
17	B125 4752	Roller:Driven	4
18	B125 4751	Shaft:Driven	4
19	B889 1240	Bracket:Pressure:Transport:2	4
20	B889 1214	Bracket:Guide Plate	4
21	B889 1158	Inner Cover:Rear	1
22	B889 1391	Stopper:Guide:Upper	1
23	B889 1356	Roller:Driven	4
24	AA14 3555	Screw - M3x5	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0451 3014N	Tapping Screw:3x14	
103	0720 0060E	Retaining Ring - M6	
104	0720 0030E	Retaining Ring - M3	
105	1105 0511	Harness Clamp - LWS-0306ZC	
106	0454 3006Q	Tapping Screw - M3x6	

 16.Paper Folder 1 (B890)

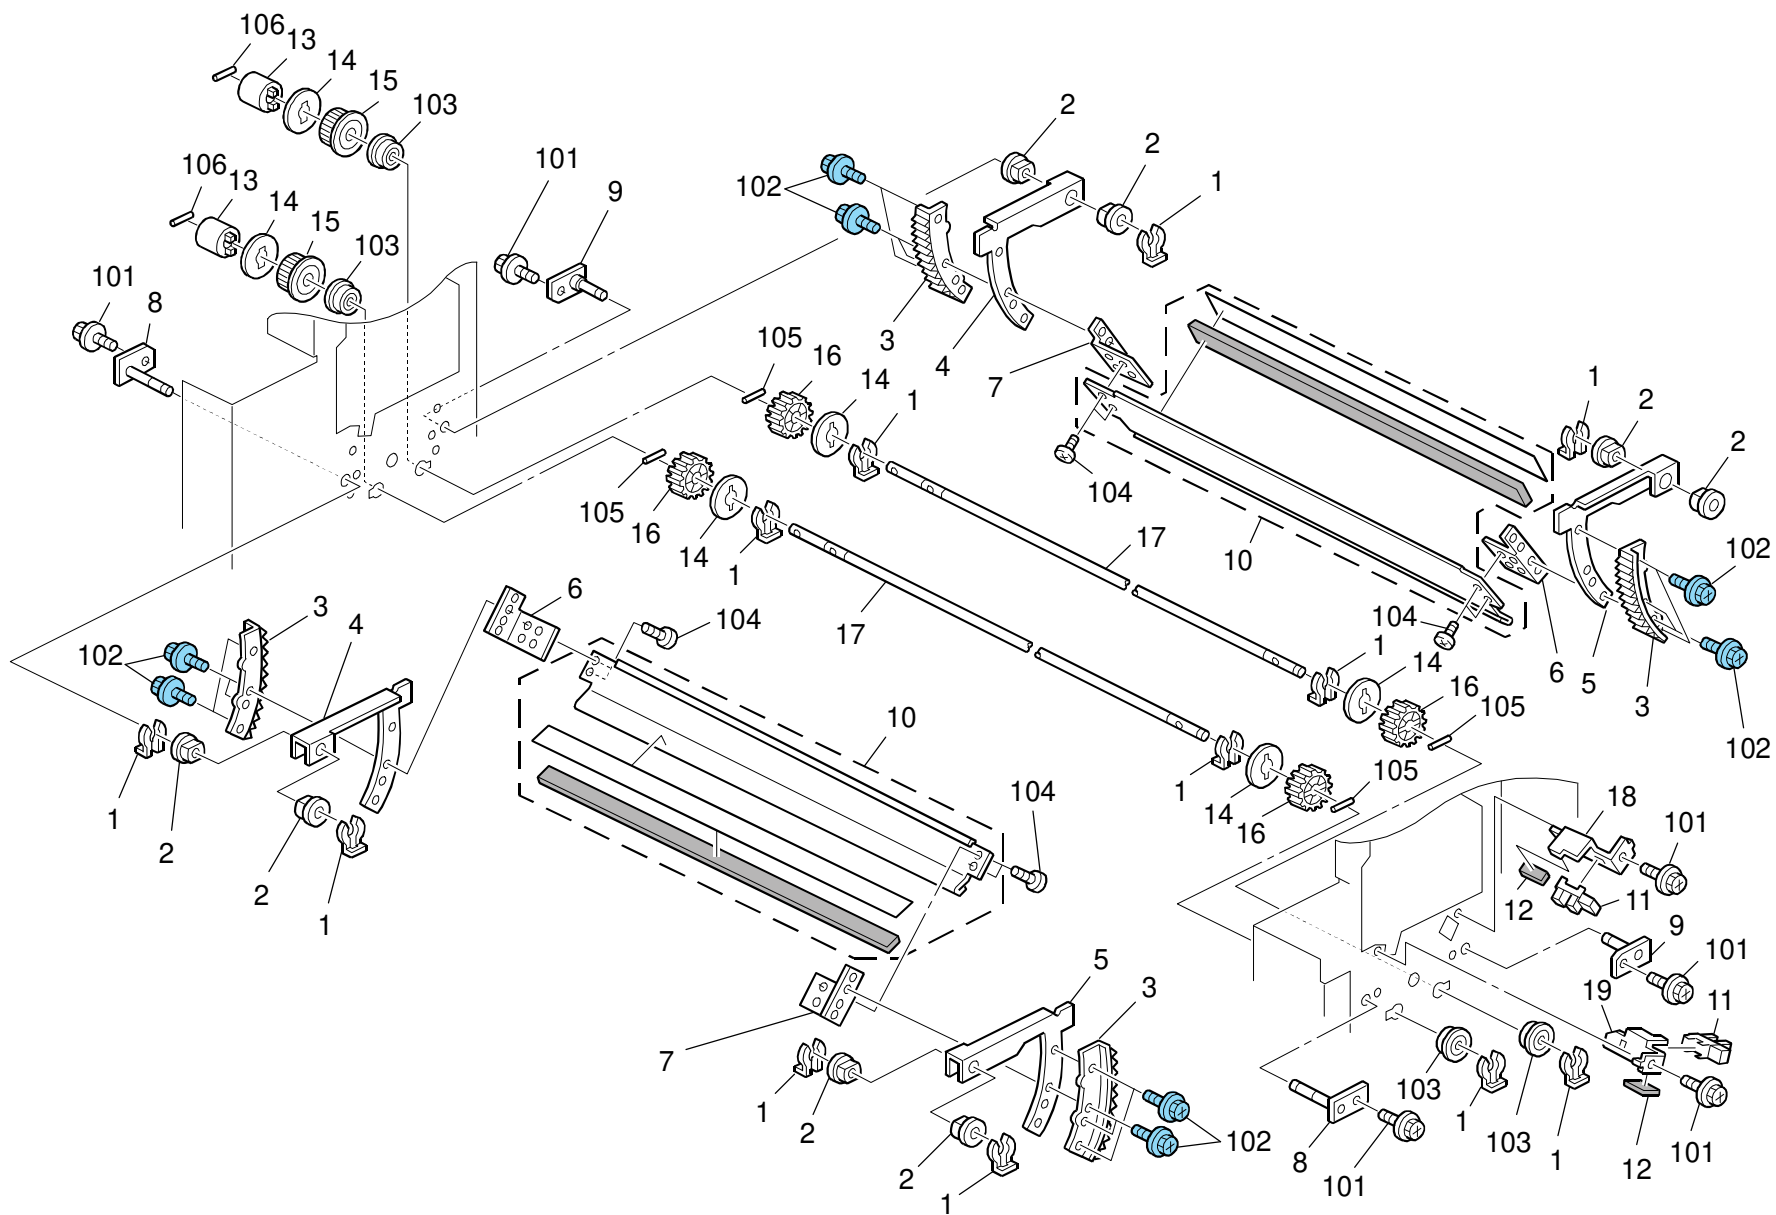


16.Paper Folder 1 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	5215 2621	Snap Ring - M6	12
2	AA08 2104	Bushing - 8x12x7	8
3	B889 1339	Gear:Z251	4
4	B889 1337	Arm:Guide:Left	2
5	B889 1338	Arm:Guide:Right	2
6	B889 1342	Spacer:Guide:Right	2
7	B889 1341	Spacer:Guide:Left	2
8	B889 1332	Bracket:Guide:1	2
9	B889 1335	Bracket:Guide:2	2
10	B889 1309	Guide:Paper Crimp	2
11	AW02 0141	Photointerruptor	2
12	B624 3046	DC Solenoid Cushion	2
13	B889 1321	Torque Limiter:Guide	2
14	B889 1325	Flange	6
15	B889 1322	Timing Pulley:28T	2
16	B889 1323	Gear:Z26	4
17	B889 1320	Shaft:Drive:Guide	2
18	B889 1329	Bracket:Sensor:2	1
19	B889 1328	Bracket:Sensor:1	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3008Q	Tapping Screw:3x8	
103	0742 3808	Ball Bearing - 8x16x5	
104	0313 0060N	Screw - M3x6	
105	0633 0200G	Pin - M3x20	
106	0632 0100G	Pin - 2x10mm	

 17.Paper Folder 2 (B890)

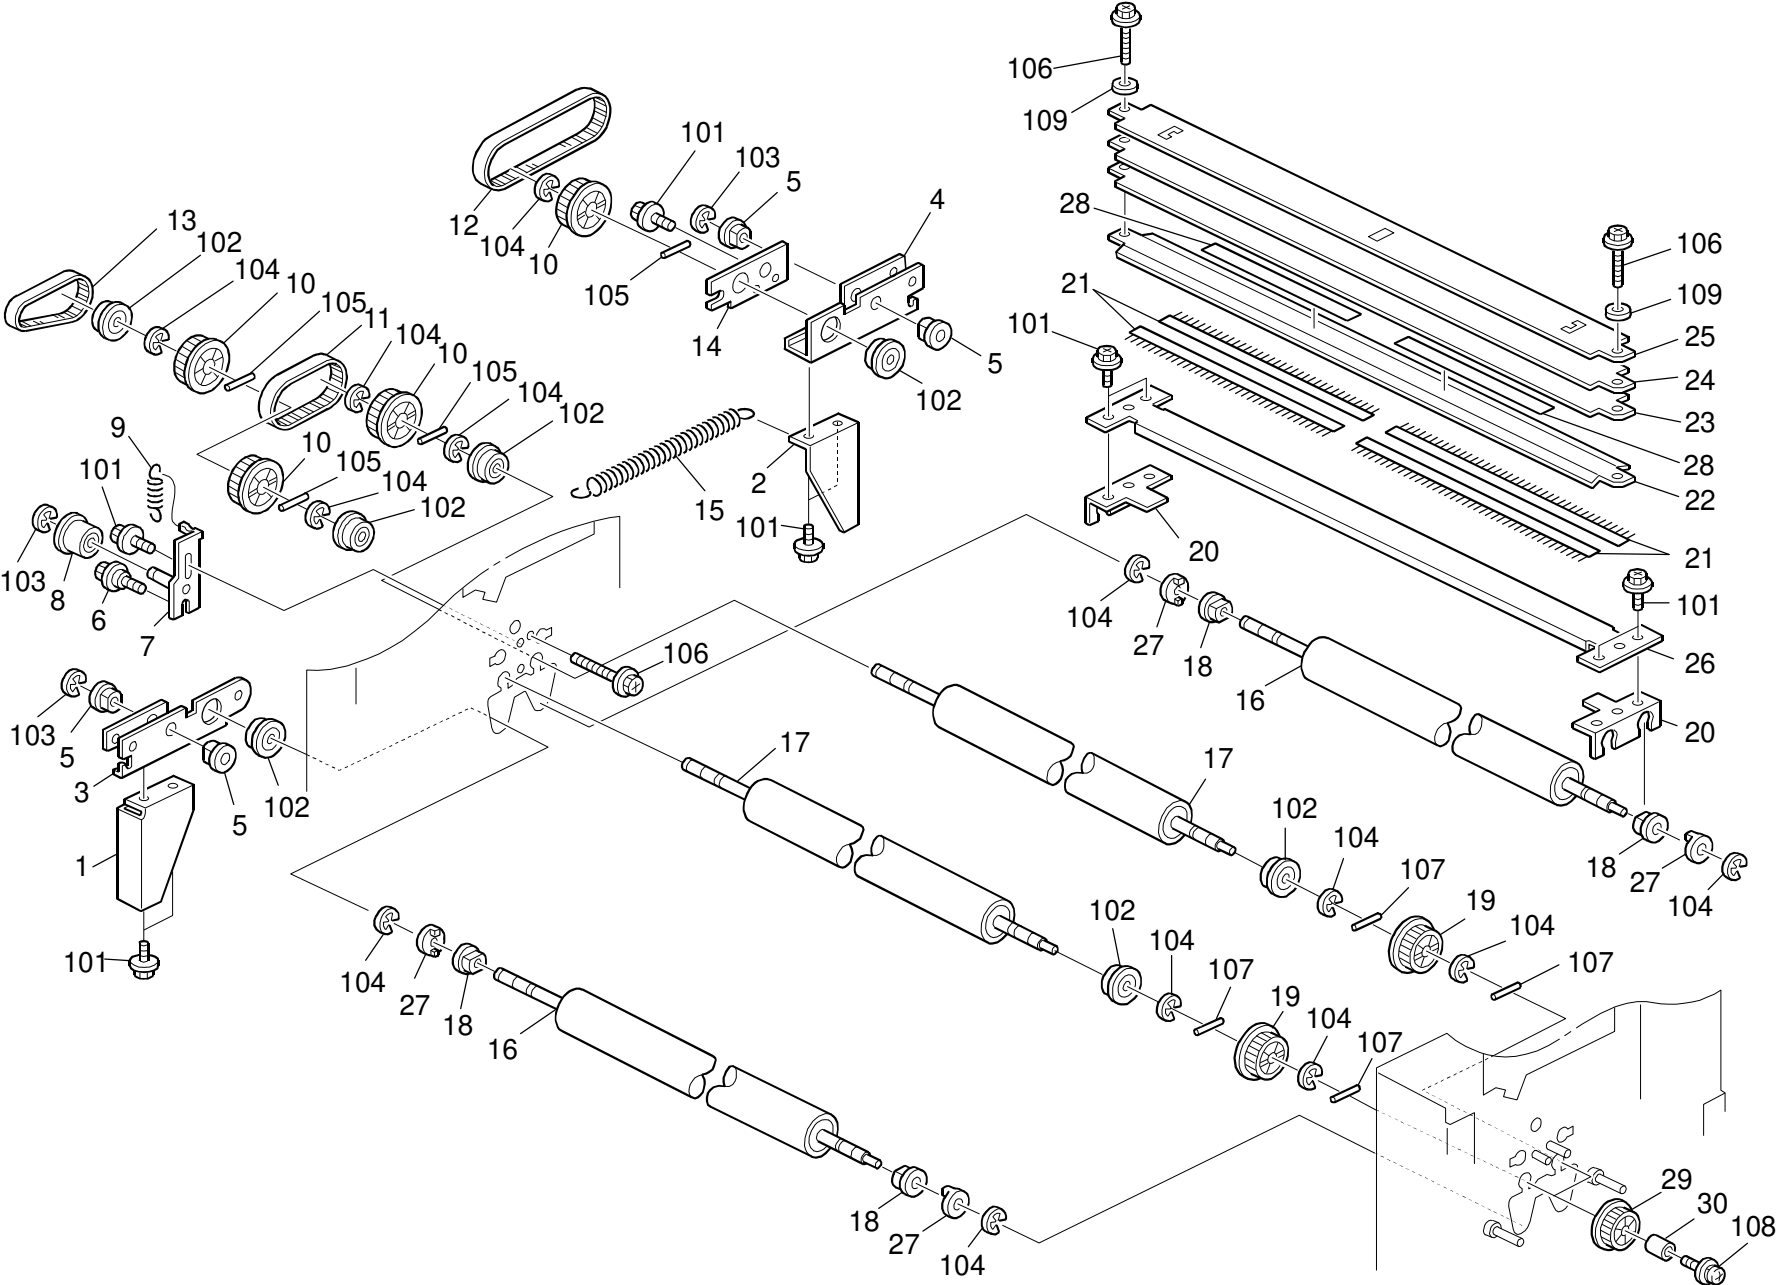


17.Paper Folder 2 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B889 1370	Arm:Pressure:Roller:1	1
2	B889 1371	Arm:Pressure:Roller:2	1
3	B889 1296	Arm:Roller:Lower:Left Front	1
4	B889 1250	Arm:Roller:Lower:Right Front	1
5	5446 6214	Shaft Holder - Pick-up Roller	4
6	AA14 3790	Screw:Contact Point	1
7	B889 1262	Bracket:Tightener:Left and Right	1
8	A257 4650	Tightener Pulley	1
9	A257 6429	Pressure Spring	1
10	B889 1260	Timing Pulley:44T	4
11	B889 1261	Timing Belt:B120S3M273	1
12	B889 1277	Timing Belt:B60S3M360	1
13	B889 1268	Timing Belt:B120S3M318	1
14	B889 1295	Bracket:Arm:1	1
15	B889 1387	Tension Spring:Pressure:Roller	1
16	B889 1280	Roller:Paper Crimp	2
17	B889 1289	Roller:Paper Crimp:80	2
18	5053 0419	Bushing - 10mm	4
19	B889 1374	Timing Pulley:Roller:Upper	2
20	B889 1347	Guide Plate:Guide Plate:Middle	2
21	AA12 0118	Paper Feed Discharge Brush	4
22	B889 1224	Guide Plate:Lower Middle	1
23	B889 1345	Guide Plate:Paper Crimp:Lower Middle:4	1
24	B889 1344	Guide Plate:Paper Crimp:Lower Middle:3	1
25	B889 1213	Guide Plate:Lower Middle:2	1
26	B889 1346	Stay:Paper Crimp:Lower Middle:2	1
27	B889 1348	Collar:Roller	4
28	B889 1352	Spacer:Guide Plate:Paper Crimp	2
29	B889 1252	Timing Pulley:34T	2
30	B352 3170	Spacer	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0742 3910	Ball Bearing:10x22x6	
103	0720 0060E	Retaining Ring - M6	
104	0720 0080E	Retaining Ring - M8	
105	0633 0280G	Pin - 3x28	
106	0451 3014N	Tapping Screw:3x14	
107	0633 0200G	Pin - M3x20	
108	0954 4008N	Screw - M4x8	
109	0701 0050N	Washer:DIA5	

 18.Paper Folder 3 (B890)

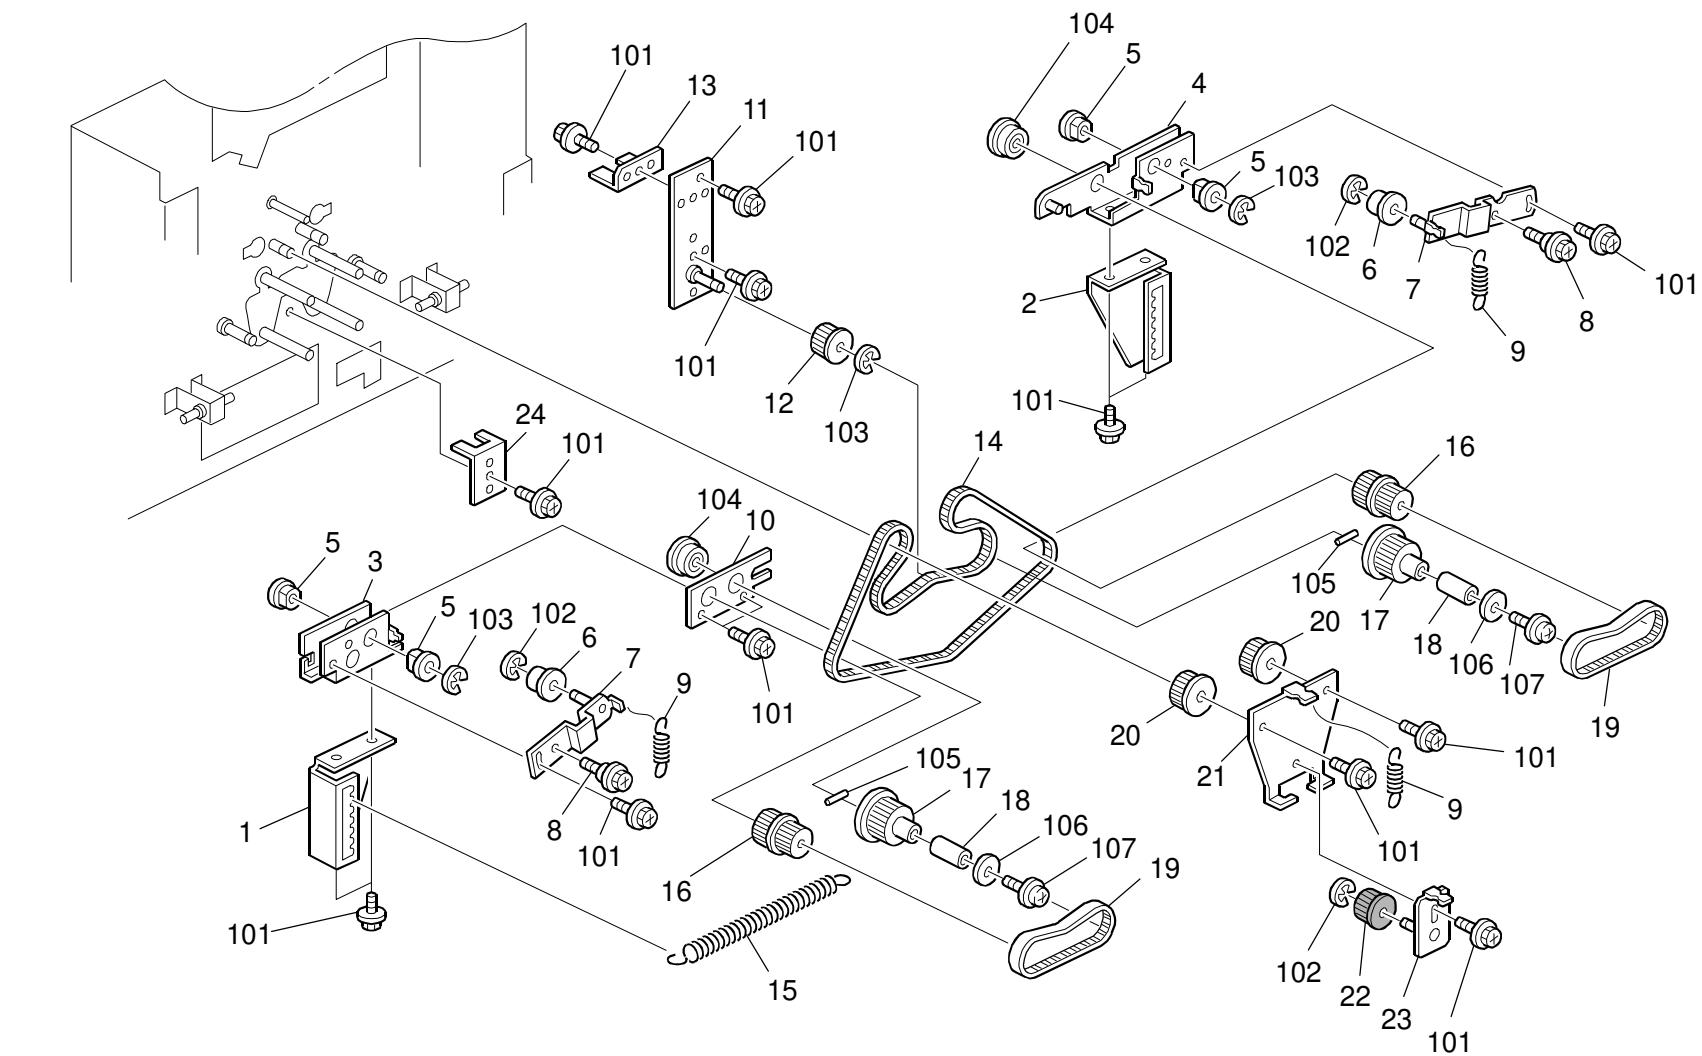


18.Paper Folder 3 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B889 1371	Arm:Pressure:Roller:2	1
2	B889 1370	Arm:Pressure:Roller:1	1
3	B889 1250	Arm:Roller:Lower:Right Front	1
4	B889 1296	Arm:Roller:Lower:Left Front	1
5	5446 6214	Shaft Holder - Pick-up Roller	4
6	AB03 0098	Belt Tightener	2
7	B889 1381	Bracket:Tightener:Roller:Lower:Ass'y	2
8	AA14 3790	Screw:Contact Point	2
9	AA06 6152	Tension Spring	3
10	B889 1295	Bracket:Arm:1	1
11	B889 1384	Bracket:Tightener:Roller:Middle Lower:Peen	1
12	A228 1100	Idler Pulley Z20	1
13	B889 1376	Stopper:Guide:Right	1
14	B889 1253	Timing Belt:B80DS3M444	1
15	B889 1387	Tension Spring:Pressure:Roller	1
16	B889 1372	Timing Pulley:Idler:Lower	2
17	B889 1375	Timing Pulley:Roller:Lower	2
18	B352 3170	Spacer	2
19	B889 1373	Timing Belt:60S3M198	2
20	B889 1377	Timing Pulley:Idler:Upper	2
21	B889 1255	Guide Plate:Idler	1
22	AB03 0806	Pulley - 19T	1
23	B889 1378	Bracket:Tightener:Roller:Upper:Ass'y	1
24	B889 1355	Stopper:Guide	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0720 0040E	Retaining Ring - M4	
103	0720 0060E	Retaining Ring - M6	
104	0742 3910	Ball Bearing:10x22x6	
105	0633 0200G	Pin - M3x20	
106	0701 0040N	Washer:DIA4	
107	0954 4008N	Screw - M4x8	

 19.Paper Folder 4 (B890)

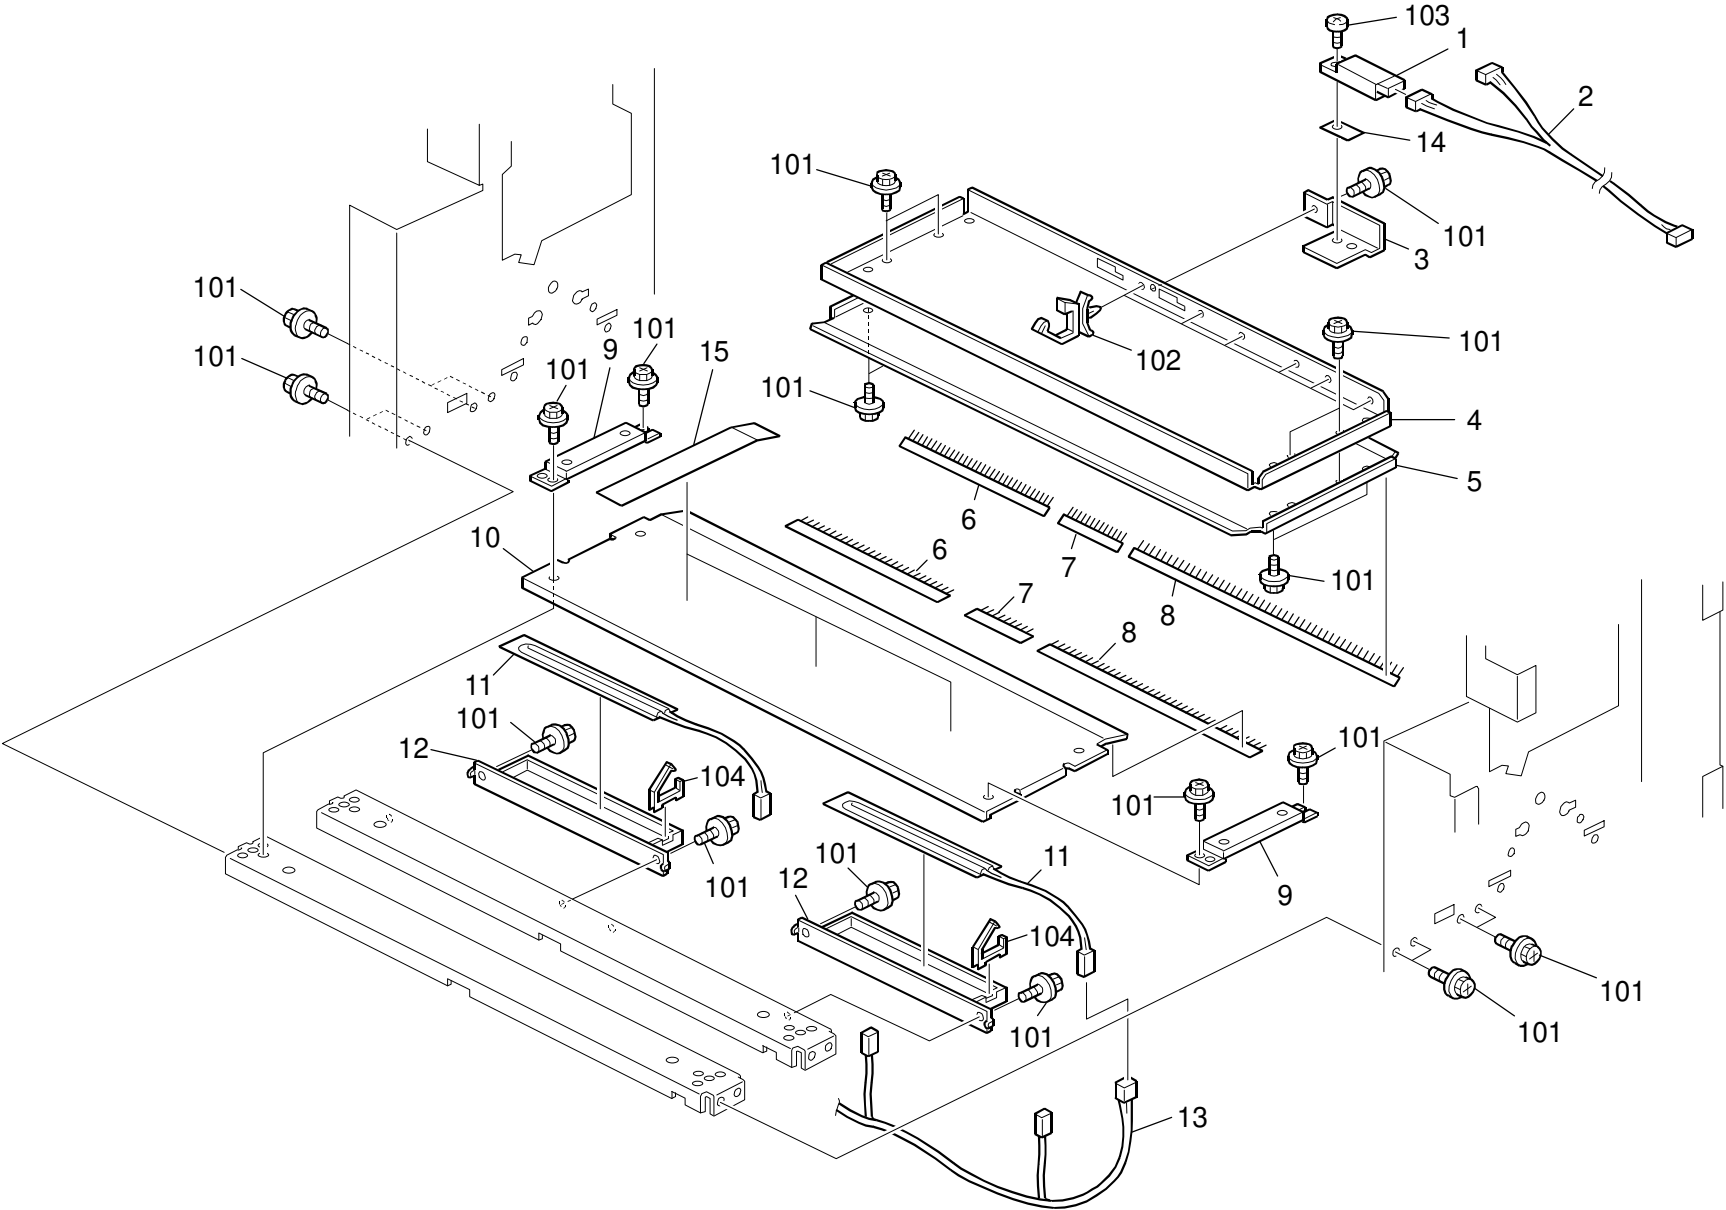


19.Paper Folder 4 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B889 1354	Photointerruptor:Paper Crimp	1
2	B889 5526	Harness:DC:Roller:Front:Radiate	1
3	B889 1193	Bracket:Photointerruptor:Radiate	1
4	B889 1197	Stay:Paper Crimp:Open and Close:Upper Front:2	1
5	B889 1196	Guide Plate:Paper Crimp:Upper Front:2	1
6	B889 1231	Discharge Brush:1	2
7	B889 1232	Discharge Brush:2	2
8	AA12 0118	Paper Feed Discharge Brush	2
9	B889 1198	Bracket:Guide Plate:Paper Crimp:Upper Front	2
10	B889 1223	Guide Plate:Lower Front	1
11	AX40 0190	Heater:120V:9W	2
11	AX40 0191	Heater:230V:9W	2
12	B889 1156	Cover:Heater:Front	2
13	B889 5503	Harness:AC:Dehumidifier:Heater	1
14	B889 1359	Shielding Plate:Sensor	1
15	B889 1299	Guide:Paper Crimp:Lower	3

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	1105 0511	Harness Clamp - LWS-0306ZC	
103	0353 0060N	Bind Screw - M3x6	
104	1105 0522	Edge Saddle - LES0510	

 20.Paper Folder 5 (B890)

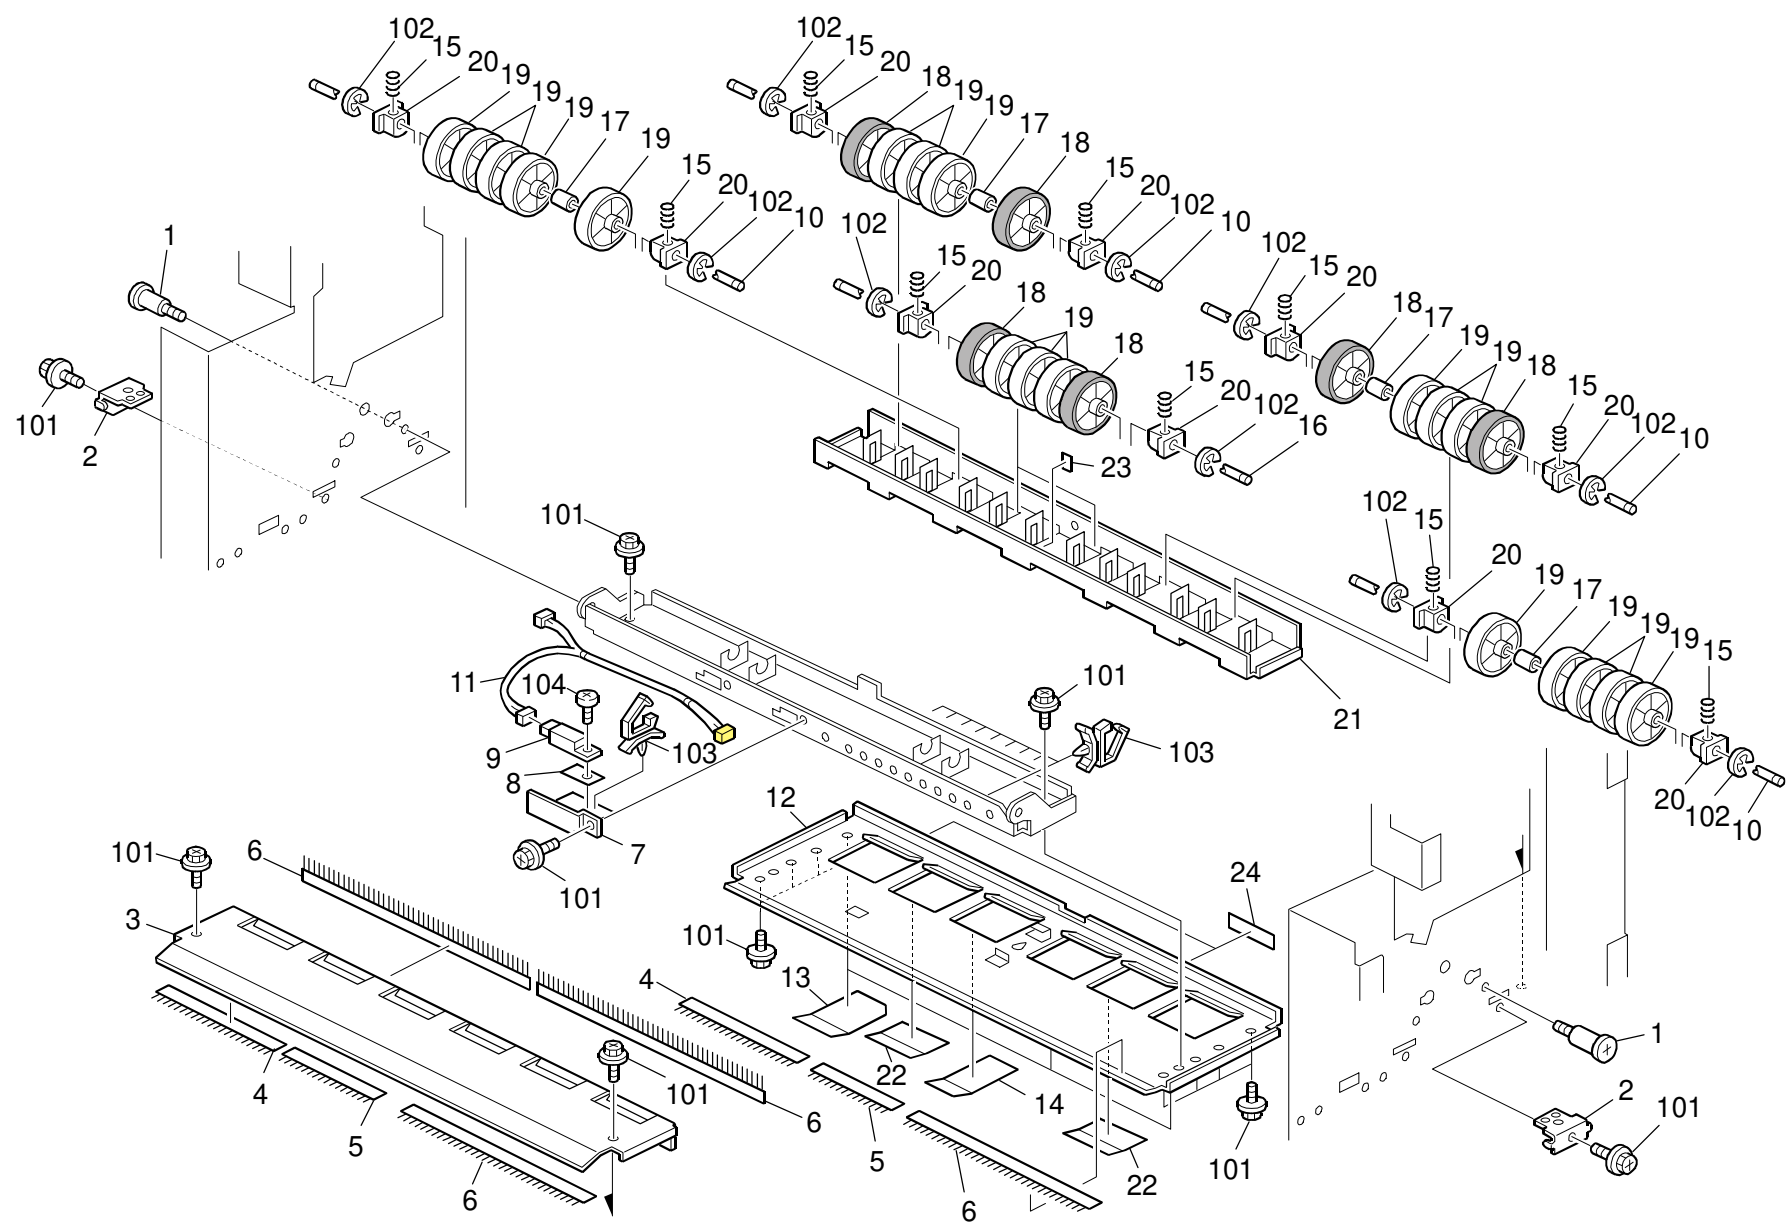


20.Paper Folder 5 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA14 3832	Release Spring Holder	2
2	B889 1214	Bracket:Guide Plate	2
3	B889 1225	Guide Plate:Lower Rear	1
4	B889 1231	Discharge Brush:1	2
5	B889 1232	Discharge Brush:2	2
6	AA12 0118	Paper Feed Discharge Brush	4
7	B889 1193	Bracket:Photointerruptor:Radiate	1
8	B889 1359	Shielding Plate:Sensor	1
9	B889 1354	Photointerruptor:Paper Crimp	1
10	B889 1298	Shaft:Exit:L	4
11	B889 5527	Harness:DC:Roller:Rear:Radiate	1
12	B889 1229	Guide Plate:Upper Rear	1
13	B889 1293	Guide:Exit:1	3
14	B889 1367	Guide:Exit:3	1
15	B889 1292	Spring	12
16	B889 1290	Shaft	2
17	5446 2901	Collar - 8mm	4
18	B889 1212	Roller:Driven:Exit:Middle	8
19	B889 1236	Roller:Driven:Exit	22
20	AA08 0203	Bushing - 6mm	12
21	B889 1230	Bracket:Pressure:Transport:3	1
22	B889 1294	Guide:Exit:2	2
23	B125 4722	Sheet:Side Fence:Small	1
24	B889 1390	Guide:Exit:Lower	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0720 0040E	Retaining Ring - M4	
103	1105 0511	Harness Clamp - LWS-0306ZC	
104	0353 0060N	Bind Screw - M3x6	

 21.Paper Folder Exit (B890)

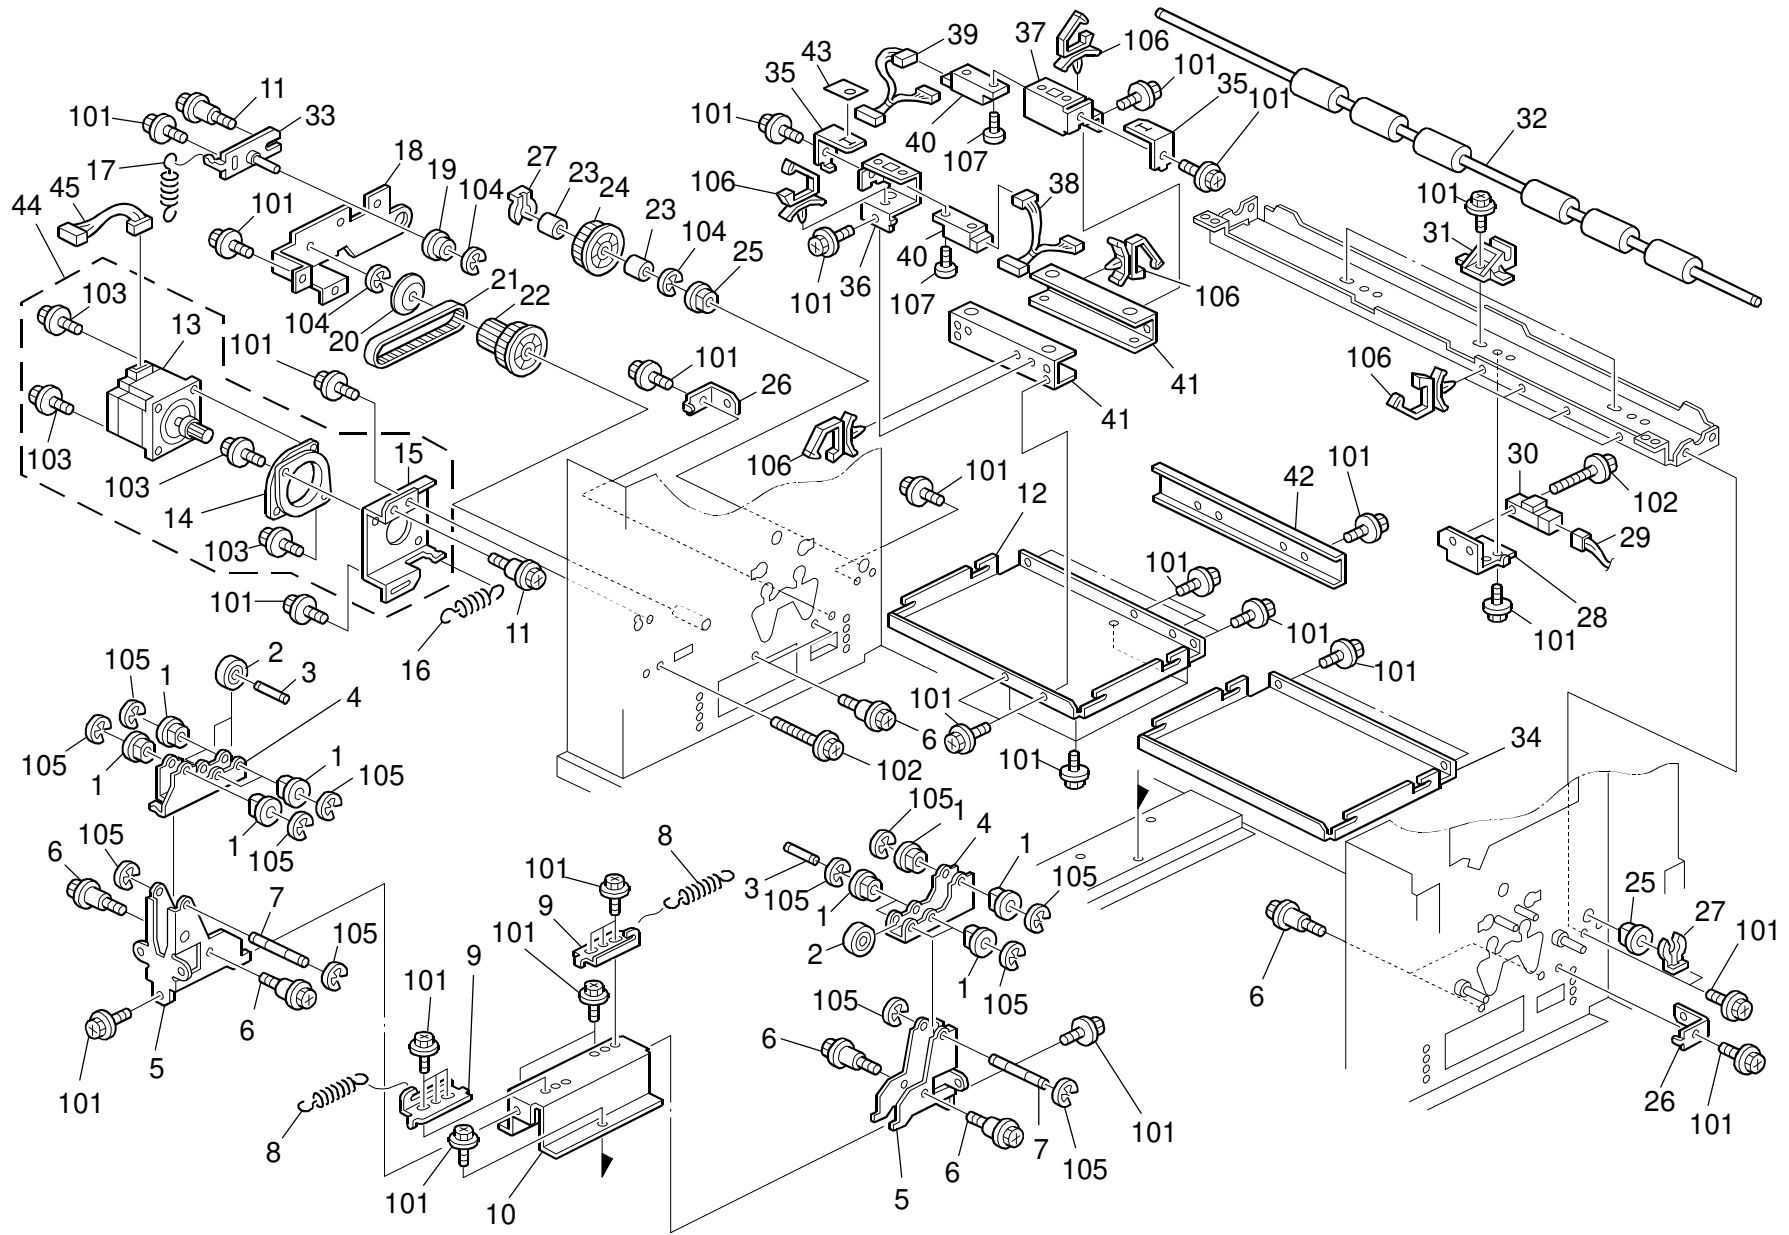


21.Paper Folder Exit (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA08 2101	Bushing - 6x10x6	12
2	B889 1216	Roller:Pressure	4
3	B889 1221	Shaft:Pressure	4
4	B889 1218	Arm:Roller:Middle	2
5	B889 1219	Guide Plate:Arm	2
6	AA14 3542	Screw:M3:DIA4x5.6	8
7	B889 1220	Shaft:Contact Point	2
8	B889 1249	Tension Spring:Roller	2
9	B889 1222	Bracket:Pressure:Middle	2
10	B889 1215	Guide Plate:Arm:2	1
11	AA14 3790	Screw:Contact Point	2
12	B889 1706	Guard:IC	1
13	B890 1286	DC Stepper Motor:Paper Crimp:Ass'y	1
14	AA16 1164	Cushion:Stepper Motor	1
15	B889 1275	Bracket:Stepper Motor	1
16	AA06 1006	Spring:Blade:Cleaning	1
17	A257 6429	Pressure Spring	1
18	B889 1281	Guide Plate:Drive	1
19	A257 4650	Tightener Pulley	1
20	A259 1158	Pulley Flange	1
21	B889 1267	Timing Belt:B80S3M294	1
22	B889 1266	Timing Pulley:24T/44T	1
23	5446 2901	Collar - 8mm	2
24	B889 1276	Timing Pulley:33T	1
25	AA08 2104	Bushing - 8x12x7	2
26	B889 1714	Bracket:Cover:PSU	2
27	5215 2621	Snap Ring - M6	2
28	B889 1178	Bracket:Sensor:1	1
29	B889 5529	Harness:DC:Paper Crimp:Exit	1
30	AW01 0091	Photo Reflection Sensor	1
31	A174 3946	Arm Bushing	3
32	B889 1445	Transport Roller:Drive:Exit	1
33	B889 1271	Bracket:Tightener	1
34	B889 1715	Guard:Power Supply Unit	1
35	B889 1191	Shielding Plate:Lower	2

Index No.	Part No.	Description	Q'ty Per Assembly
36	B889 1192	Bracket:Sensor:Lower Front	1
37	B889 1189	Bracket:Sensor:Lower Rear	1
38	B889 5524	Harness:DC:Roller:Front:Photo	1
39	B889 5525	Harness:DC:Roller:Rear:Photo	1
40	B889 1354	Photointerruptor:Paper Crimp	2
41	B889 1190	Bracket:Sensor:Lower:2	2
42	B889 1707	Cover:Power Supply Unit	1
43	B889 1359	Shielding Plate:Sensor	1
44	B890 1274	DC Stepper Motor:Paper Crimp:Ass'y	1
45	B890 5576	Harness:DC:Jabara:Motor:Connecting	1
101	0451 3006N	Tapping Screw - 3x6	
102	0451 3014N	Tapping Screw:3x14	
103	0451 4008N	Tapping Screw:4x8	
104	0720 0060E	Retaining Ring - M6	
105	0720 0040E	Retaining Ring - M4	
106	1105 0511	Harness Clamp - LWS-0306ZC	
107	0353 0060N	Bind Screw - M3x6	

 22. Drive Section (B890)

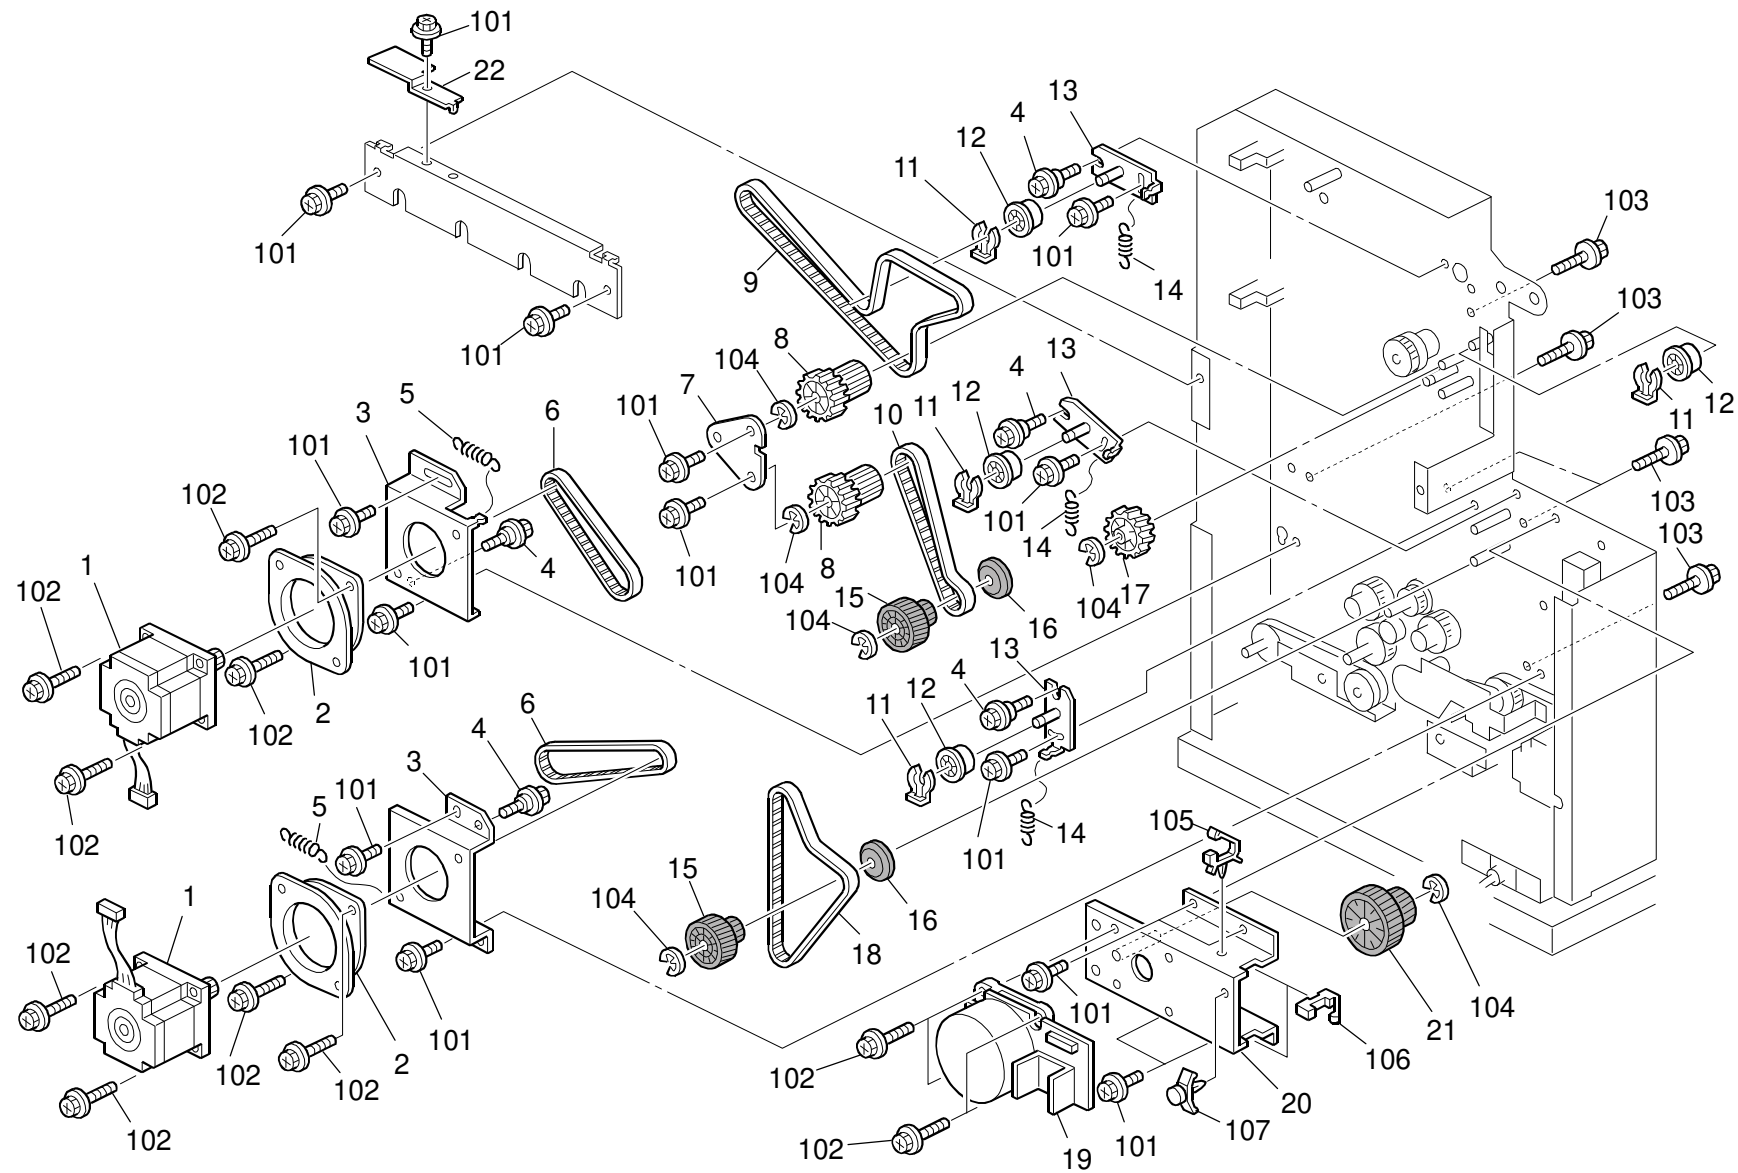


22.Drive Section (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B889 1265	Stepper Motor DC2.3V 6.9W	2
2	AA16 1164	Cushion:Stepper Motor	2
3	B889 1275	Bracket:Stepper Motor	2
4	AA14 3790	Screw:Contact Point	5
5	AA06 1006	Spring:Blade:Cleaning	2
6	B889 1324	Timing Belt:B60S3M285	2
7	B889 1430	Guide Plate:Drive:Upper	1
8	B889 1431	Gear:Timing Pulley:34Z/29T	2
9	B889 1432	Timing Belt:B60S3M771	1
10	B889 1433	Timing Belt:B60S3M492	1
11	5215 2621	Snap Ring - M6	4
12	AB03 0455	Tightener Pulley - 8x20x13	4
13	B889 1427	Bracket:Tightener	3
14	A257 6429	Pressure Spring	3
15	AB01 7674	Gear/Pulley - 66Z/20T	2
16	A259 1158	Pulley Flange	2
17	B023 4570	Gear - 31Z	1
18	B889 1424	Timing Belt:B60S3M573	1
19	AX06 0296	Brushless Motor:DC24V 24W:Z9	1
20	B889 1421	Bracket:Motor	1
21	AB01 7673	Gear - 40/82Z	1
22	B889 1185	Guard:Cover:Upper	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0451 4008N	Tapping Screw:4x8	
103	0451 3014N	Tapping Screw:3x14	
104	0720 0060E	Retaining Ring - M6	
105	1105 0511	Harness Clamp - LWS-0306ZC	
106	1105 0522	Edge Saddle - LES0510	
107	1105 0409	Card Spacer- 6.4mm	

 23. Electrical Section (B890)

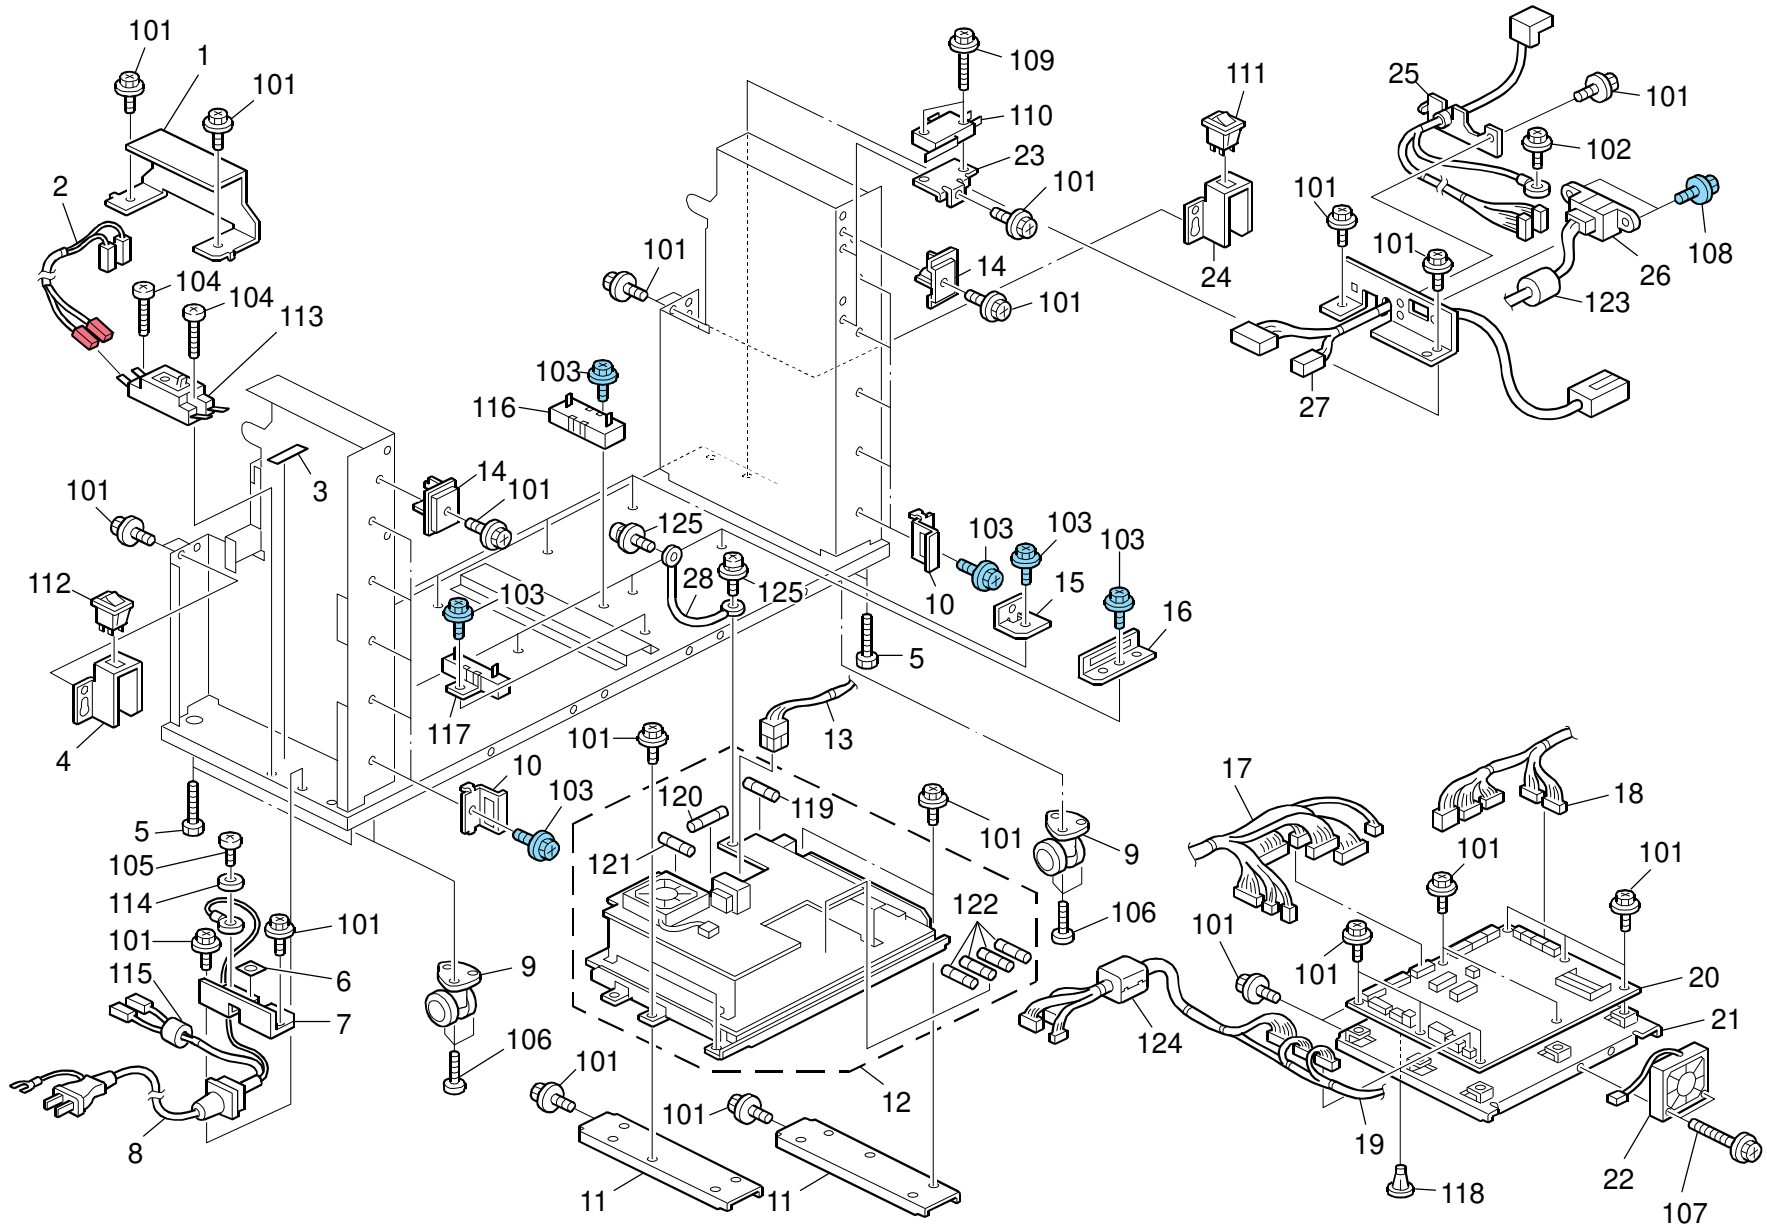


23.Electrical Section (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B889 1708	Cover:Leak Breaker	1
2	B889 5502	Harness:AC:1	1
3	AA00 1283	Decal - Noise Filter	1
4	B889 1157	Bracket:Switch:Right	1
5	AA14 3547	Hexagonal Bolt:M12x80	4
6	AA00 1190	Decal - Ground	1
7	B889 1710	Bracket:Power Supply Cord	1
8	B286 5767	Power Supply Cord - 120V	1
8	B257 5496	Power Supply Cord:230V	1
9	AH01 2035	Caster - 980N	4
10	B889 1175	Bracket:Plate:Cover	10
11	B889 1717	Bracket:PSU	2
12	AZ23 0217	Power Supply Unit 120V 285W	1
12	AZ23 0218	Power Supply Unit - 230V 285W	1
13	B889 5504	Harness:AC	1
14	B889 1953	Cover:Upper Rear	2
15	B889 1713	Bracket:PSU:Rear	4
16	B889 1712	Bracket:PSU:Front	4
17	B890 5569	Harness:DC:Sensor	1
18	B890 5571	Harness:DC:Mechanical Drive Section	1
19	B890 5568	Harness:DC:Power Source	1
20	B890 5216	PCB:MCU-J:EXP:Ass'y	1
21	B889 1711	Bracket:IC:J	1
22	GX64 0021	Fan Motor DC24V 1.92W	1
23	B889 1173	Guide Plate:Micro Switch	2
24	B889 1176	Bracket:Main Switch	1
25	B890 5629	Harness:DC:Interface:Jabara:Ass'y	1
26	B890 5612	Harness:DC:Interface:Cross:1	1
27	B890 5626	Harness:DC:Interface:F:Ass'y	1
28	B889 5662	Ground Wire:Power Supply Unit:Braided Cable	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0451 4008N	Tapping Screw:4x8	
103	0454 3006Q	Tapping Screw - M3x6	
104	0314 0200N	Pan Head Screw:M4x20	
105	0314 0080N	Philips Pan Head Screw - M4x8	
106	0954 5014N	Screw - M5x14	
107	0451 3030N	Tapping Screw:3x30	
108	0454 3008Q	Tapping Screw:3x8	
109	0451 3014N	Tapping Screw:3x14	
110	1204 2529	Switch - V-5F912DN	
111	1204 2533	Switch - AJ76200PZ02	
112	1204 2634	Rocker Switch - Aj76200b	
113	1107 1192	Fuse:BJS202100F1R	
114	0703 0040N	Spring Washer:DIA4	
115	1607 0534	Ferrite Core:ZCAT3035-1330	
116	1600 2049	Resistor:91 Ω : $\pm$ 5%:30W	
117	1600 2048	Resistor:5.1 Ω : $\pm$ 5%:20W	
118	1105 0648	Spacer:KGPS-8RFV0	
119	1107 0388	Fuse (Glass Case) - 2A - 125V (120V)	
119	1107 1061	Fuse:ET-1A (230V)	
120	1107 0629	Fuse:Ceramic Case:15A 125V (120V)	
120	1107 1084	Fuse:CES14-8A-N1 (230V)	
121	1107 0652	Fuse (Glass Case) - 10A - 125V (120V)	
121	1107 1053	Fuse:HT-5A-N5 (230V)	
122	1107 0392	Fuse - 6.3A 125V (120V)	
122	1107 1067	Fuse:ET-6.3A (230V)	
123	1607 1139	Ferrite Core:RFC-8	
124	1607 1574	Ferrite Core:RFC-H13	
125	0954 3006N	Screw - M3x6	

 24.Accessory (B890)

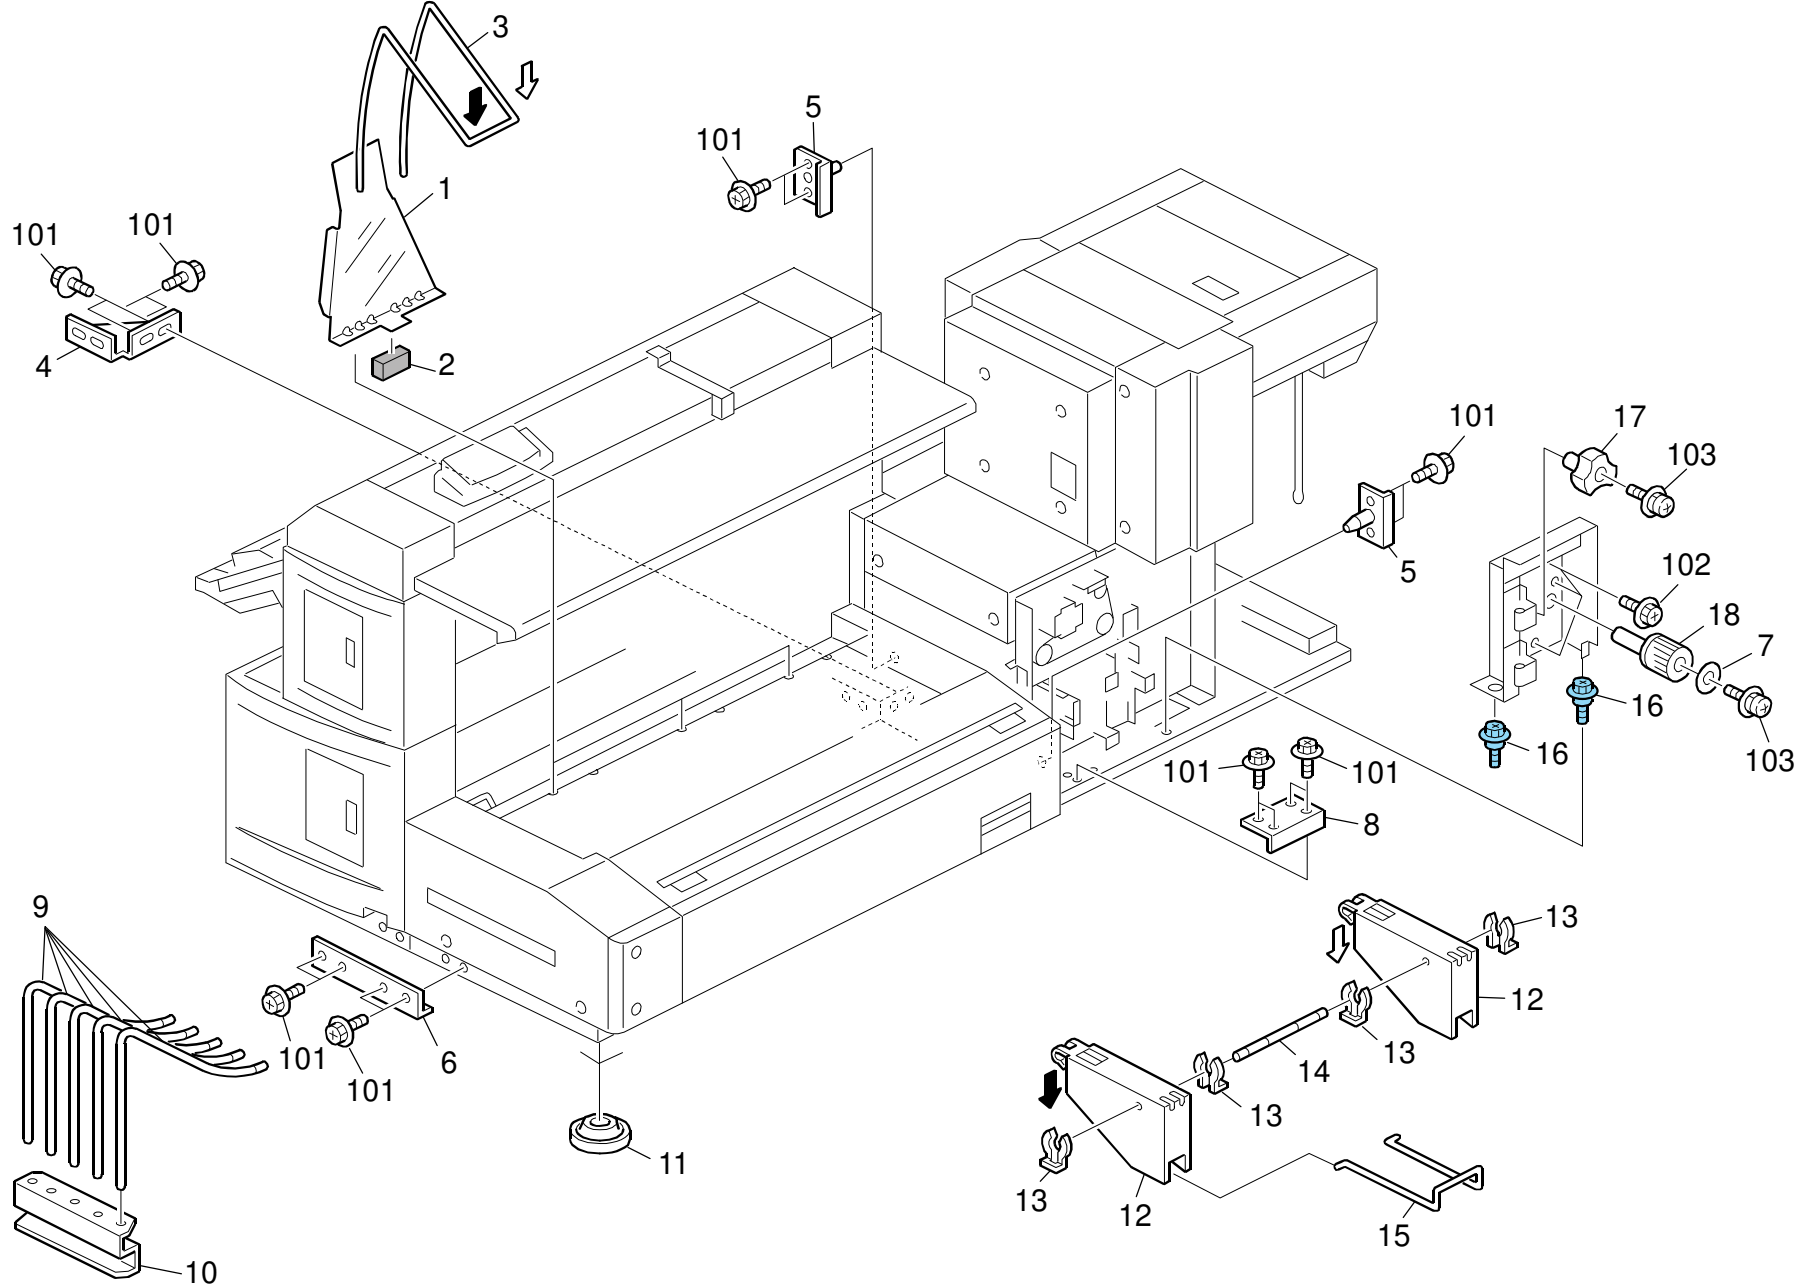


24.Accessory (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B890 2833	Separation Plate:Copy Tray	3
2	B890 2707	Spacer:Separation Plate	3
3	B890 2822	Copy Tray:Rear	3
4	B890 2058	Bracket:Coupling:Front	1
5	B890 4084	Bracket:Coupling:Ass'y	2
6	B890 4052	Bracket:Coupling:Right	1
7	B890 2950	Decal:Multi-Language:Cross	1
8	B890 2057	Bracket:Coupling:Rear	1
9	B890 2836	Stack:Right	5
10	B890 2837	Plate:Stack	1
11	B132 1226	Holder:Stand	8
12	B890 2800	Tray:Right:3	6
13	5447 2681	Snap Ring	12
14	B890 2816	Shaft:Contact Point	3
15	B890 2823	Guide:Tray:Right	3
16	B830 1135	Screw	2
17	AG05 0095	Fusing Knob	1
18	B889 1426	Knob:Pick-up Paper Jam	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3008N	Tapping Screw - M3x8	
102	0451 3006N	Tapping Screw - 3x6	
103	0954 4008N	Screw - M4x8	

 25. Paper Transfer Unit 1 (B890)

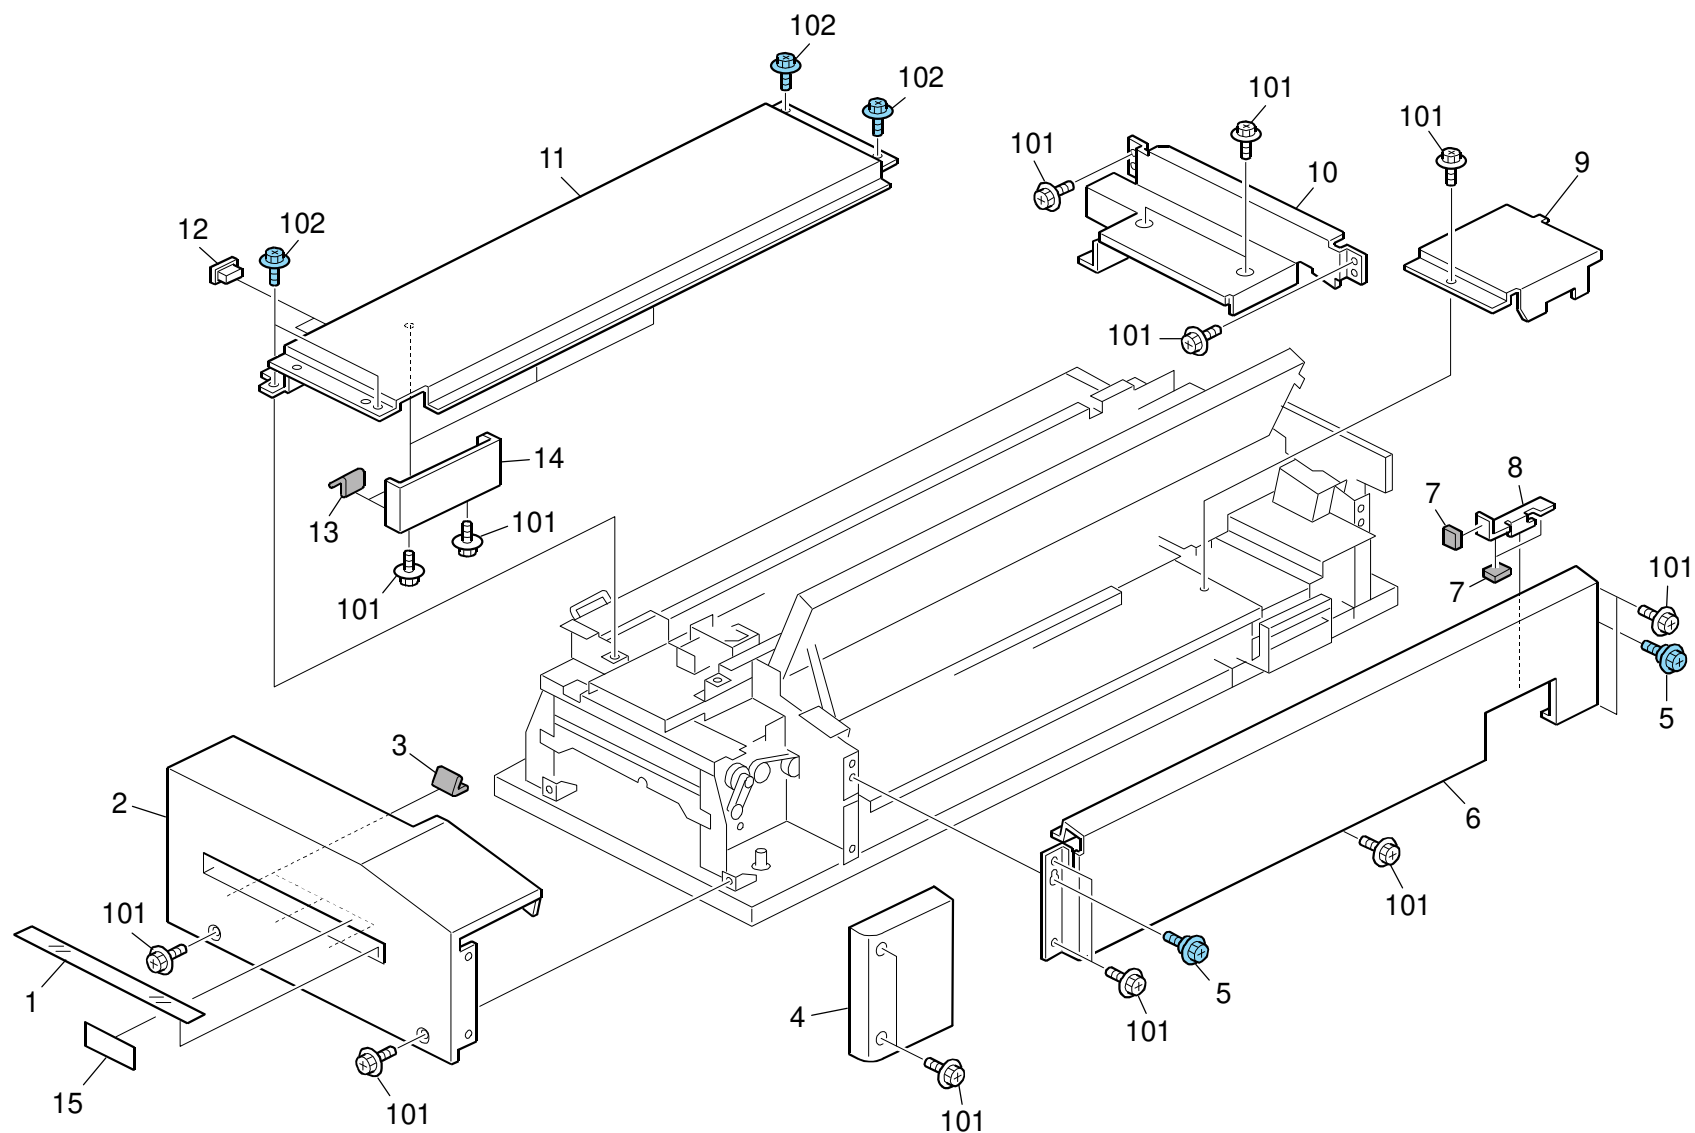


25.Paper Transfer Unit 1 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B890 2955	Seal:Exit:Right	1
2	B890 2968	Cover:Right:Ass'y	1
3	B188 6196	Gasket:Guide Plate:Upper Front	3
4	B890 2974	Cover:Right Rear	1
5	B830 1135	Screw	2
6	B890 2956	Cover:Rear Lower	1
7	B890 2821	Cushion:Stopper	3
8	B890 2820	Stopper:Cover:Open and Close	1
9	B890 2804	Inner Cover:Left:Small	1
10	B890 2819	Cover:Right Lower:Ass'y	1
11	B890 2817	Cover:Upper:Ass'y	1
12	AG07 0513	Magnet Catch	2
13	B663 5113	Gasket:20	6
14	B890 2825	Holder:Copy Tray	3
15	B890 4800	Decal:Caution:Transport:Roller	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	

 26. Paper Transfer Unit 2 (B890)

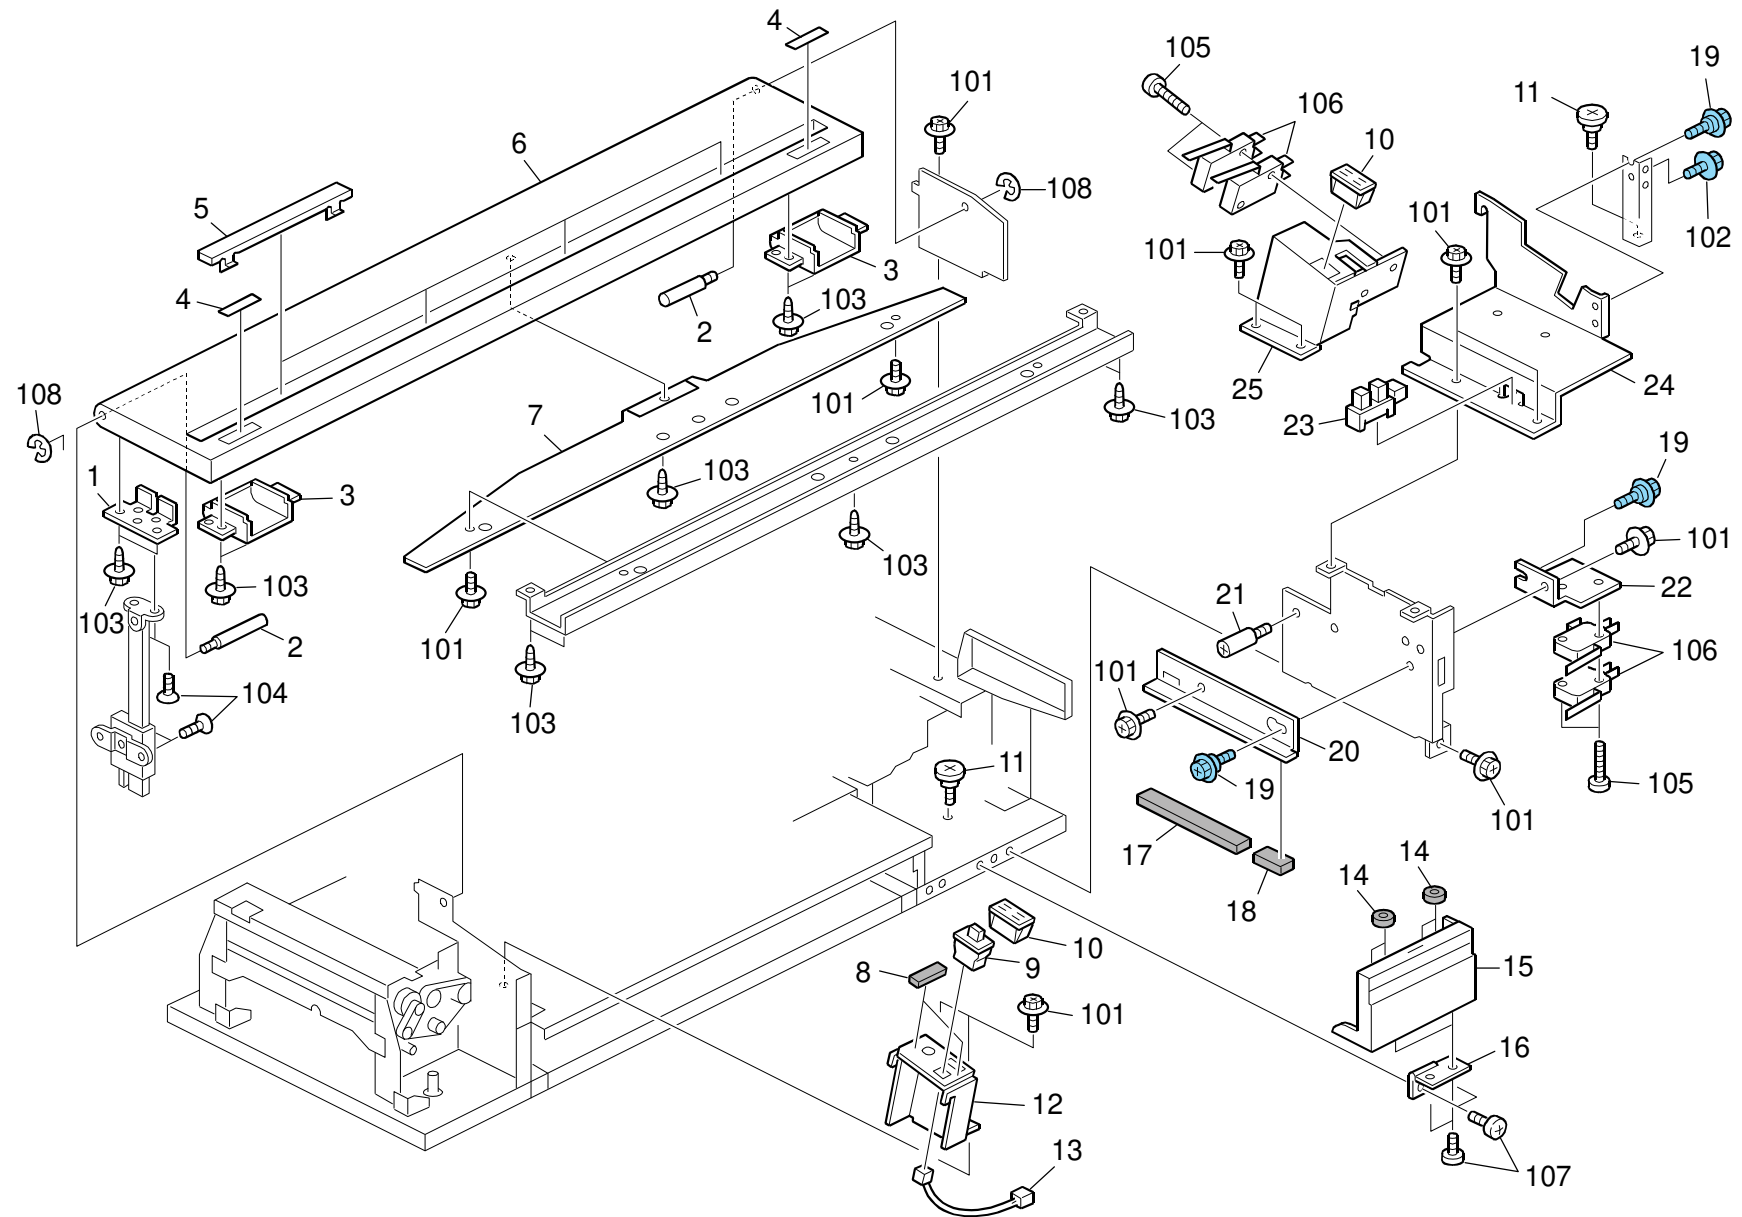


26.Paper Transfer Unit 2 (B890)



Index No.	Part No.	Description	Q'ty Per Assembly
1	B890 2811	Bracket:Stay:Cover:Upper	1
2	B890 2818	Shaft:Contact Point:Open and Close	2
3	B889 1906	Grip:Cover:Open and Close	2
4	B890 2950	Decal:Multi-Language:Cross	1
5	B889 1903	Cap:Cover	4
6	B889 1905	Cover:Open and Close	1
7	B890 2835	Inner Cover:Open and Close	1
8	B223 5863	Gasket:EGUN1-0205:L23	2
9	G020 5626	Push Switch	1
10	AG07 0513	Magnet Catch	2
11	AA14 3562	Screw:M4:DIA6x1.2	2
12	B890 2812	Bracket:Right:Door Catch	1
13	B889 5547	Harness:DC:Push Switch	1
14	B275 1670	Guard Burring	4
15	B890 2830	Cover:Open and Close:Paper Chip:Ass'y	1
16	B890 2806	Hinge:TH-11SUS-R	2
17	B890 4877	Seal:Duct:Lower	1
18	B890 2832	Seal:Paper Chip:Left and Right	1
19	B830 1135	Screw	3
20	B890 2829	Bracket:Seal:Left	1
21	B234 2092	Terminal Pin	1
22	B890 2807	Bracket:Safety Switch	1
23	AW02 0114	Photo Interruptor - Lower Limit	1
24	B890 2802	Inner Cover:Left	1
25	B890 2813	Bracket:Left:Door Catch	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0450 4010N	Tapping Screw:M4x10	
104	0323 0060N	Screw M3x6	
105	0353 0250N	Screw:M3x25	
106	1204 2529	Switch - V-5F912DN	
107	0453 3006N	Tapping Screw - M3x6	
108	0720 0030E	Retaining Ring - M3	

 27. Paper Transfer Entrans 1 (B890)

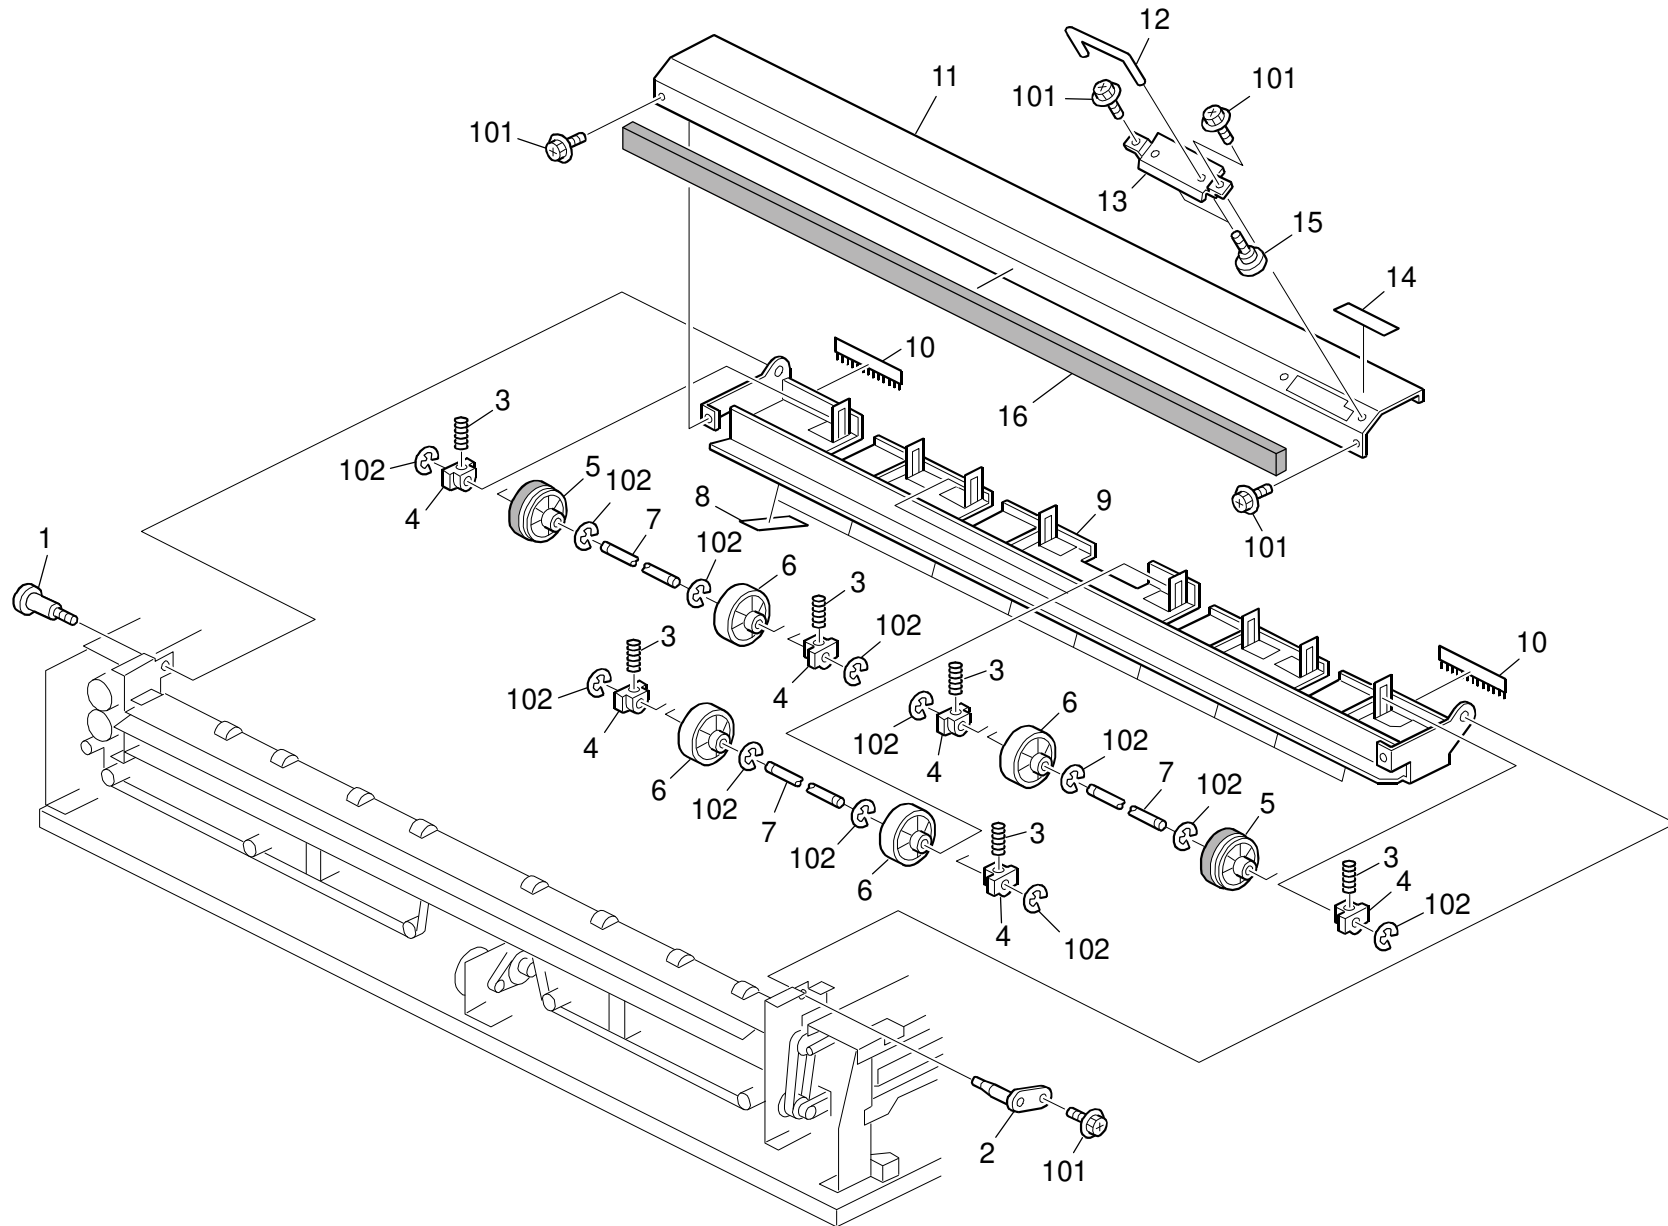


27.Paper Transfer Entrans 1 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA14 3129	Shoulder Screw - Front Cover	1
2	B104 4331	Arm Bracket Ass'y	1
3	B889 1292	Spring	8
4	AA08 0203	Bushing - 6mm	8
5	B889 1212	Roller:Driven:Exit:Middle	2
6	B889 1236	Roller:Driven:Exit	6
7	B889 1235	Shaft:Exit	4
8	B890 4368	Sheet:Guide Plate:Upper	9
9	B890 4145	Guide Plate:Upper:Ass'y	1
10	AA12 0122	Rear Exit Discharge Brush	4
11	B890 2701	Cover:Guide Plate:Upper:Ass'y	1
12	B890 2827	Grip:A-1042-C-8	1
13	B890 2704	Receive Plate:Magnet Catch:Entrance	1
14	B890 2950	Decal:Multi-Language:Cross	1
15	5447 1778	Stepped Screw - M4	2
16	B890 2715	Seal:Guide Plate:Entrance:2	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0720 0040E	Retaining Ring - M4	

 28.Paper Transfer Entrans 2 (B890)

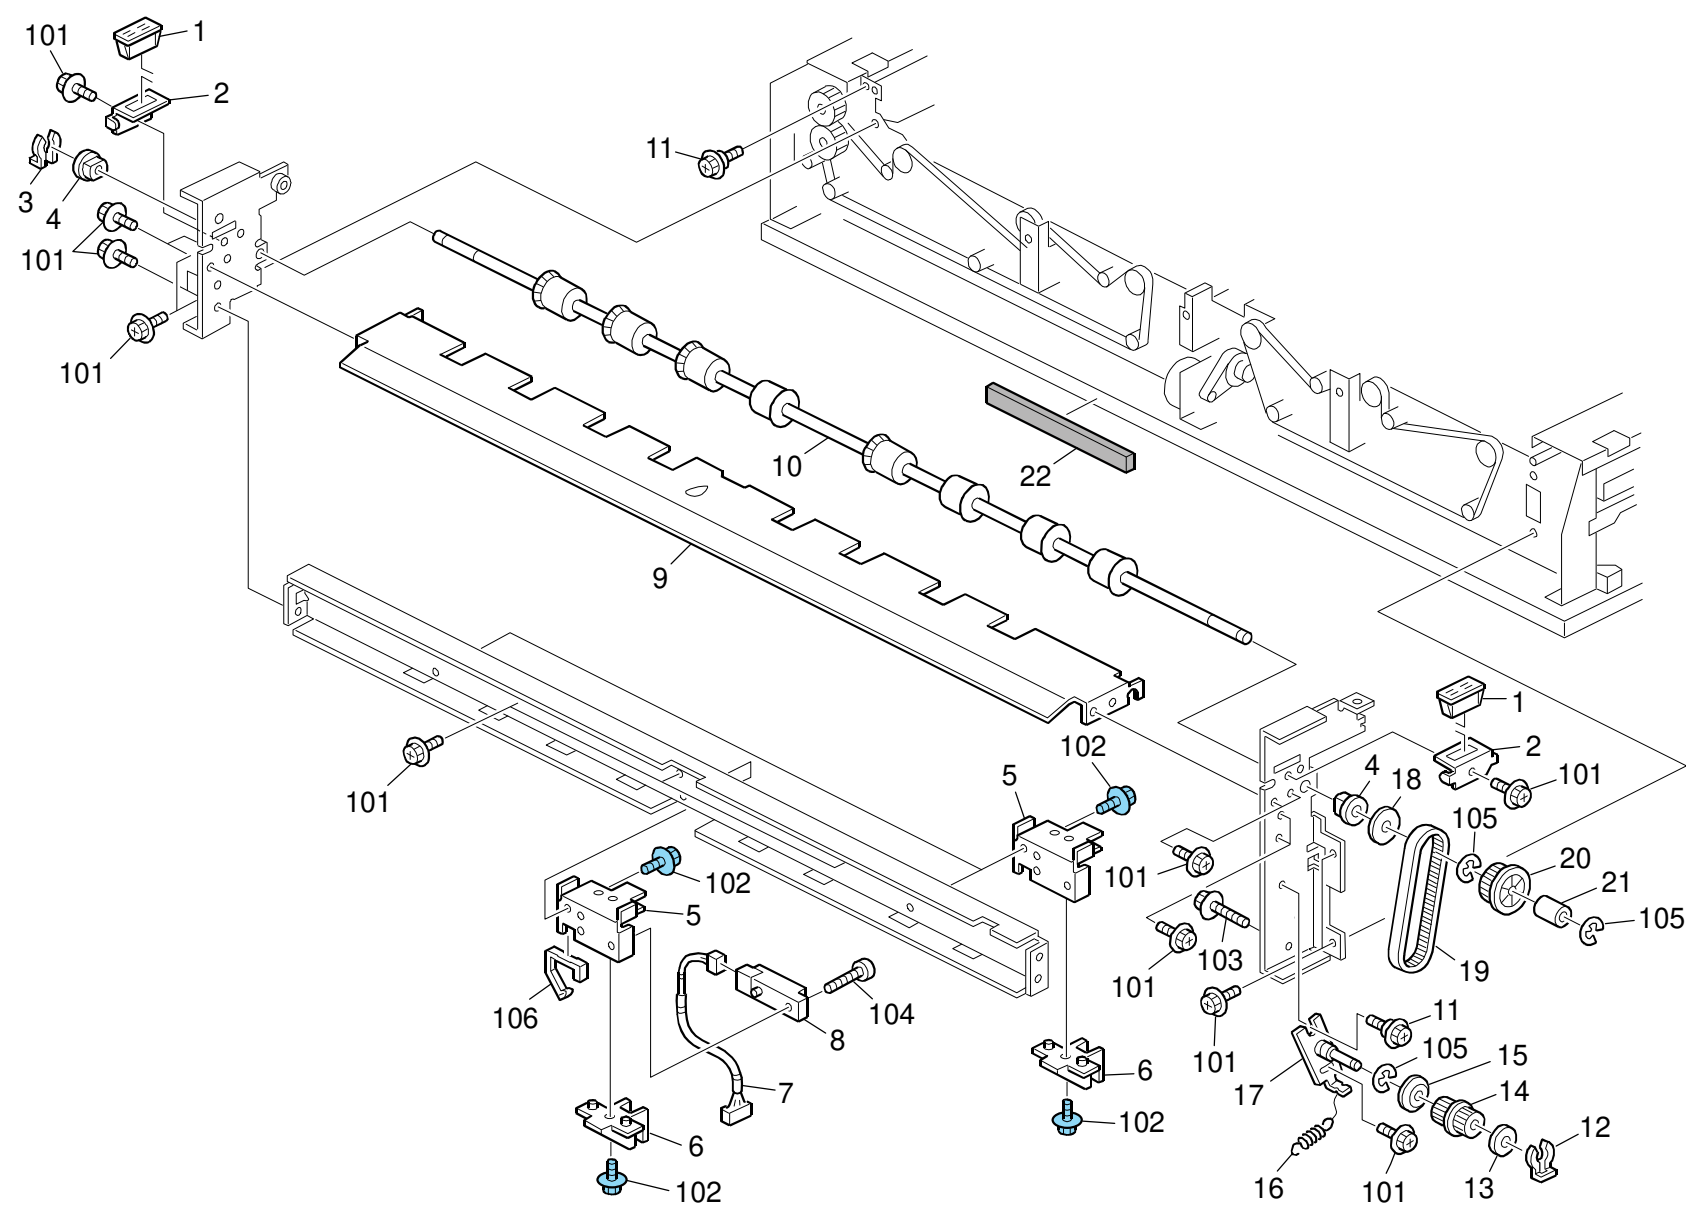


28.Paper Transfer Entrans 2 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AG07 0513	Magnet Catch	2
2	B889 1170	Bracket:Magnet Catch	2
3	5215 2621	Snap Ring - M6	1
4	AA08 2104	Bushing - 8x12x7	2
5	B890 4653	Bracket:Sensor	3
6	A174 3946	Arm Bushing	3
7	B890 5653	Harness:DC:Transport Unit: Entrance Sensor:Connecting	1
8	AW01 0110	Paper Feed Sensor	1
9	B890 4143	Guide Plate:Lower	1
10	B890 4154	Transport Roller:Drive	1
11	AA14 3790	Screw:Contact Point	1
12	5447 2681	Snap Ring	1
13	A300 3812	Spacer - 6x22x1.5	1
14	AB03 3088	Pulley - 20T/20T	1
15	A259 1158	Pulley Flange	1
16	A257 6429	Pressure Spring	1
17	B890 4140	Tightener:Vertical Transport:Ass'y	1
18	AA13 2152	Spacer - 8x20x1	1
19	B890 4094	Timing Belt:B60S3M297	1
20	A257 4632	Timing Pulley	1
21	B889 1435	Spacer:21.2	1
22	B890 5670	Gasket:EGUN10113:700mm	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0451 3014N	Tapping Screw:3x14	
104	0353 0120N	Screw M3x12	
105	0720 0060E	Retaining Ring - M6	
106	1105 0522	Edge Saddle - LES0510	

 29. Paper Transfer 1 (B890)

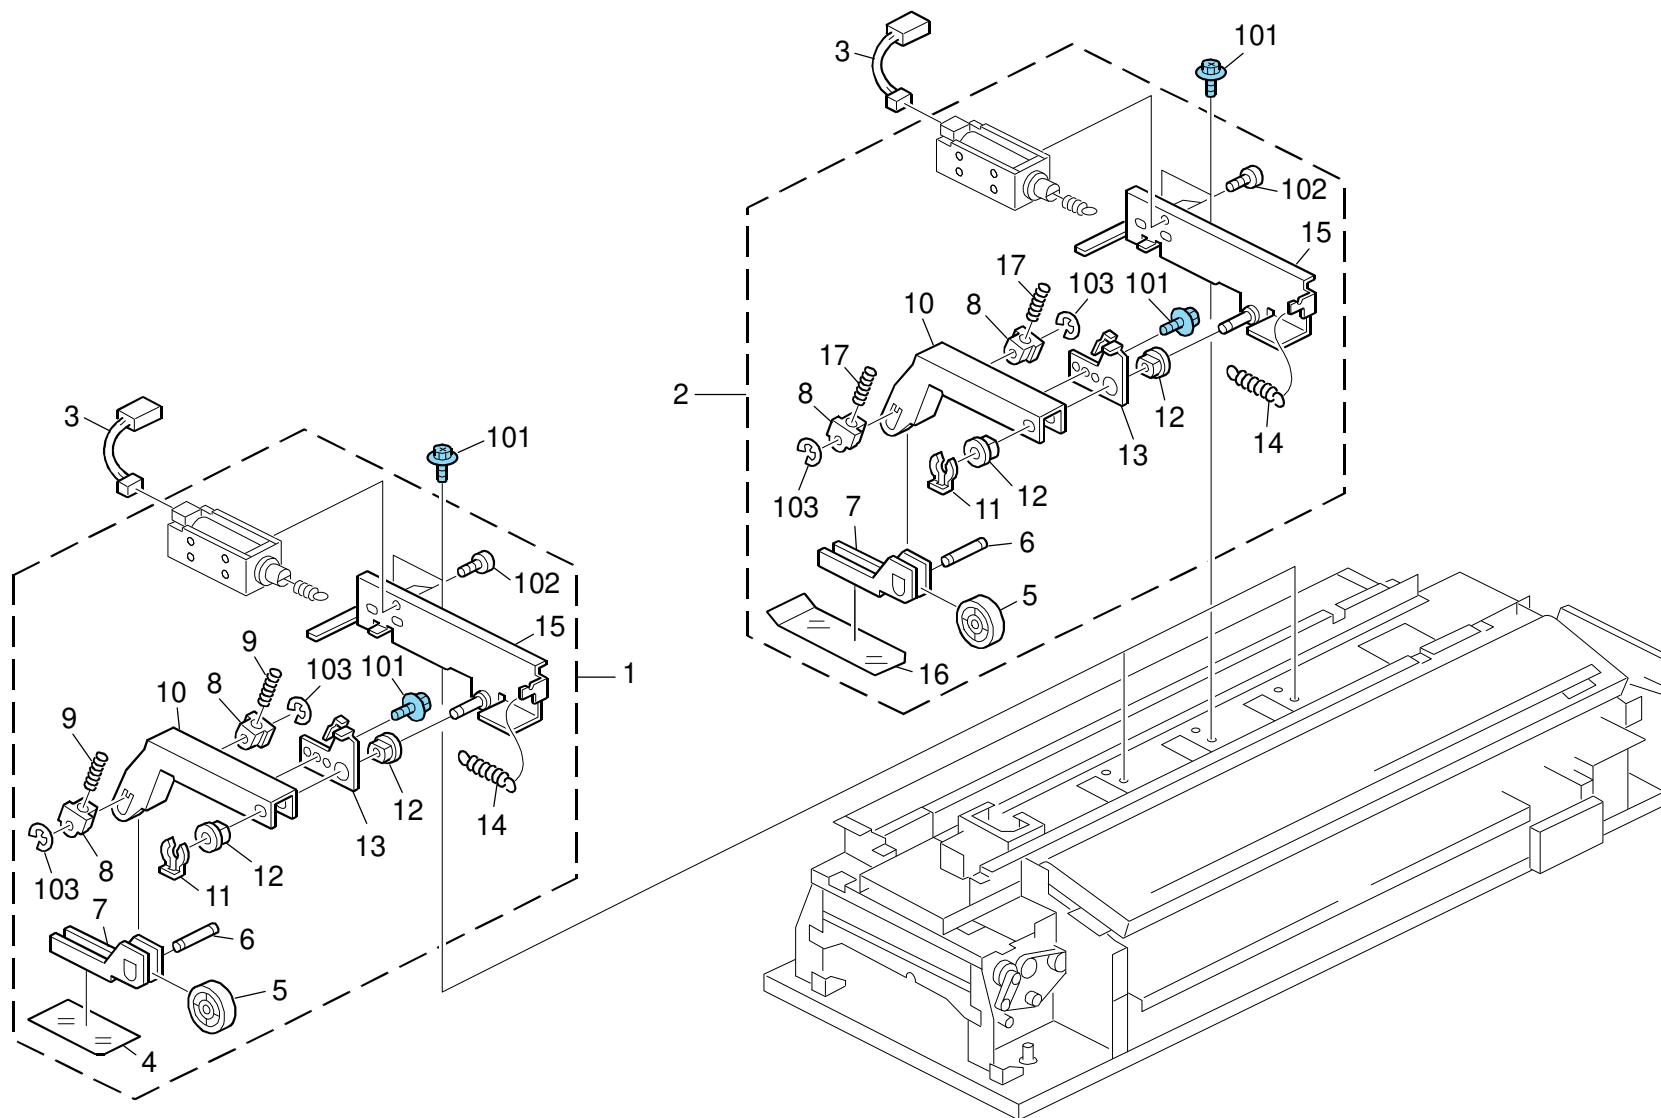


29.Paper Transfer 1 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B890 4037	Driven Roller:Auxiliary:Ass'y	2
2	B890 4036	Driven Roller:Auxiliary:Middle:Ass'y	1
3	B890 5661	Harness:DC:Solenoid:Connecting	2
4	B890 4151	Sheet:Guide Plate:Auxiliary:Short	1
5	B700 2625	Roller:MM28	2
6	B890 4122	Shaft:Driven Roller:Auxiliary	2
7	B890 4652	Guide Plate:Auxiliary	2
8	AA08 0203	Bushing - 6mm	4
9	B890 4121	Compression Spring:400mN	2
10	B890 4117	Bracket:Driven Roller:Auxiliary	2
11	5447 2681	Snap Ring	2
12	AA08 2101	Bushing - 6x10x6	4
13	B890 4252	Anchor	2
14	AA06 0589	Pressure Spring	2
15	B890 4650	Bracket:DC Solenoid:Ass'y	2
16	B890 4124	Sheet:Guide Plate:Auxiliary	1
17	G024 4266	Compression Spring:Coating Bar	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0353 0040N	Screw - M3x4	
103	0720 0040E	Retaining Ring - M4	

 30.Paper Transfer 2 (B890)

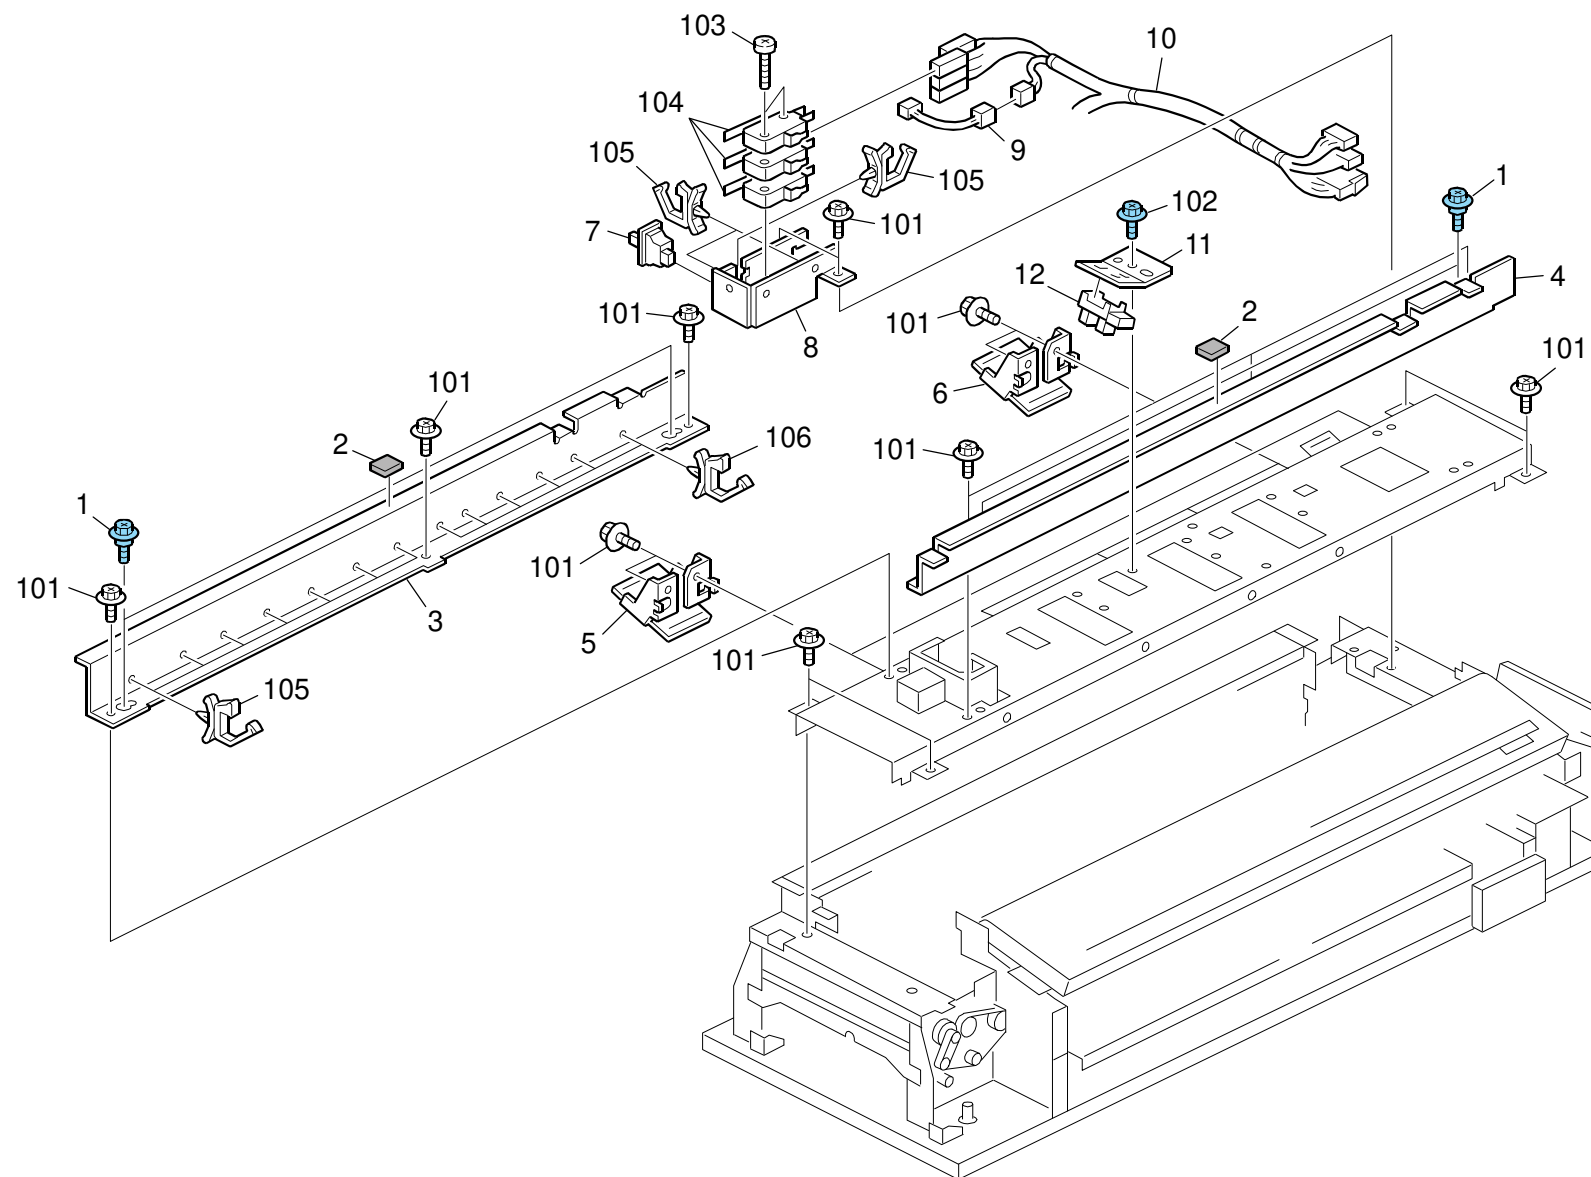


30.Paper Transfer 2 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B830 1135	Screw	4
2	B890 2821	Cushion:Stopper	2
3	B890 2808	Inner Cover:Upper Front	1
4	B890 2809	Inner Cover:Upper Rear	1
5	B890 4245	Guide Plate:Upper:Right	2
6	B890 4066	Guide Plate:Upper	4
7	G020 5626	Push Switch	1
8	B890 4161	Bracket:Safety Switch	1
9	B889 5547	Harness:DC:Push Switch	1
10	B890 5608	Harness:DC:Transport Unit:Connecting:1	1
11	B890 4133	Bracket:Home Position Sensor:Upper	1
12	AW02 0141	Photointerruptor	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0353 0350N	Screw M3x35	
104	1204 2529	Switch - V-5F912DN	
105	1105 0511	Harness Clamp - LWS-0306ZC	
106	1105 0516	Clamp	

 31.Paper Transfer 3 (B890)

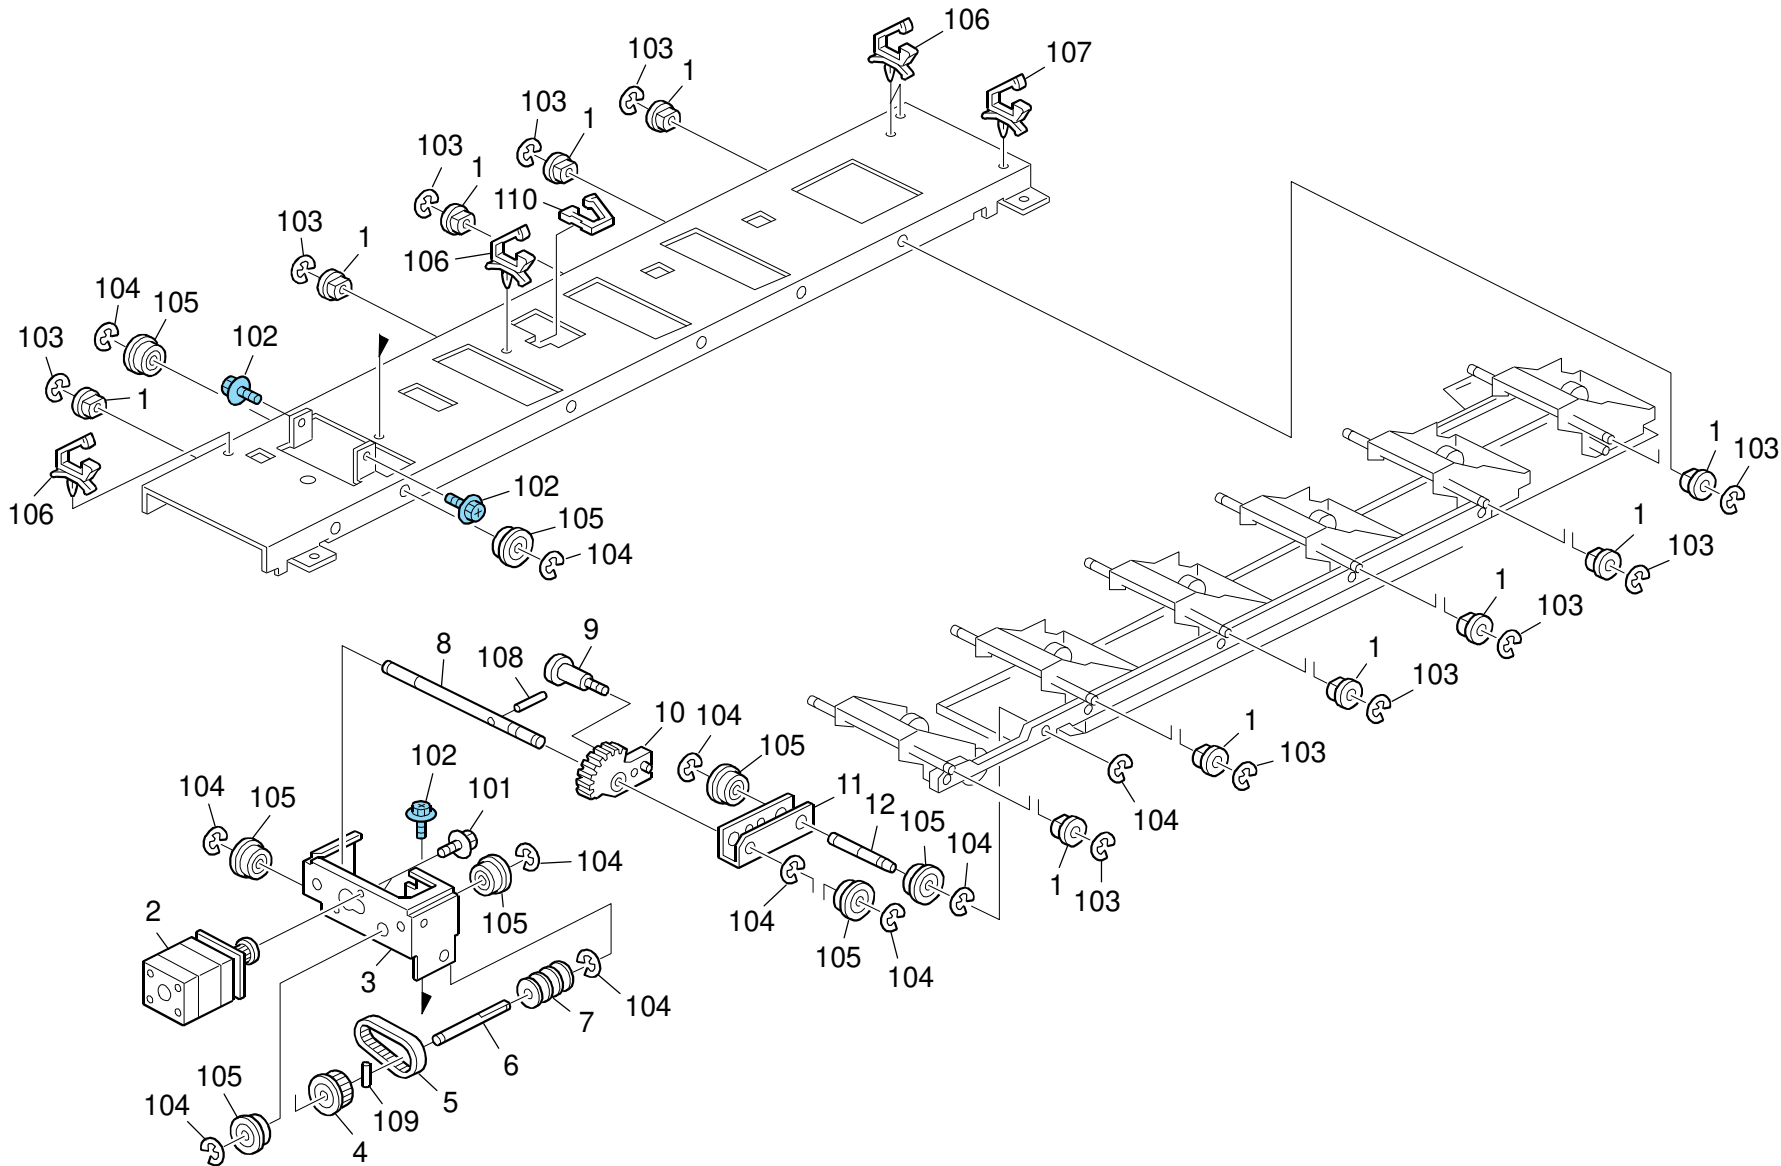


31.Paper Transfer 3 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA08 2101	Bushing - 6x10x6	11
2	B132 6655	Stepper Motor:Paper Feed Unit:Ass'y	1
3	B890 4228	Bracket:Stepper Motor	1
4	B890 4751	Timing Pulley:T40	1
5	B890 4101	Timing Belt:B80S2M152	1
6	B890 4231	Shaft:Worm Gear	1
7	B890 4235	Worm Gear	1
8	B890 4230	Shaft:Lever	1
9	B706 1859	Screw:Slider:Lock	1
10	B890 4236	Gear:Pressure	1
11	B890 4128	Lever:Drive:Link	1
12	B890 4131	Shaft:Coupling:Short	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0720 0040E	Retaining Ring - M4	
104	0720 0060E	Retaining Ring - M6	
105	0742 3808	Ball Bearing - 8x16x5	
106	1105 0516	Clamp	
107	1105 0489	Harness Clamp - LWS 1316	
108	0633 0140G	Parallel Pin - 3x14	
109	0633 0180G	Parallel Pin - 3x18mm	
110	1105 0522	Edge Saddle - LES0510	

 32.Paper Transfer 4 (B890)

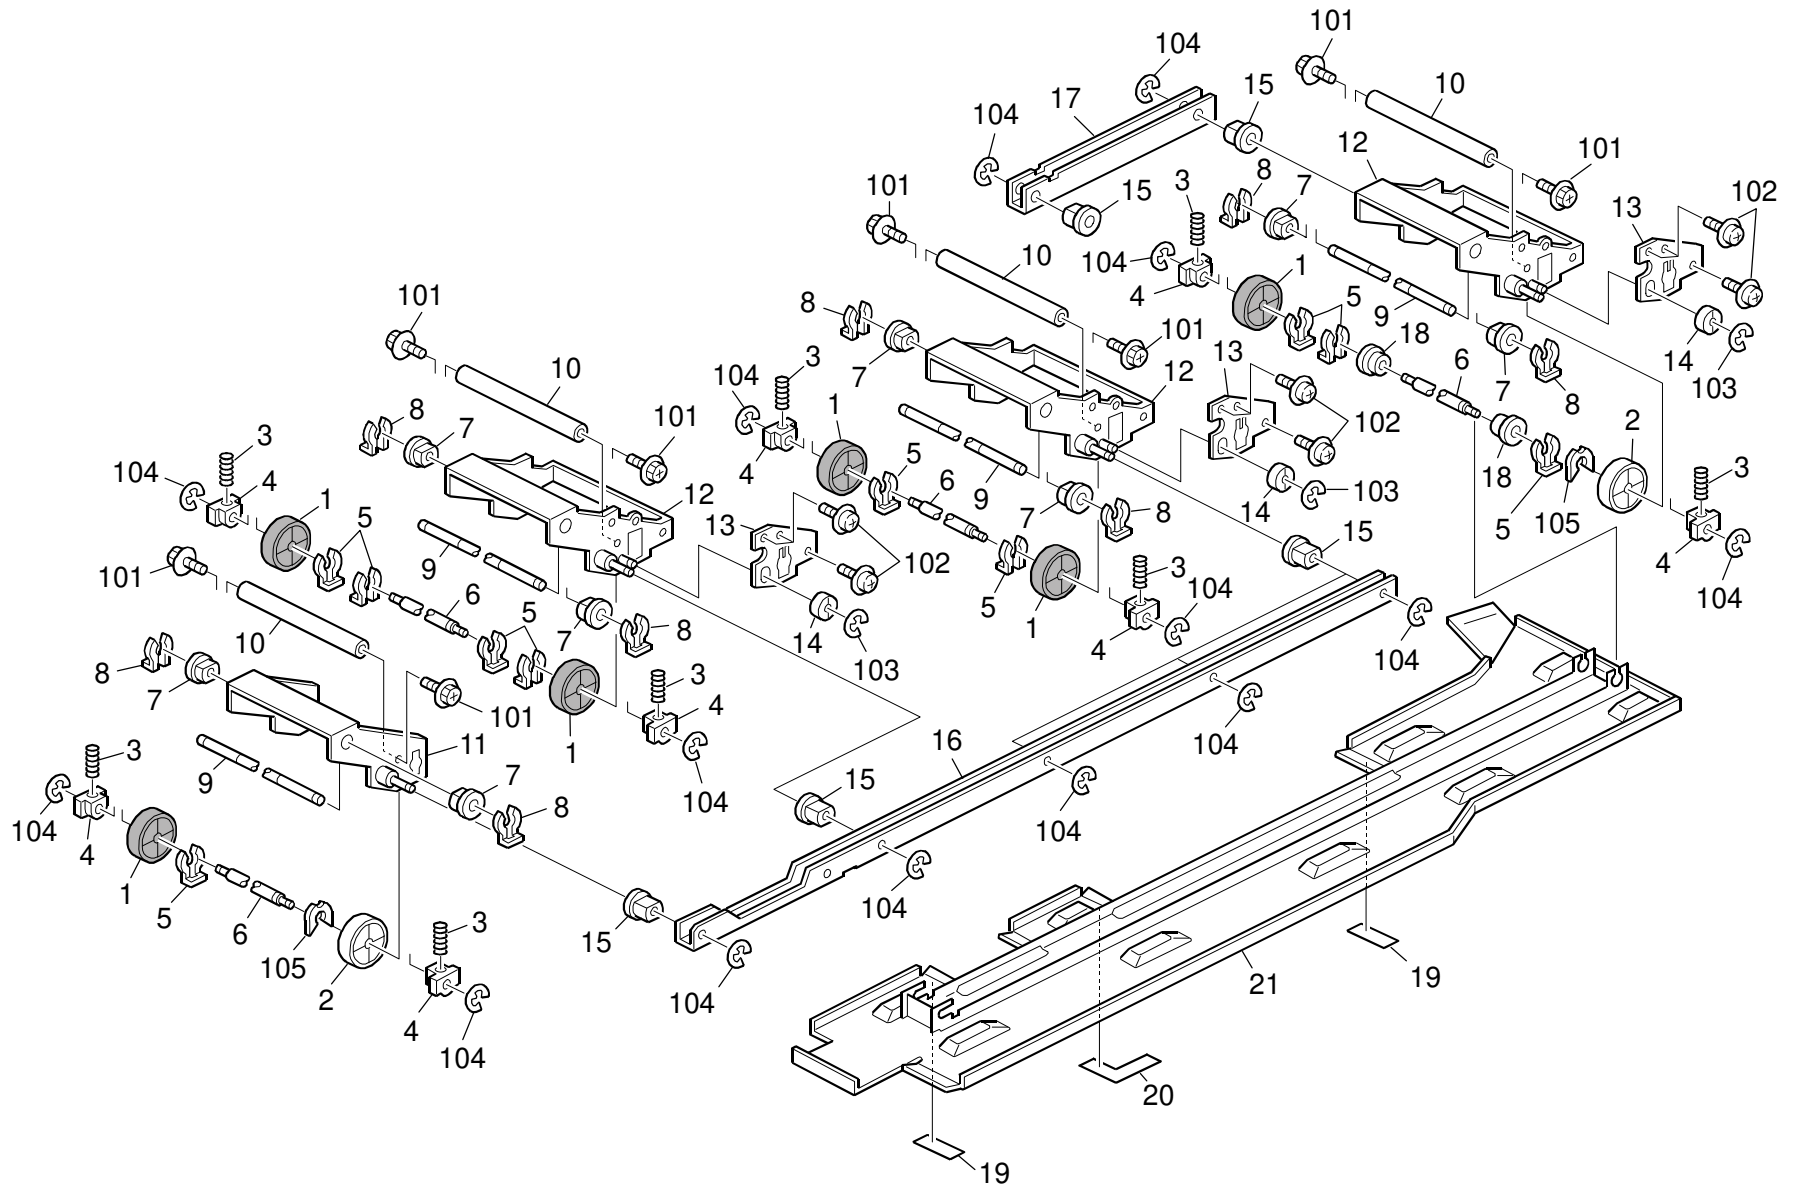


32.Paper Transfer 4 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B700 2453	Guide:Turn	10
2	B890 4795	Roller:Driven	2
3	B890 4237	Compression Spring:4N	12
4	AA08 0203	Bushing - 6mm	12
5	5215 2621	Snap Ring - M6	14
6	B890 4114	Shaft:Driven Roller:Horizontal Transport	6
7	AA08 2101	Bushing - 6x10x6	12
8	5447 2681	Snap Ring	12
9	B890 4116	Shaft:Holder:Driven Roller	6
10	B890 4167	Shaft:Holder:Driven Roller	6
11	B890 4190	Holder:Driven Roller:Right:Ass'y	1
12	B890 4110	Holder:Driven Roller:Ass'y	5
13	B890 4171	Adjusting Plate:Holder:Driven Roller	5
14	B890 4172	Cam:Holder:Driven Roller	5
15	AA08 2075	Bushing - M6	7
16	B890 4126	Link:Driven Roller:Rear	1
17	B890 4125	Link:Driven Roller:Front	1
18	AA08 2141	Bushing - 16x18x5	2
19	B890 4187	Sheet:Guide Plate:Horizontal Transport:Upper	2
20	B890 4977	Sheet:Guide Plate:Horizontal Transport:Upper:2	1
21	B890 4135	Guide Plate:Horizontal Transport:Upper:Ass'y	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0360 3008N	Screw:M3x8	
102	0951 3006N	Screw - M3x6	
103	0720 0030E	Retaining Ring - M3	
104	0720 0040E	Retaining Ring - M4	
105	0805 0088	Retaining Ring - M6	

 33.Paper Transfer 5 (B890)

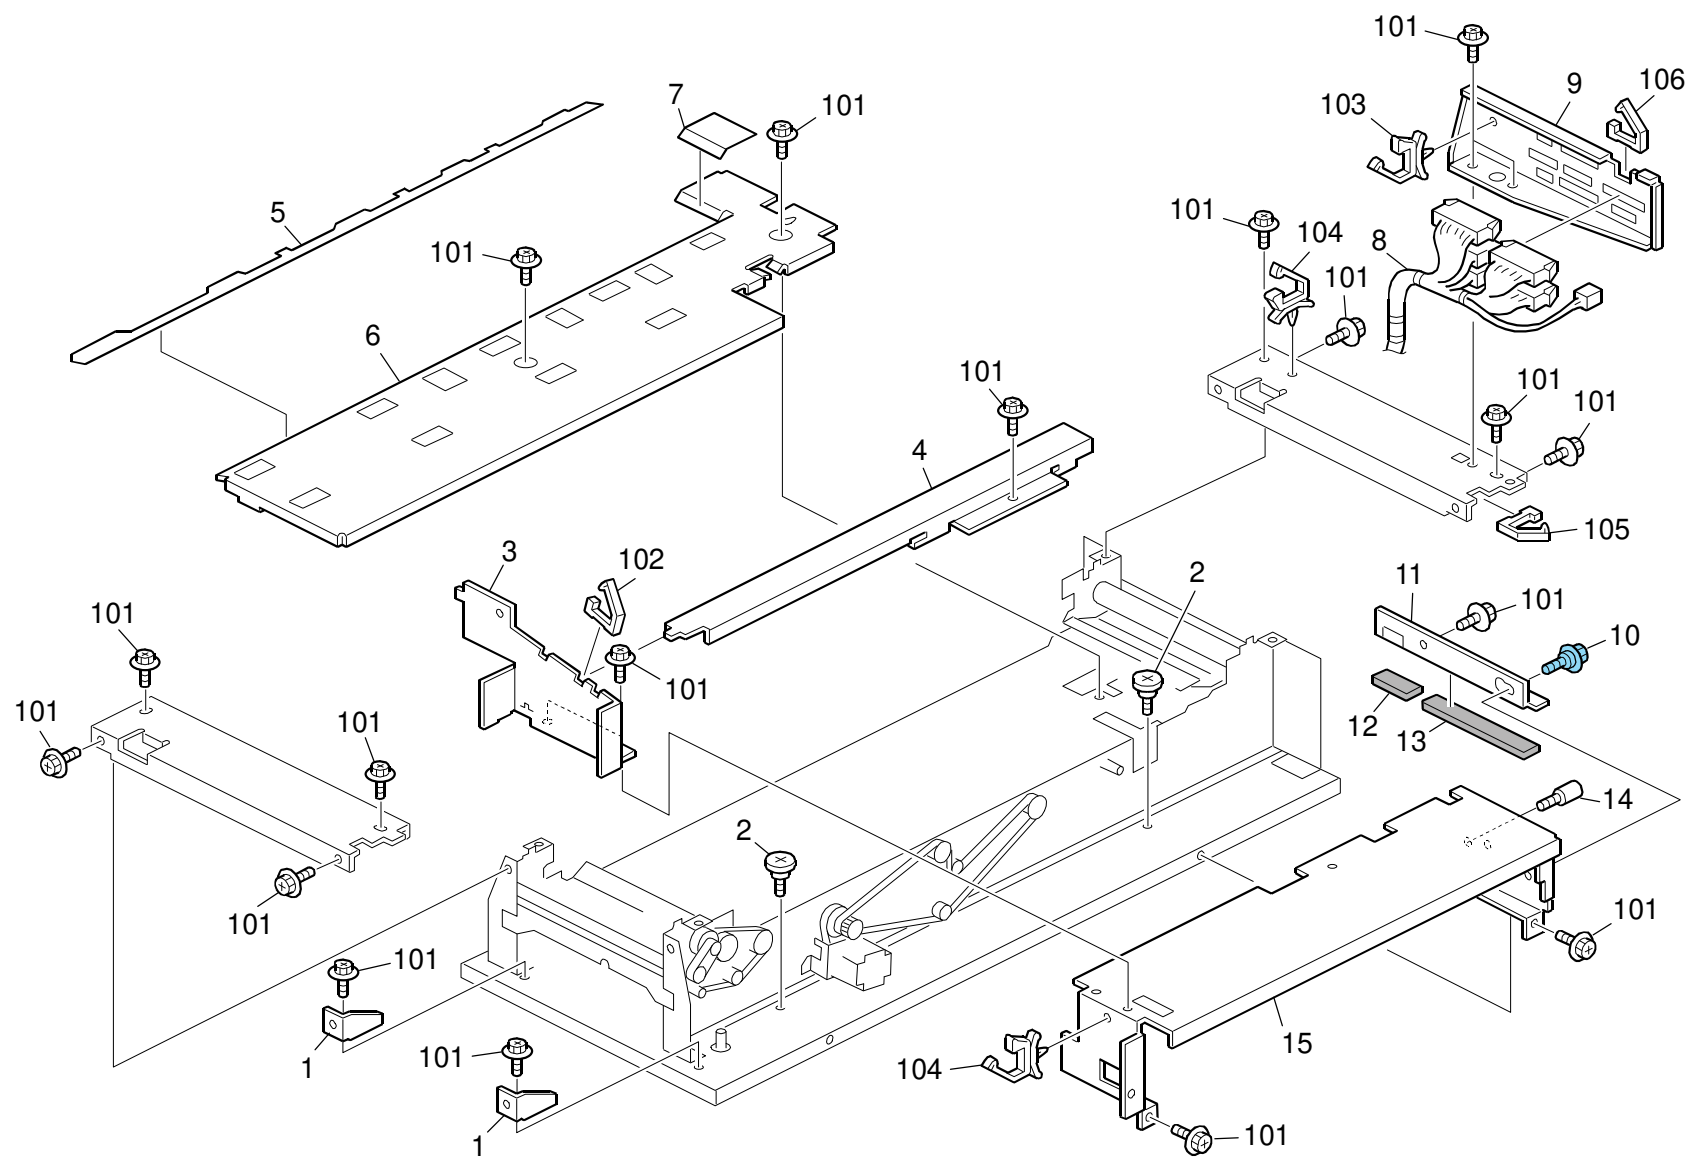


33.Paper Transfer 5 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B890 2971	Bracket:Cover:Right	2
2	AA14 3562	Screw:M4:DIA6x1.2	2
3	B890 2803	Inner Cover:Right Upper	1
4	B890 2834	Inner Cover:Pulley	1
5	B890 4370	Sheet:Guide Plate:Jogger Fence:Upper	1
6	B890 4072	Guide Plate:Jogger Fence:Upper	1
7	B890 4369	Sheet:Guide Plate:Jogger Fence:Upper:Front	1
8	B890 5623	Harness:DC:Transport Unit:Connecting:2	1
9	B890 4165	Bracket:Connector	1
10	B830 1135	Screw	1
11	B890 2828	Bracket:Seal:Right	1
12	B890 2832	Seal:Paper Chip:Left and Right	1
13	B890 4877	Seal:Duct:Lower	1
14	B234 2092	Terminal Pin	1
15	B890 2801	Inner Cover:Right Lower	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	1105 0522	Edge Saddle - LES0510	
103	1105 0489	Harness Clamp - LWS 1316	
104	1105 0516	Clamp	
105	1105 0521	Clamp - LES-1017	
106	1105 0518	Edge Saddle - LES-1010	

 34.Paper Transfer 6 (B890)

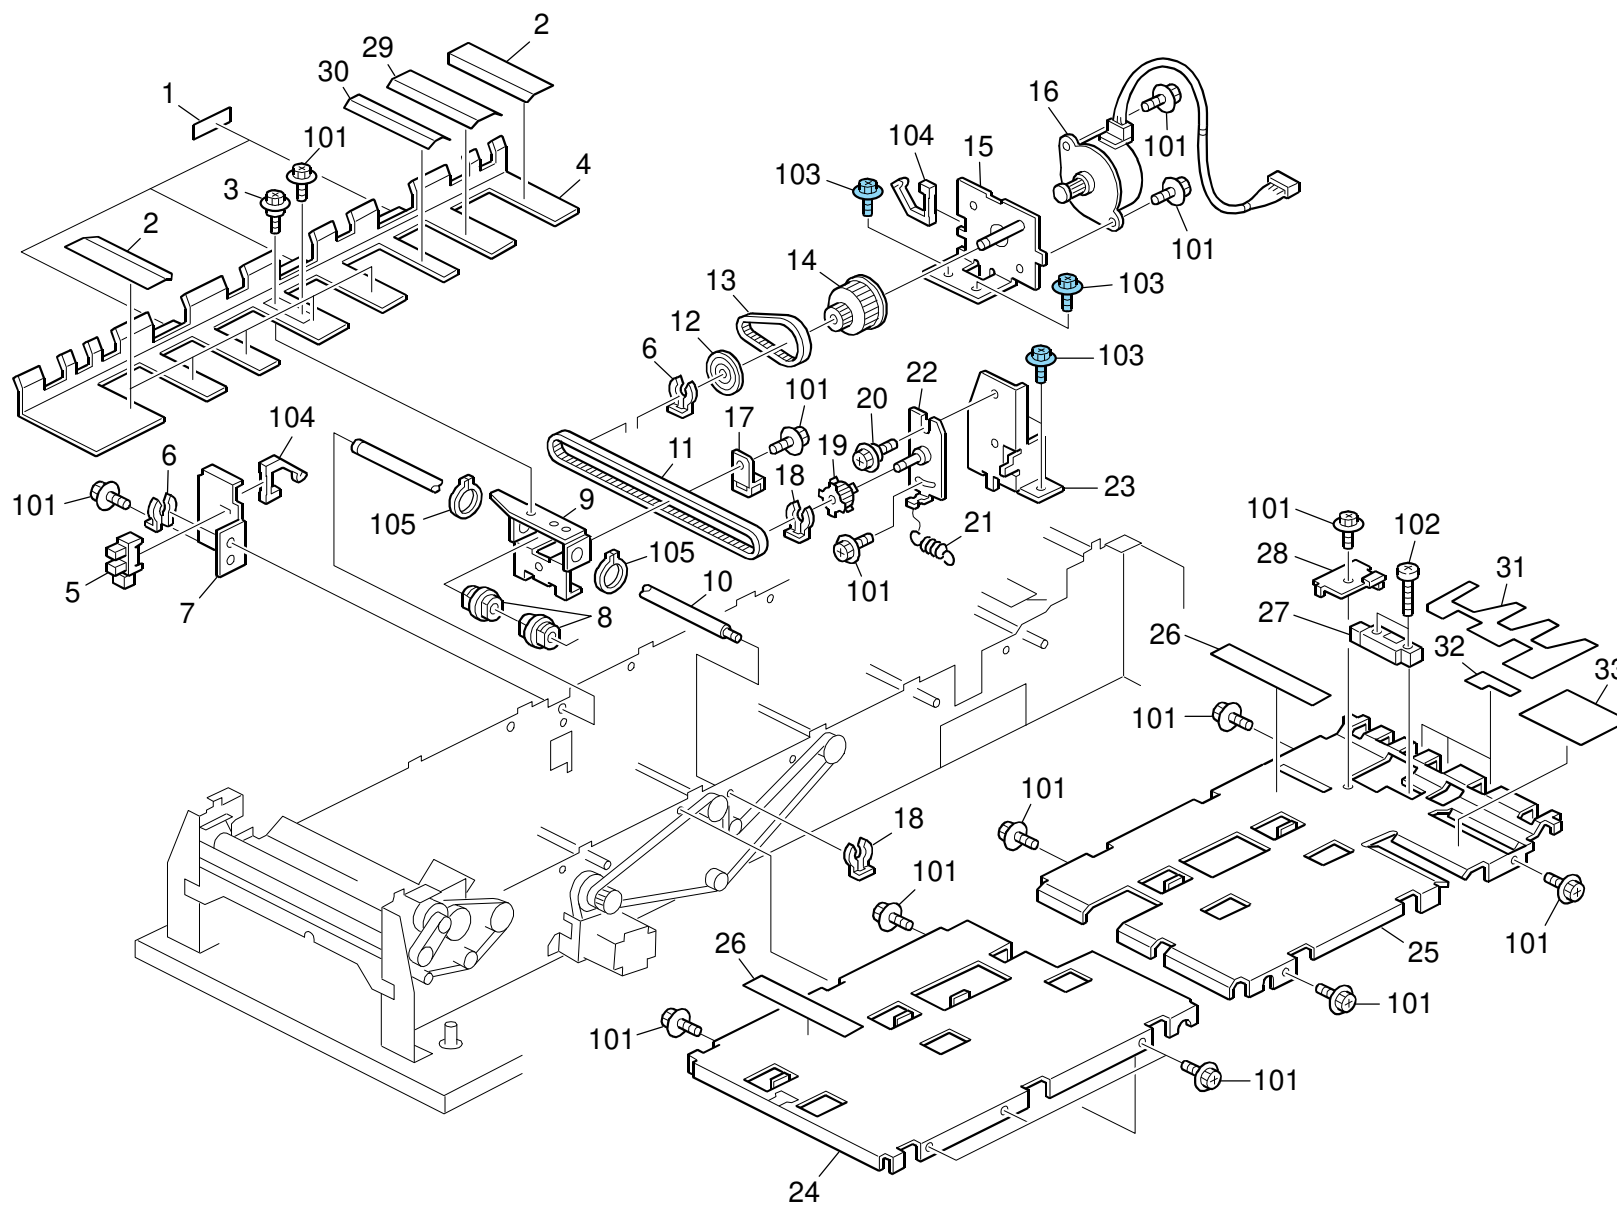


34.Paper Transfer 6 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B890 4367	Sheet:Jogger Fence:Short	3
2	B890 4251	Sheet:Jogger Fence	6
3	B700 4867	Screw:Contact Point:M3	1
4	B890 4106	Jogger Fence:Ass'y	1
5	AW02 0141	Photointerruptor	1
6	5215 2621	Snap Ring - M6	2
7	B890 4109	Bracket:Home Position Sensor:Jogger Fence	1
8	AA08 2051	Bushing - M8	2
9	B890 4100	Slider:Jogger Fence	1
10	B890 4099	Guide Rod:Jogger Fence	1
11	AA04 3599	Timing Belt - 60S3M588	1
12	A259 1158	Pulley Flange	1
13	B890 4101	Timing Belt:B80S2M152	1
14	A376 2524	Timing Pulley - 60Z/20Z	1
15	B890 4102	Bracket:Stepper Motor:Jogger Fence:Ass'y	1
16	D300 2205	Stepper Motor - DC 21.6W	1
17	A697 3150	Fixing Plate - Timing Belt	1
18	5447 2681	Snap Ring	2
19	B793 4244	Timing Pulley - 20T	1
20	AA14 3790	Screw:Contact Point	1
21	A257 6429	Pressure Spring	1
22	B890 4156	Bracket:Tensioner:Jogger Fence:Ass'y	1
23	B890 4105	Bracket:Tensioner:Jogger Fence:Fix	1
24	B890 4355	Guide Plate:Horizontal Transport:Right:Ass'y	1
25	B890 4069	Guide Plate:Horizontal Transport:Lower Left:Ass'y	1
26	B890 4150	Sheet:Jogger Fence:Lower	2
27	AW01 0110	Paper Feed Sensor	1
28	B890 4766	Cover:Harness:Registration Sensor	1
29	B890 4366	Sheet:Jogger Fence:2	1
30	B890 4365	Sheet:Jogger Fence:1	1
31	B890 4373	Sheet:Gate Pawl	1
32	B890 4374	Sheet:Gate Pawl:Small	3
33	B890 4375	Sheet:Punch:Lengthwise	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0353 0120N	Screw M3x12	
103	0454 3006Q	Tapping Screw - M3x6	
104	1105 0522	Edge Saddle - LES0510	
105	0725 0120E	Retaining Ring C - M12	

 35.Paper Transfer 7 (B890)

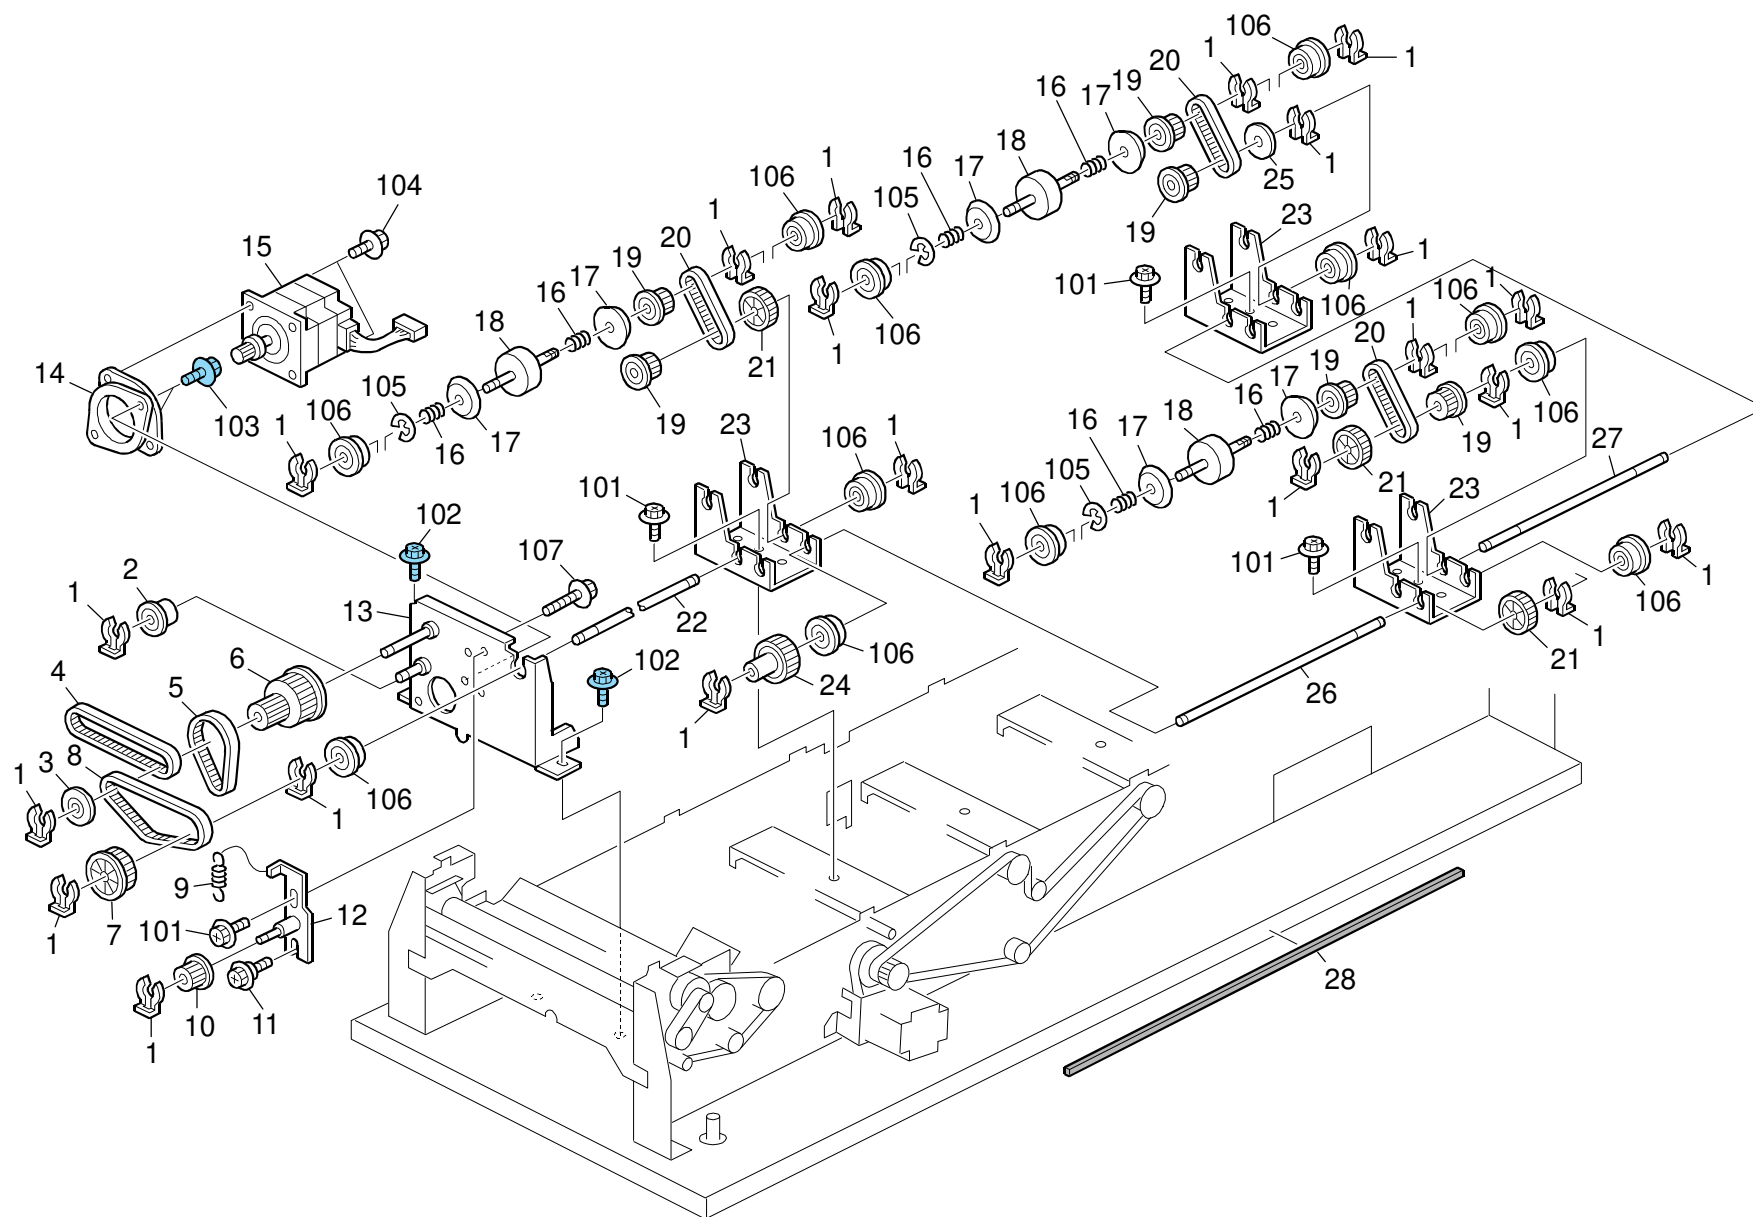


35.Paper Transfer 7 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	5447 2681	Snap Ring	22
2	B132 1280	Pulley:Tightener:Drive: Around The Photoconductor:Press Fit	1
3	A259 1158	Pulley Flange	1
4	B890 4095	Timing Belt:B50S3M294	1
5	B890 4160	Timing Belt:B100S3M207	1
6	B889 1266	Timing Pulley:24T/44T	1
7	A566 2126	Timing Pulley - 40Z	1
8	B890 4244	Synchronous Belt:B60s3m270	1
9	A257 6429	Pressure Spring	1
10	AB03 0806	Pulley - 19T	1
11	AA14 3790	Screw:Contact Point	1
12	B890 4181	Bracket:Tightener:Transport:Lengthwise:Ass'y	1
13	B890 4096	Bracket:Stepper Motor:Transport: Lengthwise:Ass'y	1
14	AA16 1164	Cushion:Stepper Motor	1
15	B889 1265	Stepper Motor DC2.3V 6.9W	1
16	H072 2216	Compression Spring	6
17	B890 4362	Guide:Roller:Vertical Transport	6
18	B890 4363	Roller:Transport:Lengthwise:Auxiliary	3
19	GB03 0032	Timing Pulley - T28-S2M	6
20	B652 1674	Timing Belt:B40S2M170	3
21	B023 6175	Gear - 28Z	3
22	B890 4092	Shaft:Coupling:Roller:Right	1
23	B890 4093	Bracket:Roller:Transport:Lengthwise:Auxiliary	3
24	B890 4184	Gear:Z28	1
25	A300 3812	Spacer - 6x22x1.5	1
26	B890 4091	Shaft:Coupling:Roller:Middle	1
27	B890 4090	Shaft:Coupling:Roller:Left	1
28	B890 5670	Gasket:EGUN10113:700mm	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0454 4008Q	Tapping Screw - M4x8	
104	0451 4010N	Tapping Screw:4x10	
105	0720 0040E	Retaining Ring - M4	
106	0742 3806	Bearing:DIA6xDIA13x5	
107	0451 3014N	Tapping Screw:3x14	

 36.Paper Transfer 8 (B890)

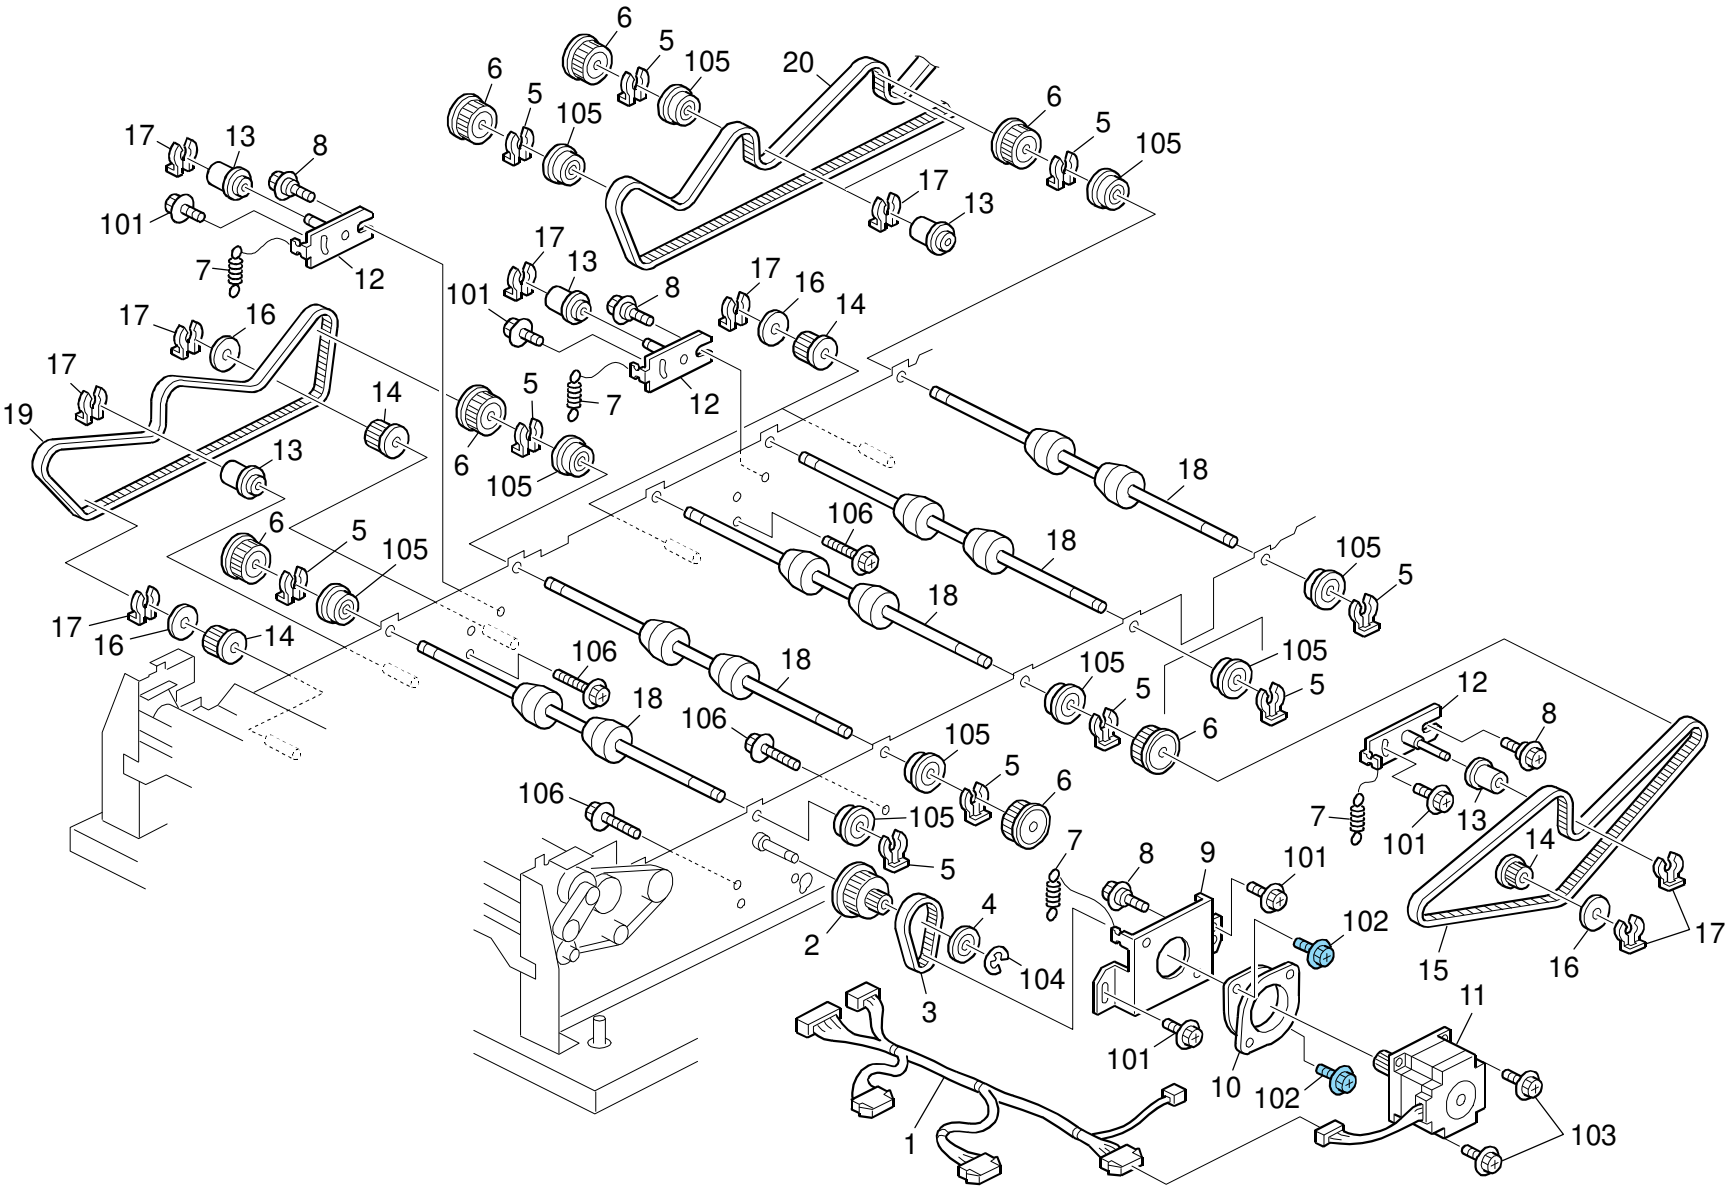


36.Paper Transfer 8 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B890 5625	Harness:DC:Transport Unit:Connecting:4	1
2	B889 1266	Timing Pulley:24T/44T	1
3	B890 4160	Timing Belt:B100S3M207	1
4	A259 1158	Pulley Flange	1
5	5215 2621	Snap Ring - M6	10
6	B079 1144	Timing Pulley:Paddle	7
7	A257 6429	Pressure Spring	4
8	AA14 3790	Screw:Contact Point	4
9	B889 1275	Bracket:Stepper Motor	1
10	AA16 1164	Cushion:Stepper Motor	1
11	B889 1265	Stepper Motor DC2.3V 6.9W	1
12	B890 4087	Tightener:Horizontal Transport:Short:Ass'y	3
13	B132 1280	Pulley:Tightener:Drive: Around The Photoconductor:Press Fit	6
14	AB03 0806	Pulley - 19T	5
15	AA04 3352	Timing Belt - B60S3M918	1
16	A300 3812	Spacer - 6x22x1.5	5
17	5447 2681	Snap Ring	11
18	B890 4350	Roller:Transport:Side	5
19	B890 4711	Synchronous Belt:B60S3M1005	1
20	B890 4086	Timing Belt:1326:S3M	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 4008Q	Tapping Screw - M4x8	
103	0451 4010N	Tapping Screw:4x10	
104	0720 0060E	Retaining Ring - M6	
105	0742 3808	Ball Bearing - 8x16x5	
106	0451 3014N	Tapping Screw:3x14	

 37.Paper Exit (B890)

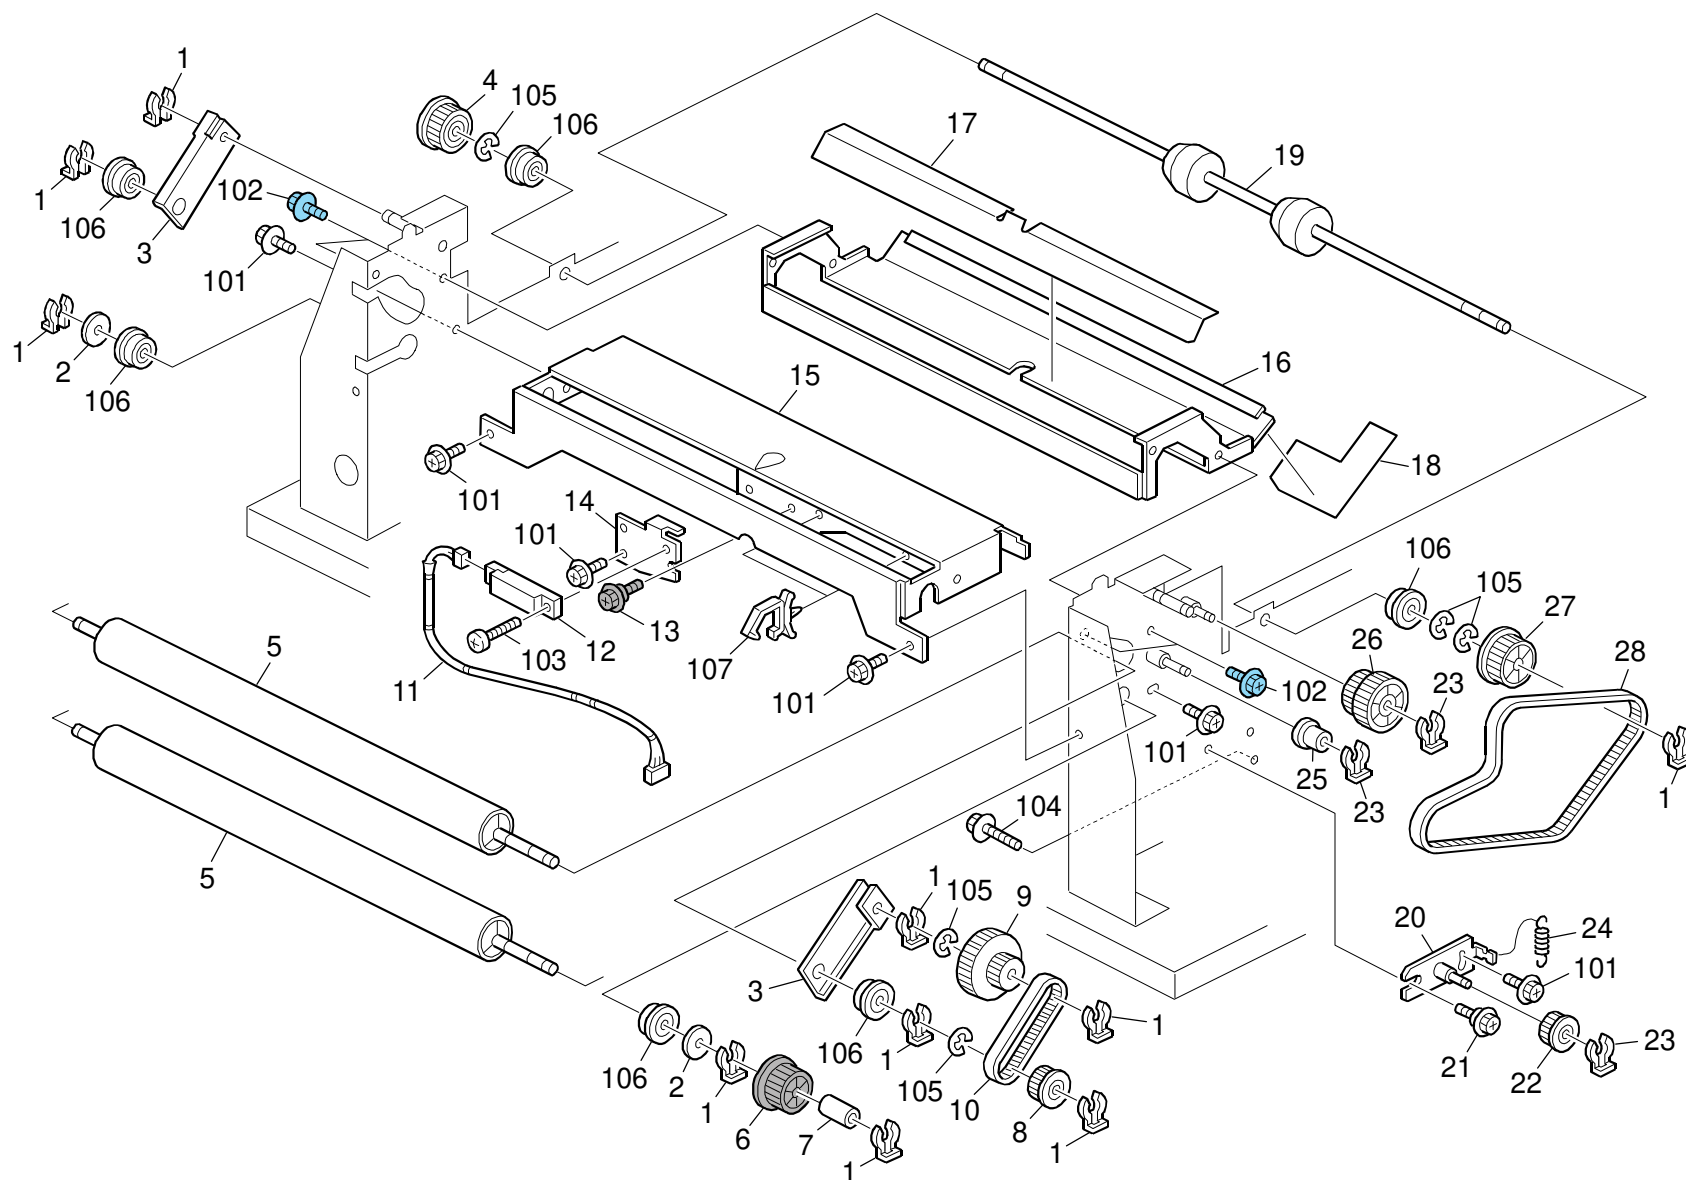


37.Paper Exit (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	5215 2621	Snap Ring - M6	10
2	AA13 2152	Spacer - 8x20x1	2
3	B890 4710	Lever:Exhaust Roller	2
4	B079 1144	Timing Pulley:Paddle	1
5	B890 4241	Transport Roller:Drive	2
6	B890 2157	Timing Pulley:S3M:T30	1
7	B352 3170	Spacer	1
8	B890 4708	Timing Pulley:T20:S3M	1
9	B890 4709	Gear:Pulley:Z30:T30	1
10	AA04 3297	Timing Belt:S3M:150	1
11	B890 5645	Harness:DC:Transport Unit:Sensor:Connecting	1
12	AW01 0110	Paper Feed Sensor	1
13	B238 4483	Screw	1
14	B890 4248	Guide Plate:Paper Feed Sensor:Right	1
15	B890 4246	Guide Plate:Horizontal Transport: Lower Right:Exit:Peen	1
16	B890 4074	Guide Plate:Horizontal Transport:Upper	1
17	B890 4758	Sheet:Guide Plate:Horizontal Transport:Upper	1
18	B890 4769	Sheet:Guide Plate:Horizontal Transport	1
19	B890 4353	Roller:Transport:Side:Exit	1
20	B890 4164	Tightener:Horizontal Transport:Exit:Ass'y	1
21	AA14 3790	Screw:Contact Point	1
22	AB03 0806	Pulley - 19T	1
23	5447 2681	Snap Ring	3
24	A257 6429	Pressure Spring	1
25	B132 1280	Pulley:Tightener:Drive: Around The Photoconductor:Press Fit	1
26	AB01 4142	Pulley - 30Z/20T	1
27	B889 1276	Timing Pulley:33T	1
28	B890 4149	Timing Belt:B60S3M420	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0353 0120N	Screw M3x12	
104	0451 3014N	Tapping Screw:3x14	
105	0720 0060E	Retaining Ring - M6	
106	0742 3808	Ball Bearing - 8x16x5	
107	1105 0511	Harness Clamp - LWS-0306ZC	

 38.Cross Flap Transfer 1 (B890)

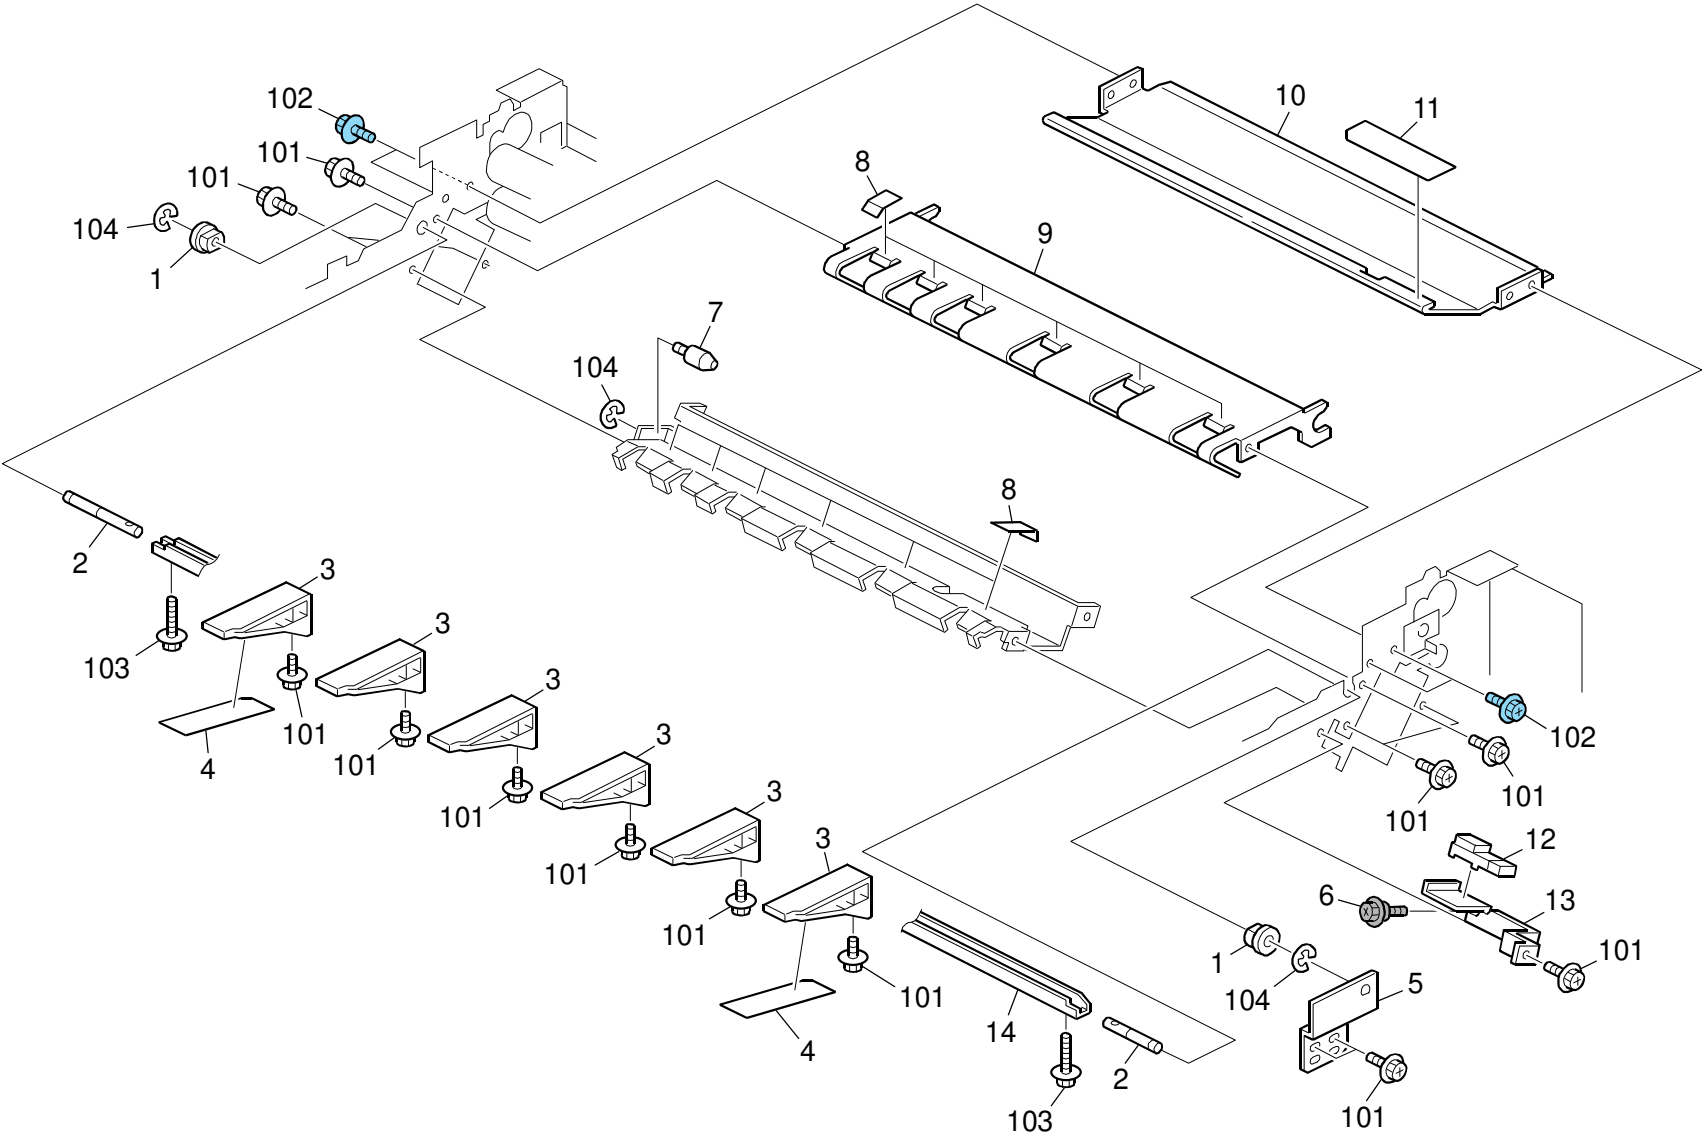


38.Cross Flap Transfer 1 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA08 2101	Bushing - 6x10x6	2
2	B890 4175	Shaft:Gate Pawl	2
3	B890 4719	Exchange Powl:Punch:Horizontal Transport	6
4	B890 4179	Sheet:Exchange Powl	2
5	B890 4083	Stopper:Gate Pawl	1
6	B238 4483	Screw	1
7	B890 4152	Shaft:Punch Unit	1
8	B890 4359	Sheet:Gate Pawl:Rear	12
9	B890 4715	Guide Plate:Gate	1
10	B890 4714	Guide Plate:Exit:Upper Left	1
11	B890 4760	Sheet:Guide Plate:Exit:Upper Left	1
12	AW01 0107	Paper Feed Sensor	1
13	B890 4720	Bracket:Entrance Sensor:Punch:Side	1
14	B890 4082	Bracket:Gate Pawl	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0360 3008N	Screw:M3x8	
104	0720 0040E	Retaining Ring - M4	

 39.Cross Flap Transfer 2 (B890)

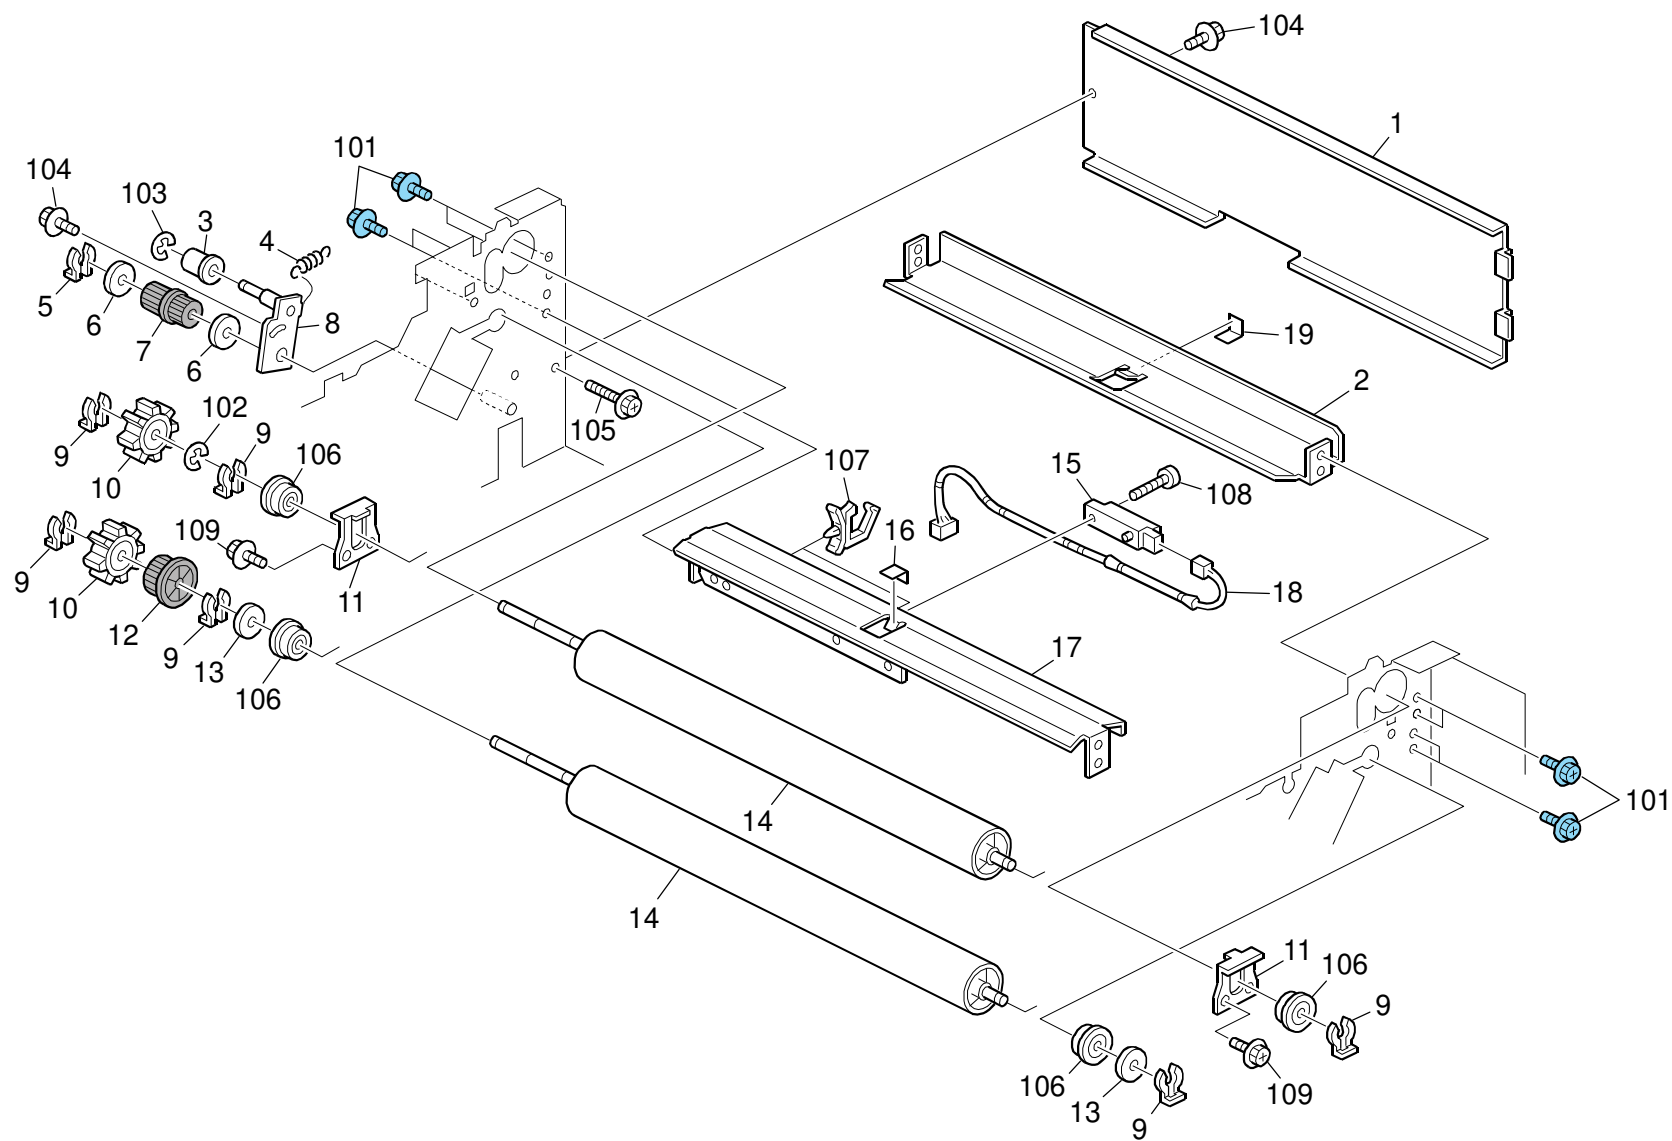


39.Cross Flap Transfer 2 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B890 4170	Inner Cover:Middle	1
2	B890 4713	Guide Plate:Horizontal Transport:Left Upper:Exit	1
3	G070 4717	Pulley:Tightener:Press Fit	1
4	A257 6429	Pressure Spring	1
5	5447 2681	Snap Ring	1
6	A300 3812	Spacer - 6x22x1.5	2
7	AB03 3088	Pulley - 20T/20T	1
8	B890 2141	Bracket:Tightener:Transport:Ass'y	1
9	5215 2621	Snap Ring - M6	6
10	B890 4703	Gear:Z8	2
11	B890 4821	Plate:Transport Roller:Driven	2
12	B890 2157	Timing Pulley:S3M:T30	1
13	AA13 2152	Spacer - 8x20x1	2
14	B890 4241	Transport Roller:Drive	2
15	AW01 0110	Paper Feed Sensor	1
16	B890 4360	Sheet:Sensor:Lower	1
17	B890 4716	Guide Plate:Horizontal Transport:LL:Exit	1
18	B890 5645	Harness:DC:Transport Unit:Sensor:Connecting	1
19	B890 4361	Sheet:Sensor:Upper	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0720 0060E	Retaining Ring - M6	
103	0720 0040E	Retaining Ring - M4	
104	0451 3006N	Tapping Screw - 3x6	
105	0451 3014N	Tapping Screw:3x14	
106	0742 3808	Ball Bearing - 8x16x5	
107	1105 0511	Harness Clamp - LWS-0306ZC	
108	0353 0120N	Screw M3x12	
109	0451 4006N	Tapping Screw - 4x6	

 40. Paper Transfer Unit (B890)

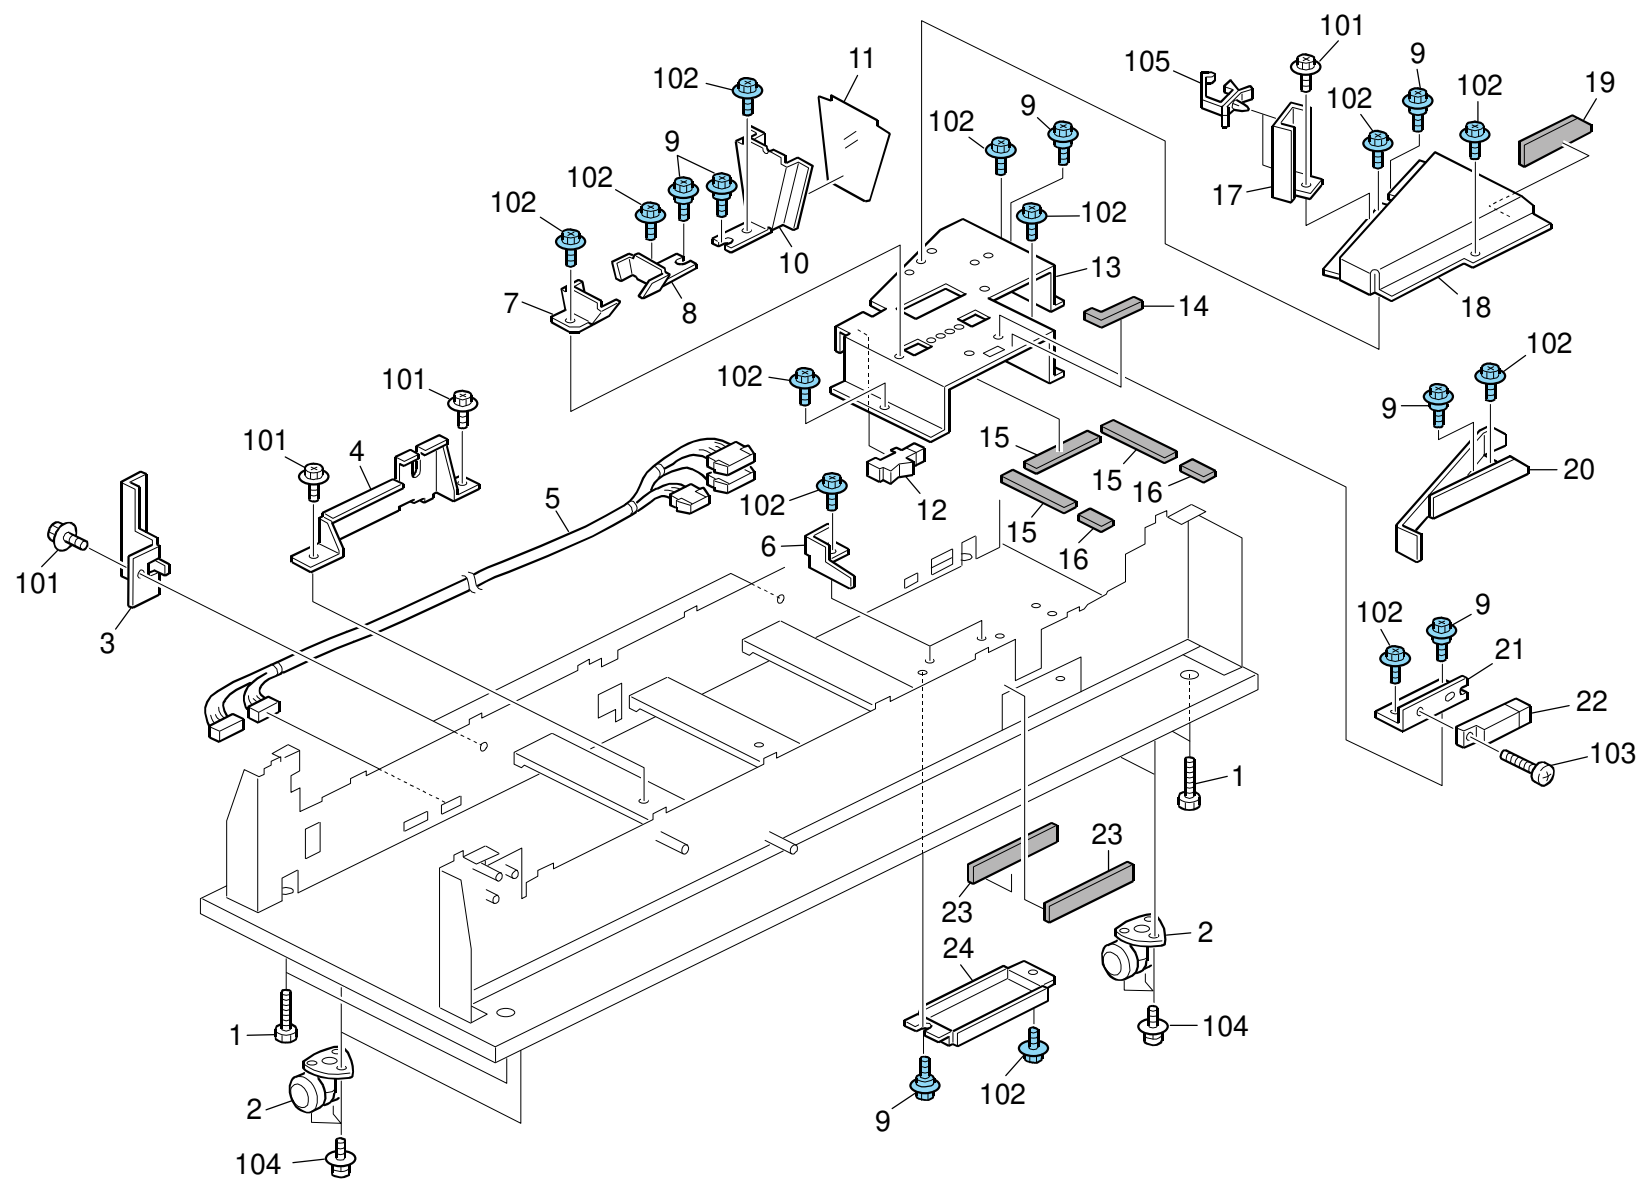


40.Paper Transfer Unit (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA14 3547	Hexagonal Bolt:M12x80	4
2	AH01 2035	Caster - 980N	4
3	B890 4194	Bracket:Protect	2
4	B890 4153	Bracket:Guide Rod:Fix	1
5	B890 5624	Harness:DC:Transport Unit:Connecting:3	1
6	B890 4867	Positioning Plate:Case	2
7	B890 4871	Duct:Lengthwise:Right:2	1
8	B890 4887	Duct:Lengthwise:Right:1	1
9	B830 1135	Screw	7
10	B890 4872	Duct:Lengthwise:Left	1
11	B890 4874	Seal:Duct:Lengthwise:Left	1
12	AW01 0128	Paper Feed Sensor	1
13	B890 4869	Duct:Lower	1
14	B890 4881	Seal:Sensor:Paper Chip	1
15	B890 4877	Seal:Duct:Lower	3
16	B890 4862	Seal:Duct:Lower:Left and Right	2
17	B890 4886	Bracket:Harness Clamp:Registration Sensor	1
18	B890 4876	Duct:Upper	1
19	B890 4865	Seal:Duct:Upper	1
20	B890 4875	Duct:Middle	1
21	B890 4879	Bracket:Sensor	1
22	AW01 0123	Photo Refiection Sensor:PSR11D1-B	1
23	B890 2839	Seal:Side Plate:Rear	2
24	B890 4885	Cover:Positioning Plate	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0353 0120N	Screw M3x12	
104	0954 5014N	Screw - M5x14	
105	1105 0511	Harness Clamp - LWS-0306ZC	

 41.Cross Unit 1 (B890)

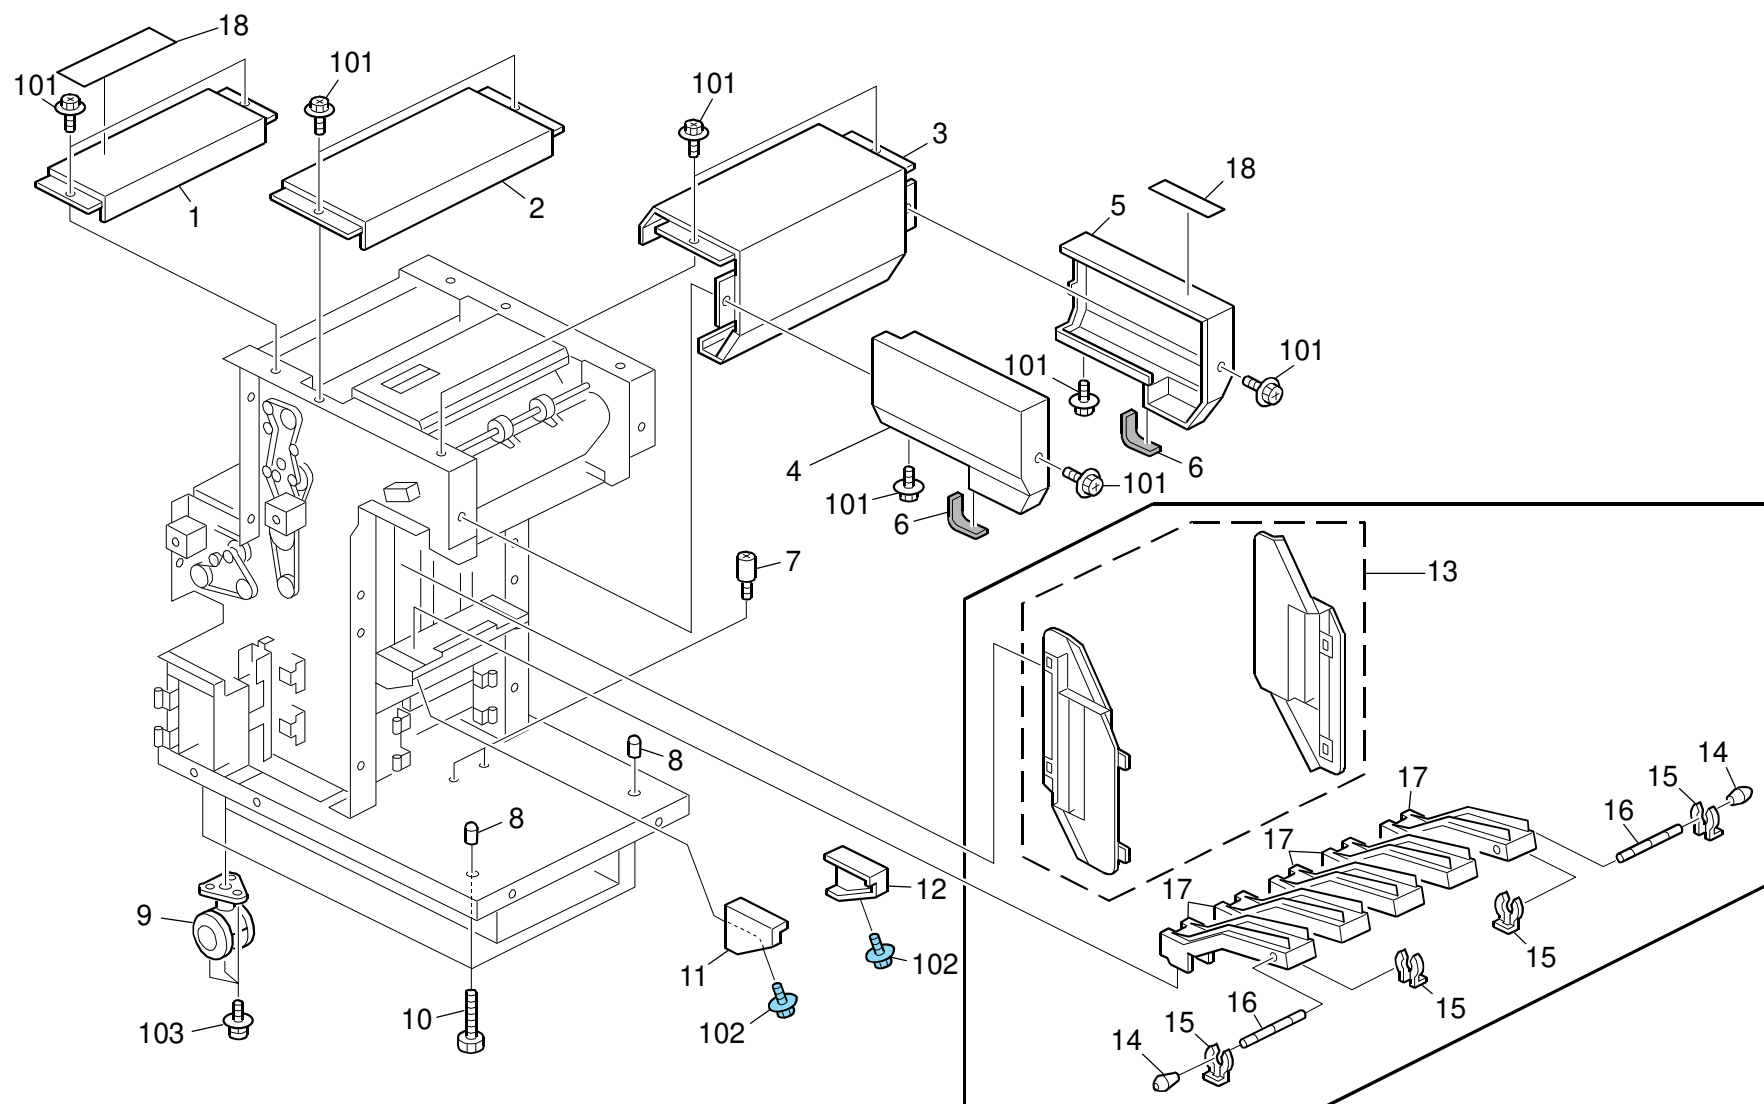


41.Cross Unit 1 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B890 2986	Cover:Upper	1
2	B890 2944	Cover:Exit:Option	1
3	B890 2997	Cover:Paper Exit Sub-unit:Middle	1
4	B890 2940	Cover:Exit:Rear:Welding	1
5	B890 2936	Cover:Exit:Front:Welding	1
6	D333 7665	Cushion:Guide	2
7	AA14 3859	Positioning Pin	2
8	B890 2063	Cap:Base	2
9	AH01 2035	Caster - 980N	4
10	AA14 3547	Hexagonal Bolt:M12x80	4
11	B890 6934	Cover:Tray:Inner Back	1
12	B890 6935	Cover:Tray:Front	1
13	B641 4463	Exit Guide Plate	1
14	B890 6683	Cap:Side Fence	2
15	5447 2681	Snap Ring	4
16	B890 6619	Shaft:Guide:Auxiliary	2
17	B890 6620	Tray:Exit	5
18	B890 2950	Decal:Multi-Language:Cross	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0954 5014N	Screw - M5x14	

 42.Cross Unit 2 (B890)

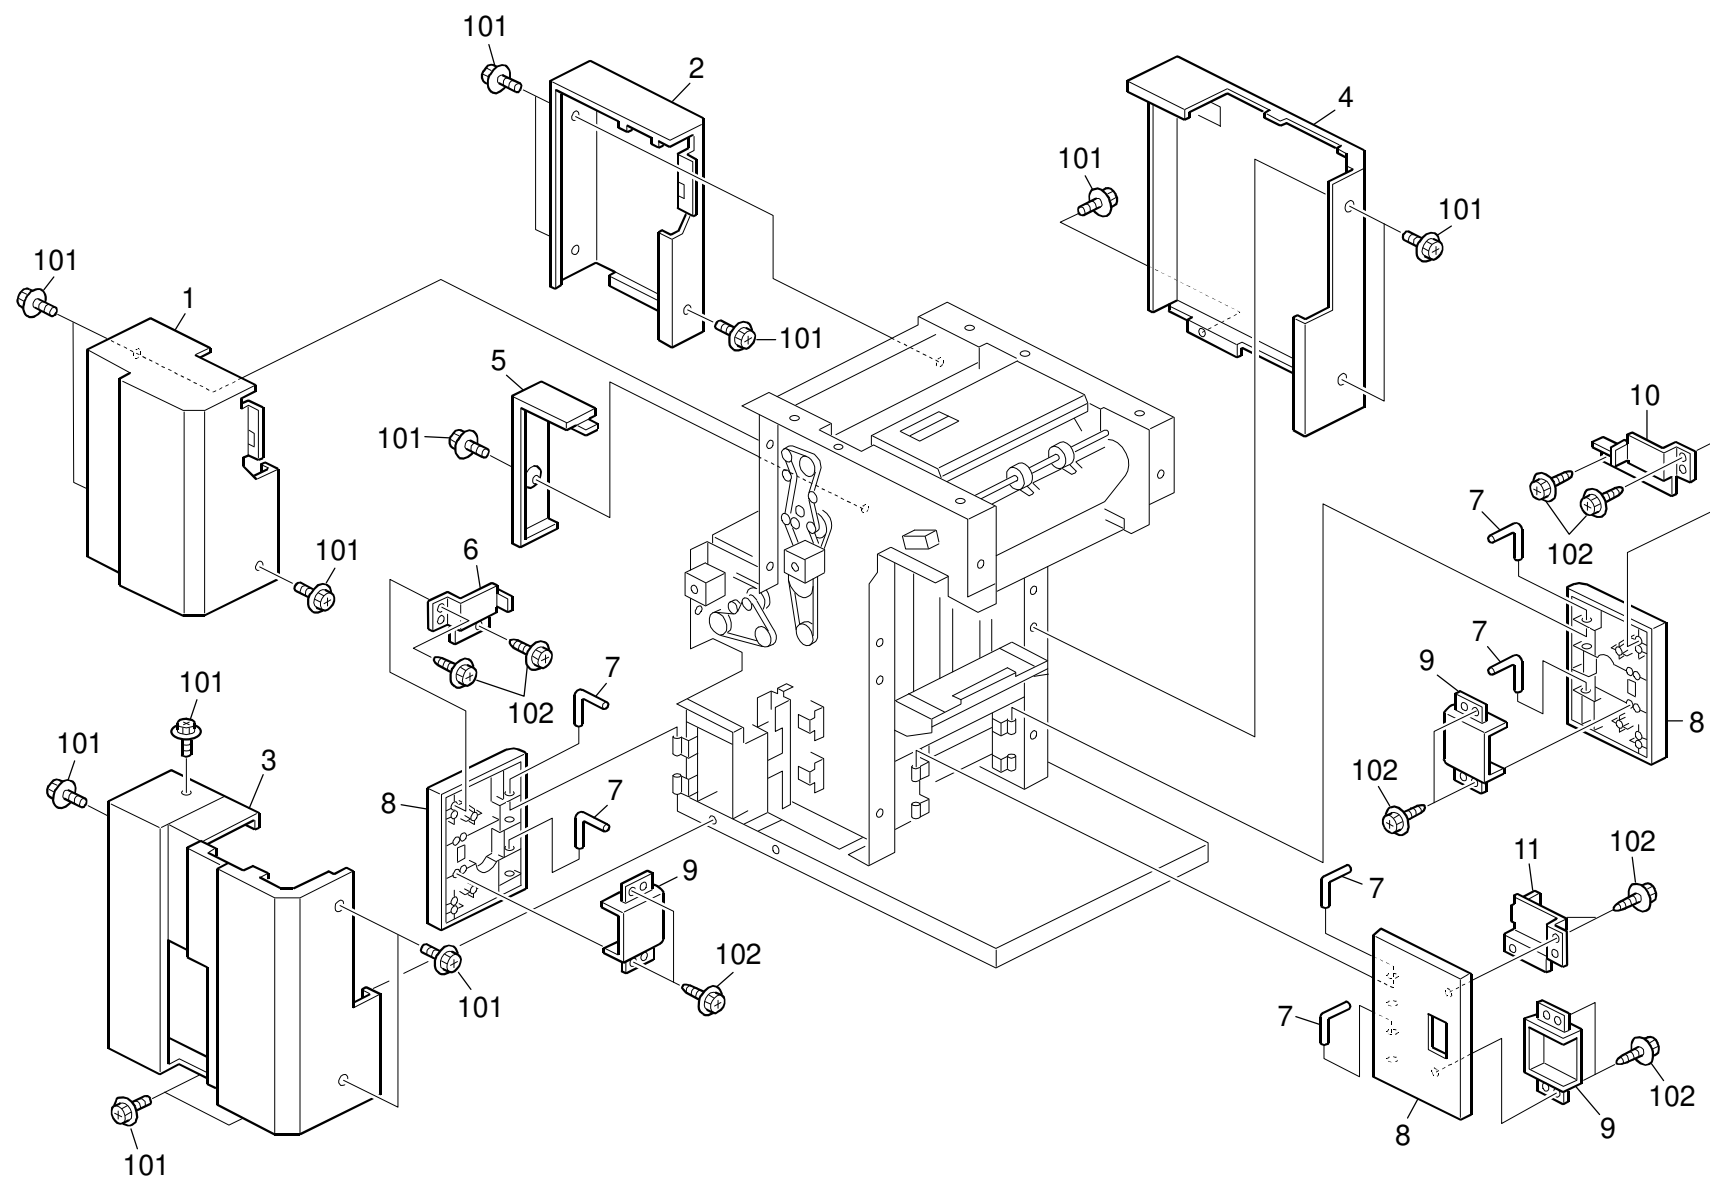


42.Cross Unit 2 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B890 2932	Cover:Turn:Rear:Welding	1
2	B890 2928	Cover:Turn:Front:Welding	1
3	B890 2922	Cover:Reverse:Rear Lower:Welding	1
4	B890 2920	Cover:Reverse:Front Lower	1
5	B890 2983	Cover:Right Upper	1
6	B890 2840	Receive Plate:Magnet Catch:Rear	1
7	B104 1303	Hinge Shaft	6
8	B889 1964	Cover:Misfeed Removal	3
9	B889 1906	Grip:Cover:Open and Close	3
10	B890 2978	Receive Plate:Magnet Catch:Front	1
11	B890 2979	Receive Plate:Magnet Catch:Rear	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0450 4010N	Tapping Screw:M4x10	

 43.Cross Flap 1 (B890)

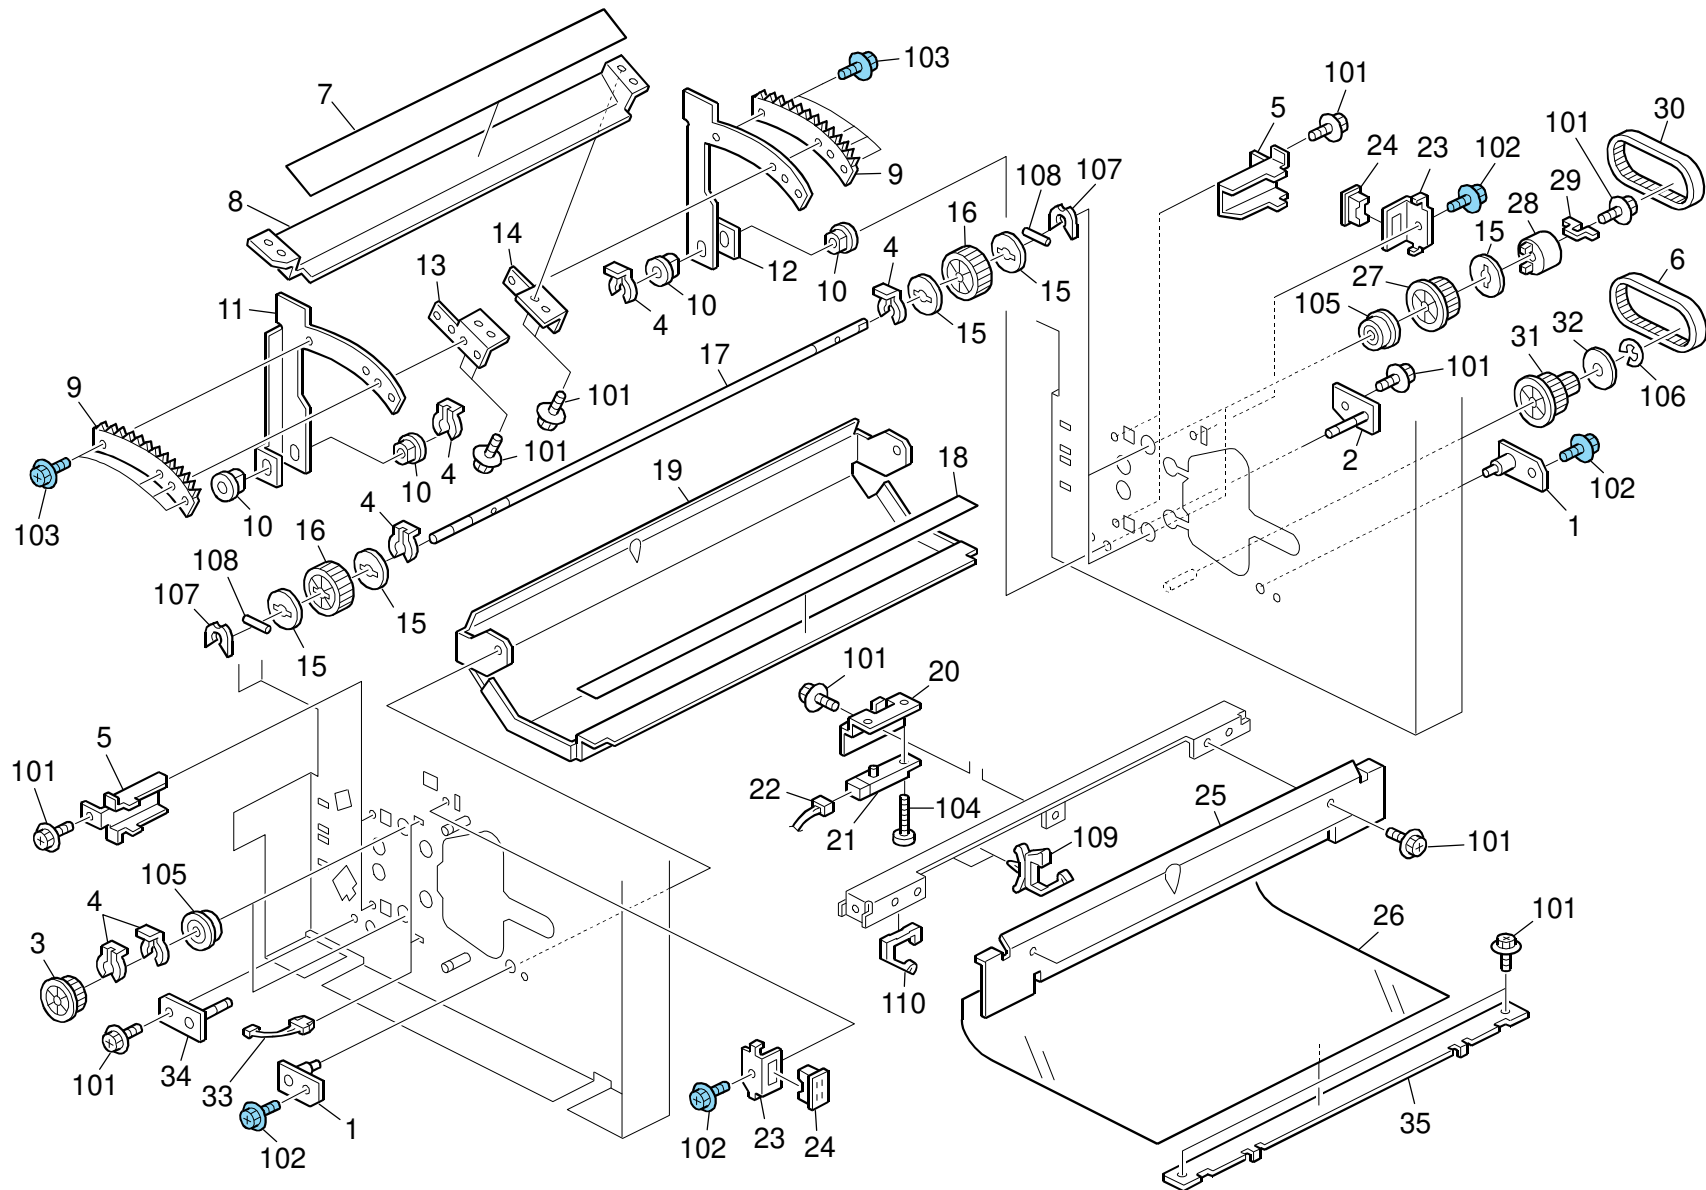


43.Cross Flap 1 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B890 2151	Guide Plate:Guide Plate:Ass'y	2
2	B890 2120	Shaft:Contact Point:Guide:Lower:Ass'y	1
3	AB03 0464	Timing Pulley - 30Z	2
4	5215 2621	Snap Ring - M6	10
5	B890 2073	Stay:Stopper:Guide:Adhesion	4
6	B890 2146	Timing Belt:B100S3M285	1
7	B890 2154	Sheet:Guide:Paper Crimp	1
8	B890 2122	Guide:Paper Crimp:Cross	1
9	B889 1339	Gear:Z251	2
10	AA08 2104	Bushing - 8x12x7	4
11	B889 1337	Arm:Guide:Left	1
12	B889 1338	Arm:Guide:Right	1
13	B890 2124	Spacer:Guide:Paper Crimp:Upper Rear	1
14	B890 2123	Spacer:Guide:Paper Crimp:Upper Front	1
15	B889 1325	Flange	10
16	B889 1323	Gear:Z26	4
17	B890 2111	Shaft:Drive:Guide	2
18	B890 2950	Decal:Multi-Language:Cross	1
19	B890 2135	Guide Plate:Lower:Inner	1
20	B890 6053	Bracket:Sensor	1
21	AW01 0127	Paper Feed Sensor	1
22	B890 5602	Harness:DC:Sensor:Connecting:2	1
23	B889 1170	Bracket:Magnet Catch	2
24	AG07 0513	Magnet Catch	2
25	B890 2132	Guide Plate:Lower:Outer	1
26	B890 2133	Guide:Turn	1
27	B889 1322	Timing Pulley:28T	2
28	B890 2110	Torque Limiter:OTLV8-2000C	2
29	B890 2180	Stopper:Torque Limiter	2
30	B890 2147	Timing Belt:B100S3M219	2
31	B889 1266	Timing Pulley:24T/44T	1
32	A259 1158	Pulley Flange	1
33	B890 5635	Harness:DC:Sensor:Connecting:3	2
34	B889 1335	Bracket:Guide:2	1
35	B890 2134	Stay:Turn	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0454 3008Q	Tapping Screw:3x8	
104	0353 0120N	Screw M3x12	
105	0742 3808	Ball Bearing - 8x16x5	
106	0720 0060E	Retaining Ring - M6	
107	0805 0088	Retaining Ring - M6	
108	0633 0200G	Pin - M3x20	
109	1105 0511	Harness Clamp - LWS-0306ZC	
110	1105 0522	Edge Saddle - LES0510	

 44.Cross Flap 2 (B890)

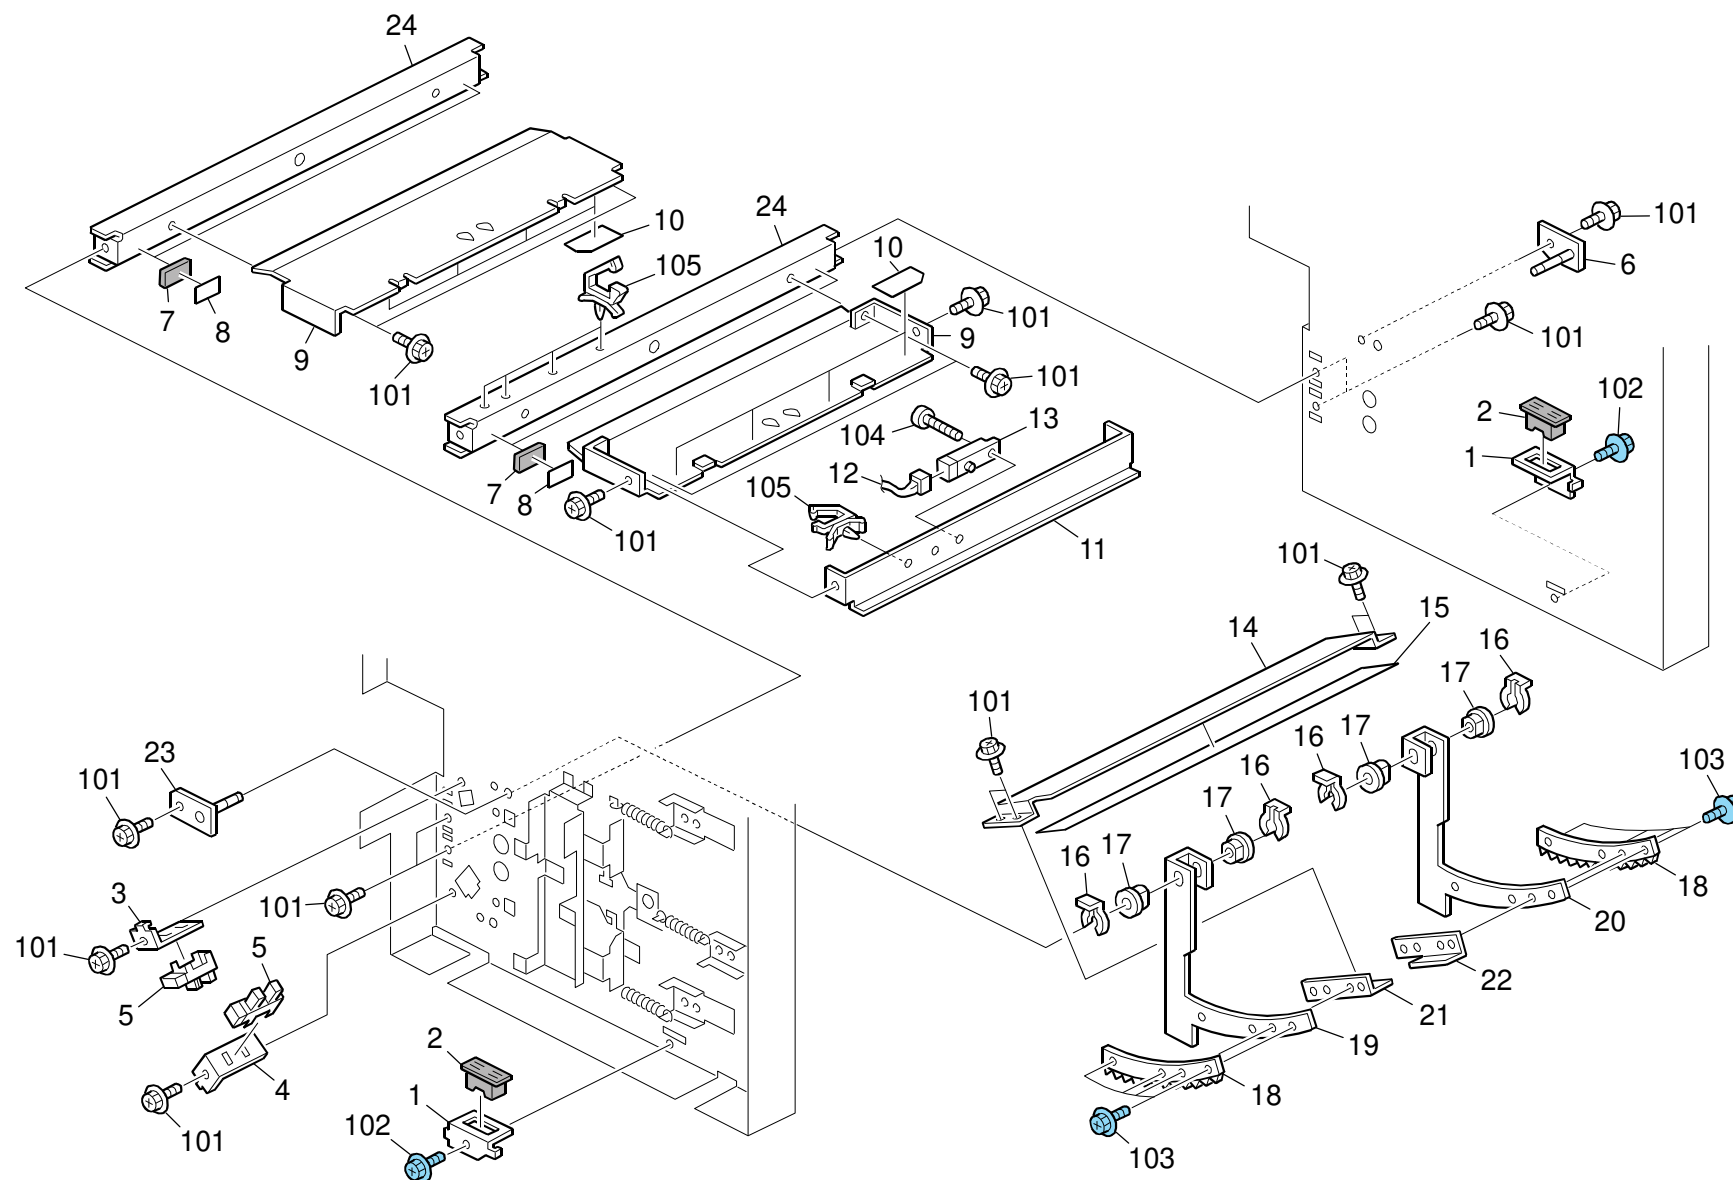


44.Cross Flap 2 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B889 1170	Bracket:Magnet Catch	2
2	AG07 0515	Magnet Catch:13N	2
3	B889 1331	Bracket:Sensor:Guide:2	1
4	B889 1330	Bracket:Sensor:Guide:1	1
5	AW02 0141	Photointerruptor	2
6	B890 2118	Bracket:Guide:1	1
7	B890 2150	Cushion:Arm:Guide	4
8	B890 2185	Sheet:Arm:Guide	4
9	B890 2137	Guide Plate:Transport	2
10	B890 2170	Sheet:Guide Plate:Transport	8
11	B890 2138	Bracket:Sensor:Transport	1
12	B890 5600	Harness:DC:Sensor:Connecting:1	1
13	AW01 0127	Paper Feed Sensor	1
14	B890 2122	Guide:Paper Crimp:Cross	1
15	B890 2154	Sheet:Guide:Paper Crimp	1
16	5215 2621	Snap Ring - M6	4
17	AA08 2104	Bushing - 8x12x7	4
18	B889 1339	Gear:Z251	2
19	B889 1337	Arm:Guide:Left	1
20	B889 1338	Arm:Guide:Right	1
21	B890 2126	Spacer:Guide:Paper Crimp:Lower Rear	1
22	B890 2125	Spacer:Guide:Paper Crimp:Lower Front	1
23	B889 1332	Bracket:Guide:1	1
24	B890 2136	Stay:Guide Plate:Transport	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0454 3008Q	Tapping Screw:3x8	
104	0353 0120N	Screw M3x12	
105	1105 0511	Harness Clamp - LWS-0306ZC	

 45.Cross Flap 3 (B890)

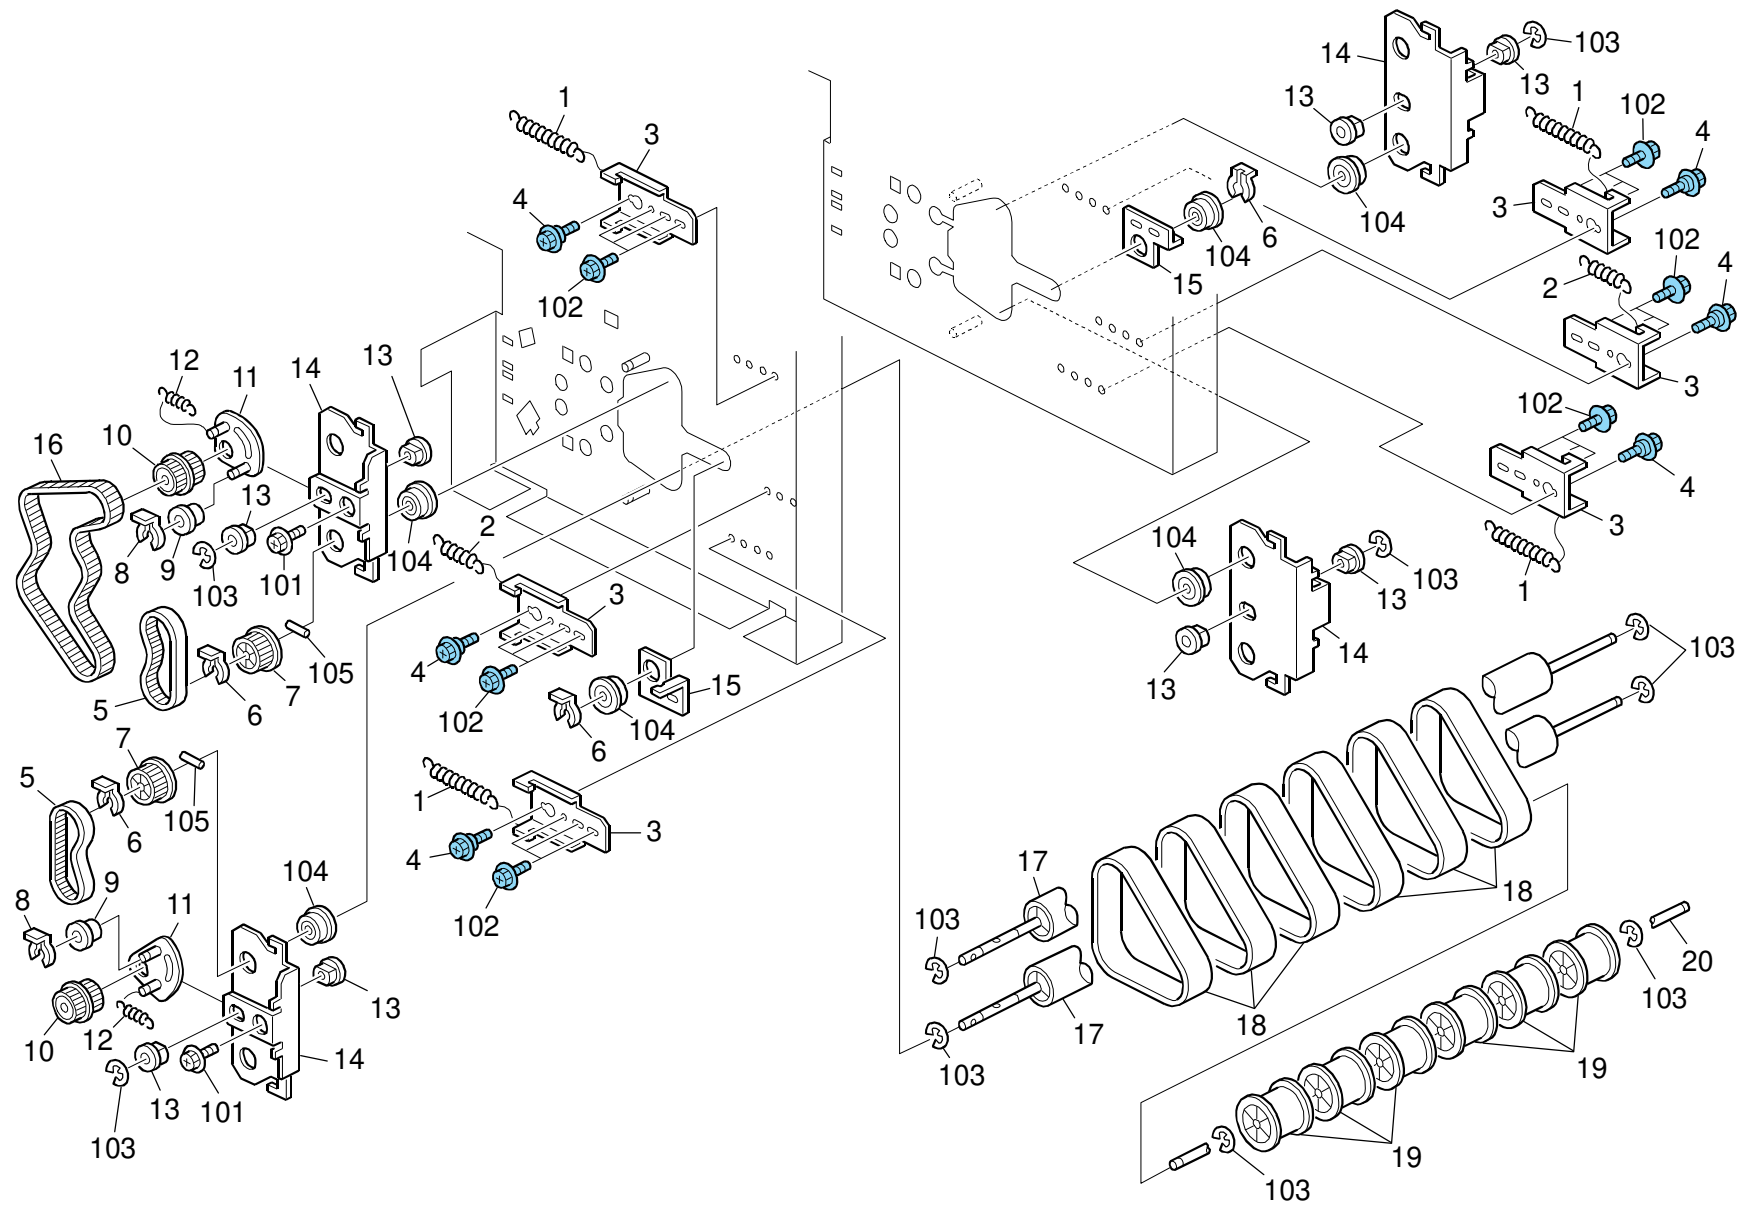


45.Cross Flap 3 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B890 2156	Tension Spring:34N	4
2	G028 1326	Spring:Tension	2
3	B889 1248	Bracket:Pressure:Roller	6
4	B830 1135	Screw	6
5	B830 2142	Timing Belt - 60S3M162	2
6	5215 2621	Snap Ring - M6	4
7	B890 2160	Timing Pulley:Drive:Roller:S3M30T	2
8	5447 2681	Snap Ring	2
9	B789 4332	Pulley - 34T	2
10	B889 1372	Timing Pulley:Idler:Lower	2
11	B890 2161	Bracket:Tightener:Roller:Pressure:Ass'y	2
12	B890 2174	Coil Spring:Belt Tension:Cross	2
13	5446 6214	Shaft Holder - Pick-up Roller	8
14	B890 2130	Bracket:Roller:Driven	4
15	B890 2127	Bracket:Belt Tension	2
16	B890 2169	Timing Belt:B80DS3M600	1
17	B890 2101	Roller:Driven	2
18	B890 2143	Belt:Paper Crimp:Driven	6
19	B890 2142	Roller:Paper Crimp:Driven	6
20	B890 2129	Shaft:Belt Tensioner	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0720 0060E	Retaining Ring - M6	
104	0742 3808	Ball Bearing - 8x16x5	
105	0632 0140G	Parallel Pin	

 46.Cross Flap 4 (B890)

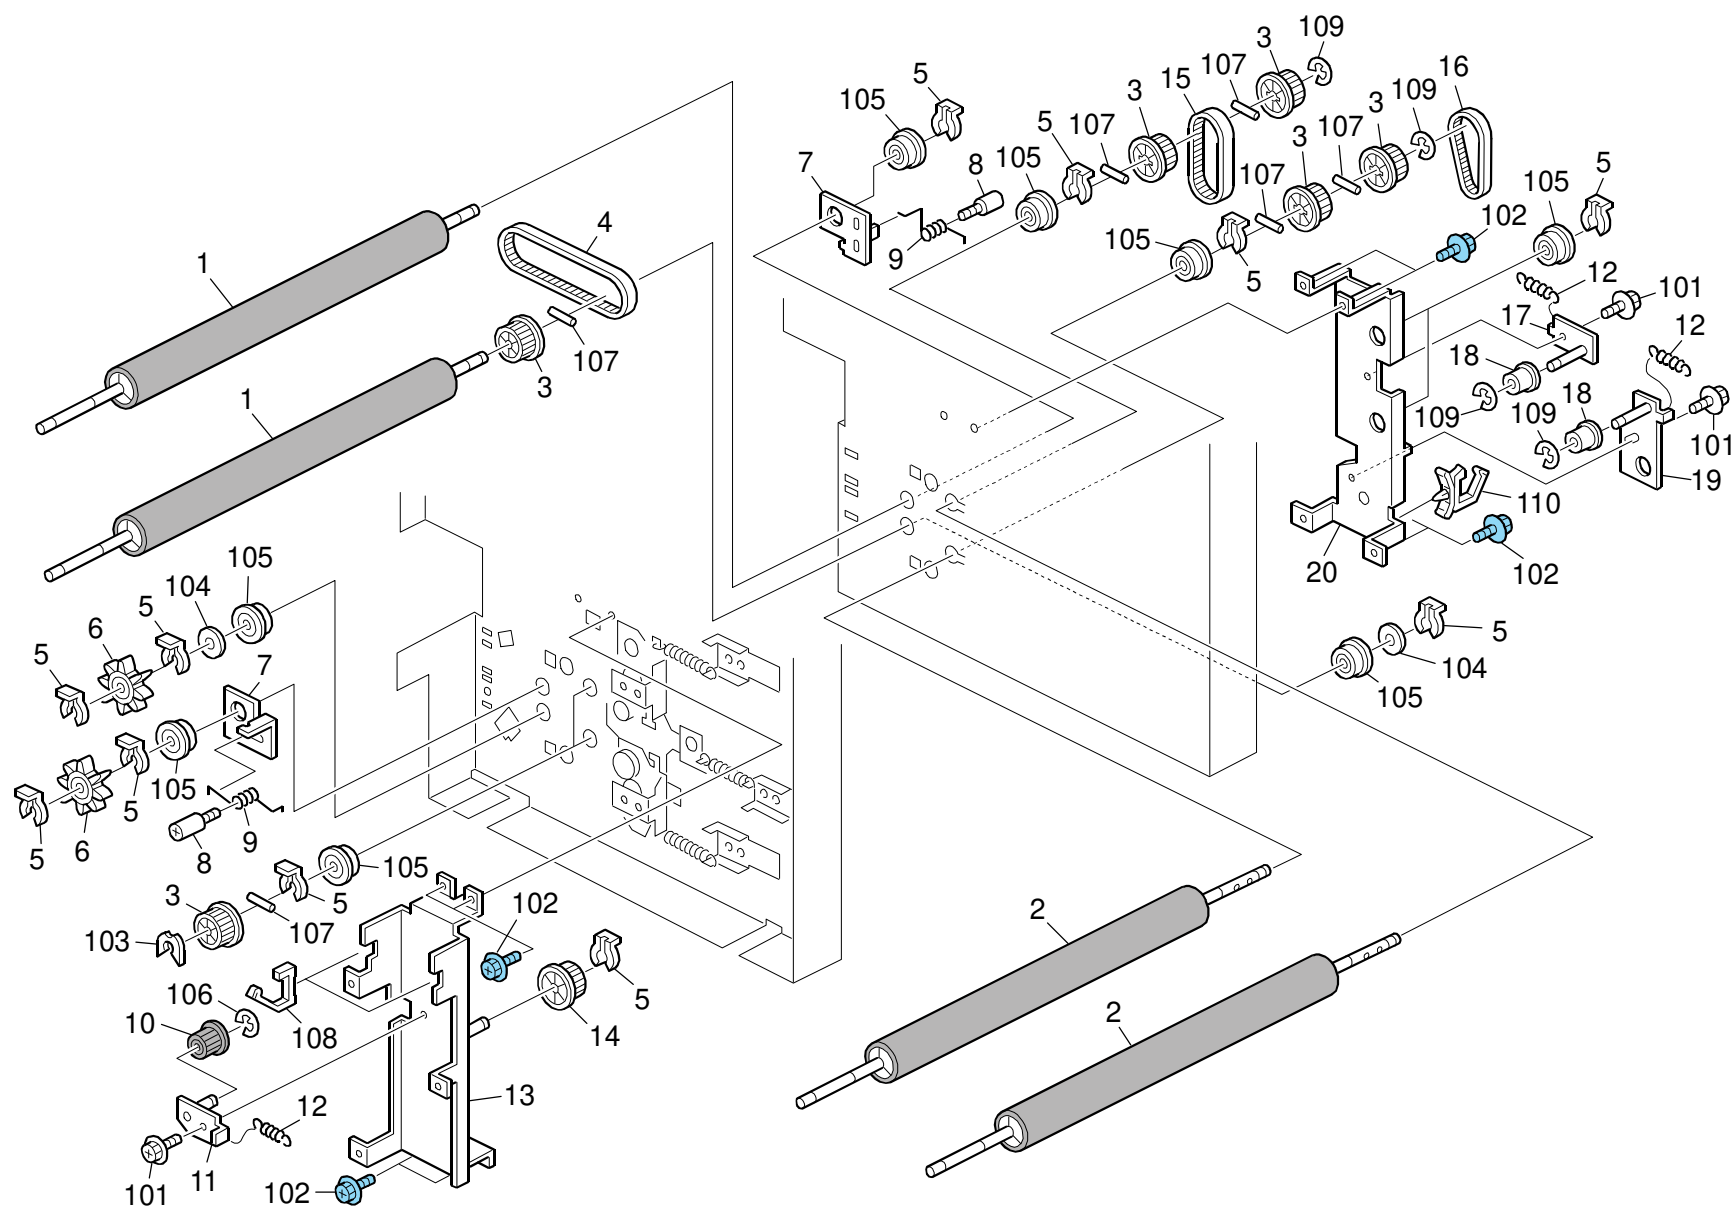


46.Cross Flap 4 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B890 2102	Transport Roller:Drive	2
2	B890 2100	Roller:Drive	2
3	B890 2160	Timing Pulley:Drive:Roller:S3M30T	5
4	B890 2128	Timing Belt:B60S3M444	1
5	5215 2621	Snap Ring - M6	13
6	B890 4703	Gear:Z8	2
7	B890 2127	Bracket:Belt Tension	2
8	A469 3350	Guide Stud	2
9	B890 2172	Spring:Transport Roller:28N	2
10	AB03 0806	Pulley - 19T	1
11	B890 2164	Bracket:Tightener:Roller:Drive:Ass'y	1
12	B890 2174	Coil Spring:Belt Tension:Cross	3
13	B890 2166	Bracket:Roller:Drive:Ass'y	1
14	AB03 0464	Timing Pulley - 30Z	1
15	B890 2112	Timing Belt:B100S3M231	1
16	B023 4609	Timing Belt - 237 S3M	1
17	B890 2116	Bracket:Tightener:Paper Crimp:Ass'y	1
18	G070 4717	Pulley:Tightener:Press Fit	2
19	B890 2114	Bracket:Tightener:Middle:Ass'y	1
20	B890 2113	Supporting Plate:Drive:Paper Crimp	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0805 0088	Retaining Ring - M6	
104	0708 0080N	Washer-DIA8	
105	0742 3808	Ball Bearing - 8x16x5	
106	0720 0040E	Retaining Ring - M4	
107	0632 0140G	Parallel Pin	
108	1105 0522	Edge Saddle - LES0510	
109	0720 0060E	Retaining Ring - M6	
110	1105 0516	Clamp	

 47.Paper Transfer 1 (B890)

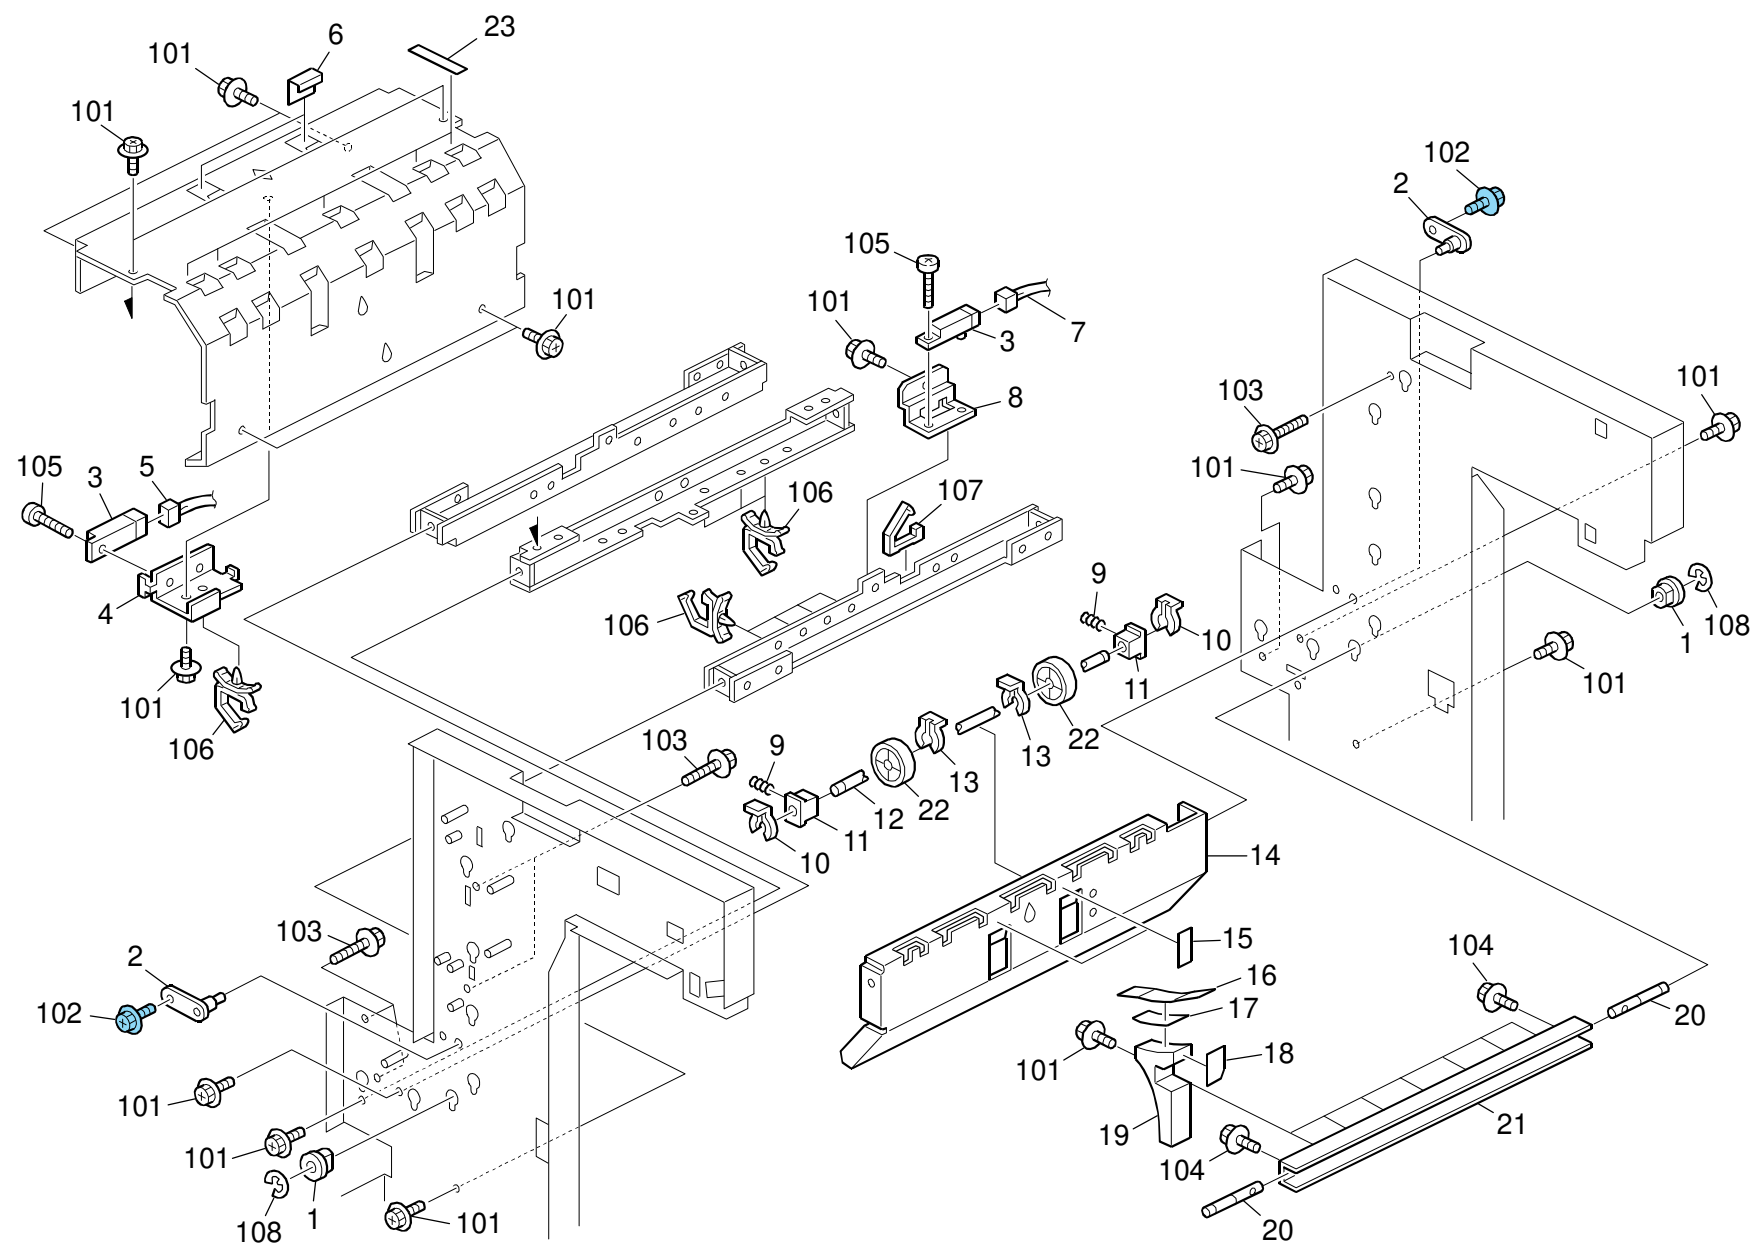


47.Paper Transfer 1 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA08 2101	Bushing - 6x10x6	2
2	B624 2053	Contact Point Bracket Ass'y	2
3	AW01 0127	Paper Feed Sensor	2
4	B890 6089	Bracket:Sensor	1
5	B890 5619	Harness:DC:Reverse:Sensor:Connecting	1
6	B890 6079	Sheet:Reverse:2	2
7	B890 5600	Harness:DC:Sensor:Connecting:1	1
8	B890 6053	Bracket:Sensor	1
9	B652 2404	Compression Spring:3.1N	2
10	5447 2681	Snap Ring	2
11	AA08 0203	Bushing - 6mm	2
12	B890 6175	Shaft:Driven:Long	1
13	5215 2621	Snap Ring - M6	2
14	B890 6111	Guide Plate:Reverse:Upper Right:Ass'y	1
15	B890 6669	Sheet:Exit:Guide Plate:Open and Close:1	2
16	B890 6118	Sheet:Exchange Powl	7
17	B890 6120	Sheet:Exchange Powl:Behind	7
18	B890 6119	Sheet:Exchange Powl:Auxiliary	7
19	B890 6117	Exchange Powl	7
20	A294 3336	Cam Shaft	2
21	B890 6121	Bracket:Exchange Powl	1
22	B700 2453	Guide:Turn	2
23	B890 6905	Sheet:Guide Plate:Reverse:Lower	5

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0451 3020N	Tapping Screw:3x20	
104	0360 3008N	Screw:M3x8	
105	0353 0120N	Screw M3x12	
106	1105 0511	Harness Clamp - LWS-0306ZC	
107	1105 0522	Edge Saddle - LES0510	
108	0720 0040E	Retaining Ring - M4	

 48.Paper Transfer 2 (B890)

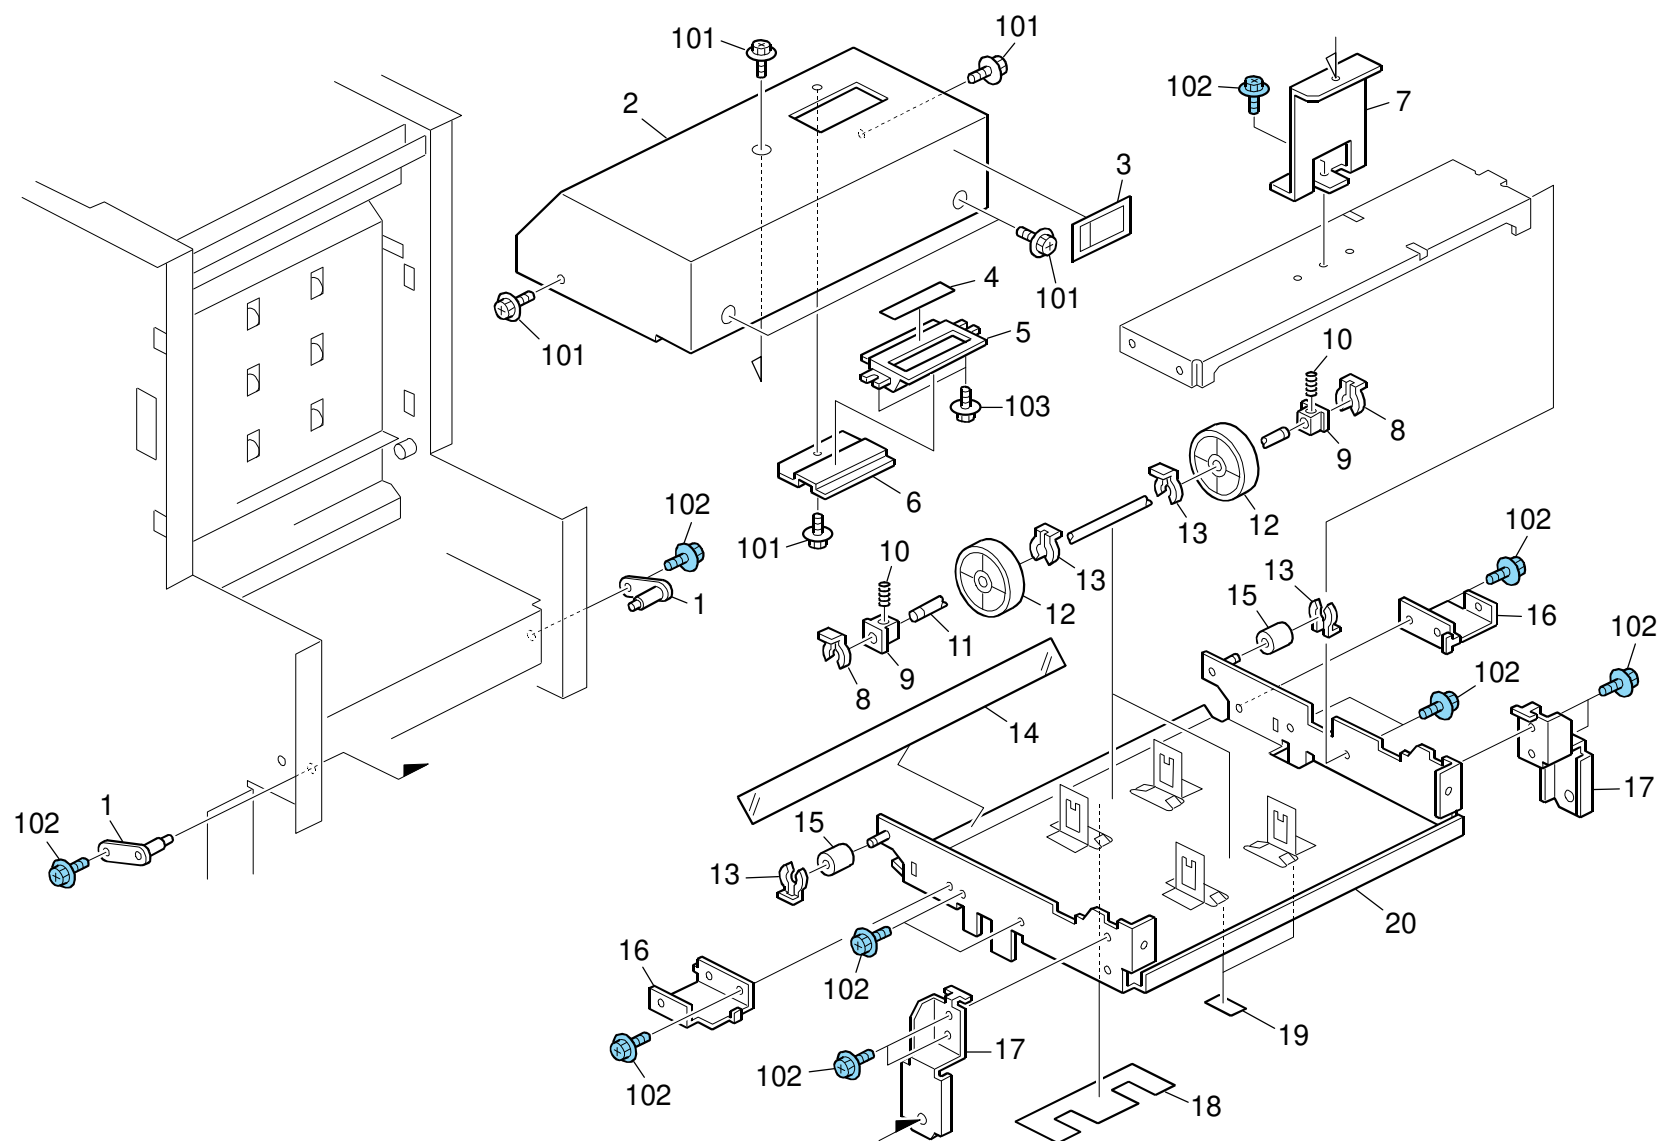


48.Paper Transfer 2 (B890)



Index No.	Part No.	Description	Q'ty Per Assembly
1	B104 4331	Arm Bracket Ass'y	2
2	B890 2911	Cover:Reverse:Open and Close:Ass'y	1
3	B890 6200	Decal:Caution:Exit Roller:Reverse	1
4	B890 2950	Decal:Multi-Language:Cross	1
5	AG05 1145	Grip:Open and Close:RIC	1
6	B890 2943	Cover:Grip:Middle	1
7	B890 6102	Bracket:Cover:Reverse	1
8	5447 2681	Snap Ring	4
9	AA08 0203	Bushing - 6mm	4
10	B890 6507	Compression Spring:Reverse Unit	4
11	B890 6175	Shaft:Driven:Long	2
12	B700 2453	Guide:Turn	4
13	5215 2621	Snap Ring - M6	6
14	B890 6098	Sheet:Reverse:Upper Left	1
15	5446 3163	Pressure Roller - Transport Unit	2
16	B890 6089	Bracket:Sensor	2
17	B890 6100	Hinge:Guide Plate:Reverse	2
18	B890 6093	Sheet:Reverse:Guide Plate:Entrance	1
19	B890 6669	Sheet:Exit:Guide Plate:Open and Close:1	2
20	B890 6096	Guide Plate:Reverse:Upper Left:Ass'y	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0451 4008N	Tapping Screw:4x8	

 49.Paper Transfer 3 (B890)

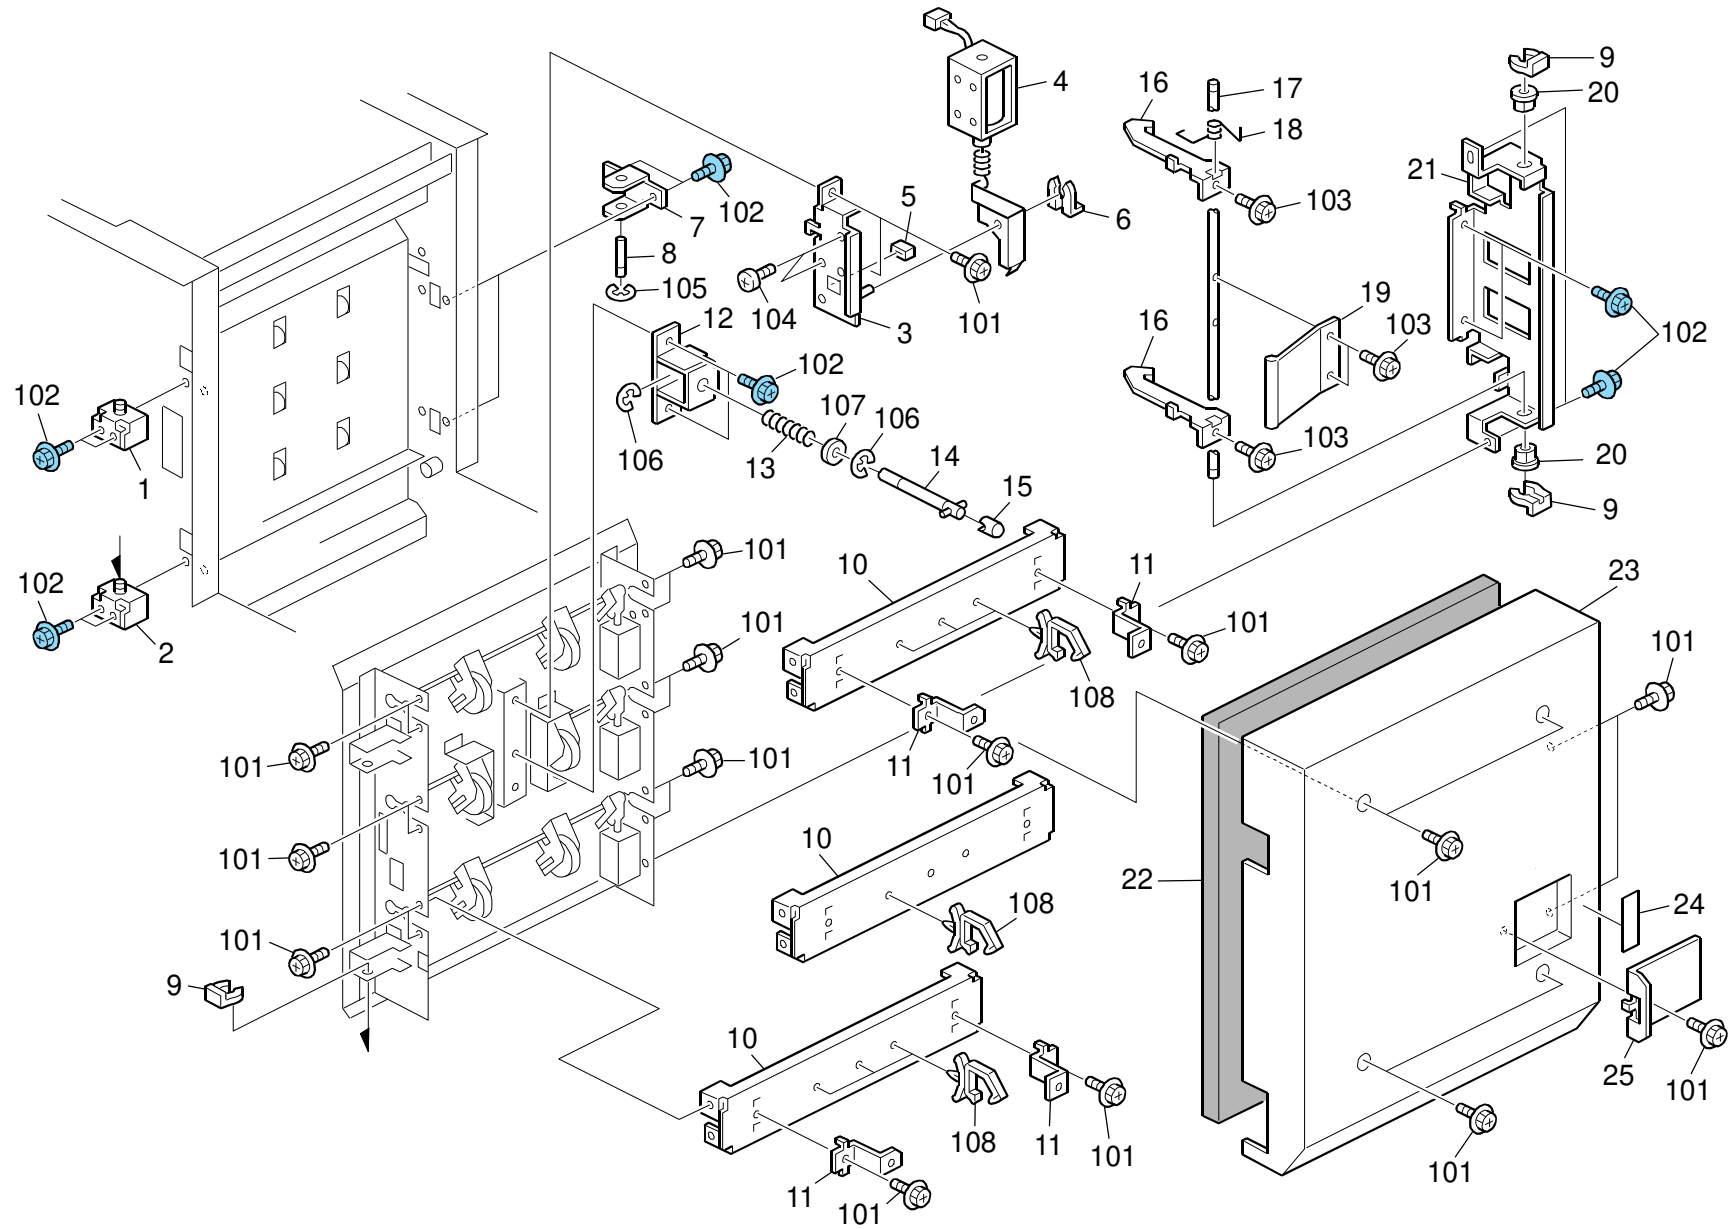


49.Paper Transfer 3 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B890 6163	Bracket:Contact Point: Open and Close:Upper:Ass'y	1
2	B890 6164	Bracket:Contact Point: Open and Close:Lower:Ass'y	1
3	B890 6134	Bracket:DC Solenoid:Peen	1
4	B890 6180	DC Solenoid:Plate:Sub-ass'y	1
5	A294 4669	Cushion	1
6	5206 2686	Snap Ring	1
7	B890 6161	Bracket:Shaft:Lock	2
8	AA14 8632	Lock Shaft	2
9	5447 2681	Snap Ring	1
10	B890 6181	Supporting Plate:Turn	3
11	B890 6153	Bracket:Cover:Turn	4
12	B890 6138	Guide Plate:Plate:Press Fit	1
13	B478 4134	Compression Spring:Plate:Moveable	1
14	B890 6273	Shaft:Plate:Press Fit	1
15	B890 6284	Cap:Shaft:Plate	1
16	B890 6157	Lever:Release	2
17	B890 6156	Shaft:Lever:Lock	1
18	AA06 6331	Duplex Entrance Spring	1
19	B629 4680	Release Lever	1
20	AA08 2101	Bushing - 6x10x6	2
21	B890 6158	Bracket:Shaft:Lever	1
22	B890 6187	Sound Proofing Material:Turn:19mm	1
23	B890 2916	Cover:Turn:Open and Close:Ass'y	1
24	B890 2950	Decal:Multi-Language:Cross	1
25	B890 2919	Cover:Lever:Release	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0360 3008N	Screw:M3x8	
104	0353 0040N	Screw - M3x4	
105	0720 0030E	Retaining Ring - M3	
106	0720 0040E	Retaining Ring - M4	
107	0701 0060N	Washer DIA6	
108	1105 0534	Clamp	

 50.Paper Transfer 4 (B890)

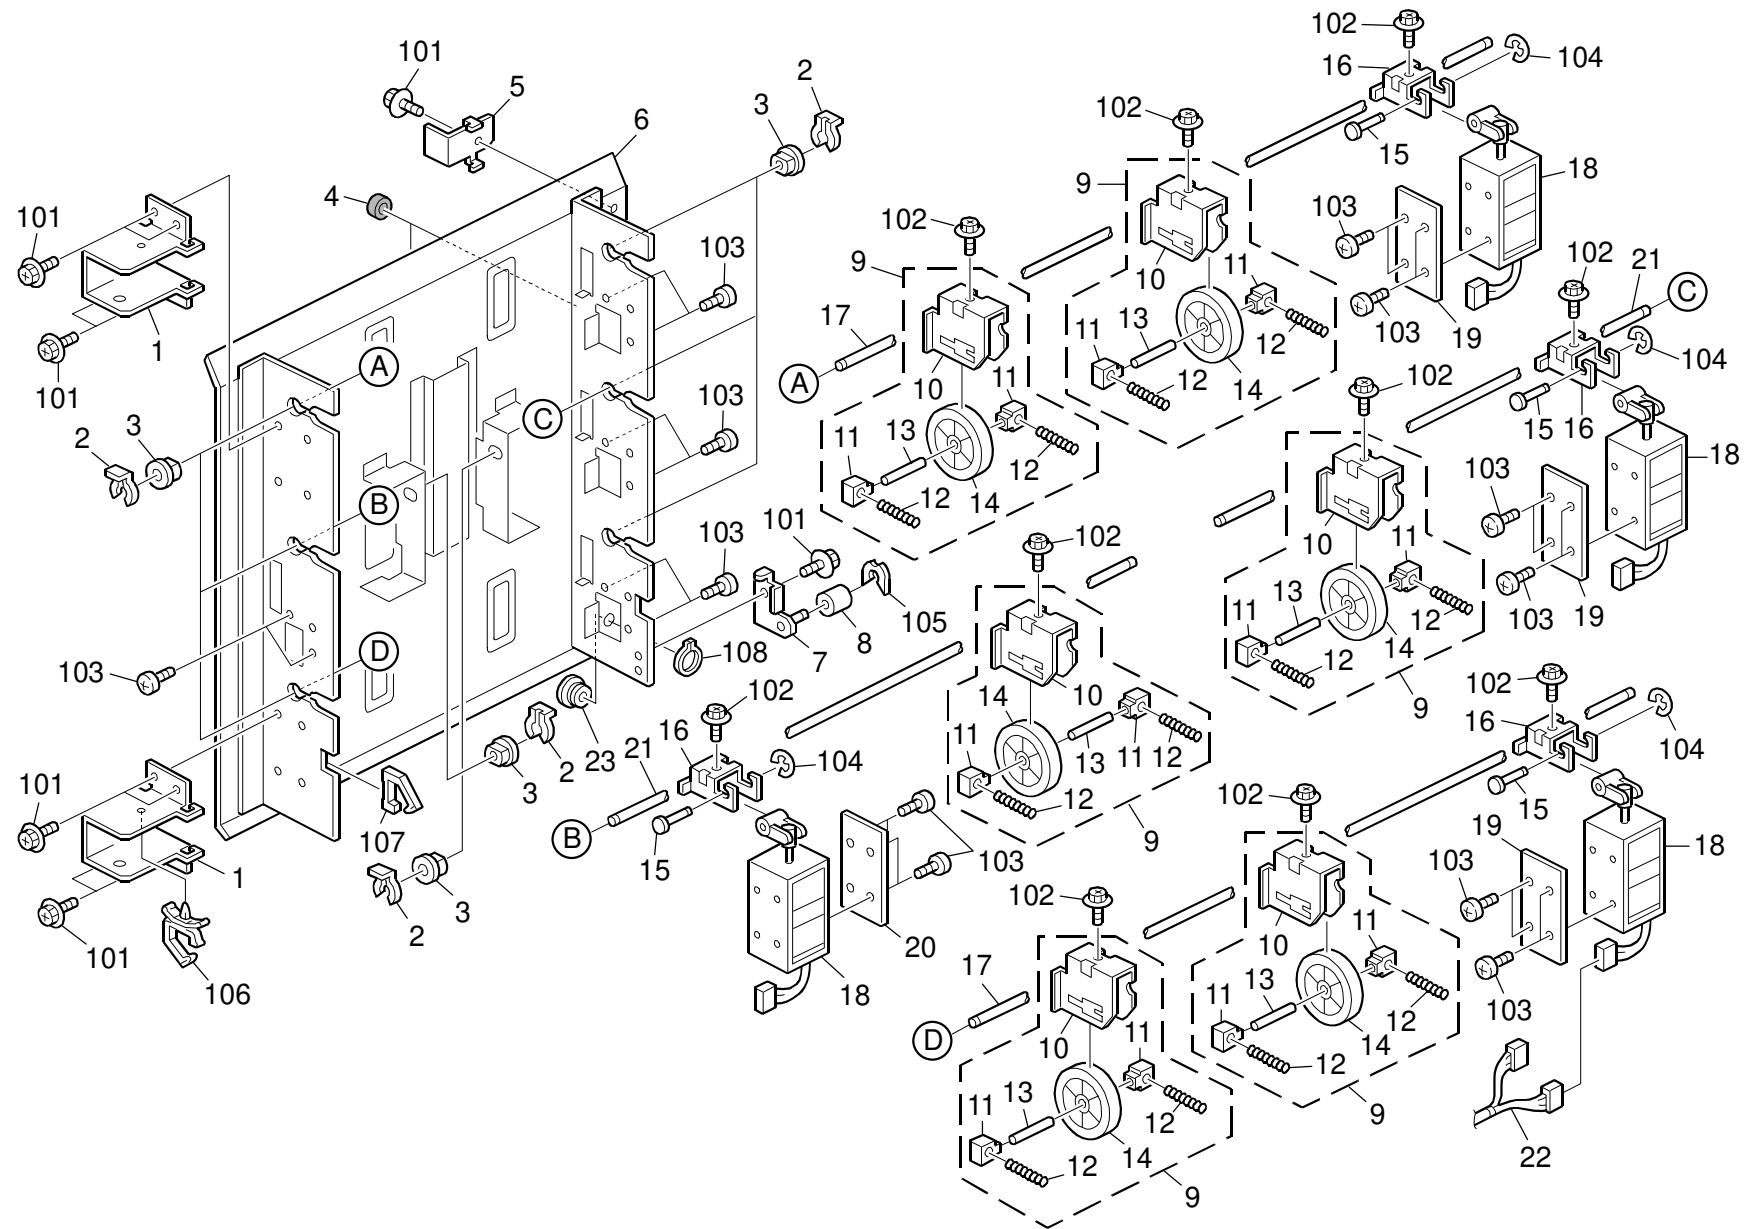


50.Paper Transfer 4 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B890 6151	Hinge:Guide Plate:Outer	2
2	5447 2681	Snap Ring	8
3	AA08 2101	Bushing - 6x10x6	8
4	H072 2207	Guard	2
5	B890 6154	Bracket:Cover:Turn:Front Rear	1
6	B890 6126	Guide Plate:Outer:Ass'y	1
7	B890 6207	Bracket:Guide:Ass'y	1
8	5446 3163	Pressure Roller - Transport Unit	1
9	B890 6143	Driven Roller:Upper Lower:Ass'y	6
10	B890 6144	Bracket:Driven:Front	6
11	AA08 2135	Bushing - DIA4	12
12	A806 4261	Spring Belt Guide Roller	12
13	B624 1632	Switchback Roller Shaft	6
14	B890 6145	Roller:Turn	6
15	A610 2220	Hinge Shaft	4
16	B890 6148	Bracket:Link	4
17	B890 6146	Shaft:Turn:Upper Lower	2
18	B890 6149	DC Solenoid:Pressure:Ass'y	4
19	B890 6188	Cushion:Solenoid:Rear:Ass'y	3
20	B890 6183	Cushion:Solenoid:Front:Ass'y	1
21	B890 6147	Shaft:Turn:Middle	2
22	B890 5605	Harness:DC:Turn:SOL:Connecting	1
23	AA08 0049	Bushing - 10x18	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0360 3008N	Screw:M3x8	
103	0353 0040N	Screw - M3x4	
104	0720 0030E	Retaining Ring - M3	
105	0805 0088	Retaining Ring - M6	
106	1105 0516	Clamp	
107	1105 0522	Edge Saddle - LES0510	
108	0725 0140E	Retaining Ring (C Type) - M14	

 51.Paper Transfer 5 (B890)

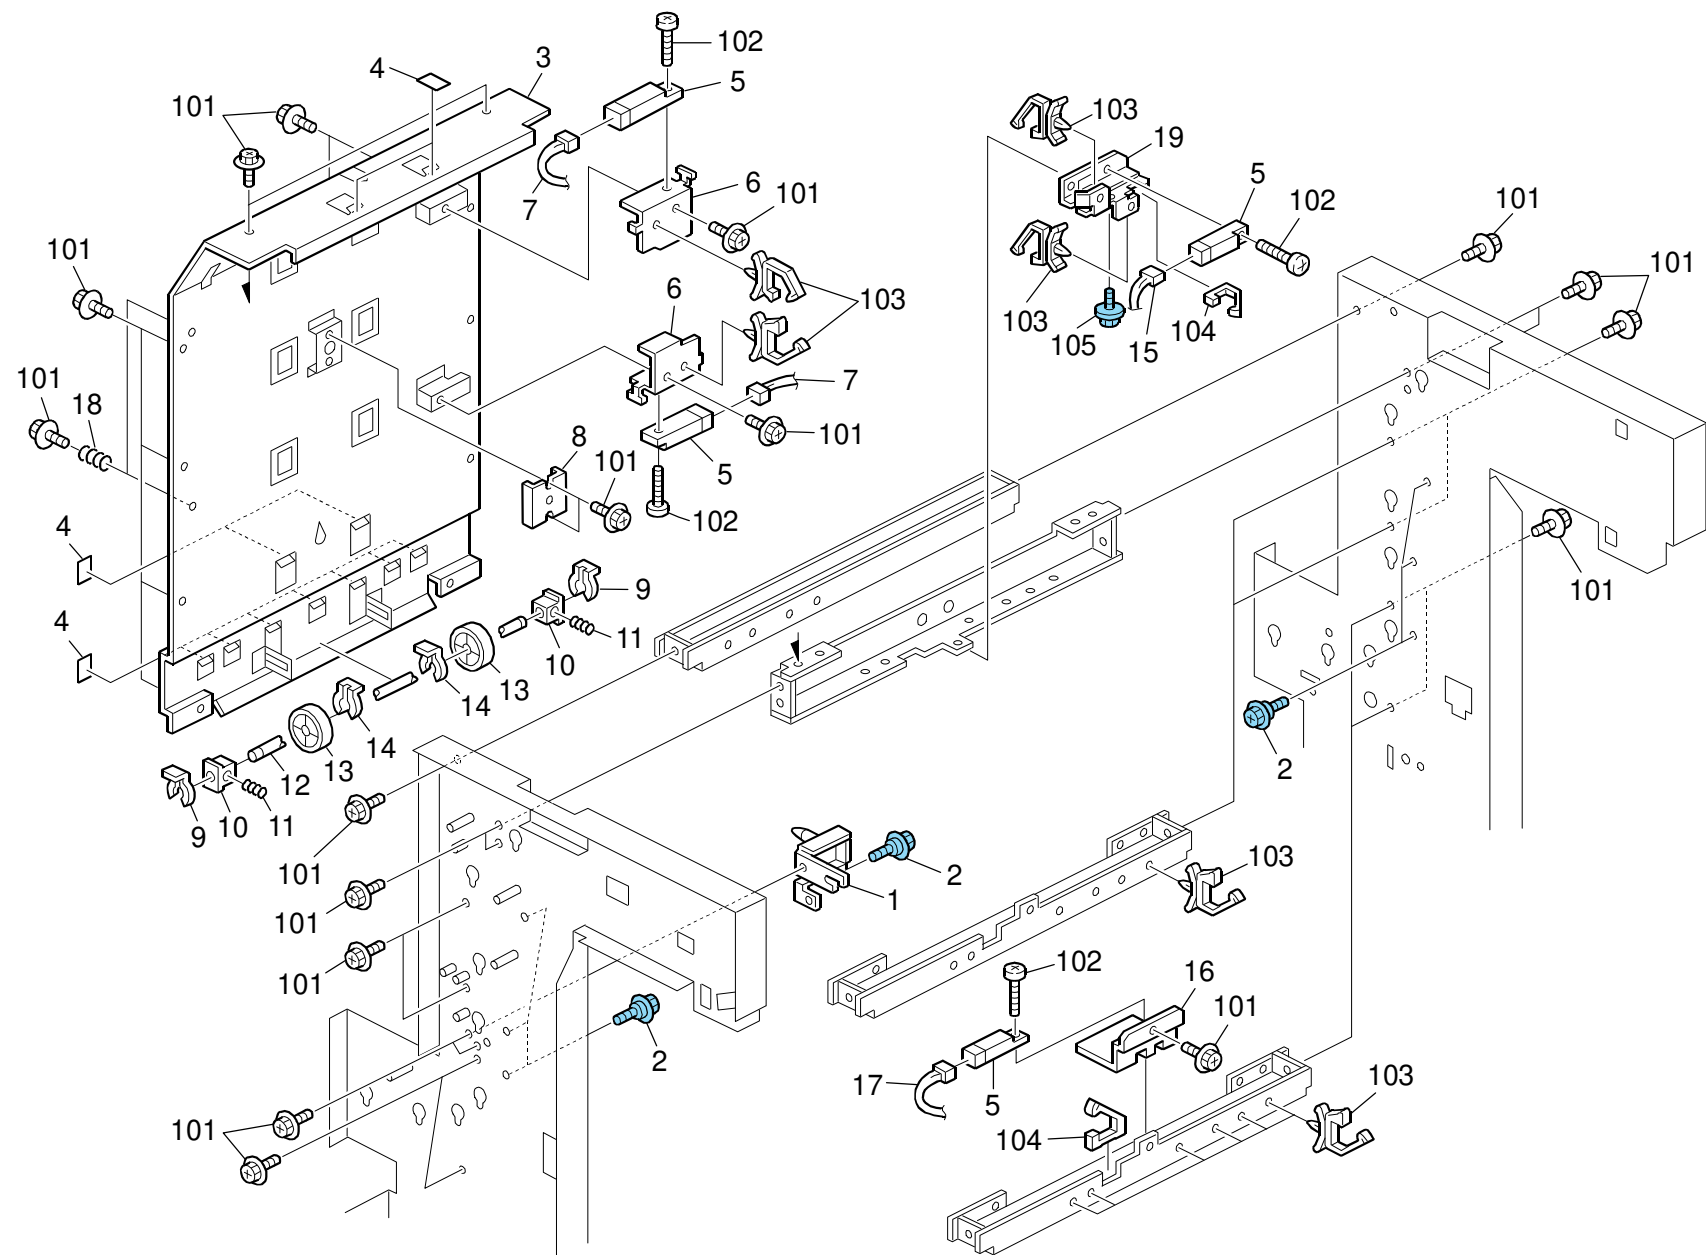


51.Paper Transfer 5 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B890 6220	Bracket:Positioning:Peen	1
2	B830 1135	Screw	7
3	B890 6080	Guide Plate:Inner:Ass'y	1
4	B890 6079	Sheet:Reverse:2	11
5	AW01 0127	Paper Feed Sensor	4
6	B890 6089	Bracket:Sensor	2
7	B890 5602	Harness:DC:Sensor:Connecting:2	2
8	B890 6085	Bracket:Plate:Peen	1
9	5447 2681	Snap Ring	2
10	AA08 0203	Bushing - 6mm	2
11	B890 6507	Compression Spring:Reverse Unit	2
12	B890 6175	Shaft:Driven:Long	1
13	B700 2453	Guide:Turn	2
14	5215 2621	Snap Ring - M6	2
15	B890 5646	Harness:DC:Turn:Paper Feed Sensor:Connecting	1
16	B890 6053	Bracket:Sensor	1
17	B890 5600	Harness:DC:Sensor:Connecting:1	1
18	B890 6168	Spring:Positioning	2
19	B890 6059	Bracket:Paper Feed Sensor:Turn	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0353 0120N	Screw M3x12	
103	1105 0511	Harness Clamp - LWS-0306ZC	
104	1105 0522	Edge Saddle - LES0510	
105	0454 3006Q	Tapping Screw - M3x6	

 52.Paper Transfer 6 (B890)

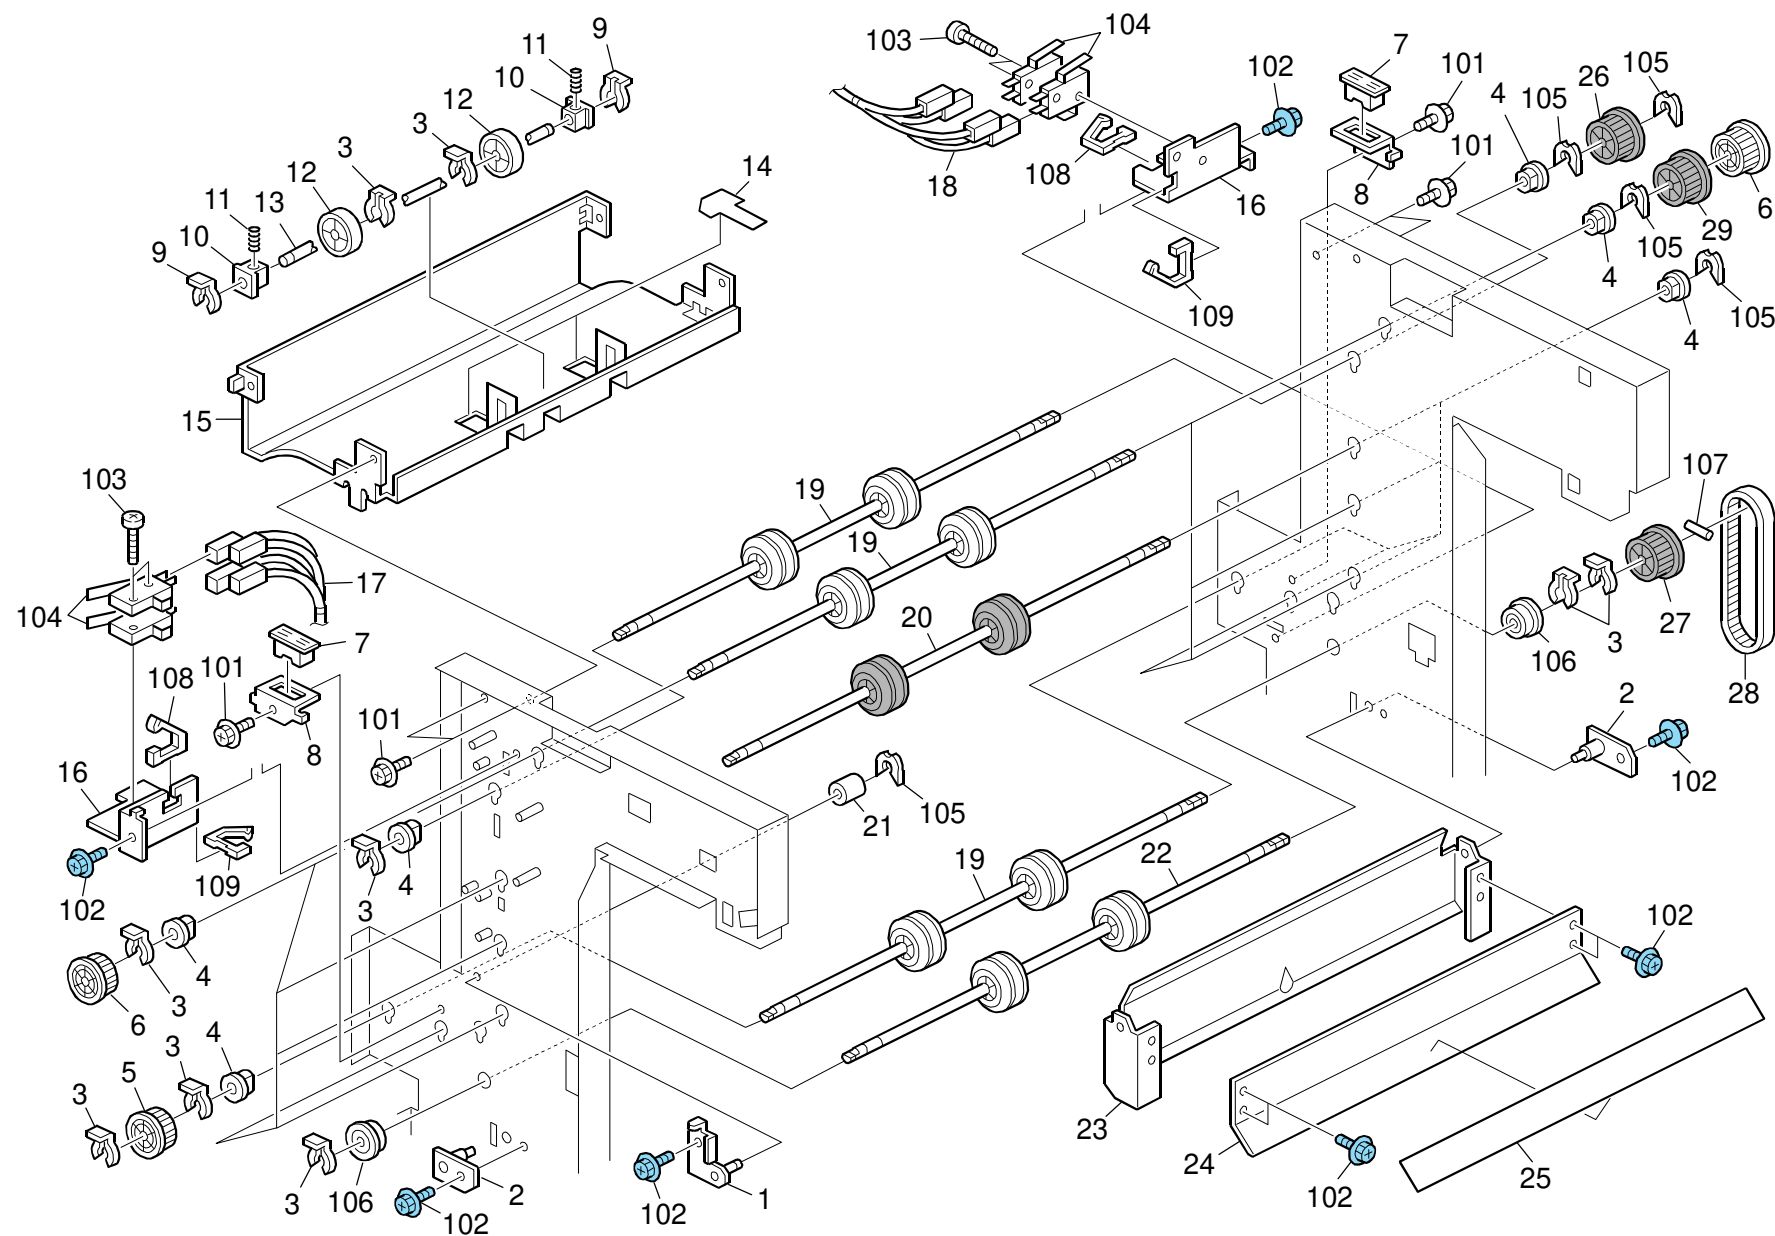


52.Paper Transfer 6 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B890 6207	Bracket:Guide:Ass'y	1
2	B890 2151	Guide Plate:Guide Plate:Ass'y	2
3	5215 2621	Snap Ring - M6	13
4	AA08 2104	Bushing - 8x12x7	14
5	B889 1276	Timing Pulley:33T	1
6	B079 1144	Timing Pulley:Paddle	6
7	AG07 0513	Magnet Catch	2
8	B889 1170	Bracket:Magnet Catch	2
9	5447 2681	Snap Ring	2
10	AA08 0203	Bushing - 6mm	2
11	B890 6507	Compression Spring:Reverse Unit	2
12	B700 2453	Guide:Turn	2
13	B890 6175	Shaft:Driven:Long	1
14	B890 6176	Sheet:Exit	1
15	B890 6171	Guide Plate:Exit:Ass'y	1
16	B890 6056	Bracket:Safety Switch:Reverse	2
17	B890 5618	Harness:DC:Turn:Sensor:Connecting	1
18	B890 5620	Harness:DC:Reverse:Safety Switch:Connecting	1
19	B890 6071	Transport Roller:Ass'y	7
20	B890 2105	Transport Roller:Ass'y	1
21	5446 3163	Pressure Roller - Transport Unit	1
22	B890 2103	Exit Roller:Ass'y	1
23	B890 2131	Guide Plate:Upper:Outer	1
24	B890 2153	Lever:Guide Plate:Upper	1
25	B890 2950	Decal:Multi-Language:Cross	1
26	AB03 0805	Pulley:Coupling:30T	1
27	AB03 0352	Pulley - 36T	1
28	AA04 3600	Timing Belt - 60S3M378	1
29	AB03 0804	Pulley - 30T	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0353 0250N	Screw:M3x25	
104	1204 2529	Switch - V-5F912DN	
105	0805 0088	Retaining Ring - M6	
106	0742 3808	Ball Bearing - 8x16x5	
107	0632 0120G	Parallel Pin - 2x12	
108	1105 0518	Edge Saddle - LES-1010	
109	1105 0522	Edge Saddle - LES0510	

 53.Paper Transfer 7 (B890)

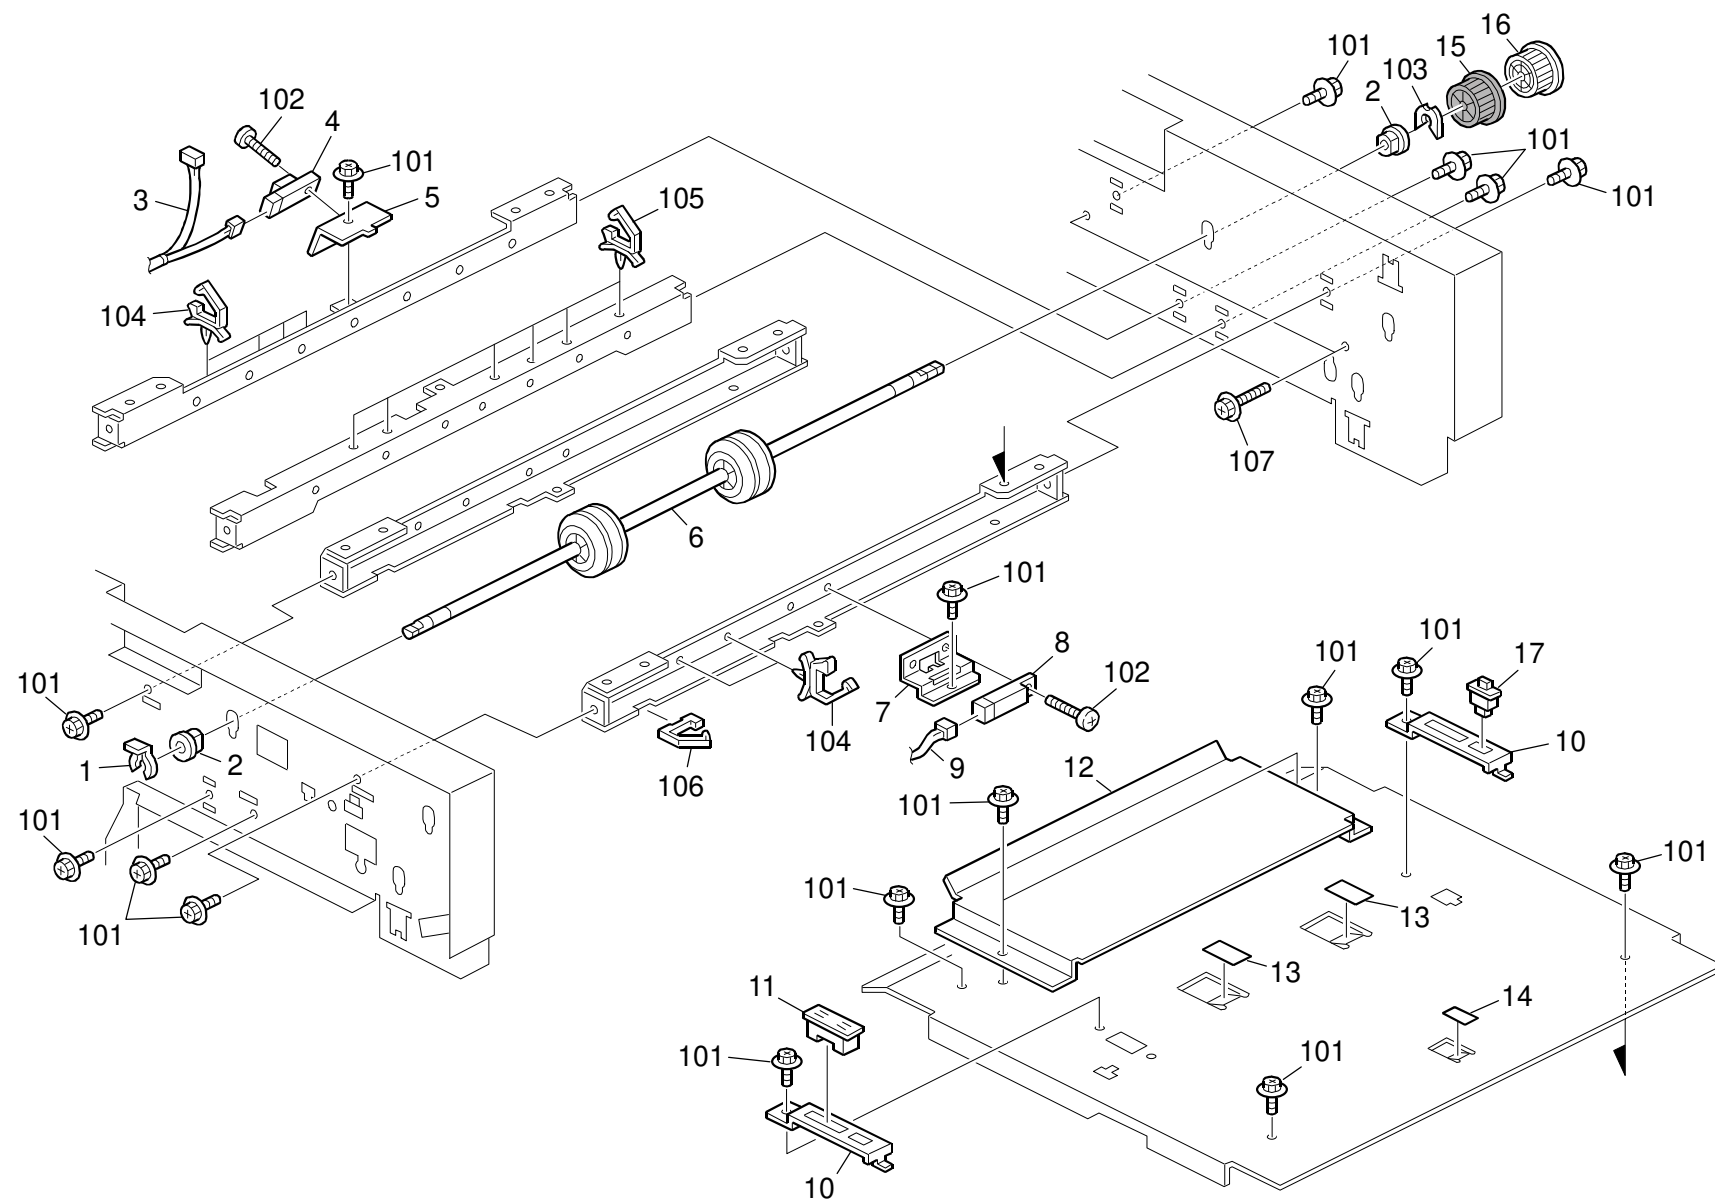


53.Paper Transfer 7 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	5215 2621	Snap Ring - M6	1
2	AA08 2104	Bushing - 8x12x7	2
3	B890 5639	Harness:DC:Shift Tray:Sensor:Connecting	1
4	AW01 0091	Photo Reflection Sensor	1
5	B890 6641	Bracket:Paper Volume:Leading Edge	1
6	B890 6071	Transport Roller:Ass'y	1
7	B890 6053	Bracket:Sensor	1
8	AW01 0127	Paper Feed Sensor	1
9	B890 5638	Harness:DC:Shift Tray: Paper Feed Sensor:Connecting	1
10	B890 6644	Bracket:Magnet Catch	2
11	AG07 0513	Magnet Catch	1
12	B890 6646	Guide Plate:Transport:Horizontal:Upper	1
13	B890 6678	Sheet:Exit:Guide Plate:Horizontal:1	2
14	B890 6679	Sheet:Exit:Guide Plate:Horizontal:2	1
15	AB03 0805	Pulley:Coupling:30T	1
16	B079 1144	Timing Pulley:Paddle	1
17	G020 5626	Push Switch	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0353 0120N	Screw M3x12	
103	0805 0088	Retaining Ring - M6	
104	1105 0511	Harness Clamp - LWS-0306ZC	
105	1105 0516	Clamp	
106	1105 0522	Edge Saddle - LES0510	
107	0451 3020N	Tapping Screw:3x20	

 54.Paper Transfer 8 (B890)

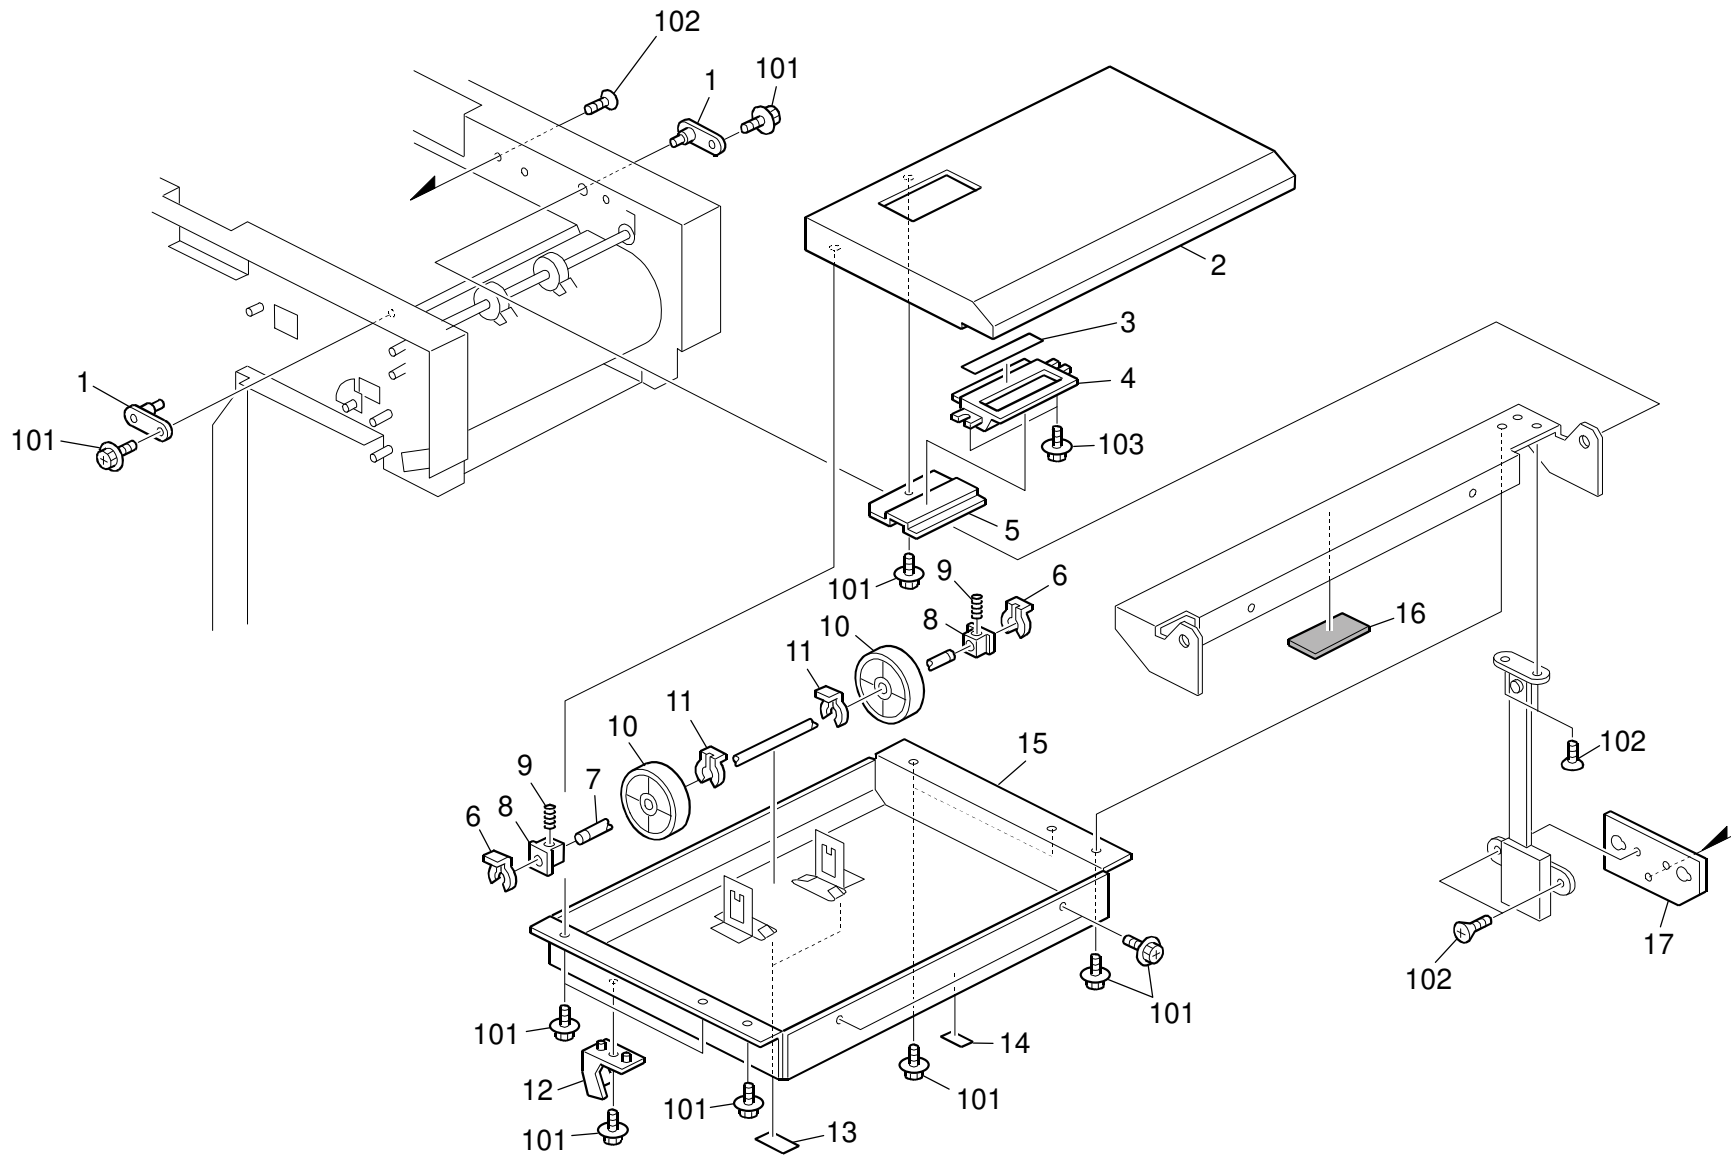


54.Paper Transfer 8 (B890)



Index No.	Part No.	Description	Q'ty Per Assembly
1	B104 4331	Arm Bracket Ass'y	2
2	B890 6655	Cover:Open and Close:Welding	1
3	B890 2950	Decal:Multi-Language:Cross	1
4	AG05 1145	Grip:Open and Close:RIC	1
5	B890 2943	Cover:Grip:Middle	1
6	5447 2681	Snap Ring	2
7	B890 6175	Shaft:Driven:Long	1
8	AA08 0203	Bushing - 6mm	2
9	B890 6507	Compression Spring:Reverse Unit	2
10	B700 2453	Guide:Turn	2
11	5215 2621	Snap Ring - M6	2
12	B104 2641	Safety Switch Pawl	1
13	B890 6669	Sheet:Exit:Guide Plate:Open and Close:1	2
14	B890 6677	Sheet:Exit:Guide Plate:Open and Close:2	1
15	B890 6648	Guide Plate:Open and Close:Peen	1
16	B125 4829	Sheet:Block Light:5	1
17	B890 6656	Bracket:Latch:Auxiliary	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0323 0060N	Screw M3x6	
103	0451 4008N	Tapping Screw:4x8	

 55.Paper Transfer 9 (B890)

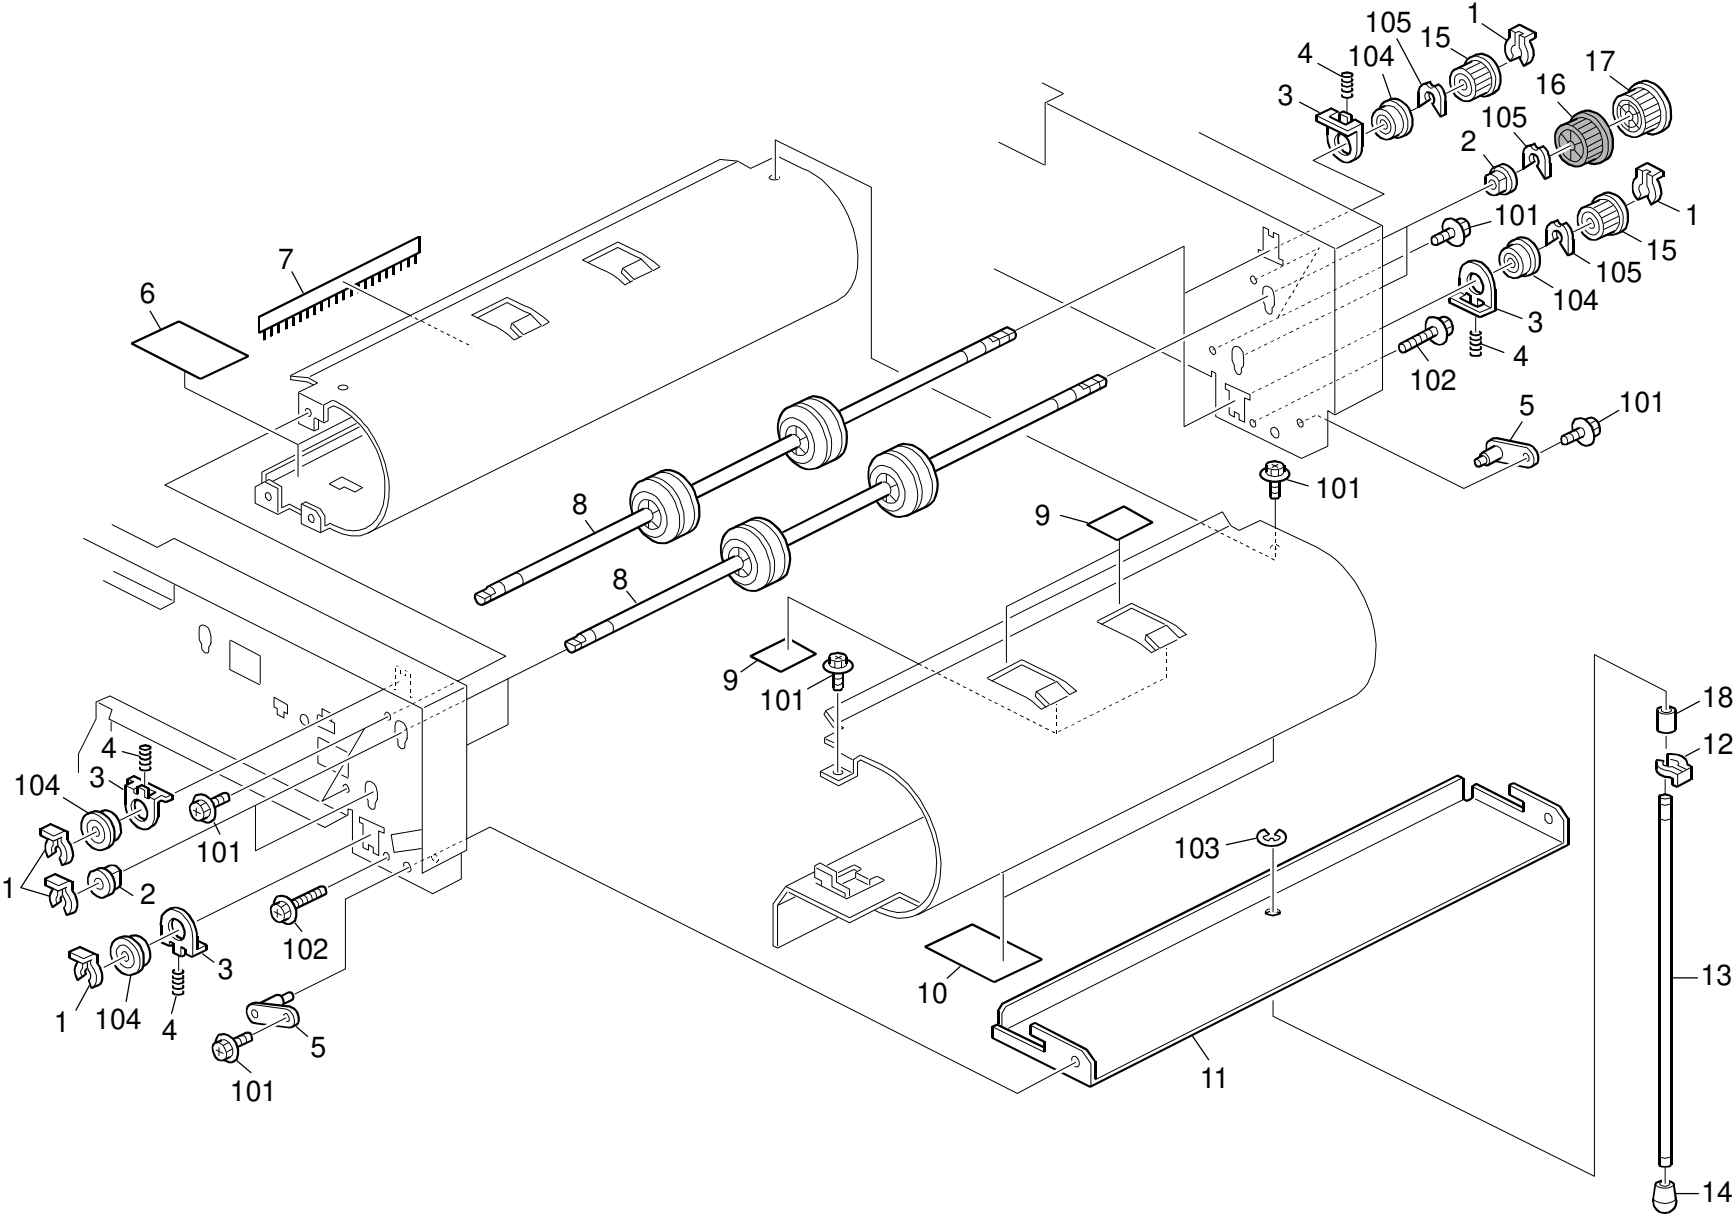


55.Paper Transfer 9 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	5215 2621	Snap Ring - M6	6
2	AA08 2104	Bushing - 8x12x7	4
3	B890 6653	Receive Plate:Bearing	4
4	B890 6507	Compression Spring:Reverse Unit	4
5	B624 2053	Contact Point Bracket Ass'y	2
6	B890 6639	Sheet:Exit:Auxiliary:Inner	2
7	AA12 0122	Rear Exit Discharge Brush	1
8	B890 6071	Transport Roller:Ass'y	4
9	B890 6672	Sheet:Exit:Turn	4
10	B890 6673	Sheet:Exit:Auxiliary	2
11	B890 6686	Cover:Exit:Lower	1
12	5447 2681	Snap Ring	1
13	B890 6676	End Fence	1
14	B890 6683	Cap:Side Fence	1
15	B890 4708	Timing Pulley:T20:S3M	2
16	AB03 0805	Pulley:Coupling:30T	2
17	B079 1144	Timing Pulley:Paddle	2
18	A259 3163	Spacer - 4.5x6mm	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0451 3020N	Tapping Screw:3x20	
103	0720 0060E	Retaining Ring - M6	
104	0742 3808	Ball Bearing - 8x16x5	
105	0805 0088	Retaining Ring - M6	

 56.Paper Transfer 10 (B890)

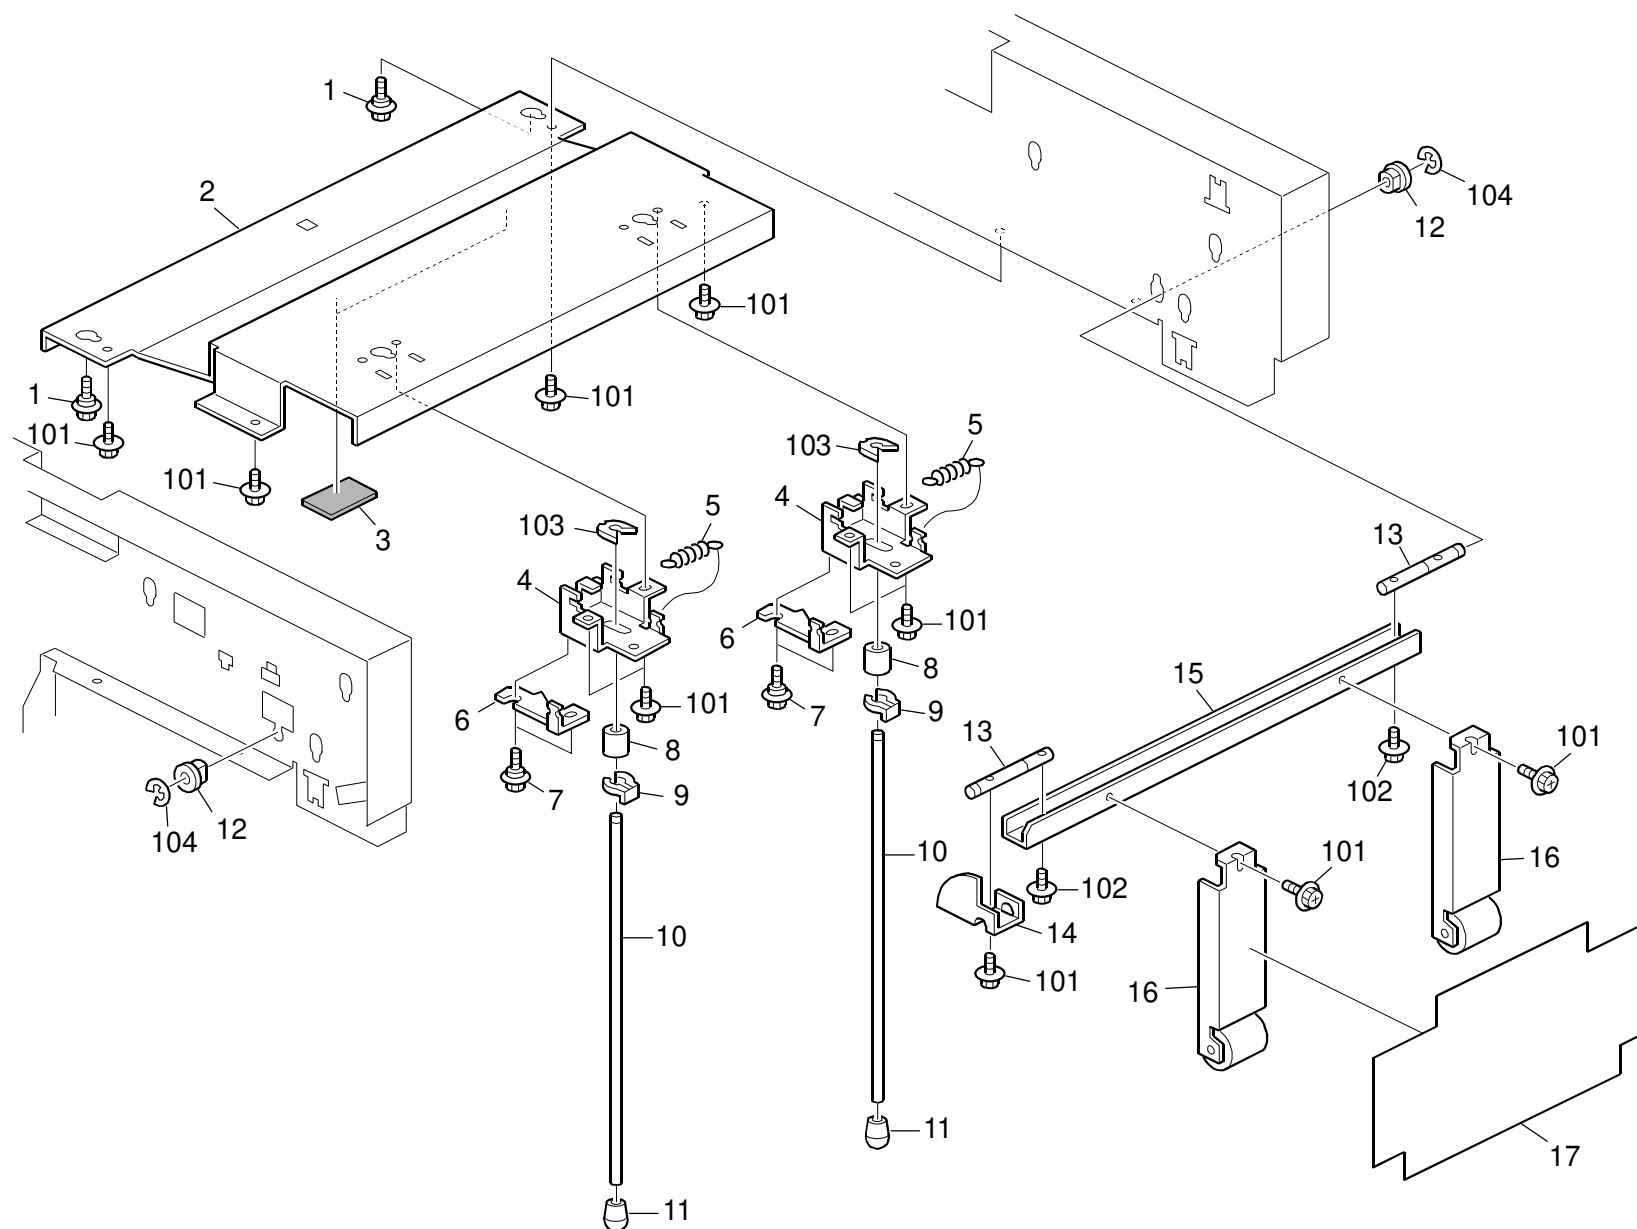


56.Paper Transfer 10 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA14 3790	Screw:Contact Point	2
2	B890 6666	Cover:Copy Tray:Upper	1
3	B890 6668	Cushion:Paper Sensor Board	2
4	B890 6667	Bracket:Contact Point:Side Fence	2
5	A257 6429	Pressure Spring	2
6	B890 6684	Stopper:Side Fence	2
7	B700 4867	Screw:Contact Point:M3	4
8	B890 6685	Bushing:Side Fence	2
9	5447 2681	Snap Ring	2
10	B890 6654	Side Fence	2
11	B890 6683	Cap:Side Fence	2
12	AA08 2101	Bushing - 6x10x6	2
13	B890 6631	Shaft:Bracket:Feeler	2
14	B890 6632	Lever:Small	1
15	B890 6121	Bracket:Exchange Powl	1
16	B890 6628	Feeler:Paper Volume:Peen	2
17	B890 6625	Sheet:Paper Volume:Auxiliary	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0360 3008N	Screw:M3x8	
103	0805 0088	Retaining Ring - M6	
104	0720 0060E	Retaining Ring - M6	

 57.Paper Exit 1 (B890)

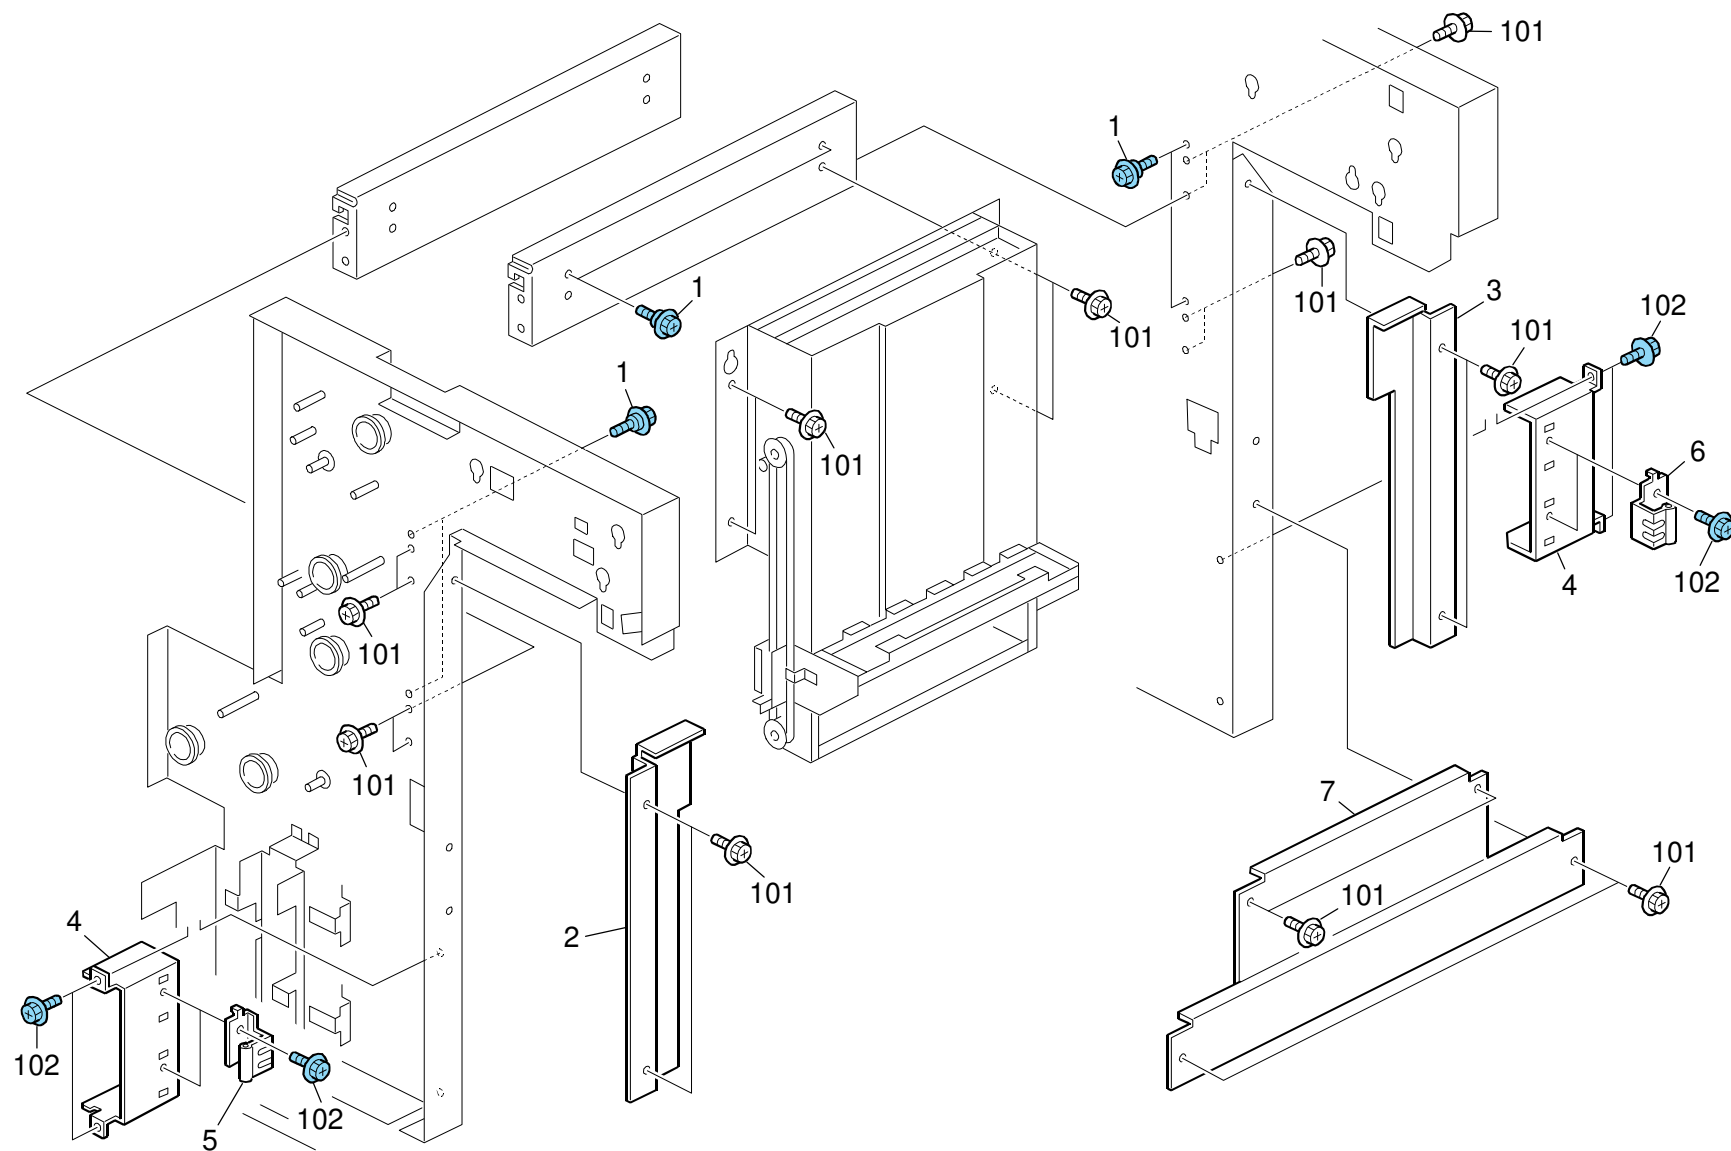


57.Paper Exit 1 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B830 1135	Screw	6
2	B890 6680	Cover:Bin Unit:Rear	1
3	B890 6681	Cover:Bin Unit:Front	1
4	B890 2975	Bracket:Hinge	2
5	B104 1302	Left Hinge	2
6	B104 1299	Right Hinge Ass'y	2
7	B890 6682	Cover:Bin Unit:Lower	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	

 58.Paper Exit 2 (B890)

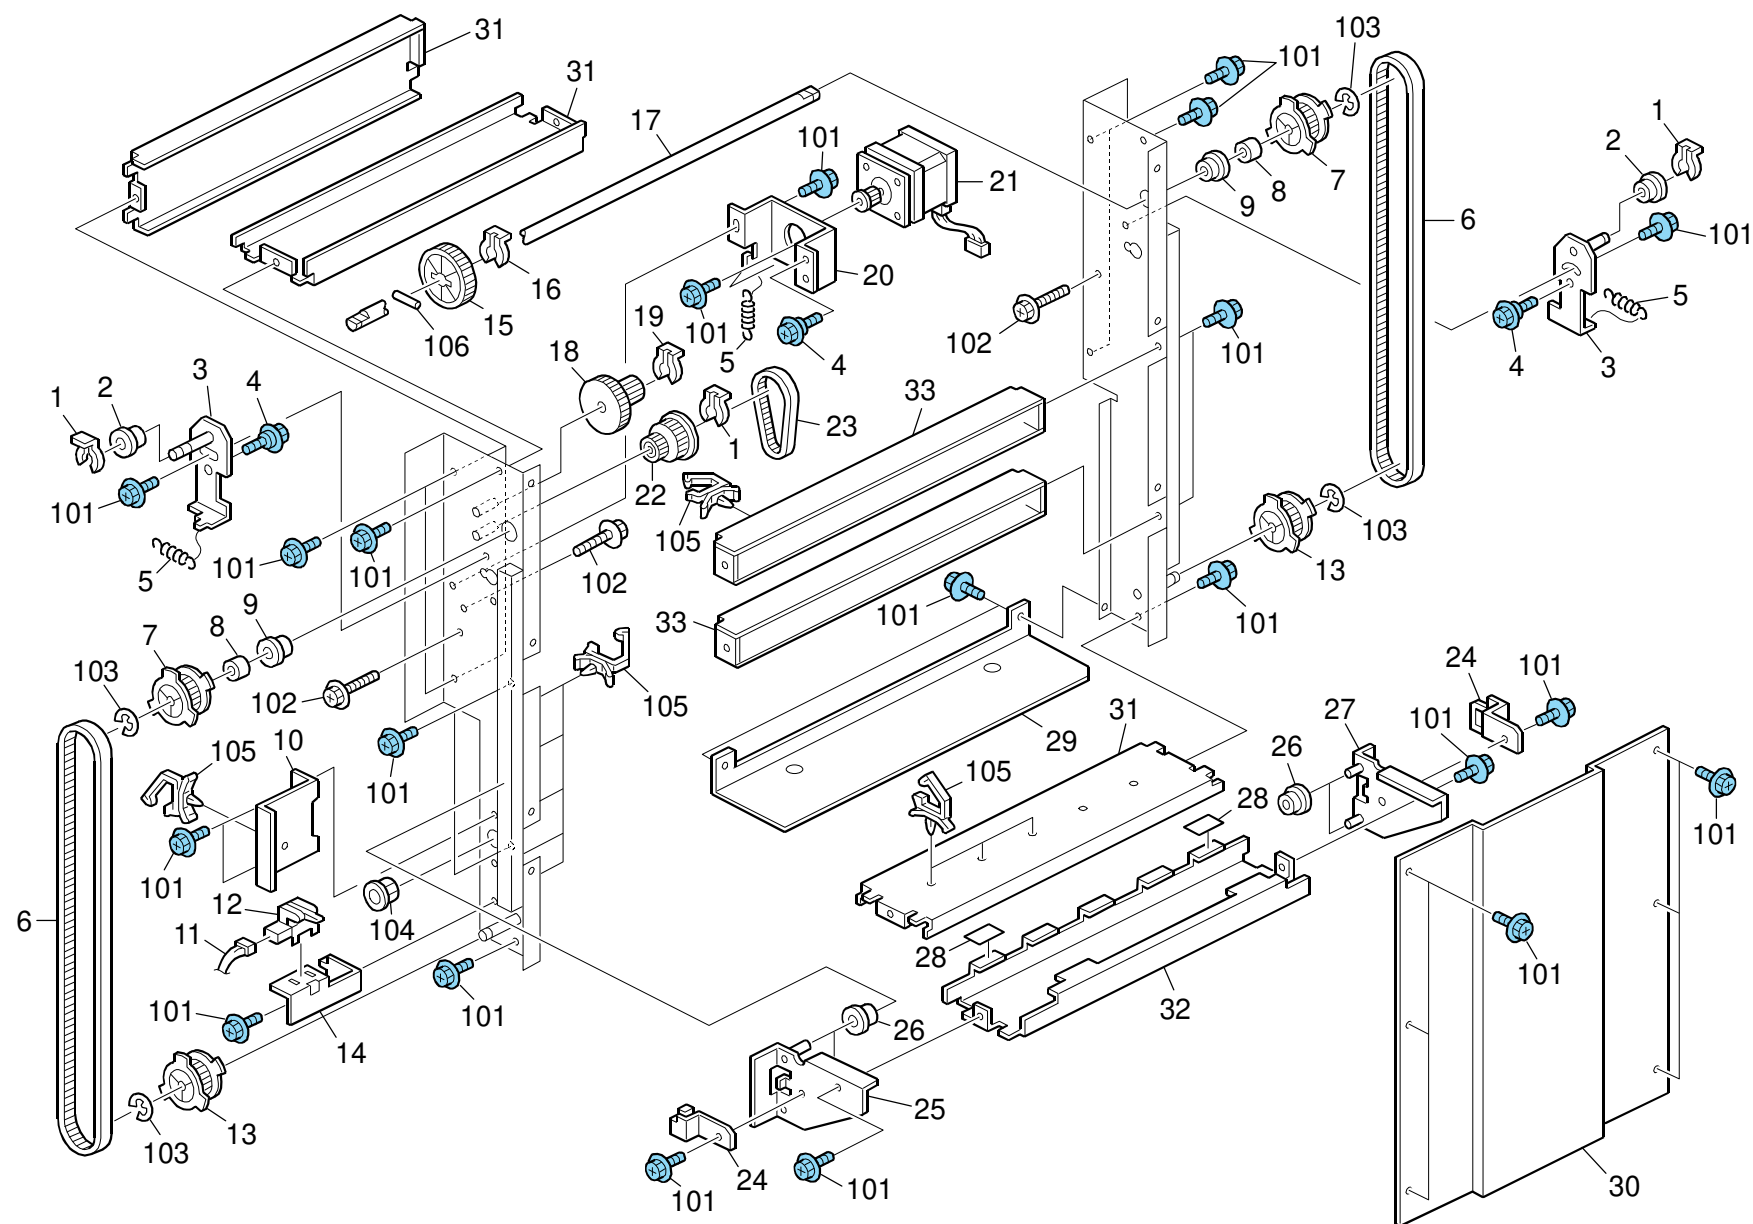


58.Paper Exit 2 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	5447 2681	Snap Ring	3
2	A079 4914	Idle Roller - Gate Belt	2
3	B890 6938	Bracket:Tightener:Rising Tray:Ass'y	2
4	B830 1135	Screw	3
5	B890 2174	Coil Spring:Belt Tension:Cross	3
6	B890 6937	Synchronous Belt:60S5M1000	2
7	A697 3180	Pulley - 18T	2
8	B472 3536	Spacer:Shaft:Shift Tray	2
9	C203 5135	Bushing - 10x14x5.9	2
10	B890 6951	Guard:Harness:Photointerruptor	1
11	B890 5636	Harness:DC:Tray Unit:Connecting	1
12	AW02 0166	Photointerruptor:Paper Feed Sensor	1
13	A697 3185	Pulley - 18T	2
14	B472 3711	Bracket:Positioning Sensor:Shift Tray:Lower	1
15	B472 3535	Gear:Z45	1
16	J001 2818	Ring:DIA7	1
17	B890 6952	Shaft:Drive:Rising Tray	1
18	A228 1113	Gear Z46/17	1
19	5215 2621	Snap Ring - M6	1
20	B890 6936	Bracket:DC Stepper Motor	1
21	B132 6655	Stepper Motor:Paper Feed Unit:Ass'y	1
22	B700 4429	Gear:Pulley:17Z/48T	1
23	AA04 3333	Timing Belt:60S2M168	1
24	A697 3150	Fixing Plate - Timing Belt	2
25	A697 3115	Rear Side Plate - Shift Tray	1
26	A379 3316	Shift Guide Roller	4
27	B312 3100	Shift Tray Base	1
28	B890 6672	Sheet:Exit:Turn	2
29	B890 6953	Guard:Harness	1
30	B890 6932	End Fence	1
31	B890 6949	Stay:Rising Tray:Large	4
32	B890 6933	Base:Tray	1
33	B890 6950	Stay:Rising Tray:Small	2

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0451 3014N	Tapping Screw:3x14	
103	0720 0060E	Retaining Ring - M6	
104	1106 0458	Bushing - 9.9mm	
105	1105 0511	Harness Clamp - LWS-0306ZC	
106	0634 0200G	Parallel Pin - 4x20	

 59. Drive Section 1 (B890)

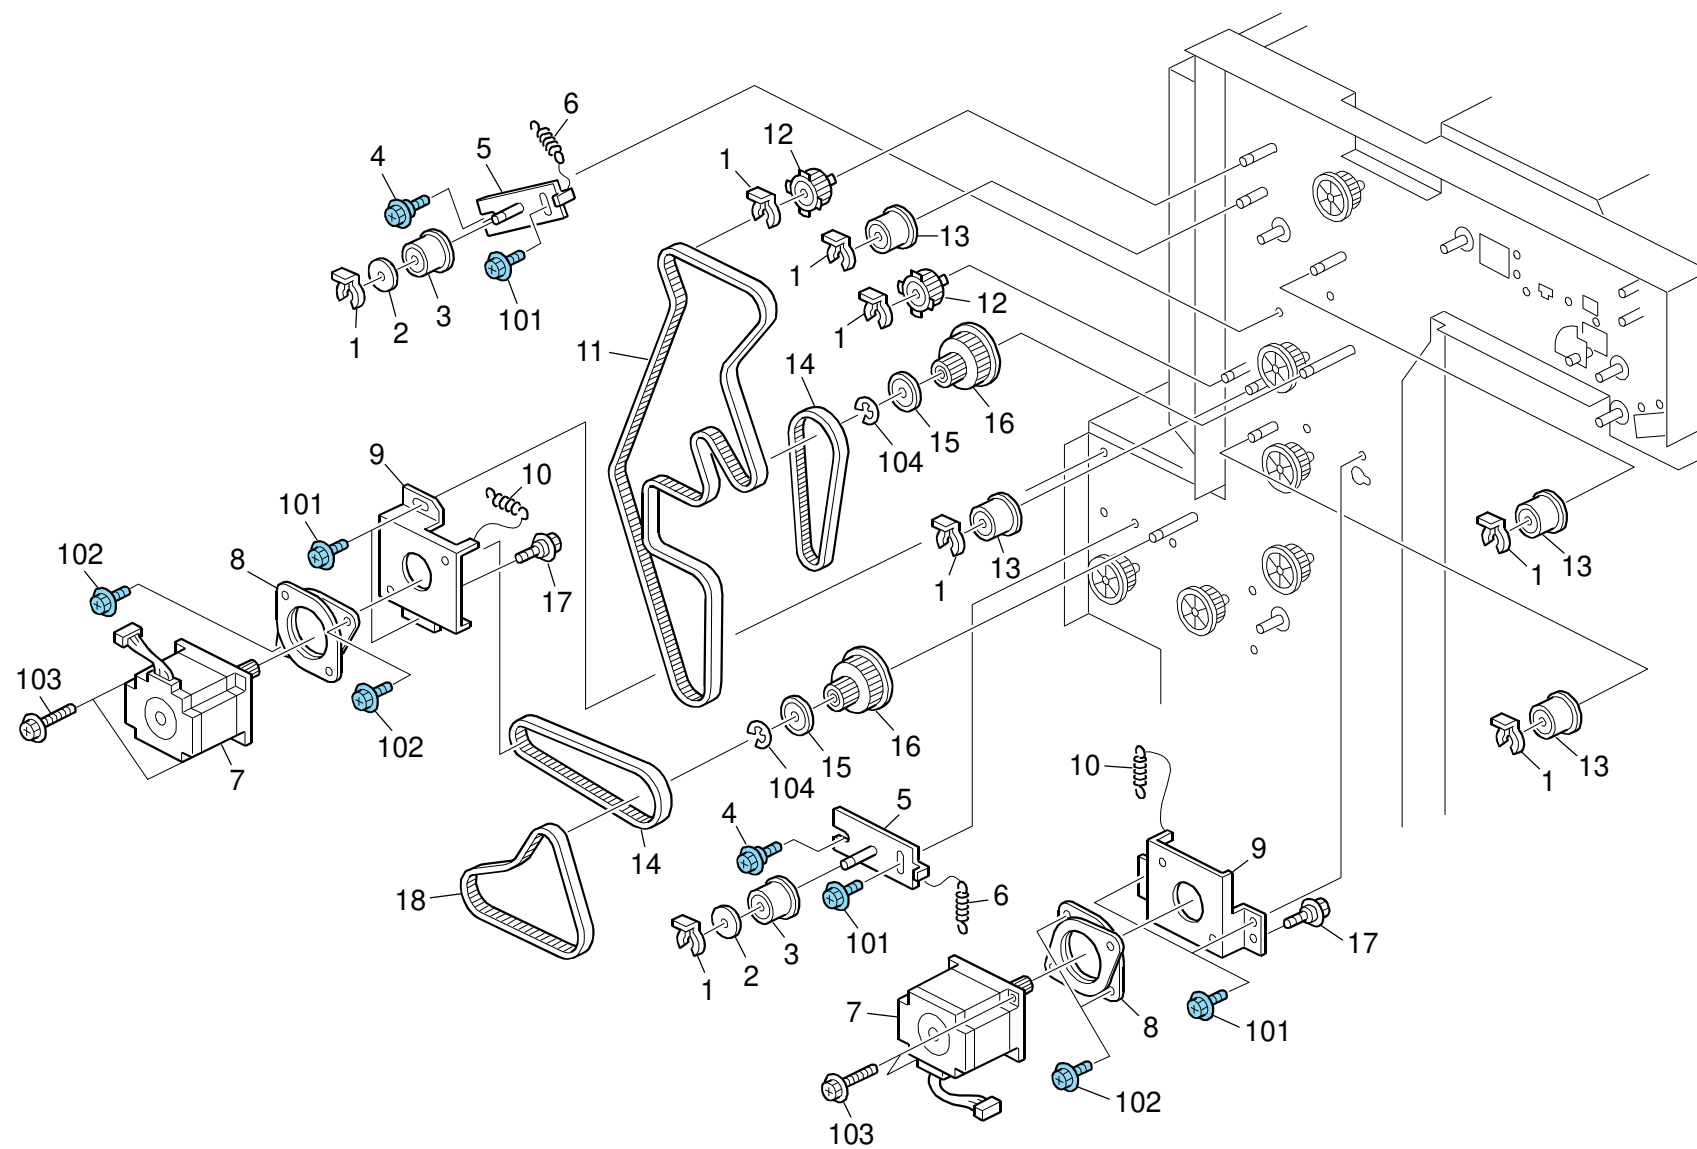


59.Drive Section 1 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	5447 2681	Snap Ring	8
2	A300 3812	Spacer - 6x22x1.5	2
3	AB03 0098	Belt Tightener	2
4	B830 1135	Screw	2
5	B890 4087	Tightener:Horizontal Transport:Short:Ass'y	2
6	B223 2665	Spring:Cover:Manual Feed	2
7	B889 1265	Stepper Motor DC2.3V 6.9W	2
8	AA16 1164	Cushion:Stepper Motor	2
9	B889 1275	Bracket:Stepper Motor	2
10	B890 2174	Coil Spring:Belt Tension:Cross	2
11	B890 6067	Timing Belt:60S3M1305	1
12	B793 4244	Timing Pulley - 20T	2
13	AB03 0551	Pulley:Idler:Fusing	4
14	B830 1516	Timing Belt - 60S3M306	2
15	A259 1158	Pulley Flange	2
16	B889 1266	Timing Pulley:24T/44T	2
17	AA14 3790	Screw:Contact Point	2
18	B890 6066	Timing Belt:60S3M453	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0454 3006Q	Tapping Screw - M3x6	
102	0454 4008Q	Tapping Screw - M4x8	
103	0451 4010N	Tapping Screw:4x10	
104	0720 0060E	Retaining Ring - M6	

 60.Drive Section 2 (B890)

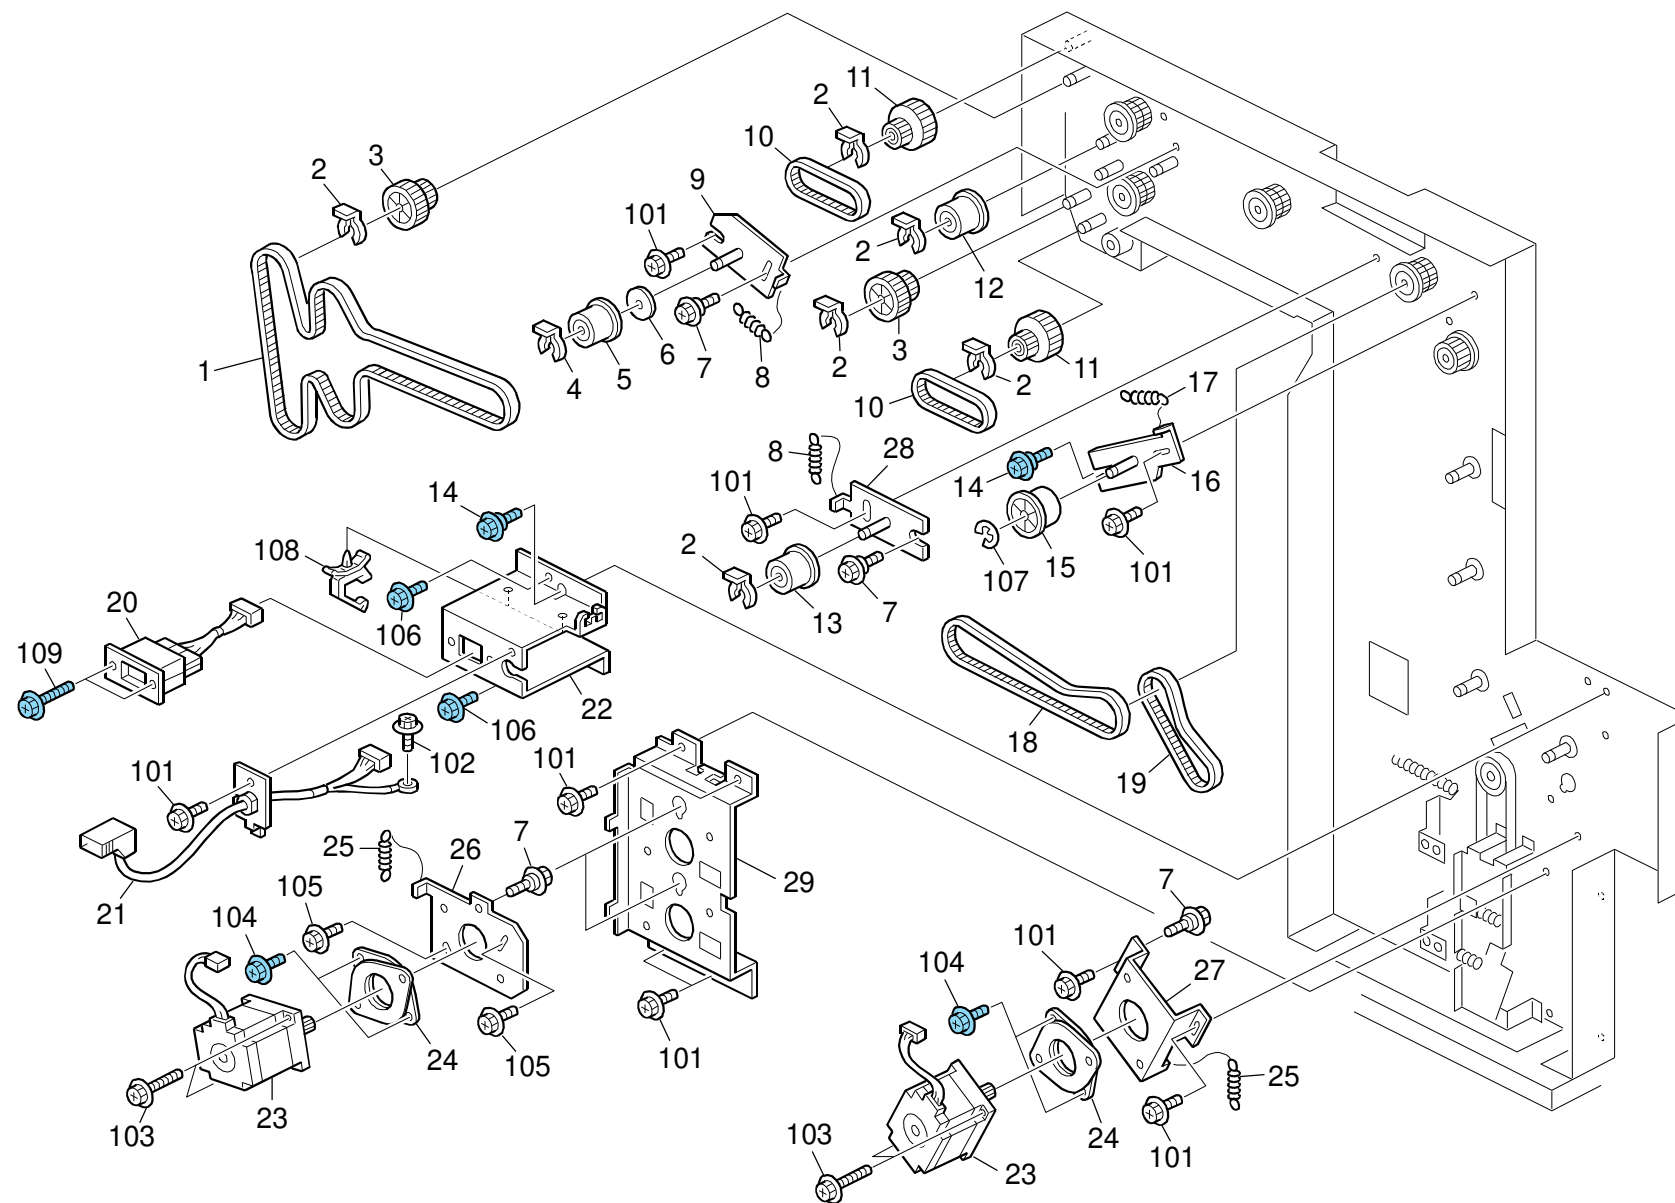


60. Drive Section 2 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B890 4711	Synchronous Belt:B60S3M1005	1
2	5447 2681	Snap Ring	5
3	B890 4709	Gear:Pulley:Z30:T30	2
4	5215 2621	Snap Ring - M6	1
5	AB03 0455	Tightener Pulley - 8x20x13	1
6	A259 1158	Pulley Flange	1
7	AA14 3790	Screw:Contact Point	4
8	A257 6429	Pressure Spring	2
9	B889 1427	Bracket:Tightener	1
10	AA04 3297	Timing Belt:S3M:150	2
11	AB01 4142	Pulley - 30Z/20T	2
12	AB03 0551	Pulley:Idler:Fusing	1
13	B079 1144	Timing Pulley:Paddle	1
14	B830 1135	Screw	2
15	A257 4650	Tightener Pulley	1
16	B889 1262	Bracket:Tightener:Left and Right	1
17	B223 2665	Spring:Cover:Manual Feed	1
18	AA04 3599	Timing Belt - 60S3M588	1
19	B890 6065	Timing Belt:60S3M279	1
20	B890 5615	Harness:DC:Interface:Cross:3	1
21	B890 5627	Harness:DC:Interface:Cross:Ass'y	1
22	B890 2985	Bracket:Interface	1
23	B889 1265	Stepper Motor DC2.3V 6.9W	1
24	AA16 1164	Cushion:Stepper Motor	1
25	B890 2174	Coil Spring:Belt Tension:Cross	2
26	B890 2145	Bracket:Stepper Motor	1
27	B889 1275	Bracket:Stepper Motor	1
28	B890 6657	Tightener:Exit:Long:Peen	1
29	B890 2144	Base:Bracket:Motor	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0451 4008N	Tapping Screw:4x8	
103	0451 4010N	Tapping Screw:4x10	
104	0454 4008Q	Tapping Screw - M4x8	
105	0360 4006N	Screw - M4x6	
106	0454 3006Q	Tapping Screw - M3x6	
107	0720 0060E	Retaining Ring - M6	
108	1105 0516	Clamp	
109	0454 3008Q	Tapping Screw:3x8	

 61.Electrical Section 1 (B890)

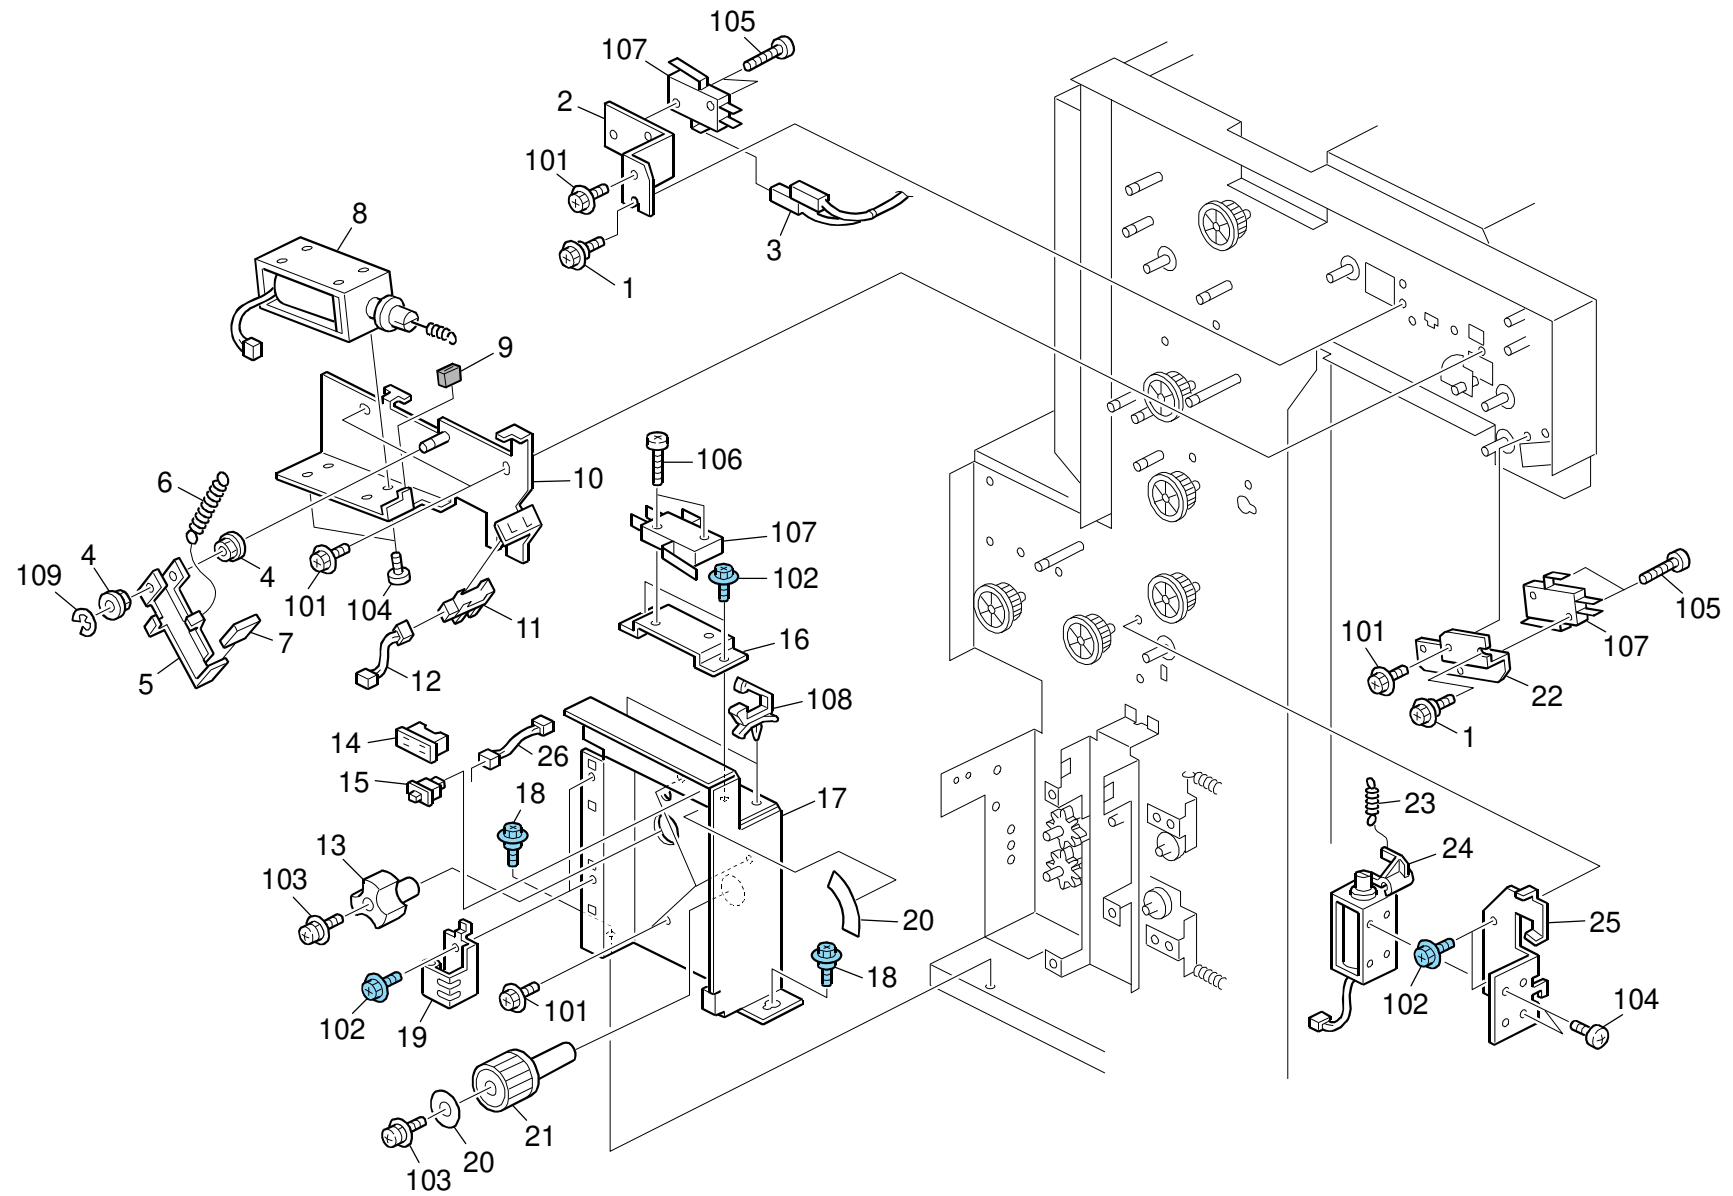


61.Electrical Section 1 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	AA14 3790	Screw:Contact Point	2
2	B890 6645	Bracket:Micro Switch	1
3	B890 5637	Harness:DC:Shift Tray:Safety Switch:Connecting	1
4	AA08 2101	Bushing - 6x10x6	2
5	B890 6626	Lever:Release:Feeler	1
6	AA06 0589	Pressure Spring	1
7	B890 3372	Cap:Bracket:Cam:Side	1
8	B890 6624	DC Solenoid:Paper Volume:Peen	1
9	A294 4669	Cushion	1
10	B890 6622	Bracket:Paper Volume:Peen	1
11	AW02 0145	Photointerruptor:Flat	1
12	B890 5609	Harness:DC:Cross:Side Plate:Rear	1
13	AG05 0095	Fusing Knob	1
14	AG07 0513	Magnet Catch	1
15	G020 5626	Push Switch	1
16	B890 2990	Bracket:Micro Switch	1
17	B890 2989	Inner Cover:Knob	1
18	B830 1135	Screw	2
19	B104 1302	Left Hinge	2
20	B890 2950	Decal:Multi-Language:Cross	1
21	B889 1426	Knob:Pick-up Paper Jam	1
22	B890 6635	Bracket:Paper Exit Sub-unit:Safety Switch	1
23	B017 1755	Spring - 16x4.5mm	1
24	B234 3741	DC Solenoid	1
25	B890 6123	Bracket:DC Solenoid:Exchange Powl	1
26	B889 5547	Harness:DC:Push Switch	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0954 4008N	Screw - M4x8	
104	0353 0040N	Screw - M3x4	
105	0353 0140N	Screw:M3x14	
106	0353 0120N	Screw M3x12	
107	1204 2529	Switch - V-5F912DN	
108	1105 0511	Harness Clamp - LWS-0306ZC	
109	0720 0060E	Retaining Ring - M6	

 62.Electrical Section 2 (B890)

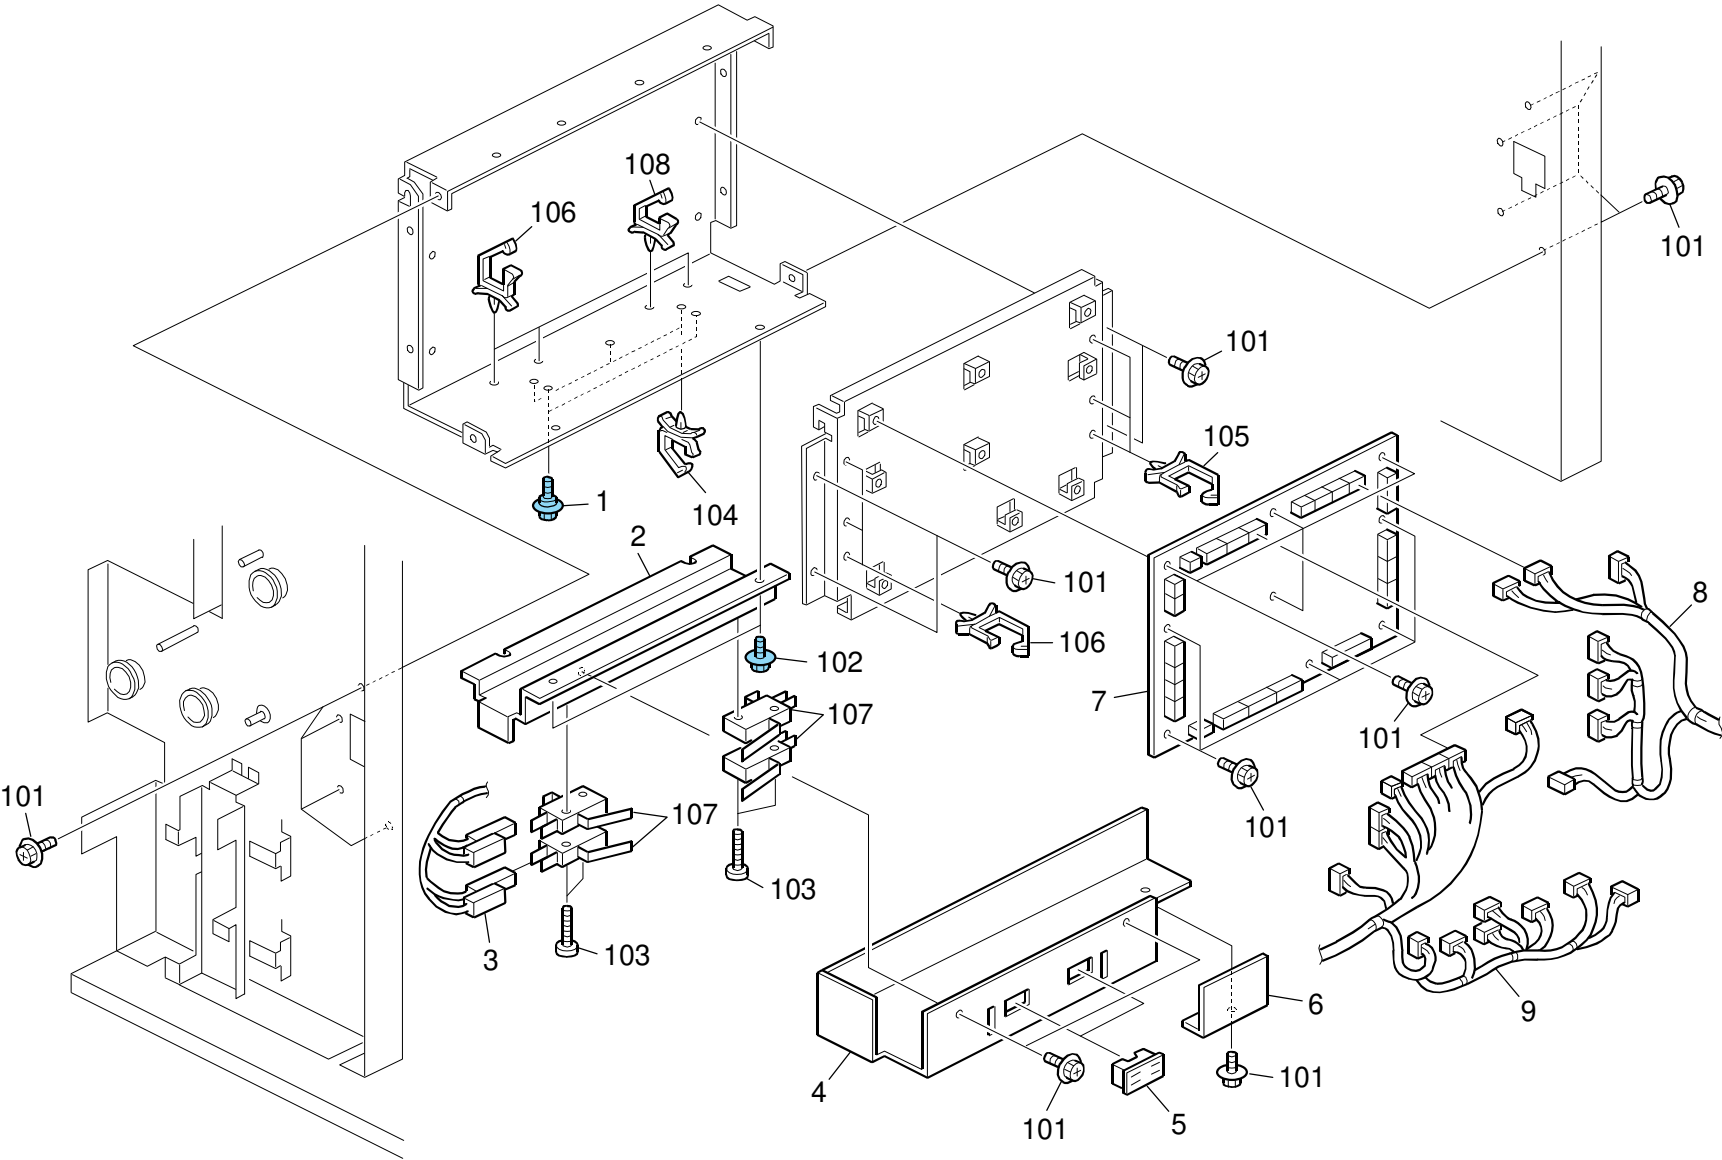

62.Electrical Section 2 (B890)

Index No.	Part No.	Description	Q'ty Per Assembly
1	B830 1135	Screw	2
2	B890 2977	Bracket:Micro Switch	1
3	B890 5621	Harness:DC:Cross:Safety Switch:Connecting	1
4	B890 2976	Cover:Micro Switch	1
5	AG07 0513	Magnet Catch	2
6	B890 2998	Cover:Micro Switch:Small	1
7	B890 5256	PCB:MCU-C:EXP:Ass'y	1
8	B890 5606	Harness:DC:Cross:Side Plate:Front	1
9	B890 5609	Harness:DC:Cross:Side Plate:Rear	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 3006N	Tapping Screw - 3x6	
102	0454 3006Q	Tapping Screw - M3x6	
103	0353 0250N	Screw:M3x25	
104	1105 0516	Clamp	
105	1105 0489	Harness Clamp - LWS 1316	
106	1105 0490	Harness Clamp - IWS-2218	
107	1204 2529	Switch - V-5F912DN	

Parts Index

PM Parts Index

Section Name	Part No.	Description in Service Manual	Description in Parts Catalog	Q'ty Per Assembly	Page and Index No.
Paper Transfer 4 (B890)	B890 4116	Shaft:Holder:Driven Roller	Shaft:Holder:Driven Roller	6	65 - 9
Cross Flap 1 (B890)	B890 2073	Stay:Stopper:Guide:Adhesion	Stay:Stopper:Guide:Adhesion	4	87 - 5
Cross Flap 1 (B890)	B890 2110	Torque Limiter:OTLV8-2000C	Torque Limiter:OTLV8-2000C	2	87 - 28

Parts Index

Part No.	Description	Page and Index No.
B890 1274	DC Stepper Motor:Paper Crimp:Ass'y	43 - 44
B890 1286	DC Stepper Motor:Paper Crimp:Ass'y	43 - 13
B890 1466	Guide:Exit:BEL	3 - 9
B890 1469	Guide:Exit:BEL:2	3 - 10
B890 1652	Bracket:Coupling:Upper	11 - 1
B890 1667	Bracket:Coupling:BEL	3 - 8
B890 1918	Cover:Front Lower:BEL:Ass'y	11 - 3
B890 1923	Cover:Front Upper:BEL:Ass'y	13 - 6
B890 1981	Cover:Power Supply Unit:Rear Lower	17 - 8
B890 2057	Bracket:Coupling:Rear	49 - 8
B890 2058	Bracket:Coupling:Front	49 - 4
B890 2063	Cap:Base	83 - 8
B890 2073	Stay:Stopper:Guide:Adhesion	87 - 5
B890 2100	Roller:Drive	93 - 2
B890 2101	Roller:Driven	91 - 17
B890 2102	Transport Roller:Drive	93 - 1
B890 2103	Exit Roller:Ass'y	105 - 22
B890 2105	Transport Roller:Ass'y	105 - 20
B890 2110	Torque Limiter:OTLV8-2000C	87 - 28
B890 2111	Shaft:Drive:Guide	87 - 17
B890 2112	Timing Belt:B100S3M231	93 - 15
B890 2113	Supporting Plate:Drive:Paper Crimp	93 - 20
B890 2114	Bracket:Tightener:Middle:Ass'y	93 - 19
B890 2116	Bracket:Tightener:Paper Crimp:Ass'y	93 - 17
B890 2118	Bracket:Guide:1	89 - 6
B890 2120	Shaft:Contact Point:Guide:Lower:Ass'y	87 - 2
B890 2122	Guide:Paper Crimp:Cross	87 - 8
B890 2122	Guide:Paper Crimp:Cross	89 - 14
B890 2123	Spacer:Guide:Paper Crimp:Upper Front	87 - 14
B890 2124	Spacer:Guide:Paper Crimp:Upper Rear	87 - 13
B890 2125	Spacer:Guide:Paper Crimp:Lower Front	89 - 22
B890 2126	Spacer:Guide:Paper Crimp:Lower Rear	89 - 21
B890 2127	Bracket:Belt Tension	93 - 7
B890 2127	Bracket:Belt Tension	91 - 15
B890 2128	Timing Belt:B60S3M444	93 - 4

Part No.	Description	Page and Index No.
B890 2129	Shaft:Belt Tensioner	91 - 20
B890 2130	Bracket:Roller:Driven	91 - 14
B890 2131	Guide Plate:Upper:Outer	105 - 23
B890 2132	Guide Plate:Lower:Outer	87 - 25
B890 2133	Guide:Turn	87 - 26
B890 2134	Stay:Turn	87 - 35
B890 2135	Guide Plate:Lower:Inner	87 - 19
B890 2136	Stay:Guide Plate:Transport	89 - 24
B890 2137	Guide Plate:Transport	89 - 9
B890 2138	Bracket:Sensor:Transport	89 - 11
B890 2141	Bracket:Tightener:Transport:Ass'y	79 - 8
B890 2142	Roller:Paper Crimp:Driven	91 - 19
B890 2143	Belt:Paper Crimp:Driven	91 - 18
B890 2144	Base:Bracket:Motor	121 - 29
B890 2145	Bracket:Stepper Motor	121 - 26
B890 2146	Timing Belt:B100S3M285	87 - 6
B890 2147	Timing Belt:B100S3M219	87 - 30
B890 2150	Cushion:Arm:Guide	89 - 7
B890 2151	Guide Plate:Guide Plate:Ass'y	87 - 1
B890 2151	Guide Plate:Guide Plate:Ass'y	105 - 2
B890 2153	Lever:Guide Plate:Upper	105 - 24
B890 2154	Sheet:Guide:Paper Crimp	89 - 15
B890 2154	Sheet:Guide:Paper Crimp	87 - 7
B890 2156	Tension Spring:34N	91 - 1
B890 2157	Timing Pulley:S3M:T30	79 - 12
B890 2157	Timing Pulley:S3M:T30	75 - 6
B890 2160	Timing Pulley:Drive:Roller:S3M30T	93 - 3
B890 2160	Timing Pulley:Drive:Roller:S3M30T	91 - 7
B890 2161	Bracket:Tightener:Roller:Pressure:Ass'y	91 - 11
B890 2164	Bracket:Tightener:Roller:Drive:Ass'y	93 - 11
B890 2166	Bracket:Roller:Drive:Ass'y	93 - 13
B890 2169	Timing Belt:B80DS3M600	91 - 16
B890 2170	Sheet:Guide Plate:Transport	89 - 10
B890 2172	Spring:Transport Roller:28N	93 - 9
B890 2174	Coil Spring:Belt Tension:Cross	121 - 25

Part No.	Description	Page and Index No.
B890 2174	Coil Spring:Belt Tension:Cross	91 - 12
B890 2174	Coil Spring:Belt Tension:Cross	119 - 10
B890 2174	Coil Spring:Belt Tension:Cross	117 - 5
B890 2174	Coil Spring:Belt Tension:Cross	93 - 12
B890 2180	Stopper:Torque Limiter	87 - 29
B890 2185	Sheet:Arm:Guide	89 - 8
B890 2701	Cover:Guide Plate:Upper:Ass'y	55 - 11
B890 2704	Receive Plate:Magnet Catch:Entrance	55 - 13
B890 2707	Spacer:Separation Plate	49 - 2
B890 2711	Holder:Separation Plate:PE	15 - 12
B890 2714	Seal:Guide Plate:Entrance:1	15 - 13
B890 2715	Seal:Guide Plate:Entrance:2	55 - 16
B890 2800	Tray:Right:3	49 - 12
B890 2801	Inner Cover:Right Lower	67 - 15
B890 2802	Inner Cover:Left	53 - 24
B890 2803	Inner Cover:Right Upper	67 - 3
B890 2804	Inner Cover:Left:Small	51 - 9
B890 2806	Hinge:TH-11SUS-R	53 - 16
B890 2807	Bracket:Safety Switch	53 - 22
B890 2808	Inner Cover:Upper Front	61 - 3
B890 2809	Inner Cover:Upper Rear	61 - 4
B890 2811	Bracket:Stay:Cover:Upper	53 - 1
B890 2812	Bracket:Right:Door Catch	53 - 12
B890 2813	Bracket:Left:Door Catch	53 - 25
B890 2816	Shaft:Contact Point	49 - 14
B890 2817	Cover:Upper:Ass'y	51 - 11
B890 2818	Shaft:Contact Point:Open and Close	53 - 2
B890 2819	Cover:Right Lower:Ass'y	51 - 10
B890 2820	Stopper:Cover:Open and Close	51 - 8
B890 2821	Cushion:Stopper	61 - 2
B890 2821	Cushion:Stopper	51 - 7
B890 2822	Copy Tray:Rear	49 - 3
B890 2823	Guide:Tray:Right	49 - 15
B890 2825	Holder:Copy Tray	51 - 14
B890 2827	Grip:A-1042-C-8	55 - 12

Part No.	Description	Page and Index No.
B890 2828	Bracket:Seal:Right	67 - 11
B890 2829	Bracket:Seal:Left	53 - 20
B890 2830	Cover:Open and Close:Paper Chip:Ass'y	53 - 15
B890 2832	Seal:Paper Chip:Left and Right	53 - 18
B890 2832	Seal:Paper Chip:Left and Right	67 - 12
B890 2833	Separation Plate:Copy Tray	49 - 1
B890 2834	Inner Cover:Pulley	67 - 4
B890 2835	Inner Cover:Open and Close	53 - 7
B890 2836	Stack:Right	49 - 9
B890 2837	Plate:Stack	49 - 10
B890 2839	Seal:Side Plate:Rear	81 - 23
B890 2840	Receive Plate:Magnet Catch:Rear	85 - 6
B890 2911	Cover:Reverse:Open and Close:Ass'y	97 - 2
B890 2916	Cover:Turn:Open and Close:Ass'y	99 - 23
B890 2919	Cover:Lever:Release	99 - 25
B890 2920	Cover:Reverse:Front Lower	85 - 4
B890 2922	Cover:Reverse:Rear Lower:Welding	85 - 3
B890 2928	Cover:Turn:Front:Welding	85 - 2
B890 2932	Cover:Turn:Rear:Welding	85 - 1
B890 2936	Cover:Exit:Front:Welding	83 - 5
B890 2940	Cover:Exit:Rear:Welding	83 - 4
B890 2943	Cover:Grip:Middle	109 - 5
B890 2943	Cover:Grip:Middle	97 - 6
B890 2944	Cover:Exit:Option	83 - 2
B890 2950	Decal:Multi-Language:Cross	53 - 4
B890 2950	Decal:Multi-Language:Cross	55 - 14
B890 2950	Decal:Multi-Language:Cross	83 - 18
B890 2950	Decal:Multi-Language:Cross	97 - 4
B890 2950	Decal:Multi-Language:Cross	87 - 18
B890 2950	Decal:Multi-Language:Cross	49 - 7
B890 2950	Decal:Multi-Language:Cross	105 - 25
B890 2950	Decal:Multi-Language:Cross	109 - 3
B890 2950	Decal:Multi-Language:Cross	123 - 20
B890 2950	Decal:Multi-Language:Cross	99 - 24
B890 2955	Seal:Exit:Right	51 - 1

Part No.	Description	Page and Index No.
B890 2956	Cover:Rear Lower	51 - 6
B890 2968	Cover:Right:Ass'y	51 - 2
B890 2971	Bracket:Cover:Right	67 - 1
B890 2974	Cover:Right Rear	51 - 4
B890 2975	Bracket:Hinge	115 - 4
B890 2976	Cover:Micro Switch	125 - 4
B890 2977	Bracket:Micro Switch	125 - 2
B890 2978	Receive Plate:Magnet Catch:Front	85 - 10
B890 2979	Receive Plate:Magnet Catch:Rear	85 - 11
B890 2983	Cover:Right Upper	85 - 5
B890 2985	Bracket:Interface	121 - 22
B890 2986	Cover:Upper	83 - 1
B890 2989	Inner Cover:Knob	123 - 17
B890 2990	Bracket:Micro Switch	123 - 16
B890 2997	Cover:Paper Exit Sub-unit:Middle	83 - 3
B890 2998	Cover:Micro Switch:Small	125 - 6
B890 3372	Cap:Bracket:Cam:Side	123 - 7
B890 4036	Driven Roller:Auxiliary:Middle:Ass'y	59 - 2
B890 4037	Driven Roller:Auxiliary:Ass'y	59 - 1
B890 4052	Bracket:Coupling:Right	49 - 6
B890 4066	Guide Plate:Upper	61 - 6
B890 4069	Guide Plate:Horizontal Transport:Lower Left:Ass'y	69 - 25
B890 4072	Guide Plate:Jogger Fence:Upper	67 - 6
B890 4074	Guide Plate:Horizontal Transport:Upper	75 - 16
B890 4082	Bracket:Gate Pawl	77 - 14
B890 4083	Stopper:Gate Pawl	77 - 5
B890 4084	Bracket:Coupling:Ass'y	49 - 5
B890 4086	Timing Belt:1326:S3M	73 - 20
B890 4087	Tightener:Horizontal Transport:Short:Ass'y	73 - 12
B890 4087	Tightener:Horizontal Transport:Short:Ass'y	119 - 5
B890 4090	Shaft:Coupling:Roller:Left	71 - 27
B890 4091	Shaft:Coupling:Roller:Middle	71 - 26
B890 4092	Shaft:Coupling:Roller:Right	71 - 22
B890 4093	Bracket:Roller:Transport:Lengthwise:Auxiliary	71 - 23
B890 4094	Timing Belt:B60S3M297	57 - 19

Part No.	Description	Page and Index No.
B890 4095	Timing Belt:B50S3M294	71 - 4
B890 4096	Bracket:Stepper Motor:Transport:Lengthwise:Ass'y	71 - 13
B890 4099	Guide Rod:Jogger Fence	69 - 10
B890 4100	Slider:Jogger Fence	69 - 9
B890 4101	Timing Belt:B80S2M152	63 - 5
B890 4101	Timing Belt:B80S2M152	69 - 13
B890 4102	Bracket:Stepper Motor:Jogger Fence:Ass'y	69 - 15
B890 4105	Bracket:Tensioner:Jogger Fence:Fix	69 - 23
B890 4106	Jogger Fence:Ass'y	69 - 4
B890 4109	Bracket:Home Position Sensor:Jogger Fence	69 - 7
B890 4110	Holder:Driven Roller:Ass'y	65 - 12
B890 4114	Shaft:Driven Roller:Horizontal Transport	65 - 6
B890 4116	Shaft:Holder:Driven Roller	65 - 9
B890 4117	Bracket:Driven Roller:Auxiliary	59 - 10
B890 4121	Compression Spring:400mN	59 - 9
B890 4122	Shaft:Driven Roller:Auxiliary	59 - 6
B890 4124	Sheet:Guide Plate:Auxiliary	59 - 16
B890 4125	Link:Driven Roller:Front	65 - 17
B890 4126	Link:Driven Roller:Rear	65 - 16
B890 4128	Lever:Drive:Link	63 - 11
B890 4131	Shaft:Coupling:Short	63 - 12
B890 4133	Bracket:Home Position Sensor:Upper	61 - 11
B890 4135	Guide Plate:Horizontal Transport:Upper:Ass'y	65 - 21
B890 4140	Tightener:Vertical Transport:Ass'y	57 - 17
B890 4143	Guide Plate:Lower	57 - 9
B890 4145	Guide Plate:Upper:Ass'y	55 - 9
B890 4149	Timing Belt:B60S3M420	75 - 28
B890 4150	Sheet:Jogger Fence:Lower	69 - 26
B890 4151	Sheet:Guide Plate:Auxiliary:Short	59 - 4
B890 4152	Shaft:Punch Unit	77 - 7
B890 4153	Bracket:Guide Rod:Fix	81 - 4
B890 4154	Transport Roller:Drive	57 - 10
B890 4156	Bracket:Tensioner:Jogger Fence:Ass'y	69 - 22
B890 4160	Timing Belt:B100S3M207	73 - 3
B890 4160	Timing Belt:B100S3M207	71 - 5

Part No.	Description	Page and Index No.
B890 4161	Bracket:Safety Switch	61 - 8
B890 4164	Tightener:Horizontal Transport:Exit:Ass'y	75 - 20
B890 4165	Bracket:Connector	67 - 9
B890 4167	Shaft:Holder:Driven Roller	65 - 10
B890 4170	Inner Cover:Middle	79 - 1
B890 4171	Adjusting Plate:Holder:Driven Roller	65 - 13
B890 4172	Cam:Holder:Driven Roller	65 - 14
B890 4175	Shaft:Gate Pawl	77 - 2
B890 4179	Sheet:Exchange Powl	77 - 4
B890 4181	Bracket:Tightener:Transport:Lengthwise:Ass'y	71 - 12
B890 4184	Gear:Z28	71 - 24
B890 4187	Sheet:Guide Plate:Horizontal Transport:Upper	65 - 19
B890 4190	Holder:Driven Roller:Right:Ass'y	65 - 11
B890 4194	Bracket:Protect	81 - 3
B890 4228	Bracket:Stepper Motor	63 - 3
B890 4230	Shaft:Lever	63 - 8
B890 4231	Shaft:Worm Gear	63 - 6
B890 4235	Worm Gear	63 - 7
B890 4236	Gear:Pressure	63 - 10
B890 4237	Compression Spring:4N	65 - 3
B890 4241	Transport Roller:Drive	79 - 14
B890 4241	Transport Roller:Drive	75 - 5
B890 4244	Synchronous Belt:B60s3m270	71 - 8
B890 4245	Guide Plate:Upper:Right	61 - 5
B890 4246	Guide Plate:Horizontal Transport:	
	Lower Right:Exit:Peen	75 - 15
B890 4248	Guide Plate:Paper Feed Sensor:Right	75 - 14
B890 4251	Sheet:Jogger Fence	69 - 2
B890 4252	Anchor	59 - 13
B890 4350	Roller:Transport:Side	73 - 18
B890 4353	Roller:Transport:Side:Exit	75 - 19
B890 4355	Guide Plate:Horizontal Transport:Right:Ass'y	69 - 24
B890 4359	Sheet:Gate Pawl:Rear	77 - 8
B890 4360	Sheet:Sensor:Lower	79 - 16
B890 4361	Sheet:Sensor:Upper	79 - 19

Part No.	Description	Page and Index No.
B890 4362	Guide:Roller:Vertical Transport	71 - 17
B890 4363	Roller:Transport:Lengthwise:Auxiliary	71 - 18
B890 4365	Sheet:Jogger Fence:1	69 - 30
B890 4366	Sheet:Jogger Fence:2	69 - 29
B890 4367	Sheet:Jogger Fence:Short	69 - 1
B890 4368	Sheet:Guide Plate:Upper	55 - 8
B890 4369	Sheet:Guide Plate:Jogger Fence:Upper:Front	67 - 7
B890 4370	Sheet:Guide Plate:Jogger Fence:Upper	67 - 5
B890 4373	Sheet:Gate Pawl	69 - 31
B890 4374	Sheet:Gate Pawl:Small	69 - 32
B890 4375	Sheet:Punch:Lengthwise	69 - 33
B890 4650	Bracket:DC Solenoid:Ass'y	59 - 15
B890 4652	Guide Plate:Auxiliary	59 - 7
B890 4653	Bracket:Sensor	57 - 5
B890 4703	Gear:Z8	93 - 6
B890 4703	Gear:Z8	79 - 10
B890 4708	Timing Pulley:T20:S3M	111 - 15
B890 4708	Timing Pulley:T20:S3M	75 - 8
B890 4709	Gear:Pulley:Z30:T30	121 - 3
B890 4709	Gear:Pulley:Z30:T30	75 - 9
B890 4710	Lever:Exhaust Roller	75 - 3
B890 4711	Synchronous Belt:B60S3M1005	73 - 19
B890 4711	Synchronous Belt:B60S3M1005	121 - 1
B890 4713	Guide Plate:Horizontal Transport:Left Upper:Exit	79 - 2
B890 4714	Guide Plate:Exit:Upper Left	77 - 10
B890 4715	Guide Plate:Gate	77 - 9
B890 4716	Guide Plate:Horizontal Transport:LL:Exit	79 - 17
B890 4719	Exchange Powl:Punch:Horizontal Transport	77 - 3
B890 4720	Bracket:Entrance Sensor:Punch:Side	77 - 13
B890 4751	Timing Pulley:T40	63 - 4
B890 4758	Sheet:Guide Plate:Horizontal Transport:Upper	75 - 17
B890 4760	Sheet:Guide Plate:Exit:Upper Left	77 - 11
B890 4766	Cover:Harness:Registration Sensor	69 - 28
B890 4769	Sheet:Guide Plate:Horizontal Transport	75 - 18
B890 4795	Roller:Driven	65 - 2

Part No.	Description	Page and Index No.
B890 4800	Decal:Caution:Transport:Roller	51 - 15
B890 4821	Plate:Transport Roller:Driven	79 - 11
B890 4862	Seal:Duct:Lower:Left and Right	81 - 16
B890 4865	Seal:Duct:Upper	81 - 19
B890 4867	Positioning Plate:Case	81 - 6
B890 4869	Duct:Lower	81 - 13
B890 4871	Duct:Lengthwise:Right:2	81 - 7
B890 4872	Duct:Lengthwise:Left	81 - 10
B890 4874	Seal:Duct:Lengthwise:Left	81 - 11
B890 4875	Duct:Middle	81 - 20
B890 4876	Duct:Upper	81 - 18
B890 4877	Seal:Duct:Lower	53 - 17
B890 4877	Seal:Duct:Lower	67 - 13
B890 4877	Seal:Duct:Lower	81 - 15
B890 4879	Bracket:Sensor	81 - 21
B890 4881	Seal:Sensor:Paper Chip	81 - 14
B890 4885	Cover:Positioning Plate	81 - 24
B890 4886	Bracket:Harness Clamp:Registration Sensor	81 - 17
B890 4887	Duct:Lengthwise:Right:1	81 - 8
B890 4977	Sheet:Guide Plate:Horizontal Transport:Upper:2	65 - 20
B890 5216	PCB:MCU-J:EXP:Ass'y	47 - 20
B890 5256	PCB:MCU-C:EXP:Ass'y	125 - 7
B890 5568	Harness:DC:Power Source	47 - 19
B890 5569	Harness:DC:Sensor	47 - 17
B890 5571	Harness:DC:Mechanical Drive Section	47 - 18
B890 5576	Harness:DC:Jabara:Motor:Connecting	43 - 45
B890 5600	Harness:DC:Sensor:Connecting:1	89 - 12
B890 5600	Harness:DC:Sensor:Connecting:1	103 - 17
B890 5600	Harness:DC:Sensor:Connecting:1	95 - 7
B890 5602	Harness:DC:Sensor:Connecting:2	103 - 7
B890 5602	Harness:DC:Sensor:Connecting:2	87 - 22
B890 5605	Harness:DC:Turn:SOL:Connecting	101 - 22
B890 5606	Harness:DC:Cross:Side Plate:Front	125 - 8
B890 5608	Harness:DC:Transport Unit:Connecting:1	61 - 10
B890 5609	Harness:DC:Cross:Side Plate:Rear	123 - 12

Part No.	Description	Page and Index No.
B890 5609	Harness:DC:Cross:Side Plate:Rear	125 - 9
B890 5612	Harness:DC:Interface:Cross:1	47 - 26
B890 5615	Harness:DC:Interface:Cross:3	121 - 20
B890 5618	Harness:DC:Turn:Sensor:Connecting	105 - 17
B890 5619	Harness:DC:Reverse:Sensor:Connecting	95 - 5
B890 5620	Harness:DC:Reverse:Safety Switch:Connecting	105 - 18
B890 5621	Harness:DC:Cross:Safety Switch:Connecting	125 - 3
B890 5623	Harness:DC:Transport Unit:Connecting:2	67 - 8
B890 5624	Harness:DC:Transport Unit:Connecting:3	81 - 5
B890 5625	Harness:DC:Transport Unit:Connecting:4	73 - 1
B890 5626	Harness:DC:Interface:F:Ass'y	47 - 27
B890 5627	Harness:DC:Interface:Cross:Ass'y	121 - 21
B890 5629	Harness:DC:Interface:Jabara:Ass'y	47 - 25
B890 5635	Harness:DC:Sensor:Connecting:3	87 - 33
B890 5636	Harness:DC:Tray Unit:Connecting	117 - 11
B890 5637	Harness:DC:Shift Tray:Safety Switch:Connecting	123 - 3
B890 5638	Harness:DC:Shift Tray:Paper Feed Sensor:Connecting	107 - 9
B890 5639	Harness:DC:Shift Tray:Sensor:Connecting	107 - 3
B890 5645	Harness:DC:Transport Unit:Sensor:Connecting	75 - 11
B890 5645	Harness:DC:Transport Unit:Sensor:Connecting	79 - 18
B890 5646	Harness:DC:Turn:Paper Feed Sensor:Connecting	103 - 15
B890 5653	Harness:DC:Transport Unit: Entrance Sensor:Connecting	57 - 7
B890 5661	Harness:DC:Solenoid:Connecting	59 - 3
B890 5670	Gasket:EGUN10113:700mm	71 - 28
B890 5670	Gasket:EGUN10113:700mm	57 - 22
B890 6053	Bracket:Sensor	103 - 16
B890 6053	Bracket:Sensor	87 - 20
B890 6053	Bracket:Sensor	107 - 7
B890 6053	Bracket:Sensor	95 - 8
B890 6056	Bracket:Safety Switch:Reverse	105 - 16
B890 6059	Bracket:Paper Feed Sensor:Turn	103 - 19
B890 6065	Timing Belt:60S3M279	121 - 19
B890 6066	Timing Belt:60S3M453	119 - 18
B890 6067	Timing Belt:60S3M1305	119 - 11

Part No.	Description	Page and Index No.
B890 6071	Transport Roller:Ass'y	107 - 6
B890 6071	Transport Roller:Ass'y	105 - 19
B890 6071	Transport Roller:Ass'y	111 - 8
B890 6079	Sheet:Reverse:2	103 - 4
B890 6079	Sheet:Reverse:2	95 - 6
B890 6080	Guide Plate:Inner:Ass'y	103 - 3
B890 6085	Bracket:Plate:Peen	103 - 8
B890 6089	Bracket:Sensor	97 - 16
B890 6089	Bracket:Sensor	95 - 4
B890 6089	Bracket:Sensor	103 - 6
B890 6093	Sheet:Reverse:Guide Plate:Entrance	97 - 18
B890 6096	Guide Plate:Reverse:Upper Left:Ass'y	97 - 20
B890 6098	Sheet:Reverse:Upper Left	97 - 14
B890 6100	Hinge:Guide Plate:Reverse	97 - 17
B890 6102	Bracket:Cover:Reverse	97 - 7
B890 6111	Guide Plate:Reverse:Upper Right:Ass'y	95 - 14
B890 6117	Exchange Powl	95 - 19
B890 6118	Sheet:Exchange Powl	95 - 16
B890 6119	Sheet:Exchange Powl:Auxiliary	95 - 18
B890 6120	Sheet:Exchange Powl:Behind	95 - 17
B890 6121	Bracket:Exchange Powl	113 - 15
B890 6121	Bracket:Exchange Powl	95 - 21
B890 6123	Bracket:DC Solenoid:Exchange Powl	123 - 25
B890 6126	Guide Plate:Outer:Ass'y	101 - 6
B890 6134	Bracket:DC Solenoid:Peen	99 - 3
B890 6138	Guide Plate:Plate:Press Fit	99 - 12
B890 6143	Driven Roller:Upper Lower:Ass'y	101 - 9
B890 6144	Bracket:Driven:Front	101 - 10
B890 6145	Roller:Turn	101 - 14
B890 6146	Shaft:Turn:Upper Lower	101 - 17
B890 6147	Shaft:Turn:Middle	101 - 21
B890 6148	Bracket:Link	101 - 16
B890 6149	DC Solenoid:Pressure:Ass'y	101 - 18
B890 6151	Hinge:Guide Plate:Outer	101 - 1
B890 6153	Bracket:Cover:Turn	99 - 11

Part No.	Description	Page and Index No.
B890 6154	Bracket:Cover:Turn:Front Rear	101 - 5
B890 6156	Shaft:Lever:Lock	99 - 17
B890 6157	Lever:Release	99 - 16
B890 6158	Bracket:Shaft:Lever	99 - 21
B890 6161	Bracket:Shaft:Lock	99 - 7
B890 6163	Bracket:Contact Point:Open and Close:Upper:Ass'y	99 - 1
B890 6164	Bracket:Contact Point:Open and Close:Lower:Ass'y	99 - 2
B890 6168	Spring:Positioning	103 - 18
B890 6171	Guide Plate:Exit:Ass'y	105 - 15
B890 6175	Shaft:Driven:Long	97 - 11
B890 6175	Shaft:Driven:Long	95 - 12
B890 6175	Shaft:Driven:Long	109 - 7
B890 6175	Shaft:Driven:Long	105 - 13
B890 6175	Shaft:Driven:Long	103 - 12
B890 6176	Sheet:Exit	105 - 14
B890 6180	DC Solenoid:Plate:Sub-ass'y	99 - 4
B890 6181	Supporting Plate:Turn	99 - 10
B890 6183	Cushion:Solenoid:Front:Ass'y	101 - 20
B890 6187	Sound Proofing Material:Turn:19mm	99 - 22
B890 6188	Cushion:Solenoid:Rear:Ass'y	101 - 19
B890 6200	Decal:Caution:Exit Roller:Reverse	97 - 3
B890 6207	Bracket:Guide:Ass'y	101 - 7
B890 6207	Bracket:Guide:Ass'y	105 - 1
B890 6220	Bracket:Positioning:Peen	103 - 1
B890 6273	Shaft:Plate:Press Fit	99 - 14
B890 6284	Cap:Shaft:Plate	99 - 15
B890 6507	Compression Spring:Reverse Unit	103 - 11
B890 6507	Compression Spring:Reverse Unit	105 - 11
B890 6507	Compression Spring:Reverse Unit	109 - 9
B890 6507	Compression Spring:Reverse Unit	97 - 10
B890 6507	Compression Spring:Reverse Unit	111 - 4
B890 6619	Shaft:Guide:Auxiliary	83 - 16
B890 6620	Tray:Exit	83 - 17
B890 6622	Bracket:Paper Volume:Peen	123 - 10
B890 6624	DC Solenoid:Paper Volume:Peen	123 - 8

Part No.	Description	Page and Index No.
B890 6625	Sheet:Paper Volume:Auxiliary	113 - 17
B890 6626	Lever:Release:Feeler	123 - 5
B890 6628	Feeler:Paper Volume:Peen	113 - 16
B890 6631	Shaft:Bracket:Feeler	113 - 13
B890 6632	Lever:Small	113 - 14
B890 6635	Bracket:Paper Exit Sub-unit:Safety Switch	123 - 22
B890 6639	Sheet:Exit:Auxiliary:Inner	111 - 6
B890 6641	Bracket:Paper Volume:Leading Edge	107 - 5
B890 6644	Bracket:Magnet Catch	107 - 10
B890 6645	Bracket:Micro Switch	123 - 2
B890 6646	Guide Plate:Transport:Horizontal:Upper	107 - 12
B890 6648	Guide Plate:Open and Close:Peen	109 - 15
B890 6653	Receive Plate:Bearing	111 - 3
B890 6654	Side Fence	113 - 10
B890 6655	Cover:Open and Close:Welding	109 - 2
B890 6656	Bracket:Latch:Auxiliary	109 - 17
B890 6657	Tightener:Exit:Long:Peen	121 - 28
B890 6666	Cover:Copy Tray:Upper	113 - 2
B890 6667	Bracket:Contact Point:Side Fence	113 - 4
B890 6668	Cushion:Paper Sensor Board	113 - 3
B890 6669	Sheet:Exit:Guide Plate:Open and Close:1	109 - 13
B890 6669	Sheet:Exit:Guide Plate:Open and Close:1	97 - 19
B890 6669	Sheet:Exit:Guide Plate:Open and Close:1	95 - 15
B890 6672	Sheet:Exit:Turn	111 - 9
B890 6672	Sheet:Exit:Turn	117 - 28
B890 6673	Sheet:Exit:Auxiliary	111 - 10
B890 6676	End Fence	111 - 13
B890 6677	Sheet:Exit:Guide Plate:Open and Close:2	109 - 14
B890 6678	Sheet:Exit:Guide Plate:Horizontal:1	107 - 13
B890 6679	Sheet:Exit:Guide Plate:Horizontal:2	107 - 14
B890 6680	Cover:Bin Unit:Rear	115 - 2
B890 6681	Cover:Bin Unit:Front	115 - 3
B890 6682	Cover:Bin Unit:Lower	115 - 7
B890 6683	Cap:Side Fence	113 - 11
B890 6683	Cap:Side Fence	83 - 14

Part No.	Description	Page and Index No.
B890 6683	Cap:Side Fence	111 - 14
B890 6684	Stopper:Side Fence	113 - 6
B890 6685	Bushing:Side Fence	113 - 8
B890 6686	Cover:Exit:Lower	111 - 11
B890 6905	Sheet:Guide Plate:Reverse:Lower	95 - 23
B890 6932	End Fence	117 - 30
B890 6933	Base:Tray	117 - 32
B890 6934	Cover:Tray:Inner Back	83 - 11
B890 6935	Cover:Tray:Front	83 - 12
B890 6936	Bracket:DC Stepper Motor	117 - 20
B890 6937	Synchronous Belt:60S5M1000	117 - 6
B890 6938	Bracket:Tightener:Rising Tray:Ass'y	117 - 3
B890 6949	Stay:Rising Tray:Large	117 - 31
B890 6950	Stay:Rising Tray:Small	117 - 33
B890 6951	Guard:Harness:Photointerruptor	117 - 10
B890 6952	Shaft:Drive:Rising Tray	117 - 17
B890 6953	Guard:Harness	117 - 29
B890 8604	Operating Instructions:NA:FD6500B	3 - 13

Part No.	Description	Page and Index No.
A079 4914	Idle Roller - Gate Belt	117 - 2
A174 3946	Arm Bushing	43 - 31
A174 3946	Arm Bushing	25 - 8
A174 3946	Arm Bushing	57 - 6
A174 3946	Arm Bushing	9 - 16
A174 3946	Arm Bushing	27 - 15
A174 3946	Arm Bushing	21 - 16
A174 3946	Arm Bushing	29 - 4
A174 3946	Arm Bushing	19 - 4
A174 4387	Gate Pawl Arm	25 - 11
A228 1100	Idler Pulley Z20	37 - 12
A228 1113	Gear Z46/17	117 - 18
A257 4632	Timing Pulley	19 - 12
A257 4632	Timing Pulley	31 - 13
A257 4632	Timing Pulley	29 - 6
A257 4632	Timing Pulley	9 - 20
A257 4632	Timing Pulley	25 - 5
A257 4632	Timing Pulley	57 - 20
A257 4632	Timing Pulley	27 - 8
A257 4650	Tightener Pulley	35 - 8
A257 4650	Tightener Pulley	121 - 15
A257 4650	Tightener Pulley	43 - 19
A257 6429	Pressure Spring	79 - 4
A257 6429	Pressure Spring	3 - 34
A257 6429	Pressure Spring	43 - 17
A257 6429	Pressure Spring	45 - 14
A257 6429	Pressure Spring	35 - 9
A257 6429	Pressure Spring	57 - 16
A257 6429	Pressure Spring	113 - 5
A257 6429	Pressure Spring	69 - 21
A257 6429	Pressure Spring	71 - 9
A257 6429	Pressure Spring	73 - 7
A257 6429	Pressure Spring	121 - 8
A257 6429	Pressure Spring	75 - 24
A259 1158	Pulley Flange	69 - 12

Part No.	Description	Page and Index No.
A259 1158	Pulley Flange	71 - 3
A259 1158	Pulley Flange	73 - 4
A259 1158	Pulley Flange	119 - 15
A259 1158	Pulley Flange	121 - 6
A259 1158	Pulley Flange	57 - 15
A259 1158	Pulley Flange	43 - 20
A259 1158	Pulley Flange	87 - 32
A259 1158	Pulley Flange	45 - 16
A259 3163	Spacer - 4.5x6mm	111 - 18
A294 3336	Cam Shaft	95 - 20
A294 4669	Cushion	123 - 9
A294 4669	Cushion	99 - 5
A297 1261	Stopper:Cover	17 - 6
A300 3812	Spacer - 6x22x1.5	119 - 2
A300 3812	Spacer - 6x22x1.5	73 - 16
A300 3812	Spacer - 6x22x1.5	71 - 25
A300 3812	Spacer - 6x22x1.5	79 - 6
A300 3812	Spacer - 6x22x1.5	57 - 13
A376 2524	Timing Pulley - 60Z/20Z	69 - 14
A379 3316	Shift Guide Roller	117 - 26
A469 3350	Guide Stud	93 - 8
A566 2126	Timing Pulley - 40Z	71 - 7
A610 2220	Hinge Shaft	101 - 15
A697 3115	Rear Side Plate - Shift Tray	117 - 25
A697 3150	Fixing Plate - Timing Belt	69 - 17
A697 3150	Fixing Plate - Timing Belt	117 - 24
A697 3180	Pulley - 18T	117 - 7
A697 3185	Pulley - 18T	117 - 13
A806 4261	Spring Belt Guide Roller	101 - 12
B010 1359	Operating Instructions Holder	3 - 14
B010 4458	Gate Pawl Plate	27 - 1
B010 6067	Right Guide - Side Fence	3 - 22
B010 6072	Spring Plate - Side Fence Guide	3 - 24
B010 6074	Left Guide - Side Fence	3 - 19
B017 1755	Spring - 16x4.5mm	123 - 23

Part No.	Description	Page and Index No.
B023 4570	Gear - 31Z	45 - 17
B023 4570	Gear - 31Z	23 - 7
B023 4570	Gear - 31Z	9 - 23
B023 4609	Timing Belt - 237 S3M	93 - 16
B023 6175	Gear - 28Z	71 - 21
B048 4552	Operation Cover Panel	5 - 14
B079 1144	Timing Pulley:Paddle	111 - 17
B079 1144	Timing Pulley:Paddle	107 - 16
B079 1144	Timing Pulley:Paddle	121 - 13
B079 1144	Timing Pulley:Paddle	73 - 6
B079 1144	Timing Pulley:Paddle	75 - 4
B079 1144	Timing Pulley:Paddle	105 - 6
B104 1299	Right Hinge Ass'y	115 - 6
B104 1302	Left Hinge	115 - 5
B104 1302	Left Hinge	17 - 15
B104 1302	Left Hinge	123 - 19
B104 1303	Hinge Shaft	11 - 14
B104 1303	Hinge Shaft	85 - 7
B104 2641	Safety Switch Pawl	109 - 12
B104 2875	Middle Transport Roller Bushing	31 - 5
B104 4331	Arm Bracket Ass'y	97 - 1
B104 4331	Arm Bracket Ass'y	3 - 31
B104 4331	Arm Bracket Ass'y	109 - 1
B104 4331	Arm Bracket Ass'y	55 - 2
B125 4722	Sheet:Side Fence:Small	41 - 23
B125 4751	Shaft:Driven	31 - 18
B125 4751	Shaft:Driven	29 - 26
B125 4751	Shaft:Driven	19 - 27
B125 4751	Shaft:Driven	21 - 9
B125 4751	Shaft:Driven	25 - 26
B125 4751	Shaft:Driven	7 - 12
B125 4752	Roller:Driven	7 - 11
B125 4752	Roller:Driven	21 - 8
B125 4752	Roller:Driven	29 - 25
B125 4752	Roller:Driven	25 - 25

Part No.	Description	Page and Index No.
B125 4752	Roller:Driven	19 - 26
B125 4752	Roller:Driven	31 - 17
B125 4817	Sheet:Magnet Catch	27 - 7
B125 4829	Sheet:Block Light:5	109 - 16
B125 5643	Ground Wire:Scanner Unit:3	15 - 2
B125 5643	Ground Wire:Scanner Unit:3	27 - 18
B125 5683	Ground Wire:Pressure Plate	27 - 19
B125 5683	Ground Wire:Pressure Plate	15 - 3
B132 1226	Holder:Stand	49 - 11
B132 1226	Holder:Stand	3 - 1
B132 1280	Pulley:Tightener:Drive: Around The Photoconductor:Press Fit	71 - 2
B132 1280	Pulley:Tightener: Drive:Around The Photoconductor:Press Fit	73 - 13
B132 1280	Pulley:Tightener:Drive: Around The Photoconductor:Press Fit	75 - 25
B132 6655	Stepper Motor:Paper Feed Unit:Ass'y	63 - 2
B132 6655	Stepper Motor:Paper Feed Unit:Ass'y	117 - 21
B188 6064	Channel:Original Table	3 - 25
B188 6066	Side Fence:Original:Right:Unit	3 - 21
B188 6068	Sheet:Side Fence:Right	3 - 23
B188 6073	Side Fence:Original:Left:Unit	3 - 18
B188 6075	Sheet:Side Fence:Left	3 - 20
B188 6196	Gasket:Guide Plate:Upper Front	51 - 3
B223 2665	Spring:Cover:Manual Feed	119 - 6
B223 2665	Spring:Cover:Manual Feed	121 - 17
B223 5863	Gasket:EGUN1-0205:L23	53 - 8
B234 2092	Terminal Pin	53 - 21
B234 2092	Terminal Pin	67 - 14
B234 3741	DC Solenoid	123 - 24
B238 4483	Screw	9 - 2
B238 4483	Screw	77 - 6
B238 4483	Screw	75 - 13
B257 4354	Spacer - Fusing Entrance Guide Plate	7 - 21
B257 4354	Spacer - Fusing Entrance Guide Plate	29 - 30

Part No.	Description	Page and Index No.
B257 5100	PCB:Operation Panel	5 - 27
B257 5496	Power Supply Cord:230V	47 - 8
B275 1670	Guard Burring	53 - 14
B275 1670	Guard Burring	29 - 19
B286 5767	Power Supply Cord - 120V	47 - 8
B312 3100	Shift Tray Base	117 - 27
B352 3170	Spacer	35 - 30
B352 3170	Spacer	37 - 18
B352 3170	Spacer	75 - 7
B472 3535	Gear:Z45	117 - 15
B472 3536	Spacer:Shaft:Shift Tray	117 - 8
B472 3711	Bracket:Positioning Sensor:Shift Tray:Lower	117 - 14
B478 4134	Compression Spring:Plate:Moveable	99 - 13
B624 1632	Switchback Roller Shaft	101 - 13
B624 2053	Contact Point Bracket Ass'y	95 - 2
B624 2053	Contact Point Bracket Ass'y	111 - 5
B624 3046	DC Solenoid Cushion	33 - 12
B629 4680	Release Lever	99 - 19
B641 4463	Exit Guide Plate	83 - 13
B652 1674	Timing Belt:B40S2M170	71 - 20
B652 2404	Compression Spring:3.1N	95 - 9
B663 5113	Gasket:20	51 - 13
B700 2453	Guide:Turn	105 - 12
B700 2453	Guide:Turn	109 - 10
B700 2453	Guide:Turn	95 - 22
B700 2453	Guide:Turn	103 - 13
B700 2453	Guide:Turn	97 - 12
B700 2453	Guide:Turn	65 - 1
B700 2625	Roller:MM28	59 - 5
B700 4429	Gear:Pulley:17Z/48T	117 - 22
B700 4867	Screw:Contact Point:M3	113 - 7
B700 4867	Screw:Contact Point:M3	69 - 3
B706 1859	Screw:Slider:Lock	63 - 9
B789 4332	Pulley - 34T	91 - 9
B793 4244	Timing Pulley - 20T	69 - 19

Part No.	Description	Page and Index No.
B793 4244	Timing Pulley - 20T	119 - 12
B830 1135	Screw	53 - 19
B830 1135	Screw	119 - 4
B830 1135	Screw	67 - 10
B830 1135	Screw	61 - 1
B830 1135	Screw	21 - 1
B830 1135	Screw	125 - 1
B830 1135	Screw	19 - 37
B830 1135	Screw	17 - 3
B830 1135	Screw	121 - 14
B830 1135	Screw	123 - 18
B830 1135	Screw	91 - 4
B830 1135	Screw	51 - 5
B830 1135	Screw	103 - 2
B830 1135	Screw	49 - 16
B830 1135	Screw	117 - 4
B830 1135	Screw	3 - 36
B830 1135	Screw	115 - 1
B830 1135	Screw	23 - 11
B830 1135	Screw	81 - 9
B830 1516	Timing Belt - 60S3M306	119 - 14
B830 2142	Timing Belt - 60S3M162	91 - 5
B834 3214	Gear - 30Z	21 - 25
B851 1122	Screw:Round Point:M4x7	25 - 31
B889 1143	Bracket:Pressure:Transport:Lower	29 - 28
B889 1156	Cover:Heater:Front	39 - 12
B889 1157	Bracket:Switch:Right	47 - 4
B889 1158	Inner Cover:Rear	31 - 21
B889 1160	Guide Plate:Entrance:Upper	25 - 20
B889 1161	Bracket:Pressure:Transport	21 - 5
B889 1161	Bracket:Pressure:Transport	7 - 7
B889 1161	Bracket:Pressure:Transport	25 - 21
B889 1161	Bracket:Pressure:Transport	19 - 23
B889 1162	Guide Plate:Transport:Rear:2	29 - 29
B889 1163	Guide Plate:Transport:Rear:3	29 - 15

Part No.	Description	Page and Index No.
B889 1164	Guide Plate:Entrance:Lower	25 - 18
B889 1165	Guide Plate:Exit:Lower	27 - 4
B889 1166	Guide Plate:Transport:Front Upper	29 - 27
B889 1167	Guide Plate:Transport:Front Upper:2	29 - 14
B889 1168	Guide Plate:Transport:Rear:1	27 - 2
B889 1169	Bracket:Guide Plate	29 - 11
B889 1170	Bracket:Magnet Catch	25 - 2
B889 1170	Bracket:Magnet Catch	9 - 11
B889 1170	Bracket:Magnet Catch	57 - 2
B889 1170	Bracket:Magnet Catch	89 - 1
B889 1170	Bracket:Magnet Catch	105 - 8
B889 1170	Bracket:Magnet Catch	29 - 12
B889 1170	Bracket:Magnet Catch	87 - 23
B889 1171	Bracket:Cover:Micro Switch	17 - 4
B889 1173	Guide Plate:Micro Switch	47 - 23
B889 1174	Bracket:Cover:Push Switch	17 - 10
B889 1175	Bracket:Plate:Cover	47 - 10
B889 1175	Bracket:Plate:Cover	13 - 8
B889 1176	Bracket:Main Switch	47 - 24
B889 1177	Guide:Exchange Powl	25 - 19
B889 1178	Bracket:Sensor:1	27 - 14
B889 1178	Bracket:Sensor:1	43 - 28
B889 1179	Bracket:Sensor:2	29 - 1
B889 1180	Bracket:Exchange Powl:Right	25 - 17
B889 1181	Bracket:Exchange Powl:Left	25 - 15
B889 1184	Guide:Exit:Upper	27 - 24
B889 1185	Guard:Cover:Upper	45 - 22
B889 1186	Grip:Guide Plate	29 - 21
B889 1188	Grip:Guide Plate:Upper	25 - 29
B889 1189	Bracket:Sensor:Lower Rear	43 - 37
B889 1190	Bracket:Sensor:Lower:2	43 - 41
B889 1191	Shielding Plate:Lower	43 - 35
B889 1192	Bracket:Sensor:Lower Front	43 - 36
B889 1193	Bracket:Photointerruptor:Radiate	41 - 7
B889 1193	Bracket:Photointerruptor:Radiate	39 - 3

Part No.	Description	Page and Index No.
B889 1195	Guard:Guide Plate	29 - 16
B889 1196	Guide Plate:Paper Crimp:Upper Front:2	39 - 5
B889 1197	Stay:Paper Crimp:Open and Close:Upper Front:2	39 - 4
B889 1198	Bracket:Guide Plate:Paper Crimp:Upper Front	39 - 9
B889 1199	Pawl:Drive	25 - 13
B889 1212	Roller:Driven:Exit:Middle	55 - 5
B889 1212	Roller:Driven:Exit:Middle	41 - 18
B889 1213	Guide Plate:Lower Middle:2	35 - 25
B889 1214	Bracket:Guide Plate	27 - 6
B889 1214	Bracket:Guide Plate	41 - 2
B889 1214	Bracket:Guide Plate	31 - 20
B889 1215	Guide Plate:Arm:2	43 - 10
B889 1216	Roller:Pressure	43 - 2
B889 1218	Arm:Roller:Middle	43 - 4
B889 1219	Guide Plate:Arm	43 - 5
B889 1220	Shaft:Contact Point	43 - 7
B889 1221	Shaft:Pressure	43 - 3
B889 1222	Bracket:Pressure:Middle	43 - 9
B889 1223	Guide Plate:Lower Front	39 - 10
B889 1224	Guide Plate:Lower Middle	35 - 22
B889 1225	Guide Plate:Lower Rear	41 - 3
B889 1229	Guide Plate:Upper Rear	41 - 12
B889 1230	Bracket:Pressure:Transport:3	41 - 21
B889 1231	Discharge Brush:1	41 - 4
B889 1231	Discharge Brush:1	39 - 6
B889 1232	Discharge Brush:2	39 - 7
B889 1232	Discharge Brush:2	19 - 29
B889 1232	Discharge Brush:2	41 - 5
B889 1235	Shaft:Exit	55 - 7
B889 1236	Roller:Driven:Exit	55 - 6
B889 1236	Roller:Driven:Exit	41 - 19
B889 1238	Bracket:Sensor	31 - 3
B889 1239	Bracket:Bushing	31 - 4
B889 1240	Bracket:Pressure:Transport:2	31 - 19
B889 1241	Bracket:Guide Plate:1	31 - 2

Part No.	Description	Page and Index No.
B889 1242	Bracket:Guide Plate:2	31 - 1
B889 1243	Guide Plate:Transport:Lower	31 - 8
B889 1248	Bracket:Pressure:Roller	91 - 3
B889 1249	Tension Spring:Roller	43 - 8
B889 1250	Arm:Roller:Lower:Right Front	37 - 3
B889 1250	Arm:Roller:Lower:Right Front	35 - 4
B889 1252	Timing Pulley:34T	35 - 29
B889 1253	Timing Belt:B80DS3M444	37 - 14
B889 1255	Guide Plate:Idler	37 - 21
B889 1260	Timing Pulley:44T	35 - 10
B889 1261	Timing Belt:B120S3M273	35 - 11
B889 1262	Bracket:Tightener:Left and Right	35 - 7
B889 1262	Bracket:Tightener:Left and Right	121 - 16
B889 1265	Stepper Motor DC2.3V 6.9W	45 - 1
B889 1265	Stepper Motor DC2.3V 6.9W	73 - 11
B889 1265	Stepper Motor DC2.3V 6.9W	119 - 7
B889 1265	Stepper Motor DC2.3V 6.9W	121 - 23
B889 1265	Stepper Motor DC2.3V 6.9W	71 - 15
B889 1266	Timing Pulley:24T/44T	87 - 31
B889 1266	Timing Pulley:24T/44T	43 - 22
B889 1266	Timing Pulley:24T/44T	71 - 6
B889 1266	Timing Pulley:24T/44T	73 - 2
B889 1266	Timing Pulley:24T/44T	119 - 16
B889 1267	Timing Belt:B80S3M294	43 - 21
B889 1268	Timing Belt:B120S3M318	35 - 13
B889 1271	Bracket:Tightener	43 - 33
B889 1275	Bracket:Stepper Motor	121 - 27
B889 1275	Bracket:Stepper Motor	43 - 15
B889 1275	Bracket:Stepper Motor	73 - 9
B889 1275	Bracket:Stepper Motor	119 - 9
B889 1275	Bracket:Stepper Motor	45 - 3
B889 1276	Timing Pulley:33T	43 - 24
B889 1276	Timing Pulley:33T	75 - 27
B889 1276	Timing Pulley:33T	105 - 5
B889 1277	Timing Belt:B60S3M360	35 - 12

Part No.	Description	Page and Index No.
B889 1280	Roller:Paper Crimp	35 - 16
B889 1281	Guide Plate:Drive	43 - 18
B889 1289	Roller:Paper Crimp:80	35 - 17
B889 1290	Shaft	41 - 16
B889 1292	Spring	41 - 15
B889 1292	Spring	55 - 3
B889 1293	Guide:Exit:1	41 - 13
B889 1294	Guide:Exit:2	41 - 22
B889 1295	Bracket:Arm:1	35 - 14
B889 1295	Bracket:Arm:1	37 - 10
B889 1296	Arm:Roller:Lower:Left Front	37 - 4
B889 1296	Arm:Roller:Lower:Left Front	35 - 3
B889 1298	Shaft:Exit:L	41 - 10
B889 1299	Guide:Paper Crimp:Lower	39 - 15
B889 1309	Guide:Paper Crimp	33 - 10
B889 1320	Shaft:Drive:Guide	33 - 17
B889 1321	Torque Limiter:Guide	33 - 13
B889 1322	Timing Pulley:28T	33 - 15
B889 1322	Timing Pulley:28T	87 - 27
B889 1323	Gear:Z26	33 - 16
B889 1323	Gear:Z26	87 - 16
B889 1324	Timing Belt:B60S3M285	45 - 6
B889 1325	Flange	87 - 15
B889 1325	Flange	33 - 14
B889 1328	Bracket:Sensor:1	33 - 19
B889 1329	Bracket:Sensor:2	33 - 18
B889 1330	Bracket:Sensor:Guide:1	89 - 4
B889 1331	Bracket:Sensor:Guide:2	89 - 3
B889 1332	Bracket:Guide:1	33 - 8
B889 1332	Bracket:Guide:1	89 - 23
B889 1335	Bracket:Guide:2	33 - 9
B889 1335	Bracket:Guide:2	87 - 34
B889 1337	Arm:Guide:Left	89 - 19
B889 1337	Arm:Guide:Left	33 - 4
B889 1337	Arm:Guide:Left	87 - 11

Part No.	Description	Page and Index No.
B889 1338	Arm:Guide:Right	89 - 20
B889 1338	Arm:Guide:Right	87 - 12
B889 1338	Arm:Guide:Right	33 - 5
B889 1339	Gear:Z251	33 - 3
B889 1339	Gear:Z251	89 - 18
B889 1339	Gear:Z251	87 - 9
B889 1341	Spacer:Guide:Left	33 - 7
B889 1342	Spacer:Guide:Right	33 - 6
B889 1344	Guide Plate:Paper Crimp:Lower Middle:3	35 - 24
B889 1345	Guide Plate:Paper Crimp:Lower Middle:4	35 - 23
B889 1346	Stay:Paper Crimp:Lower Middle:2	35 - 26
B889 1347	Guide Plate:Guide Plate:Middle	35 - 20
B889 1348	Collar:Roller	35 - 27
B889 1352	Spacer:Guide Plate:Paper Crimp	35 - 28
B889 1354	Photointerruptor:Paper Crimp	43 - 40
B889 1354	Photointerruptor:Paper Crimp	41 - 9
B889 1354	Photointerruptor:Paper Crimp	39 - 1
B889 1355	Stopper:Guide	37 - 24
B889 1356	Roller:Driven	31 - 23
B889 1359	Shielding Plate:Sensor	39 - 14
B889 1359	Shielding Plate:Sensor	43 - 43
B889 1359	Shielding Plate:Sensor	41 - 8
B889 1367	Guide:Exit:3	41 - 14
B889 1370	Arm:Pressure:Roller:1	37 - 2
B889 1370	Arm:Pressure:Roller:1	35 - 1
B889 1371	Arm:Pressure:Roller:2	37 - 1
B889 1371	Arm:Pressure:Roller:2	35 - 2
B889 1372	Timing Pulley:Idler:Lower	91 - 10
B889 1372	Timing Pulley:Idler:Lower	37 - 16
B889 1373	Timing Belt:60S3M198	37 - 19
B889 1374	Timing Pulley:Roller:Upper	35 - 19
B889 1375	Timing Pulley:Roller:Lower	37 - 17
B889 1376	Stopper:Guide:Right	37 - 13
B889 1377	Timing Pulley:Idler:Upper	37 - 20
B889 1378	Bracket:Tightener:Roller:Upper:Ass'y	37 - 23

Part No.	Description	Page and Index No.
B889 1381	Bracket:Tightener:Roller:Lower:Ass'y	37 - 7
B889 1384	Bracket:Tightener:Roller:Middle Lower:Peen	37 - 11
B889 1387	Tension Spring:Pressure:Roller	35 - 15
B889 1387	Tension Spring:Pressure:Roller	37 - 15
B889 1390	Guide:Exit:Lower	41 - 24
B889 1391	Stopper:Guide:Upper	31 - 22
B889 1398	Bracket:Sensor:Connecting	21 - 15
B889 1399	Bracket:Cover:Coupling	13 - 5
B889 1399	Bracket:Cover:Coupling	15 - 1
B889 1421	Bracket:Motor	45 - 20
B889 1424	Timing Belt:B60S3M573	45 - 18
B889 1426	Knob:Pick-up Paper Jam	123 - 21
B889 1426	Knob:Pick-up Paper Jam	49 - 18
B889 1427	Bracket:Tightener	45 - 13
B889 1427	Bracket:Tightener	121 - 9
B889 1427	Bracket:Tightener	3 - 35
B889 1430	Guide Plate:Drive:Upper	45 - 7
B889 1431	Gear:Timing Pulley:34Z/29T	9 - 24
B889 1431	Gear:Timing Pulley:34Z/29T	23 - 2
B889 1431	Gear:Timing Pulley:34Z/29T	45 - 8
B889 1431	Gear:Timing Pulley:34Z/29T	3 - 39
B889 1432	Timing Belt:B60S3M771	45 - 9
B889 1433	Timing Belt:B60S3M492	45 - 10
B889 1435	Spacer:21.2	9 - 22
B889 1435	Spacer:21.2	31 - 12
B889 1435	Spacer:21.2	57 - 21
B889 1435	Spacer:21.2	25 - 4
B889 1435	Spacer:21.2	29 - 5
B889 1436	Compression Spring:Middle	31 - 15
B889 1440	Transport Roller:Drive	31 - 9
B889 1440	Transport Roller:Drive	9 - 3
B889 1440	Transport Roller:Drive	25 - 9
B889 1440	Transport Roller:Drive	19 - 16
B889 1440	Transport Roller:Drive	29 - 8
B889 1440	Transport Roller:Drive	27 - 16

Part No.	Description	Page and Index No.
B889 1440	Transport Roller:Drive	21 - 18
B889 1445	Transport Roller:Drive:Exit	43 - 32
B889 1446	Guide:Exit:Upper	25 - 32
B889 1450	Sheet:Block Light	29 - 34
B889 1452	Guide:Entrance:Lower	3 - 16
B889 1453	Seal:Entrance:Lower	3 - 17
B889 1519	Guide Plate:Connecting:Lower	21 - 2
B889 1521	Bracket:Guide Plate	21 - 3
B889 1522	Guide Plate:Connecting:Upper	21 - 4
B889 1524	Stopper:Joint Unit:Right	23 - 15
B889 1532	Bracket:Contact Point:Right	23 - 13
B889 1533	Bracket:Contact Point:Left	23 - 12
B889 1536	Stopper:Joint Unit	23 - 10
B889 1540	Lever:Lock	23 - 4
B889 1541	Shaft:Lever	23 - 5
B889 1549	Cover:Connecting:Lower	23 - 19
B889 1550	Cover:Connecting:Upper	11 - 17
B889 1551	Drum Stay:Soft Landing	21 - 23
B889 1554	Cover:Connecting:Right Lower	13 - 10
B889 1558	Bracket:Safety Switch	23 - 18
B889 1559	Cover:Connecting:Left Lower	17 - 1
B889 1562	Shaft:Right	21 - 22
B889 1563	Oil Damper	21 - 21
B889 1564	Stopper:Shaft	23 - 14
B889 1565	Bracket:Connecting:Left:Ass'y	23 - 8
B889 1568	Bracket:Connecting:Right:Ass'y	23 - 9
B889 1582	Bracket:Cover:Connecting:Lower	21 - 17
B889 1657	Bracket:Coupling	3 - 6
B889 1658	Shaft:Coupling	3 - 7
B889 1659	Bracket:Coupling:Fix	3 - 2
B889 1661	Bracket:2:Coupling:Fix	3 - 3
B889 1678	Decal:Paper Jam:1	3 - 30
B889 1678	Decal:Paper Jam:1	25 - 30
B889 1678	Decal:Paper Jam:1	17 - 18
B889 1678	Decal:Paper Jam:1	19 - 33

Part No.	Description	Page and Index No.
B889 1678	Decal:Paper Jam:1	29 - 22
B889 1678	Decal:Paper Jam:1	15 - 7
B889 1678	Decal:Paper Jam:1	27 - 23
B889 1685	Decal:Switch	11 - 8
B889 1687	Decal:Dehumidifier:Heater:Switch	11 - 11
B889 1693	Bracket:Interface	3 - 11
B889 1694	Cover:Interface:Scanner:Division	3 - 5
B889 1706	Guard:IC	43 - 12
B889 1707	Cover:Power Supply Unit	43 - 42
B889 1708	Cover:Leak Breaker	47 - 1
B889 1710	Bracket:Power Supply Cord	47 - 7
B889 1711	Bracket:IC:J	47 - 21
B889 1712	Bracket:PSU:Front	47 - 16
B889 1713	Bracket:PSU:Rear	17 - 7
B889 1713	Bracket:PSU:Rear	47 - 15
B889 1714	Bracket:Cover:PSU	43 - 26
B889 1715	Guard:Power Supply Unit	43 - 34
B889 1717	Bracket:PSU	47 - 11
B889 1903	Cap:Cover	15 - 8
B889 1903	Cap:Cover	53 - 5
B889 1903	Cap:Cover	13 - 1
B889 1904	Bracket:Contact Point	27 - 20
B889 1904	Bracket:Contact Point	15 - 4
B889 1905	Cover:Open and Close	27 - 3
B889 1905	Cover:Open and Close	53 - 6
B889 1905	Cover:Open and Close	13 - 2
B889 1905	Cover:Open and Close	15 - 9
B889 1906	Grip:Cover:Open and Close	15 - 6
B889 1906	Grip:Cover:Open and Close	11 - 13
B889 1906	Grip:Cover:Open and Close	27 - 22
B889 1906	Grip:Cover:Open and Close	85 - 9
B889 1906	Grip:Cover:Open and Close	53 - 3
B889 1909	Cover:Grip	13 - 3
B889 1909	Cover:Grip	15 - 10
B889 1910	Bracket:Fix:Cover	13 - 4

Part No.	Description	Page and Index No.
B889 1910	Bracket:Fix:Cover	15 - 11
B889 1912	Shaft:Contact Point	27 - 21
B889 1912	Shaft:Contact Point	15 - 5
B889 1914	Inner Cover:Cover:Open and Close	13 - 9
B889 1924	Bracket:Cover:Front Upper	13 - 12
B889 1953	Cover:Upper Rear	47 - 14
B889 1954	Cover:Left and Right:Lower	11 - 4
B889 1955	Cover:Left:Upper Lower	11 - 6
B889 1956	Cover:Left Middle	11 - 9
B889 1957	Cover:Left and Right:Upper	11 - 5
B889 1963	Cover:Right Middle	11 - 10
B889 1964	Cover:Misfeed Removal	85 - 8
B889 1964	Cover:Misfeed Removal	11 - 15
B889 1965	Receive Plate:Magnet Catch	11 - 12
B889 1976	Film:Cover:Open and Close:Large	27 - 25
B889 1979	Guard:Inner Cover	17 - 16
B889 1980	Cover:Front Upper:2	13 - 7
B889 1981	Holder:Film	11 - 7
B889 1982	Wire:Stopper:Guide Plate	29 - 35
B889 5502	Harness:AC:1	47 - 2
B889 5503	Harness:AC:Dehumidifier:Heater	39 - 13
B889 5504	Harness:AC	47 - 13
B889 5515	Harness:DC:Exhaust:Change	27 - 12
B889 5524	Harness:DC:Roller:Front:Photo	43 - 38
B889 5525	Harness:DC:Roller:Rear:Photo	43 - 39
B889 5526	Harness:DC:Roller:Front:Radiate	39 - 2
B889 5527	Harness:DC:Roller:Rear:Radiate	41 - 11
B889 5529	Harness:DC:Paper Crimp:Exit	43 - 29
B889 5542	Harness:DC:Paper Crimp	29 - 2
B889 5543	Harness:DC:Paper Crimp:Entrance	31 - 7
B889 5547	Harness:DC:Push Switch	53 - 13
B889 5547	Harness:DC:Push Switch	61 - 9
B889 5547	Harness:DC:Push Switch	123 - 26
B889 5547	Harness:DC:Push Switch	29 - 17
B889 5547	Harness:DC:Push Switch	17 - 13

Part No.	Description	Page and Index No.
B889 5547	Harness:DC:Push Switch	9 - 17
B889 5549	Harness:DC:Entrance Sensor	21 - 13
B889 5552	Harness:DC:Push Switch:1	17 - 12
B889 5553	Harness:DC:Push Switch:2	17 - 14
B889 5591	Harness:DC:Interface	3 - 12
B889 5661	Gasket:STGN18-10R	13 - 13
B889 5662	Ground Wire:Power Supply Unit:Braided Cable	47 - 28
C203 5135	Bushing - 10x14x5.9	117 - 9
C257 1065	Spacer	11 - 21
D046 2787	Cover:Side Plate	17 - 2
D300 2205	Stepper Motor - DC 21.6W	69 - 16
D333 5525	Harness:DC:Sensor	9 - 8
D333 5546	Harness:DC:Operation Panel	5 - 12
D333 5555	Harness:DC:Main	9 - 14
D333 5580	Harness:DC:Original Sensor:DOM/EU	9 - 13
D333 5581	Harness:DC:Original Sensor:NA	9 - 13
D333 7600	Bracket:Fix:Operation Panel	5 - 1
D333 7612	Bracket:1:Sensor:DOM/EU	9 - 15
D333 7613	Bracket:Left:Protect:Side Plate	9 - 7
D333 7614	Bracket:Right:Protect:Side Plate	9 - 6
D333 7615	Bracket:Frame	9 - 25
D333 7616	Magnet Catch Pleet:Left:Side Plate	7 - 19
D333 7617	Magnet Catch Pleet:Right:Side Plate	7 - 20
D333 7620	Cover:Bracket:Pressure	7 - 8
D333 7621	Guide Plate:Lower:DOM/EU	7 - 2
D333 7622	Guide Plate:Reverse:Inner	9 - 18
D333 7623	Guide Plate:Upper:DOM/EU	7 - 5
D333 7624	Bracket:Support:Guide Plate	7 - 3
D333 7625	Shaft:Support:Guide Plate	7 - 4
D333 7625	Shaft:Support:Guide Plate	5 - 4
D333 7626	Shaft:Stopper	7 - 6
D333 7629	Guide Plate:Reverse:Outer	7 - 17
D333 7630	Bracket:Support:Guide Plate	7 - 15
D333 7633	Bracket:Contact Point:Cover	5 - 18
D333 7633	Bracket:Contact Point:Cover	7 - 16

Part No.	Description	Page and Index No.
D333 7636	Arm:Stopper:Left	5 - 23
D333 7638	Arm:Stopper:Right	5 - 22
D333 7640	Spacer:Magnet Catch	5 - 5
D333 7641	Guide Plate:Manual Feed:Upper	5 - 3
D333 7642	Bracket:Manual Feed Table	5 - 15
D333 7643	Guide Plate:Bracket	5 - 17
D333 7644	Shaft:Bracket:Manual Feed Table	5 - 16
D333 7645	Cover:Upper Rear:Ass'y	5 - 11
D333 7650	Guide Plate:Reverse:Outer	5 - 19
D333 7655	Cover:Right	3 - 28
D333 7658	Cover:Left	3 - 29
D333 7661	Cover:Original Table:Lower	9 - 1
D333 7662	Original Table	3 - 26
D333 7664	Bracket:2:Cover:Grip	5 - 9
D333 7665	Cushion:Guide	83 - 6
D333 7665	Cushion:Guide	3 - 27
D333 7666	Gear:34	3 - 15
D333 7667	Timing Belt:B60S3M414	9 - 21
D333 7668	Cover:Upper Front:Ass'y	5 - 25
D333 7670	Guide:Cover:Upper Front	5 - 26
D333 7673	Bracket:1:Sensor:NA	9 - 15
D333 7674	Bracket:2:Sensor:NA	9 - 26
D333 7675	Guide Plate:Manual Feed:Lower:NA	7 - 2
D333 7676	Guide Plate:Manual Feed:Upper:NA	7 - 5
D333 7677	Original Table:Printing:NA	3 - 26
D333 7678	Decal:Operation Panel:NA	3 - 32
D333 7683	Decal:Operation Panel	3 - 32
D333 7684	Operation Panel:NA-B:Ass'y	5 - 13
D333 7688	Operation Sub-unit:EU-B:Ass'y	5 - 13
D333 7692	Bracket:Stopper	7 - 18
D333 7692	Bracket:Stopper	5 - 24
D333 7699	Decal:Paper Jam:Manual Feed Unit	3 - 33
D333 7699	Decal:Paper Jam:Manual Feed Unit	5 - 8
D355 4598	Roller:Slider	11 - 16
D407 7710	Cover:Connecting:Left Sideways:BEL	19 - 20

Part No.	Description	Page and Index No.
D407 7711	Cover:Connecting:Right Sideways:BEL	19 - 19
D407 7712	Bracket:Connecting:Left:BEL	19 - 14
D407 7713	Bracket:Connecting:Right:BEL	19 - 15
D407 7714	Bracket:Install:Cover:Connecting	19 - 21
D407 7716	Bracket:Bearing	19 - 3
D407 7717	Guide Plate:Connecting:Upper:BEL	19 - 22
D407 7718	Guide Plate:Connecting:Lower:BEL	19 - 17
D407 7720	Guide:Connecting:Entrance:Upper	19 - 35
D407 7721	Guide:Connecting:Exit	11 - 22
D407 7722	Cover:Connecting:Upper:BEL	19 - 18
D407 7724	Tightener:Ass'y	19 - 8
D407 7727	Arm:Lock	19 - 1
D407 7728	Shaft:Lock:Contact Point	19 - 5
D407 7729	Shaft:Lock:Fix	11 - 24
D407 7730	Bracket:Lock:Fix	11 - 23
D407 7731	Guide:Connecting:Entrance:Upper:Right	19 - 34
D407 7732	Guide:Connecting:Entrance:Upper:Left	19 - 36
D407 7733	Guide:Connecting:Entrance:Upper	19 - 32
D407 7740	Shaft:Arm:Connecting	11 - 20
D407 7741	Adjusting Plate:Arm:Lower:Connecting	11 - 18
D407 7742	Guide:Connecting:Guide Plate:Lower	19 - 38
D407 7751	Arm:Connecting	23 - 25
D407 7752	Bracket:Arm:Lower:Connecting	11 - 19
D407 7753	Cover:Arm:Connecting	23 - 24
D407 7754	Bracket:Protect	23 - 20
D407 7755	Bracket:Gas Spring:Lower	13 - 11
D407 7756	Bracket:Gas Spring:Arm:Upper	23 - 21
D407 7757	Shaft:Gas Spring:Upper	23 - 22
D407 7763	Gas Spring	23 - 23
D407 7766	Tension Spring:Connecting:20N	19 - 2
D407 7796	Guide:Middle:Connecting	19 - 31
D436 1244	Cover:Interface:Key Card	3 - 4
G020 5626	Push Switch	29 - 18
G020 5626	Push Switch	123 - 15
G020 5626	Push Switch	7 - 1

Part No.	Description	Page and Index No.
G020 5626	Push Switch	61 - 7
G020 5626	Push Switch	53 - 9
G020 5626	Push Switch	9 - 19
G020 5626	Push Switch	107 - 17
G020 5626	Push Switch	17 - 11
G024 4266	Compression Spring:Coating Bar	59 - 17
G028 1326	Spring:Tension	91 - 2
G070 4717	Pulley:Tightener:Press Fit	79 - 3
G070 4717	Pulley:Tightener:Press Fit	93 - 18
H072 2207	Guard	101 - 4
H072 2207	Guard	25 - 28
H072 2207	Guard	29 - 20
H072 2216	Compression Spring	71 - 16
H085 2140	Gear - Oil Damper : 2.0	21 - 24
J001 2818	Ring:DIA7	117 - 16

Part No.	Description	Page and Index No.
AA00 1190	Decal - Ground	47 - 6
AA00 1283	Decal - Noise Filter	47 - 3
AA02 1031	Magnetic Catch	5 - 6
AA04 3297	Timing Belt:S3M:150	75 - 10
AA04 3297	Timing Belt:S3M:150	121 - 10
AA04 3333	Timing Belt:60S2M168	117 - 23
AA04 3352	Timing Belt - B60S3M918	73 - 15
AA04 3599	Timing Belt - 60S3M588	69 - 11
AA04 3599	Timing Belt - 60S3M588	121 - 18
AA04 3600	Timing Belt - 60S3M378	105 - 28
AA04 3629	Timing Belt - 60S3M564	23 - 1
AA06 0589	Pressure Spring	123 - 6
AA06 0589	Pressure Spring	59 - 14
AA06 0842	Tension Spring	23 - 16
AA06 1006	Spring:Blade:Cleaning	19 - 7
AA06 1006	Spring:Blade:Cleaning	45 - 5
AA06 1006	Spring:Blade:Cleaning	43 - 16
AA06 3416	Spring - 3.4N	19 - 25
AA06 3416	Spring - 3.4N	21 - 6
AA06 3416	Spring - 3.4N	25 - 23
AA06 3416	Spring - 3.4N	29 - 23
AA06 3416	Spring - 3.4N	7 - 9
AA06 3956	Compression Spring:Driven:6.6N	31 - 14
AA06 6152	Tension Spring	37 - 9
AA06 6331	Duplex Entrance Spring	99 - 18
AA06 6366	Spring:Pressure Release	25 - 12
AA08 0049	Bushing - 10x18	101 - 23
AA08 0203	Bushing - 6mm	95 - 11
AA08 0203	Bushing - 6mm	97 - 9
AA08 0203	Bushing - 6mm	59 - 8
AA08 0203	Bushing - 6mm	103 - 10
AA08 0203	Bushing - 6mm	109 - 8
AA08 0203	Bushing - 6mm	55 - 4
AA08 0203	Bushing - 6mm	105 - 10
AA08 0203	Bushing - 6mm	41 - 20

Part No.	Description	Page and Index No.
AA08 0203	Bushing - 6mm	65 - 4
AA08 2051	Bushing - M8	69 - 8
AA08 2075	Bushing - M6	65 - 15
AA08 2093	Bushing:3xMM6MM8	5 - 21
AA08 2101	Bushing - 6x10x6	99 - 20
AA08 2101	Bushing - 6x10x6	25 - 14
AA08 2101	Bushing - 6x10x6	59 - 12
AA08 2101	Bushing - 6x10x6	77 - 1
AA08 2101	Bushing - 6x10x6	43 - 1
AA08 2101	Bushing - 6x10x6	113 - 12
AA08 2101	Bushing - 6x10x6	101 - 3
AA08 2101	Bushing - 6x10x6	63 - 1
AA08 2101	Bushing - 6x10x6	65 - 7
AA08 2101	Bushing - 6x10x6	95 - 1
AA08 2101	Bushing - 6x10x6	123 - 4
AA08 2104	Bushing - 8x12x7	105 - 4
AA08 2104	Bushing - 8x12x7	33 - 2
AA08 2104	Bushing - 8x12x7	31 - 10
AA08 2104	Bushing - 8x12x7	29 - 7
AA08 2104	Bushing - 8x12x7	43 - 25
AA08 2104	Bushing - 8x12x7	57 - 4
AA08 2104	Bushing - 8x12x7	27 - 9
AA08 2104	Bushing - 8x12x7	107 - 2
AA08 2104	Bushing - 8x12x7	111 - 2
AA08 2104	Bushing - 8x12x7	25 - 6
AA08 2104	Bushing - 8x12x7	23 - 3
AA08 2104	Bushing - 8x12x7	21 - 12
AA08 2104	Bushing - 8x12x7	87 - 10
AA08 2104	Bushing - 8x12x7	19 - 13
AA08 2104	Bushing - 8x12x7	89 - 17
AA08 2104	Bushing - 8x12x7	9 - 4
AA08 2135	Bushing - DIA4	31 - 16
AA08 2135	Bushing - DIA4	25 - 24
AA08 2135	Bushing - DIA4	21 - 7
AA08 2135	Bushing - DIA4	101 - 11

Part No.	Description	Page and Index No.
AA08 2135	Bushing - DIA4	29 - 24
AA08 2135	Bushing - DIA4	19 - 24
AA08 2135	Bushing - DIA4	7 - 10
AA08 2141	Bushing - 16x18x5	65 - 18
AA12 0118	Paper Feed Discharge Brush	41 - 6
AA12 0118	Paper Feed Discharge Brush	39 - 8
AA12 0118	Paper Feed Discharge Brush	27 - 17
AA12 0118	Paper Feed Discharge Brush	35 - 21
AA12 0122	Rear Exit Discharge Brush	55 - 10
AA12 0122	Rear Exit Discharge Brush	111 - 7
AA13 2152	Spacer - 8x20x1	79 - 13
AA13 2152	Spacer - 8x20x1	75 - 2
AA13 2152	Spacer - 8x20x1	57 - 18
AA14 3129	Shoulder Screw - Front Cover	55 - 1
AA14 3542	Screw:M3:DIA4x5.6	29 - 33
AA14 3542	Screw:M3:DIA4x5.6	43 - 6
AA14 3547	Hexagonal Bolt:M12x80	47 - 5
AA14 3547	Hexagonal Bolt:M12x80	83 - 10
AA14 3547	Hexagonal Bolt:M12x80	81 - 1
AA14 3555	Screw - M3x5	31 - 24
AA14 3562	Screw:M4:DIA6x1.2	67 - 2
AA14 3562	Screw:M4:DIA6x1.2	53 - 11
AA14 3569	Screw	21 - 19
AA14 3790	Screw:Contact Point	57 - 11
AA14 3790	Screw:Contact Point	75 - 21
AA14 3790	Screw:Contact Point	69 - 20
AA14 3790	Screw:Contact Point	73 - 8
AA14 3790	Screw:Contact Point	71 - 11
AA14 3790	Screw:Contact Point	37 - 8
AA14 3790	Screw:Contact Point	19 - 6
AA14 3790	Screw:Contact Point	17 - 9
AA14 3790	Screw:Contact Point	113 - 1
AA14 3790	Screw:Contact Point	23 - 17
AA14 3790	Screw:Contact Point	27 - 11
AA14 3790	Screw:Contact Point	121 - 7

Part No.	Description	Page and Index No.
AA14 3790	Screw:Contact Point	35 - 6
AA14 3790	Screw:Contact Point	11 - 2
AA14 3790	Screw:Contact Point	119 - 17
AA14 3790	Screw:Contact Point	43 - 11
AA14 3790	Screw:Contact Point	123 - 1
AA14 3790	Screw:Contact Point	45 - 4
AA14 3791	Screw:Safety	5 - 20
AA14 3828	Screw:Fly Wheel	19 - 30
AA14 3832	Release Spring Holder	41 - 1
AA14 3832	Release Spring Holder	29 - 9
AA14 3832	Release Spring Holder	27 - 5
AA14 3832	Release Spring Holder	25 - 3
AA14 3859	Positioning Pin	83 - 7
AA14 8632	Lock Shaft	99 - 8
AA16 1164	Cushion:Stepper Motor	73 - 10
AA16 1164	Cushion:Stepper Motor	121 - 24
AA16 1164	Cushion:Stepper Motor	71 - 14
AA16 1164	Cushion:Stepper Motor	119 - 8
AA16 1164	Cushion:Stepper Motor	43 - 14
AA16 1164	Cushion:Stepper Motor	45 - 2
AB01 4142	Pulley - 30Z/20T	75 - 26
AB01 4142	Pulley - 30Z/20T	121 - 11
AB01 7673	Gear - 40/82Z	45 - 21
AB01 7674	Gear/Pulley - 66Z/20T	45 - 15
AB03 0098	Belt Tightener	119 - 3
AB03 0098	Belt Tightener	37 - 6
AB03 0273	Timing Pulley - T20	19 - 10
AB03 0352	Pulley - 36T	105 - 27
AB03 0455	Tightener Pulley - 8x20x13	121 - 5
AB03 0455	Tightener Pulley - 8x20x13	3 - 37
AB03 0455	Tightener Pulley - 8x20x13	45 - 12
AB03 0464	Timing Pulley - 30Z	93 - 14
AB03 0464	Timing Pulley - 30Z	87 - 3
AB03 0551	Pulley:Idler:Fusing	121 - 12
AB03 0551	Pulley:Idler:Fusing	23 - 6

Part No.	Description	Page and Index No.
AB03 0551	Pulley:Idler:Fusing	119 - 13
AB03 0564	Pulley - M17	19 - 11
AB03 0804	Pulley - 30T	105 - 29
AB03 0805	Pulley:Coupling:30T	105 - 26
AB03 0805	Pulley:Coupling:30T	107 - 15
AB03 0805	Pulley:Coupling:30T	111 - 16
AB03 0806	Pulley - 19T	93 - 10
AB03 0806	Pulley - 19T	37 - 22
AB03 0806	Pulley - 19T	71 - 10
AB03 0806	Pulley - 19T	75 - 22
AB03 0806	Pulley - 19T	73 - 14
AB03 3088	Pulley - 20T/20T	57 - 14
AB03 3088	Pulley - 20T/20T	79 - 7
AF02 2156	Front Driven Transport Roller	7 - 13
AF02 2156	Front Driven Transport Roller	29 - 31
AF02 2156	Front Driven Transport Roller	25 - 27
AF02 2156	Front Driven Transport Roller	19 - 28
AF02 2156	Front Driven Transport Roller	21 - 10
AF02 5029	Exit Separation Pawl	25 - 16
AG05 0095	Fusing Knob	49 - 17
AG05 0095	Fusing Knob	123 - 13
AG05 0098	Knob:Fusing	17 - 17
AG05 1145	Grip:Open and Close:RIC	109 - 4
AG05 1145	Grip:Open and Close:RIC	5 - 7
AG05 1145	Grip:Open and Close:RIC	97 - 5
AG07 0504	Magnet Catch:44.1N	25 - 22
AG07 0513	Magnet Catch	107 - 11
AG07 0513	Magnet Catch	7 - 14
AG07 0513	Magnet Catch	5 - 10
AG07 0513	Magnet Catch	17 - 5
AG07 0513	Magnet Catch	25 - 1
AG07 0513	Magnet Catch	105 - 7
AG07 0513	Magnet Catch	29 - 13
AG07 0513	Magnet Catch	123 - 14
AG07 0513	Magnet Catch	9 - 10

Part No.	Description	Page and Index No.
AG07 0513	Magnet Catch	125 - 5
AG07 0513	Magnet Catch	51 - 12
AG07 0513	Magnet Catch	53 - 10
AG07 0513	Magnet Catch	87 - 24
AG07 0513	Magnet Catch	57 - 1
AG07 0515	Magnet Catch:13N	89 - 2
AH01 2035	Caster - 980N	47 - 9
AH01 2035	Caster - 980N	83 - 9
AH01 2035	Caster - 980N	81 - 2
AW01 0091	Photo Reflection Sensor	107 - 4
AW01 0091	Photo Reflection Sensor	43 - 30
AW01 0107	Paper Feed Sensor	77 - 12
AW01 0109	Photo Reflection Sensor:PS117ED1	21 - 14
AW01 0109	Photo Reflection Sensor:PS117ED1	31 - 6
AW01 0109	Photo Reflection Sensor:PS117ED1	9 - 9
AW01 0109	Photo Reflection Sensor:PS117ED1	29 - 3
AW01 0109	Photo Reflection Sensor:PS117ED1	27 - 13
AW01 0110	Paper Feed Sensor	57 - 8
AW01 0110	Paper Feed Sensor	75 - 12
AW01 0110	Paper Feed Sensor	69 - 27
AW01 0110	Paper Feed Sensor	79 - 15
AW01 0123	Photo Refiection Sensor:PSR11D1-B	81 - 22
AW01 0127	Paper Feed Sensor	107 - 8
AW01 0127	Paper Feed Sensor	103 - 5
AW01 0127	Paper Feed Sensor	87 - 21
AW01 0127	Paper Feed Sensor	95 - 3
AW01 0127	Paper Feed Sensor	89 - 13
AW01 0128	Paper Feed Sensor	81 - 12
AW02 0114	Photo Interruptor - Lower Limit	53 - 23
AW02 0141	Photointerruptor	61 - 12
AW02 0141	Photointerruptor	69 - 5
AW02 0141	Photointerruptor	33 - 11
AW02 0141	Photointerruptor	89 - 5
AW02 0145	Photointerruptor:Flat	123 - 11
AW02 0166	Photointerruptor:Paper Feed Sensor	117 - 12

Part No.	Description	Page and Index No.
AX06 0296	Brushless Motor:DC24V 24W:Z9	45 - 19
AX10 0038	DC Solenoid	25 - 10
AX21 0099	Magnetic Clutch	21 - 11
AX21 0099	Magnetic Clutch	9 - 5
AX21 0099	Magnetic Clutch	29 - 32
AX40 0190	Heater:120V:9W	39 - 11
AX40 0191	Heater:230V:9W	39 - 11
AZ23 0217	Power Supply Unit 120V 285W	47 - 12
AZ23 0218	Power Supply Unit - 230V 285W	47 - 12
GB03 0032	Timing Pulley - T28-S2M	71 - 19
GX64 0021	Fan Motor DC24V 1.92W	47 - 22

Part No.	Description	Page and Index No.
0313 0060N	Screw - M3x6	33 - 104
0314 0080N	Philips Pan Head Screw - M4x8	47 - 105
0314 0200N	Pan Head Screw:M4x20	47 - 104
0323 0060N	Screw M3x6	109 -102
0323 0060N	Screw M3x6	53 - 104
0353 0040N	Screw - M3x4	59 - 102
0353 0040N	Screw - M3x4	25 - 103
0353 0040N	Screw - M3x4	123 -104
0353 0040N	Screw - M3x4	99 - 104
0353 0040N	Screw - M3x4	101 -103
0353 0060N	Bind Screw - M3x6	41 - 104
0353 0060N	Bind Screw - M3x6	39 - 103
0353 0060N	Bind Screw - M3x6	43 - 107
0353 0120N	Screw M3x12	95 - 105
0353 0120N	Screw M3x12	79 - 108
0353 0120N	Screw M3x12	75 - 103
0353 0120N	Screw M3x12	107 -102
0353 0120N	Screw M3x12	123 -106
0353 0120N	Screw M3x12	69 - 102
0353 0120N	Screw M3x12	81 - 103
0353 0120N	Screw M3x12	89 - 104
0353 0120N	Screw M3x12	57 - 104
0353 0120N	Screw M3x12	103 -102
0353 0120N	Screw M3x12	87 - 104
0353 0140N	Screw:M3x14	21 - 102
0353 0140N	Screw:M3x14	25 - 107
0353 0140N	Screw:M3x14	123 -105
0353 0140N	Screw:M3x14	9 - 103
0353 0250N	Screw:M3x25	105 -103
0353 0250N	Screw:M3x25	125 -103
0353 0250N	Screw:M3x25	53 - 105
0353 0350N	Screw M3x35	61 - 103
0360 3008N	Screw:M3x8	113 -102
0360 3008N	Screw:M3x8	77 - 103
0360 3008N	Screw:M3x8	65 - 101

Part No.	Description	Page and Index No.
0360 3008N	Screw:M3x8	101 -102
0360 3008N	Screw:M3x8	99 - 103
0360 3008N	Screw:M3x8	95 - 104
0360 4006N	Screw - M4x6	121 -105
0450 4008N	Tapping Screw - M4x8	3 - 105
0450 4010N	Tapping Screw:M4x10	53 - 103
0450 4010N	Tapping Screw:M4x10	27 - 104
0450 4010N	Tapping Screw:M4x10	85 - 102
0450 4010N	Tapping Screw:M4x10	13 - 102
0450 4010N	Tapping Screw:M4x10	11 - 102
0450 4010N	Tapping Screw:M4x10	15 - 102
0450 4014N	Tapping Screw:4x14	3 - 106
0451 3006N	Tapping Screw - 3x6	115 -101
0451 3006N	Tapping Screw - 3x6	31 - 101
0451 3006N	Tapping Screw - 3x6	45 - 101
0451 3006N	Tapping Screw - 3x6	111 -101
0451 3006N	Tapping Screw - 3x6	37 - 101
0451 3006N	Tapping Screw - 3x6	27 - 101
0451 3006N	Tapping Screw - 3x6	3 - 101
0451 3006N	Tapping Screw - 3x6	113 -101
0451 3006N	Tapping Screw - 3x6	49 - 102
0451 3006N	Tapping Screw - 3x6	99 - 101
0451 3006N	Tapping Screw - 3x6	61 - 101
0451 3006N	Tapping Screw - 3x6	33 - 101
0451 3006N	Tapping Screw - 3x6	29 - 101
0451 3006N	Tapping Screw - 3x6	35 - 101
0451 3006N	Tapping Screw - 3x6	43 - 101
0451 3006N	Tapping Screw - 3x6	95 - 101
0451 3006N	Tapping Screw - 3x6	41 - 101
0451 3006N	Tapping Screw - 3x6	121 -101
0451 3006N	Tapping Screw - 3x6	39 - 101
0451 3006N	Tapping Screw - 3x6	57 - 101
0451 3006N	Tapping Screw - 3x6	51 - 101
0451 3006N	Tapping Screw - 3x6	55 - 101
0451 3006N	Tapping Screw - 3x6	53 - 101

Part No.	Description	Page and Index No.
0451 3006N	Tapping Screw - 3x6	123 - 101
0451 3006N	Tapping Screw - 3x6	97 - 101
0451 3006N	Tapping Screw - 3x6	47 - 101
0451 3006N	Tapping Screw - 3x6	77 - 101
0451 3006N	Tapping Screw - 3x6	73 - 101
0451 3006N	Tapping Screw - 3x6	85 - 101
0451 3006N	Tapping Screw - 3x6	17 - 101
0451 3006N	Tapping Screw - 3x6	75 - 101
0451 3006N	Tapping Screw - 3x6	15 - 101
0451 3006N	Tapping Screw - 3x6	13 - 101
0451 3006N	Tapping Screw - 3x6	107 - 101
0451 3006N	Tapping Screw - 3x6	63 - 101
0451 3006N	Tapping Screw - 3x6	19 - 101
0451 3006N	Tapping Screw - 3x6	11 - 101
0451 3006N	Tapping Screw - 3x6	125 - 101
0451 3006N	Tapping Screw - 3x6	79 - 104
0451 3006N	Tapping Screw - 3x6	91 - 101
0451 3006N	Tapping Screw - 3x6	83 - 101
0451 3006N	Tapping Screw - 3x6	9 - 101
0451 3006N	Tapping Screw - 3x6	101 - 101
0451 3006N	Tapping Screw - 3x6	103 - 101
0451 3006N	Tapping Screw - 3x6	81 - 101
0451 3006N	Tapping Screw - 3x6	7 - 101
0451 3006N	Tapping Screw - 3x6	23 - 101
0451 3006N	Tapping Screw - 3x6	5 - 101
0451 3006N	Tapping Screw - 3x6	105 - 101
0451 3006N	Tapping Screw - 3x6	25 - 101
0451 3006N	Tapping Screw - 3x6	87 - 101
0451 3006N	Tapping Screw - 3x6	71 - 101
0451 3006N	Tapping Screw - 3x6	21 - 101
0451 3006N	Tapping Screw - 3x6	89 - 101
0451 3006N	Tapping Screw - 3x6	67 - 101
0451 3006N	Tapping Screw - 3x6	69 - 101
0451 3006N	Tapping Screw - 3x6	93 - 101
0451 3006N	Tapping Screw - 3x6	109 - 101

Part No.	Description	Page and Index No.
0451 3008N	Tapping Screw - M3x8	49 - 101
0451 3008N	Tapping Screw - M3x8	19 - 102
0451 3014N	Tapping Screw:3x14	117 - 102
0451 3014N	Tapping Screw:3x14	79 - 105
0451 3014N	Tapping Screw:3x14	23 - 103
0451 3014N	Tapping Screw:3x14	47 - 109
0451 3014N	Tapping Screw:3x14	35 - 106
0451 3014N	Tapping Screw:3x14	27 - 107
0451 3014N	Tapping Screw:3x14	45 - 103
0451 3014N	Tapping Screw:3x14	43 - 102
0451 3014N	Tapping Screw:3x14	29 - 102
0451 3014N	Tapping Screw:3x14	57 - 103
0451 3014N	Tapping Screw:3x14	75 - 104
0451 3014N	Tapping Screw:3x14	73 - 106
0451 3014N	Tapping Screw:3x14	31 - 102
0451 3014N	Tapping Screw:3x14	71 - 107
0451 3020N	Tapping Screw:3x20	95 - 103
0451 3020N	Tapping Screw:3x20	107 - 107
0451 3020N	Tapping Screw:3x20	111 - 102
0451 3030N	Tapping Screw:3x30	47 - 107
0451 4006N	Tapping Screw - 4x6	79 - 109
0451 4008N	Tapping Screw:4x8	121 - 102
0451 4008N	Tapping Screw:4x8	97 - 103
0451 4008N	Tapping Screw:4x8	43 - 103
0451 4008N	Tapping Screw:4x8	5 - 102
0451 4008N	Tapping Screw:4x8	19 - 103
0451 4008N	Tapping Screw:4x8	3 - 103
0451 4008N	Tapping Screw:4x8	45 - 102
0451 4008N	Tapping Screw:4x8	47 - 102
0451 4008N	Tapping Screw:4x8	109 - 103
0451 4010N	Tapping Screw:4x10	119 - 103
0451 4010N	Tapping Screw:4x10	73 - 103
0451 4010N	Tapping Screw:4x10	71 - 104
0451 4010N	Tapping Screw:4x10	121 - 103
0451 4010N	Tapping Screw:4x10	23 - 102

Part No.	Description	Page and Index No.
0452 2006N	Binding Self-Tapping Screw - M2x6	5 - 110
0452 3010N	Binding Self-Tapping Screw:3x10	5 - 104
0453 3006N	Tapping Screw - M3x6	53 - 107
0453 3006N	Tapping Screw - M3x6	5 - 103
0454 3006Q	Tapping Screw - M3x6	77 - 102
0454 3006Q	Tapping Screw - M3x6	91 - 102
0454 3006Q	Tapping Screw - M3x6	23 - 106
0454 3006Q	Tapping Screw - M3x6	13 - 103
0454 3006Q	Tapping Screw - M3x6	51 - 102
0454 3006Q	Tapping Screw - M3x6	99 - 102
0454 3006Q	Tapping Screw - M3x6	53 - 102
0454 3006Q	Tapping Screw - M3x6	31 - 106
0454 3006Q	Tapping Screw - M3x6	75 - 102
0454 3006Q	Tapping Screw - M3x6	103 - 105
0454 3006Q	Tapping Screw - M3x6	95 - 102
0454 3006Q	Tapping Screw - M3x6	15 - 104
0454 3006Q	Tapping Screw - M3x6	17 - 103
0454 3006Q	Tapping Screw - M3x6	123 - 102
0454 3006Q	Tapping Screw - M3x6	57 - 102
0454 3006Q	Tapping Screw - M3x6	63 - 102
0454 3006Q	Tapping Screw - M3x6	71 - 102
0454 3006Q	Tapping Screw - M3x6	59 - 101
0454 3006Q	Tapping Screw - M3x6	29 - 103
0454 3006Q	Tapping Screw - M3x6	69 - 103
0454 3006Q	Tapping Screw - M3x6	61 - 102
0454 3006Q	Tapping Screw - M3x6	93 - 102
0454 3006Q	Tapping Screw - M3x6	27 - 102
0454 3006Q	Tapping Screw - M3x6	97 - 102
0454 3006Q	Tapping Screw - M3x6	121 - 106
0454 3006Q	Tapping Screw - M3x6	89 - 102
0454 3006Q	Tapping Screw - M3x6	79 - 101
0454 3006Q	Tapping Screw - M3x6	3 - 102
0454 3006Q	Tapping Screw - M3x6	119 - 101
0454 3006Q	Tapping Screw - M3x6	83 - 102
0454 3006Q	Tapping Screw - M3x6	105 - 102

Part No.	Description	Page and Index No.
0454 3006Q	Tapping Screw - M3x6	87 - 102
0454 3006Q	Tapping Screw - M3x6	47 - 103
0454 3006Q	Tapping Screw - M3x6	117 - 101
0454 3006Q	Tapping Screw - M3x6	115 - 102
0454 3006Q	Tapping Screw - M3x6	81 - 102
0454 3006Q	Tapping Screw - M3x6	7 - 102
0454 3006Q	Tapping Screw - M3x6	25 - 102
0454 3006Q	Tapping Screw - M3x6	9 - 102
0454 3006Q	Tapping Screw - M3x6	125 - 102
0454 3008Q	Tapping Screw:3x8	47 - 108
0454 3008Q	Tapping Screw:3x8	87 - 103
0454 3008Q	Tapping Screw:3x8	89 - 103
0454 3008Q	Tapping Screw:3x8	121 - 109
0454 3008Q	Tapping Screw:3x8	33 - 102
0454 4008Q	Tapping Screw - M4x8	71 - 103
0454 4008Q	Tapping Screw - M4x8	19 - 104
0454 4008Q	Tapping Screw - M4x8	3 - 104
0454 4008Q	Tapping Screw - M4x8	73 - 102
0454 4008Q	Tapping Screw - M4x8	119 - 102
0454 4008Q	Tapping Screw - M4x8	121 - 104
0454 4008Q	Tapping Screw - M4x8	27 - 103
0623 0120E	Spring Pin - M3x12	25 - 104
0632 0100G	Pin - 2x10mm	33 - 106
0632 0120G	Parallel Pin - 2x12	105 - 107
0632 0140G	Parallel Pin	93 - 107
0632 0140G	Parallel Pin	91 - 105
0633 0140G	Parallel Pin - 3x14	21 - 105
0633 0140G	Parallel Pin - 3x14	63 - 108
0633 0180G	Parallel Pin - 3x18mm	63 - 109
0633 0200G	Pin - M3x20	87 - 108
0633 0200G	Pin - M3x20	33 - 105
0633 0200G	Pin - M3x20	37 - 105
0633 0200G	Pin - M3x20	35 - 107
0633 0280G	Pin - 3x28	35 - 105
0634 0200G	Parallel Pin - 4x20	117 - 106

Part No.	Description	Page and Index No.
0701 0040N	Washer:DIA4	37 - 106
0701 0050N	Washer:DIA5	35 - 109
0701 0060N	Washer DIA6	5 - 108
0701 0060N	Washer DIA6	99 - 107
0703 0040N	Spring Washer:DIA4	47 - 114
0708 0080N	Washer-DIA8	93 - 104
0720 0030E	Retaining Ring - M3	21 - 103
0720 0030E	Retaining Ring - M3	99 - 105
0720 0030E	Retaining Ring - M3	29 - 105
0720 0030E	Retaining Ring - M3	19 - 107
0720 0030E	Retaining Ring - M3	31 - 104
0720 0030E	Retaining Ring - M3	53 - 108
0720 0030E	Retaining Ring - M3	7 - 104
0720 0030E	Retaining Ring - M3	25 - 110
0720 0030E	Retaining Ring - M3	101 -104
0720 0030E	Retaining Ring - M3	65 - 103
0720 0040E	Retaining Ring - M4	79 - 103
0720 0040E	Retaining Ring - M4	77 - 104
0720 0040E	Retaining Ring - M4	99 - 106
0720 0040E	Retaining Ring - M4	11 - 105
0720 0040E	Retaining Ring - M4	41 - 102
0720 0040E	Retaining Ring - M4	43 - 105
0720 0040E	Retaining Ring - M4	15 - 103
0720 0040E	Retaining Ring - M4	37 - 102
0720 0040E	Retaining Ring - M4	95 - 108
0720 0040E	Retaining Ring - M4	63 - 103
0720 0040E	Retaining Ring - M4	55 - 102
0720 0040E	Retaining Ring - M4	59 - 103
0720 0040E	Retaining Ring - M4	23 - 105
0720 0040E	Retaining Ring - M4	93 - 106
0720 0040E	Retaining Ring - M4	71 - 105
0720 0040E	Retaining Ring - M4	19 - 105
0720 0040E	Retaining Ring - M4	27 - 105
0720 0040E	Retaining Ring - M4	65 - 104
0720 0040E	Retaining Ring - M4	25 - 106

Part No.	Description	Page and Index No.
0720 0060E	Retaining Ring - M6	37 - 103
0720 0060E	Retaining Ring - M6	117 -103
0720 0060E	Retaining Ring - M6	23 - 104
0720 0060E	Retaining Ring - M6	121 -107
0720 0060E	Retaining Ring - M6	119 -104
0720 0060E	Retaining Ring - M6	3 - 107
0720 0060E	Retaining Ring - M6	63 - 104
0720 0060E	Retaining Ring - M6	43 - 104
0720 0060E	Retaining Ring - M6	93 - 109
0720 0060E	Retaining Ring - M6	87 - 106
0720 0060E	Retaining Ring - M6	45 - 104
0720 0060E	Retaining Ring - M6	25 - 105
0720 0060E	Retaining Ring - M6	91 - 103
0720 0060E	Retaining Ring - M6	57 - 105
0720 0060E	Retaining Ring - M6	123 -109
0720 0060E	Retaining Ring - M6	73 - 104
0720 0060E	Retaining Ring - M6	31 - 103
0720 0060E	Retaining Ring - M6	29 - 104
0720 0060E	Retaining Ring - M6	75 - 105
0720 0060E	Retaining Ring - M6	35 - 103
0720 0060E	Retaining Ring - M6	113 -104
0720 0060E	Retaining Ring - M6	111 -103
0720 0060E	Retaining Ring - M6	79 - 102
0720 0060E	Retaining Ring - M6	19 - 106
0720 0060E	Retaining Ring - M6	9 - 106
0720 0060E	Retaining Ring - M6	21 - 104
0720 0060E	Retaining Ring - M6	27 - 106
0720 0080E	Retaining Ring - M8	11 - 103
0720 0080E	Retaining Ring - M8	35 - 104
0725 0120E	Retaining Ring C - M12	69 - 105
0725 0140E	Retaining Ring (C Type) - M14	101 -108
0742 3806	Bearing:DIA6xDIA13x5	71 - 106
0742 3808	Ball Bearing - 8x16x5	63 - 105
0742 3808	Ball Bearing - 8x16x5	33 - 103
0742 3808	Ball Bearing - 8x16x5	87 - 105

Part No.	Description	Page and Index No.
0742 3808	Ball Bearing - 8x16x5	105 - 106
0742 3808	Ball Bearing - 8x16x5	79 - 106
0742 3808	Ball Bearing - 8x16x5	75 - 106
0742 3808	Ball Bearing - 8x16x5	73 - 105
0742 3808	Ball Bearing - 8x16x5	91 - 104
0742 3808	Ball Bearing - 8x16x5	111 - 104
0742 3808	Ball Bearing - 8x16x5	93 - 105
0742 3910	Ball Bearing:10x22x6	35 - 102
0742 3910	Ball Bearing:10x22x6	37 - 104
0805 0088	Retaining Ring - M6	113 - 103
0805 0088	Retaining Ring - M6	111 - 105
0805 0088	Retaining Ring - M6	105 - 105
0805 0088	Retaining Ring - M6	101 - 105
0805 0088	Retaining Ring - M6	65 - 105
0805 0088	Retaining Ring - M6	93 - 103
0805 0088	Retaining Ring - M6	107 - 103
0805 0088	Retaining Ring - M6	87 - 107
0807 4139	Washer (100pcs/set)	5 - 109
0807 4139	Washer (100pcs/set)	7 - 105
0951 3006N	Screw - M3x6	65 - 102
0951 5008N	Screw:Polished Round:M5x8	11 - 104
0954 3006N	Screw - M3x6	5 - 105
0954 3006N	Screw - M3x6	7 - 103
0954 3006N	Screw - M3x6	47 - 125
0954 4008N	Screw - M4x8	123 - 103
0954 4008N	Screw - M4x8	37 - 107
0954 4008N	Screw - M4x8	49 - 103
0954 4008N	Screw - M4x8	35 - 108
0954 4008N	Screw - M4x8	17 - 104
0954 5014N	Screw - M5x14	81 - 104
0954 5014N	Screw - M5x14	83 - 103
0954 5014N	Screw - M5x14	47 - 106
1105 0409	Card Spacer- 6.4mm	45 - 107
1105 0489	Harness Clamp - LWS 1316	67 - 103
1105 0489	Harness Clamp - LWS 1316	125 - 105

Part No.	Description	Page and Index No.
1105 0489	Harness Clamp - LWS 1316	63 - 107
1105 0490	Harness Clamp - IWS-2218	125 - 106
1105 0511	Harness Clamp - LWS-0306ZC	103 - 103
1105 0511	Harness Clamp - LWS-0306ZC	123 - 108
1105 0511	Harness Clamp - LWS-0306ZC	117 - 105
1105 0511	Harness Clamp - LWS-0306ZC	107 - 104
1105 0511	Harness Clamp - LWS-0306ZC	61 - 105
1105 0511	Harness Clamp - LWS-0306ZC	79 - 107
1105 0511	Harness Clamp - LWS-0306ZC	41 - 103
1105 0511	Harness Clamp - LWS-0306ZC	39 - 102
1105 0511	Harness Clamp - LWS-0306ZC	31 - 105
1105 0511	Harness Clamp - LWS-0306ZC	29 - 107
1105 0511	Harness Clamp - LWS-0306ZC	27 - 108
1105 0511	Harness Clamp - LWS-0306ZC	25 - 109
1105 0511	Harness Clamp - LWS-0306ZC	21 - 106
1105 0511	Harness Clamp - LWS-0306ZC	9 - 105
1105 0511	Harness Clamp - LWS-0306ZC	5 - 107
1105 0511	Harness Clamp - LWS-0306ZC	43 - 106
1105 0511	Harness Clamp - LWS-0306ZC	75 - 107
1105 0511	Harness Clamp - LWS-0306ZC	45 - 105
1105 0511	Harness Clamp - LWS-0306ZC	87 - 109
1105 0511	Harness Clamp - LWS-0306ZC	95 - 106
1105 0511	Harness Clamp - LWS-0306ZC	81 - 105
1105 0511	Harness Clamp - LWS-0306ZC	89 - 105
1105 0516	Clamp	61 - 106
1105 0516	Clamp	101 - 106
1105 0516	Clamp	121 - 108
1105 0516	Clamp	93 - 110
1105 0516	Clamp	125 - 104
1105 0516	Clamp	63 - 106
1105 0516	Clamp	67 - 104
1105 0516	Clamp	107 - 105
1105 0518	Edge Saddle - LES-1010	67 - 106
1105 0518	Edge Saddle - LES-1010	5 - 106
1105 0518	Edge Saddle - LES-1010	105 - 108

Part No.	Description	Page and Index No.
1105 0521	Clamp - LES-1017	67 - 105
1105 0522	Edge Saddle - LES0510	45 - 106
1105 0522	Edge Saddle - LES0510	39 - 104
1105 0522	Edge Saddle - LES0510	105 - 109
1105 0522	Edge Saddle - LES0510	95 - 107
1105 0522	Edge Saddle - LES0510	69 - 104
1105 0522	Edge Saddle - LES0510	29 - 106
1105 0522	Edge Saddle - LES0510	103 - 104
1105 0522	Edge Saddle - LES0510	67 - 102
1105 0522	Edge Saddle - LES0510	101 - 107
1105 0522	Edge Saddle - LES0510	93 - 108
1105 0522	Edge Saddle - LES0510	17 - 102
1105 0522	Edge Saddle - LES0510	107 - 106
1105 0522	Edge Saddle - LES0510	57 - 106
1105 0522	Edge Saddle - LES0510	87 - 110
1105 0522	Edge Saddle - LES0510	63 - 110
1105 0534	Clamp	99 - 108
1105 0534	Clamp	9 - 107
1105 0648	Spacer:KGPS-8RFV0	47 - 118
1106 0458	Bushing - 9.9mm	117 - 104
1107 0388	Fuse (Glass Case) - 2A - 125V (120V)	47 - 119
1107 0392	Fuse - 6.3A 125V (120V)	47 - 122
1107 0629	Fuse:Ceramic Case:15A 125V (120V)	47 - 120
1107 0652	Fuse (Glass Case) - 10A - 125V (120V)	47 - 121
1107 1053	Fuse:HT-5A-N5 (230V)	47 - 121
1107 1061	Fuse:ET-1A (230V)	47 - 119
1107 1067	Fuse:ET-6.3A (230V)	47 - 122
1107 1084	Fuse:CES14-8A-N1 (230V)	47 - 120
1107 1192	Fuse:BJS202100F1R	47 - 113
1204 2529	Switch - V-5F912DN	125 - 107
1204 2529	Switch - V-5F912DN	105 - 104
1204 2529	Switch - V-5F912DN	61 - 104
1204 2529	Switch - V-5F912DN	53 - 106
1204 2529	Switch - V-5F912DN	9 - 104
1204 2529	Switch - V-5F912DN	47 - 110

Part No.	Description	Page and Index No.
1204 2529	Switch - V-5F912DN	123 - 107
1204 2529	Switch - V-5F912DN	25 - 108
1204 2533	Switch - AJ76200PZ02	47 - 111
1204 2634	Rocker Switch - Aj76200b	47 - 112
1600 2048	Resistor:5.1 Ω : $\pm$ 5%:20W	47 - 117
1600 2049	Resistor:91 Ω : $\pm$ 5%:30W	47 - 116
1607 0534	Ferrite Core:ZCAT3035-1330	47 - 115
1607 1139	Ferrite Core:RFC-8	47 - 123
1607 1574	Ferrite Core:RFC-H13	47 - 124

Part No.	Description	Page and Index No.
5053 0419	Bushing - 10mm	35 - 18
5206 2686	Snap Ring	99 - 6
5215 2621	Snap Ring - M6	69 - 6
5215 2621	Snap Ring - M6	73 - 5
5215 2621	Snap Ring - M6	75 - 1
5215 2621	Snap Ring - M6	79 - 9
5215 2621	Snap Ring - M6	87 - 4
5215 2621	Snap Ring - M6	89 - 16
5215 2621	Snap Ring - M6	91 - 6
5215 2621	Snap Ring - M6	93 - 5
5215 2621	Snap Ring - M6	65 - 5
5215 2621	Snap Ring - M6	95 - 13
5215 2621	Snap Ring - M6	97 - 13
5215 2621	Snap Ring - M6	103 - 14
5215 2621	Snap Ring - M6	105 - 3
5215 2621	Snap Ring - M6	107 - 1
5215 2621	Snap Ring - M6	109 - 11
5215 2621	Snap Ring - M6	111 - 1
5215 2621	Snap Ring - M6	117 - 19
5215 2621	Snap Ring - M6	121 - 4
5215 2621	Snap Ring - M6	3 - 38
5215 2621	Snap Ring - M6	19 - 9
5215 2621	Snap Ring - M6	31 - 11
5215 2621	Snap Ring - M6	33 - 1
5215 2621	Snap Ring - M6	5 - 2
5215 2621	Snap Ring - M6	25 - 7
5215 2621	Snap Ring - M6	29 - 10
5215 2621	Snap Ring - M6	43 - 27
5215 2621	Snap Ring - M6	21 - 20
5215 2621	Snap Ring - M6	45 - 11
5215 2621	Snap Ring - M6	27 - 10
5215 2621	Snap Ring - M6	9 - 12
5215 2621	Snap Ring - M6	57 - 3
5446 2901	Collar - 8mm	41 - 17

Part No.	Description	Page and Index No.
5446 2901	Collar - 8mm	43 - 23
5446 3163	Pressure Roller - Transport Unit	101 - 8
5446 3163	Pressure Roller - Transport Unit	105 - 21
5446 3163	Pressure Roller - Transport Unit	97 - 15
5446 6214	Shaft Holder - Pick-up Roller	91 - 13
5446 6214	Shaft Holder - Pick-up Roller	37 - 5
5446 6214	Shaft Holder - Pick-up Roller	35 - 5
5447 1778	Stepped Screw - M4	55 - 15
5447 2681	Snap Ring	59 - 11
5447 2681	Snap Ring	111 - 12
5447 2681	Snap Ring	105 - 9
5447 2681	Snap Ring	119 - 1
5447 2681	Snap Ring	121 - 2
5447 2681	Snap Ring	109 - 6
5447 2681	Snap Ring	117 - 1
5447 2681	Snap Ring	113 - 9
5447 2681	Snap Ring	97 - 8
5447 2681	Snap Ring	103 - 9
5447 2681	Snap Ring	101 - 2
5447 2681	Snap Ring	99 - 9
5447 2681	Snap Ring	95 - 10
5447 2681	Snap Ring	91 - 8
5447 2681	Snap Ring	83 - 15
5447 2681	Snap Ring	79 - 5
5447 2681	Snap Ring	75 - 23
5447 2681	Snap Ring	49 - 13
5447 2681	Snap Ring	73 - 17
5447 2681	Snap Ring	71 - 1
5447 2681	Snap Ring	69 - 18
5447 2681	Snap Ring	65 - 8
5447 2681	Snap Ring	57 - 12