



Finisher User's Guide

© 2005 Ricoh Printing Systems, Ltd.

May, 2005
N905360

Revision Table for manual

[illegible]

© Copyright 2005 Ricoh Printing Systems, Ltd. All rights reserved.

No part of this document may be reproduced without the express permission of Ricoh Printing Systems, Ltd.

The material in this document is for informational purposes and is subject to change without notice. Ricoh Printing Systems, Ltd. assumes no responsibility for errors or omissions in this document. No liability is assumed for any damages resulting from the use of the information it contains.

NOTICE TO USER

In an effort to meet the demands of a rapidly changing technology, the manufacturer is continually developing new features and functions to meet your changing printing or printer needs. Please be sure to consult all manual updates or addenda when using this product's documentation.

Contents


| | |
|---|-----|
| Chapter 1. Introduction | 1-1 |
| 1.1. Finisher Configuration | 1-1 |
| 1.1.1. External View of the Finisher | 1-1 |
| 1.1.2. Opening the Finisher Front Cover | 1-2 |
| 1.1.3. Internal View of the Finisher. | 1-3 |
| 1.1.4. Specifications | 1-5 |
| Chapter 2. General Information. | 2-1 |
| 2.1. Powering on the Finisher. | 2-1 |
| Chapter 3. Replacing Consumables | 3-1 |
| 3.1. When to Replace Consumables | 3-1 |
| 3.2. Replacing the Staple Cartridge | 3-2 |
| Chapter 4. Troubleshooting. | 4-1 |
| 4.1. Clearing Paper Jams | 4-1 |
| 4.2. Clearing Wedged Staples | 4-3 |
| Chapter 5. Others | 5-1 |
| 5.1. Load the Cover Sheet (Cover Sheet Feeder only) | 5-1 |
| 5.2. Extend the Tray | 5-1 |
| 5.3. Cancel of Staple Job | 5-2 |

Chapter 1. Introduction

1.1. Finisher Configuration

1.1.1. External View of the Finisher


The figure below shows an external view of the finisher and descriptions of the main parts.

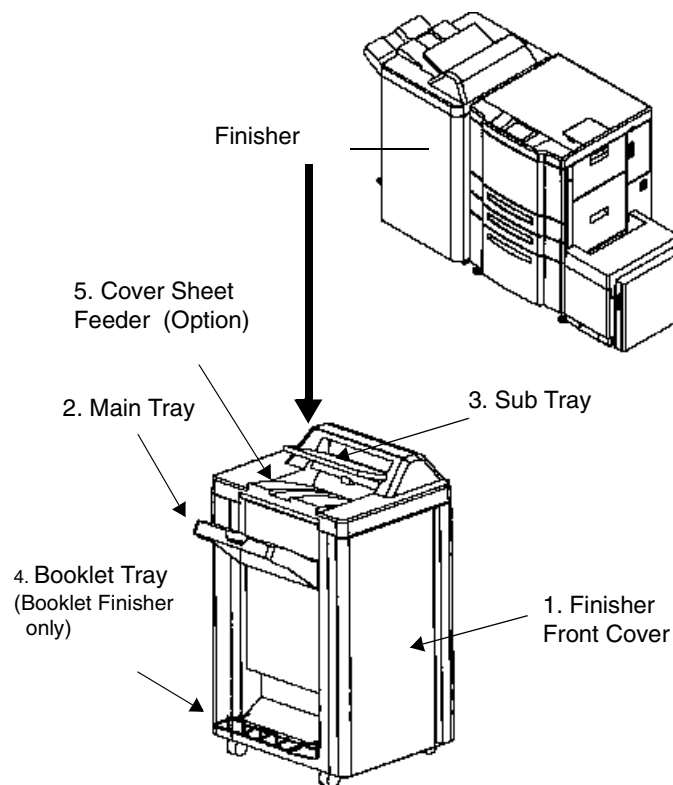

- | | |
|--|--|
| 1. Finisher Front Cover | Open to change the staple cartridge or clear paper jams. |
| 2. Main Tray | It receives printed paper. |
| 3. Sub Tray | It receives printed paper. |
| 4. Booklet Tray (Booklet Finisher only) | It receives printed paper. |
| 5. Cover Sheet Feeder (Option) | Hold cover sheet for use in cover sheet output mode. |



1.1.2. Opening the Finisher Front Cover

Open the finisher front cover according to the following figure.

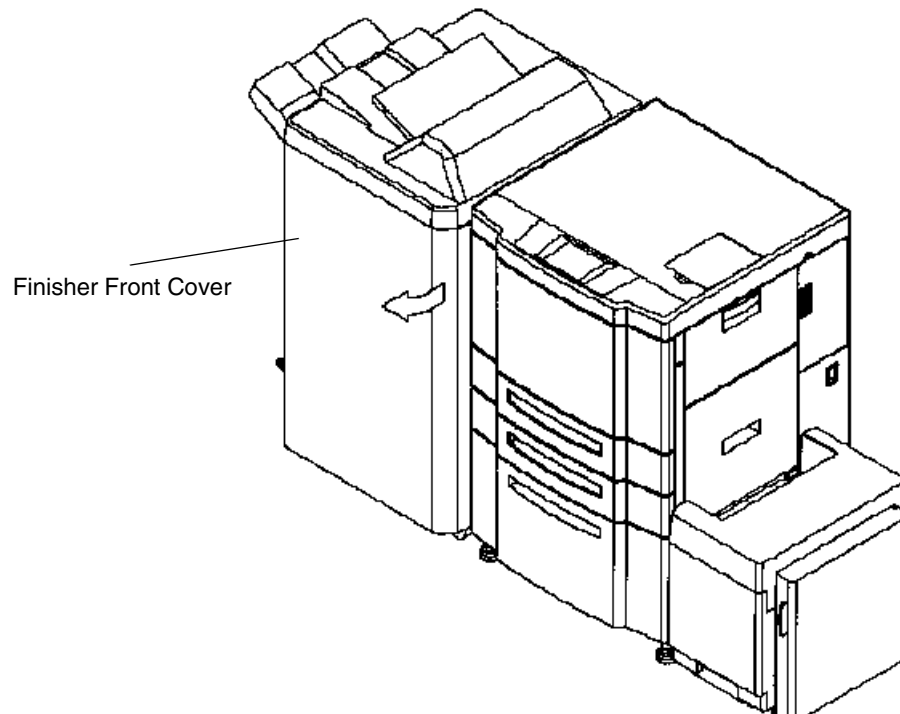

1.1.3. Internal View of the Finisher

The following figure shows an internal view of the finisher with the front cover open.

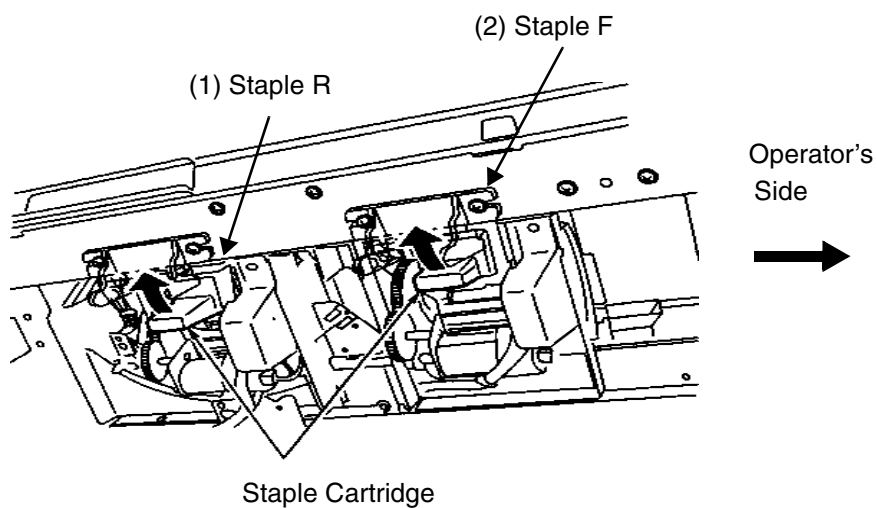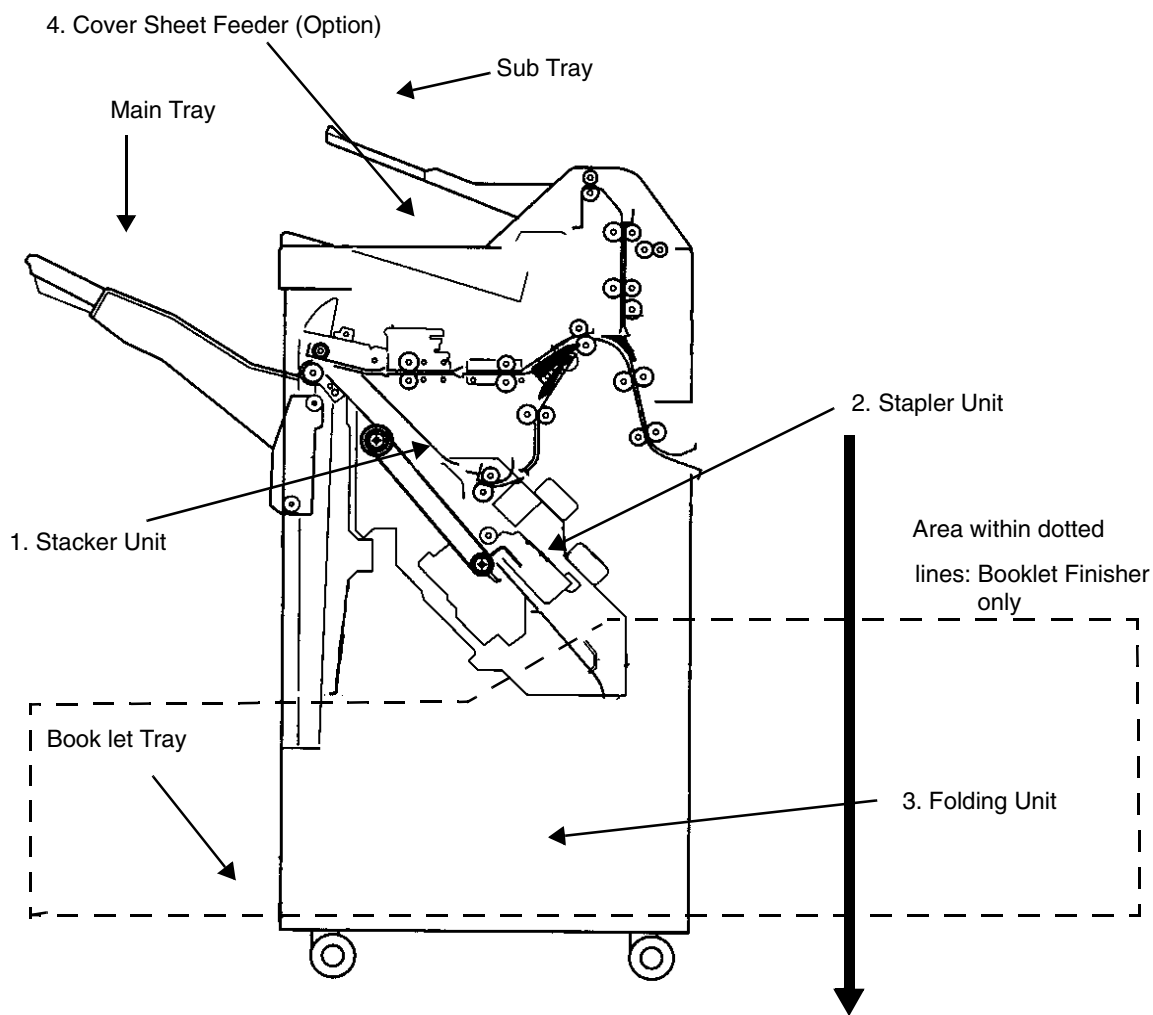

- 1. Stacker Unit** Clear stacked paper when the Operator's Panel of the printer indicates.
- 2. Stapler Unit**
 - (1) Staple F** Replace the staple cartridge in the Staple F on the operator's side.
 - (2) Staple R** Replace the staple cartridge in the Staple R on the opposite side of the operator's.
- 3. Folding Unit** Clear stacked paper when the Operator's Panel of the printer indicates.
- (Booklet Finisher only)**
- 4. Cover Sheet Feeder** Clear stacked paper when the Operator's Panel of the printer indicates.
- (Option)**

1.1.4. Specifications

Finishing speed 92 pages /minute (Letter, A4/LEF)
 Dimensions 781 x 1151 x 656 mm: Include the main tray
 Weight 55 kg : Not include the cover sheet feeder
 80 kg (Booklet model): Not include the cover sheet feeder
 7 kg (cover sheet feeder)

Paper

1. Non-staple mode / Offset mode / Sub-tray exit mode
 A3 SEF, B4 SEF, A4 LEF, A4 SEF, B5 LEF, A5 SEF, 12 x 18 SEF,
 11 x 17 SEF, 8.5 x 14 SEF, 8.5 x 13 SEF, 8.5 x 12.4 SEF, 8.5 x 11 LEF,
 8.5 x 11 SEF
2. Staple mode
 A3 SEF, B4 SEF, A4 LEF, A4 SEF, B5 LEF, 12x18 SEF, 11 x 17 SEF,
 8.5 x 14 SEF, 8.5 x 13 SEF, 8.5 x 12.4 SEF, 8.5 x 11 LEF, 8.5 x 11 SEF
3. Center stapling/folding mode (Option)
 A3 SEF, B4 SEF, A4 SEF, 11 x 17 SEF, 8.5 x 14 SEF, 8.5 x 11 SEF
4. Cover sheet feeder (Option)
 A3 SEF, B4 SEF, A4 LEF, A4 SEF, B5 LEF, 11 x 17 SEF, 8.5 x 14 SEF,
 8.5 x 11 LEF, 8.5 x 11 SEF

Weight 16 to 110 (Index) lbs.

Stacking capacity

Each stacking capacity is specified for normal operating environment with xerography 75g/m² paper.


1. Sub-tray exit mode * Limited to the same size
 200 sheets equivalent
2. Non-staple / Offset mode * Limited to the same size
 Maximum 2,500 sheets---- A4, B5, 8.5 x 11
 Maximum 1,500 sheets---- B4, A3, 8.5 x 14, 8.5 x 13, 8.5 x 12.4, 11 x 17,
 12 x 18
 Maximum 500 sheets---- A5 SEF
3. Staple mode---- Maximum 1,000 sheets

| Number of stapled sheets | Other than A3 SEF, 11 x 17, 12x18 , A5 | A3 SEF, 11 x 17, 12x18 , A5 |
|--------------------------|--|-----------------------------|
| 2 to 9 | 100 stacks | 50 stacks |
| 10 to 20 | 50 stacks | 50 stacks |
| 21 to 30 | 30 stacks | 30 stacks |
| 31 to 40 | 25 stacks | 25 stacks |
| 41 to 50 | 20 stacks | 20 stacks |



Table 1-1. Stacking Mode and Capacity

4. Center stapling/folding mode (Option)
 Booklets can be stacked until the sensor detects the stacker tray full in the booklet mode. The referential stacking capacities are shown below.
 Center stapling mode---- 5-sheet-folded booklet of ledger size paper x 20 set
 Center folding mode----- 3-sheet-folded booklet of ledger size paper x 33 set
5. Cover sheet feeder (Option)
 200 sheets equivalent (34 lbs. paper), within 40mm in height

The allowable amount of paper curl with the following way is 10mm maximum

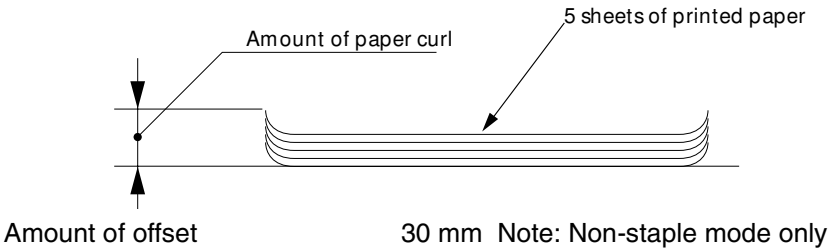

Stapling capability Maximum 50 sheets (75 g/m², 5.0 mm and below)
Stapling position A = 8.5 mm C = 82.5 mm E = 14 mm B = 8.5 mm D = 8.5 mm

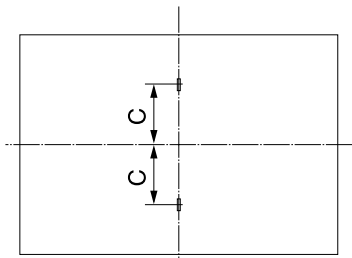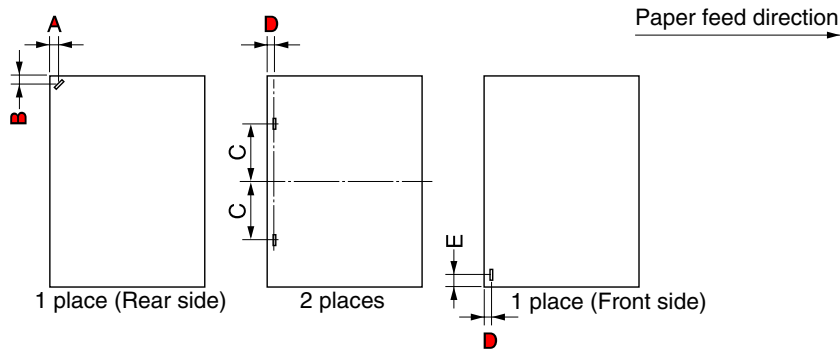

Stapling capacity 5,000 staples / cartridge

Power source 24V/5V (Supplied from the printer)

Temperature and Humidity

(1) Operation

Temperature : 10 to 32 °C (50 to 89.6 °F)

Humidity : 20 to 80 %

Wet Bulb 26 deg.C (78.8 °F) max.

(2) Recommended condition


Temperature : 19 to 25 °C (66.2 to 77 °F)

Humidity : 40 to 60 %


Chapter 2. General Information

2.1. Powering on the Finisher

If your Finisher is connected to a DDP 92, turn the finisher on and off using the switch on the printer. The mark on the switch represents the binary characters “O” for off and “I” for on.

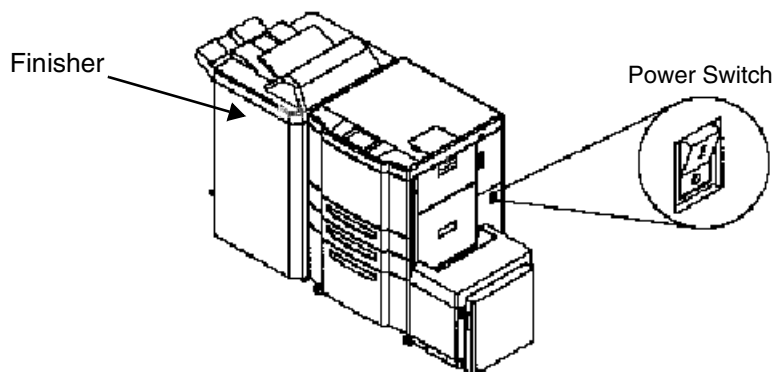

If your Finisher is connected to a DDP 184, turn the finisher on and off using the Main Power Switch. The mark on the switch represents the binary characters “O” for off and “I” for on.

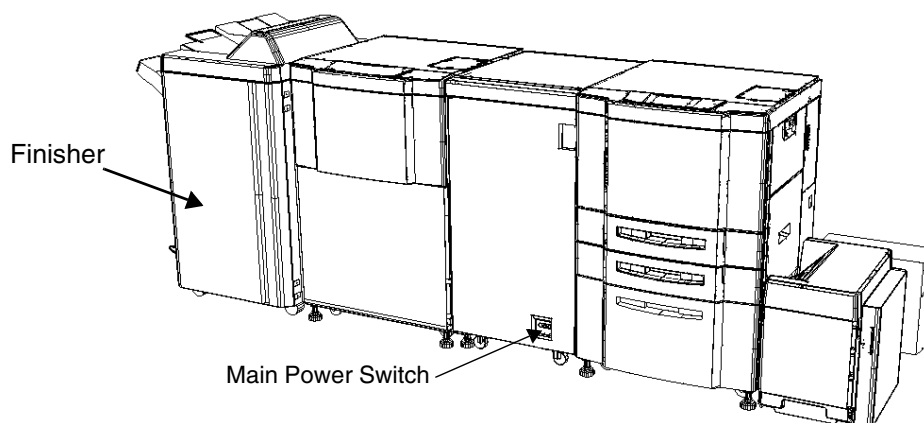

When the printer is powered on, the printer and the finisher go through a power-up sequence that takes approximately 5 minutes. During the power-up sequence, the printer will run a series of internal tests.

CAUTION:

Wait at least 5 seconds to power on the printer after powering off.

When the printer cannot be powered on, **POWER OFF** the printer and wait at least 30 seconds. Then power on the printer again.

WARNING:

In the event of an emergency, **POWER OFF** the printer by turning the Power Switch to 'O' side. The printer can be always powered off by turning the Power Switch to 'O' side.

Chapter 3. Replacing Consumables

3.1. When to Replace Consumables

The Operator's Panel on the printer displays a message informing you when a supply needs to be replaced. However, the following item will help you anticipate when to replace consumables.

| Consumable | Replace every... |
|------------|------------------|
| Staple | 5,000 times |


Note:

- Waste materials should be disposed of or incinerated under conditions which meet all federal, state and local environmental regulations. Since regulations may vary from one region to another, check with the agency that governs waste disposal in your area for proper procedures.
- Confirm that staples comply with the specifications of the finisher.


3.2. Replacing the Staple Cartridge

Replace the staple cartridge when LOW STAPLE (R) or LOW STAPLE (F) is displayed on the Operator's Panel.



1. Open the finisher front cover.

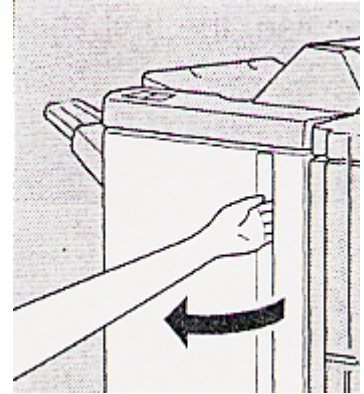


2. Pull out the stacker unit by holding the stacker unit handle.

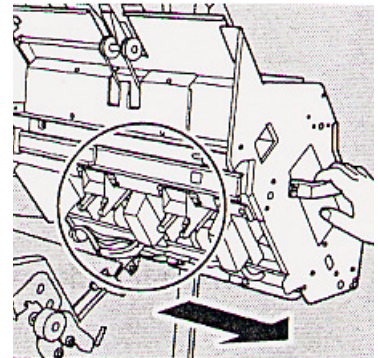

3. Pull up the cartridge housing, then remove it while sliding it along the stapler rail.

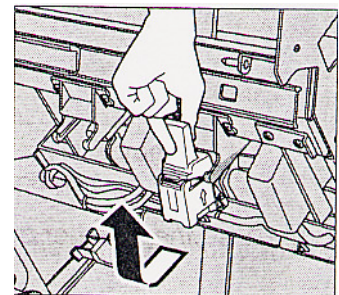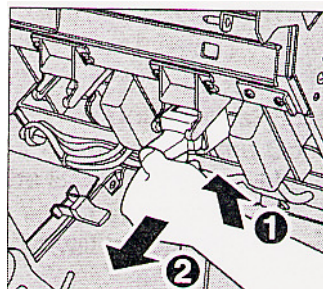



4. Remove the empty cartridge from the cartridge housing.

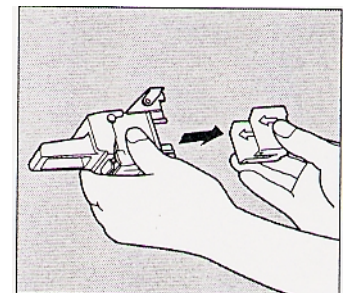



5. Insert the new cartridge into the housing.

Note:


Do not remove the remaining staples inside the housing; otherwise, the first sheet output after the replenishment will not be stapled.

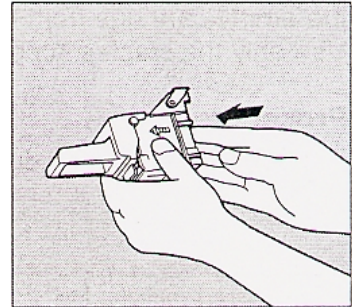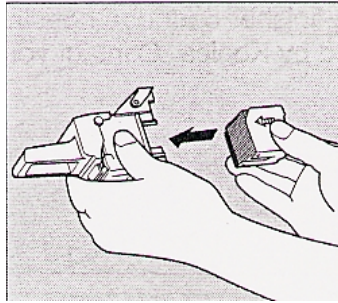


6. Insert the cartridge housing while sliding it along the stapler rail, then push in and down to secure it in place.

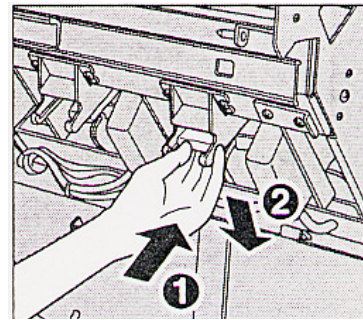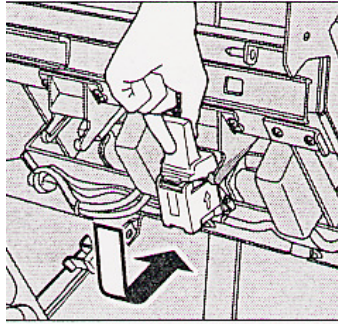

7. Return the stacker unit to its original position.

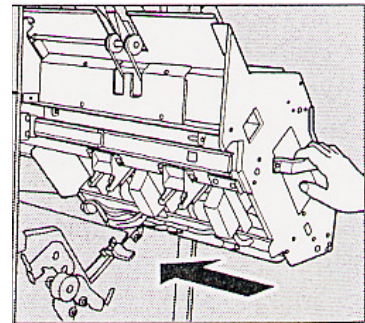

8. Close the Finisher door.

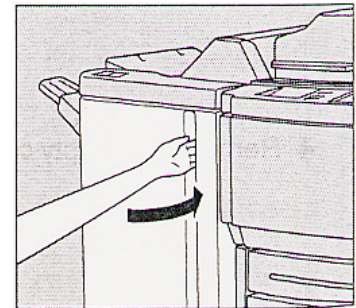


| | | | |
|----|---|----|--|
| OG | L | 00 | |
|----|---|----|--|

Chapter 4. Troubleshooting


4.1. Clearing Paper Jams

The finisher stops when a misfeed occurs and PAPER JAM is displayed on the Operator's Panel of the printer.


Follow the steps below to clear paper from the finisher.

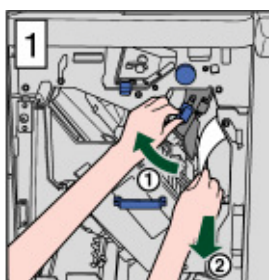


Move the blue tab and remove paper.

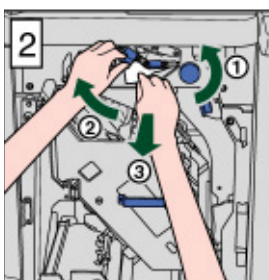

Turn the blue knob, move the blue tab, then remove paper.

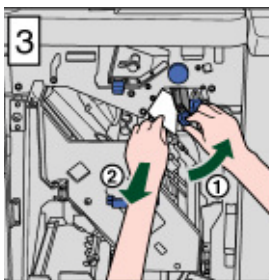


Move the blue tab and remove paper.

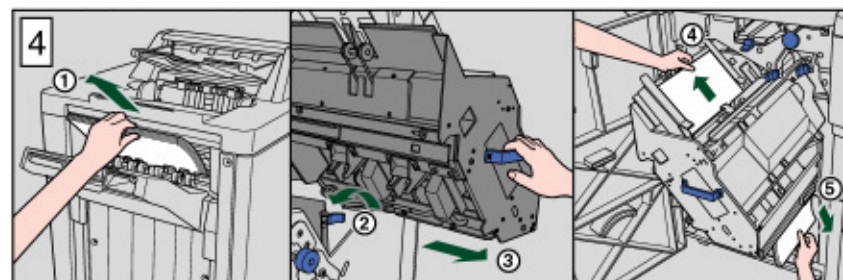


Remove the paper of a delivery tray.


Pull out the stacker unit, then remove paper.

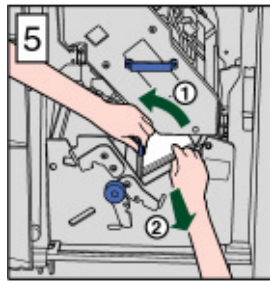

Move the blue knob and remove paper

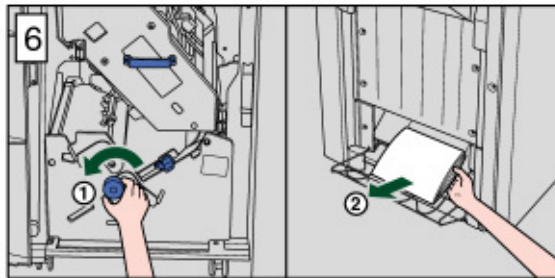


Turn the blue knob, then remove paper from the Booklet Tray (Booklet Finisher only).

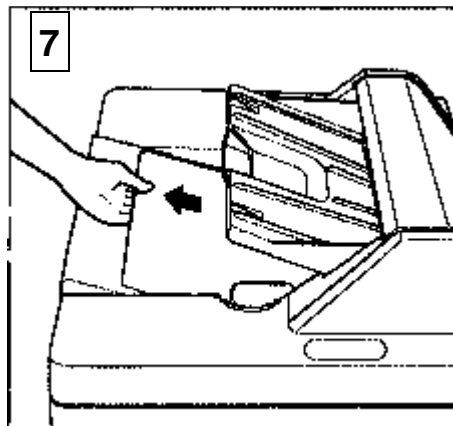



Remove paper from the Cover Sheet Feeder (Cover Sheet Feeder only).

4.2. Clearing Wedged Staples


Follow the steps below to clear wedged staples.

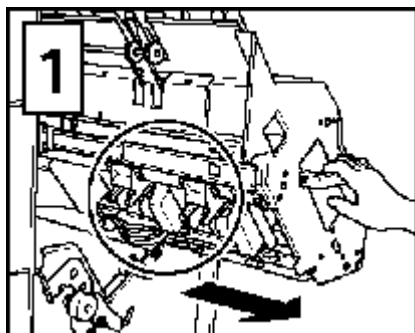


Pull out the stacker unit by holding the stacker unit handle.

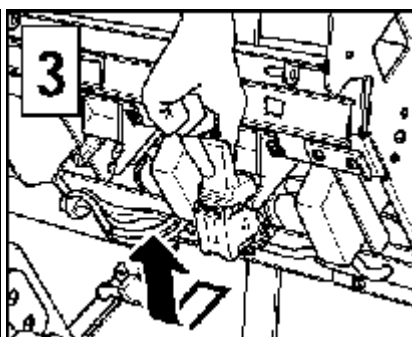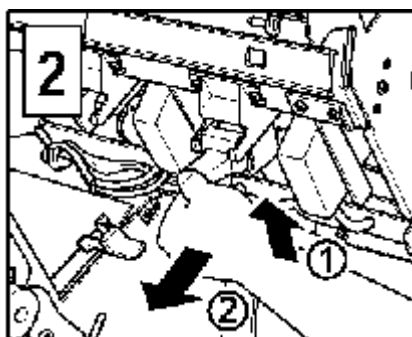


Pull up the cartridge housing, then remove it while sliding it along the stapler rail.

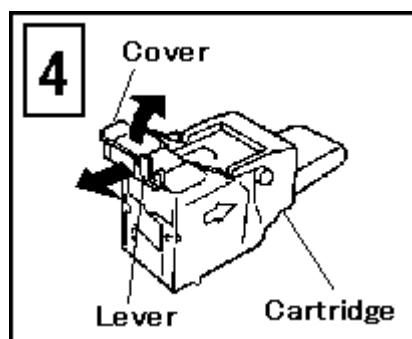



Pull the lever of cartridge, then open the cover.

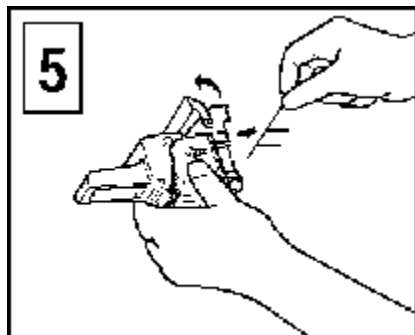


Remove the wedged staples.

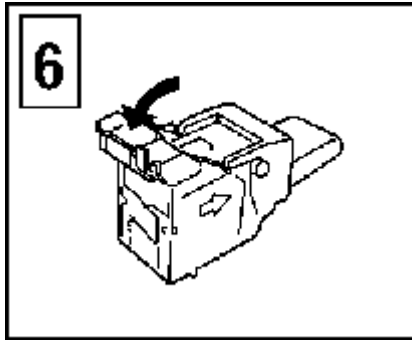

Return the Cover of cartridge to its original position.

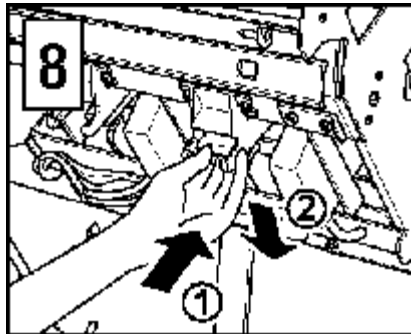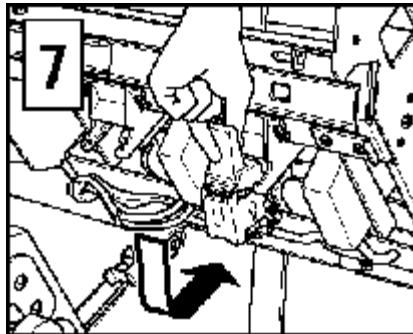

Insert the Cartridge housing while it along the stapler rail, then push in and down to secure it in place.

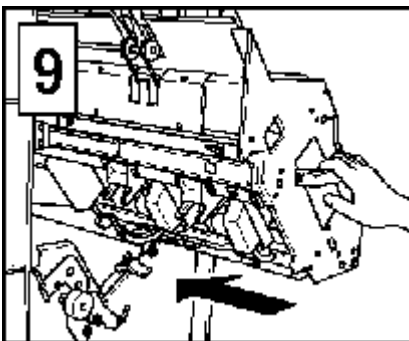


Return the stacker Unit to its original position.

After removing the wedged staples, staples do not come out from the stapler for several times, then execute the TEST PRINT of staple mode till staple appears on the paper.


Chapter 5. Others

5.1. Load the Cover Sheet (Cover Sheet Feeder only)

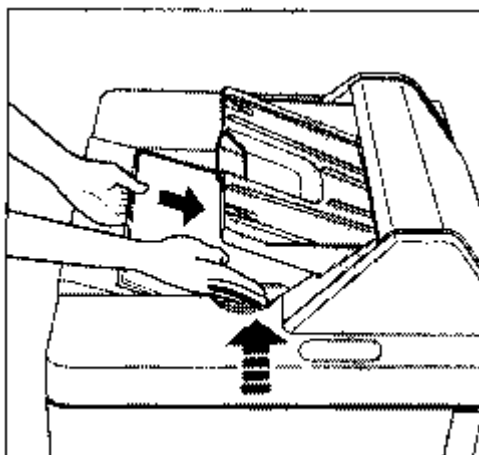

Load the cover sheet into the cover sheet feeder, and adjust the paper guides to the paper size.

5.2. Extend the Tray

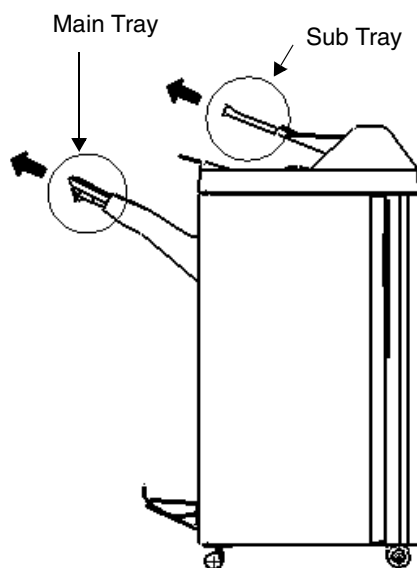

Extend the Main Tray and the Sub Tray, when the length of the printed paper is 9 inches or more.

5.3. Cancel of Staple Job

(1) Except saddle stitching mode

When the staple job is canceled, the paper of this job is delivered to the Main Tray without staple.

(2) In case of saddle stitching mode

When the staple job is canceled, the paper of this job is delivered to the Booklet Tray without staple. But the paper of this job is stapled and delivered in case that the number of paper is four or more.