




FUNCTION MAP




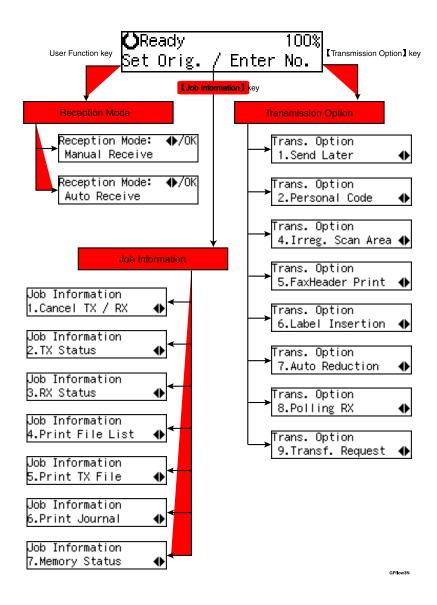

 




【User Tools 】 key

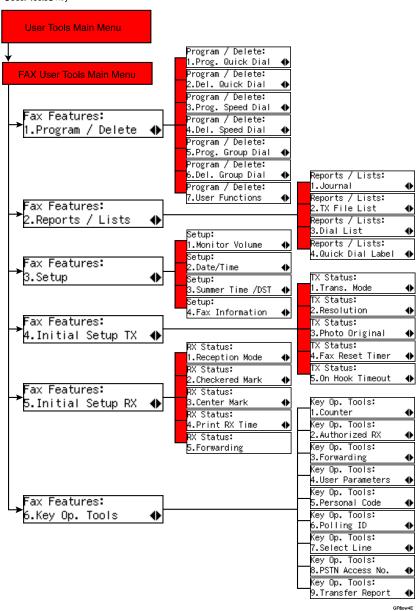









How to Read this Manual

Symbols

In this manual, the following symbols are used:

MARNING:

This symbol indicates a potentially hazardous situation that might result in death or serious injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the Safety Information section in the Copy Reference manual.

⚠ CAUTION:

This symbol indicates a potentially hazardous situation that might result in minor or moderate injury or property damage that does not involve personal injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the Safety Information section in the Copy Reference manual.

* The statements above are notes for your safety.

#Important

If this instruction is not followed, paper might be misfed, originals might be damaged, or data might be lost. Be sure to read this.

Preparation

This symbol indicates the prior knowledge or preparations required before operating.

Note

This symbol indicates precautions for operation, or actions to take after misoperation.

Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

This symbol indicates a reference.

Keys built into the machine's operation panel.









TABLE OF CONTENTS

Manuals for This Machine					
1.Transmission Options					
Overview					
Sending at a Specific Time (Send Later)					
Personal Code Transmission					
Choosing the Area to be Scanned Yourself (Irregular Scan Area)					
Fax Header Print					
Label Insertion					
Auto Reduction 1					
Polling Reception 1					
File Reserve Report					
Transfer Request					
2. Job Information					
Canceling Transmission or Reception 1					
Checking the Transmission Result (TX File Status) 1					
Checking the Reception Result (RX File Status) 1					
Printing a List of Files in Memory (Print TX File List)					
Printing a Stored Message 2					
Printing the Journal 2					
Displaying the Memory Status					











Handy Dialing Functions	23
Telephone Directory	
Redial	
On Hook Dial	
Manual Dial	
Transmission Features	
Stamp	
SEP Code	25
SUB Code	
More Transmission Functions	
Auto Fax Reception Power-up Dual Access	
Transmission with Image Rotation	
Checking the Transmission Result	
Sending a Fax Message Immediately	32
Automatic Redial	
Broadcasting Sequence	
Checking the Transmission Progress	. 32
If Memory Runs Out While Storing an Original	. 32
Batch Transmission	
ECM (Error Correction Mode)	. 33
Parallel Memory Transmission	. 33
Printed Report	34
File Reserve Report	
Communication Result Report	. 34
Communication Failure Report	
Transmission Result Report (Immediate Transmission)	. 35
4. Reception Features	
Reception	
Immediate Reception	
Memory Reception	
Substitute Reception	. 38
Screening Out Messages from Anonymous Senders	. 38
Printing Functions	40
Print Completion Beep	
Checkered Mark	. 40
Center Mark	
Reception Time	
Image Rotation	
Page Separation and Length Reduction (Not Available in Some Countries)	
Page Reduction	
TSI Print	
When There is No Paper of the Correct Size	. 42





 






5. Facsimile User Tools

5. FUCSITILIE USEI TOOIS	
Accessing the User Tools	
Assigning User Function Keys	47 48
Printing Reports/Lists	
Setting the Date and Time	
Summer Time / Daylight Saving Time	52
Changing the Initial Setup Transmission	53
Changing the Initial Setup Reception	55
6. Key Operator Settings	
Changing Key Operator Settings Counters Authorized Reception Forwarding User Parameters Personal Codes Polling ID Select Line PSTN Access Number Transfer Report RDS (Remote Diagnostic System) 7.Troubleshooting	57 58 63 70 75 79 80 81 82
When Toner Runs Out When an Error Report is Printed When Power is Turned off or Fails	84
8. Maintaining Your Machine	
Replacing the Stamp Cartridge	87










9. Appendix

Connecting the Machine to a Telephone Line and Telephone Connecting the Telephone Line	89
Specifications	
Function List	94
Communication Information	95
INDEX	99



  




















Manuals for This Machine

Two Facsimile Reference manuals are provided, the Basic Features manual and the Advanced Features manual. Please refer to the manual that suits your needs.

Advanced Features (this manual)

The Advanced Features manual describes more advanced functions, and also explains settings for key operators.

Basic Features

The Basic Features manual explains the most frequently used fax functions and operations.

Chapter 1 Getting Started

Describes part names of the machine and operation panel.

Chapter 2 Faxing

Explains basic transmission. You can also find out about other types of transmissions.

Chapter 3 Setup

Explains how to make initial settings, such as the Own Name and Own Fax Number settings. Also explains the Quick Dial, Speed Dial and Group keys. These functions allow you to store numbers and save time when dialing. This chapter also explains how to enter letters and symbols.

Chapter 4 Troubleshooting

Explains changing the volume of audible signals generated by the machine and error messages. When the display or indicator lights show unusual information, check the list and take appropriate action.























Overview

This feature describes various options that you can choose when sending a fax message. The selections you make will only apply to the current fax message.

Note

☐ If you frequently use a certain configuration of options, you can change their default settings (on or off) with the User Parameters. See P.70 "User Parameters".










Transmission Options



Sending at a Specific Time (Send Later)

Using this feature, you can instruct the machine to delay transmission of your fax message until a later time which you specify. This allows you to take advantage of off-peak telephone charges without having to be by the machine at the time.

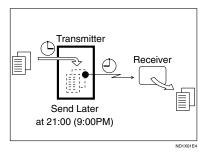




- ☐ You can not specify a time more than 24 hours.
- ☐ This feature is only available with Memory Transmission.
- Make sure that the machine is in Facsimile mode and the standby display is shown.

⊘Ready 100% Set Orig. / Enter No.

2 Set your original and select any scan settings you require.

Press the [Transmission Option] key.

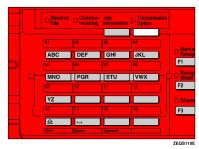

Trans. Option 1.Send Later ◆

- Confirm that "1. Send Later" is displayed.
- Press the [OK] key.
- Press @ or © to select "On" or "Off".

 
- **7** Press the **(OK)** key.
- Enter the time that you want to send the fax message.

Send Later: Press Ok Time [18:00]

Note

- ☐ When entering numbers smaller than 10, add a leading zero.
- ☐ Enter the hour setting in 24-hour format (0–23).
- ☐ If you make a mistake, press the **[Clear/Stop]** key and try again.
- ☐ If the current time shown on the display is not correct, change it. See P.51 "Setting the Date and Time".







KirCAE-advanced_FM.book Page 5 Thursday, March 8, 2001 2:04 PM



Sending at a Specific Time (Send Later)

Press the [OK] key.

The specified time is set.

\square Specify the destination.

If you want to specify another destination, press the **[OK]** key and repeat step **[D]**.

Press the [Start] key.

Note

☐ You can cancel a message transmission set up for Send Later. See P.15 "Canceling Transmission or Reception".







_ _ _ _ .



Transmission Options

Personal Code Transmission

Personal Codes allow you to keep track of machine usage (for example, for billing purposes). If everybody uses a Personal Code when they use the fax machine, the codes or the names programmed for the codes will be printed in the Journal and other reports. This will help you to check up on who has been using the machine and how often.

Preparation


Before using this feature you must register personal codes. See P.75 "Registering Personal Codes".

Limitation

- ☐ Personal codes may be any 8 digit number except 00000000 (00000001 through 99999999). You can program up to 20 personal codes. See P.75 "Personal Codes".
- 1 Make sure that the machine is in Facsimile mode and the standby display is shown.

○Ready 100% Set Orig. / Enter No.

- 2 Set your original and select any scan settings you require.
- Press the Transmission Option key.

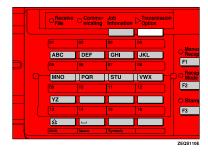

Press (or (until "2. Personal Code" is displayed.

Trans. Option 2.Personal Code ◆

- Press the [OK] key.
- 6 Press or to select "On" or "Off".

- Note
- ☐ You can cancel this feature by selecting "Off".
- Press the [OK] key.
- Enter a personal code (up to 8 digits) with the number keys.

Pers. Code: Press OK [11111111]

- Note
- ☐ If you make a mistake, press the **[Clear/Stop]** key and try again.
- ☐ Personal codes may be any string of 8–digit numbers (0 to 9). You can register up to 20 personal codes.
- Press the [OK] key.

 
The personal code is set.

1 Specify the destination.

If you want to specify another destination, press the **[OK]** key and repeat step **D**.

- Press the [Start] key.
 - Note
 - ☐ You can cancel transmission of a message set up for Personal Code Transmission.










Choosing the Area to be Scanned Yourself (Irregular Scan Area)

 Usually the machine automatically detects the size of an original when it is scanned. However, you may wish to override this and choose the area to be scanned yourself.




You can choose one of the standard paper sizes (A4 $\square \square$, A3 \square , B4 \square , 8 $^1/_2 \times 11$ " $\square \square$, 8 $^1/_2$ "×14" \square , 11"×17" \square ,).

Although you can specify a different scan area for each page when using the exposure glass, only one size is allowed when scanning from the Document Feeder.

1 Make sure that the machine is in Facsimile mode and the standby display is shown.


○Ready 100% Set Orig. / Enter No.

- 2 Set your original and select any scan settings you require.
- Press the [Transmission Option] key.

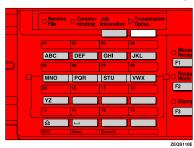

The Transmission Option menu appears.

 Press ③ or ⑤ until "4. Irreg. Scan Area" is displayed and press the [OK] key.



Press @ or > to select "On" or "Off".

Irreg.	Scan	Area:♠/OK
[On]	Off	

- Note
- ☐ You can cancel this feature by selecting "Off".
- Press the [OK] key.
- Press @ or © to select the paper size.

- Note
- ☐ To see which paper sizes have already been programmed, press ④ or ⑤.
- Press the [OK] key.
- **9** Specify the destination.

If you want to specify another destination, press the **[OK]** key and repeat step **①**.







Transmission Options

Fax Header Print


By default, the machine adds your Fax Header to each message you send so it appears on the printed fax at the other end. See Chapter 3 "Own Name/Fax Header/Own Fax Number" in the Basic Features manual.



- ☐ You can switch this feature off with the User Parameters. See P.70 "User Parameters" (Switch01, Bit5).
- 1 Make sure that the machine is in Facsimile mode and the standby display is shown.

()Ready 100% Set Orig. / Enter No.

- 2 Set your original and select any scan settings you require.
- Press the Transmission Option key.

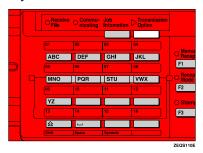

The Transmission Option menu appears.

Press (a) or (b) until "5. FaxHeader Print" is displayed and press the [OK] key.

Trans. Option 5.FaxHeader Print ♠ Press @ or > to select "On" or "Off".

FaxHeader Print: ♠/OK [On] Off

- Press the [OK] key.
- Press the [Transmission Option] key.
- **8** Specify the destination.

If you want to specify another destination, press the **[OK]** key and repeat step **B**.

○Ready 100% Enter Fax Number









Label Insertion


With this feature you can have the receiver's name printed on the message when it is received at the other end. The name will be printed at the top of the page and will be preceded by "To".

Note

- ☐ If you select Label Insertion, the label might be printed over a portion of the image when received at the other end.
- ☐ Program the receiver's name and number in a Quick Dial or Speed Dial then Label Insertion turned on with the User Parameters. See P.70 "User Parameters" (Switch01, Bit0).
- Make sure that the machine is in Facsimile mode and the standby display is shown.

○Ready 100% Set Orig. / Enter No.

- 2 Set your original and select any scan settings you require.
- 3 Press the Transmission Option key.

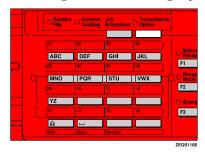

The Transmission Option menu appears.

Press @ or © until "6. Label Insertion" is displayed and press the [OK] key.

Trans. Option 6.Label Insertion ∢▶

Press ③ or ⑤ to select "Programmed Value".

Label Insertion: **∢⊳**/OK Programmed Value

- Press the [OK] key.
- **7** Specify the destination.

If you want to specify another destination, press the [OK] key and repeat step **1**.

⊘Ready 100% Enter Fax Number



 




Transmission Options


Auto Reduction

By default, if the receiver's paper is smaller than the paper you are sending on, the message is automatically reduced to fit onto the paper available at the other end.



#Important

 ☐ If you turn this feature off, the scale of the original is maintained and some parts of the image may be deleted when printed at the other end.




Note

- ☐ You can switch this feature on and off with the User Parameters. The default setting is on. See P.70 "User Parameters" (Switch01, Bit2).
- Make sure that the machine is in Facsimile mode and the standby display is shown.

○Ready 100% Set Orig. / Enter No.

2 Set your original and select any scan settings you require.

Press the [Transmission Option] key.

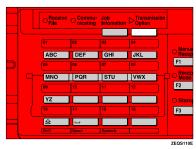

The Transmission Option menu appears.

Press (a) or (b) until "7. Auto Reduction" is displayed and press the [OK] key.

Trans. Option 7.Auto Reduction ◆

 
Press @ or D to select "On" or "Off".

 
Auto Reduc.(TX): ♠/OK [On] Off

- Press the [OK] key.
- **7** Press the **Transmission Option** key.
- Specify the destination.

If you want to specify another destination, press the **[OK]** key and repeat step **3**.

©Ready 100% Enter Fax Number










Polling Reception

Use this function if you want to poll a message from another terminal. You can also poll documents from many terminals with only one operation (use Groups to fully exploit this feature).

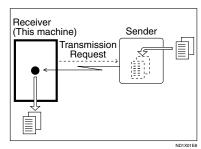


Limitation

- ☐ Polling Reception requires that the other machine can perform Polling Transmission.
- Make sure that the machine is in Facsimile mode and the standby display is shown.

()Ready 100% ßet Orig. / Enter No.

Press the [Transmission Option] key.

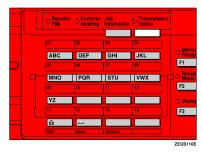

Press @ or @ until "8. Polling RX" is displayed.

Trans. Option 8.Polling RX

- Press the [OK] key.
- Press or to select "On" or "Off".

Polling	RX:	◆ /0K
[On]	Off	

- Press the [OK] key.
- Specify the other party's fax number.
- Press the [Start] key.

File Reserve Report

This report is printed after Polling Reception has been set up.

Note

☐ By default, this report is turned off. Turn it on with the User Parameters. See P.70 "User Parameters" (Switch03, Bit3).

Communication Result Report

This report is printed after a Polling Reception has been completed and shows the result of the Polling Reception.

Note

- ☐ You can also check the result of a Polling Reception with the Journal.
- \square By default, this report is turned on. Turn it off with the User Parameters. See P.70 "User Parameters" (Switch03, Bit4).











Transmission Options




Transfer Request

Transfer Request allows fax machines that have this feature to automatically distribute incoming messages onto multiple fax destinations. This feature helps you save costs when you send the same message to more than one place in a distant area, and saves time since many messages can be sent in a single operation.

The diagram below may make the concept clearer.

The Transfer Stations you specify must be machines of the same make as this machine and have the Transfer Station function.

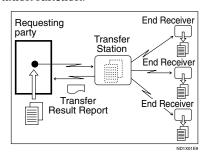

Preparation

Before using this feature, you must program the Polling ID. See P.79 "Polling ID".

Polling ID's of the requesting party (this machine) and Transfer Stations must be identical.

Before using this feature, you must program the Transfer Report. See P.82 "Transfer Report".

The following terminology is used in this section.

Requesting Party

The machine where the message originates from, that is, the machine making a Transfer Request (in this section, this machine).

Transfer Station

The machine that forwards the incoming message to another destination, that is, the machine that receives the Transfer Request.

♦ End Receiver

The final destination of the message, that is, the machine that the Transfer Station sends to. End Receivers must be programmed into Quick Dials, Speed Dials or Groups in the Transfer Station.

Limitation

- ☐ You can specify only one Transfer Stations in a Transfer Request.
- ☐ You can have up to 30 End Receivers per Transfer Station. If you specify a Transfer Station Group, the Group counts as a single receiver.
- ☐ The combined total of End Receivers and Transfer Stations you specify with the number keys cannot exceed 30.
- Set your original and select any scan settings you require.
- Press the [Transmission Option] key.

_	O Receive	Communicating	ı- Job g Infomation	Transmission Option	
\dashv	(O1	102	103	04	
					○ Ma
	ABC	DEF	GHI	JKL	F1
\supset	05	06	07	08	_
19	MNO	PQR	STU	[VWX]	Res
	09	10	11	12	F2
	YZ				○ Sta
\top (13	14	15	16	F3
╡	釒	u			
		Space	Symbols		

ZEQS110E









Press @ or @ until "9. Transf. Request" is displayed.

Trans. Option 9.Transf. Request

- Press the [OK] key.
- Press @ or D to select "On" or "Off".

∏ransf.Request: ♠/OK (On) Off

- Press the [OK] key.
- **U** Specify the Transfer Station.

If you make a mistake, press the [Clear/Stop] key and try again.

Transf. Stn.: Press OK

- Press the [OK] key.
- Specify the End Receiver.



☐ You cannot enter the numbers of the End Receivers directly. The numbers must be stored in Quick Dials, Speed Dials or Groups in the Transfer Station(s).

Receive Stn.: Press OK [#12**■■**]

- Press the [OK] key.
- Press or to select "Yes" or "No".

Add Recv. Stn.? [Yes] Nο

Press the [OK] key.

If you selected "Yes", go back to step **2**.

Press the [Start] key.

Specifying an End Receiver

When you make a Transfer Request, you must specify the final destinations (End Receivers) for your mes-

You cannot enter the numbers of the End Receivers directly. Instead, enter a simple code that describes where the numbers are stored in the Transfer Station (in Quick Dials, Speed Dials or Groups).

The numbers must first have been stored in Quick Dials, Speed Dials or Groups in the Transfer Station(s).

Quick Dial

Enter [#] followed by the number (2 digits) of the Quick Dial where the End Receiver is stored. For example, to choose the number stored in Quick Dial 01 in the Transfer Station, enter: [#][0] [1]

Speed Dial

Enter [#], [*] followed by the Speed Dial code (2 digits). For example, to choose the number stored in Speed Dial 12 in the Transfer Station, enter: [#][X][1][2]

Group Dial

Enter [#], [*], [*] followed by the Group number (2 digits). For example, to choose the number stored in Group 04 in the Transfer Station, enter: [#][#][#][0]





















2. Job Information

Canceling Transmission or Reception


Transmission files are originals that have been stored in memory and are awaiting transmission. The features that produce transmission files are Memory Transmission, Transfer Request, Polling Reception. For details about these features, see Chapter 2 "Memory Transmission" in the Basic Features manual,P.12 "Transfer Request", and P.11 "Polling Reception".

If you notice an error in the destination specified or the document content after scanning a document into memory, you can cancel transmission of that document. This is done by searching for the document in the fax machine's memory and deleting it.

Note

- You can cancel Memory Transmission even while files are being sent. However, any pages that have already been sent cannot be canceled.
- ☐ To cancel transmission in progress, press the [Clear/Stop] key.
- ☐ You can print out a File List to confirm the transmission files stored in memory.
- Make sure that the machine is in Facsimile mode and the standby display is shown.

⊘Ready 96% Set Orig. / Enter No. 2 Press the [Job Information] key.

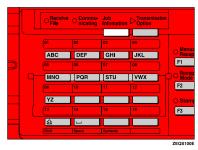

Job Information 1.Cancel TX / RX **∢**▶

Confirm that "1. Cancel TX / RX" is displayed.

- Press the [OK] key.
- Display the file you want to cancel.

To display the file, enter the file number with the number keys, or press ③ or ⑤ until the file number is displayed.

Cancel File? **♦**/OK No.0018 9876543210

- Note
- ☐ If you make a mistake, press the **[Cancel]** key and try again.
- ☐ If you cannot find the file you want to cancel, the document has already been sent.









Job Information

Press the [OK] key.

Cancel?		◆ /0K
[Yes]	No	

Confirm that you have selected the correct file, and press the [OK] key.

"Trans. Cancelled File Deleted" is displayed, and the machine returns to standby display.









Checking the Transmission Result (TX File Status)


This function let you check up on the last 50 completed transmissions without having to print the Journal. You can browse through the transmitted messages on the display.

Limitation

- ☐ Only the last 50 communications are displayed. Earlier transmissions are not available.
- ☐ If a transmission is completed while you are using this function, the result will not be shown until you exit TX File Status and start it again.
- 1 Make sure that the machine is in Facsimile mode and the standby display is shown.

()Ready 100% βet Orig. / Enter No.

Press the [Job Information] key.

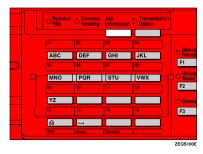


The Information menu is shown.

Press @ or @ until "2. TX Status" is displayed and press the [OK] key.

Uob Information 2.TX Status

4 Press or to scroll through the messages.

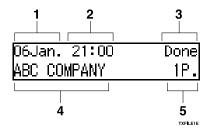

- 1. Date
- 2. Time
- 3. Transmission result
- 4. Destination name
- 5. Page
- Press the [OK] key.

The machine returns to standby display.







Job Information



Checking the Reception Result (RX File Status)


This function let you check up on the last 50 messages received without having to print the Journal. You can browse through the received messages on the display.

? Limitation

- ☐ Only the last 50 communications are displayed. Earlier messages are not available.
- ☐ If a message is received while you are using this function, the result will not be shown until you exit RX File Status and start it again.
- Make sure that the machine is in Facsimile mode and the standby display is shown.

○Ready 100% Set Orig. / Enter No.


Press the [Job Information] key.

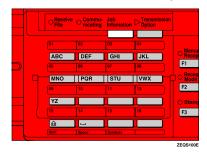

The Information menu is shown.


Press @ or @ until "3. RX Status" is displayed and press the [OK] key.

Job Information 3.RX Status ◆ Press (a) or (b) to scroll through the messages.

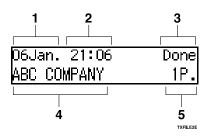

- 1. Date
- 2. Time
- 3. Reception Result
- 4. Recipient
- 5. Page
- Press the [OK] key.

 The machine returns to standby display.









Printing a List of Files in Memory (Print TX File List)


Print this list if you wish to find out which files are stored in memory and what their file numbers are. Knowing the file number can be useful (for example when erasing files).

Note

- \square The contents of an original stored in memory can also be printed. See P.20 "Printing a Stored Message".
- 1 Make sure that the machine is in Facsimile mode and the standby display is shown.

(C)Ready ßet Orig. ∕ Enter No.

Press the [Job Information] key.

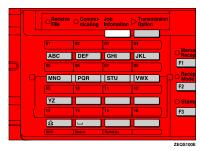

Press @ or D until "4. Print File List" is displayed.

Nob Information 4.Print File List

- Press the [OK] key.
- Press the [Start] key.

The File List is printed out and the machine returns to standby display.









Job Information




Printing a Stored Message

If you wish to check the contents of a fax that is stored in memory and has not been sent yet, use this procedure to print it out.

1 Make sure that the machine is in Facsimile mode and the standby display is shown.

○Ready 96% Set Orig. / Enter No.

Press the [Job Information] key.

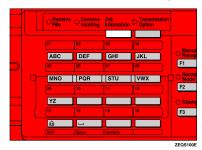

The Information menu is shown.

Press (a) or (b) until "5. Print TX File" is displayed and press the [OK] key.

Uob Information 5.Print TX File **♦**

1 Display the file you want to print.

The registered name or fax number appears on the lower line.

 
- Note
- ☐ Enter the file number with the number keys, or search using ③ or ⑤.
- ☐ If you make a mistake, press the **[Cancel]** key and try again.

 
Press the [OK] key.

6 Press the [Start] key.

The document is printed and the machine returns to standby display.











Printing the Journal

The Journal contains information about the last 100 communications made by your machine. When automatic communication report printing is turned on, the Journal is printed automatically after every 50 communications (receptions + transmissions). You can also print a copy of the Journal at any time by following the procedure below.

Note

- ☐ The sender's name column of the Journal is useful when you need to register a Specified Sender.
- ☐ If you do not want the Journal to be printed automatically, you can turn automatic printing off. See P.70 "User Parameters" (switch 03, bit 7).
- Make sure that the machine is in Facsimile mode and the standby display is shown.

○Ready 96% Set Orig. / Enter No.

Press the [Job Information] key.

	Receive	e Commu nicating	- Job Infomatio	on Coption	sion
	01	02	03	04	
	ABC	DEF	GHI	JKL	Manu Rece
	05	06	07	08	F1
	MNO	PQR	STU	VWX	Recel
	09	10	11	12	F2
	YZ				│
	13	14	15	16	F3
H `	企	_			T
	Shift	Space	Symbols		
					ZEQS100

Press @ or D until "6. Print Journal" is displayed.

Job Information 6.Print Journal

- Press the [OK] key.
- Press the [Start] key.

The report is printed and the machine returns to standby display.





Job Information




Displaying the Memory Status

Use this function to display a summary of current memory usage. Items shown are the percentage of free memory space, the number of files to be sent, and the number of received messages to be printed.

1 Make sure that the machine is in Facsimile mode and the standby display is shown.

OReady 99% Set Orig. / Enter No.

Press the [Job Information] key.

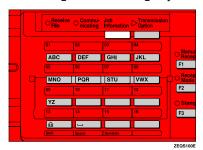

The Information menu is shown.

Press (a) or (b) until "7. Memory Status" is displayed and press the [OK] key.

Job Information 7.Memory Status ◆

The usage is displayed. When you have finished, press the [OK] key.

Memory Status: /OK Memory: 99% Press the [OK] key.

Memory Status: /OK TX Files: 001file(s)

The number of files to be sent is displayed.

6 Press the [OK] key.

Memory Status: /OK RX Files: 000file(s)

The number of received files is displayed.

 
Note

 
☐ Memory can hold up to about 160 pages.

Press the [OK] key.

○Ready 99% Set Orig. / Enter No.

The machine returns to standby display.





Handy Dialing Functions

Chain Dial

This allows you to compose a telephone number from various parts, some of which may be stored in Quick Dials or Speed Dials and some of which may be input using the number keys.

Limitation

☐ Maximum length of telephone or fax number: 254 digits

Note

☐ For Memory Transmission and Immediate Transmission, insert a pause between numbers. For On Hook Dial and Manual Dial, no pause is needed.

© (Example) 01133-1-555333

Assume that 01133 is stored in Quick Dial 01 and that 1 is stored in Speed Dial 01.

- ① Place the original and select any scan settings you require.
- ② Press the Quick Dial key [01].
- ③ Press the [Pause/Redial] key.
- 4 Press the [Speed Dial] key and [0] and [1] using the number keys.
- ⑤ Press the [Pause/Redial] key.
- Enter [5], [5], [5], [3], [3] with the number keys.
- Press the [Start] key.

Telephone Directory

This feature lets you find a stored Speed Dial quickly by just entering a single letter, for example, the first letter of the name stored for that number.

Preparation

To use the Telephone Directory feature, you need to register a search letter when you program Speed Dials. See Chapter 3 "Speed Dial" in the Basic features manual.

Limitation

- ☐ Speed Dial codes cannot be searched for by symbol or number.
- ☐ Names enclosed within brackets are not searched for.
- Set your original and select any scan settings you require.
- Press the [Speed Dial] key.










Enter the search letter by pressing one of the Quick Dial keys (A to Z).

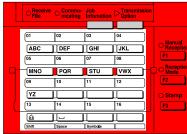

ZEQS

Speed Dial: Search/AZ [ᢂ∎∎]



- ☐ The names or fax numbers registered in Speed Dials are shown in numerical order on the display.
- Press (a) or (b) until the destination you are searching for is displayed and press the [OK] key.



- ☐ If you make a mistake, press the **[Cancel]** key to try again.
- ☐ If you wish to dial another destination, press the [OK] key and dial another fax number.
- Press the [Start] key.

Redial

The machine memorizes the last 10 destinations that have been dialed. If you wish to send a message to a destination which you faxed to recently, the Redial feature saves you finding and entering the number again.

 
- Set your original and select any scan settings you require.
- Press the [Pause/Redial] key.
- Press @ or @ until the destination you want to redial is displayed.

 
Redial: **♦**/0K 9876543210

- Press the [OK] key.
- Press the [Start] key.

Limitation

- ☐ The following kinds of destinations are not memorized.
 - · Ouick Dials
 - · Speed Dials
 - Group Dials
 - Destinations dialed as End Receivers for Transfer Request
 - Any destinations if multiple destinations were dialed
 - Destinations dialed by Redial (regarded as already memorized)



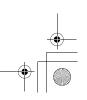





On Hook Dial

This is just like using the external telephone, except you do not have to pick up the external telephone before dialing. Just press the [On Hook Dial] key and dial the number. If you hear a voice, you can pick up the external telephone and speak with the other party.

See Chapter 4 "Adjusting Volume" in the Basic Features manual.

Set your original and select any scan settings you require.

See Chapter 2 "Setting Originals" in the Basic Features man-

See Chapter 2 "Scan Settings" in the Basic Features manual.

Press the [On Hook Dial] key.



You will hear a low tone from the internal speaker. If you wish to cancel this operation, press the [On Hook Dial] key again.

3 Dial.

On Hook: **☎**9876543210**■■■■■■**

The machine immediately dials the destination. If you make a mistake, press the [On Hook Dial] and return to step **2**.

4 When the line is connected and you hear a high-pitched tone, press the [Start] key.

ABC COMPANY ßet Orig. ∕ Enter No.

- If you hear a voice, pick up the external telephone before you press the [Start] key and notify the destination that you want to send a fax message (ask them to switch to Facsimile mode).
- After transmission the machine will return to standby mode.

()Ready 100% ßet Orig. / Enter No.









Manual Dial

The external telephone is required.

Pick up the handset of the external telephone and dial. When the line is connected and you hear a high-pitched tone, press the [Start] key to send your fax message. If, on the other hand, you hear a voice at the other end, continue your conversation as you would normally over the telephone.

Limitation

- ☐ The result of the transmission with manual dial is not mentioned in the Transmission Result Report (Immediate Transmission).
- Set your original and select any scan settings you require.

See Chapter 2 "Setting Originals" in the Basic Features man-

See Chapter 2 "Scan Settings" in the Basic Features manual.

2 Pick up the external telephone.

You will hear a tone.

3 Dial.

If you make a mistake, replace the external telephone and try again from step **2**.

 
When the line is connected and you hear a high-pitched tone, press the [Start] key to send your fax message.

ABC COMPANY Set Orig. / Enter No.

Replace the handset of the external telephone.

After transmission the machine will return to standby mode.

○Ready 100% Set Orig. / Enter No.










Stamp

The optional Document Feeder is required.

When sending a fax message using the Document Feeder (ADF), the machine can stamp a circle mark at the bottom of the original. This stamp indicates that the original has been successfully stored in memory for Memory Transmission, or that it has been successfully sent for Immediate Transmission.

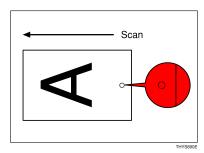


Limitation

- ☐ Stamp only works when scanning from the Document Feeder.
- ☐ You cannot turn the Stamp feature on or off while a document is being scanned.
- ☐ Do not open the Document Feeder while scanning the document. Document jam could occur.

Note

- □ When the stamp starts getting lighter, replace the cartridge. See P.87 "Replacing the Stamp Cartridge".
- ☐ If a page was not stamped even though the Stamp feature is turned on, you need to re-send that page.
- ☐ By default, Stamp is turned off. If you use this feature often, you can adjust the User Parameters so that the home setting is on. In this case, Stamp can easily be turned off for any single transmission by pressing the [F3] key. See P.70 "User Parameters" (Switch00, Bit0).

Press the [F3] key.

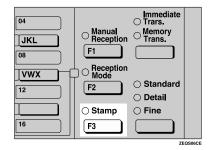

The Stamp indicator will light. Pressing the [F3] key again will turn it off.





SEP Code

Normally you can only use Polling Reception to receive faxes from machines that have the Polling Reception feature of the same make. However, if the other machine of another make supports a polling reception, you can receive fax messages from the other party using this method instead.


Preparation

You need to assign the Dial Option feature to a User Function key beforehand. See P.47 "Assigning User Function Keys".


Note

- ☐ The ID can be up to 20 digits long and consist of digits.
- ☐ Make sure the ID matches the other terminal of the fax you are receiving from.
- You can store IDs in Quick Dials, Speed Dials, and Groups with number keys.
- ☐ Messages you receive using this feature are marked "SEP" on all reports.
- Make sure that the machine is in Facsimile mode and the standby display is shown. Then enter the fax number.

Dest.1 OK to Add **盎**9876543210**■■■■■■■■** Press the [User Function] key assigned with the Dial Option feature.

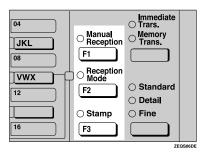

 Press (a) or (b) until "2. SEP" is displayed and press the [OK] key.




Enter the SEP code with the number Keys and press the [OK] key.



When a password (PWD) is necessary

 
- Press the [User Function] key assigned with the Dial Option feature.
- Press @ or @ until "4. PWD" is displayed and press the [OK] key.



Enter the PWD code with the number keys and press the [OK] key.

PWD:	Press OK
1234	




 





Press the Transmission Option key.

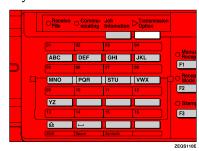


Press @ or @ until "8. Polling RX"

Trans. Option 8.Polling RX ◆

Press the [OK] key.

is displayed.

 Press @ or > to select "On" or "Off".



- Press the [OK] key.
- Press the [Start] key.

SUB Code

Transfer Request is only possible with machines of the same make that have the Transfer Request feature. However, if you use the SUB/SID function, you can send and receive fax messages to and from other makers' machines that have the SUB/SID feature.

Preparation

You need to assign the Dial Option feature to a User Function key beforehand. See P.47 "Assigning User Function Keys".

- Note
- ☐ The ID can be up to 20 digits long and consist of spaces, [#] and [★].
- ☐ Make sure the ID matches the specification of the fax you are sending to.
- ☐ You can store IDs in Quick Dials, Speed Dials, and Groups.
- Messages you send using this feature are marked "SUB" on all reports.
- Set your original and make any changes to the scan settings if necessary.
- 2 Dial the destination fax number using the number keys.











Press the [User Function] key assigned with the Dial Option feature.

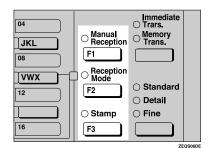

 Confirm that "1. SUB" is displayed and press the [OK] key.



Enter the SUB code with the number keys and press the [OK] key.

SUB: Press OK 1234

When a password (SID) is necessary

- Press the [User Function] key assigned with the Dial Option feature.
- Press @ or D until "3. SID" is displayed and press the [OK] key.

3 Enter the SID code with the number keys and press the [OK] key.





Press the [Start] key.

 
Dest.1 Press Start ☎9876543210▮▮▮▮▮▮▮▮



☐ If you use Immediate Transmission and the destination fax machine does not support the Dial Option feature, a message will appear on the display to inform you of this. In this case, press the [OK] key to cancel the transmission.













More Transmission Functions

Auto Fax Reception Power-up

This machine can be set to shut down automatically if nobody has used it for a while. In these situations, even though the operation switch is off, the machine can still receive incoming messages as long as the Main Power switch is on.

Important

☐ Reception is not possible if both the operation switch and Main **Power** switch are turned off.

Note

☐ By default, messages are printed as soon as they are received (Immediate Reception). To change this, see P.70 "User Parameters" (Switch14, Bit0).

Dual Access

The machine can scan other messages into memory even while sending a fax message from memory, receiving a message into memory, or automatically printing a report. Since the machine starts sending the second message immediately after the current transmission terminates, the line will be used efficiently.

Note that during Immediate Transmission or when in User Tools mode, the machine cannot scan an original.

Transmission with Image Rotation

For most purposes, set A4/LT originals in the landscape direction (\square). If you set an A4/LT original in the portrait direction (\square) , the image will be sent rotated by 90°. Providing the receiver has A4/LT landscape paper (\Box) , the message will be printed the same size as the original.

Limitation

☐ This feature is not available with Immediate Transmission.

Checking the Transmission Result

Turn the Communication Result Report on if you want a report to be printed after every successful transmission. See P.34 "Printed Re-

If you leave the Communication Result Report off, the report will not be printed after every transmission. However, should a transmission fail, a Communication Failure Report will be printed in-

- If you turn the Transmission Result Report (Immediate Transmission) off, the Error Report will be printed when the communication on fails.
- You can also check the transmission result by examining the Journal. See P.21 "Printing the Journal". You can either print or scroll through the Journal on the display. See P.17 "Checking the Transmission Result (TX File Status)".







Transmission Features



To send a fax message immediately, use Immediate Transmission. If you have just set up an original for broadcasting, Immediate Transmission will interrupt the current communication.

Your original will not be sent until previously queued files have been sent.

Automatic Redial

If a fax message could not be transmitted because the line was busy or an error occurred during transmission, redialing is done 4 times at 5 minutes intervals (these figures vary according to which country you are in).

If redialing fails after four redials, the machine cancels the transmission and prints the Communication Result Report or Communication Failure Report.

Broadcasting Sequence

If you dial several destinations for the same message (Broadcasting) the messages are sent in the order in which they were dialed. If the fax message could not be transmitted, the machine redials that destination after the last destination specified for Broadcasting. For example, if you specify four destinations A through D for broadcasting, and if the lines to destinations A and C are busy, the machine dials the destinations in the following order: A, B, C, D, A, and C.

Checking the Transmission **Progress**

To check which destinations the fax message has been sent to so far, print the TX file list.



If Memory Runs Out While Storing an Original

If you run out of memory while storing an original (free space reaches 0%), "Memory is Full. Storing Stopped, Transmission Has Been Cancelled. " is displayed.

Memory is Full. ßtoring Stopped, /0K

Press the **(OK)** key to transmit the stored pages only.

Transmission Has Been Cancelled.

Note

☐ By default, successfully scanned pages are sent. If you wish to change this setting, please contact your service representative.

Batch Transmission

If you send a fax message by Memory Transmission and there is another fax message waiting in memory to be sent to the same destination, that message is sent along with your original. Several fax messages can be sent with a single call, thus eliminating the need for several separate calls. This helps save communication costs and reduce transmission time.

Fax messages for which the transmission time has been set in advance are sent by batch transmission when that time is reached.

Note

☐ By default Batch Transmission is switched on. You can switch it on or off with the User Parameters. See P.70 "User Parameters" (Switch14, Bit2).









ECM (Error Correction Mode)

This feature automatically sends data that was not transmitted successfully using a system that complies with international standards.

ECM requires that the destination machine has the same feature.

Parallel Memory Transmission

This function dials while the original is being scanned. Standard Memory Transmission stores the original in memory, then dials the destination. Parallel Memory Transmission allows you to quickly determine whether a connection was made. In addition, this function scans the original faster than Immediate Transmission and is useful when you are in a hurry and need to use the original for another purpose.

Note

☐ By default this feature is turned on. You can change this with the User Parameters. See P.70 "User Parameters" (Switch07, Bit2).

Limitation

- ☐ Standard Memory Transmission is used instead of Parallel Memory Transmission in the following cas-
- When the line is busy and could not be connected to
- With Send Later
- With Transfer Request
- When you store an original for Memory Transmission while another communication is in progress

- When two or more destinations are specified
- When the original is set on the exposure glass

- ☐ If you press the [Clear/Stop] key, the original jams, or memory becomes full during Parallel Memory Transmission, the machine stops transmitting and prints the Communication Result Report. The file is erased.
- ☐ Total stored page numbers are not printed in the Parallel Memory Transmission. Only the page numbers are printed, such as P.1, P.2 not 1/2, 2/2.
- ☐ If you run out of memory, normal Memory Transmission takes place.







Transmission Features



Printed Report

File Reserve Report

This report is printed after an original is stored in memory. It helps you review the contents and the destinations of stored originals. Even if the machine is set up not to print this report, it is still printed if an original could not be stored.

Note

- ☐ You can turn this report on and off. By default, it is not printed. See P.70 "User Parameters" (Switch03, Bit2).
- ☐ You can choose whether to include part of the original image on the report (part of the image is printed by default). See P.70 "User Parameters" (Switch04, Bit7).

Communication Result Report

This report is printed when a Memory Transmission is completed so you can check the result of the transmission. If two or more destinations are specified, this report is printed after the fax message has been sent to all the destinations. If the machine is set up not to print this report and the fax message could not be successfully transmitted, the Communication Failure Report is printed. See P.34 "Communication Failure Report".

Note

 
☐ By default, this function is turned on. You can turn it off with the User Parameters. See P.70 "User Parameters" (Switch03, Bit0).

 
- ☐ You can choose whether to include part of the original image on the report (by default, part of the image is printed). See P.70 "User Parameters" (Switch04, Bit7).
- ☐ The "Page" column gives the total number of pages. The "Not Sent" column gives the number of pages that could not be sent successfully.

Communication Failure Report

This report is only printed if the Communication Result Report is turned off and a message could not be successfully transmitted with Memory Transmission. Use it to keep a record of failed transmissions so you can send them again.

- ☐ You can choose whether to include part of the original image on the report (by default, part of the image is printed). See P.70 "User Parameters" (Switch04, Bit7).
- ☐ The "Page" column gives the total number of pages. The "Not Sent" column gives the number of pages that could not be sent successfully.







Printed Report

Transmission Result Report (Immediate Transmission)

If you turn this report on, a report will be printed after every Immediate Transmission so you have a record of whether the transmission was successful or not. If the machine is set up not to print this report and the fax message could not be successfully transmitted, the Error report is printed instead.

- \square You can switch this report on or off using the User Parameters. See P.70 "User Parameters" (Switch03, Bit5).
- \square If the page was sent successfully, the "Page" column gives the total number of pages that were sent successfully. The "Not Sent" column gives the number of pages that could not be sent successfully.






















4. Reception Features

Reception

Immediate Reception

Each page of a received fax message is printed as soon as it is received. This method is used for standard fax messages.

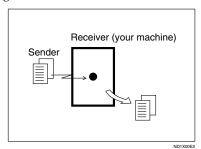

Display During Reception

The sender's name or fax number appears on the upper line.

ABC COMPANY Set Orig. / Enter No.


Reception Resolution

This machine supports **Standard**, **Detail** and **Fine** resolutions for reception. This may differ from the sender's intention.

Reception will not take place if there is not enough free memory left. If free memory reaches 0% during Immediate Reception, any further reception becomes impossible and the current communication is terminated.

Memory Reception

The machine waits until all pages of the message have been received into memory before printing the message.

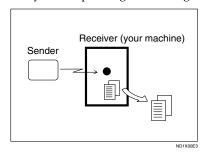

This method is used with Substitute Reception. See P.38 "Substitute Reception".

#Important

- ☐ All the messages stored in memory are deleted if the power is switched off for more than one hour.
- ☐ The machine may not be able to receive large numbers of messages or messages with a high data content. In such cases, we recommend you switch the above features off.

Limitation

☐ The machine may not be able to receive fax messages when the free memory space is low.

Note

☐ If the memory free space reaches 0% during Memory Reception, the machine can no longer receive the current fax message and stops communicating.







Substitute Reception

If any of the conditions listed below are met, the machine automatically switches to Memory Reception mode and stores messages in memory instead of printing them. This reception mode, in which a received fax message is stored in memory unprinted, is called Substitute Reception. Messages received using Substitute Reception are automatically printed when the condition which caused the machine to use Substitute Reception is rectified. Substitute Reception takes place when:

- Paper runs out
- Toner runs out
- Paper is jammed
- A cover is open
- A fax is received during a copy or print run

Limitation

 Reception may not take place if there is not enough free memory left.

Note

- ☐ The Receive File indicator lights to let you know when message(s) have been received using Substitute Reception.
- ☐ If free memory reaches 0% during Substitute Reception, any further reception becomes impossible and the current communication is terminated.

Screening Out Messages from Anonymous Senders

 
To help you screen out unwanted messages that may fill up machine memory, the machine can be programmed to only use Substitute Reception under the following conditions.

Four settings are available:

- Enabled unconditionally (Free)
- Enabled for Own Name/Own Fax Number is received
- Enabled for Polling ID match
- Disabled (Reception off)

- ☐ The default setting is "When Own Name or Own Fax Number is received", only storing messages when the Own Name/Own Fax Number is present. You can change this with the User Parameters. See P.70 "User Parameters" (Switch05, Bit2,1).
- Even if the sender does not have an Own Name or Own Fax Number, the machine will still receive messages using Substitute Reception if:
 - Paper becomes jammed while the power switch is on
 - For some reason printing is not possible for example when copy job is in progress
- ☐ The machine must be of the same manufacturer and matches the Polling ID.









When Own Name or Own Fax Number is Received

The machine switches to Substitute Reception only when the sender has programmed their Own Name or Own Fax Number. If the power is switched off for more than an hour, all the messages received into memory are deleted. In that case, the Power Failure Report or the Journal can be used to identify which messages are lost so you can ask the senders to transmit them again.

#Important

☐ If a sender has not programmed their Own Name or Own Fax Number, the machine may reject an important fax message. We recommend that you ask important senders to register an Own Name or Own Fax Number in advance.



The machine switches to Substitute Reception regardless of whether or not the sender has programmed their Own Name or Own Fax Number.







Reception Features



Printing Functions

Print Completion Beep


By default, the machine beeps to let you know when a received message has been printed.

Note

☐ You can alter the volume of the beep or turn it off completely (set the volume to the minimum level). See Chapter 4 "Adjusting Volume" in the Basic Features manual.

Checkered Mark

By default, a checkered mark is printed on the first page of fax messages to help you separate them.

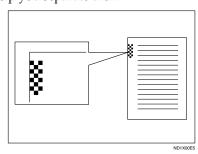


Note

☐ You can turn this feature off with the Initial Setup RX settings. See P.55 "Changing the Initial Setup Reception".

Center Mark

By default, marks are printed halfway down the left side and at the top center of each page received. This makes it easy for you to position a hole puncher correctly when you file received messages.

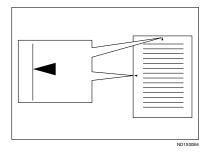



Limitation

☐ The center mark may deviate a little from the exact center of the edge.

Note

  ☐ You can turn this feature off with the Initial Setup RX. See P.55 "Changing the Initial Setup Reception".







Reception Time

You can have the date and time when a message was received printed at the bottom of the received image. This feature is turned off by default—turn it on with the Initial Setup RX settings. See P.55 "Changing the Initial Setup Reception".

Limitation


☐ When a received message is printed on two or more sheets, the date and time is printed on the last page.

Note

☐ The date and time when the message was printed can also be recorded on the message. If you need this feature, please contact your service representative.


Image Rotation

If you have installed paper in the cassette portrait \square , incoming fax messages will be rotated automatically to fit on the paper.

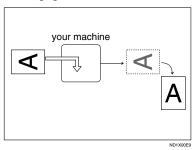

Page Separation and Length **Reduction (Not Available in** Some Countries)

When the size of a received message is longer than the paper loaded in the machine, each page of the message can be split and printed on several sheets, or reduced and printed on a single sheet. For example, this feature splits the message if the length exceeds 20mm or more, by reducing within 20mm. When a message is split, the split mark (*) is inserted at the split position and about 10mm of the split area is duplicated on the top of the second sheet.

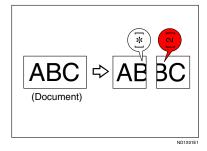

- ☐ Your service representative can customize this feature with the following settings. Bracketed values are defaults.
 - Reduction (on)
 - Print split mark (on)
 - Overprinting (on)
 - Overprinting length (10mm)
 - Guideline for split (when message is 20mm longer than paper)








Reception Features



Page Reduction

If you turn this feature on and you receive a message that is longer than the paper in the cassette, usually the machine prints it on two pages. The machine reduces the width and length of the received image so that it will fit on one page. If A4D paper size is loaded and a message of B4 D size is received, the machine will reduce the message to a single A4D sheet.

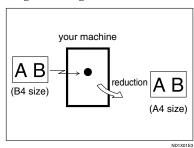



TSI Print

☐ You can turn it on or off with the User Parameters. See P.70 "User Parameters" (Switch02, Bit3).

Usually the sender's Fax Header is printed on received messages. If the

sender has not programmed their Fax

Header, you will not be able to identi-

fy them. However, if you turn this

feature on, the sender's Name or Fax

Number is printed instead so you can

find out where the message came



 
☐ By default, this feature is turned off. Switch it on with the User Parameters. See P.70 "User Parameters" (Switch10, Bit3).

 
P.41 "Page Separation and Length Reduction (Not Available in Some Countries)"

When There is No Paper of the Correct Size

If there is no paper in your machine that matches the size of a received message, the machine will choose a paper size based upon the paper you have available. For example, if your machine has B4 \square and A3 \square installed and you receive a A4 \square size message, check the A4 column of the table below. The paper size at the top has the highest priority. In this case, since A3 \square is a higher priority than B4 \square , the message is printed on A3 \square .

If only B5 is loaded and you receive an A3 message, the received message is stored in memory and will not be printed.



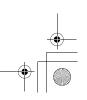







Priority Table

		Received Image Size							
		A3,DLT	B4	A4,LT	A4,LT	B5	A5,HLT	LG 	F/F4
	1	A3	B4	LT	A4	B5	HLT	LG	F/F4
	2	DLT	A3	<u> </u>	A4	B5	HLT	A4	LG
	3	A4	DLT	A4	LT	B4	A5	A4	A4
	4	A4	B5	A4	LT	A4	A5	LT	A4
	5	LT	B5	F/F4	A3	A4	LT 	LT	LT
	6	LT P	A4	LG	F/F4	LT 	LT	F Ppp	LT
iorities	7	F/F4	A4	A3	DLT 	LT	A4	B4	B4
elect Pr	8	B4	LT	B4	B4	F/F4	A4	A3	A3
Paper Select Priorities	9	LG	LT	DLT	LG	A3	F/F4	DLT	DLT
	10		F/F4	HLT		DLT	LG	HLT	HLT
	11		LG	HLT		LG	B5	HLT	HLT
	12			A5	'		B5	A5	A5
	13			A5			A3	A5	A5
	14			B5			B4	B5	B5
	15			B5			DLT	B5	B5
	Por	trait							
	Landscape								

Image Rotation

Page Reduction	Disabled
Reduction in Sub-scan Direction	Enabled
Page Separation Threshold	20mm
Width or Length Priority	Width

GFRXPSE1

• \square \square and \square indicate that the message is split over two pages of paper with the orientation and size shown.













Reception Features

Limitation

☐ The paper size used to print a received message may be different from the size of the sent original.

Note

☐ Widths that this machine can receive are A4, B4, LT, LG, and A3. Any messages narrower than A4 or LT are sent as A4 or LT width with the length unchanged.

P.41 "Page Separation and Length Reduction (Not Available in Some Countries)"

P.42 "Page Reduction"

P.41 "Image Rotation"

"Just Size" Printing

If you turn this feature on and no paper tray is stocked with paper of a suitable size to print a received document, a message will appear on the display prompting you to load paper of the required size. When you have loaded the new paper, you can then print the message.

Two messages can appear:

• Paper Cassette

No Paper in Tray(s).

Load A4⊿⊐ Paper.

Note

☐ By default, this message is turned off. You can turn this message on with the User Parameters. See P.70 "User Parameters" (Switch05, Bit5).

Out of paper display message

If the paper tray runs out of paper, you can have a message appear on the display asking you to add more paper.

Note

□ By default, this message is turned off. You can turn it on with the User Parameters. See P.70 "User Parameters" (Switch05, Bit7).





5. Facsimile User Tools

Accessing the User Tools

The User Tools allow you to program the machine with your identification, store frequently used numbers and settings, and customize the default settings to match your needs.

So you can find the User Tool you want quickly and easily, they are grouped by function:

❖ Program/Delete

Use to program or delete: Quick Dials, Groups, Speed Dials and User Functions

Reports/Lists

Use to print: the Journal, TX File List, Group Dial list, Quick Dial list, Speed Dial list and Quick Dial label

Setup

Use to configure: Monitor Volume, Date/Time, Summer Time/DST and Fax Information

Initial Setup TX

Use to set defaults for: Transmission mode (Memory/Immediate), scanning conditions (Resolution and Original Type), Fax Reset Timer and On Hook Timeout.

Initial Setup RX

Use to change settings for: Reception Mode, Checkered Mark, Center Mark, Print RX Time and Forwarding

Press the [User Tools] key.



Press @ or @ until "4. Fax Features" is displayed.

User Tools: 4.Fax Features **♦**

- Press the [OK] key.
- Press ③ or ⑤ until the category you require is displayed and press the [OK] key.

Fax Features: 1.Program / Delete ◆

Press @ or D until the User Tool you require is displayed and press the [OK] key.

Program / Delete: 1.Prog. Quick Dial ◆







Facsimile User Tools

6 Follow the instructions appearing on the display.

For more details on each User Tool, see the relevant pages of this manual.

When you have made your changes, press the [OK] key.

The machine automatically returns to the User Tools main menu.

Exiting User Tool mode

Press the [Cancel] key on each display until you reach the stand-by display.

5









Assigning User Function Keys

You can program each of the User Function keys (**[F1]-[F3]**) with a function that you use frequently. When you wish to use that function, instead of having to search through several menus to find it, just press the appropriate User Function key. This procedure can be used to edit, delete or change the contents of the User Function keys.




☐ When the machine is shipped, the following functions are stored in the User Function keys by default.

Key	Function
F1	Manual Reception
F2	Reception Mode
F3	Stamp

Storing/Editing the Contents of a User Function Key

1 Press the [User Tools] key.

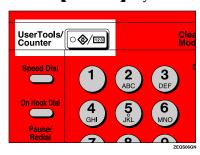

Press ③ or ⑤ until "4. Fax Features" is displayed.

User Tools: 4.Fax Features **♦**

- Press the [OK] key.
- Confirm that "1. Program / Delete" is displayed and press the [OK] key.

Fax Features: 1.Program / Delete ◆

Press @ or @ until "7. User Functions" is displayed and press the [OK] key.

 
Program / Delete: 7.User Functions **♦**

Press the User Function key ([F1] – [F3]) you want to use.

Press Key to Program (F1–F3)

- Note
- ☐ If you make a mistake, press the **[Cancel]** key and repeat from step **5**.












Facsimile User Tools

Press @ or D until the function you want to register into the User Function key and press the [OK] key.

 User Functions



- Note
- ☐ If you wish to store more functions, repeat steps 5 to 7 for other keys.
- ☐ If you press the [Cancel] key, the function is not stored and the display shown in step 5 appears again.

Utilizing a User Function Key

1 Press the User Function Key ([F1] - [F3]) in which the function you want to use is stored.

The stored function's display is


♦ For example, "Print Journal"


Journal: Press Start to Print

Press the [User Tools] key.

Functions You Can Store in User Function Keys

Function Name	Default Key
Manual Reception	F1
Reception Mode	F2
Stamp	F3
TX Status	
RX Status	
Print Journal	
Fax Header Print	
TX Result Report	
Forwarding	
Group	
Dial Option	

 

 





Printing Reports/Lists

This function allows you to print the following reports and lists manually. Select a report or list as needed.

- Journal See P.21 "Printing the Journal".
- TX File List See P.19 "Printing a List of Files in Memory (Print TX File List)".
- Quick Dial list See Chapter 3 "Quick Dial" in the Basic Features manual.
- Speed Dial list See Chapter 3 "Speed Dial" in the Basic Features manual.
- Group Dial list See Chapter 3 "Groups" in the Basic Features manual.
- Press the [User Tools] key.



Press (or (until "4. Fax Features" is displayed.

User Tools: 4.Fax Features ◆

Press the [OK] key.

Press (a) or (b) until "2. Reports / Lists" is displayed and press the [OK] key.

Fax Features: 2.Reports / Lists **♦**

Printing the Journal

• Confirm that "1. Journal" is displayed and press the [OK] key.

Note

☐ If you make a mistake, press the [Cancel] key and try again.

Printing a TX File List

 
Press ⊚ or ⊚ until "2. TX File List" is displayed and press the [OK] key.

Reports / Lists: 2.TX File List **♦**

Note

If you make a mistake, press the [Cancel] key and try again.









Facsimile User Tools

Printing the Quick Dial List

Press or until "3. Dial List" is displayed and press the [OK] key.

2 Confirm that "1. Quick Dial List" is displayed and press the [OK] key.

Dial List: 1.Quick Dial List ◆

Note

 If you make a mistake, press the [Cancel] key and try again.

Printing the Speed Dial List

Press ③ or ⑤ until "3. Dial List" is displayed and press the [OK] key.

② Press ③ or ⑤ until "2. Speed Dial List" is displayed and press the [OK] key.

Dial List: 2.Speed Dial List **♦**

Note

☐ If you make a mistake, press the [Cancel] key and try again.

Printing the Group Dial List

Press or until "3. Dial List" is displayed and press the [OK] key.

Press (a) or (b) until "3. Group Dial List" is displayed and press the [OK] key.

Dial List: 3.Group Dial List ♦)

Note

☐ If you make a mistake, press the [Cancel] key and try again.

Printing the Quick Dial Label

 
● Press ③ or ⑤ until "4. Quick Dial Label" is displayed and press the [OK] key.

 
Reports / Lists: 4.Quick Dial Label ◆

Note

- ☐ If you make a mistake, press the [Cancel] key and try again.
- Press the [Start] key.
- Press the [User Tools] key.

The machine returns to standby display.









Setting the Date and Time

Use this function to set your machine's internal clock to the current time and date.

If the current date and time are wrong, use this procedure to correct

Press the [User Tools] key.



Jser Tools: .Counter

Press @ or @ until "4. Fax Features" is displayed.

User Tools: **4.**Fax Features

- Press the [OK] key.
- 4 Press o or until "3. Setup" is displayed.

Fax Features: ß.Setup

- Press the [OK] key.
- Press @ or D until "2. Date/Time" is displayed.

Setup: .Date/Time

- **7** Press the [OK] key.
- Press a number key to enter the year for the digit, or it the year is correct press the [OK] key.

Mear: <u>Pr</u>ess OK [2001]

Press or key to select the correct month, and then press the [OK] key.

Month: **◆**/0K [[May]

Press the [Clear/Stop] key and use the number keys to enter the correct number for the date (01 to 31).

Press OK Day: [20]

U Use the number keys to enter the correct time.

Time: Press OK [13:52]

Enter the current hour setting (0 to 23), and then press the 0 or $\textcircled{\mathbb{D}}$ key.

Press the [Clear/Stop] key and use the number keys to enter a 2-digit number for the correct minute setting (00 to 59).

Press the [OK] key.

After "Function Accepted" flashes briefly in the display, the next setting is displayed.

Press the [User Tools] key to return to standby display.









Facsimile User Tools



Summer Time / Daylight Saving Time

Whenever local custom requires advancing the clock or setting the clock back, use this feature. You can easily move the clock forwards when daylight saving time begins, and back when it ends.



- ☐ Before you set this function, make sure that your machine's internal clock is correct.
- Press the [User Tools] key.



User Tools: 1.Counter **∢**▶

Press @ or @ until "4. Fax Features" is displayed.

User Tools: 4.Fax Features **♦**

- Press the [OK] key.
- Press @ or © until "3. Setup" is displayed.

Press the [OK] key.

Press (a) or (b) until "3. Summer Time /DST" is displayed.

Setup: 3.Summer Time /DST ◆

- Press the [OK] key.
- Use @ or D to select "On" or "Off".

 
Select "On" to advance your machine's internal clock one hour, and select "Off" to go back one hour

Summer Time/DST ♦/OK [On] Off

Press the [OK] key.

If you selected "On", "The Clock Advanced By One Hour" is displayed in the display, and if you selected "Off", "The Clock Put Back By One Hour" is displayed.

Press the [User Tools] key to return to standby display.









Changing the Initial Setup Transmission

When you turn on the machine or return to Copy mode, the machine returns to the home settings. You can change these home settings so that the machine starts with your most frequently used features selected.

This procedure can be used to change the home settings for the following functions.

- Transmission mode
 See Chapter 2 "Faxing" in the Basic
 Features manual.
- Resolution
 See Chapter 2 "Resolution" in the Basic Features manual.
- Photo Original See Chapter 2 "Original Type" in the Basic Features manual.
- Fax Reset Timer
 See Chapter 1 "Starting the Machine" in the Basic Features manual.
- On Hook Timeout See P.25 "On Hook Dial".



☐ You can also choose whether the machine returns to the home settings after each communication. See P.70 "User Parameters" (Switch01, Bit7).

Press the [User Tools] key.



Press @ or @ until "4. Fax Features" is displayed.

User Tools: 4.Fax Features **♦**

- Press the [OK] key.
- Press ③ or ⑤ until "4. Initial Setup TX" is displayed and press the [OK] key.

Fax Features: 4.Initial Setup TX ◆

The "Initial Setup TX" menu is shown on the display.

Press @ or @ until the mode you want to change is displayed and press the [OK] key.

TX Status: 1.Trans. Mode ◆

Note

☐ If you make a mistake, press the [Clear/Stop] key and enter the correct number.







Facsimile User Tools



 
Select the home setting with the or key then press the [OK] key.

Transmission Mode

Trans. Mode: **◆**/0KI [Memory] Immediate

You can select the either way to send a fax message (Memory Transmission or Immediate Transmission).

Resolution



Resolution: **◆**/0K Detail

Resolution: **◆**/0K Fine

You can select the setting that meets your needs based upon this trade off between speed and image clarity.

Photo Original

Photo Original: [Text]

Photo Original: Photo

You can select the setting that meets your needs based upon the appropriate Original Type to optimize image clarity.

Fax Reset Timer

Fax Reset Timer: �▶/OK [30sec.]

Fax Reset Timer: **∢⊳**/OK lmin.

Fax Reset Timer: ♠/OK 3min.

Fax Reset Timer: ♠/OK 5min.

This machine automatically enters the Energy Saver mode if you do not use the machine for a certain period of time. You can select this period from these options.

On Hook Timeout

On Hook Timeout: ♠/OK 1min.

On Hook Timeout: ♠/OK [3min.]

On Hook Timeout: ♠/OK 5min.

On Hook Timeout: ♠/OK 10min.

 
This machine automatically cancel the On Hook Dial mode if you do not dial a number from the numeric keypad for a certain period of time after pressing the [On Hook Dial] key. You can select this period from these options.

Note

☐ If you want to change other home settings, repeat steps **5** and **6**.

Press the [User Tools] key to return to standby display.











Changing the Initial Setup Reception

The Initial Setup Reception function allows you to change settings for the following reception functions.

- Reception Mode
 See Chapter 2 "Selecting the Reception Mode" in the Basic Features manual.
- Checkered Mark See P.40 "Checkered Mark".
- Center Mark See P.40 "Center Mark".
- Print RX Time See P.41 "Reception Time".
- Forwarding See P.63 "Forwarding".
- Press the [User Tools] key.



Press @ or @ until "4. Fax Features" is displayed.

User Tools: 4.Fax Features **♦**

 
Press the [OK] key.

Press (a) or (b) until "5. Initial Setup RX" is displayed and press the [OK] key.

Fax Features: 5.Initial Setup RX ◆

The "Initial Setup RX" menu is shown on the display.

Press @ or @ until the mode you want to change is displayed and press the [OK] key.





- ☐ If you make a mistake, press the 【Clear/Stop】 key and enter the correct number.
- **6** Change the setting using the **③** or **⑤** key and press the **[OK]** key.
 - Reception Mode

Reception Mode: ◆/OK [Manual Receive]

Reception Mode: ∢▶/OK Auto Receive

Checkered Mark

Checkered Mark: ♠/OK [On] Off

Center Mark









Facsimile User Tools

Print RX Time

Forwarding

Forwar	ding:	◆/ 0K
0n	[Off]	

Note

- ☐ If you wish to change other functions, repeat steps **5** and **6**.
- ☐ Select on or off for Checkered Mark, Center Mark, Print RX Time and Forwarding.

Press the [User Tools] key to return to standby display.









6. Key Operator Settings

Changing Key Operator Settings

This chapter explains about functions the key operator handles.

Key Operator Code

When the Key Operator Code is registered and turned on, user have to enter registered the Key Operator Code (maximum 8 digit) to operate Key Operator Tools. This prevents unauthorized people from changing registration.

Note

- ☐ You can change the Key Operator Code between on and off with "System Settings". See Chapter 2 "Settings You Can Change with the User Tools" in the System Settings.
- ☐ When you register or change the key operator access code, see Chapter 2 "13.Key Op. Tools" in the System Settings.

Counters

This function allows you to check the total number of pages transmitted and received on the display.

- Transmissions: Total number of transmitted pages
- Receptions: Total number of received pages

Press the [User Tools] key.



Press (a) or (b) until "4. Fax Features" is displayed.

User Tools: 4.Fax Features **♦**

- Press the [OK] key.
- Press @ or @ until "6. Key Op. Tools" is displayed.

Fax Features: 6.Key Op. Tools ◆



Key Operator Settings

Press the [OK] key.

🔗 Note

- ☐ If the key operator code is registered and turned on, enter the key operator code and press the [OK] key.
- Confirm that "1. Counter" is displayed.

Key Op. Tools: ∥.Counter

Press the [OK] key.

The number of pages transmitted is displayed. You can display the number of pages received, scanned, or printed by pressing ③ or \bigcirc .

- Once you have confirmed the number of pages, press the [OK] key.
- Press the [Cancel] key on each display until you reach the standby display.

Authorized Reception

This feature helps you to reject junk mail. It lets you specify which terminals you wish to receive fax messages from; the others will be shut out. This is useful if you are very annoyed with someone.

You can register the following:

- 30 Specified Senders (up to 24 characters for each sender)
- Wild Card

Important

 
☐ We recommend that you print the Sender/Authorized Reception list and keep it when you register or change a sender. See P.62 "Sender (Authorized Reception) List".

 
Limitation

- ☐ You cannot register a Specified Sender who does not have an Own Name or Own Fax Number.
- ☐ You can register up to 30 senders for Forwarding and Authorized Reception functions. You sometimes cannot register 30 senders depending on the number of senders registered with other functions. See P.63 "Forwarding".

- ☐ To find out a senders Own Name/ Own Fax Number, check the Journal.
- ☐ You can specify whether to only receive messages from Specified Senders, or to receive all messages except those from Specified Senders. The default setting is "Receive from Authorized Senders". See P.70 "User Parameters" (Switch08, Bit2).











Switching Authorized Reception On/Off

1 Press the [User Tools] key.



Press or until "4. Fax Features" is displayed.

User Tools: 4.Fax Features **♦**

- Press the [OK] key.
- Press (a) or (b) until "6. Key Op. Tools" is displayed.

Fax Features: 6.Key Op. Tools **∢**

Press the [OK] key.



- ☐ If the key operator code is registered and turned on, enter the key operator code and press the [OK] key.
- 6 Press the [OK] key.

Press (a) or (b) until "2. Authorized RX" is displayed.

Key Op. Tools: 2.Authorized RX **♦**

Press the [OK] key.

Authorized RX: 1.On/Off ◆

Confirm that "1. On/Off" is displayed.

- Press the [OK] key.
- Press (a) or (b) to select "On" or "Off".

Authorized RX: **♦**/OK [On] Off



- ☐ You can cancel this feature by selecting "Off".
- Press the [OK] key.

- ☐ If you have not programmed a specified sender, the message "Press OK to Program Sender Name/Number" is displayed. Press [OK] key, go to Step ☐ in "Programming specified senders". See P.60 "Programming specified senders".
- Press the [Cancel] key on each display until you reach the stand-by display.







KirCAE-advanced_FM.book Page 60 Thursday, March 8, 2001 2:04 PM



Key Operator Settings

Programming specified senders

Press the [User Tools] key.



Jser Too∣s: ∥.Counter

Press @ or @ until "4. Fax Features" is displayed.

User Tools: **4.**Fax Features 4

- Press the [OK] key.
- 4 Press or until "6. Key Op. Tools" is displayed.

fax Features: 6.Key Op. Too∣s

Press the [OK] key.

Note

- ☐ If the key operator code is registered and turned on, enter the key operator code and press the [OK] key.
- f Press or until "2. Authorized RX" is displayed.

Key Op. Tools: 2.Authorized RX

- Press the [OK] key.
- Press 🔇 or 🕞 until "2. Program Sender" is displayed.

Authorized RX: ⊉.Program Sender

- Press the [OK] key.
- Enter the name for the Specified

Enter the other party's name or fax number.

Name/No.:[ABC]

For details about how to enter names, see Chapter 3 "Entering Text" in the Basic Features manual.

- Press the [OK] key.
- If you want to specify a wildcard, press the o or key to select "Yes", or select "No".

Store as Wildcard? [Yes] Νn

 
See Chapter 3 "Wild Cards" in the Basic Features manual.

Press the [OK] key.

The Specified User is registered.

If you want to register another Specified User, repeat from step **9**.

Press the [Cancel] key on each display until you reach the standby display.









Deleting a Specified Sender (Authorized Reception)

1 Press the [User Tools] key.



Press @ or © until "4. Fax Features" is displayed.

User Tools: 4.Fax Features **♦**

- Press the [OK] key.
- Press (a) or (b) until "6. Key Op. Tools" is displayed.

Fax Features: 6.Key Op. Tools **♦**

Press the [OK] key.



- ☐ If the key operator code is registered and turned on, enter the key operator code and press the [OK] key.
- Press @ or @ until "2. Authorized RX" is displayed.

Key Op. Tools: 2.Authorized RX **♦**

- Press the [OK] key.
- Press @ or @ until "3. Delete Sender" is displayed.

Authorized RX: 3.Delete Sender **♦**

- Press the [OK] key.
- Press the ② or ⑤ key to select the name of the Specified Sender that you want to delete.

Delete? **♦**/OK ABC

Press the [OK] key.

The Specified Sender is deleted.

If you want to delete more Specified Senders, repeat the above steps from step \mathbf{Q} .

Press the [Cancel] key on each display until you reach the standby display.









AE-advanced_FM.book Page 62 Thursday, March 8, 2001 2:04 Pl



Key Operator Settings

Sender (Authorized Reception) List

Print this list to find out which Specified Senders are currently programmed.

1 Press the [User Tools] key.



Press @ or @ until "4. Fax Features" is displayed.

User Tools: 4.Fax Features **♦**

- Press the [OK] key.
- Press ⊚ or ⊚ until "6. Key Op. Tools" is displayed.

Fax Features: 6.Key Op. Tools ◆

Press the [OK] key.



☐ If the key operator code is registered and turned on, enter the key operator code and press the [OK] key.

Press (a) or (b) until "2. Authorized RX" is displayed.

 
Key Op. Tools: 2.Authorized RX ◆

 
- Press the [OK] key.
- Press (a) or (b) until "4. Print Sender List" is displayed.

Authorized RX: 4.Print Sender List **∢**▶

- Press the [OK] key.
- Press the [Start] key.
 The list is printed.
- Press the [Cancel] key on each display until you reach the stand-by display.











Forwarding

Using this feature, you can select messages from Specified Senders to be printed on your machine and then sent on to another fax machine.

This is useful if, for example, you are visiting another office and would like a copy of your messages sent to that office so you can read them.

In this section, the machines that messages are forwarded to are referred to as Forwarding Stations. The locations from which you would like messages forwarded from are referred to as Specified Senders.

You can register:

- 5 Forwarding Stations
- 30 Specified Senders (maximum 10 per Forwarding Station, up to 24 characters each)
- Wild Cards

#Important

We recommend that you print the Forwarding/Sender list and keep it when you register or change a receiver or sender.

Limitation

- ☐ This feature only works if the incoming message is from another party that has been programmed as a Specified Sender.
- ☐ The Forwarding function does not forward messages received with Polling Reception mode.
- You cannot register a sender who does not have an Own Name or Own Fax Number.
- ☐ You can register up to 30 senders for Forwarding and Authorized Reception functions. You sometimes cannot register 30 senders depending on the number of senders registered with other functions. See P.58 "Authorized Reception".

Note

- ☐ Before using the Forwarding function, register Forwarding Stations and turn Forwarding function on. See P.55 "Changing the Initial Setup Reception".
- ☐ You can print a forwarding mark on forward messages. See P.70 "User Parameters" (Switch02, Bit0).
- ☐ To register a sender, use an Own Name or Own Fax Number.
- You can find out the Own Name or Own Fax Number of a sender by looking in the destination name column of the Journal.
- ☐ You can specify whether or not to print forwarded messages. This feature is called "Local Printing". The default setting is on. See P.70 "User Parameters" (Switch11, Bit6).

Registering Forwarding Stations

Press the [User Tools] key.



Press @ or @ until "4. Fax Features" is displayed.

User Tools: 4.Fax Features **♦**

Press the [OK] key.









Key Operator Settings

Press (or (until "6. Key Op. Tools" is displayed.

Fax Features: 6.Key Op. Tools **♦**

Press the [OK] key.

Note

- ☐ If the key operator code is registered and turned on, enter the key operator code and press the [OK] key.
- Press (a) or (b) until "3. Forwarding" is displayed.

Key Op. Tools: 3.Forwarding ◆

- Press the [OK] key.
- Press @ or D until "1. Prog. Station" is displayed

Forwarding: 1.Prog. Station **♦**

- Press the [OK] key.
- Press or to display the number of the forwarding station you want to register.

Program? 1:



If a forwarding station is already registered, the fax number for that station is displayed.

- Press the [OK] key.
- Enter the other party's fax number with the number keys.

Station 1: Press OK ☎1234567890

Press the [OK] key.

The Forwarding Station's fax number is registered.

Sender Setting: 1.Program Sender **♦**

When specifying senders

- Press the [OK] key.
- **2** Enter the other party's name. Enter the other party's Own Name or Own Fax Number.

Name/No.:[ABC] OK ABC COMPANY

3 Press the OK key.

The name is registered.

4 If you want to register the Specified Sender as a Wildcard, press ⑤ or ⑤ to select "Yes" or "No".

 
Store as Wildcard? [Yes] No

 
6 Press the OK key.

To register another Specified Sender, repeat the above steps from step **1**.

To register a different Forwarding Station, press the **[Cancel]** key and repeat the above steps from step **9**.

- Limitation
- ☐ Names for Specified Senders can be up to 24 characters long.
- Note
- You can confirm the names and fax numbers of Specified Senders on the Journal.
- ☐ You can confirm registered Specified Senders on the Specified Sender list.










Press the [Cancel] key on each display until you reach the standby display.

Editing a Forwarding Station

Press the [User Tools] key.

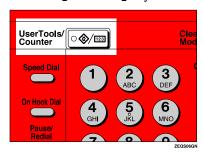

User Tools: .Counter

Press @ or @ until "4. Fax Features" is displayed.

User Tools: 4.Fax Features

- Press the [OK] key.
- 4 Press of or until "6. Key Op. Tools" is displayed.

Fax Features: 6.Key Op. Tools

Press the [OK] key.



☐ If the key operator code is registered and turned on, enter the key operator code and press the [OK] key.

d Press **(a)** or **(b)** until "3. Forwarding" is displayed.

Key Op. Tools: β.Forwarding

- Press the [OK] key.
- Press @ or @ until "1. Prog. Station" is displayed.

Forwarding: 1.Prog. Station

- Press the [OK] key.
- Press of or to display the fax number of the Forwarding Station you want to edit.

Program? **◆**/0K 1:1234567890

- Press the [OK] key.
- Press the [Clear/Stop] key and enter the Forwarding Station's correct fax number.

Station Press OK **☎**9876543210**■■■■■■■■**

Press the [OK] key.

The fax number is registered.

If you want to edit another Forwarding Station, press the [Cancel] key and repeat the above steps from step **9**.









Deleting a Forwarding Station

Key Operator Settings

1 Press the [User Tools] key.



Press or until "4. Fax Features" is displayed.

User Tools: 4.Fax Features **♦**

- Press the [OK] key.
- Press @ or @ until "6. Key Op. Tools" is displayed.

Fax Features: 6.Key Op. Tools ◆

Press the [OK] key.

Note

- ☐ If the key operator code is registered and turned on, enter the key operator code and press the [OK] key.
- Press or until "3. Forwarding" is displayed.

Key Op. Tools: 3.Forwarding ◆

- Press the [OK] key.
- Press @ or @ until "2. Delete Station" is displayed.

Forwarding: 2.Delete Station **♦**

 
- Press the [OK] key.
- Press ② or ⑤ to display the fax number of the Forwarding Station you want to delete.

 
Delete? **♦**/OK 1:9876543210

Press the [OK] key.

The Forwarding Station is deleted. If you want to delete another Forwarding Station, repeat the procedure from step **2**.











Deleting a Specified Sender (Forwarding)

Press the [User Tools] key.



Jser Too∣s: ∥.Counter

Press ⊚ or ⊚ until "4. Fax Features" is displayed.

User Tools: **4.**Fax Features 4

- Press the [OK] key.
- 4 Press or until "6. Key Op. Tools" is displayed.

fax Features: 6.Key Op. Too∣s 4

Press the [OK] key.

Note

- ☐ If the key operator code is registered and turned on, enter the key operator code and press the [OK] key.
- d Press ⊚ or ⊚ until "3. Forwarding" is displayed.

Key Op. Tools: ₿.Forwarding

- Press the [OK] key.
- Press or until "1. Prog. Station" is displayed.

Forwarding: 1.Prog. Station

- Press the [OK] key.
- Press

 or

 to display the fax number of the Forwarding Station that contains the Specified Sender you want to delete.

Program? **◆** / OK 1:1234567890

- Press the [OK] key.
- Press the [OK] key.
- Press @ or D until "2. Delete Sender" is displayed.

Sender Setting: ⊉.De∣ete Sender

- Press the [OK] key.
- **Ш** Use **③** or **⑤** to display the Specified Sender you want to delete.

Delete? **◆** / OKI ABC COMPANY

Press the [OK] key.

The Specified Sender is deleted. If you want to delete another Specified Sender, repeat the above steps from step \square .











Key Operator Settings

Specified Sender/Forwarding Station list

Print this list to find out which Specified Senders are assigned to which Forwarding Stations.

1 Press the [User Tools] key.



Press @ or @ until "4. Fax Features" is displayed.

User Tools: 4.Fax Features **♦**

- Press the [OK] key.
- Press ⊚ or ⊚ until "6. Key Op. Tools" is displayed.

Fax Features: 6.Key Op. Tools ◆

Press the [OK] key.



☐ If the key operator code is registered and turned on, enter the key operator code and press the [OK] key.

Press ⊚ or ⊚ until "3. Forwarding" is displayed.

 
Key Op. Tools: 3.Forwarding ◆

 
- Press the [OK] key.
- Press (a) or (b) until "3. Print Sender List" is displayed.

Forwarding: 3.Print Sender List **♦**

- Press the [OK] key.
- Press the [Start] key.
 The list is printed.
- Press the [Cancel] key on each display until you reach the stand-by display.











Sender Setting

For Forwarding, select the messages to forward either from all senders, from specified senders.

1 Press the [User Tools] key.



Press @ or @ until "4. Fax Features" is displayed.

User Tools: 4.Fax Features **♦**

- Press the [OK] key.
- Press ⊚ or ⊚ until "6. Key Op. Tools" is displayed.

Fax Features: 6.Key Op. Tools ◆

Press the [OK] key.



☐ If the key operator code is registered and turned on, enter the key operator code and press the [OK] key.

Press (or until "3. Forwarding" is displayed.

Key Op. Tools: 3.Forwarding ◆

- Press the [OK] key.
- Press @ or @ until "4. Sender Setting" is displayed.

Forwarding: 4.Sender Setting **∢**▶

- Press the [OK] key.
- Press @ or @ and select "Selected ON" or "All ON".

 
Sender Setting: ♠/OK [Selected ON]

 
Messages are transferred only to the specified party.

Sender Setting: ♠/OK All ON

Messages are transferred to any party.

- Press the [OK] key.
- Press the [Cancel] key on each display until you reach the standby display.





AE-advanced_FML000k Page /0 Thursday, March 8, 2001 2:04 Pr



Key Operator Settings

User Parameters

The User Parameters allow you to customize various settings to match your needs.

To change the function settings, set the user parameter switches.



Access to some User Parameter Settings requires installation of optional equipment or that other settings be made beforehand.

Switches and Bits

User Parameters are divided into Switches and each switch is divided into eight bits. The right most bit is bit 0 and the left most is bit 7.

Bit Number	7	6	5	4	3	2	1	0
Bit Val-	\downarrow	\	\downarrow	\	\downarrow	\downarrow	\downarrow	\downarrow
ue	0	1	0	0	0	0	0	0



ÖUser Parameter List

The User Parameter switches are outlined below.

Switch	Bit	Item	0	1
00	0	Stamp home position	Off	On
	3, 2, 1	Image density adjustment lethe greater image density) 001: Level 1 (lightest), 010: Level 2, 011: Level 3, 10	1	, 0
01	0	Label Insertion home position	Off	On
	2	Auto Reduction home position	Off	On
	5	Fax Header Print home position	Off	On
	7	Return the machine to the home settings after each communication (Return to default after transmission)	Off	On












Changing Key Operator Settings

Switch	Bit	Item	0	1
02	0	Forwarding Mark	Off	On
	3	TSI Print	Off	On
03	0	Automatic printing of the Communication Result Re- port (Memory TX)	Off	On
	2	Automatic printing of the File Reserve Report (Memory TX)	Off	On
	3	Automatic printing of the File Reserve Report (Poll- ing RX)	Off	On
	4	Automatic printing of the Communication Result Re- port (Polling RX)	Off	On
	5	Automatic printing of the Transmission Result Re- port (Immediate TX)	Off	On
	7	Automatic printing of the Journal	Off	On
04	7	Include a portion of the image on the Communication Result Report, File Reserve Report, Communication Failure Report.	Off	On
05	0	Receive Service Call (SC) Condition (Substitute Reception during service call)	Possible (Substitute RX)	Not possible (Reception off)
	2, 1	Receive when the machine of ing printer error) 00: Enabled unconditionally 01: Enabled for Own Name, 10: Enabled for Polling ID m 11: Disabled (Reception off)	r (Free), /Own Fax Number natch,	•
	4	Restricted Access	Off	On
	5	Just Size Printing	Off	On
	7	Empty Cassette alert (Paper Empty Warning indica- tion)	Off	On
06	4	Selecting the Sheet to Print the Quick Dial Label	Paper label sheet	Transparentlabel sheet
07	2	Parallel Memory Trans- mission	Off	On

 












Switch	Bit	Item	0	1
08	2	Authorized Reception type	Only receive from specified senders	Receive all mes- sages except those from speci- fied senders
10	3	Page Reduction when printing	Off	On
11	6	Local Print when Forwarding	Off	On
14	0	Print documents received with Auto Power-On Re- ception (Night Printing mode)	Immediate printing (On)	When turning on the Operation switch (Off)
	1	Long Document Transmission (Well Log)	Off	On
	2	Batch Transmission	Off	On
	3	Reset when function changed	Off	On
	7	System Parameter List TX	Off	On
15	2, 1, 0	Select paper feed tray to fix 001: First, 010: Second, 011		
	5	Fixed Input tray	On	Off
17	2	Whether you need to press the [OK] key after entering a Quick Dial when broad- casting.	Not Necessary	Necessary
	7	Receive messages by pressing the [Start] key when originals are not set.	Off (The machine does not receive messages by pressing the [Start] key.)	On (The machine receives messag- es by pressing the [Start] key.)





 



Changing the User Parameters

- We recommend that you print the User Parameter list and keep it when you register or change a user parameter. See P.74 "Printing the User Parameter List".
- Do not change any bit switches other than those shown on the previous pages.
- Press the [User Tools] key.



Jser Too∣s: .Counter

Press of or until "4. Fax Features" is displayed.

User Tools: **4.**Fax Features

- Press the [OK] key.
- 4 Press or until "6. Key Op. Tools" is displayed.

Fax Features: 6.Key Op. Too∣s

Press the [OK] key.



☐ If the key operator code is registered and turned on, enter the key operator code and press the [OK] key.

d Press ⊚ or ⊚ until "4. User Parameters" is displayed.

Key Op. Tools: 4.User Parameters

Press the [OK] key.

User Parameters: 1.Change

Press the [OK] key.

Refer Op. Manual: |Switch 00 :0000 0110

For a list of the switches and settings, see P.70 "User Parameter List".

Use the User Parameters table to look up the number of the switch that you want to change, and then press the ⓓ or ৷ key to display the number of the switch.

The switch bits are numbered 7~0. To change a setting, press the corresponding number key to toggle the setting between "0" and "1"

Key to Press	7	6	5	4	3	2	1	0
SW 00:	0	0	0	0	0	0	0	0

For example, if you want to change the setting at bit 7, press the 7 number key to toggle the setting between "1" and "0".

When you are finished making adjustments, press the [OK] key.

User Parameters: ∥1.Change











Key Operator Settings



Printing the User Parameter List

Print this list to see the current User Parameter settings.

Press the [User Tools] key.



Press or until "4. Fax Features" is displayed.

User Tools: 4.Fax Features **♦**

- Press the [OK] key.
- Press ② or ⑤ until "6. Key Op. Tools" is displayed.

Fax Features: 6.Key Op. Tools ◆

Press the [OK] key.



☐ If the key operator code is registered and turned on, enter the key operator code and press the [OK] key.

Press (a) or (b) until "4. User Parameters" is displayed.

Key Op. Tools: 4.User Parameters ◆

7 Press the **(OK)** key.

User Parameters: 1.Change ◆

Press the ③ or ⑤ key until "2.
Print List" is displayed and press
the [OK] key.

 
User Parameters: 2.Print List ◆

Press the [Start] key to print the list.

User Parameters List: Press Start to Print



- ☐ If you press **[Cancel]** before printing starts, the printing stops and the display shown in step **3** appears again.
- Press the [Cancel] key on each display until you reach the stand-by display.



6







Personal Codes

This function allows you to keep track of machine usage. When Personal Codes are programmed, users have to enter their Personal Code before they send a fax.

#Important

☐ We recommend that you print the Personal Code List and keep it when you register or change a Personal Code. See P.77 "Printing the Personal Code List".

Note

☐ To enter a Personal Code when sending a fax, follow the steps shown in "Personal Code Transmission". See P.6 "Personal Code Transmission".

Registering Personal Codes

Press the [User Tools] key.

 


Jser Too∣s: .Counter

Press ⊚ or ⊚ until "4. Fax Features" is displayed.

User Tools: 4.Fax Features 4

Press the [OK] key.



6.Key Op. Too∣s

Press the [OK] key.

Note

- ☐ If the key operator code is registered and turned on, enter the key operator code and press the **OK** key.
- d Press or until "5. Personal Code" is displayed.

Key Op. Tools: **5.**Personal Code 4

Press the [OK] key.

Confirm that "1. Prog. Pers. Code" is displayed and press the [OK]

Personal Code: 1.Prog. Pers. Code

Enter the Personal Code (8-digits or less) with the number keys.

Enter Code to Prog. [[111111111] Press OK

- Press the OK key.
- **1** Enter the user name.

Name:[ABC] OK ABC COMPANY

- Press the [OK] key.
- Press the [Cancel] key on each display until you reach the standby display.









Key Operator Settings

Editing a Personal Code

1 Press the [User Tools] key.



Press or until "4. Fax Features" is displayed.

User Tools: 4.Fax Features **♦**

- Press the [OK] key.
- Press @ or @ until "6. Key Op. Tools" is displayed.

Fax Features: 6.Key Op. Tools **♦**

Press the [OK] key.

Note

- ☐ If the key operator code is registered and turned on, enter the key operator code and press the [OK] key.
- Press ③ or ⑤ until "5. Personal Code" is displayed.

Key Op. Tools: 5.Personal Code ◆

- Press the [OK] key.
- Confirm that "1. Prog. Pers. Code" is displayed and press the [OK] key.

Personal Code: 1.Prog. Pers. Code ◆

Press @ or @ to display the Personal Code for the user name or routing sub-address you want to change.

 
Program? **♦**/OK 11111111:ABC COMPANY

 
- Press the [OK] key.
- **1** Enter the user name.

Name:[ABC] OK DEF COMPANY∎∎∎∎∎∎∎

- Press the [OK] key.
- Press the [Cancel] key on each display until you reach the stand-by display.









Changing Key Operator Settings

Deleting a Personal Code

Press the [User Tools] key.



Jser Too∣s: ∥.Counter

Press @ or @ until "4. Fax Features" is displayed.

User Tools: **4.**Fax Features 4

- Press the [OK] key.
- Press ⊚ or ⊚ until "6. Key Op. Tools" is displayed.

fax Features: 6.Key Op. Too∣s 4

Press the [OK] key.

Note

- ☐ If the key operator code is registered and turned on, enter the key operator code and press the [OK] key.
- d Press ⊚ or ⊚ until "5. Personal Code" is displayed.

Key Op. Tools: 5.Personal Code 4

- Press the [OK] key.
- Press
 or
 until "2. Delete" is displayed.

Personal Code: ⊉.De∣ete

- Press the [OK] key.
- Press

 or

 to display the Personal Code you want to delete.

Delete? **◆**P/OKI 11111111:DEF COMPANY

Press the [OK] key.

The Personal Code is deleted.

If you want to delete another Personal Code, repeat the above steps from step **9**.

Press the [Cancel] key on each display until you reach the standby display.

Printing the Personal Code List

Print this list to find out the registered Personal Codes and their names.

Press the [User Tools] key.



 
Jser Tools: 1.Counter 4







Key Operator Settings



User Tools: 4.Fax Features **∢**▶

- Press the [OK] key.
- Press @ or @ until "6. Key Op. Tools" is displayed.

Fax Features: 6.Key Op. Tools **♦**

Press the [OK] key.



- ☐ If the key operator code is registered and turned on, enter the key operator code and press the [OK] key.
- Press (a) or (b) until "5. Personal Code" is displayed.

Key Op. Tools: 5.Personal Code ◆

- Press the [OK] key.
- Press (a) or (b) until "3. Print List" is displayed.

Personal Code: 3.Print List ◆

- Press the [OK] key.
- Press the [Start] key.
 The list is printed.
- Press the [Cancel] key on each display until you reach the stand-by display.

Restricted Access

Use this feature to restrict access to the machine or monitor machine usage by user or department. When turned on, users must enter a previously assigned code before they can use the machine.

Preparation

 
In order to use this feature you need to register Personal Codes beforehand. See P.75 "Registering Personal Codes".

 
Note

- ☐ When the machine is shipped, this feature is turned off by default. Turn it on or off with the User Parameters. See P.70 "User Parameters" (Switch 05, Bit 4).
- ☐ The machine returns to the state where a Personal Code must be entered to use the machine in the following situations:
 - The machine is not used for a certain time
 - A previously set document is removed
 - The current operation is completed
- When Restricted Access is turned on, incoming faxes are received and printed as normal.
- Check that the Restricted Access display is shown.

Restricted Access: Pers. Code[��������]

- 2 Enter your personal code with the number keys.
- Press the [OK] key.



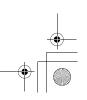







□ When Restricted Access is turned on and you enter a personal code to use the machine, Personal Code Transmission is selected by default.

Polling ID

Use this procedure to register the Polling ID code.

This ID is required for using the Transfer Request (See P.12 "Transfer Request").

Limitation

☐ When you use Transfer Request, register the same ID code as that registered on the sender's machine.

Note

- ☐ A Polling ID can be any combination of digits (0 - 9) and letters (A -F) except for 0000 and FFFF.
- Press the [User Tools] key.



Jser Tools: .Counter 4



Press (1) or (5) until "4. Fax Fea-

Press the [OK] key.

4 Press (or (until "6. Key Op. Tools" is displayed.

Fax Features: β.Key Op. Too∣s

Press the [OK] key.



- ☐ If the key operator code is registered and turned on, enter the key operator code and press the **OK** key.
- ☐ Press or until "6. Polling ID" is displayed.

Key Op. Tools: **6.**Polling ID

- Press the [OK] key.
- Enter the Polling ID (4-digits) with the number keys.

If you make a mistake, press the [Clear/Stop] key and try again.

Polling ID: |ID[1111]

Press the [OK] key.

If you want to enter another item, repeat the above steps from step **2**.









Key Operator Settings

Select Line

When your machine is connected through a PABX, change the Select Line setting to Extension. If it is connected directly to the telephone network, leave it set to Outside.

Note

- ☐ After you have registered an outside line access number, set the line to "Extension" in "Select Line". By default, this feature is set to "Outside".
- Press the [User Tools] key.



Jser Tools: ∥.Counter

Press (1) or (5) until "4. Fax Features" is displayed.

User Tools: **4.**Fax Features

- Press the [OK] key.
- 4 Press (a) or (b) until "6. Key Op. Tools" is displayed.

Fax Features: 6.Key Op. Tools

Press the [OK] key.

Note

- ☐ If the key operator code is registered and turned on, enter the key operator code and press the [OK] key.
- fress or or of until "7. Select Line" is displayed.

Key Op. Tools: 7.Select Line

 
- Press the [OK] key.
- Press **③** or **⑤** and select "Extension" or "Outside".

Select Line: **◆**/0K Extension [Outside]

Press the [OK] key.

"Function Accepted" is displayed on the screen.











PSTN Access Number

Use this setting to save having to enter a pause after the outside line access number when dialing. When you program an access number, a pause is automatically added as soon as that number is pressed. For example, if you register "0" as the PSTN Access Number, a pause will be inserted automatically after dialing "0".

Limitation

- ☐ Outside line access numbers can be up to 2 digits long.
- ☐ This feature does not work when using On Hook mode or when dialing from an external telephone.



☐ After you have registered an outside line access number, set the line to "Extension" in "Select Line". By default, this feature is set to "Outside".

To register an outside line access number perform the following proce-

Press the [User Tools] key.



Jser Too∣s: Counter 4 Press ⊚ or ⊚ until "4. Fax Features" is displayed.

User Too∣s: ⊭.Fax Features

- Press the [OK] key.
- 4 Press (or (until "6. Key Op. Tools" is displayed.

Fax Features: β.Key Op. Too∣s

Press the [OK] key.



- ☐ If the key operator code is registered and turned on, enter the key operator code and press the **OK** key.
- ☐ Press or until "8. PSTN Access No." is displayed.

Key Op. Tools: B.PSTN Access No.

- Press the [OK] key.
- Enter the outside line access number (2-digits) with the number keys.

If you make a mistake, press the [Clear/Stop] key and try again.

PSTN Access No.: /OK [O**I**]

Press the [OK] key.

"Programmed" is displayed on the screen.





Key Operator Settings



For the requesting party to be able to receive Transfer Result Reports from the Transfer Station, the requesting party must store the number of the telephone line their machine is connected to in their own machine.

Be sure to insert a pause after the area

For example, if your fax number is 1-234-567-8900, store the following:

- 1-234-567-8900
- Press the [User Tools] key.



User Tools: .Counter

Press or until "4. Fax Features" is displayed.

User Tools: **4.**Fax Features 4

- Press the [OK] key.
- 4 Press (or (until "6. Key Op. Tools" is displayed.

ax Features: 6.Key Op. Tools





- ☐ If the key operator code is registered and turned on, enter the key operator code and press the **(OK)** key.
- ☐ Press or until "9. Transfer Report" is displayed.

Key Op. Tools: ∣9.Transfer Report

- Press the [OK] key.
- 8 Enter the fax number with the number keys and [Pause/Redial] key.

Press OK |[1-234-567-8900**|||**]

- Press the [OK] key.
- Press the [Cancel] key on each display until you reach the standby display.

 
RDS (Remote Diagnostic System)

 
If your machine has a problem, a service representative can perform various diagnostic tasks over the telephone line from the service station to try to find out what is wrong with your machine. The service representative can also use RDS to change some of your machine's settings if you request it.

When the machine is shipped, this feature is turned on.









When Toner Runs Out

When the machine has run out of toner the symbol appears on the display. Note that even if there is no toner left you can still send fax messages. However, it is advisable to replace the toner early to avoid poor printing quality.

Limitation

☐ The File Reserve Report and is not printed.





Troubleshooting

When an Error Report is Printed

An error report is printed when a message could not be successfully sent or received.

Possible causes include a problem with your machine or the receiver's noise on the telephone line etc. If an error occurs during transmission, re-send the original. If an error occurs during reception, ask the sender to re-send the message.

Note

- $\hfill \square$ If the error happens frequently, contact your service representative.
- ☐ The "Page" column gives the total number of pages. The "Page Not Sent" column gives the number of pages that were not sent or received successfully.













When Power is Turned off or Fails

When Power is Turned off or Fails

Even if the Main Power switch is turned off, the contents of the machine's memory (programmed numbers etc.) will not be lost. However, if power is lost for about 1 hour through the Main Power switch being turned off, a power cut or the power cable being removed, contents of the Fax memory will be lost. Lost items will include any fax messages stored in memory using Memory Transmission or Reception.

If a file has been deleted from memory, a Power Failure Report is automatically printed as soon as power is restored. This report can be used to identify lost files. If an original stored for Memory Transmission was lost, re-send it. If a message received by Memory Reception or Substitute Reception was lost, ask the sender to re-send it.

#Important

 
- \square Make sure that 100% is shown on the display before you unplug the machine. If a lower value is shown, some data is currently stored in memory.
- ☐ Right after a power failure, the internal battery needs to be sufficiently recharged to guard against future data loss. Please keep the machine plugged in and the Main Power switch on for about 24 hours after the power loss occurs.







 

















8. Maintaining Your Machine

Replacing the Stamp Cartridge


The optional Document Feeder is required.

When the stamp is getting to become lighter, replace the cartridge.


- Note
- ☐ Use the cartridge specified for this machine.
- Lift the Document Feeder and open the stamp cover.

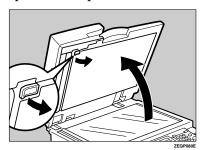


2 Pull out the cartridge.

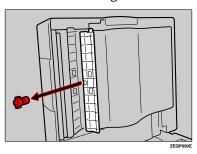

3 Set a new cartridge.

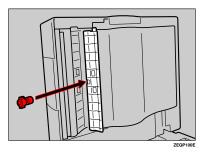

A Return the stamp cover to its original position.

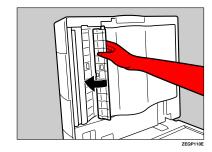

5 Close the Document Feeder.

- Note
- ☐ Hold down the center part of the cover to make sure that it is closed completely.



















9. Appendix


Connecting the Machine to a Telephone Line and Telephone

Connecting the Telephone Line


To connect the machine to a telephone line, use a snap-in modular type connector.

#Important

- ☐ Make sure the connector is the correct type before you start.
- Where to connect the machine

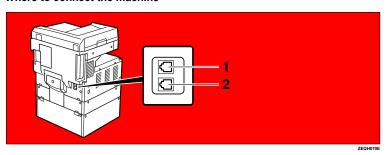

- 1. G3
- 2. External Telephone
- When using a modular type connector

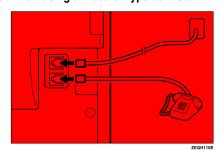







Appendix

Selecting the Line Type

Select the line type to which the machine is connected. There are two types: tone and pulse dial.

Select the Line Type using "Line Type" in "Key Operator Settings". The default settings is "Tone".

 


 $\hfill \square$ This setting is not displayed in some areas.





9









Specifications

Standard	G3
Resolution	8×3.85/mm•200×100dpi (Standard), 8×7.7/ mm•200×200dpi (Detail), 8×15.4/ mm•200×400dpi (Fine)
Transmission Time	3 seconds at 28,800bps, Standard resolution
Data Compression Method	MH, MR, MMR
Maximum Original Size	297×1200mm
Maximum Scanning Size	297×432mm
Print Process	Printing on standard paper using the laser
Transmission Speed	33,600/31,200/28,800/26,400/24,000/21,600/ 19,200/16,800/14,400/12,000/9,600/7,200/4,800/ 2,400bps (auto shift down system)

♦ Power Consumption

Standby mode	135W
Immediate Transmission	185W
Memory Transmission	140W
Memory Reception	125W
Printing	330W
Night Timer Off mode	25W









-rauvanceu_i ivi.000k 1 age 72 Thuisuay, iviaren 6, 2001 2.041



Appendix

Acceptable Types of Originals


Make sure your originals are completely dry before setting them in the machine. Originals containing wet ink or correcting fluid will mark the exposure glass and resulting image will be affected.

Acceptable Original Sizes


Where Original is Set	Acceptable Original Size	Maximum Number of Sheets	Paper Thickness
Exposure glass	Maximum A3 (297×420mm), 11"×17" (279×432mm)	1	
Document Feeder (ADF)	Fax transmission: A5 \square \square to A3 \square (up to 1200mm long) $8^1/2$ "× $5^1/2$ " \square to 11 "×17"(DLT) \square	30 sheets (80g/m², 20lb)	52-105g/m ² (45-90kg, 14-28lb)

Paper Size and Scanned Area

Exposure Glass

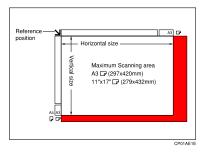


❖ Document Feeder

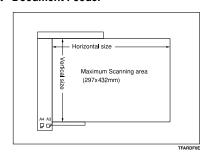



  $\hfill\square$ Maximum scanning area is 297 \times 1,200 mm for 1-Sided original.













Limitation

- ☐ There may be a difference in the size of the image when it is printed at the destination.
- ☐ If you set an original larger than DLT /A3 on the exposure glass, only an area of DLT /A3 is scanned.

Note

- ☐ Even if an original is correctly placed on the exposure glass or in the Document Feeder, a margin of 3mm around each edge of the original may not be sent.
- □ If the receiver uses paper narrower than the original, the image will be reduced to fit the paper width.
- ☐ The machine detects paper sizes in the following ways.
 - When you set an original in the Document Feeder, an original narrower than about 230mm is scanned as A4 size.
 - An original wider than about 263mm is scanned as A3 size.
 - Originals up to 1200mm in length can be scanned.
 - Widths between 231 and 262mm are scanned as B4 size.
 - Refer to the table below for the sizes the machine can detect when you
 place an original on the exposure glass. Because the machine scans in nonstandard size documents as one of the standard sizes, parts of the image
 may be truncated depending on the length of the document. For how to set
 non-standard size documents, see P.7 "Choosing the Area to be Scanned Yourself (Irregular Scan Area)".

	Length			
		~285mm	285mm~ 310mm	310mm~
width	~245mm	not detected	A4□	8 ¹ / ₂ "×13"□
width	245mm~ 270mm	B5 🖸	not detected	B4 □
	270mm~	A4 □	not detected	A3D

🎖 Maximum Scan Area

Memory Transmission/Immediate Transmission *1

- From the Document Feeder: 297×432mm (W×L)
- From the exposure glass: 297×432mm (W×L)
- *1 In the immediate transmission, the maximum scan area varies according to the resolution.













Function List

Advanced Transmission Features

-		
Feature name	Description	Reference
Send Later	Sets the machine to automatically start transmission or polling reception at an appointed time.	P.4 "Sending at a Specific Time (Send Later)"
Personal Code TX	This will help you to check up on who has been using the machine and how often.	P.6 "Personal Code Transmission"
Irregular Scan Area	When sending a non-standard size original, this feature specifies the length and width. The machine scans the original in the specified size.	P.7 "Choosing the Area to be Scanned Yourself (Irregular Scan Area)"
Fax Header Print	You can print a message in- cluding the name registered as the Fax Header on the re- ceived message for each file.	P.8 "Fax Header Print"
Label Insertion	If you register the receiver's name in a Quick Dial or Speed Dial, the receiver's name is automatically printed at the top of the received message.	P.9 "Label Insertion"
Auto Reduction	If the receiver uses paper nar- rower than the message, it is reduced to fit a paper size available on the receiving par- ty's machine before being sent.	P.10 "Auto Reduction"
Polling Reception	Sends a transmission request to the other party and receives a message from the receiver.	P.11 "Polling Reception"
Transfer Request	Sends an original to a destina- tion via a facsimile equipped with the transfer station capa- bility.	P.12 "Transfer Request"










Function List



Communication Information

Feature name	Description	Reference
Canceling Transmission or Reception	This feature cancels a file (reservation) for Memory Transmission, Transfer Request, Polling Reception.	P.15 "Canceling Transmission or Reception"
Displaying the Transmission Result	Part of the Journal can be shown on the display. The re- sults of the last 50 transmis- sions are displayed from the latest one.	P.17 "Checking the Transmission Result (TX File Status)"
Displaying the Reception Result	Part of the Journal can be shown on the display. The re- sults of the last 50 receptions are displayed from the latest one.	P.18 "Checking the Reception Result (RX File Status)"
Printing the TX File List	The transmission file list can be manually printed. This list allows you to know the files stored in memory or the file numbers.	P.19 "Printing a List of Files in Memory (Print TX File List)"
Printing a stored Message	Prints the contests of a fax that is stored in memory and has not been sent yet.	P.20 "Printing a Stored Message"
Printing the Journal	The Journal can be manually printed. This report shows the results of the last 50 communications.	P.21 "Printing the Journal"
Displaying the Memory Status	The status of the memory is shown on the display.	P.22 "Displaying the Memory Status"



 











Appendix

User Tools

Feature name	Description	Reference
Register/Delete Quick Dial	When you register a destination in a Quick Dial, you can specify the destination only by pressing the Quick Dial key.	Chapter3 "Quick Dial" in the Basic Features manual.
Register/Delete Speed Dial	When you register a destination in a speed dial, you can specify the destination by entering the two-digit Speed Dial code after pressing the Speed Dial key.	Chapter3 "Speed Dial" in the Basic Features manual.
Register/Delete Group Dial	If you program a several destinations into a Group, you can dial with just a few keystrokes.	Chapter3 "Groups" in the Basic Features manual.
Assigning User Function Keys	Stores a frequently used function in a User Function Key ([F1] to [F3]).	P.47 "Assigning User Function Keys"
Reports/Lists	This feature allows you to print various reports and lists manually. You can print the following reports and lists: Journal Transmission File List Quick Dial list Speed Dial list Group Dial list Quick Dial Label	P.49 "Printing Reports/Lists"
Monitor Volume	Adjusts the volume of monitoring and beeper sounds from the speaker inside the machine.	Chapter4 "Adjusting Vol- ume" in the Basic Features manual.
Date/Time	Adjusts the date and the time as a reference.	P.51 "Setting the Date and Time"
Summer Time/DST	Allows you to advance or put back the clock by one hour.	P.52 "Summer Time / Daylight Saving Time"
Fax Information	Registers your Own Name, Fax Header and Own Fax Number.	Chapter3 "Own Name /Fax Header / Own Fax Number" in the Basic Features manual.













Function List

Feature name	Description	Reference
Initial Setup TX	Allows you to change following transmission function settings: • Transmission	P.53 "Changing the Initial Set- up Transmission"
	ResolutionPhoto Original	
	Fax Reset Timer	
	On Hook Timeout	
Initial Set Up RX	Allows you to change following reception settings: Reception Mode	P.55 "Changing the Initial Set- up Reception"
	Checkered Mark	
	Center Mark	
	Print RX Time	
	 Forwarding 	
Counters	Check the transmission, reception, and totals on the display.	P.57 "Counters"
Authorized Reception	When you register Specified Senders in advance, you can restrict senders from whom you receive message.	P.58 "Authorized Reception"
Forwarding	Transfers received messages to a registered receiver (forwarding destination).	P.63 "Forwarding"
Changing User Parameters	Allows you to change the function settings to meet your needs.	P.70 "User Parameters"
Printing User Parameter List	Allows you to print and check User Parameter settings.	P.74 "Printing the User Parameter List"
Personal Code	Registers personal codes for each user. When each user enters a personal code when sending messages, you can check the machine usage by user. Personal Code is also used for Restricted Access.	P.75 "Personal Codes"
Polling ID	Registers ID required for using the Transfer Request.	P.79 "Polling ID"
Select Line	Allows you to select an internal G3 communication line or external telephone line for your fax machine.	P.80 "Select Line"













Appendix

Feature name	Description	Reference
PSTN Access Number	Allows you to specify the code used to access an outside line when you dialing.	P.81 "PSTN Access Number"
Transfer Report	Register a number for receiving Transfer Result Reports from the Transfer Station.	P.82 "Transfer Report"
RDS On/Off	Allows you to switch on RDS (Remote Diagnostic System) so a service representative can test your fax machine remotely from a service station, diagnose the problem, and can change your machine settings to correct the problem.	P.82 "RDS (Remote Diagnostic System)"











INDEX

Α

Acceptable Types of Originals, 92 Adjusting Volume, 96 Authorized Reception, 58, 97 Authorized Reception list, 62 Auto Fax RX Power-up, 31 Automatic Redial, 32 Auto Reduction, 10, 94

В

Batch Transmission, 32

С

Canceling Transmission, 95
Canceling Transmission or Reception, 15
Center Mark, 40
Chain Dial, 23
Changing Key Operator Settings, 57
Checkered Mark, 40
Checking the Transmission Result
(TX File Status), 17
Clock, 51
Communication Failure Report, 34
Communication Information, 95
Communication Result Report, 11, 34
Counters, 57, 97

D

Date and Time, 51
Summer Time / Daylight Saving Time, 52
Date/Time, 96
Displaying the Memory Status, 95
Displaying the Reception Result, 95
Displaying the Transmission Result, 95
Dual Access, 31

Ε

ECM, 33 End Receiver, 12, 13 Error Report, 84

F

Fax Header Print, 8, 94
Fax Information, 96
File Reserve Report, 11, 34
Forwarding, 63, 97
Forwarding Station, 63
Function List, 94
Function Map, i

G

Group Dial, 96 Group Dial List, 50

Н

Handy Dialing Functions, 23

- [

Image Rotation, 41 Immediate Reception, 37 Initial Setup Reception, 55 Initial Setup RX, 45, 97 Initial Setup Transmission, 53 Initial Setup TX, 45, 97 Irregular Scan Area, 7, 94

J

Journal, 21, 49, 95

K

Key Operator Settings, 57

 
L

Label Insertion, 9,94 Line Type Selecting, 80

М

Maintaining Your Machine, 87 Manual Dial, 26 Memory Reception, 37 Memory Status, 22 More Transmission Functions, 31









O

On Hook Dial, 25 Outside Line Access Number, 81

Page Reduction, 42 Page Separation and Length Reduction, 41 Parallel Memory Transmission, 33 Personal Code, 75, 97 Personal Code List, 77 Personal Code Transmission, 6 Personal Code TX, 94 Polling ID, 79,97 Polling Reception, 11, 94 Polling Reserve Report→File Reserve Report, 11 Polling Result Report-Communication Result Report, 11 Print Completion Beep, 40 Printed Report, 34 Printing Journal, 21 Printing a stored Message, 95 Printing a TX File List, 49 Printing Functions, 40 Printing the Journal, 95 Printing the Quick Dial Label, 50 Printing the TX File List, 95 Print TX File List, 19 Program/Delete, 45 Programming Date and Time, 51 PSTN Access Number, 81, 98 PWD, 28

Q

Quick Dial, 96 Quick Dial List, 50

R

RDS, 82 RDS On/Off, 98 Reception, 37 Reception Features, 37 Reception Time, 41 Redial, 24 Reports/Lists, 45, 49, 96 Requesting Party, 12 Restricted Access, 78 RX File Status, 18

S

Selecting the Line Type, 90 Select Line, 97 Sender Reception list, 62 Sender Setting, 69 Sending at a Specific Time (Send Later), 4 Send Later, 94 SEP, 28 Setup, 45 SID, 29 Specifications, 91 Specified Sender/Forwarding Station list, 68 Speed Dial, 96 Speed Dial List, 50 Stamp, 27,87 Stored Message, 20 SUB, 29 Substitute Reception, 38 Summer Time/DST, 96 Switches and Bits, 70

Т

Telephone Directory, 23 Telephone Line, 89 Toner, 83 Transfer Report, 82, 98 Transfer Request, 12, 94 Transfer Station, 12 Transmission Features, 23, 27 Transmission Result Report (Immediate TX), 35 Transmission with Image Rotation, 31 Troubleshooting, 83 TSI, 42 TSI Print, 42 TTI Print→Fax Header Print, 8

User Function Keys, 47, 48, 96 User Parameter List, 70,97 User Parameters, 70,97 User Tools, 45, 96

