



NIC FAX UNIT CD-ROM

Operating Instructions

For safe and correct use of this machine, please be sure to read the Safety Information in the Basic Features manual before you use it.

TABLE OF CONTENTS

Introduction 1

Trademarks..... 1

How to Read Documents on the CD-ROM 1

System Requirements 2

Important 2

Using the CD-ROM..... 2

Settings and Installation 3

Errata for NIC FAX UNIT Operating Instructions 3

Introduction

Thank you for purchasing NIC FAX.

You are requested to read through and agree with the terms and conditions of the User License Agreement before using NIC FAX Driver and Utilities and NIC FAX Unit manual.

This CD-ROM contains the following:

❖ NIC FAX Driver and Utilities

- LAN-Fax F3 (LAN-Fax Driver)
- Address Book
- LAN-Fax Cover Sheet Editor
- SmartDeviceMonitor for Client / Admin
- DeskTopBinder Lite
- ScanRouter V2 Lite

❖ Online Help

- Online Help for using a Web browser

❖ NIC FAX Unit Manual

- NIC FAX UNIT TYPE410 Operating Instructions
- Server Domain Authentication

❖ Adobe Acrobat Reader

Trademarks

Adobe, the Adobe logo, and Adobe Acrobat are registered trademarks of Adobe Systems Incorporated.

Microsoft®, Windows®, Windows NT® are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Pentium is a registered trademark of Intel Corporation.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

How to Read Documents on the CD-ROM

The manual on this CD-ROM is in PDF format. To read it, you must install Adobe Acrobat Reader on your computer.

System Requirements

You need the following when using Quick Install to run NIC FAX Driver and Utilities, and to read NIC FAX Unit manual. (For detailed information about each utility and driver, refer to the specific Readme files.)

For information about the latest available drivers, see the relevant manufacturer's Web site.

Computer	: IBM PC/AT or compatible running Windows 95, Windows 98, Windows Me, Windows NT 4.0, Windows 2000, Windows 2003 Server or Windows XP
CPU	: 133-MHz Pentium (or a CPU that satisfies the minimum requirements of your operating system)
Free Memory	: 32 MB minimum (or a size that satisfies the minimum requirements of your operating system)
Disk Space	: 16 MB minimum
Operating System	: Windows 95, Windows 98, Windows Me, Windows NT 4.0, Windows 2000, Windows 2003 Server or Windows XP

Important

Operation cannot be guaranteed for all system configurations. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine (hardware/software) and NIC FAX Driver and Utilities/NIC FAX Unit manual.

Using the CD-ROM

Before using the CD-ROM, please make sure that Adobe Acrobat Reader is installed on your computer.

- 1** Start up the computer.
- 2** Insert the CD-ROM into the CD-ROM drive.
- 3** Select the language you want, then click [OK].
- 4** Click [Browse This CD-ROM] on the Printer Drivers and Utilities screen, or open the following folder.
D:\Manual\English
(If your CD-ROM is assigned to drive D.)
- 5** Double-click the "NIC FAX.pdf" file to view it.

Settings and Installation


- ① Adjust the NIC FAX Settings. For details, see Chapter 2 "Before Using Network Functions", "NIC FAX Initial Settings" and Chapter 4 "E-mail Server Settings", *NIC FAX Unit manual*.
- ② Install the NIC FAX Driver and Utilities. For details, see Chapter 2 "Installing the Software", *NIC FAX Unit manual*. This section should be printed out for reference.

Errata for NIC FAX UNIT Operating Instructions

Please note the following corrections to this manual.

Topic	Page	Error	Corrections
5. Using IP-Fax Functions >Note	99	 Note ☐ In case of transmission via the Internet, the equipment on the receiving end must be connected directly to the Internet. The equipment is not accessible if it is connected to a network which is protected by installing Firewall.	 Note ☐ To send IP faxes over the Internet, the receiving device must be connected to the Internet directly. Also, some firewall-protected networks cannot be accessed. For details, ask your network administrator.
		 Note ☐ For information about VoIP gateways (with T.38 Function) or gatekeepers that have been confirmed to work, contact your dealer or service representative.	 Note ☐ For information about VoIP gateways (with the T.38 function) and gatekeepers etc., contact your sales or service representative. Note also that the settings for some VoIP devices must be obtained from a service engineer.

NIC FAX UNIT CD-ROM Operating Instructions

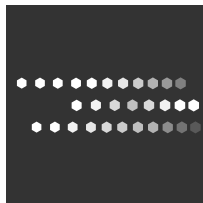

Printed in China

GB 

AE  H231-8603D



H2318603D