

Technical Bulletin

PAGE: 1/1

Reissued: 10-Jul-15

Model: Paper Feed Unit PB3150	Date: 26-Jun-13	No.: RD694001b	
DTP Poissus			

RTB Reissue

The items in **bold italics** have been corrected or added.

Subject: Firmware Release Note: Paper Feed Unit PB3150			Prepared by: T. Tachibana
From: 1st Tech Service Sect., MFP/Printer Tech Service Dept.			
Classification:	Troubleshooting	☐ Part information	Action required
	☐ Mechanical	☐ Electrical	☐ Service manual revision
	☐ Paper path	☐ Transmit/receive	☐ Retrofit information
	☐ Product Safety	Other (Firmware)	⊠ Tier 2

This RTB has been issued to announce the firmware release information for the **Paper Feed Unit PB3150.**

Version	Program No.	Effective Date	Availability of RFU
01.780:10	D6945300D	August 2015 production	Not Available
01.770:10	D6945300C	December 2013 production	Not Available
01.760:10	D6945300B	1st Mass production	Not Available

Note: Definition of Availability of RFU via @Remote

[&]quot;Not available": The firmware can only be updated via SD card.

Version	Modified Points or Symptom Corrected
01.780:10	Minor change
01.770:10	Symptom corrected: SC622 occurs and the machine reboots automatically if paper is fed from Tray 3.
01.760:10	1st Mass production

[&]quot;Available": The firmware can be updated via RFU or SD card.

RICOH

Technical Bulletin

PAGE: 1/7

Model: Paper Feed Unit PB3150	Date: 03-Apr-18	No.: RD694002	
-------------------------------	-----------------	---------------	--

Subject:Part catalog correction: Guide plate for PB3150/PB3160/PB3170/PB3230			Prepared by: H.Kameda		
From: Technical Support Sect., Product Marketing Dept.					
Classification:	Troubleshooting ☐ Part information ☐ Mechanical ☐ Electrical		☐ Action required☐ Service manual revision☐ Retrofit information		
	☐ Paper path☐ Product Safety	Other ()	☐ Tier 2 ☐ Tier 0.5		

Parts catalog correction1

Affected model: D694 (Paper Feed Unit: PB3150)

Old P/N	New P/N	Description	Q'ty	Int
D1492721	D6942721	GUIDE PLATE: SWIVEL	1-1	X/O

Change: The shape of the guide plate was changed. **Reason:** To further strengthen and prevent breaking of the guide plate.

	Old	New
	D1492721	D6942721
Shape		1. Deleted stopper 2. Changed angle regulation 3. Strengthened part
Angle	23.5°	38.5°


Model: Paper Feed Unit PB3150

 Illetin
 PAGE: 2/7

 Date: 03-Apr-18
 No.: RD694002

Procedure:

1. Release the hook and remove the guide plate.

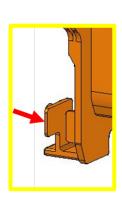



2. Attach the guide plate by sliding it toward the right hole.



3. Hook the guide plate.



RICOH

Technical Bulletin

Date: 03-Apr-18

PAGE: 3/7

No.: RD694002

Parts catalog correction 2

Model: Paper Feed Unit PB3150

Affected model: D693 (Paper Feed Unit: PB3160)


Old P/N	New P/N	Description	Q'ty	Int	Int
D6932526	D6932581	GUIDE PLATE:SWIVEL:No.3	1-0	X/O	X/O
	D6931157	CUSHION:GUIDE:SWIVEL:UP	0-1	-	-
		PER			
	-	GUIDE PLATE:SWIVEL:NO.3	0-1	-	-
D6932725	D6932726	GUIDE	1-1	-	O/O
		PLATE:AUXILIARY:PAPER			
		FEED UNIT			

Change: Added cushions and changed the shape of the guide plate. **Reason:** To further strengthen and prevent breaking of the guide plate.


Important: Be sure to attach the above CUSHION when installing the paper guide plates.

Procedure for UPPER GUIDE PLATE ASSYS

1. Remove the upper guide plate.

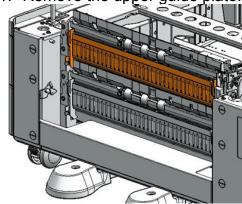


2. Remove the auxiliary guide plate for the "lower paper guide:lower" (screws x1).

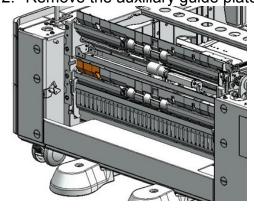


PAGE: 4/7


Model: Paper Feed Unit PB3150 Date: 03-Apr-18 No.: RD694002

3. Attach the cushion.

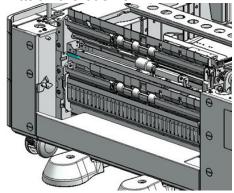


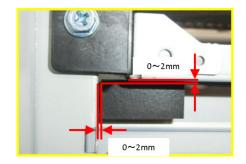

4. Attach the auxiliary guide plate for the lower guide plate (screw x1).

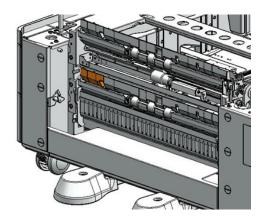

5. Attach the upper guide plate.

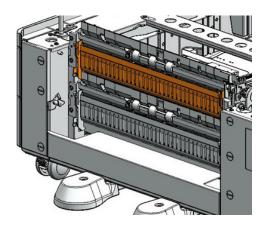

RICOH

Technical Bulletin

PAGE: 5/7

Model: Paper Feed Unit PB3150	Date: 03-Apr-18	No.: RD694002
-------------------------------	-----------------	---------------


Old P/N	New P/N	Description	Q'ty	Int
D6932526	D6932582	GUIDE PLATE:SWIVEL:No.3	1-0	X/O
	— D6931257	CUSHION:GUIDE:SWIVEL:LOWER	0-1	-
	-	GUIDE PLATE:SWIVEL:NO.3	0-1	-

Change: Added cushions and changed the shape of the guide plate. **Reason:** To further strengthen and prevent breaking of the guide plate.


Important: Be sure to attach the above CUSHION when installing the paper guide plates.

Procedure for LOWER GUIDE PLATE ASSYS

1. Remove the lower guide plate.

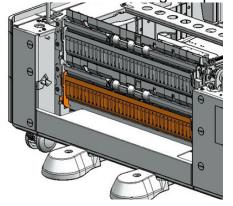


2. Attach the cushion.

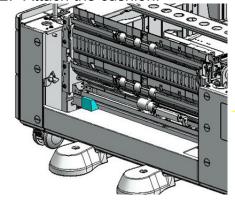



3. Attach the lower guide plate.

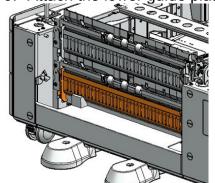

Model: Paper Feed Unit PB3150 Date: 03-Apr-18 No.: RD694002

Parts catalog correction 3

Affected model: D695 (LCIT: PB3230/PB3170)


Old P/N	New P/N	Description	Q'ty	Int
D6932526	D6952581	GUIDE PLATE:SWIVEL:No.3	1-0	X/O
	-	STOPPER:GUIDE	0-1	-
		PLATE:SWIVEL:ASS'Y		
		GUIDE PLATE:SWIVEL:ADHESION	0-1	-

Change: Added cushions and changed the shape of the guide plate. **Reason:** To further strengthen and prevent breaking of the guide plate.


Important: Be sure to attach the above STOPPER, when installing the paper guide plates.

Procedure

1. Remove the guide plate.

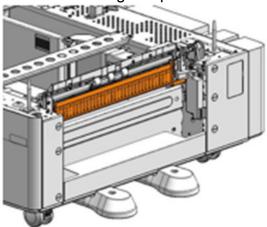

2. Remove the double tape from the guide stopper.

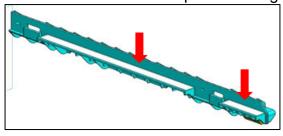

3. Attach the guide stopper.



PAGE: 7/7

Model: Paper Feed Unit PB3150 Date: 03-Apr-18 No.: RD694002


4. Attach the guide stopper.



5. Attach the guide plate stopper.



6. Attach the guide stopper plate.

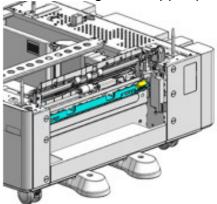

7. Attach the guide plate.

