Printer/Scanner Kit Type 1075

Operating Instructions Scanner Reference



- 1 Network Scanner
- Preparations for Use as a Network Scanner
- 3 Setting Originals
- 4 Scanning Originals Using the Network TWAIN Scanner Function
- 5 Delivering Stored Scan Data Using the Network Delivery Scanner Function
- 6 Sending Stored Scan Data by E-mail
- 7 Using the Document Server
- 8 Appendix

Introduction

This manual contains detailed instructions on the operation and maintenance of this machine. To get maximum versatility from this machine, all operators should carefully read and follow the instructions in this manual. Please keep this manual in a handy place near the machine.

The scanner function is available when the Printer/Scanner option is installed in the machine.

Warning:

Use of controls or adjustment or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

TABLE OF CONTENTS

How to Read This Manual	1
Symbols	1
Names of Major Options	2
Manuals for This Machine	3
Important	5
1. Network Scanner	
Outline	
Network TWAIN Scanner	
Network Delivery Scanner	8
E-mail	
Document Server	10
Names and Functions of Components	11
Control Panel	
Display Contents	12
2. Preparations for Use as a Network Scanner	
Preparation Sequence	15
Using as a Network TWAIN Scanner	
Using as a Network Delivery Scanner	
Using E-mail	
Initial Scanner Setup	
Default Settings	
Setting Basic Settings	
Making Scanner Settings	25
Making Scan Data Subject Settings	29
Making E-mail Settings	31
Setting Procedure	
Verification of Settings	32
Installing Software	33
Auto Run Program	
Software for Using a Network TWAIN Scanner	
Software for Using the Network Delivery Scanner Function	
DeskTopBinder V2 Lite	
Software Supplied on CD-ROM	37
3. Setting Originals	
Placing Originals on the Exposure Glass	44
Placing Originals in the Auto Document Feeder (ADF)	45
Dividing Originals and Placing Them in the Auto Document Feeder (ADF)	
Original Orientation and Scan Area	47
For a Network Delivery Scanner and Document Server	
For a Network TWAIN Scanner	49

4. Scanning Originals Using the Network TWAIN Scanner Fu	nction
Flow of Operations	51
Scanning Originals	52
Functions of the TWAIN Driver	54
5. Delivering Stored Scan Data Using the Network Delivery Scanner Function	
List Displays of Destinations and Senders	55
Delivery Procedure	57
Checking the Status of Delivery	64
Using the Network Delivery Scanner Function with the Document Serv	ver65
Simultaneous Delivery and Storage	
Delivering Stored Files	66
6. Sending Stored Scan Data by E-mail	
List Displays of Destinations and Senders	67
Procedure for Sending E-mail	68
Checking the Status of E-mail	76
Using E-mail with the Document Server	77
Simultaneous Storage and Sending of E-mail	
Sending Stored Files	78
7. Using the Document Server	
Storing Data	79
Storage Procedure	80
Viewing a List of Stored Files	
Viewing the List	
Searching for Files	
Deleting Stored Files	
Changing File Information	89
8. Appendix	
Relationship between Resolution and Data Size	91
Troubleshooting	92
When Scanning Is Not Performed as Expected	
When the Delivery Function Does Not Work	
When an Error Message Appears on the Control Panel	
When an Error Message Appears on the Computer	
Settings for SMTP Authentication and POP Authentication Specifications	
INDEX	105

How to Read This Manual



In this manual, the following symbols are used:

∰Important

If this instruction is not followed, paper might be misfed, originals might be damaged, or data might be lost. Be sure to read this.

Preparation

This symbol indicates the prior knowledge or preparations required before operating.

Note

This symbol indicates precautions for operation or actions to take after misoperation

Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

This symbol indicates a reference.

[]

Keys that appear on the machine's panel display.

[]

Keys and buttons that appear on the computer's display.

Keys built into the operation panel of the machine.

Keys on the computer's keyboard.

Names of Major Options

Major options of this machine are referred to as follows in this documentation:

• Printer/Scanner Kit Type $1075 \rightarrow$ printer/scanner controller For other options, see the respective documentation.

The following software products are referred to using a general name:

- DeskTopBinder V2 Lite and DeskTopBinder V2 Professional → DeskTopBinder V2 Lite/Professional
- ScanRouter V2 Lite and ScanRouter V2 Professional → ScanRouter V2 Lite/Professional

Manuals for This Machine

The following manuals describe the operational procedures and maintenance of this machine:

Ø Note

☐ Adobe Acrobat Reader is necessary to view the manuals in PDF format. Acrobat Reader can be installed from the Setup screen of DeskTopBinder V2 Lite or ScanRouter V2 Lite.

General Settings Guide

Describes the settings of basic items to use this machine by connecting to a network. The machine must be connected to a network to use scanner functions. See this manual to set up necessary items.

Copy Reference

Describes the procedures and functions for using this machine as a copier. See this manual for the type of originals that can be used with this machine.

Scanner Reference (this manual)

Describes basic settings for using scanner functions, installation of necessary software, and operations for using the scanner functions.

Manuals for DeskTopBinder V2 Lite

DeskTopBinder V2 Lite is software included on the CD-ROM labeled "Scanner Driver & Document Management Utilities" for this machine. For information about the functions of DeskTopBinder V2 Lite, see p.39 "DeskTopBinder V2 Lite".

- DeskTopBinder V2 Lite Setup Guide (PDF)
 Describes the operating environment for DeskTopBinder V2 Lite in detail
 and installation. This guide can be displayed from the Setup screen when
 DeskTopBinder V2 Lite is installed.
- DeskTopBinder V2 Lite Introduction Guide (PDF)
 Describes how to use DeskTopBinder V2 Lite and gives an outline of its functions. This guide is added to the Start menu when DeskTopBinder V2 Lite is installed.
- Auto Document Link Guide (PDF)
 Describes the functions and operations of Auto Document Link installed with DeskTopBinder V2 Lite. This guide is added to the Start menu when DeskTopBinder V2 Lite is installed.

Manuals for ScanRouter V2 Lite

𝚱 Note

- ☐ ScanRouter V2 Lite is software included on the CD-ROM labeled "Scanner Driver & Document Management Utilities" for this machine. For information about ScanRouter V2 Lite, see p.8 "Network Delivery Scanner" and p.40 "ScanRouter V2 Lite".
- ScanRouter V2 Lite Setup Guide (PDF)
 Describes the operating environment for ScanRouter V2 Lite in detail, installation, and settings. This guide can be displayed from the Setup screen when ScanRouter V2 Lite is installed.
- ScanRouter V2 Lite Management Guide (PDF)
 Describes the management and operation of a delivery server and gives an outline of the functions of ScanRouter V2 Lite. This guide is added to the Start menu when ScanRouter V2 Lite is installed.

Important

When the machine is connected to a network, observe the following points when setting up the machine or changing settings:

For more details, see the documentation and Help for ScanRouter V2 Lite/Professional and DeskTopBinder V2 Lite/Professional.

When a dial-up router is connected in a network environment

The settings for the delivery server to be connected must be made appropriately for the machine with ScanRouter V2 Lite/Professional, Auto Document Link, or DeskTopBinder V2 Lite/Professional. In addition, appropriately set up connected devices with the I/O settings of ScanRouter V2 Administration Utility.

If the network environment changes, make the necessary changes for the delivery server with the machine, the administration utility of the client computers, Auto Document Link, and DeskTopBinder V2 Lite/Professional. Also, set the correct information for the connected devices with the I/O settings of ScanRouter V2 Administration Utility.

∰Important

☐ When the machine is set up to connect to the delivery server via a dial-up router, the router will dial and go online whenever connection to the delivery server is initiated. Telephone charges may be incurred.

When connected to a computer that uses dial-up access

- Do not install ScanRouter V2 Lite/Professional on a computer which uses dial-up access.
- When using ScanRouter V2 Lite/Professional, DeskTopBinder V2 Lite/Professional, Auto Document Link, or a TWAIN driver on a computer with dial-up access, a dial-up connection may be performed when connecting to the delivery server and other equipment depending on the setup. If the computer is set up to connect to the Internet automatically, the confirmation dialog box will not appear, and telephone charges may be incurred without the user being aware of it. To prevent unnecessary connections, the computer should be set up so that the confirmation dialog box is always displayed before establishing a connection. Do not make unnecessary connections when using the above listed software.

When connected to an e-mail server

When the machine is connected to an SMTP server managed by an Internet service provider (hereafter called "provider(s)"), the SMTP or POP identity (POP before SMTP) may be required by the provider.

1. Network Scanner


Outline

By installing the printer/scanner controller, the machine can be used as a network scanner.

As a network scanner, the machine can operate as a network TWAIN scanner, operate as a network delivery scanner, send e-mail, and store scan data in the Document Server.

Network TWAIN Scanner

The scanning function of this machine can be used from a client computer via a network(Ethernet, IEEE 1394[optional], or a wireless LAN). Original can be scanned with the same operation used for SCSI-and USB-connected scanners. For more information, see p.51 "Scanning Originals Using the Network TWAIN Scanner Function".

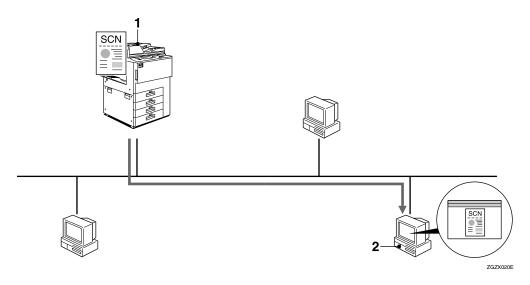

1. This machine

The scanning function of the machine can be used from a client computer via a network.

2. Client Computer


Originals are scanned using the TWAIN driver for the machine from an application.

Network Delivery Scanner

The machine is used as a delivery scanner with ScanRouter V2 Lite/Professional. The data from the original scanned by the machine is stored in the delivery server and delivered to the folders of the client computers on the same network. For more information, see p.55 "Delivering Stored Scan Data Using the Network Delivery Scanner Function".

Note

☐ Using the optional ScanRouter V2 Professional, the machine can also deliver scan data using e-mail, and documents can be viewed from a client computer using a Web browser.

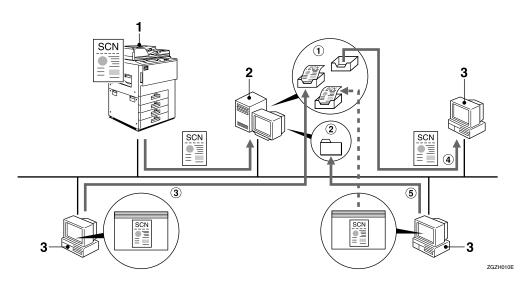

1. This machine

The data from the original scanned by the scanner is sent to the delivery server.

Together with the Document Server, multiple documents are stored and then delivered. See p.65 "Using the Network Delivery Scanner Function with the Document Server".

2. Delivery server

ScanRouter V2 Lite/Professional is installed and used as a delivery server.

Received data is delivered to the in-tray of the specified destination (① in the figure). According to the settings of the intray, the data is stored in the in-tray or in a Windows folder (② in the figure).

3. Client computer

The contents of a stored document can be checked in the following ways:


- View the document in an in-tray of DeskTopBinder V2 Lite to check the contents. (③ in the figure)
- Use Auto Document Link to receive the document stored in an in-tray, and check the contents with an application corresponding to the file format. (4) in the figure)
- Connect to the Windows folder where the document is stored via the network, and check the contents with an application corresponding to the file format. (⑤ in the figure)

For more information about ScanRouter V2 Lite, DeskTopBinder V2 Lite, or Auto Document Link, see the respective documentation. Seep.3 "Manuals for This Machine".

E-mail

A scanned image that is attached to an e-mail can be delivered using the e-mail system through a LAN or the Internet.

For details, seep.67 "Sending Stored Scan Data by E-mail".

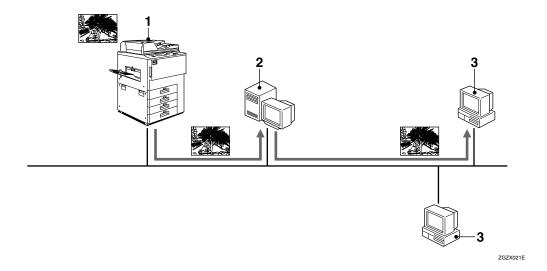

1. This machine

A scanned image that is attached to an e-mail can be delivered to an e-mail server. In combination with the document storage function, scanned images and documents that have been temporarily stored can be delivered all at once.

2. E-mail server


An e-mail server is the SMTP server used for an e-mail system. It transfers a transmitted e-mail to a specified destination through a LAN or the Internet.

3. Client computer

An e-mail with images attached to it is received using e-mail software.

Document Server

The data from a scanned original is stored as a document on the hard disk of the machine, and viewed, copied, or deleted using DeskTopBinder V2 Lite/Professional from a client computer via a network. Documents can be searched for using the user name or the document name. Also, others can be kept from viewing the document by setting a password for the document. For more information, see p.79 "Using the Document Server".

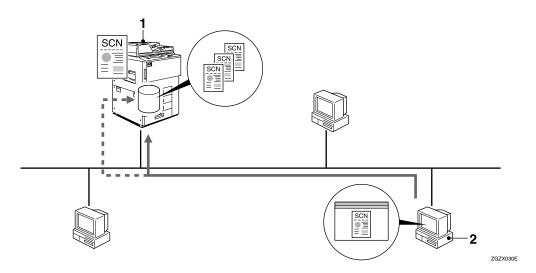

1. This machine

The data from the originals scanned by the scanner are stored.

2. Client Computer

The stored document can be viewed or deleted by connecting to the machine using DeskTopBinder V2 Lite/Professional.

For more information about DeskTopBinder V2 Lite, see the DeskTopBinder V2 Lite manuals. See p.3 "Manuals for This Machine".


П

Names and Functions of Components

This section explains the names and functions of various controls used to operate the scanner.

Control Panel

This illustration shows the control panel when options are installed.

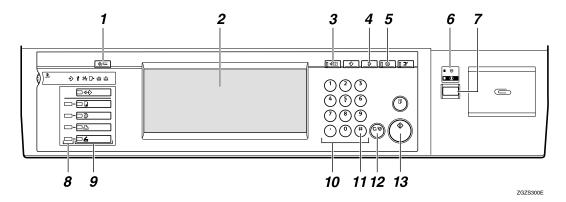

1. [User Tools/Counter] key

Use to change default or operation parameters according to the operating conditions.

2. Display

Shows the operation status and various messages.

3. [Check Modes] key

Press to check the current settings.

4. [Clear Modes] key

Use to cancel settings.

5. [Energy Saver] key

Press this key for about one second to begin warm-up.

Pressing this key again while in warm-up mode cancels warm-up.

Mote

☐ This key is inactive while scanning or setting scanner default.

6. Main power indicator and power indicator

The main power indicator lights up when the main power switch is set to on. The power indicator lights up when the machine is on.

∰Important

☐ Do not turn off the main power while the power indicator is blinking. Doing so may cause a failure of the hard disk.

7. Operation switch

Pressing this switch turns the machine on. The power indicator lights up. To turn the machine off, press this switch again.

Note

☐ This key is inactive while setting scanner default.

8. Status indicators

Show the status of the various functions.

- When lit yellow, the corresponding function is selected.
- When lit green, the corresponding function is active.
- When lit red, the corresponding function is interrupted.

Press the respective key, and then follow the instructions that appear on the screen.

9. Function keys

Pressing the Copy, Document Server, Printer, or Scanner key activates the respective function. The display content changes accordingly.

The indicator for the selected function lights up.

10. Number keys

Use to enter numeric values.

11. [#] key (Enter key)

Use to enter a numeric value.

12. [Clear/Stop] key

- Clear: Clears an entered numeric value
- Stop: Stops scanning

13. [Start] key

Use to begin scanning, file storing, or delivery.

Display Contents

The normal screen configuration is as follows:

The display's contents differ depending on the function.

∰Important

- \square Protect the display from shocks and strong pressure to prevent the possibility of damage. The maximum allowable is 30 N *1 (3 kgf *2).
 - *1 N: Newton
 - *2 kgf: kilogram-force (1kgf = approx. 9.8N)

Note

- ☐ The Copy screen is set as the default screen when the machine is turned on. You can change this setting under the [Priority Function] on the [Basic Settings] tab in System Settings. See the General Settings Guide.
- ☐ Selected or specified items are highlighted like **■**■■.

1

Using as a network TWAIN scanner

When using the machine as a network TWAIN scanner, it is not necessary to select the **[Scanner]** key on the control panel. When the TWAIN driver becomes active on a client computer, the display automatically switches to the following screen.



Press [Cancel] to use functions other than network TWAIN scanner function.

Using as a network delivery scanner

Press the **[Scanner]** key to display the network delivery scanner screen (when delivery server has been selected in Destination List Priority). If the network TWAIN scanner screen appears, press **[Cancel]**.



p.25 "Making Scanner Settings" for Destination List Priority

Using E-mail

Press the **[Scanner]** key to display the e-mail screen. If the network TWAIN scanner screen appears, press **[Cancel]**.



p.25 "Making Scanner Settings" for Destination List Priority

2. Preparations for Use as a Network Scanner


To use the machine as a network scanner, you must make settings required for use as a scanner as well as basic settings for use in a network.

First, see the General Settings Guide for details about how to make basic settings, and then make scanner settings.

Preparation Sequence

The preparation sequence is different depending on whether the machine is to be used as a network TWAIN scanner or network delivery scanner, or the Document Server is used.

Using as a Network TWAIN Scanner

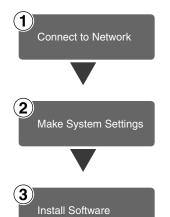

Connect the machine to the network with an Ethernet cable, IEEE 1394 (optional) cable or use a wireless LAN (optional). See the General Settings Guide.

Check the network settings in System Settings, and change if required

See the General Settings Guide.

On the client computers, install the software required for using the network TWAIN scanner functions, such as a TWAIN driver and DeskTopBinder V2 Lite.

Seep.35 "Software for Using a Network TWAIN Scanner".

Using as a Network Delivery Scanner



Connect the machine to the network with an Ethernet cable, IEEE 1394 (optional) cable or wireless LAN (optional).

See the General Settings Guide.



Check the network settings in System Settings, and change if required.

See the General Settings Guide.



Make settings for the network delivery scanner function, such as the settings for the scanning feature and subject information. See p.18 "Initial Scanner Setup".



Install the software required for using the network delivery scanner functions, such as ScanRouter V2 Lite, on the delivery server. Then, make the required settings for server maintenance and delivery service.

See p.36 "Software for Using the Network Delivery Scanner Function".

For information about ScanRouter V2 Lite, see the ScanRouter V2 Lite manuals. See p.3 "Manuals for This Machine".



Use ScanRouter V2 Administration Utility to set the destination and sender information.



On the client computers, install the software required for viewing or auto-receiving documents by connecting to the delivery server, such as DeskTopBinder V2 Lite.

See p.37 "DeskTopBinder V2 Lite".

Using E-mail



Connect the machine to the network with an Ethernet cable or IEEE 1394 (optional) cable or wireless LAN (optional).

See the General Settings Guide.



Check the network or the destination settings in System Settings, and change if required.

See the General Settings Guide.



Make settings for sending e-mail such as e-mail information language and file type priority.

See p.18 "Initial Scanner Setup".



Make settings for sending e-mail for the SMTP server using the client computer's Web browser.

See p.31 "Making E-mail Settings".



Set up an e-mail server as necessary.

For information about setting up an e-mail server, see the instruction manuals of the e-mail server to be used and the software to be installed.

Initial Scanner Setup

This section explains all required settings and procedures for using the machine as a network scanner.

Default Settings

The settings for using the network scanner functions of the machine are listed below. Make the necessary settings.

∰Important

- ☐ Items marked ☆ are the minimum required settings for using the machine as a network scanner. Be sure to set these items before use.
- ☐ Items marked should be set if required.

System settings

For information about the settings, see the General Settings Guide.

Settings		TWAIN *1	Delivery *2	E-mail *3	Store *4
Timer Settings	Scanner Auto Reset Timer		О	О	О
Interface Set-	IP Address	☆	☆	☆	☆
tings [Network]	Sub-net Mask	О	О	О	О
[INEIMOIK]	Gateway Address	О	О	O	О
	Network Boot	О	О	O	
	Effective Protocol	0	О	О	О
	NW Frame Type	О	О	O	
	LAN Type	О	О	O	
	Ethernet Speed	О	О	О	
File Transfer Settings	Delivery Option *6		О		
	Scanner Recall Interval Time		О	О	
	Number of Scan- ner Recalls		О	0	

Settings		TWAIN *1	Delivery *2	E-mail *3	Store *4
Key Operator Tools	Address Book Management			0	
	Address Book: Program/Change /Delete Group			•	
	Address Book: Change Order			0	
	Address Book: Edit Title)	
	Address Book: Select Title			0	

 $^{^{\}ast 1}$ Settings for the network TWAIN scanner function

Scanner settings

Explanations of scanner settings are provided in this manual.

Se	ttings	Default	TWAIN*1	Delivery *2	E-mail *3	Store *4
Basic Set- tings	Scan Type	Text (Print)		О	О	О
⇒ p.21	Resolution	200 dpi		0	0	0
	Image Density	Auto Image Density (Medium)		0	0	О
	Scan Size	Auto De- tect		О	О	О
Scanner Settings ⇒ p.25	Send/Store Connection Timeout	10 sec	0	0	0	О
	Compression (Black & White)	On		0	0	О
	Compression (Gray Scale)	Standard		0	0	О
	Destination List Priority	E-mail		0	0	
	Update Deliv- ery Server Des- tination List			0		

^{*2} Settings for the network delivery scanner function

^{*3} Settings for e-mail
*4 Settings for the Document Server

 ^{*5} Do not change this setting. It must be left at the default.
 *6 When delivery option is set to "ON", make sure that IP address is set.

Se	ettings	Default	TWAIN*1	Delivery *2	E-mail *3	Store *4
Scanner Set- tings	Sender's Name Default	No			О	
⇒ p.25	Max. E-mail Size	2048KB			О	
	Divide & Send E-mail	Yes (per max. size)			О	
	E-mail Informa- tion Language	British English			0	
	Job Reset Time in Adding Original	Off		0	0	0
	Original Settings	1 Sided Original		0	0	0
	Original Orientation Priority	NB.		0	О	О
	Mixed Original Sizes Priority	Off		О	О	0
	Switch to Batch	SADF		O	0	0
	File Type Priority	Multi- page: TIFF			0	
	Print & Delete Scanner Journal	Delete All after Printing		О	О	
	Select Title	Title 1		О	О	
Subject Settir ⇒ p.29	ngs	Not Programmed		0)	

❖ E-mail settings

Make settings for sending e-mail using the client computer's Web browser. For information about these settings, see p.31 "Making E-mail Settings".

Se	ettings	Default	TWAIN	Delivery	E-mail	Store
TCP/IP	DNS Server 1	0.0.0.0			О	
SMTP	SMTP Server Name	(Empty)			☆	
	SMTP Port No.	25			О	

^{*1} Settings for the network TWAIN scanner function
*2 Settings for the network delivery scanner function

^{*3} Settings for e-mail

^{*4} Settings for the Document Server

Setting Basic Settings

Various Basic Settings(resolution, scan size, scan type, image density) can be set. When using the same type of original repeatedly, storing the optimum settings in advance makes them easy to select whenever you deliver or store scan data.

Note

- ☐ Ten sets of settings named "Initial Setup" and "Program 1" to "Program 9" can be stored for quick recall. The settings stored as Initial Setup are the scanning defaults. If the basic settings are not selected during delivery, the originals are scanned with the basic settings stored in the Initial Setup.
- ☐ "Program 1" to "Program 9" can be changed to names of up to 20 characters.

The Basic Settings consist of the following items:

Scan Type

Select the scan type suitable for the original from the following:

- Text (Print)
 For standard originals containing mainly text (Print)
- Text (OCR)
 For standard originals containing mainly text (for OCR)
- Text/ Photo
 For original containing a mix-ture of text and photographs
- Photo
 For original containing photographs and other pictures (2-value)
- Gray Scale
 For original containing photographs and other pictures (multi-value)

Note

- ☐ Printer printing is best scanned with Text (Print). Text (OCR) is suitable for higher OCR accuracy.
- ☐ An image is scanned in black & white with Photo, and in gray-scale with Gray Scale. As a general rule, scanning for the purpose of printing is best done with Photo and scanning for viewing on the computer screen with Gray Scale.

Resolution

Select the resolution from 100 dpi, 200 dpi, 300 dpi, 400 dpi, or 600 dpi.

Image Density

Select the image density in seven steps from light(1) to dark(7) or use Auto Image Density.Lighter(1) to "Darker" (7).

Scan Size

Select the size of the original to be scanned.

- When Auto Detect is selected, the auto detect function of the machine is used to set the original size.
- When the size is specified, scanning is performed for that size, regardless of the actual size of the original. The following sizes can be selected:


A3①, A4①, A4②, A5①, A5②, 11 x 17②, 8¹/₂ x 14②, 8¹/₂ x 13②, 8¹/₂ x 11①, 8¹/₂ x 11②, 5¹/₂ x 8¹/₂①, 5¹/₂x8¹/₂②, B4 JIS②, B5 JIS②, B5 JIS②, Custom Size

Note

☐ When **[Custom size]** is selected, the dimensions of the scan area (width and height) can be specified.


Setting Procedure

1 Press the [User Tools/Counter] key.

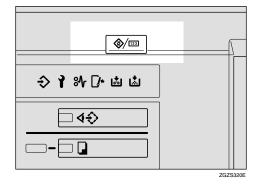

The User Tools/Counter/Inquiry screen appears.

2 Press [Scanner Features].

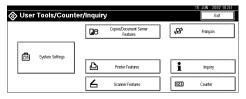

The Scanner Features screen appears.

- Make sure that the [Basic Settings] tab is shown.
- 4 Check that [Program/Change] is selected, and then select the basic setting you want to program.



The screen for entering a scan setting name appears.

Enter the name, and then press [OK].



For information about entering characters, see the General Settings Guide.

The screen for the basic settings appears.

6 Select the item to be set.

To select an item, touch its key on the screen. The item is highlighted. Example: resolution setting



Example: image density setting



- Ø Note
- ☐ When selecting [Custom size] for [Scan Size], see p.23 "Selecting a custom size".
- When all settings have been made, press [OK].

The basic setting is stored.

To program other basic settings, repeat the procedure from step 4.

When all settings have been made, press [Exit].



The User Tools/Counter/Inquiry screen reappears.


Press [Exit].

The main menu reappears.

Selecting a custom size


When selecting **[Custom size]** as the scan size, follow the procedure below.

Press [Custom size] on the Scan Size setting screen.

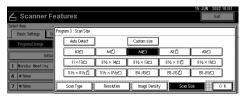


2 Enter the original size with the number keys.

Select and enter values for **[X1]** and **[Y1]**.

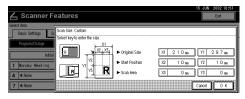


Enter the scan starting point in relation to the standard scan starting point.

Select and enter values for [X2] and [Y2].

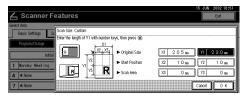


Enter the scan size (area) with the number keys.

Select and enter values for **[X3]** and **[Y3]**.

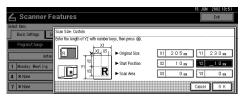

Depending on how the original is positioned, the scan area will be as shown:

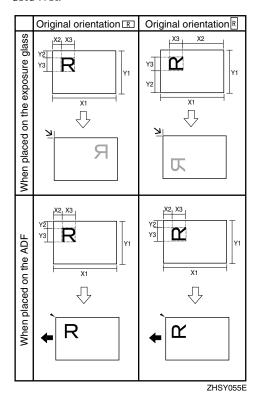

The range of possible original sizes and scan sizes is as follows:


• Original Size

X1:140mm - 432mm (5.6"-17.0")


Y1:140mm - 297mm (5.6"-11.7")

• Scan Size

X3: 10mm - 432mm (0.4"-17.0") Y3: 10mm - 297mm (0.4"-11.7") When all dimensions are entered, press [OK].

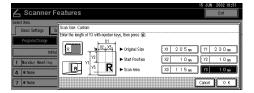

Make sure that the area specified in step 4 (X3 and Y3) is shown next to the [Custom size] field, and then press [OK].

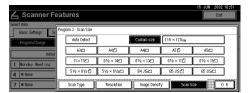

7 Press [Exit].


The User Tools/Counter/Inquiry screen reappears.

8 Press [Exit].

The main menu reappears.


Deleting programmed scan settings

1 Press the [User Tools/Counter] key.

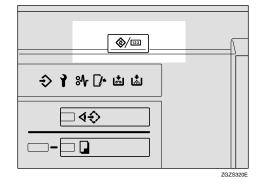

The User Tools/Counter/Inquiry screen appears.

2 Press [Scanner Features].

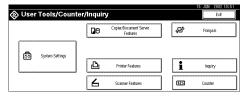

The Scanner Features screen appears.

- Make sure that the [Basic Settings] tab is displayed.
- 4 Press [Delete].
- **5** Select the setting you want to delete.



A confirmation message appears.

6 Press [Yes].



The selected scan setting is deleted.

7 Press [Exit].

The User Tools/Counter/Inquiry screen reappears.

8 Press [Exit].

Making Scanner Settings

This section explains how to switch from network TWAIN scanner function to network delivery scanner or Document Server, and how to set the compression of image data and initial values for setting originals.

The scanner settings consist of the following. For the list about settings and defaults, see p.19 "Scanner settings".

Send/Store Connection Timeout

When using the machine as a network delivery scanner or Document Server, a scanning request to the machine as a TWAIN scanner will switch the machine to the network TWAIN scanner function. This setting determines the delay until the machine switches to network TWAIN scanner function.

- Selecting [Immediate] causes the network TWAIN scanner function to be activated at once.
- When you select [Set Time], you can enter the delay time with the number keys (3 - 30 seconds). When the TWAIN scanner function is activated, only the time specified here passes from the last key operation.

Compression (Black & White)

This setting determines whether image data read with the blackand-white setting is to be compressed. Compression reduces the time required for transferring the scan data to the computer.

Ø Note

☐ The actual time required for data transfer will vary depending on the data size and network load.

Compression (Gray Scale)

This setting determines to what extent image data read with the gray-scale setting is to be compressed. You can select [Standard], [High], [Low], or [Off].

Note

- ☐ The compression ratio decreases in the order [High], [Standard], [Low], and [Off], and the time required for data transfer increases accordingly.
- ☐ The actual time required for data transfer will vary depending on the data size and network load.

Destination List Priority

Select a destination list to be displayed when the machine is in the initial state. Select either [Delivery Server] or [E-mail].

Update Delivery Scanner Destination List

To update the Delivery Server Destination List, press [Update Delivery Server Destination List].

Ordinarily, the Delivery Server Destination List is automatically updated. This function allows updating at any time.

Sender's Name Default

Select whether an administrator is registered as a sender or a sender is specified each time an e-mail is sent.

- Select **[No]** when a sender is to be specified each time.
- Select **[Yes]** when a manager is to be the sender.

#Important

☐ It is recommended that a password be set to prevent the sender's name from being misused.

Max. E-mail Size

Select whether the size of an image attached to an e-mail is limited or not.

When **[On]** is selected, enter the size limit (64 to 102400KB) using the number keys.

Note

☐ When the SMTP limits the size, match that setting.

Divide & Send E-mail

This function is effective only when [per max. size] is selected with [Yes].

Select whether or not an image exceeding the size set in Max. E-mail Size should be divided and sent using more than one e-mail.

Select either [No], [Yes (per page)], or [Yes (per max. size)].

Note

- ☐ When [Multi-page: TIFF] or [Multi-page: PDF] is selected for File Type Priority, the image will not be divided even if [Yes (per page)] is selected.
- ☐ When [Yes (per max. size)] is selected, some received files may not be able to be restored, depending on the type of e-mail software.
- ☐ When **[No]** is selected, the e-mail is not sent if its size exceeds the limit, and an error message appears. The scanned data is lost.
- ☐ Set the Max. E-mail Size within the capacity of the SMTP server.

E-mail Information Language

Select a language for E-mail Information Language with which Title, Document name, Sender's name and others are sent.

Select one of the following 18 languages:

British English, American English, German, French, Italian, Spanish, Dutch, Portuguese, Polish, Czech, Swedish, Finnish, Hungarian, Norwegian, Danish, Japanese, Simplified Chinese, and Traditional Chinese.

∅ Note

☐ The e-mail text is a template and cannot be changed.

Job Reset Time in Adding Original

Select whether or not to set a waiting time for inserting another original after all originals in the ADF or on the exposure glass have been scanned.

- If **[Off]** is selected, the countdown does not occur and the machine enters the waiting state when all originals in the ADF or on the exposure glass have been scanned until another original is inserted or the **[#]** key is pressed.
- If **[On]** is selected, enter the number of seconds (3 900) for the Job Reset Time in Adding Original with the number keys. When the original is placed within this time, it is scanned as one document.

Original Setting

Set the initial value for original type and orientation. When the original is always similar, selecting this as the default makes operation easier. You can select "1 Sided Original", "2 Sided Orig.: T to T" (Top to Top), and "2 Sided Orig.: T to B" (Top to Bottom).

₽ Reference

p.47 "Original Orientation and Scan Area"

Original Orientation Priority

Select the initial value for original placement orientation. When the original is always positioned in the same way, selecting this as the default makes operation easier.

p.47 "Original Orientation and Scan Area"

Mixed Original Sizes Priority

This setting determines whether the original size is to be automatically detected when originals of different sizes are inserted in the ADF. You can select **[On]** or **[Off]**.

𝚱 Note

- ☐ If the original size is specified when scanning, this setting is ignored.
- ☐ When **[Off]** is selected and the originals of different sizes are placed in the ADF, the size of the first page is detected as the max. size and the whole originals are scanned accordingly to the end.

Switch to Batch

When placing additional originals in the ADF, select whether to add sheets individually or to add batches.

Note

- ☐ When [SADF] is selected, it is not necessary to press the [Start] key after adding more originals.
- ☐ Even if [On] is selected for [Job Reset Time in Adding Original], the countdown to scan another original stops when scanning conditions are changed, the exposure glass is used to scan, or the mode of the machine is switched to another mode such as copier mode. Press the [Start] key to restart scanning.

❖ File Type Priority

Select whether data of scanned originals is delivered in a single page or multiple pages.

When delivered in multiple pages, select either TIFF or PDF.

Note

☐ When data stored in a JPEG format is specified as TIFF for multiple pages, it is automatically changed to a PDF format.

Print & Delete Scanner Journal

Select whether the Scanner Journal is automatically printed or not when the number of delivered emails reaches 50.

Ø Note


- ☐ When printed, all records are deleted after printing. When not printed, records are automatically deleted in succession from the oldest record.
- ☐ While records are being printed, e-mail sending is in a **[Waiting]** state.

Select Title

Select a title with destinations including destinations of e-mail. The selected title is displayed on the screen as an at-a-glance chart of destinations, which allows easy retrieval. Select either [Title 1](for 10 classifications), [Title 2](for 10 classifications), or [Title 3](for 5 classifications).


Setting procedure

1 Press the [User Tools/Counter] key.

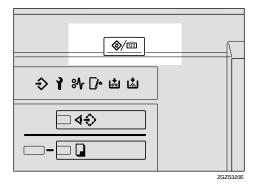

The User Tools/Counter/Inquiry screen appears.

2 Press [Scanner Features].

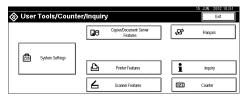

The Scanner Features screen appears.

Press the [Scanner Settings] tab.

4 Press the item to be set.



The screen for changing the item setting appears.

5 Change the setting.

Example: Send/ Store Connection Timeout setting



- To select an item, touch its key on the screen. The item is highlighted.
- To enter numbers, use the number keys.
- **𝚱** Note
- ☐ To cancel a setting, press [Cancel]. The value is not changed and the screen returns to the previous condition before pressing [OK].
- 6 Press [OK].
- **7** Repeat steps **4** to **6** to make other settings.
- 8 Press [Exit].

The User Tools/Counter/Inquiry screen reappears.

9 Press [Exit].

Making Scan Data Subject Settings


Subject information can be added to the scan data files. This information is added to the data to be delivered. When the file is sent by e-mail with the optional ScanRouter V2 Professional, the subject is automatically entered as the title in the subject of the e-mail. If you often send files with similar content, storing subject names will allow you to easily select a subject for delivery.

The subject can be up to 20 characters long. Up to 12 subjects can be stored.

Setting procedure


This section describes the steps for making subject settings.

1 Press the [User Tools/Counter] key.

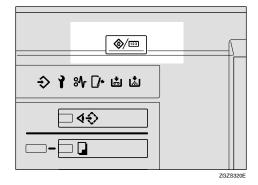

The User Tools/Counter/Inquiry screen appears.

2 Press [Scanner Features].

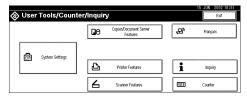

The Scanner Features screen appears.

- Press the [Subject Settings] tab.
- 4 Check that [Program/Change] is selected, and then select the subject you want to program.



5 Enter the subject string.



For information about how to enter characters, see the System Settings manual.


- Note
- ☐ If an item is selected for which a subject is already programmed, the subject can be changed.
- 6 Press [OK].
- To program more subjects, repeat steps 4 to 6.
- 8 Press [Exit].

The User Tools/Counter/Inquiry screen reappears.

9 Press [Exit].


Deleting programmed subject settings

1 Press the [User Tools/Counter] key.

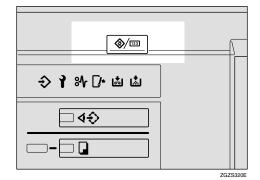

The User Tools/Counter/Inquiry screen appears.

2 Press [Scanner Features].

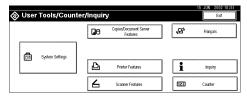

The Scanner Features screen appears.

- Press the [Subject Settings] tab.
- 4 Press [Delete].



5 Select the subject you want to delete.



A confirmation message appears.

6 Press [Yes].

The selected subject is deleted.



- To delete more subjects, repeat steps 5 to 6.
- 8 Press [Exit].

The User Tools/Counter/Inquiry screen reappears.

9 Press [Exit].

Making E-mail Settings

This section explains how to set all required items for sending e-mail from a client computer's browser.

Consult with your network manager about making settings for necessary items.

The password is set to "password" before shipment from the factory.

It is recommended that the password be changed for actual operation.

DNS Server 1, DNS Server 2, and DNS Server 3

Enter the DNS server's IP address used in the network.

When more than one DNS server is installed, enter the IP address for each DNS server.

❖ SMTP Server Name

Enter the SMTP server name or an IP address to be used for sending e-mail.

♦ SMTP Port Number

Enter the port number to be used when connected for SMTP sending.

Setting Procedure

- 1 Start a Web browser.
- 2 Enter "http://(IP address of this machine)" in the address bar of the Web browser.

The status of connected equipment is shown in the Web browser.

3 Click [Configuration].

A dialog box for entering a user name and password appears.

Enter the password, and then press [OK].

The factory setting for the user name is blank, and the factory setting for the password is "password".

The items to be set are shown.

- **5** Register the IP address of the DNS server.
 - 1 Click [TCP/IP].

The screen for the TCP/IP setting appears.

2 Enter the IP address of the DNS server in [DNS Server 1].

Enter an IP address in DNS Server 2 and Server 3, if necessary.

3 Scroll down the browser, and click [Apply].

The IP address is registered.

- **6** Register the SMTP server name and SMTP port number.
 - Click [SMTP].

The screen for the SMTP setting appears.

- 2 Enter the host name of the SMTP server in [SMTP Server Name].
- **3** Enter the port number in [SMTP Port No.].
- Scroll down the browser, and click [Apply].

The SMTP server name and port number are registered.

Verification of Settings

- **1** Start a Web browser.
- 2 Enter "http://(IP address of this machine)" in the address bar of the Web browser.

The status of connected equipment is shown in the Web browser.

Click [Config. Reference].

The items that can be checked are shown.

- **4** Check the IP address of the DNS server.
 - ① Click [TCP/IP].

The setting reference screen for TCP/IP appears.

- Check the SMTP server name and SMTP port number.
 - Click [SMTP].

The setting reference screen for SMTP appears.

Installing Software

The machine comes with two CD-ROMs containing various software.

The CD-ROM labeled "Scanner Driver & Document Management Utilities" contains the necessary software to use the machine as a network scanner. The CD-ROM labeled "Printer Driver & Utilities" contains the necessary software to use the machine as a printer.

This section explains the software contained on the "Scanner Driver & Document Management Utilities" CD-ROM.

For information about the software contained on the "Printer Driver & Utilities" CD-ROM, see the Printer Reference manual.

Auto Run Program

When the CD-ROM is inserted into a computer in Windows 95/98/Me, Windows XP, Windows 2000, or Windows NT 4.0, the installer starts automatically (Auto Run) to install the TWAIN driver and various software.


- ☐ Auto Run might not automatically work with certain operating system settings. In this case, launch "Set up.exe" located on the CD-ROM root directory.
- ☐ If you want to install without using Auto Run, hold down the **Shift** key while inserting the CD-ROM. Keep the **Shift** key held down until the computer has finished accessing the CD-ROM.
- ☐ If **[Cancel]** is pressed during installation, the installation will be stopped and the remaining scanner driver and utilities will not be installed. If **[Cancel]** has been pressed, reinstall the remaining scanner driver and utilities after restarting the computer.

Limitation

☐ If your operating system is Windows 2000, Windows XP or Windows NT 4.0, log on using an account that has administrators permission.

The installing sequence using Auto Run is as follows:

Installation Sequence

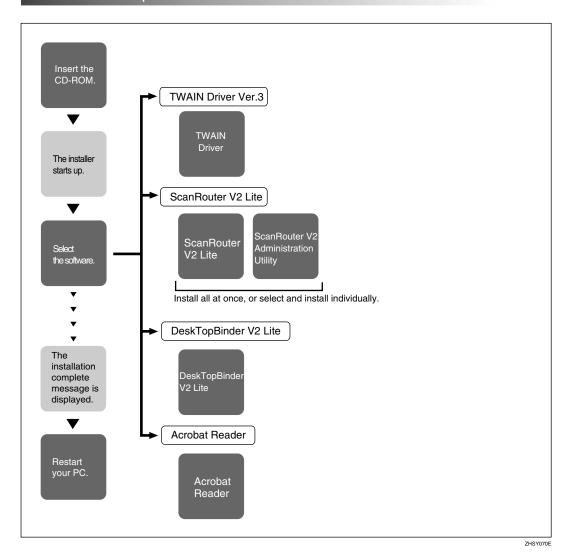

For information about the outline of the software that can be installed by Auto Run, see p.37 "Software Supplied on CD-ROM".

Software for Using a Network TWAIN Scanner

To use the machine as a network TWAIN scanner, it is essential to install the TWAIN driver.

If you do not have applications that work with TWAIN, it is necessary to also install DeskTopBinder V2 Lite. For information about the installation of DeskTopBinder V2 Lite, see p.37 "DeskTopBinder V2 Lite".

Preparation

Before installing, check the operating environment for the TWAIN driver. See p.38 "Type1075 TWAIN Driver".

Using Windows 95/98/Me, Windows XP, Windows 2000, or Windows NT 4.0

Install the TWAIN driver using Auto Run.

1 Start Windows, and then iInsert the supplied CD-ROM labeled "Scanner Driver & Document Management Utilities" into the CD-ROM drive of the computer.

The choose setup language screen appears.

If the installer does not start automatically, see p.33 "Auto Run Program".

2 Select a setup language, and then click [OK].

The CD-ROM Launcher screen appears.

Click [Type1075 TWAIN Driver].

The software setup screen appears.

4 The installer of the TWAIN driver starts. Follow the instructions on the screen.

Note

- ☐ When the installation is complete, a message to prompt you to restart the computer may appear. In this case, restart the computer, and continue the operation.
- ☐ After the installation is complete, the "Type1075 TWAIN V3" folder is created in the "Program" folder of the Start menu. Help can be displayed from here. Notes on using the network TWAIN scanner are provided in "Readme.txt". Be sure to read them before use.

Software for Using the Network Delivery Scanner Function

To use the machine as a network delivery scanner, it is essential to install Scan-Router V2 Lite on the delivery server. To check an in-tray or auto-receive documents, it is necessary to install DeskTopBinder V2 Lite on the client computer.

Use Auto Run for installation.

Preparation

Before installing, check the operating environment for the software. See p.37 "Software Supplied on CD-ROM".

1 Start Windows, and then insert the supplied CD-ROM labeled "Scanner Driver & Document Management Utilities" into the CD-ROM drive of the computer.

The choose setup language screen appears.

2 Select a setup language, and then click [OK].

The CD-ROM Launcher screen appears.

- Click the key of the software to be installed.
 - The ScanRouter V2 Lite installer starts by clicking [ScanRouter V2 Lite].
 - The DeskTopBinder V2 Lite installer starts by clicking [DeskTopBinder V2 Lite].

The change the language screen appears.

For information about the subsequent installation procedure, see the Setup Guide that can be displayed from the Setup screen of the respective software.

A Select a language used by this component, and then click [OK].

The software setup screen appears.

DeskTopBinder V2 Lite

Use Auto Run for installation.

Preparation

Before installing, check the operating environment for DeskTopBinder V2 Lite. See p.39 "DeskTopBinder V2 Lite".

1 Start Windows, and then insert the supplied CD-ROM labeled "Scanner Driver & Document Management Utilities" into the CD-ROM drive of the computer.

The choose setup language screen appears.

2 Select a language, and then click [OK].

The CD-ROM Launcher screen appears.

Click [DeskTopBinder V2 Lite].

The change the language screen appears.

₽ Reference

For information about the subsequent installation procedure, see the Setup Guide that can be displayed from the Setup screen of DeskTopBinder V2 Lite.

A Select a language, and then click [OK].

The software setup screen appears.

Software Supplied on CD-ROM

List of Files

ଛ CD- ROM Drive	ŊWizard for the TWAIN driver and utilities				
	Drivers	□Twain	TWAIN driver for Windows 95/98/Me, Windows XP, Windows 2000, Windows NT 4.0		
	□Utility	□RouterV2	ScanRouter V2 Lite, ScanRouter V2 Administration Utility		
		□DeskV2	☐DeskTopBinder V2 Lite		
		□Acroread	Acrobat Reader		

Type1075 TWAIN Driver

This driver is required to scan an original on the machine.

To use the machine as a network TWAIN scanner, the driver must be installed.

❖ File storage folder

Files on the CD-ROM are contained in the following folder.

\DRIVERS\TWAIN

System requirements

• Hardware PC/AT compatible

Limitation

- ☐ Under Windows NT, machines with RISC-based processors (MIPS R series, Alpha AXP, and PowerPC) are not compatible.
- CPU

Pentium or faster (Pentium 150MHz or faster recommended)

Operating system

Microsoft Windows 95

Microsoft Windows 98

Microsoft Windows Millennium Edition

Microsoft Windows XP Professional

Microsoft Windows XP Home Edition

Microsoft Windows 2000 Server

Microsoft Windows 2000 Professional

Microsoft Windows NT Server 4.0 (Service Pack 5 or later)

Microsoft Windows NT Workstation 4.0 (Service Pack 5 or later)

Memory

OS min. Operation Memory + 8 MB (64 MB or more recommended)

- Hard disk space 100 MB or more
- Display resolution 800 × 600 pixels, 256 colours or higher
- Network protocol TCP/IP

DeskTopBinder V2 Lite

DeskTopBinder V2 Lite is to be installed on the client computers for integration and management of various kinds of data such as scanned image data, files created with applications, and existing image files. The software allows you to use view documents in in-trays of the delivery server. This software can be used to the machine as a network TWAIN scanner. Also, the documents stored in the Document Server can be viewed.

For more information, see the manuals for DeskTopBinder V2 Lite or DeskTopBinder V2 Lite Help.

File storage folder

The files are stored in the following folder on the CD-ROM provided with this machine.

\UTILITY\DESKV2

System requirements

- Hardware PC/AT compatible
- CPU

Pentium 133 MHz or faster (Pentium II 266 MHz or faster recommended)

Operating system

Microsoft Windows 95 (OSR 2 or later)

Microsoft Windows 98

Microsoft Windows Millennium Edition

Microsoft Windows XP Professional

Microsoft Windows XP Home Edition

Microsoft Windows 2000 Server (Service Pack 1 or later)

Microsoft Windows 2000 Professional (Service Pack 1 or later)

Microsoft Windows NT Server 4.0 (Service Pack 5 or later)

Microsoft Windows NT Workstation 4.0 (Service Pack 5 or later)

Memory

48 MB or more (128 or more recommended)

- Hard disk space
 - 50 MB or more (200 MB or more recommended)
- Display resolution 800 × 600 pixels, 64K colours or higher
- Network protocol TCP/IP

Software installed with DeskTopBinder V2 Lite

Auto Document Link

Auto Document Link on the client computer monitors in-trays of the delivery server regularly. In addition, the documents delivered to in-trays are auto-received or a notification of document arrival can be received at the client computer with this software.

ScanRouter V2 Lite

ScanRouter V2 Lite is to be installed on the delivery server. The data scanned by the machine can be sorted in the delivery server, stored in specified in-trays, or saved in folders of client computers on the same network.

For more information, see the manuals for ScanRouter V2 Lite or the ScanRouter V2 Lite Help.

File storage folder

The files are stored in the following folder on the CD-ROM provided with this machine.

\UTILITY\ROUTERV2

System requirements

The following system requirements must be met to use ScanRouter V2 Lite:

Limitation

☐ If you install this software in OS in which a client server, such as Windows NT Workstation and Windows 2000 Professional, cannot be permitted to use in a network, you may violate the license agreement of Microsoft Corporation.

Note

- ☐ Install the software on a stand-alone server running Windows NT Server or Windows 2000 Server. It must not be installed on the primary domain controller or backup domain controller.
- Hardware PC/AT compatible
- CPU

Pentium 200 MHz or faster (Pentium II 350 MHz or faster recommended)

Operating system

Microsoft Windows 95 (OSR 2 or later)

Microsoft Windows 98

Microsoft Windows Millennium Edition

Microsoft Windows XP Professional

Microsoft Windows XP Home Edition

Microsoft Windows 2000 Server (Service Pack 1 or later)

Microsoft Windows 2000 Professional (Service Pack 1 or later)

Microsoft Windows NT Server 4.0 (Service Pack 5 or later)

Microsoft Windows NT Workstation 4.0 (Service Pack 5 or later)

- Memory
 64 MB or more (128 MB or more recommended)
- Hard disk space Minimum free space required for installing: 200 MB

𝚱 Note

- ☐ In addition to the space required for installation, the hard disk should have at least 500 MB of free space for files.
- Network protocol TCP/IP

Software installed with ScanRouter V2 Lite

ScanRouter V2 Administration Utility
 ScanRouter V2 Administration Utility manages the delivery system run by
 ScanRouter V2 Lite.

You can register destination and sender information for the scanned documents in the delivery server. In addition, this utility can monitor free disk space, record error logs, and maintain the delivery server.



☐ ScanRouter V2 Administration Utility can be installed not only on the delivery server but also on client computers. To install it, click [Scan-Router V2 Administration Utility] on the ScanRouter V2 Lite Setup screen.

3. Setting Originals

This chapter explains the procedure for placing originals on the exposure glass and in the ADF, and setting the original scan area and orientation according to the placement method.

To correctly display the top/bottom orientation of the scanned original on a computer, the correct placement must be chosen by setup on the control panel and scanner driver.

There are two orientations for placing the original. See the table below.

Note

□ Normally, the original size is 🗈 or 🗈, but in the table below, a square original is used to make the original orientation easy to understand. If the actual original size changes, a combination of original orientation and the orientation specified on the control panel or scanner driver does not change.

Scanned original		R			
Select the placement method.		Place the original on the exposure glass.		Place the original in the ADF.	
Place the original. (There are two original orientations.)		Place the original so that the top edge touches the top left of the exposure glass.	Place the original so that the top edge touches the rear of the exposure glass.	Place the top edge of the original first.	Place the original so that the top edge is set into the ADF.
Specify the orientation.	When scanned by the delivery scanner, e-mail or Document Server (Specified on the con- trol panel)	Original Orientation RR @ == Mixed Size	Original Orientation RR ==================================	Original Orientation RR 🖃 🗷	Original Orientation
	When scanned by the TWAIN scanner (Specified in the Scanner Control dialog box)	◆ 5	≠ রিজ	◆ @©	◆ Ræ
Original displayed on a computer *1		R			

^{*1} When sending a grayscale image file in the TIFF (single or multi-page) or JPEG format, the image may not appear in the same orientation as it was scanned in.

Placing Originals on the Exposure Glass

Originals which do not fit into the ADF, such as sheets with glued-on parts, books, etc., can be placed directly on the exposure glass for scanning.

𝚱 Note


- ☐ For information about the originals which can be placed on the exposure glass, see the Copy Reference manual.
- **1** Lift the exposure glass cover or the ADF.

Note

- ☐ Raise the exposure glass cover or ADF fully (more than 30 degrees). The opening/closing action triggers the automatic original size detection process.
- Place the original on the exposure glass with the side to be scanned facing down. Align the far left edge of the original with the mark.


There are two original orientations. Either orientation can be used for placement.

• Place the original so that the top edge touches the rear of the exposure glass.

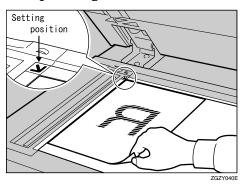

2 Place the original so that the top edge touches the top left of the exposure glass.

When using the machine as a network TWAIN scanner, this orientation is the standard setting in the TWAIN driver. Normally, use this orientation for placing documents.

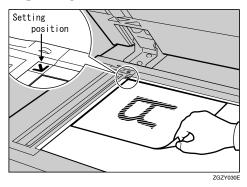

- Close the exposure glass cover or the ADF.
- **4** Select the original orientation according to the setting orientation.

p.47 "Original Orientation and Scan Area"

Placing Originals in the Auto Document Feeder (ADF)

The ADF allows you to insert several originals at one time. Originals placed in the ADF can be scanned on one side or both sides.

Originals that can and cannot be placed in the ADF

For information about the originals that can and cannot be placed in the ADF, see the Copy Reference manual.

Attempting to use unsuitable originals in the ADF can lead to a misfeed and damage to the originals. Place such originals directly on the exposure glass.


∰Important

- ☐ For information about which original sizes can be detected automatically and notes on placing originals in the ADF, see the Copy Reference manual.
- **1** Align the original guide with the original size.
- 2 Insert the originals with the side to be scanned facing up. (For originals which are to be scanned on both sides, the first side should face up.)

There are two orientations. Either orientation can be used for placement.


Note

☐ When using the network delivery scanner, Document Server, or the network TWAIN scanner function, originals with different sizes can be placed at the same time. Place the originals as shown in the figure below.

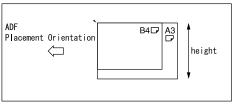


ZGZY080

- ☐ Originals are scanned in the inserted order, starting with the topmost page.
- 1 Place originals so that the top edges are in the ADF tray.

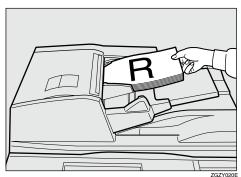

2 Place the top edges of the original first.

When using the machine as a network TWAIN scanner, this orientation is the standard setting for the TWAIN driver. Normally, use this orientation for placement.

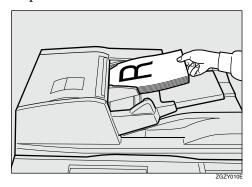

Select the appropriate orientation so that it matches the orientation of originals placed.

p.47 "Original Orientation and Scan Area"

Dividing Originals and Placing Them in the Auto Document Feeder (ADF)

When originals are placed in the ADF, scanning finishes as one document when the scan of all originals is completed by default.

If the auto-reset time is set in [Job Reset Time in Adding Original], it is possible to scan a large number of originals as a single document by dividing the originals into several parts, scanning one part, and then placing the next part within a certain amount of time and so on.

p.26 "Job Reset Time in Adding Original"

After the originals are scanned, the remaining time for accepting the next original is displayed.



When there are other originals to scan, set them within the specified time. If set, the originals are fed and scanned automatically. If there are no more originals, press the [#] key.

Ø Note

- ☐ Originals are scanned in order. Place them from the first page.
- ☐ Press the **[Start]** key to restart when a countdown is stopped.

Original Orientation and Scan Area

To correctly display the top/bottom orientation of the scanned original on a computer, original orientation and page flow must be set when placing the original.

When using the network delivery scanner and Document Server, settings are made on the control panel of the machine. When using the machine as a network TWAIN scanner, settings are made with the TWAIN driver.

Ø Note

☐ The difference of how the originals will be scanned depending on what settings are made is shown in the following table.

Auto Detect Non- Mixed Original Sizes	A whole batch of originals is scanned using the size of the first original.
Auto Detect Mixed Original Sizes	Auto detection is used to determine the size of each original.
Size Specification	When an original is smaller than the specified size, a margin is displayed.

For a Network Delivery Scanner and Document Server

1 On the scanner function screen, press [Original Settings].



2 Make settings for original orientation, one-sided/two-sided combination, and mixed original sizes.



Note

☐ The initial values can be changed under [Original Settings], [Original Orientation Priority], or [Mixed Original Sizes Priority] in the Scanner Initial Setup. See p.25 "Making Scanner Settings".

One-sided original/Two-sided original selection

- When scanning one-sided originals, make sure that [2 Sided Original] is not selected.
- When scanning two-sided originals, press [2 Sided Original] to select [T to T] or [T to B] according to the binding orientation of the original.

Top to top original:



Top to bottom original:



When the last side of a batch of two-sided originals is blank, select [1 Sided Original] to skip that side and finish scanning, or select [2 Sided Original] to scan that side as a blank page.

Note

 □ When scanning originals on the exposure glass with the [2 Sided Original] setting, set [1 Sided Original] for the last original.

Orientation selection

● Press the key for the same orientation as the actual orientation of the original ■ or ■.

Note

☐ When sending a grayscale image file in the TIFF (single or multiple page) or JPEG format, the image may not appear with the same orientation as it was scanned in.

Mixed size selection

■ When originals of different sizes are placed, make sure that [Mixed Size] is selected.

Note

- ☐ If [Mixed Size] is not set, the scan size is set as the maximum size detected. Blank space is inserted in smaller originals.
- Press [OK].

Note

☐ The current settings are displayed with characters and icons.



For a Network TWAIN Scanner

Open the Scanner Control dialog box.

p.52 "Scanning Originals"

- 2 Select the position from the [Place] list in the [Document] area.
- Select [♣❷型/♣₪] or [♣₧₨/♣₪] from the [Orientation:] list.
 - Reference p.43 "Setting Originals"
- When the originals are placed in the ADF, select [Simplex] or [Duplex] from the [Side:] list.

𝚱 Note


☐ If originals of different sizes are placed in the ADF, specify the document size in the [Size:] box. If [Auto Detect (Non-Mixed)] is selected, all originals are scanned as the size of the first page.

4. Scanning Originals Using the Network TWAIN Scanner Function

This chapter describes the operations for scanning originals with the network TWAIN scanner using DeskTopBinder V2 Lite. In addition, some functions of the TWAIN driver are introduced.

Flow of Operations

When using DeskTopBinder V2 Lite for scanning, the basic flow of operations is as follows:

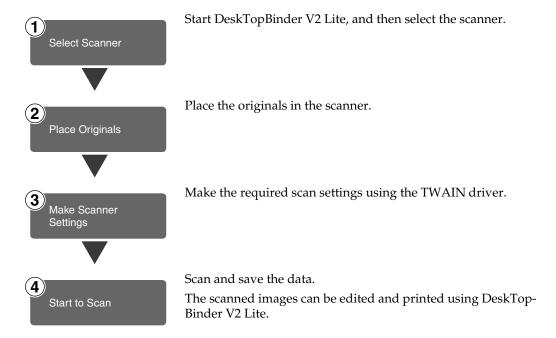

Scanning Originals

This section explains the method for scanning a single original following p.51 "Flow of Operations".

- **1** Start DeskTopBinder V2 Lite and select the driver of the scanner.
 - Click [Start], point to [Program], and then [DeskTopBinder V2] from [DeskTopBinder V2].

DeskTopBinder V2 Lite starts.

2 Click [Scanner Settings] on the [Tools] menu.

The [Scanner Settings] dialog box appears.

If the scanner is already selected, no scanner settings are necessary. Check the settings in the [File format for scanned image(s)] area, and then go to step 6.

3 Click [Select Scanner Driver].

The [Select Source] dialog box appears.

- **4** Select the name of the machine you want to use in the list, and then click [Select].
- 6 Click [OK].

The [Scanner Settings] dialog box closes.

2 Place the original in the scanner.

p.43 "Setting Originals"

- 3 Make the scan settings.
 - 1 On the [File] menu, point to [Add Document], and then click [Scan].

The TWAIN driver starts.

After a short while, the dialog box of the TWAIN driver that operates the scanner appears. This dialog box is called the Scanner Control dialog box.

𝚱 Note

- ☐ The title bar displays the scanner currently being used. When multiple machines are connected, make sure that the indicated machine is the machine to be used. If the intended machine is different, click **[Select Source]** to select the scanner again.
- ☐ If the machine to be used is not displayed in the list, make sure that the IP address is configured and that the machine is correctly connected to the network. If the driver is still not displayed in the list after the above operations, consult with your network administrator.

2 Depending on the type of original or the objective for scanning, select the icon in [Mode].

- **[Standard]** is suitable for scanning standard originals that are comprised of mainly text.
- **[Photo]** is suitable for scanning originals that include photos, shaded illustrations, etc.
- **[OCR]** is suitable for conversion processing with an OCR (Optical Character Reading) application after scanning the original.
- **[Filing]** is suitable for use with filing applications, etc.

Note

- ☐ For advanced settings, click **[Detail]** to display the Detail window. For information about the Detail window, see TWAIN Driver Help.
- 3 According to the original scan area and orientation, change the setting of the [Document] group.

p.47 "Original Orientation and Scan Area"

For information about the setting of the [Document] group, see Help.

When you want to configure the scanning area

When you do not configure the scanning area, the area scanned is the size specified in the [Size:] box.

• Click [Preview].

The original that was placed is scanned and the **[Preview]** dialog box appears. The scanning area in the preview is displayed within the broken lines.

2 Configure the scanning area by dragging a border or the top line.

When reconfiguring the area, click and drag one corner of the area towards its opposite corner.



☐ Depending on the scanning resolution, the area to be scanned may be subject to restrictions.

3 Click [Close].

The [Preview] dialog box closes.

☐ When the original placed in the ADF is previewed, place the original scanned during preview again.

4 Click [Scan].

The original is scanned. A message asking whether there is another original appears. When there is another original to scan, place the original, and then click **[Continue]**. When there are no more originals, click **[Complete]**.

- **5** Save the scanned image in DeskTopBinder V2 Lite.
 - ① On the [File] menu, click [Exit].

 The [Input Document Information] dialog box appears.
 - 2 Enter the file name, and then click [OK].

The image is stored in DeskTopBinder V2 Lite, and DeskTopBinder viewer closes.

Fediting and printing scanned data

With DeskTopBinder V2 Lite, it is possible to edit and print scanned data. For more information about how to edit and print, see DeskTopBinder V2 Lite Help.

Functions of the TWAIN Driver

The following is an introduction to the various functions of the TWAIN driver:

For more information about each function or other functions, see Help.

Automatic Tilt Correction

This function automatically corrects character strings that were scanned slanted.

Printing to the Image

This function allows you to imprint dates, page numbers, or your favorite characters on a scanned image. You can also change the fonts of the imprints as well as the numerical order of the scanned images to ascending or descending order.

Scanning Mode Registration

This function allows you to register other scanning configurations that are often used as scanning modes besides the already pre-installed ones. After registration, you can quickly scan with these scanning configurations.


Delivering Stored Scan Data Using the Network Delivery Scanner Function

Stored scan data can be sent to a specified destination using the network delivery scanner function. This chapter explains the various display screens, delivery procedures, and how to check the delivery result when this function is used.

☐ A delivery server in which ScanRouter V2 Lite/Professional is installed is necessary to use the network delivery server function. Information about delivery destinations and senders must be registered first into the delivery server. Also, program a connected device in [Set I/O Device] of ScanRouter V2 Administration Utility. For more information, see ScanRouter V2 Administration Utility Help.

List Displays of Destinations and Senders

The screen configuration when using the machine as a network delivery scanner is as shown.

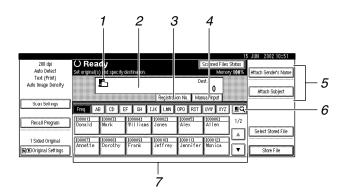

1. [₺] Network Delivery Scanner Icon

This icon shows that the screen for network delivery scanner is displayed.

2. Destination Display

The selected destination is shown here. If several destinations are selected, the destinations are displayed in the order they were selected by pressing [APrev.] or [VNext].

☐ Pressing the **[Check Modes]** key lets you check the selected destinations.

3. [Registration No.]

Press this to specify a destination using a five-digit short ID number.

4. [Manual Input]

When specifying a destination that is not listed, press [Manual Input], and then enter the destination with the soft keyboard that is displayed. For information about sending e-mail from the delivery server, see p.3 "Manuals for This Machine"

5. [Attach Sender's Name] [Attach Subject]

Set the sender and subject of the document to be delivered.

6. Switch Destination List/Search by User Name

Press this button to switch a destination from the delivery server list to the destination list of this machine or to search using the sender's name.

7. Destination List

Displays the list of destinations programmed in the delivery server.


Note

- □ When the entire list does not fit on one screen, [▲] or [▼] can be used to scroll the display.
- ☐ Group destinations are denoted by this symbol (***).
- ☐ A bar above a title indicates that a destination that belongs to it has been selected.

Delivery Procedure

Data is delivered after specifying scan settings and destination. If necessary, you can select a sender and a subject.

1 Press the [Scanner] key.

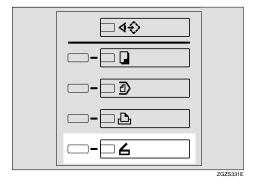

2 If user codes are set, enter a user code (consisting of up to eight characters) with the number keys, and then press the [#] key.

The scanner function screen appears.

₽ Reference

For information about the user code, see the General Settings Guide.

Ø Note

☐ If the network TWAIN scanner screen appears, press [Cancel].



Make sure that no previous settings remain.

𝚱 Note

☐ If a previous setting remains, press the [Clear Modes] key.

Place the original in the machine, and adjust the settings for original size and orientation if required.

Reference

p.43 "Setting Originals"

- If the e-mail screen appears, switch to the screen for network delivery scanner.
 - **1** Press [**1**].

The Search/Switch List screen appears.

2 Press [Switch Destination List].



The switch destination screen appears.

3 Press [Delivery Server].



4 Press [Exit].

The network delivery scanner screen appears.

p.25 "Making Scanner Settings".

6 Make the scan settings.

To make the scan settings, recall stored settings or make the settings individually.

p.21 "Setting Basic Settings"

Calling up stored scan settings

1 Press [Recall Program].

The Recall Program screen appears.

2 Select a user program of scan settings.



3 Press [OK].



The selected user program settings are applied.

Making the settings individually

• Press [Scan Settings].

The screen for making scan settings appears.

2 Select resolution, original size, and other items to change the corresponding setting.



Scan settings are made in the same way they are programmed. See p.21 "Setting Basic Settings".

3 Press [OK].

The scan settings are applied.

7 Select the destination.

Four methods are available for selecting a destination: selecting it from the list, specifying a short ID number, selecting it after searching for it, or directly typing the e-mail address.


Note

☐ When using ScanRouter V2 Professional, the destination list is updated automatically.

When selecting a destination from the list

• Press the title for the destination. The destinations for that title are displayed.

If the destination is not displayed, press $[\blacktriangle]$ or $[\blacktriangledown]$ to display the destination.

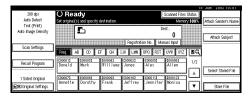

Note

- ☐ The destination titles are programmed in the delivery server.
- 2 Select the destination to which the scan data is to be delivered.



The selected destination is highlighted and also is displayed in the destination field at the top of the screen. A line is displayed over the title of the category to which the destination belongs.

Note

- □ To deselect a destination, press the destination once more, or press [▲Prev.] or [▼Next] to bring up the destination in the destination field, and then press [Clear].
- 3 To select more destinations, repeat step 2.

Using a short ID number to select a destination

- Press [Registration No.].
- 2 Use the number keys to enter the five-digit ID number that has been assigned to a destination.

If the entered number is less than five digits long, press the [#] key after the last number.

Example:

To enter 00009

Press the [9] key, and then the [#] key using the number keys.




The destination corresponding to the short ID number is displayed in the destination field at the top of the screen.

Note

- ☐ To deselect a destination, press [▲Prev.] or [▼Next] to display the destination in the destination field, and then press [Clear].
- 3 To select more destinations, repeat step 2.

Searching for a destination to select

1 Press [19].

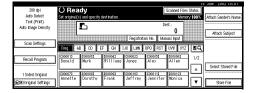

The Search/Switch List screen appears.


2 Press [Search].



3 Press [Search by User Name].

The soft keyboard is displayed for searching by user name.

- **𝚱** Note
- ☐ When using ScanRouter V2 Professional, it is possible to search by comments.
- 4 Enter part of the destination name.

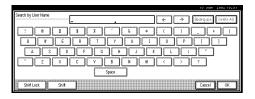

- Note
- ☐ Enter the first character or characters of the destination name.
- 6 Press [OK].

A list of destination names found is displayed.

6 Select a destination.



- **7** Press [Exit].
- Press [OK].

The destination name appears in the destination field at the top of the screen.

Manual input of a destination



- ☐ When using ScanRouter V2 Professional, it is possible to enter the destination e-mail address directly.
- Press [Manual Input].

The soft keyboard is displayed for entering a destination.

2 Enter the destination with the soft keyboard.



Note

- ☐ Enter the e-mail address of the destination when sending via the delivery server.
- ☐ It is possible to use letters, numbers, and periods. The symbols ()\,;:" cannot be used.

For more information about entering an e-mail address, see the General Settings Guide.

3 Press [OK].

The name of the destination appears in the destination display area on the upper side of the screen.

Note

- ☐ Press [▲Prev.] or [▼Next] to select the destination.
- ☐ Pressing the **[Check Modes]** key lets you check the selected destinations.
- 4 To enter more than one destination, repeat steps 1 to 3.

Checking selected destinations

• Use the destination field at the top of the screen to check which destinations are selected.

Note

- □ When multiple destinations are selected, the selected destinations are displayed in the order they were selected by pressing [APrev.] or [VNext].
- ☐ Pressing the **[Check Modes]** key on the control panel lets you check the list of selected destinations.

Specify the sender (scan data delivery source).

Note

☐ When a sender has been specified, this information is added to the scan data file. Select a sender from the senders programmed in the delivery server.

Three methods are available for selecting a sender: selecting the sender from the list, entering the five-digit short ID number of the sender with the number keys, and searching for the sender and selecting it.


When selecting a sender from the list

1 Press [Attach Sender's Name].



A list of senders registered in the delivery server is displayed.

2 Select the sender.

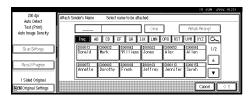


The selected sender and its short ID number are displayed.

𝚱 Note

☐ When using ScanRouter V2 Professional, [Return Receipt] is displayed when a sender is selected.

To check receipt, press [Return Receipt].

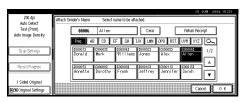


3 Press [OK].

The sender name is displayed above [Attach Sender's Name].

Using a short ID number to select a sender's name

• Press [Attach Sender's Name]

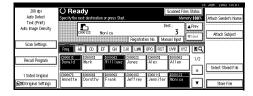


A list of senders registered in the delivery server is displayed.

2 Use the number keys to enter the five-digit ID number that has been assigned to a sender.

Example:

To enter 00006


Press the **[6]** key, and then the **[#]** key using the number keys.

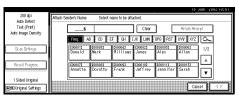



☐ When using ScanRouter V2 Professional, [Return Receipt] is displayed when a sender is selected.

To check receipt, press [Return Receipt].

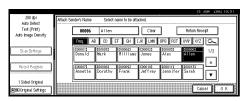

3 Press [OK].

The sender is displayed above [Attach Sender's Name].


Searching for a sender to select

1 Press [Attach Sender's Name].



A list of senders registered in the delivery server is displayed.

2 Press [<u>__</u>].

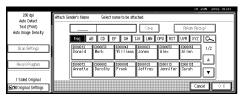

The Search by Sender's Name screen appears.

3 Press [Search by User Name].



The soft keyboard is displayed for searching for a sender.

4 Enter part of the sender name.





- ☐ Enter the first character or characters of the sender name.
- 6 Press [OK].

A list of senders is displayed.

- 6 Select a sender.
- Press [Exit].

8 Press [OK].

The sender is displayed above [Attach Sender's Name].

If required, select a subject.

Select a subject from the registered ones. p.29 "Making Scan Data Subject Settings"

Note

- ☐ When a subject has been specified, this information is added to the scan data file.
- ☐ When ScanRouter V2 Professional is used to send documents using e-mail, the subject is automatically entered as a title in the message subject.


Two methods are available for selecting a subject, selecting it from the list or entering it directly.

When selecting a subject from the list

• Press [Attach Subject].



2 Select a subject.

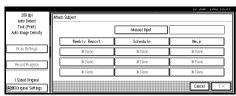

3 Press [OK].

The name of the subject is displayed above [Attach Subject].

Manual input of the subject

• Press [Attach Subject].

A list of registered subjects is displayed.



2 Press [Manual Input].

The soft keyboard is displayed for entering a subject.

3 Enter the subject using the soft keyboard.



4 Press [OK].

The name of the subject is displayed above [Attach Subject].

Press the [Start] key.

The original is scanned and delivered to the specified destination.

Set up the original, and then press the [Start] key.

𝒯 Note


- ☐ To interrupt scanning, press the **[Clear/Stop]** key or **[Stop]** in the displayed screen.
- ☐ To use the SADF function, set up the next original. See p.46 "Dividing Originals and Placing Them in the Auto Document Feeder (ADF)".

Checking the Status of Delivery

The status of the last 50 deliveries can be checked. For every new delivery record after 50, the oldest record is deleted.


Items to be checked

- Date/Time
 The time when the delivery request was received from this machine is displayed.
- Destination
 When multiple destinations
 were selected, the first selected
 destination is displayed.
- Sender
- File Name
- Status
 Information is registered whether the delivery has been properly completed, an error has occurred, or if the delivery is in waiting or has stopped.
- 1 Press [Scanned Files Status] on the network delivery scanner screen.

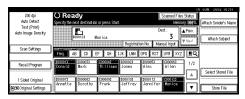

The delivery status is displayed.

2 Check the displayed records.

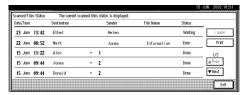

Note

- ☐ One screen shows the records for five delivery operations. Use [▲Prev.] or [▼Next] to scroll through the screen.
- ☐ When [Print & Delete Scanner Journal] is set to [Print], the whole journal is printed when the number of records reaches 50.
- ☐ When the status of a document is [Waiting], the delivery can be stopped by selecting that document, and then pressing [Cancel].

Press [Exit].

The display returns to the network delivery scanner screen.

Using the Network Delivery Scanner Function with the Document Server

You can use the network delivery scanner function with the Document Server.

Simultaneous Delivery and Storage

Scanned data is stored in the Document Server at the same time the data is delivered.

Note

- ☐ This section explains mainly the operation for simultaneous delivery and storage. For more information, see p.57 "Delivery Procedure".
- 1 Place the original and adjust the settings for original size and orientation if required.


Reference p.43 "Setting Originals"

- 2 Make the scan settings.
- **3** Select the destination.
- 4 If required, specify the sender (scan data delivery source) and a subject.
- **5** Press [Store File].



The screen for setting storage parameters for scanned data appears.

Make sure [Send & Store] is selected.

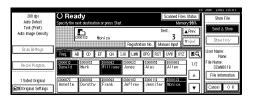

Press [File Information] to set file information.

For more information, see p.81 "Specifying file information".

- 8 Press [OK].
- 9 Press the [Start] key.

The original is scanned, and the file is delivered to the destination and stored in the Document Server.

Delivering Stored Files


Files stored in the Document Server can be delivered.

Ø Note

- ☐ This section explains mainly how to select files to be delivered. For more information about the delivery procedure, see p.57 "Delivery Procedure".
- ☐ When the stored files are delivered, scan settings cannot be made. The files are delivered with the scan settings specified when they were stored in the Document Server.
- **1** Display the list of stored files.

p.84 "Viewing a List of Stored Files"

2 Select a file to be delivered.

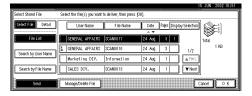

Note

☐ When you select a password protected file, the Password screen appears. After you have entered the correct password and pressed [OK], the file will be selected.

To select multiple files, repeat step 2.



Note

- ☐ You can select up to 30 files for one operation.
- ☐ If you select multiple files, the files will be delivered in the order they were selected.
- ☐ If you press [Display Selection], the selected files will be shown in the order of delivery.

Press [OK].

The screen for specifying a destination appears.

- **5** Specify a destination.
- If required, select the sender (scan data delivery source) and a subject.
- Press the [Start] key.


The selected stored files are delivered.

Sending Stored Scan Data by E-mail

Stored scan data can be sent to a specified destination using the e-mail. This chapter explains the various display screens, delivery procedures, and how to check the sending result when this function is used.

List Displays of Destinations and Senders

The screen configuration when using the machine for e-mail is as shown:

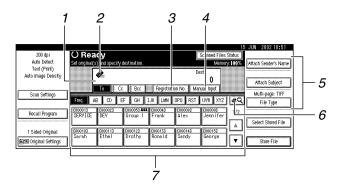

1. Destination Display

The selected destination is shown here. If several destinations are selected, the destinations are displayed in the order they were selected by pressing [APrev.] or [VNext].

Ø Note

☐ Pressing the **[Check Modes]** key lets you check the selected destinations.

2. [E-mail Icon

This icon shows that the screen for sending e-mail is displayed.

$oldsymbol{3}$. [Registration No.]

Press this to specify a destination using a five-digit short ID number.

4. [Manual Input]

When specifying a destination that is not listed, press [Manual Input], and then enter the destination with the soft keyboard.

5. [Attach Sender's Name] [Attach Subject] [File Type]

Set the sender and the subject of the document to be delivered.

If necessary, select the file type of the image file attached to the e-mail.

6. [III] Switch Destination List/Search by User Name

Press this button to switch a destination from the delivery server list to the destination list of this machine or to search using the user's name.

7. Destination List


Displays the list of destinations programmed in the delivery server or this machine.

- □ When the entire list does not fit on one screen, [▲] or [▼] can be used to scroll the display.
- ☐ Group destinations are denoted by this symbol (**211**).
- ☐ A bar above a title indicates that a destination that belongs to it has been selected.

Procedure for Sending E-mail

Data is sent after specifying scan settings and destination. If necessary, you can select a sender and a subject.

1 Press the [Scanner] key.

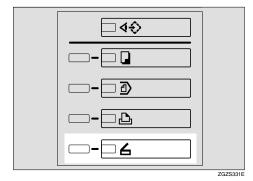

If user codes are set, enter a user code (consisting of up to eight characters) with the number keys, and then press the [#] key.

The scanner function screen appears.

For information about the user code, see the General Settings Guide.

𝚱 Note

☐ If the network TWAIN scanner screen appears, press [Cancel].



Make sure that no previous settings remain.

𝚱 Note

☐ If a previous setting remains, press the [Clear Modes] key.

Place the original in the machine, and then adjust the settings for original size and orientation if required.

p.43 "Setting Originals"

- If the network delivery scanner screen appears, switch to the screen for sending e-mail.
 - 1 Press [19].

The Search/Switch List screen appears.

2 Press [Switch Destination List].

The switch destination screen appears.



3 Press [E-mail].



4 Press [Exit].

The send e-mail screen appears.

p.25 "Making Scanner Settings"

6 Make the scan settings.

To make the scan settings, call up stored settings or make the settings individually.

p.21 "Setting Basic Settings"

Calling up stored scan settings

• Press [Recall Program].

The Recall Program screen appears.

2 Select a user program of scan settings.



3 Press [OK].



The selected user program settings are applied.

Making the settings individually

1 Press [Scan Settings].

The screen for making scan settings appears.

2 Select resolution, original size, and other items to change the corresponding setting.



Scan settings are made in the same way they are programmed. See p.21 "Setting Basic Settings".

3 Press [OK].

The scan settings are applied.

- **7** Select the file type if necessary.
 - Press [File Type].
 - 2 Select the file type of the file to be attached to the e-mail from the displayed types.



The selected file type appears under [File Type].

8 Select the destination.

Four methods are available for selecting a destination: selecting it from the list, by specifying a short ID number, by directly typing the e-mail address, or by searching it.

Ø Note

☐ Before selecting the destination, make sure to select [To]. When necessary, select [Cc] or [Bcc] and the respective destinations. It cannot specify more than 100 destinations including [To], [Cc] and [Bcc].

When selecting a destination from the list

• Press the title for the destination. The destinations for that title are displayed.

If the destination is not displayed, press $[\blacktriangle]$ or $[\blacktriangledown]$ to display the destination.



Note

- ☐ The destination titles are programmed in the delivery server.
- 2 Select the destination to which the scan data is to be sent.



The selected destination is highlighted and also is displayed in the destination field at the top of the screen. A line is displayed over the title of the category to which the destination belongs.

𝚱 Note

- □ To deselect a destination, press the destination once more, or press [▲Prev.] or [▼Next] to bring up the destination in the destination field, and then press [Clear].
- **3** To select more destinations, repeat step **2**.

Using a short ID number to select a destination

- Press [Registration No.].
- 2 Use the number keys to enter the five-digit ID number that has been assigned to a destination.

If the entered number is less than five digits long, press the **[#]** key after the last number.

Example:

To enter 00003

Press the (3) key, and then the (#) key using the number keys.



The destination corresponding to the short ID number is displayed in the destination field at the top of the screen.

- □ To deselect a destination, press [▲Prev.] or [▼Next] to display the destination in the destination field, and then press [Clear].
- **3** To select more destinations, repeat step **2**.

Manual input of the e-mail address

• Press [Manual Input].

The soft keyboard is displayed for entering the e-mail address.

2 Enter the e-mail address with the soft keyboard.



It is possible to use letters, numbers, and periods. The symbols ()\,;:" cannot be used.

For more information about entering an e-mail address, see the General Settings Guide.

3 Press [OK].

The name of the destination is displayed in the destination display area on the upper side of the screen.

𝚱 Note

- ☐ Press [▲Prev.] or [▼Next] to select the destination.
- ☐ For changing a destination email address that has been entered, press [Change] located on the left side of the destination list field. A soft keyboard for entering the destination e-mail address is displayed. Enter any e-mail address, and then press [OK].
- ☐ Pressing the **[Check Modes]** key lets you check the selected destinations.
- 4 To enter more than one destination, repeat steps to 3.

Searching for a destination to select

● Press 🖭.



The Search/Switch List screen appears.


2 Press [Search].



3 Press [Search by User Name].

To search using e-mail addresses, press [Search by E-mail].

4 Enter part of the destination name.

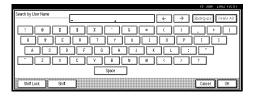

Note

- ☐ Enter the first character or characters of the destination name.
- ☐ It is also possible to perform a combined search using [Search by User Name] and [Search by E-mail].
- **6** Press [OK].

A list of destinations is displayed according to the user name search.

6 Select a destination.



- Press [Exit].
- Press [OK].

The destination name is displayed in the destination field at the top of the screen.

Checking selected destinations

Use the destination field at the top of the screen to check which destinations are selected.

Note

- □ When multiple destinations are selected, the selected destinations are displayed in the order they were selected by pressing [APrev.] or [VNext].
- ☐ Pressing the **[Check Modes]** key on the control panel lets you check the list of selected destinations.

9 Specify the sender.

𝚱 Note

- ☐ When a sender is selected, the sender name is automatically placed in the From field of the email so that the sender can be identified when the e-mail is received.
- ☐ An example of E-mail Information Language is shown below. This e-mail has been sent from [XXX]. The scanning time was YYYY:MM:DD HH:MM:SS (+0900). The administrator's e-mail address is sent for reference. Seep.26 "E-mail Information Language".
- ☐ To prevent misuse of a sender name, we recommend you set up a password for the sender.
- □ Be sure to select or enter a sender's name. Otherwise [Key Operator's E-mail Address] is used as the sender's name. ⇒General Settings Guide

Three methods are available for selecting a sender: selecting the sender from the list, entering the five-digit short ID number of the sender with the number keys, and searching for the sender and selecting it.


When selecting a sender from the list

1 Press [Attach Sender's Name].



The list of senders registered in this machine is displayed.

2 Select the sender.

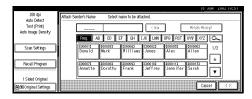


Note

☐ If a password has been set, a screen for entering the password appears after selecting the sender.

Enter the password, and then press [OK].

After verification of the password, the sender name is displayed.

3 To check receipt, press [Return Receipt].

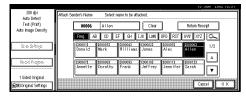

[Return Receipt] is selected.

4 Press [OK].

The sender is displayed above [Attach Sender's Name].

Using a short ID number to select a sender's name

1 Press [Attach Sender's Name].



The list of senders registered in this machine is displayed.

2 Use the number keys to enter the five-digit short ID number that has been assigned to a sender.

If the entered number is less than five digits long, press the **[#]** key after the last number.

Example:

To enter 00006

Press the **[6]** key, and then the **[#]** key using the number keys.




Note

☐ If a password has been set, a screen for entering the password appears after selecting the sender.

Enter the password, and then press **[OK]**.

After verification of the password, the sender name is displayed.

3 To check receipt, press [Return Receipt].

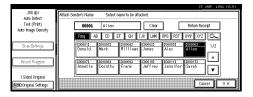

[Return Receipt] is selected.

4 Press [OK].

The sender is displayed above [Attach Sender's Name].

Searching for a sender to select

Press [Attach Sender's Name].



The list of senders registered in this machine is displayed.

2 Press [<u>\simes</u>].



The Search by Sender's Name screen appears.

3 Press [Search by User Name].

To search using e-mail addresses, press [Search by E-mail].



4 Enter part of the sender name.



𝚱 Note

- ☐ Enter the first character or characters of the sender name.
- ☐ It is also possible to perform a combined search using [Search by User Name] and [Search by E-mail].

6 Press [OK].


A list of senders is displayed according to the user name search.

6 Select the sender.



Note

- ☐ If a password has been set, a screen for entering the password appears after selecting the sender. Enter the password, and then press [OK]. After verification of the password, the sender name is displayed.
- Press [Exit].
- To check receipt, press [Return Receipt].

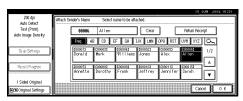

[Return Receipt] is selected.

Press [OK].

The sender is displayed above [Attach Sender's Name].

If required, select a subject.

Select a subject from the registered ones. See p.29 "Making Scan Data Subject Settings".

Note

☐ The selected subject name is automatically placed in the Subject field of the mailing soft.

Two methods are available for selecting a subject, selecting it from the list or entering it directly.


When selecting a subject from the list

• Press [Attach Subject].



The list of registered subjects is displayed.

2 Select a subject.

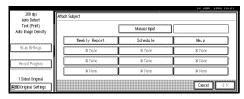

3 Press [OK].

The selected subject is displayed above [Attach Subject].

Manual input of the subject directly

1 Press [Attach Subject].

The list of registered subject is displayed.



2 Press [Manual Input].

The soft keyboard is displayed for entering a subject.

3 Enter the subject with the soft keyboard.



4 Press [OK].

The name of the subject is displayed above [Attach Subject].

Press the [Start] key.

The original is scanned and the scan data file is sent to the destination(s).

Note

- ☐ To interrupt scanning process, press the **[Clear/Stop]** key or press **[Stop]** on the screen.
- ☐ To use the SADF function, set up the next original. See p.46 "Dividing Originals and Placing Them in the Auto Document Feeder (ADF)".

☐ Regardless of the divide e-mail size setting, it is not possible to send e-mail containing over 725.3MB per document. It is also not possible to send more than 2,000 pages.

6

Checking the Status of E-mail

The status of the last 50 e-mails can be checked. For every new e-mail record after 50, the oldest record is deleted.


Items to be checked

- Date/Time
 The date and time when the delivery request was received from this machine is displayed.
- Destination
 When multiple destinations
 were selected, the first selected
 destination is displayed.
- Sender
- File Name
- Status
 Indicates whether delivery was successful or resulted in an error
- 1 Press [Scanned Files Status] on the screen for sending e-mail.



The delivery status of e-mail is displayed.

2 Check the displayed records.

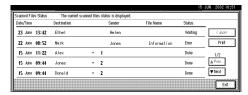

Note

- □ One screen shows the records for five sending operations. Use [▲Prev.] or [▼Next] to scroll through the screen.
- ☐ When [Print & Delete Scanner Journal] is set to [Print], all records are printed when the number of records reaches 50.
- ☐ When the status of a document is [Waiting], the sending e-mail can be stopped by selecting that document, and then pressing [Cancel].

Press [Exit].

The display returns to the screen for sending e-mail.

Using E-mail with the Document Server

You can use e-mail delivery with the Document Server.

This section explains mainly the operation for simultaneous sending and storage of e-mail. For more information, see p.57 "Delivery Procedure".

Simultaneous Storage and Sending of E-mail

Scanned data is stored in the Document Server at the same time the data is sent by e-mail.

- 1 Place the original and adjust the settings for original size and orientation if required.
 - Reference p.43 "Setting Originals"
- 2 Make the scan settings.
- 3 Select the destination.
- 4 If required, specify the sender (scan data delivery source) and a subject.
- Press [Store File].



The screen for setting storage parameters for scanned data appears.

Make sure [Send & Store] is selected.



- **7** Press [File Information] to set file information.
 - **₽** Reference

For more information, see p.81 "Specifying file information".

- 8 Press [OK].
- 9 Press the [Start] key.

The original is scanned, and the file is delivered to the destination and stored in the Document Server.

Sending Stored Files

Files stored in the Document Server can be sent by e-mail.

When the stored files are delivered, scan settings cannot be made. The files are delivered with the scan settings specified when they were stored in the Document Server.

1 Display the list of stored files.

p.84 "Viewing a List of Stored

2 Select a file to be delivered.

Note

- ☐ When you select a password protected file, the Password screen appears. After you have entered the correct password and pressed [OK], the file will be selected.
- To select multiple files, repeat step 2.



𝒯 Note

- ☐ You can select up to 30 files for one operation.
- ☐ If you select multiple files, the files will be sent in the order they were selected.
- ☐ If you press [Display Selection], the selected files will be shown in the order of delivery.

4 Press [OK].

The screen for specifying a destination appears.

- **5** Specify a destination.
- If required, select the sender (scan data delivery source) and a subject.
- **7** Press the [Start] key.

The selected stored files are sent.

7. Using the Document Server

Data obtained by scanning originals can be stored in the hard disk of the machine using the Document Server, and the stored data can be used later. Using DeskTopBinder V2 Lite/Professional, stored data can be viewed or retrieved with a client computer.

∰Important

- ☐ There are no special security settings for the Document Server. When a dialup connection is used, there is a risk that the Document Server will be accessed by an external DeskTopBinder user. We recommend using a security system such as a firewall.
- □ Data stored in the machine might be lost if some kind of failure occurs. The supplier shall not be responsible for any damage that might result from the loss of data. For long-term storage of data, we recommend the use of Desk-TopBinder V2 Lite or DeskTopBinder V2 Professional (optional). For more information, please contact your local dealer.

Note

□ When a delivery server is added to the network, data stored in the Document Server can be delivered. You can store scanned data in the Document Server and simultaneously deliver it with the network delivery scanner function or send it by e-mail. See p.65 "Using the Network Delivery Scanner Function with the Document Server".

Storing Data

This section describes how to store data in the Document Server and how to assign file information to stored data.


Note

- ☐ The data stored in the Document Server is deleted automatically later. For information about making settings and changes, see the General Settings Guide.
- ☐ The theoretical maximum number of files that can be stored is 3,000 (or 2,000 pages). However, the actual maximum may be less depending on the space used by the copier function and other functions of the machine.
- ☐ Documents scanned using the scanner function cannot be printed from the control panel. Print the documents using DeskTopBinder V2 Lite/Professional after receiving.

Storage Procedure

Scan and store the document in the Document Server.

1 Press the [Scanner] key.

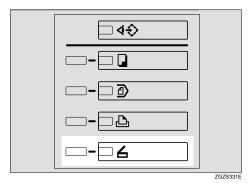

2 If the user code is set, enter a user code (consisting of up to eight characters) with the number keys, and then press [#].

The scanner function screen appears.

Note

☐ If the network TWAIN scanner screen appears, press [Cancel].



Make sure that no previous setting remain.

𝚱 Note

☐ If a previous setting remains, press the **[Clear Modes]** key.

Place the original in the machine, and then adjust the settings for original size and orientation if required.

p.43 "Setting Originals"

5 Make the scan settings.

To make the scan settings, call up the stored settings or make the settings individually.

p.21 "Setting Basic Settings"

Calling up stored scan settings

1 Press [Recall Program].

The Recall Program screen appears.

2 Select a user program of scan settings.



3 Press [OK].



The selected user program settings become active.

Making settings individually

1 Press [Scan Settings].

The screen for making scan settings appears.

Select the resolution, original size, and other items to change the settings.




The way to make scan settings is the same way as programming scan settings. See p.21 "Setting Basic Settings".

3 Press [OK].

The scan settings are applied.

- Make the settings for storing scanned data files.
 - 1 Press [Store File].

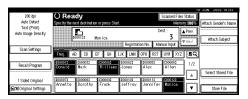

The screen for setting storage parameters for scanned data appears.

2 Press [Store Only].



Note

- ☐ To store and deliver scanned data, press [Send & Store]. See p.65 "Using the Network Delivery Scanner Function with the Document Server".
- ☐ [Store Only] cannot be pressed if even a single destination is selected.
- 3 Press [OK].

7 Specify file information.

Specify a user name, file name, and password for the file to be stored.

For more information about how to specify file information, see p.81 "Specifying file information".

8 Press the [Start] key.

The original is scanned and the resulting data is stored as a file in the Document Server.

Note

- ☐ To abort the scanning process, press the [Clear/Stop] key or press [Stop] on the screen.
- □ When originals are being scanned using the SADF, load the next original. See p.46 "Dividing Originals and Placing Them in the Auto Document Feeder (ADF)".

Specifying file information

You can specify a user name, file name, and password for a stored scan data file.

When this function is used, you can search for files by user name or file name, and you can prevent unauthorized persons from accessing the files.

Note


☐ The file name can be up to 64 characters long. The user name can be up to 20 characters long. The first 16 characters are shown on the control panel. With DeskTopBinder V2 Lite/Professional installed on a client computer, you can view the entire string.

1 Display the File Information screen.

• Press [Store File].



2 Press [File Information].

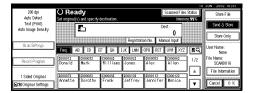

The File Information screen appears.

The following screen appears when the network delivery scanner function is used.



The following screen appears when the e-mail function is used.



2 Specify file information.

Specifying a user name

1 Press [User Name].

The User Name screen appears.

𝚱 Note


- ☐ If no user name is programmed in System Settings on the Administrator tab, the User Name screen does not appear. Instead, the Nonprogrammed Name screen appears. Enter the user name.
- 2 Select the user name.



𝚱 Note

☐ The user names shown here are names that were programmed in System Settings on the Administrator tab. To enter a name not shown here, press [Non-programmed Name], and then enter the user name.

3 Press [OK].

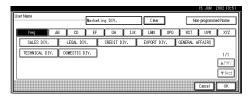

The user name is set.

Specifying a file name

Scanned data files are automatically named SCAN0001, SCAN0002, etc. If necessary, you can change the file name.

• Press [File Name].

The File Name screen appears.

2 Enter the file name.



For information about how to enter characters, see the General Settings Guide.

3 Press [OK].

The new file name is applied.


Specifying a password

By specifying a password, only a person who knows the password can view the data.

1 Press [Password].

The Password screen appears.

2 Enter a password consisting of four numbers.

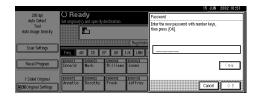

3 Press [OK].

The password is applied.

#Important


- ☐ Do not forget the password. If you forget it, contact the key operators in charge of this machine.
- When using the network delivery scanner function, press [OK] twice to return to the original screen.



Viewing a List of Stored Files

From the list of stored files, you can delete the files stored in the Document Server or change the file information. To show the list of stored files, perform the following steps.

1 Press the [Scanner] key.

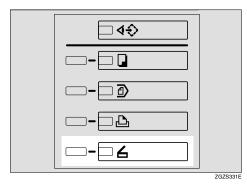

The scanner function screen appears.

Ø Note

☐ If the network TWAIN scanner screen appears, press [Cancel].



- **2** The list of stored files is displayed.
 - Press [Select Stored File].




2 Press [Manage/Delete File].

Viewing the List


The list of stored files has the following elements:

♦ When using the network delivery scanner function or e-mail

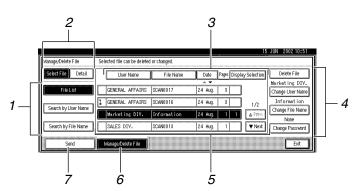


7

When using the Document Server only

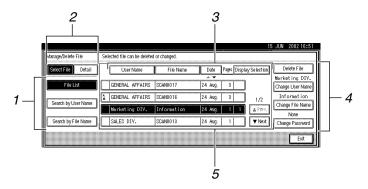

When displaying information of a selected stored file

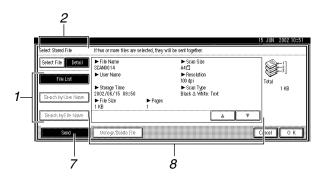

1. Keys for searching files

Switch to the screens for searching for a file by user name or file name, or to the screen for displaying all files.

2. Key to switch to the information display

Use to switch between the stored file list and the detailed information of the selected file.

3. Keys for sorting files

Sorts the files using the selected item. Select the same item once more for a reverse sort. However, the delivery order cannot be sorted in descending order.

4. Keys for changing file information

Use for deleting, changing the user name, file, or password of the selected file, or for checking file information.

5. A list of stored files

A list of stored files is displayed.

Note

- ☐ Stored files are not shown when a function other than the scanner function is used.
- ☐ If the file is not visible, use [▲Prev.] or [▼Next] to scroll through the screen.
- ☐ For files which are password protected, a key symbol(1) is shown to the left of the file name.

6. [Manage/Delete File]

Press to manage or delete the files stored in the Document Server or to change the file information.

7. [Send]


Press to deliver or send the files stored in the Document Server. For more information, see p.66 "Delivering Stored Files" or p.78 "Sending Stored Files".

8. Information of a selected stored file

Press **[Detail]** to display the information of a file after selecting the file from the file list.

Viewing a list of stored files in DeskTopBinder V2 Lite

The files stored in the Document Server are shown below in DeskTopBinder V2 Lite.

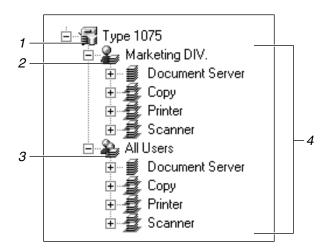

1. Connected device name

Displays the files stored in the connected device on the desk tree by dividing into User name and All Users folders.

2. User name

Displays only the files stored with the same user name specified in the connected device properties. The files stored from the scanner are shown on the Scanner folder.

3. All Users

Displays all files stored in the connected device.

4. Folder contents display

Displays the files in the selected folder.

Searching for Files

You can search for files from the stored files using the user name or file name as a key.

Searching by user name

1 On the list of displayed files, press [Search by User Name].

The Search by User Name screen appears.


2 Select the user name to be used for the search.



The user names shown here are names that were registered in System Settings on the Administrator tab. To enter a user name not shown here, press [Non-programmed Name], and then enter the name.

Press [OK].

The search starts, and files whose user name starts with the entered string are displayed.

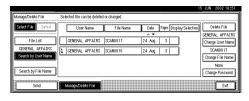

Searching by file name

1 On the list of displayed files, press [Search by File Name].

The Search by File Name screen appears.

2 Enter the file name to search for.



For information about how to input characters, see the General Settings Guide.

Press [OK].

The search starts, and files whose name starts with the entered string are displayed.



Deleting Stored Files

You can delete files that are no longer needed.

Limitation

- ☐ Files waiting for delivery cannot be deleted.
- **1** Display the list of stored files.


₽ Reference

p.84 "Viewing a List of Stored Files"


2 Press [Manage/Delete File].

The Manage/Delete File screen appears.

3 Select the file to be deleted.

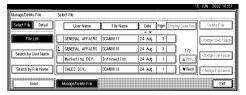

- ☐ Up to 30 files can be selected.
- ☐ When you select a password protected file, the Password screen appears. Enter the correct password, and then press [OK]. When more than one file is selected, the Password screen appears for each file.
- 4 Press [Delete File].

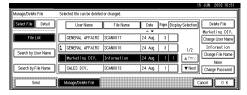

A confirmation message appears.

5 Press [Delete].



The file is deleted.

6 Press [Exit].

7

7

Changing File Information

The information about files stored in the Document Server (user name, file name, and password) can be changed.

Limitation


- ☐ Information about files waiting for delivery cannot be changed.
- 1 Display the list of stored files.

p.84 "Viewing a List of Stored Files"

2 Press [Manage/Delete File]

The Manage/Delete File screen appears.

Select the file for which you want to change the file information.

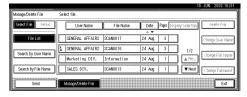

Ø Note

- ☐ When you select a password protected file, the Password screen appears. Enter the correct password, and then press [OK].
- 4 Change the file information.


Changing the user name

1 Press [Change User Name].




The Change User Name screen appears.

2 Select the new user name.

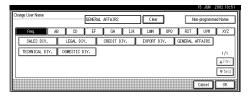

The user names shown here are names that were registered in System Settings on the Administrator tab. To specify a user name not shown here, press [Non-programmed Name], and then enter the user name.

3 Press [OK].

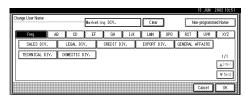

The user name is changed.

Changing the file name

• Press [Change File Name].



The Change File Name screen appears.

2 Enter the new file name.




For information about how to enter characters, see the General Settings Guide.

3 Press [OK].

The file name is changed.

Changing a password

1 Press [Change Password].

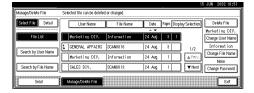

2 Enter the new password consisting of four numbers.



3 Press [OK].

The new password is stored.

- ∰Important
- ☐ Do not forget the password. If you forget it, ask the key operators in charge of this machine.
- Make sure that the file information was changed as necessary, and press [Exit].



7

8. Appendix

Relationship between Resolution and Data Size

The relationship between the resolution and the data size is mutually contradictory. When the resolution (dpi) is set to a high value, the scanning area becomes smaller. Inversely, when the scanning area is set larger, the resolution becomes lower.

When the network delivery scanner function, e-mail, and Document Server are used, the relationship between the scanning resolution and the data size is shown below. If the data size is too large, the message "Exceeded max. data capacity. Check the scanning resolution." appears on the control panel of the machine. Specify the scan size and resolution again.

Limitation

☐ Depending on the image compression level, the maximum image size will be limited.

♦ When Text, Text/Photo, or Photo is selected as the Scan Type All combinations up to A3/297 × 432 mm (11 × 17 inches) and 600 dpi are possible.

♦ When Gray Scale is selected as the Scan Type

The originals can be scanned with combinations marked with O in the table.

	100 dpi	200 dpi	300 dpi	400 dpi	600 dpi
A3	0	О	О		
B4	0	0	0	0	
A4	0	О	О	О	
B5	0	О	О	О	О
A5	0	0	0	0	О
B6	0	0	0	О	О
A6	0	О	О	О	О
A7	0	0	0	О	О
11 x 17	0	О	О		
Legal (8 ¹ / ₂ x 14)	О	0	0	О	
$8^{1}/_{2} \times 13$	О	0	О	О	
Letter $(8^1/_2 \times 11)$	О	0	О	О	
$5^{1}/_{2} \times 8^{1}/_{2}$	0	О	О	0	О

Troubleshooting

This section contains advice on what to do if you have problems scanning an original, or if the network delivery scanner or e-mail function does not work. Various messages that may appear on the control panel or client computer are listed, along with causes and solutions.

When Scanning Is Not Performed as Expected

Problems	Causes and Solutions
The image cannot be scanned at all.	The original was placed with the front and back reversed. When the original is placed directly on the exposure glass, the side to be scanned must face down. When the original is fed via the ADF, the side to be scanned must face up. See p.43 "Setting Originals".
The image is distorted or out of position.	 The original was moved during scanning. Do not move the original during scanning. The original was not pressed flat against the exposure glass. Make sure that the original is pressed flat against the exposure glass.
The scanned image is upside down.	The original was placed upside down. Place the original in the correct direction.
The scanned image is dirty.	The exposure glass or the exposure glass cover is dirty. Clean these parts. See the Copy Reference.

When the Delivery Function Does Not Work

Problems	Causes and Solutions	
The delivery scanner function screen is not displayed.	 If the network TWAIN scanner screen appears when the machine is switched to scanner operation, press [Cancel] to switch to the network delivery scanner screen. If the display does not switch from network TWAIN scanner to network delivery scanner, the delivery scanner settings are not correct. See p.18 "Default Settings", and then make the appropriate settings. 	

8

When an Error Message Appears on the Control Panel

𝚱 Note

☐ If an error message that is not included in this section appears, turn off the main power switch of the machine, and then turn it on again. If the message still appears, note the content of the message and the error number (if listed in the table), and contact your service representative. For information about how to turn off the main power switch, see the General Settings Guide.

Message	Causes and Solutions
Cannot cancel sending certain file(s). To confirm the result, check [Scanned Files Status].	Only files in waiting can be cancelled. Files with a delivery status of successful or resulted cannot be cancelled.
Cannot communicate with SMTP server. Check the server status.	 Check whether this machine and the SMTP server are correctly connected to the network. The SMTP server is not running or is not in service. Check whether the setting for Network at the initial state is correct.
Cannot communicate with the delivery server. Check the server status.	 No response from the delivery server. Possible causes are as follows: The delivery server is not running or has not started delivery service. The delivery server IP address is not set correctly in System Settings. The delivery server does not recognize the connected device. Register the connected device. Register the connected device in Set I/O Device of ScanRouter V2 Administration Utility. See ScanRouter V2 Administration Utility Help. The machine may not be correctly connected to the network. Check the LED indicators of the Ethernet board. See the General Settings Guide.

Message	Causes and Solutions
Cannot detect original size. Select scan size. Note	 Place the original correctly. Specify the scan size. When placing an original directly.
☐ These messages appear alternately.	When placing an original directly on the exposure glass, the open- ing/closing action of the ADF triggers the automatic original size detection process. Raise the ADF by more than 30 degrees.
Cannot find SMTP server. Check DNS or SMTP.	Check whether this machine and the e-mail server are correctly connected to the network.
	 The e-mail server is not running or is not in service. Check whether the Network setting for the initial system setup is correct.
Cannot select over 30 files at the same time.	To deliver more than 30 stored files, divide the files and perform the operation several times.
Cannot specify more than 100 destinations.	When there are 100 or more destinations, split the destinations into 2 or more groups for delivery.
E-mail address entered is not correct. Please reenter.	Make sure the e-mail address is correct, and then enter it again.
Exceeded max. data capacity. Check the scanning resolution, then press Start again.	Specify the scan size and resolution again. Note that it may not be possible to scan very large originals. See p.91 "Relationship between Resolution and Data Size".
Exceeded max. E-mail size. Complete scan has not been made. Press [Send] to send the current scanned data, or press [Cancel & Delete].	The size of the e-mail exceeded the maximum size possible. Reduce the volume of images and send it again.
Exceeded max. E-mail size. Sending E-mail has been cancelled. Check [Max. E-mail Size] in Scanner Features.	 Increase the size of [Max. E-mail Size]. Set [Divide & Send E-mail] to "On".
Exceeded max. file capacity. Delete the unnecessary stored files.	The maximum number of files that can be stored is 3000. Delete unneeded files.
Exceeded max. number of destinations which can be programmed.	More than 2001 destinations were programmed. Keep the number at 2000 or less.

Message	Causes and Solutions	
Exceeded max. number of pages per file. Do you want to store the scanned pages as 1 file?	The maximum number of pages per file is 500. Specify whether to use the data or not. Scan the pages that were not scanned and store them as a new file.	
Exceeded max. number of search results which can be displayed.	Search again after changing the search conditions.	
Exceeded max. number of standby files. Try again after the current file is sent.	There are 50 waiting files in the sending queue for the delivery server. Wait until files have been sent.	
Exceeded max. page capacity per file. The current scanned data will be sent.	Because the number of pages has reached the maximum number that can be sent, the data up to this point is sent. Scan the remaining pages after transmission.	
Load paper of the following sizes.Required: A3,B4,A4 B4D JIS A4D A4D	Load paper of the sizes listed in the message.	
Load the following paper in	Load paper in the tray indicated.	
Memory is full. Cannot scan.	Because of insufficient hard disk space, the first page could not be scanned. Try one of the following measures:	
	Wait for a while, and then retry the scan operation.	
	Reduce the scan area.	
	Delete unneeded stored files.	
Memory is full. Cannot scan. Only sending stored files is available.	There is not enough free hard disk space. No more files can be stored. Delete unneeded files.	
Ø Note		
☐ These messages appear alternately.		
Memory is full.	There is not enough free hard disk	
Delete the unnecessary stored files.	space. Delete unneeded files.	
Ø Note		
☐ These messages appear alternately.		
Memory is full. Press [Send] to send the current scanned data, or press [Cancel] to delete.	Because there is not enough free hard disk space in the machine, the page could only be partially scanned. Specify whether to use this data or not.	

Message	Causes and Solutions
Memory is full. Scanning has been cancelled. Do you want to store the scanned data? Note These messages appear alternately.	Because there is not enough hard disk capacity in the machine, the page could only be partially scanned. Specify whether to use the data or not.
No destination is programmed for this number.	The short ID number that can be assigned to each destination is not programmed in the delivery server. Assign a correct number to each destination.
No HDD is available for this function. Cannot store. Set original and select the TWAIN settings from the PC.	Files can be scanned with TWAIN by switching to the network TWAIN scanner function.
No sender is programmed for this number.	The short ID number that can be assigned to each sender is not programmed in the delivery server. Assign a correct number to each sender.
Output buffer is full. Sending the data has been cancelled. Please try again later.	Too many files are in waiting. Please try again after they have been delivered.
Scanner is currently in use for another function. Cannot scan. Note These messages appear alternately.	The machine is currently using the scanner for another function, such as copying. Retry the operation after the other function is completed.
Scanning cannot continue because of insufficient memory space. Do you send the scanned data? When the delivery is stopped, the scanned data is deleted.	Scanning has not been completed because of insufficient hard disk space in the machine. Select whether or not the scanned file is delivered.
Selected file is currently in use. Cannot change file name.	The name of a file that is being edited with DeskTopBinder V2 Lite/Professional or that is in a waiting queue cannot be changed. Try the operation again after editing is finished or waiting is cancelled.
Selected file is currently in use. Cannot change password.	The password of a file that is being edited with DeskTopBinder V2 Lite/Professional or that is in a waiting queue cannot be changed. Try the operation again after editing is finished or waiting is cancelled.

Message	Causes and Solutions
Selected file is currently in use. Cannot change user name.	The user name of a file that is being edited with DeskTopBinder V2 Lite/Professional or that is in a waiting queue cannot be changed. Try the operation again after editing is finished or waiting is cancelled.
Selected file is currently in use. Cannot delete it.	A file that is being edited with Desk- TopBinder V2 Lite/Professional or that is in a waiting queue cannot be deleted. Try the operation again after editing is finished or waiting is can- celled.
Sender's name is not selected. Sending E-mail has been cancelled.	A sender's name should be specified before sending e-mail. Send e-mail after specifying the sender's name.
Sending the data has been cancelled due to containing some deleted file(s). Try again after checking the stored files.	Before sending the files, some files were deleted with DeskTopBinder V2 Lite/Professional. Perform the selection process again, and then resend the files.
Sending the data has failed. Insufficient memory in SMTP server.	There is not enough free space on the hard disk of the SMTP server. Free up the required amount.
Sending the data to SMTP server has failed. The data will be resent later.	A network error has occurred and a file was not sent correctly to SMTP server. Wait until delivery is retried automatically after the preset interval. If the delivery fails again, notify the network administrator.
Sending the data to SMTP server has failed. To confirm the result, check [Scanned Files Status].	While sending a file to the SMTP server, a network error has occurred and the file could not be sent correctly. Try the operation once more. If the message is still shown, the net-
	work may be crowded. Notify the network administrator.
	If multiple files were sent, use the Scanned Files Status screen to check for which file the problem occurred. See p.64 "Checking the Status of Delivery".
	and p.76 "Checking the Status of E-mail"

Message	Causes and Solutions
Sending the data to the delivery server has failed. To confirm the result, check [Scanned Files Status].	While sending a file to the delivery server, a network error has occurred and the file could not be sent correctly. Try the operation once more. If the message is still shown, the network may be crowded. Notify the network administrator.
	If multiple files were sent, use the Scanned Files Status screen to check for which file the problem occurred. See p.64 "Checking the Status of Delivery".
Sending the data to the delivery server has failed. The data will be resent later.	A network error has occurred and a file was not sent correctly to the delivery server. Wait until delivery is retried automatically after the preset interval. If the delivery fails again, notify the network administrator.
Specified SMTP server is not set correctly. Sending Email has been cancelled.	Check whether the Network setting for the initial system setup is correct.
Switching. Please wait.	No destinations can be specified until after the switching is completed.
The destination list has been updated. Specified destination(s) or sender's name has been cleared.	A specified destination or sender's name was cleared when the destination list in the delivery server was updated. Specify the destination or sender's
	name again.
Password entered is not correct. Try again.	Enter the password again.
The selected files contain the file deleted. Check the stored files status.	After the files were selected, some files were deleted with DeskTop-Binder V2 Lite/Professional. Perform the selection process again.
The specified group contains some invalid destination(s). Are you sure you want to select only valid destination (x).	The group contains members whose e-mail addresses are not registered. Please check the e-mail addresses of the group and repeat the selection
tion(s)? Transmission has been failed. Insufficient memory in server.	the group and repeat the selection. There is not enough free space on the hard disk of the delivery server. Free up the required amount.
Updating the destination list. Please wait. Specified destination(s) or sender's name has been cleared.	If a destination or sender's name was already selected, re-select it after this display is cleared.
Updating the destination list has failed. Try again?	Check whether the delivery server has started operation.

When an Error Message Appears on the Computer

This section describes the main possible causes and actions for error messages displayed on the client computer when the TWAIN driver is used.

Note

☐ If an error message that is not contained in this section appears, turn off the main power switch of the machine, and then turn it on again. If the message is still shown after scanning is performed again, note the content of the message and the error number (if listed in the table), and contact your service representative. For information about how to turn off the main power switch, see the General Settings Guide.

Message	Causes and Solutions
[Cannot connect to the scanner. Check the network Access Mask settings in User Tools.]	The access mask is set. Notify the network or scanner administrator.
[Cannot detect the paper size of the original. Specify the scanning size.]	 Place the original correctly. Specify the scan size. When placing an original directly on the exposure glass, the opening/closing action of the ADF triggers the automatic original size detection process. Raise the ADF by more than 30 degrees.
[Cannot find the scanner. Check if the scanner main power is on.]	Check whether the main power switch of the machine is turned on.
[Cannot find the scanner used for the previous scan. Another scanner will be used instead.]	Check whether the power switch of the previously used scanner is turned on. Reselect the scanner.
[Error has occurred in the scanner.]	Check whether the scanning settings made with the application exceed the setting range of the machine.
[Error has occurred in the scanner driver.]	 Check whether the network cable is connected correctly to the computer. Check whether the Ethernet board of the computer is recognized correctly by Windows. Check whether your computer can use the TCP/IP protocol.
[Insufficient memory. Close all applications, then restart scanning.]	Close all the unnecessary applications running on the computer.

Message	Causes and Solutions
[Insufficient memory. Reduce the scanning area.]	 Reset the scan size. Lower the resolution. Set with no compression. p.25 "Making Scanner Settings"
	 ✓ Note □ "The Relationship between the Resolution and the Scanning Area" chart in Help for halftone scanning might not always apply. Scanning cannot be performed if large values are set for brightness when using halftone or high resolution.
	☐ When a paper misfeed occurs in the machine during printing, scanning cannot be performed. In this case, after the misfed paper has been removed, proceed with scanning.
[No response from the scanner.]	 Check whether the machine is connected to the network correctly. The network is crowded. Reconnect after a while.
[No User Code is registered. Consult your system administrator.]	Access is restricted with user codes. Consult the system administrator of the machine.
[Please call your service representative.]	An unrecoverable error has occurred in the machine. Call your service representative.
[Please wait.]	The machine is in warming up. Please wait. Automatic scanning will start soon.
[Scanner is in use for other function. Please wait.]	A function of the machine other than the scanner function is being used such as the copier function. Wait for a while and reconnect.
[Scanner is in use by other user. Please wait.]	Another user is using the machine to scan originals. Wait for a while and reconnect.
[Scanner is not available. Check the scanner connection status.]	Check whether the machine is connected to the network correctly.
[Scanner is not ready. Check the scanner and the options.]	Check whether the ADF cover is closed.
[The name is already in use. Check the registered names.]	You tried to register a name that is already in use. Use another name.
[The scanner power is off.]	 Check whether the main power switch of the machine is turned on. Check whether the machine is connected to the network correctly.

Settings for SMTP Authentication and POP Authentication

This section explains all required settings for using SMTP Authentication and POP Authentication.

- POP Authentication (POP before SMTP)

 This function prevents others from connecting to the SMTP server inappropriately by connecting to the POP server to authenticate the user before e-mail is sent.
- SMTP Authentication (PLAIN, LOGIN, CRAM-MD5 *1)
 This function prevents others from connecting to the SMTP server inappropriately by requiring that the SMTP User Name and SMTP Password be entered to authenticate the user when e-mail is sent.

Setting item using the control panel

For information about this item and how to make settings for this item, see *General Settings Guide*.

Items		Explanation	Default	
System Settings	Key Operator Tools	Key Operator's E- mail Address	This e-mail address is used for SMTP Authentication. When using SMTP Authentication, you must register this e-mail address.	-

Setting items using the Web browser

For information about making settings from a Web browser, see p.31 "Making E-mail Settings".

Items			Explanation	Defaut
Configura- tion	SMTP E-mail Transmission	SMTP Server Name	Up to 127 letters or digits can be used. Spaces can- not be used.	-
		SMTP Port No.	• Numbers from 1 to 65535 are available.	25
		SMTP Authentication	When using SMTP Authentication, set to [Enable].	Disable

Items		Explanation	Defaut
	SMTP User Name	 Enter the name which is registered in Key Operator's E-mail Address for SMTP sending. Up to 191 letters or digits can be used. Spaces cannot be used. Some SMTP servers require the specification of a realm. In this case, enter the user name like this: "SMTP User Name @ realm". 	-
	SMTP Password	 Enter the password which is registered in Key Operator' E-mail Address for SMTP sending. Up to 63 letters or digits can be used. Spaces cannot be used. 	-
	SMTP Auth. Encryption	 [Auto Select]: Authentication by PLAIN, LOGIN, or CRAM-MD5 *1 [Disable]: Authentication by PLAIN or LOGIN. [Enable]: Authentication by CRAM-MD5 *1 	Auto Select
	POP before SMTP	• When using POP Authentication, set to [Enable].	Disable
	POP Server Name	Up to 127 letters or digits can be used. Spaces can- not be used.	-
	POP Port No.	• Numbers from 1 to 65535 are available.	110
	POP User Name	Up to 63 letters or digits can be used. Spaces can- not be used.	-
	POP Pass- word	Up to 63 letters or digits can be used. Spaces can- not be used.	-

Items		Explanation	Defaut
	POP Auth. Encryption	[Auto Select]: Automatically decides whether or not to encrypt POP Password according to POP server settings. [Disable]: POP Password is not encrypted. [Enable]: POP Password is encrypted.	Auto Select
	Timeout setting after POP Auth.	Values from 0 to 10000 milli-seconds are availa- ble.	300

- □ When the message "Cannot communicate with SMTP server. Check the server status." is displayed, check whether SMTP User Name and SMTP Password are correct and whether PLAIN, LOGIN, or CRAM-MD5 *1 is selected as the method of authentication.
- ☐ Even when you specify a sender name with SMTP authentication, the Key Operator's name will appear in the "from" field of the e-mail when the e-mail is received.
- □ When you specify a sender name with SMTP authentication, a reply mail from the receiver will be sent to the sender. If an error has occurred in the mail server because of entering wrong addresses etc., a reply mail notifying of the error will be sent to the address set in Key Operator's E-mail Address.
- *1 RSA Data Security, Inc. MD5 Message-Digest Algorithm Copyright© 1991-2, RSA Data Security, Inc. Created 1991. All rights reserved.

License to copy and use this software is granted provided that it is identified as the "RSA Data Security, Inc. MD5 Message-Digest Algorithm" in all material mentioning or referencing this software or this function.

License is also granted to make and use derivative works provided that such works are identified as "derived from the RSA Data Security, Inc. MD5 Message-Digest Algorithm" in all material mentioning or referencing the derived work.

RSA Data Security, Inc. makes no representations concerning either the merchantability of this software or the suitability of this software for any particular purpose. It is provided "as is" without express or implied warranty of any kind.

These notices must be retained in any copies of any part of this documentation and/or software.

Specifications

Scan method	Flat bed scanning	
Image sensor type	CCD Image Sensor	
Scan type	Sheet, book	
Interface	Ethernet interface (10BASE-T or 100BASE-TX), IEEE 1394(optional), and wireless LAN(optional)	
Maximum scan size	A3/297 × 432 mm (11 × 17 inches)	
Scan density	600 dpi	
Variable range of scan resolution	When used as a network TWAIN scanner Setting range: 100 dpi - 1200 dpi	
	When used as a network delivery scanner or for sending e-mail Setting range: 100 dpi, 200 dpi, 300 dpi, 400 dpi, and 600 dpi	

INDEX

Α	J	
Automatic Tilt Correction, 54 Auto run program, 33	Job Reset Time in Adding Original, 26	
С	<u> </u>	
Checking the status of delivery, 64 [Check Modes] key, 11 [Clear Modes] key, 11 [Clear/Stop] key, 12 Compression (Black & White), 25	List displays Destination, 55 Stored Files, 84 M Main power indicator and power indicator, 11 Making E-mail settings, 31 Max. E-mail Size, 26	
Compression (Gray Scale), 25 D		
Default settings, 18	 Mixed Original Sizes Priority, 27 Mode, 53 	
DeskTopBinder V2 Lite, 37, 39, 51 Destination List Priority, 25	N	
Display, 11 Display Contents E-mail, 13 Network delivery scanner, 13	Network delivery scanner, 8 Network TWAIN scanner, 7 Number keys, 12	
Network TWAIN scanner, 13	0	
Divide & Send E-mail, 26 Document Server, 10 E E-mail, 9	Operation switch, 11 Original orientation and scan area, 47 Original Orientation Priority, 27 Original Setting, 27	
E-mail Information Language, 26	P	
[Energy Saver] key, 11 [#] Enter key, 12 F	Placing original in the Auto Document Feeder (ADF), 45 Placing original on the exposure glass, 44 Preparations E-mail, 17 Network delivery scanner, 16 Network TWAIN scanner, 15 Preview, 53 Print & Delete Scanner Journal, 27 Printing to the image, 54	
File Type Priority, 27 Function keys, 12		
Image density, 21 Initial scanner setup, 18 Installing software, 33		
	Relationship between resolution and data size, 91 Resolution, 21	

```
Save, 54
Scanning mode registration, 54
Scanning originals, 52
ScanRouter V2 Lite, 40
Scan size, 21
Scan type, 21
Selecting a custom size, 23
Select Title, 28
Sender's Name Default, 25
Send/Store Connection timeout, 25
Setting basic settings, 21
Software supplied on CD-ROM, 37
[Start] key, 12
Status indicators, 12
Stored files
     Changing file information, 89
      Deleting, 88
      Delivering, 66
      Searching, 87
      Sending, 78
Storing data, 79
Switch to Batch, 27
T
Troubleshooting, 92
Type1075 TWAIN Driver, 38
U
Update delivery scanner destination list, 25
[User Tools/Counter] key, 11
 Viewing a list of stored files in
  DeskTopBinder V2 Lite, 86
```

In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

I means POWER ON.

() means STAND BY.



Declaration of Conformity

"The Product complies with the requirements of the EMC Directive 89/336/EEC and its amending directives and the Low Voltage Directive 73/23/EEC and its amending directives."

Trademarks

Adobe and Acrobat are trademarks of Adobe Systems Incorporated.

Ethernet is a registered trademark of Xerox Corporation.

Pentium is a registered trademark of Intel Corporation.

MS, Microsoft and Windows are registered trademarks of Microsoft Corporation.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all right in those marks.

The product name of Windows®95 is Microsoft® Windows® 95.

The product name of Windows®98 is Microsoft® Windows® 98.

The product name of Windows® Me is Microsoft® Windows® Millennium Edition (Windows Me).

The product names of Windows® XP are as follows:

Microsoft® Windows® XP Professional

Microsoft® Windows® XP Home Edition

The product names of Windows® 2000 are as follows:

Microsoft® Windows® 2000 Advanced Server

Microsoft® Windows® 2000 Server

Microsoft® Windows® 2000 Professional

The product names of Windows NT® are as follows:

Microsoft® Windows NT® Server 4.0

Microsoft® Windows NT® Workstation 4.0

