

RT37/RT44 (A698/B587)

RT37/RT44 (A698/B587)

PARTS CATALOG

This catalog gives the numbers and names of parts on this machine.

1.Exterior (A698/B587).....	2
2.Tray Drive Section (A698/B587)	4
3.Paper Feed Section 1 (A698/B587)	6
4.Paper Feed Section 2 (A698/B587)	8
5.Electrical Section (A698/B587)	10
6.Frame Section (A698/B587).....	12
7.Decal And Document (A698/B587)	14
Parts Index	1


This exploded view diagram illustrates the assembly of a mechanical device, likely a door or panel. The components are numbered 1 through 21, with additional callouts 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, and 21. The assembly includes a main frame (1), a top panel (2), a bottom panel (3), a side panel (4), a top rail (5), a bottom rail (6), a side rail (7), a top bracket (8), a bottom bracket (9), a side bracket (10), a top hinge (11), a bottom hinge (12), a side hinge (13), a top latch (14), a bottom latch (15), a side latch (16), a top lock (17), a bottom lock (18), a side lock (19), a top handle (20), and a bottom handle (21). The diagram shows the spatial relationship between these parts, with dashed lines indicating the assembly path. The components are shown in a disassembled state, allowing for a clear view of each part and its position relative to the others.

1.Exterior (A698/B587)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A698 1151	Front Cover (A698)	1
1	B587 1151	Front Cover (B587)	1
2	A247 1318	Cap - 17 (A698)	1
2	B098 1318	Cap - 17 (B587)	1
3	A698 1181	Decal - Paper Set (A698)	1
3	B587 1181	Decal - Paper Set (B587)	1
4	A380 1211	Front Hinge	1
5	A380 1020	LCT Stay (LT)	1
5	A698 1020	Holder - Ass'y (A4)	1
6	A698 1221	Upper Cover (A698)	1
6	B587 1221	Upper Cover (B587)	1
7	A698 1232	Door Catch	1
8	AG07 0004	Magnetic Catch	2
9	A698 1233	End Fence Shaft	1
10	5447 2681	Snap Ring	3
11	A698 1234	End Fence	1
12	A380 1231	Hinge Stay	1
13	A698 1201	Cover - Misfeed Removal (A698)	1
13	B587 1201	Cover - Misfeed Removal (B587)	1
14	A698 1215	Rear Hinge	1
15	A609 1298	Paper Sensor Holder	1
16	A380 1293	Actuator	1
17	A380 1299	Pressure Spring	1
18	A380 1292	Actuator Shaft	1
19	A698 1251	Right Cover (A698)	1
19	B587 1251	Right Cover (B587)	1
20	A698 1161	Rear Lower Cover (A698)	1
20	B587 1161	Rear Lower Cover (B587)	1
21	A698 1171	Rear Upper Cover (A698)	1
21	B587 1171	Rear Upper Cover (B587)	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008H	Tapping Screw - 4x8	
102	0451 4008B	Philips Tapping Screw - M4x8	
103	0951 4016B	Philips Screw With Flat Washer - M4x16	
104	0452 4008B	Tapping Screw - M4x8	
105	0720 0020E	Retaining Ring - M2	
106	0452 4012B	Tapping Bind Screw - M4x12	
107	0314 0120B	Philips Pan Head Screw - M4x12	
108	0450 4012Z	Tapping Screw - M4x12	

2.Tray Drive Section (A698/B587)

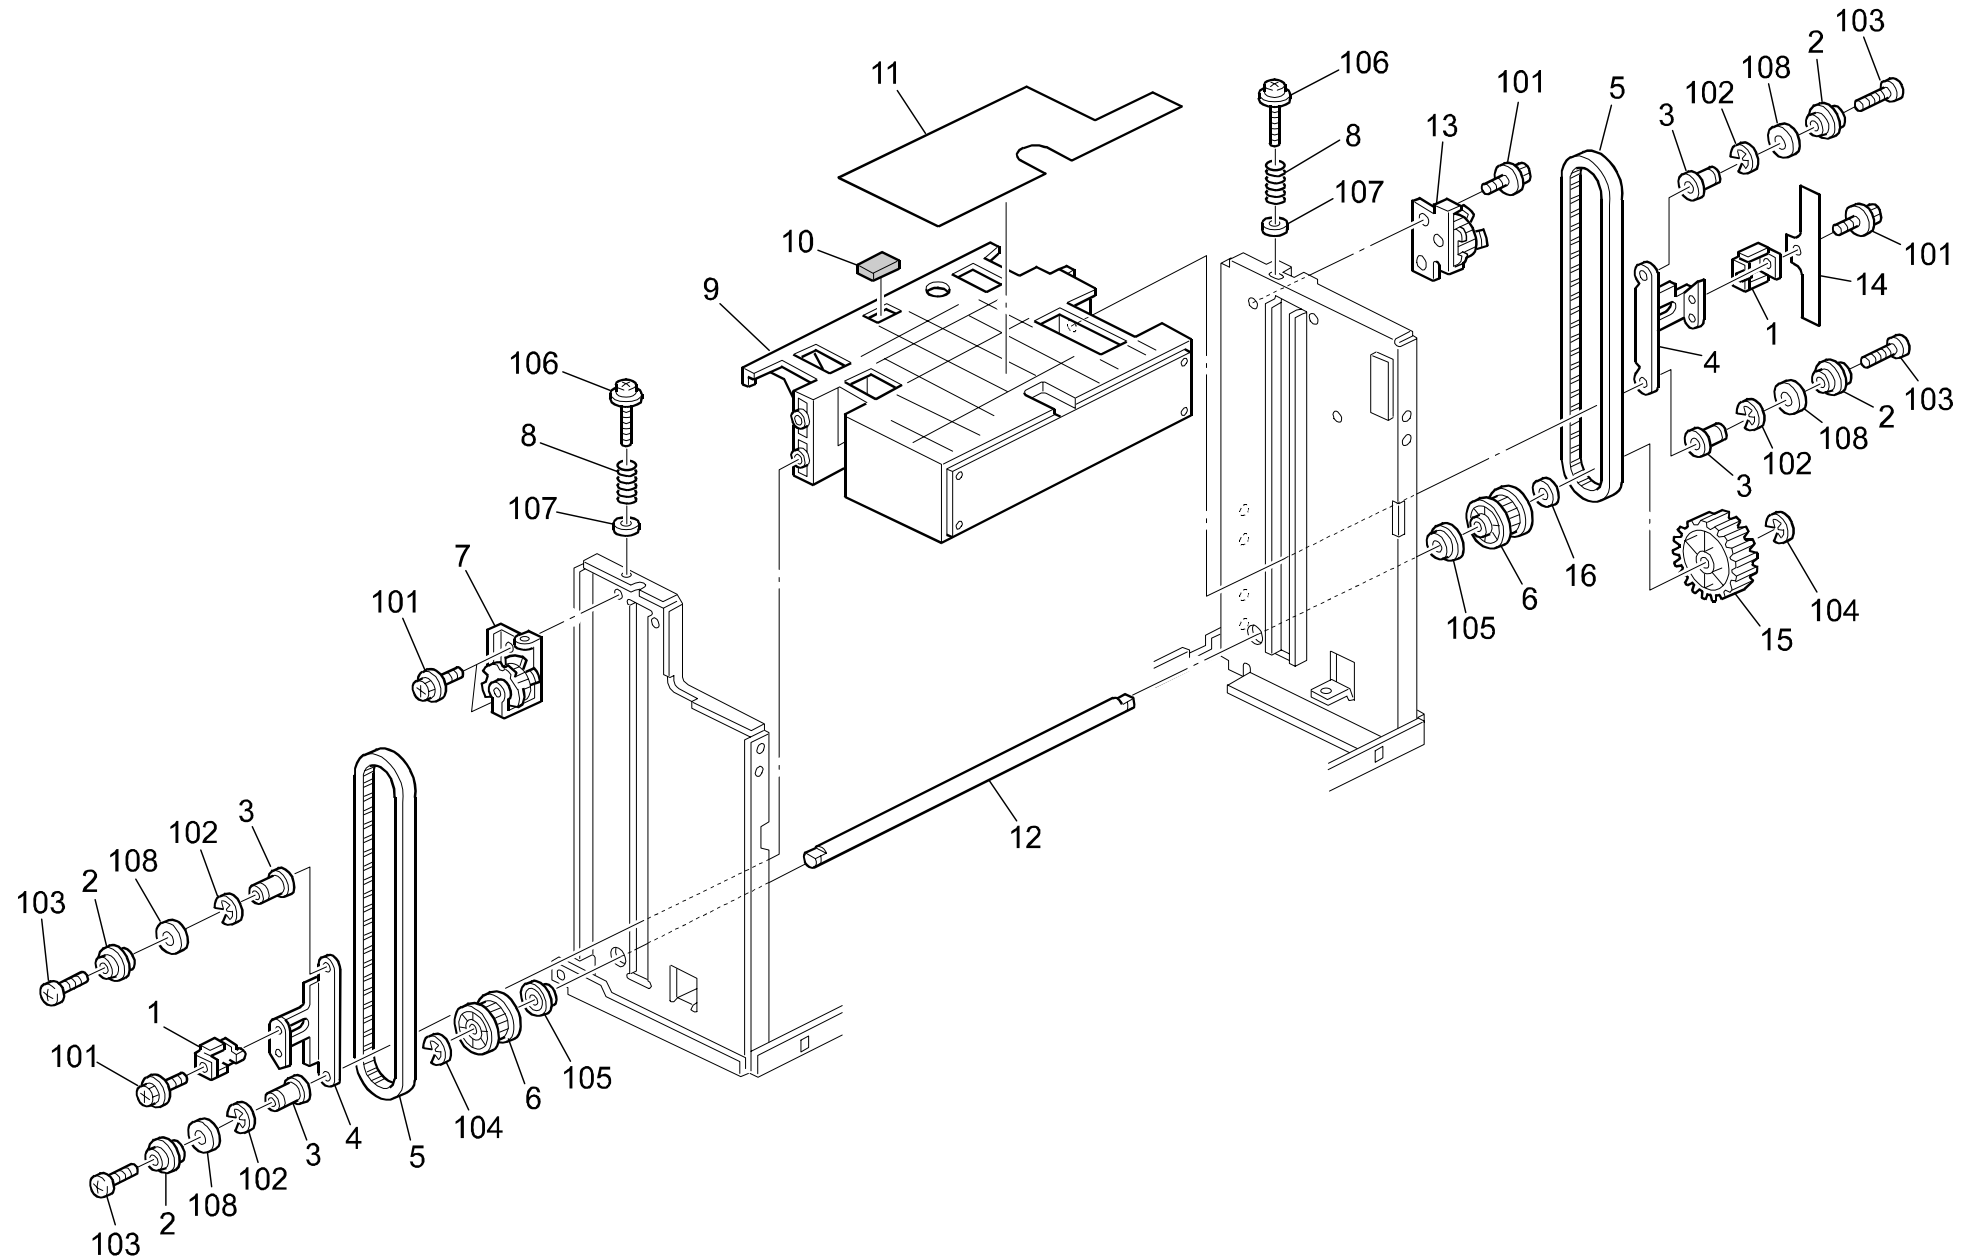


2.Tray Drive Section (A698/B587)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A380 1810	Timing Belt Clamp	2
2	A380 1754	Ball Bearing Guide	4
3	A380 1752	Roller Shaft	4
4	A698 1753	Timing Belt Bracket	2
5	A380 1801	Timing Belt - S5M T210	2
6	A380 1803	Timing Pulley - S5M 22Z	2
7	A380 1820	Front Idler Bracket	1
8	AA06 3038	Pressure Spring	2
9	A380 1785	LCT Tray	1
10	A421 2543	Friction Pad	1
11	A380 1141	Decal - Paper Size	1
12	A380 1805	Tray Lift Shaft	1
13	A380 1825	Rear Idler Bracket	1
14	A698 1811	Shielding Plate	1
15	A380 1806	Dreive Gear - 42Z	1
16	A042 2568	Spacer - 8.1x10x3.7	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008B	Philips Tapping Screw - M4x8	
102	0720 0060B	Retaining Ring - M6	
103	0314 0200B	Philips Pan Head Screw - M4x20	
104	0720 0050B	Retaining Ring - M5	
105	0742 3808	Ball Bearing - 8x16x5	
106	0957 4030B	Screw - M4X3	
107	0708 0040B	Washer - M4	
108	0805 3270	Ball Bearing - 8x16x5mm	

3. Paper Feed Section 1 (A698/B587)

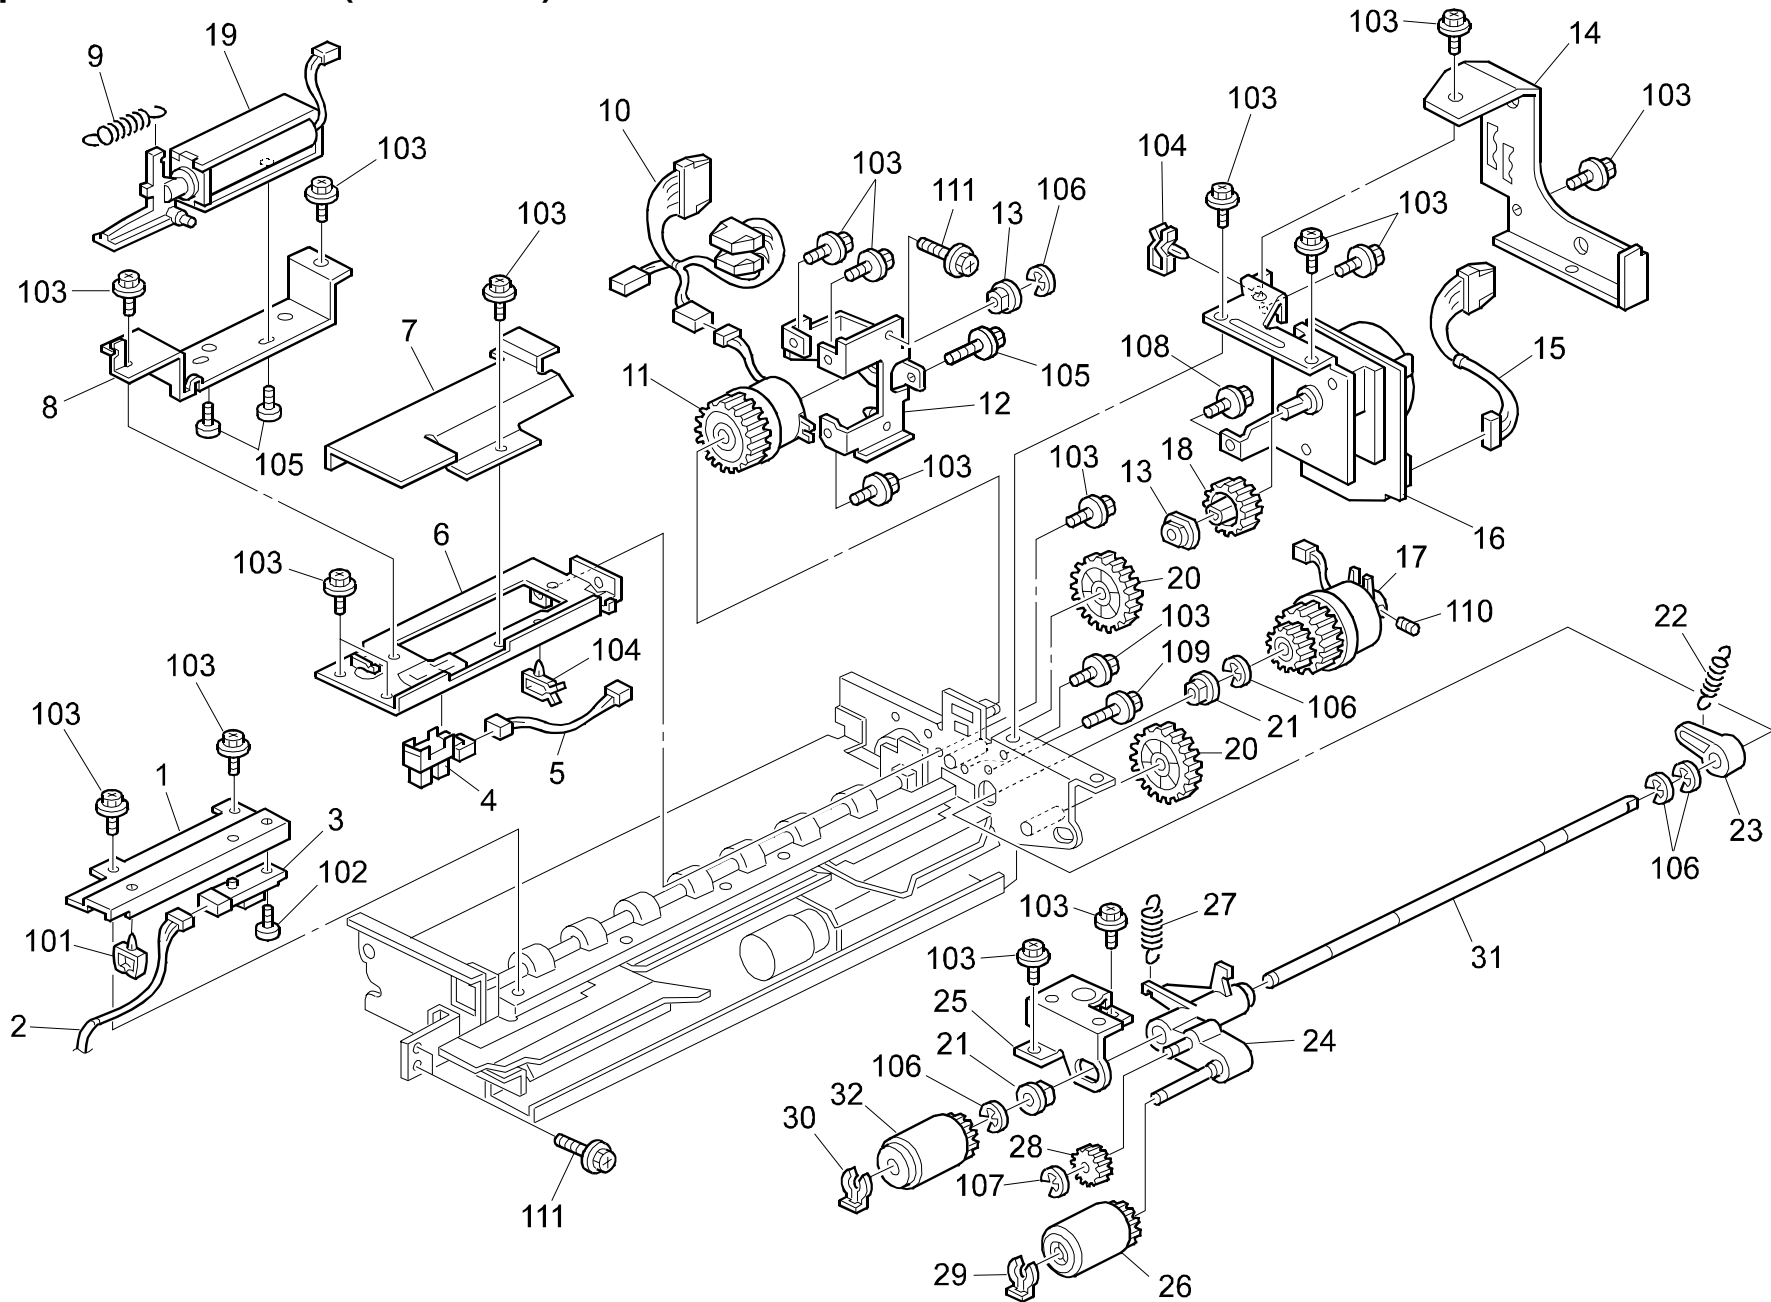


3.Paper Feed Section 1 (A698/B587)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A698 2331	Paper Feed Sensor Bracket	1
2	A698 5340	Paper Feed Sensor Harness	1
3	AW01 0048	Photo Sensor - Gp2a28n1	1
4	AW02 0056	Photointerruptor - EE-SX4235A-P1	5
5	A698 5330	Upper Sensor Harness	1
6	A698 2271	Upper Stay	1
7	A380 2431	Solenoid Cover	1
8	A698 2281	Solenoid Bracket	1
9	A380 2460	Pick-up Release Spring	1
10	A698 5320	Paper Feed Unit Harness	1
11	AX20 0149	Magnetic Clutch	1
12	A698 2485	Magnetic Clutch Bracket	1
13	AA08 2078	Bushing - 8mm	2
14	A698 2421	Harness Clamp Bracket	1
15	A698 5350	Motor Harness	1
16	AX06 0203	Main Motor Ass'y	1
17	AX21 0037	Magnetic Clutch	1
18	AB01 4072	Gear - 22Z	1
19	A380 2280	Pick-up Solenoid	1
20	A380 2390	Idler Gear - 33Z	2
21	AA08 2047	Bushing - 8x16x7	2
22	A380 2494	Pressure Spring	1
23	A096 6353	Feed Roller Lever	1
24	A380 2211	Pick-up Arm	1
25	A698 2353	Feed Roller Bracket	1
26	AF03 0041	Pick-up Roller (A698)	1
26	AF03 0050	Pick-up Roller (B587)	1
27	AA06 0747	Pressure Spring	1
28	5447 2706	Gear - 15T	1
29	5447 2681	Snap Ring	1
30	5215 2621	Snap Ring - M6	2
31	AA14 0678	Feed Roller Shaft	1
32	AF03 1041	Paper Feed Roller (A698)	1
32	AF03 1064	Paper Feed Roller (B587)	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	1105 0199	Clamp	
102	0453 3006B	Tapping Screw - M3x6	
103	0451 4006B	Tapping Screw - 4x6	
104	1105 0200	Clamp	
105	0451 3010B	Tapping Screw - M3x10	
106	0720 0060B	Retaining Ring - M6	
107	0720 0040B	Retaining Ring - M4	
108	0451 3006B	Tapping Screw - M3x6	
109	0451 4016B	Tapping Screw - M4-16	
110	0573 0040E	Hexagon Headless Set Screw - M3x4	
111	0451 4008B	Philips Tapping Screw - M4x8	

4.Paper Feed Section 2 (A698/B587)

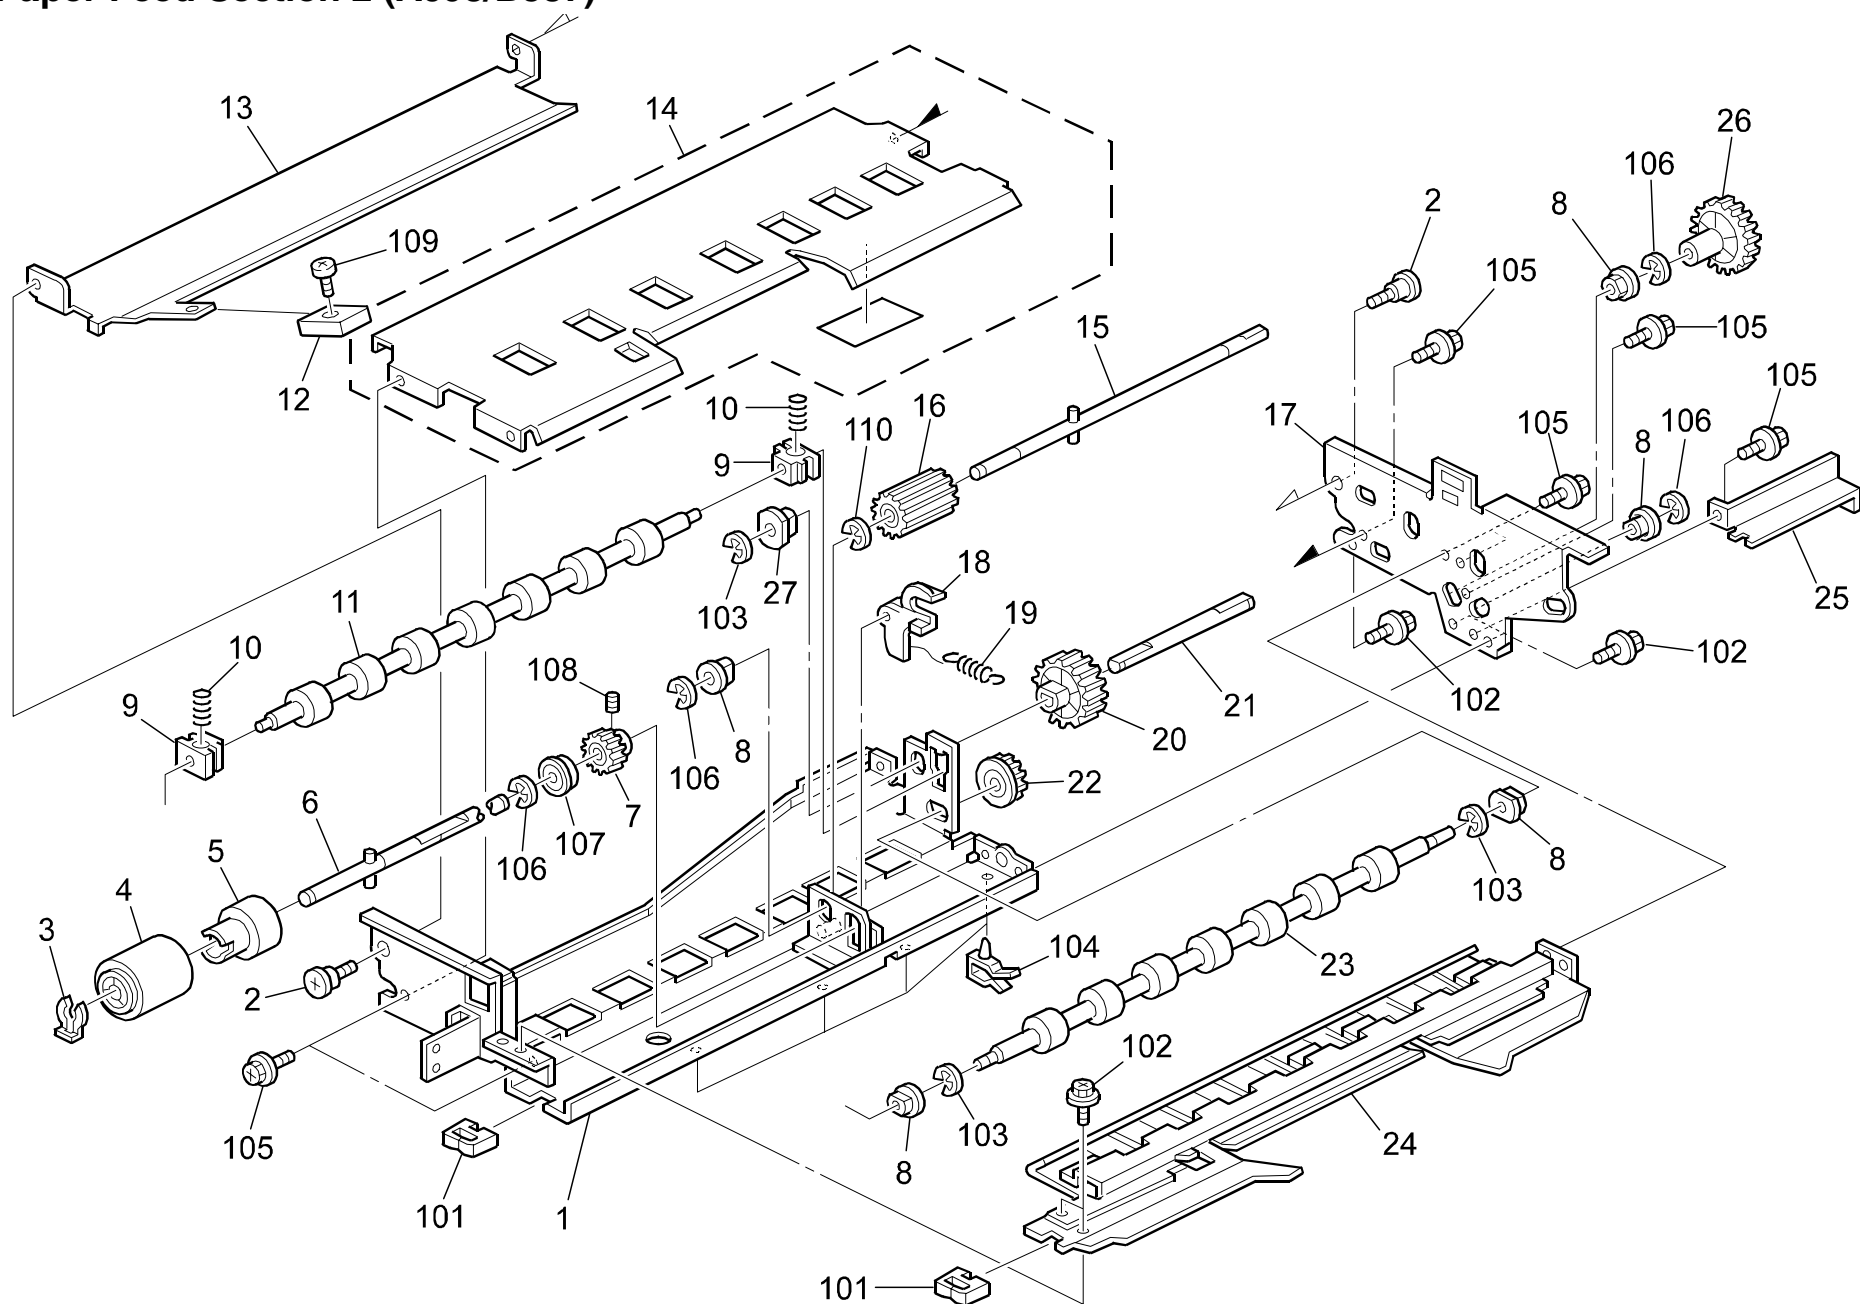


4.Paper Feed Section 2 (A698/B587)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A698 2111	Base Plate	1
2	AA14 3440	Stepped Screw - M4	2
3	5447 2681	Snap Ring	1
4	AF03 2041	Separation Roller (A698)	1
4	AF03 2050	Separation Roller (B587)	1
5	A247 2900	Separation Torque Limiter	1
6	A698 2342	Reverse Driven Shaft	1
7	AB01 1391	Driven Reverse Gear	1
8	AA08 2046	Bushing - 6x12x6 (A698)	5
8	AA08 2118	Bushing - M6 (B587)	5
9	AA08 0300	Bushing - 6mm	2
10	AA06 3574	Pressure Spring	2
11	AF02 0438	Transport Driven Roller	1
12	A353 2243	Lever Knob	1
13	A698 2311	Release Guide Plate	1
14	A698 2360	Lower Guide Plate	1
15	A698 2251	Reverse Drive Shaft	1
16	AB01 1392	Drive Reverse Gear	1
17	A698 2151	Rear Side Plate	1
18	A683 2666	Pressure Lever	1
19	AA06 0636	Pressure Spring	1
20	AB01 4074	Gear - 33Z	1
21	AA14 5812	Clutch Shaft	1
22	AB01 4073	Gear - 22Z	1
23	AF02 0437	Transport Drive Roller	1
24	A698 2351	Entrance Upper Guide Plate	1
25	A822 2441	Stud - Harness Bracket	1
26	A380 2053	Reverse Gear - 30Z	1
27	AA08 2078	Bushing - 8mm	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	1105 0328	Harness Clamp - ES-0505	
102	0451 4008B	Philips Tapping Screw - M4x8	
103	0720 0060B	Retaining Ring - M6	
104	1105 0200	Clamp	
105	0451 4006B	Tapping Screw - 4x6	
106	0720 0040B	Retaining Ring - M4	
107	0805 3145	Ball Bearing - 6x12x4mm	
108	0573 0030E	Hexagon Headless Set Screw - M3x3	
109	0313 0040B	Philips Pan Head Screw - M3x4	
110	0720 0050B	Retaining Ring - M5	

5.Electrical Section (A698/B587)

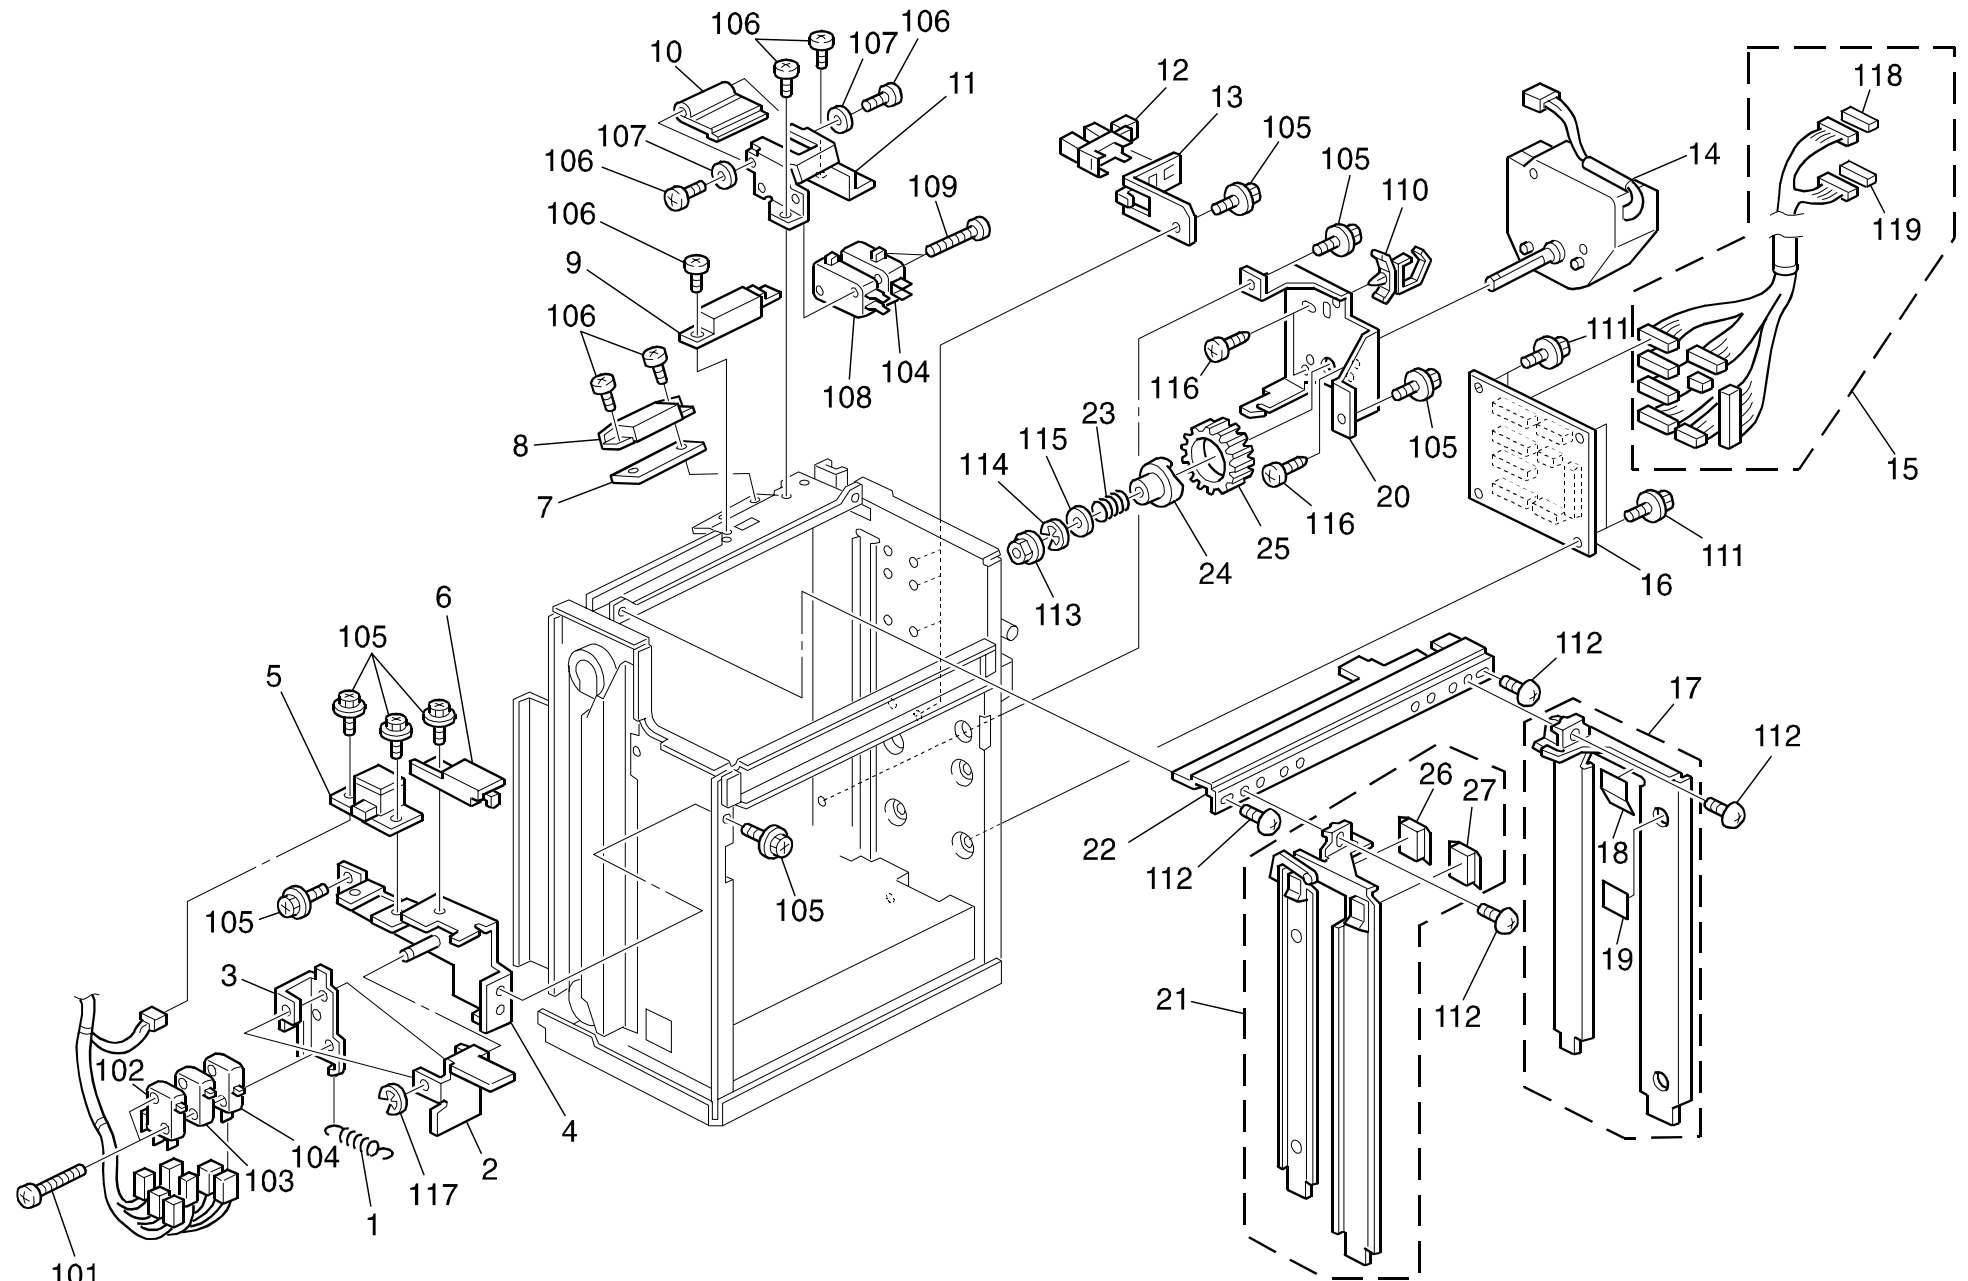


5.Electrical Section (A698/B587)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A380 2490	Reverse Roller Pressure Spring	1
2	A380 1262	Door Switch Holder	1
3	A380 1261	Operation Key Bracket	1
4	A380 1263	Door Switch Bracket	1
5	A355 5320	Push Switch	1
6	A380 1267	Magnetic Holder	1
7	A609 1357	Spacer	1
8	AG07 0004	Magnetic Catch	1
9	AW01 0064	Optical Sensor Ass'y	1
10	A609 1359	Micro Switch Plate	1
11	A698 1357	Bracket:Safety Switch	1
12	AW02 0056	Photointerruptor - EE-SX4235A-P1	4
13	A698 1375	Volume Sensor Bracket	4
14	AX04 0091	DC Motor - 21.6W	1
15	A698 5310	LCT Main Harness	1
16	A698 5110	LCT Main Board	1
17	A609 1852	Rear Side Frnce (LT)	1
17	A698 1852	Side Fence - Rear (A4)	1
18	A380 1935	Rear Guide Sheet	1
19	AA00 2010	Decal - Paper Level	1
20	A698 1601	Motor Bracket	1
21	A609 1851	Front Side Fence (LT)	1
21	A698 1851	Side Fence - Front (A4)	1
22	A380 1941	Side Fence Adjuster - Upper (LT)	1
22	A698 1941	Positioning Plate - Side Fence (A4)	1
23	A380 1436	Pressure Spring	1
24	A609 1602	Joint - Drive	1
25	A609 1603	Drive Gear	1
26	A609 1915	Paper Holder	1
27	A609 1916	Side Fence Pad	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0313 0350B	Philips Pan Head Screw - M3x35	
102	1204 0192	Microswitch - UL	
103	1204 1148	Microswitch	
104	1204 2136	Micro Switch	
105	0451 4008B	Philips Tapping Screw - M4x8	
106	0453 3008B	Bind Tapping Screw - M3x8	
107	0708 0030B	Washer - M3	
108	1204 0704	Micro Switch - D2RV-G	
109	0313 0250B	Philips Pan Head Screw - M3x25	
110	1105 0310	Harness Clamp - LWS-1S	
111	0451 4006B	Tapping Screw - 4x6	
112	0344 0050F	Philips Truss Head Screw - M4x5	
113	0805 3389	Bushing - 8x10x6mm	
114	0720 0050B	Retaining Ring - M5	
115	0807 5056	Washer - 8.1mm	
116	0452 4010B	Tapping Bind Screw - M4x10	
117	0720 0040B	Retaining Ring - M4	
118	1102 6257	Relay Connector - 14P	
119	1102 6258	Relay Connector - 15P	

6.Frame Section (A698/B587)

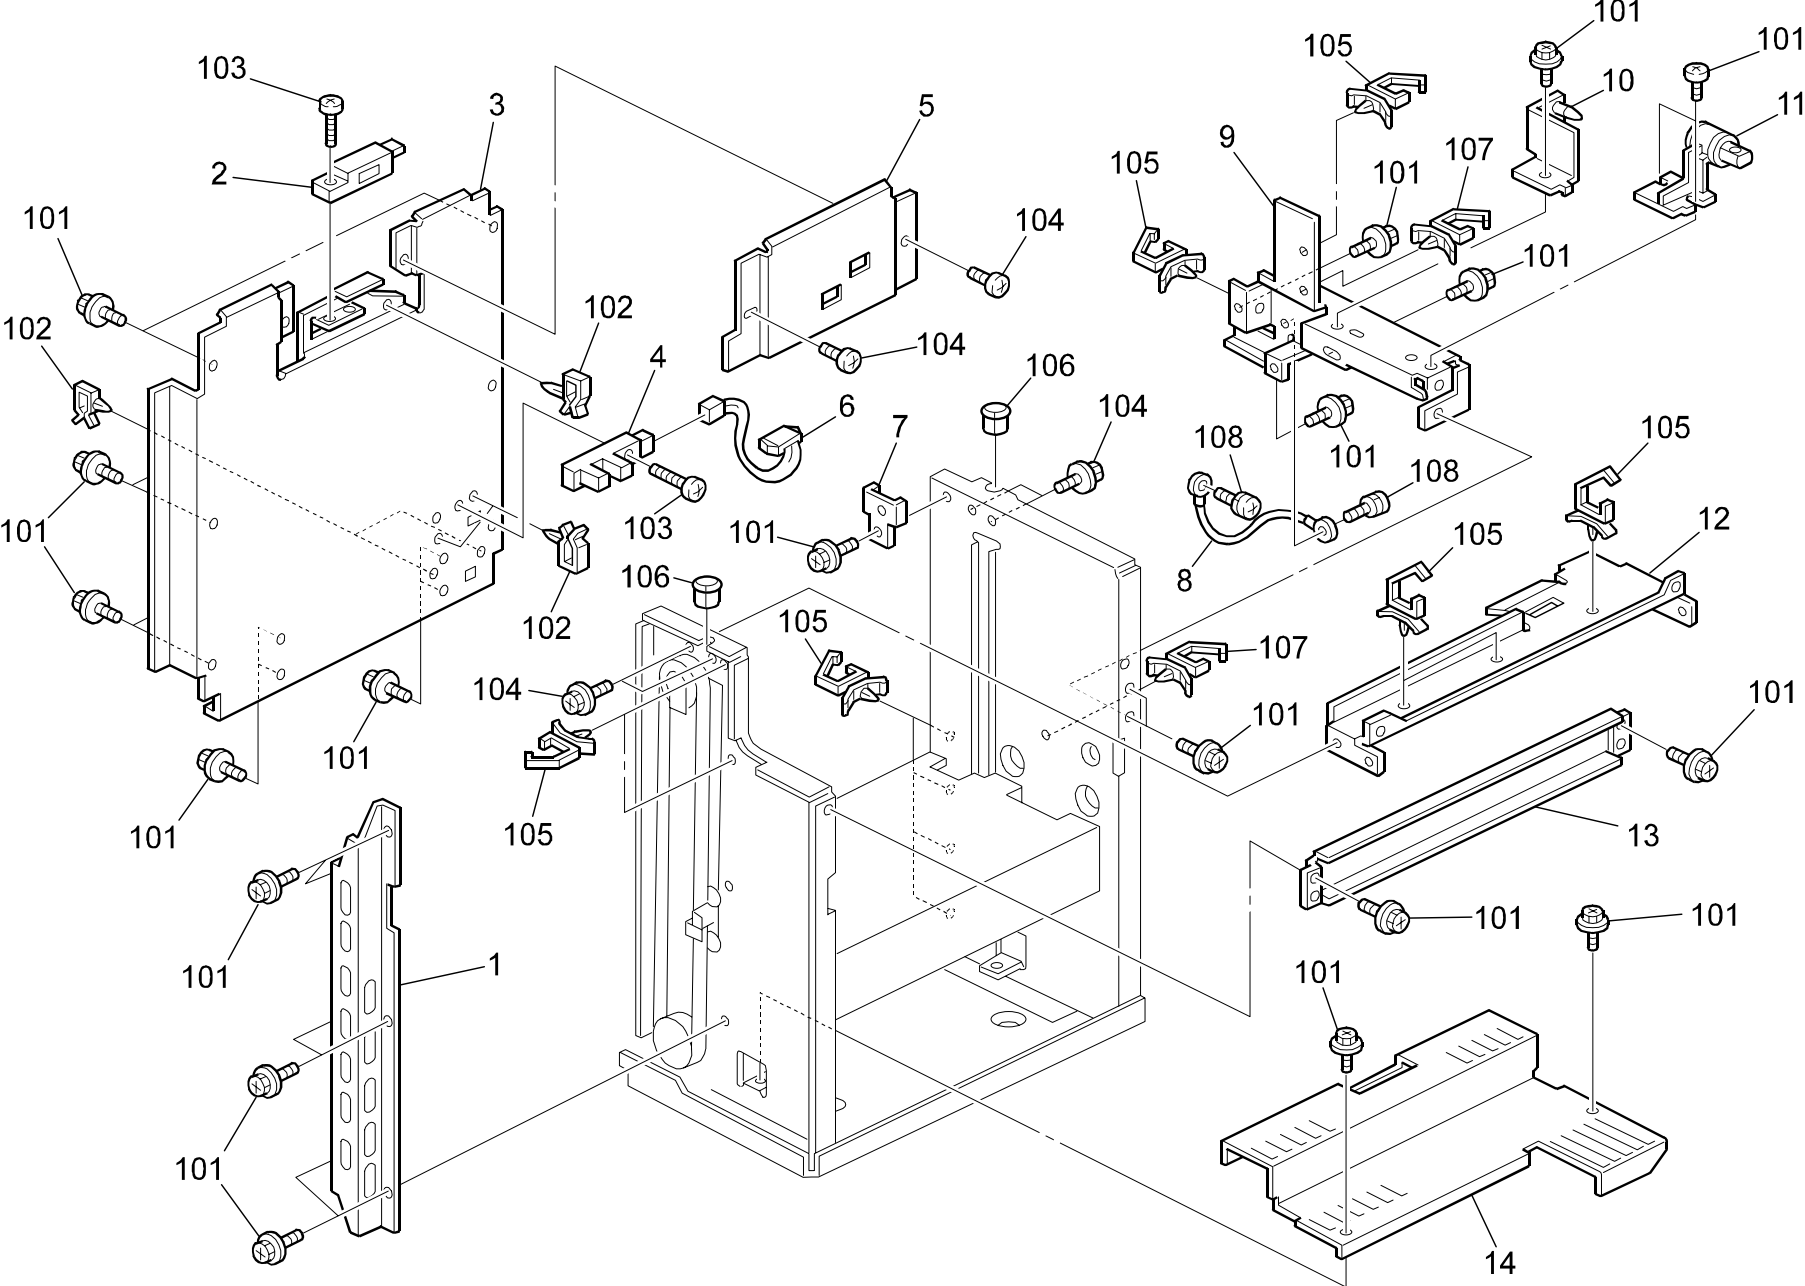


6.Frame Section (A698/B587)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A380 1381	Front Support Plate	1
2	AW01 0027	Photosensor - ON2530 CT	1
3	A380 1352	Left Bracket (LT)	1
3	A698 1352	Left Bracket (A4)	1
4	AW02 0012	Photointerruptor	1
5	A380 1354	Registration Roller Cover	1
6	A380 5605	Relay Harness - Paper Tray	1
7	A380 1213	Rear Bracket - Misfeed	1
8	A698 5360	Grounding Harness	1
9	A698 1271	Hinge Bracket - Large	1
10	A380 1272	Hinge Bracket	1
11	A380 1281	Hinge Rubber Cover	1
12	A609 1355	Upper Stay	1
13	A380 1356	Right Stay	1
14	A380 1942	Side Fence Adjuster - Lower	1


Index No.	Part No.	Description	Q'ty Per Assembly
101	0451 4008B	Philips Tapping Screw - M4x8	
102	1105 0200	Clamp	
103	0453 3010B	Binding Screw	
104	0453 4008B	Tapping Bind Screw - M4x8	
105	1105 0310	Harness Clamp - LWS-1S	
106	1106 0241	Bushing - 6.7mm	
107	1105 0292	Wire Saddle	
108	0950 4006B	Screw - M4X6	

7. Decal And Document (A698/B587)


1

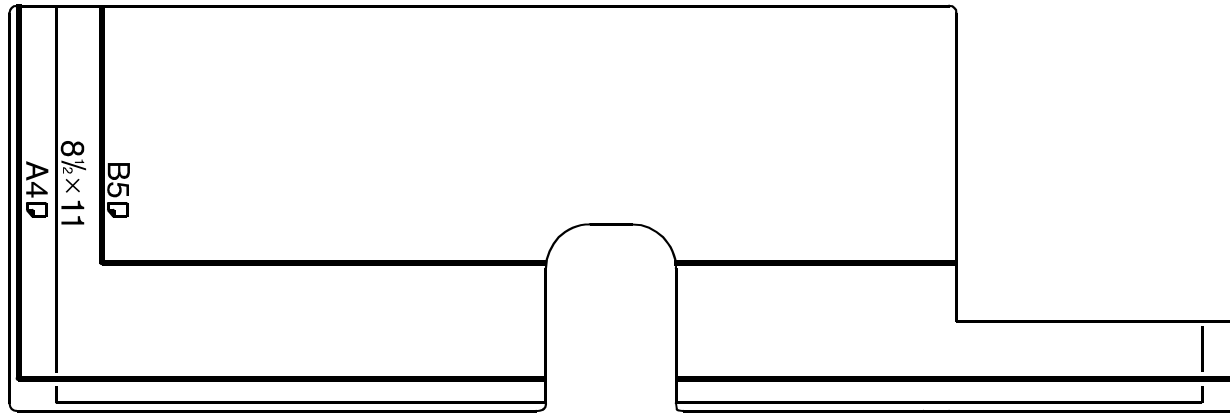

2

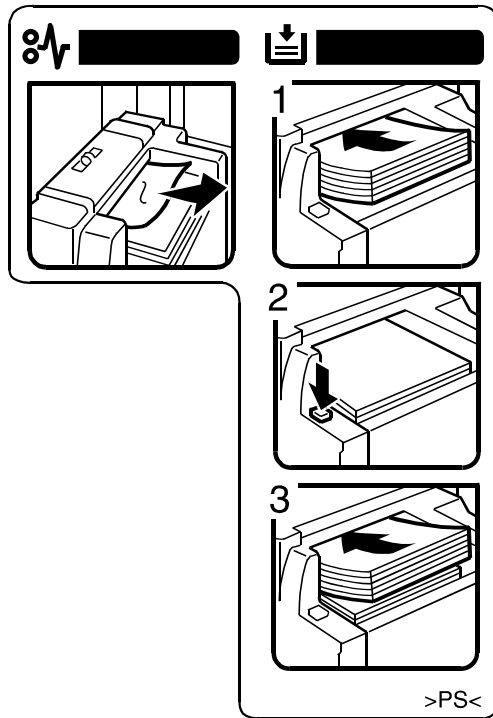

3

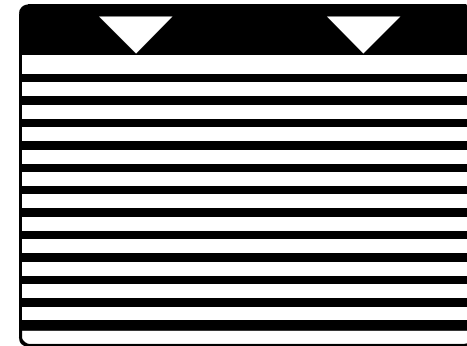

7. Decal And Document (A698/B587)

Index No.	Part No.	Description	Q'ty Per Assembly
1	A380 1141	Decal - Paper Size	1
2	A698 1181	Decal - Paper Set	1
3	AA00 2010	Decal - Paper Level	1

Index No.	Part No.	Description	Q'ty Per Assembly

Parts Index

PM Parts Index

Section Name	Part No.	Description in Service Manual	Description in Parts Catalog	Q'ty Per Assembly	Page and Index No.
Paper Feed Section 1 (A698/B587)	AF03 0021	Pick-up Roller	Pick-up Roller (A698)	1	7- 26
	AF03 0050	Pick-up Roller	Pick-up Roller (B587)	1	7- 26
	AF03 1021	Paper Feed Roller	Paper Feed Roller (a698)	1	7- 32
	AF03 1064	Paper Feed Roller	Paper Feed Roller (B587)	1	7- 32
Paper Feed Section 2 (A698/B587)	AF03 2021	Separation Roller	Separation Roller (A698)	1	9- 4
	AF03 2050	Separation Roller	Separation Roller (B587)	1	9- 4

Parts Index

Part No.	Description	Page and Index No.
A698 1020	Holder - Ass'y (A4)	3 - 5
A698 1151	Front Cover (A698)	3 - 1
A698 1161	Rear Lower Cover (A698)	3 - 20
A698 1171	Rear Upper Cover (A698)	3 - 21
A698 1181	Decal - Paper Set	15 - 2
A698 1181	Decal - Paper Set (A698)	3 - 3
A698 1201	Cover - Misfeed Removal (A698)	3 - 13
A698 1215	Rear Hinge	3 - 14
A698 1221	Upper Cover (A698)	3 - 6
A698 1232	Door Catch	3 - 7
A698 1233	End Fence Shaft	3 - 9
A698 1234	End Fence	3 - 11
A698 1251	Right Cover (A698)	3 - 19
A698 1271	Hinge Bracket - Large	13 - 9
A698 1352	Left Bracket (A4)	13 - 3
A698 1357	Bracket:Safety Switch	11 - 11
A698 1375	Volume Sensor Bracket	11 - 13
A698 1601	Motor Bracket	11 - 20
A698 1753	Timing Belt Bracket	5 - 4
A698 1811	Shielding Plate	5 - 14
A698 1851	Side Fence - Front (A4)	11 - 21
A698 1852	Side Fence - Rear (A4)	11 - 17
A698 1941	Positioning Plate - Side Fence (A4)	11 - 22
A698 2111	Base Plate	9 - 1
A698 2151	Rear Side Plate	9 - 17
A698 2251	Reverse Drive Shaft	9 - 15
A698 2271	Upper Stay	7 - 6
A698 2281	Solenoid Bracket	7 - 8
A698 2311	Release Guide Plate	9 - 13
A698 2331	Paper Feed Sensor Bracket	7 - 1
A698 2342	Reverse Driven Shaft	9 - 6
A698 2351	Entrance Upper Guide Plate	9 - 24
A698 2353	Feed Roller Bracket	7 - 25
A698 2360	Lower Guide Plate	9 - 14
A698 2421	Harness Clamp Bracket	7 - 14

Part No.	Description	Page and Index No.
A698 2485	Magnetic Clutch Bracket	7 - 12
A698 5110	LCT Main Board	11 - 16
A698 5310	LCT Main Harness	11 - 15
A698 5320	Paper Feed Unit Harness	7 - 10
A698 5330	Upper Sensor Harness	7 - 5
A698 5340	Paper Feed Sensor Harness	7 - 2
A698 5350	Motor Harness	7 - 15
A698 5360	Grounding Harness	13 - 8

Part No.	Description	Page and Index No.
A042 2568	Spacer - 8.1x10x3.7	5 - 16
A096 6353	Feed Roller Lever	7 - 23
A247 1318	Cap - 17 (A698)	3 - 2
A247 2900	Separation Torque Limiter	9 - 5
A353 2243	Lever Knob	9 - 12
A355 5320	Push Switch	11 - 5
A380 1020	LCT Stay (LT)	3 - 5
A380 1141	Decal - Paper Size	5 - 11
A380 1141	Decal - Paper Size	15 - 1
A380 1211	Front Hinge	3 - 4
A380 1213	Rear Bracket - Misfeed	13 - 7
A380 1231	Hinge Stay	3 - 12
A380 1261	Operation Key Bracket	11 - 3
A380 1262	Door Switch Holder	11 - 2
A380 1263	Door Switch Bracket	11 - 4
A380 1267	Magnetic Holder	11 - 6
A380 1272	Hinge Bracket	13 - 10
A380 1281	Hinge Rubber Cover	13 - 11
A380 1292	Actuator Shaft	3 - 18
A380 1293	Actuator	3 - 16
A380 1299	Pressure Spring	3 - 17
A380 1352	Left Bracket (LT)	13 - 3
A380 1354	Registration Roller Cover	13 - 5
A380 1356	Right Stay	13 - 13
A380 1381	Front Support Plate	13 - 1
A380 1436	Pressure Spring	11 - 23
A380 1752	Roller Shaft	5 - 3
A380 1754	Ball Bearing Guide	5 - 2
A380 1785	LCT Tray	5 - 9
A380 1801	Timing Belt - S5M T210	5 - 5
A380 1803	Timing Pulley - S5M 22Z	5 - 6
A380 1805	Tray Lift Shaft	5 - 12
A380 1806	Drive Gear - 42Z	5 - 15
A380 1810	Timing Belt Clamp	5 - 1
A380 1820	Front Idler Bracket	5 - 7

Part No.	Description	Page and Index No.
A380 1825	Rear Idler Bracket	5 - 13
A380 1935	Rear Guide Sheet	11 - 18
A380 1941	Side Fence Adjuster - Upper (LT)	11 - 22
A380 1942	Side Fence Adjuster - Lower	13 - 14
A380 2053	Reverse Gear - 30Z	9 - 26
A380 2211	Pick-up Arm	7 - 24
A380 2280	Pick-up Solenoid	7 - 19
A380 2390	Idler Gear - 33Z	7 - 20
A380 2431	Solenoid Cover	7 - 7
A380 2460	Pick-up Release Spring	7 - 9
A380 2490	Reverse Roller Pressure Spring	11 - 1
A380 2494	Pressure Spring	7 - 22
A380 5605	Relay Harness - Paper Tray	13 - 6
A421 2543	Friction Pad	5 - 10
A609 1298	Paper Sensor Holder	3 - 15
A609 1355	Upper Stay	13 - 12
A609 1357	Spacer	11 - 7
A609 1359	Micro Switch Plate	11 - 10
A609 1602	Joint - Drive	11 - 24
A609 1603	Drive Gear	11 - 25
A609 1851	Front Side Fence (LT)	11 - 21
A609 1852	Rear Side Fence (LT)	11 - 17
A609 1915	Paper Holder	11 - 26
A609 1916	Side Fence Pad	11 - 27
A683 2666	Pressure Lever	9 - 18
A822 2441	Stud - Harness Bracket	9 - 25
B098 1318	Cap - 17 (B587)	3 - 2
B587 1151	Front Cover (B587)	3 - 1
B587 1161	Rear Lower Cover (B587)	3 - 20
B587 1171	Rear Upper Cover (B587)	3 - 21
B587 1181	Decal - Paper Set (B587)	3 - 3
B587 1201	Cover - Misfeed Removal (B587)	3 - 13
B587 1221	Upper Cover (B587)	3 - 6
B587 1251	Right Cover (B587)	3 - 19
AA00 2010	Decal - Paper Level	11 - 19

Part No.	Description	Page and Index No.
AA00 2010	Decal - Paper Level	15 - 3
AA06 0636	Pressure Spring	9 - 19
AA06 0747	Pressure Spring	7 - 27
AA06 3038	Pressure Spring	5 - 8
AA06 3574	Pressure Spring	9 - 10
AA08 0300	Bushing - 6mm	9 - 9
AA08 2046	Bushing - 6x12x6 (A698)	9 - 8
AA08 2047	Bushing - 8x16x7	7 - 21
AA08 2078	Bushing - 8mm	9 - 27
AA08 2078	Bushing - 8mm	7 - 13
AA08 2118	Bushing - M6 (B587)	9 - 8
AA14 0678	Feed Roller Shaft	7 - 31
AA14 3440	Stepped Screw - M4	9 - 2
AA14 5812	Clutch Shaft	9 - 21
AB01 1391	Driven Reverse Gear	9 - 7
AB01 1392	Drive Reverse Gear	9 - 16
AB01 4072	Gear - 22Z	7 - 18
AB01 4073	Gear - 22Z	9 - 22
AB01 4074	Gear - 33Z	9 - 20
AF02 0437	Transport Drive Roller	9 - 23
AF02 0438	Transport Driven Roller	9 - 11
AF03 0041	Pick-up Roller (A698)	7 - 26
AF03 0050	Pick-up Roller (B587)	7 - 26
AF03 1041	Paper Feed Roller (A698)	7 - 32
AF03 1064	Paper Feed Roller (B587)	7 - 32
AF03 2041	Separation Roller (A698)	9 - 4
AF03 2050	Separation Roller (B587)	9 - 4
AG07 0004	Magnetic Catch	11 - 8
AG07 0004	Magnetic Catch	3 - 8
AW01 0027	Photosensor - ON2530 CT	13 - 2
AW01 0048	Photo Sensor - Gp2a28n1	7 - 3
AW01 0064	Optical Sensor Ass'y	11 - 9
AW02 0012	Photointerruptor	13 - 4
AW02 0056	Photointerruptor - EE-SX4235A-P1	7 - 4
AW02 0056	Photointerruptor - EE-SX4235A-P1	11 - 12

Part No.	Description	Page and Index No.
AX04 0091	DC Motor - 21.6W	11 - 14
AX06 0203	Main Motor Ass'y	7 - 16
AX20 0149	Magnetic Clutch	7 - 11
AX21 0037	Magnetic Clutch	7 - 17

Part No.	Description	Page and Index No.
0313 0040B	Philips Pan Head Screw - M3x4	9 -109
0313 0250B	Philips Pan Head Screw - M3x25	11 -109
0313 0350B	Philips Pan Head Screw - M3x35	11 -101
0314 0120B	Philips Pan Head Screw - M4x12	3 -107
0314 0200B	Philips Pan Head Screw - M4x20	5 -103
0344 0050F	Philips Truss Head Screw - M4x5	11 -112
0450 4012Z	Tapping Screw - M4x12	3 -108
0451 3006B	Tapping Screw - M3x6	7 -108
0451 3010B	Tapping Screw - M3x10	7 -105
0451 4006B	Tapping Screw - 4x6	9 -105
0451 4006B	Tapping Screw - 4x6	7 -103
0451 4006B	Tapping Screw - 4x6	11 -111
0451 4008B	Philips Tapping Screw - M4x8	11 -105
0451 4008B	Philips Tapping Screw - M4x8	13 -101
0451 4008B	Philips Tapping Screw - M4x8	9 -102
0451 4008B	Philips Tapping Screw - M4x8	7 -111
0451 4008B	Philips Tapping Screw - M4x8	3 -102
0451 4008B	Philips Tapping Screw - M4x8	5 -101
0451 4008H	Tapping Screw - 4x8	3 -101
0451 4016B	Tapping Screw - M4-16	7 -109
0452 4008B	Tapping Screw - M4x8	3 -104
0452 4010B	Tapping Bind Screw - M4x10	11 -116
0452 4012B	Tapping Bind Screw - M4x12	3 -106
0453 3006B	Tapping Screw - M3x6	7 -102
0453 3008B	Bind Tapping Screw - M3x8	11 -106
0453 3010B	Binding Screw	13 -103
0453 4008B	Tapping Bind Screw - M4x8	13 -104
0573 0030E	Hexagon Headless Set Screw - M3x3	9 -108
0573 0040E	Hexagon Headless Set Screw - M3x4	7 -110
0708 0030B	Washer - M3	11 -107
0708 0040B	Washer - M4	5 -107
0720 0020E	Retaining Ring - M2	3 -105
0720 0040B	Retaining Ring - M4	11 -117
0720 0040B	Retaining Ring - M4	7 -107
0720 0040B	Retaining Ring - M4	9 -106

Part No.	Description	Page and Index No.
0720 0050B	Retaining Ring - M5	9 -110
0720 0050B	Retaining Ring - M5	5 -104
0720 0050B	Retaining Ring - M5	11 -114
0720 0060B	Retaining Ring - M6	9 -103
0720 0060B	Retaining Ring - M6	5 -102
0720 0060B	Retaining Ring - M6	7 -106
0742 3808	Ball Bearing - 8x16x5	5 -105
0805 3145	Ball Bearing - 6x12x4mm	9 -107
0805 3270	Ball Bearing - 8x16x5mm	5 -108
0805 3389	Bushing - 8x10x6mm	11 -113
0807 5056	Washer - 8.1mm	11 -115
0950 4006B	Screw - M4X6	13 -108
0951 4016B	Philips Screw With Flat Washer - M4x16	3 -103
0957 4030B	Screw - M4X3	5 -106
1102 6257	Relay Connector - 14P	11 -118
1102 6258	Relay Connector - 15P	11 -119
1105 0199	Clamp	7 -101
1105 0200	Clamp	13 -102
1105 0200	Clamp	7 -104
1105 0200	Clamp	9 -104
1105 0292	Wire Saddle	13 -107
1105 0310	Harness Clamp - LWS-1S	13 -105
1105 0310	Harness Clamp - LWS-1S	11 -110
1105 0328	Harness Clamp - ES-0505	9 -101
1106 0241	Bushing - 6.7mm	13 -106
1204 0192	Microswitch - UL	11 -102
1204 0704	Micro Switch - D2RV-G	11 -108
1204 1148	Microswitch	11 -103
1204 2136	Micro Switch	11 -104

Part No.	Description	Page and Index No.
5215 2621	Snap Ring - M6	7 - 30
5447 2681	Snap Ring	3 - 10
5447 2681	Snap Ring	7 - 29
5447 2681	Snap Ring	9 - 3
5447 2706	Gear - 15T	7 - 28

Part No.	Description	Page and Index No.